
ASSEMBLY INSTRUCTIONS

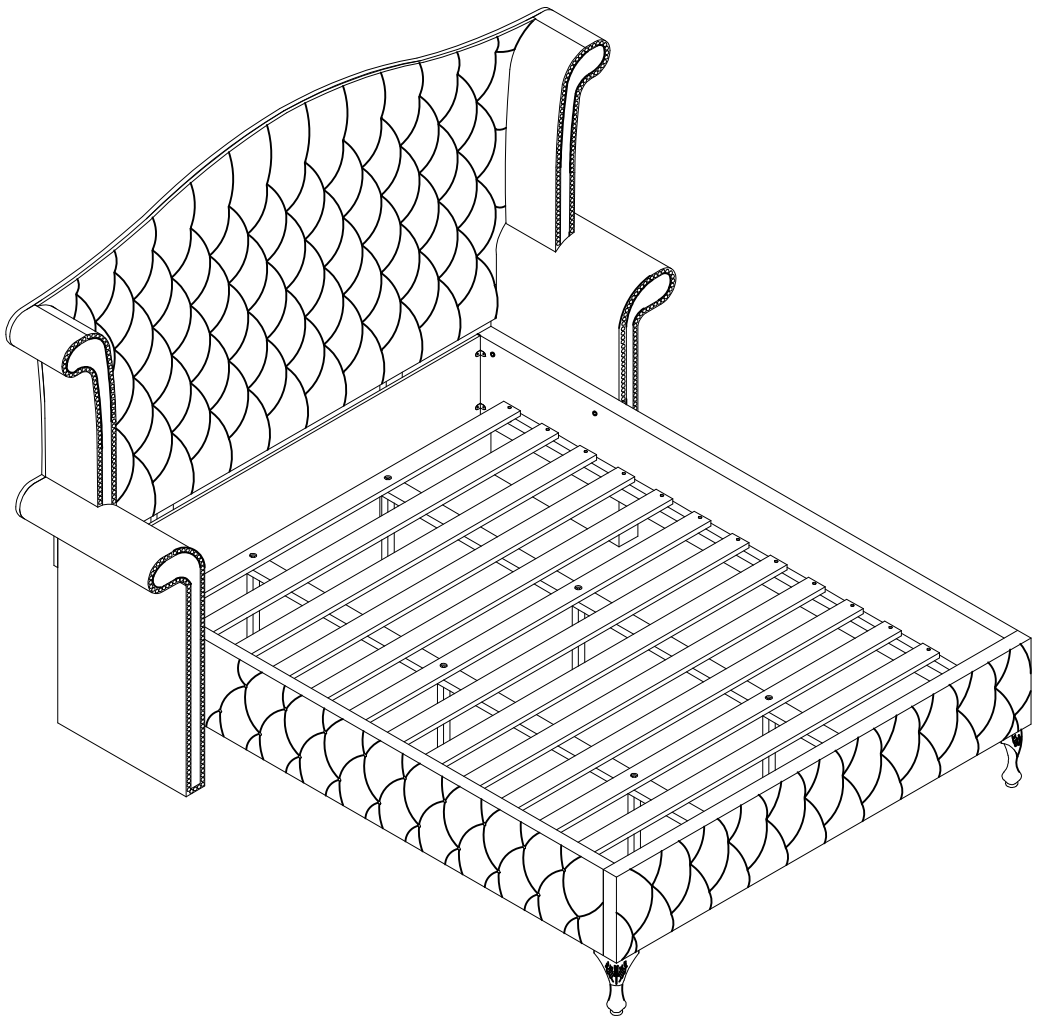

QueenBed

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME	40 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

AV	HEADBOARD		1PC
BV	HEADBOARD SUPPORT LEG		2PCS
CV	HEADBOARD PANEL		1PC

B2 (BOX 2)

DV1	RIGHT EAR PANEL		1PC
DV2	LEFT EAR PANEL		1PC
EV	EAR PANEL SUPPORT		2PCS

B3 (BOX 3)

FV	FOOTBOARD		1PC
GV1	LEFT BED RAIL		1PC
GV2	RIGHT BED RAIL		1PC
HV	BED SLAT		10PCS
IV	BED SLAT WITH HOLES		3PCS
JV	BED SLAT SUPPORT		6PCS
KV	FOOTBOARD LEG		2PCS
LV	CENTER RAIL		2PCS
MV	CENTER RAIL SUPPORT		2PCS
HBV	FROM BOX 1 HEADBOARD COMPLETE		1PC
ERV	FROM BOX 2 LEFT AND RIGHT EAR PANEL COMPLETE		2PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED


1	ALLEN WRENCH (4MM - RBW)		1PC
2	BOLT 1 (Ø1/4" x 30mm - RBW)		4PCS
3	BOLT 2 (Ø1/4" x 38mm - RBW)		10PCS
4	BOLT 3 (Ø1/4" x 60mm - RBW)		10PCS
5	BOLT 4 (Ø1/4" x 90mm - RBW)		8PCS
6	SHORT PAN HEAD SCREW (#4 x 20mm - RBW)		4PCS
7	MEDIUM PAN HEAD SCREW (#4 x 25mm - RBW)		4PCS
8	LONG PAN HEAD SCREW (#4 x 38mm - RBW)		32PCS
9	BIG FLAT WASHER (Ø1/4" X 25 X 1.5mm - RBW)		22PCS
10	SMALL FLAT WASHER (Ø1/4" X 19 X 1.5mm - RBW)		22PCS
11	LOCK WASHER (Ø1/4" - RBW)		22PCS
12	LEVELER (Ø1/4" X 25mm - BLK)		6PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

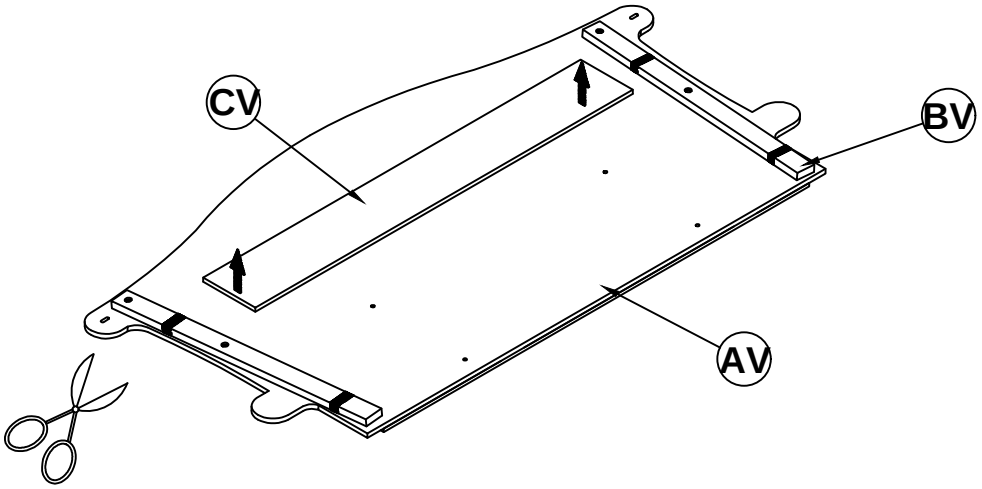


STEP 2

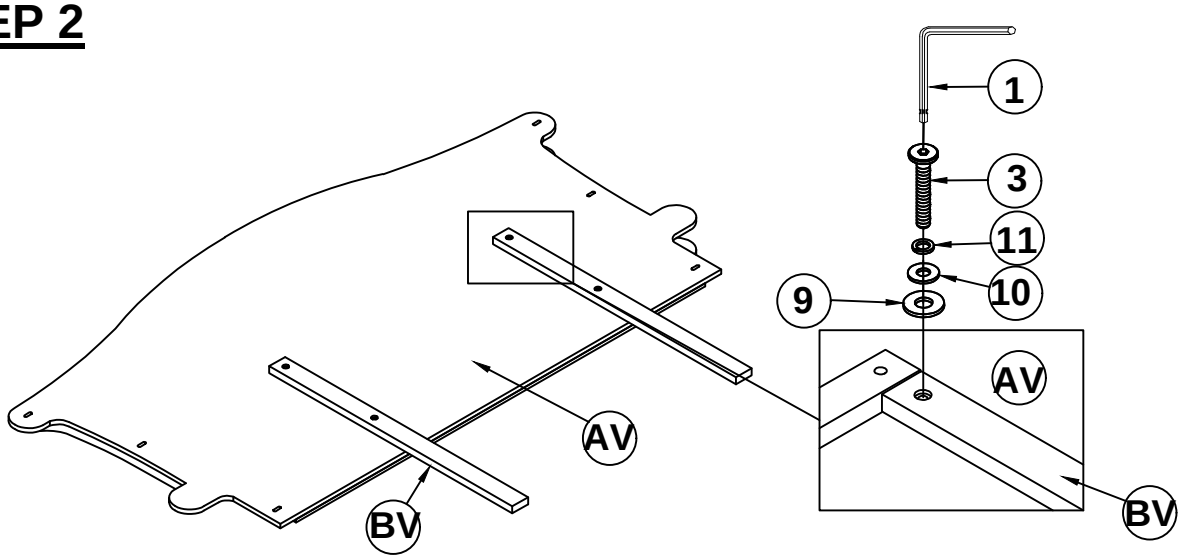


STEP 3

NOTE : THE EAR PANELSUPPORTS ARE TO LIFT UP THE BED RAILS

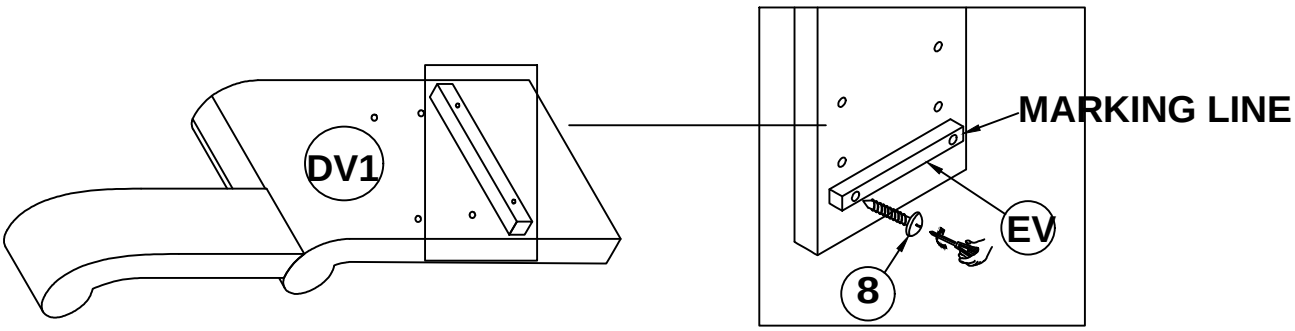


ASSEMBLY INSTRUCTIONS


STEP 4

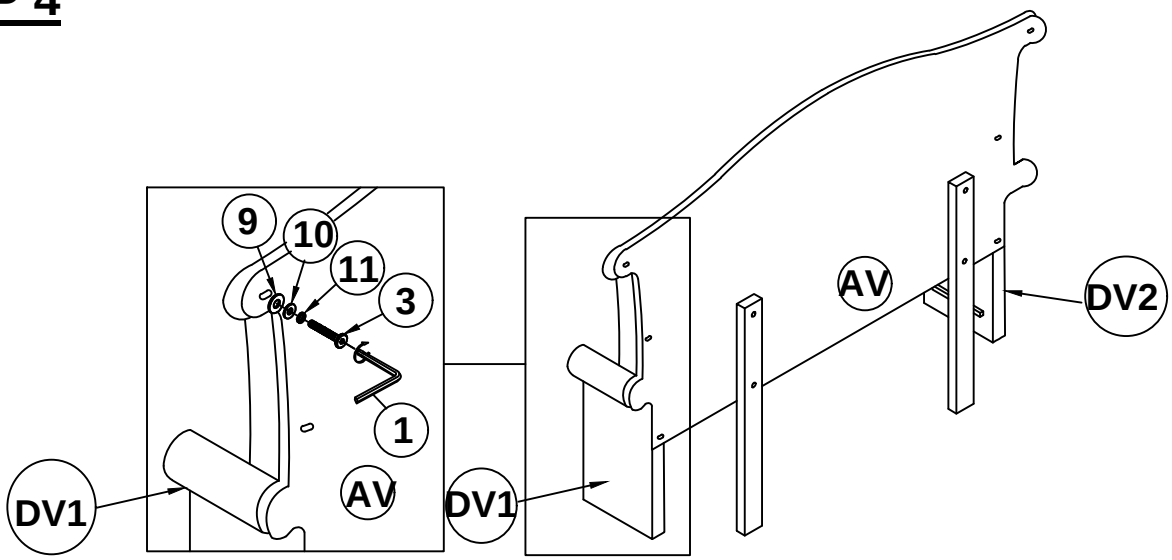

STEP 5

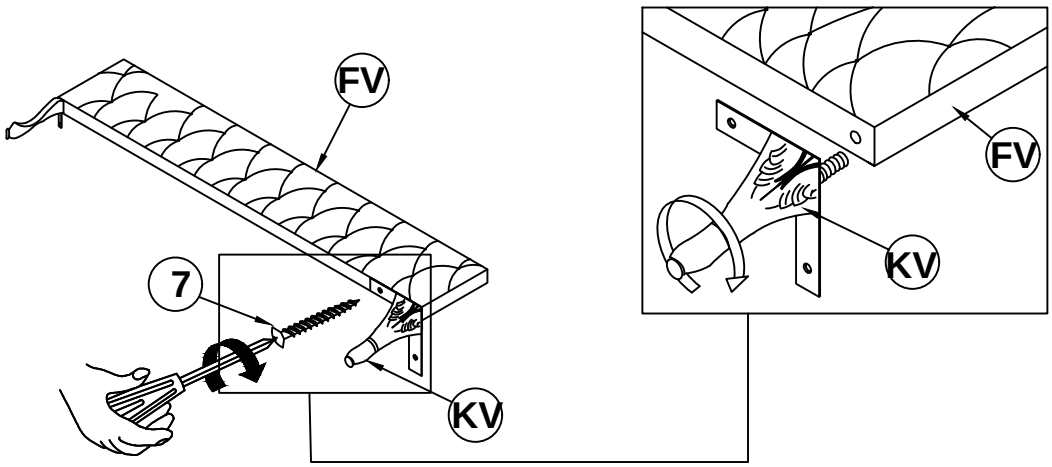


STEP 6

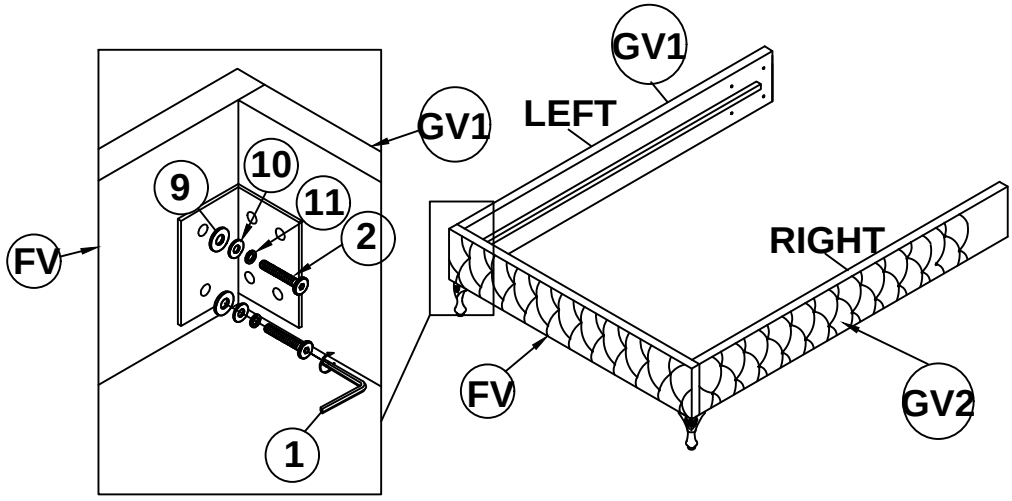


ASSEMBLY INSTRUCTIONS


STEP 7

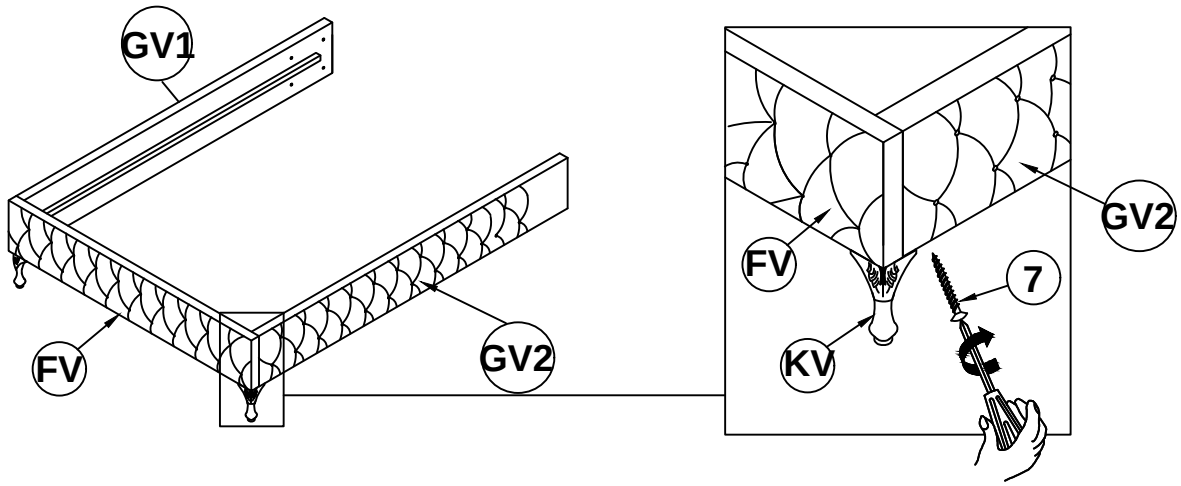

STEP 8

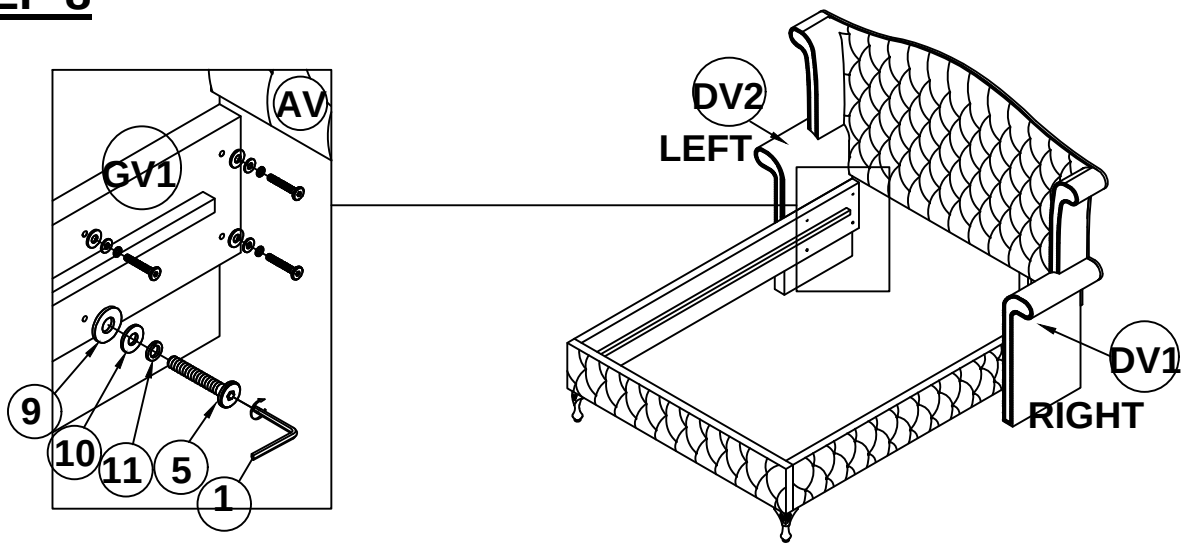


STEP 9

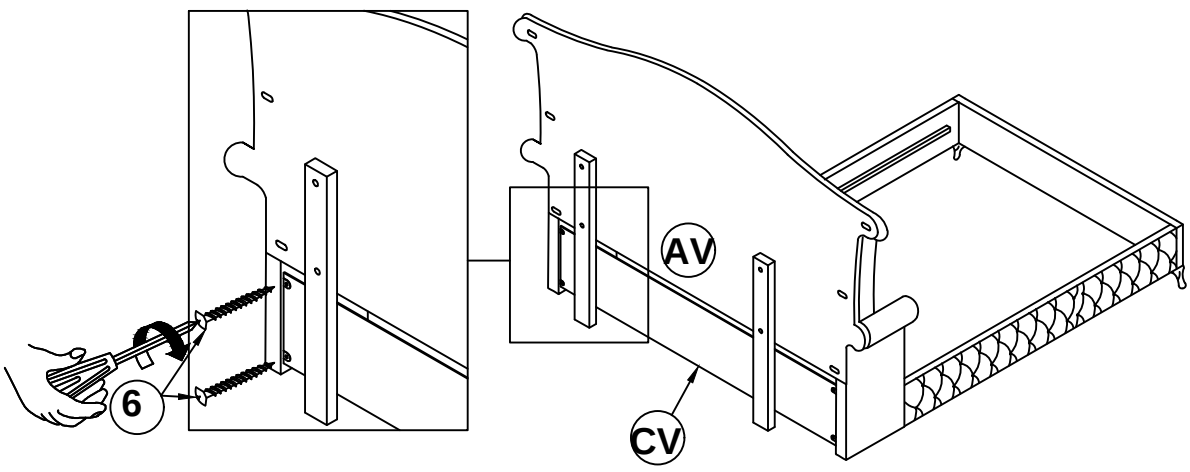


ASSEMBLY INSTRUCTIONS


STEP 10

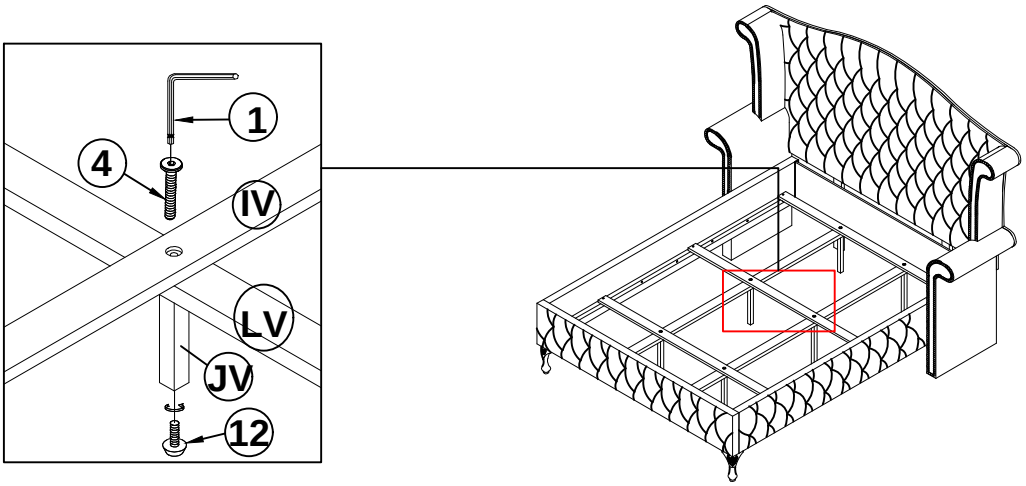

STEP 11

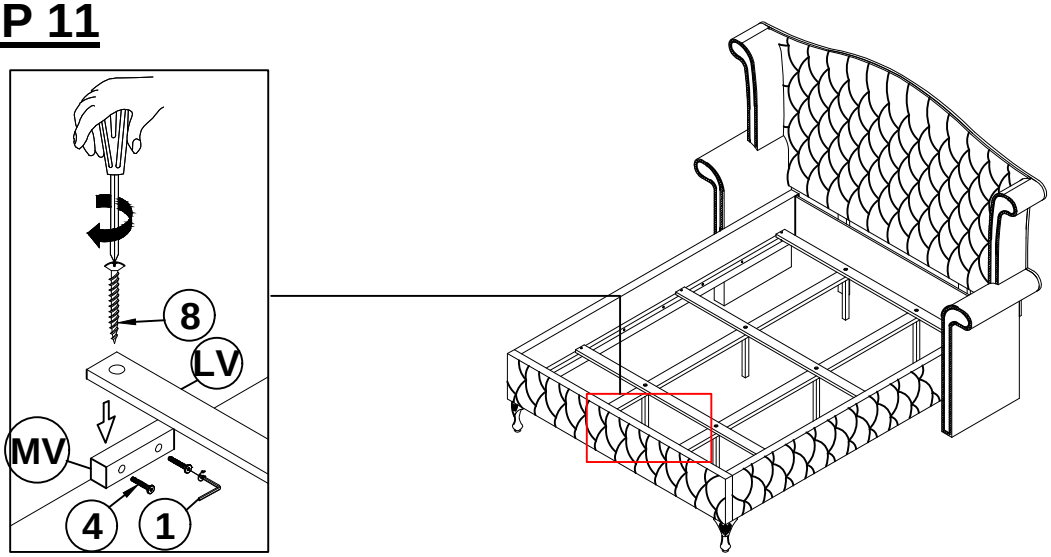


STEP 12

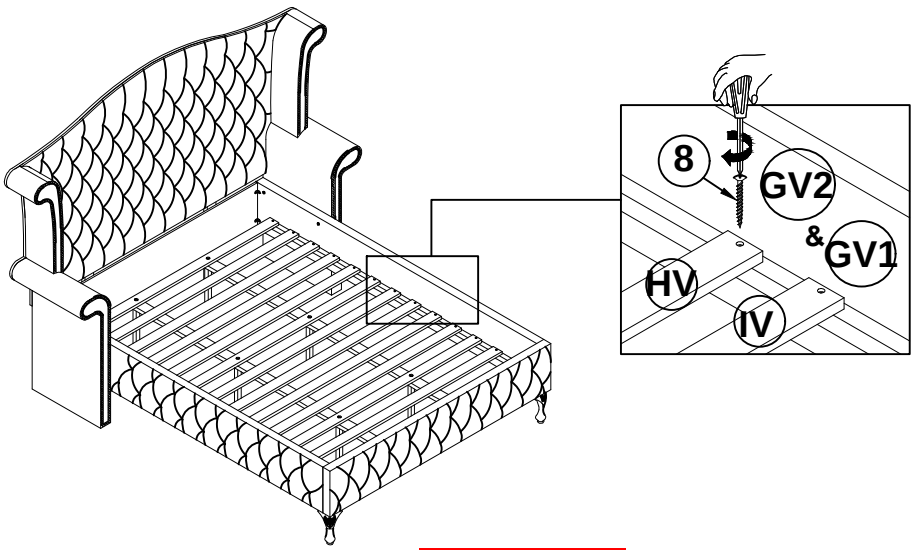

ASSEMBLY INSTRUCTIONS


STEP 13

COMPLETE

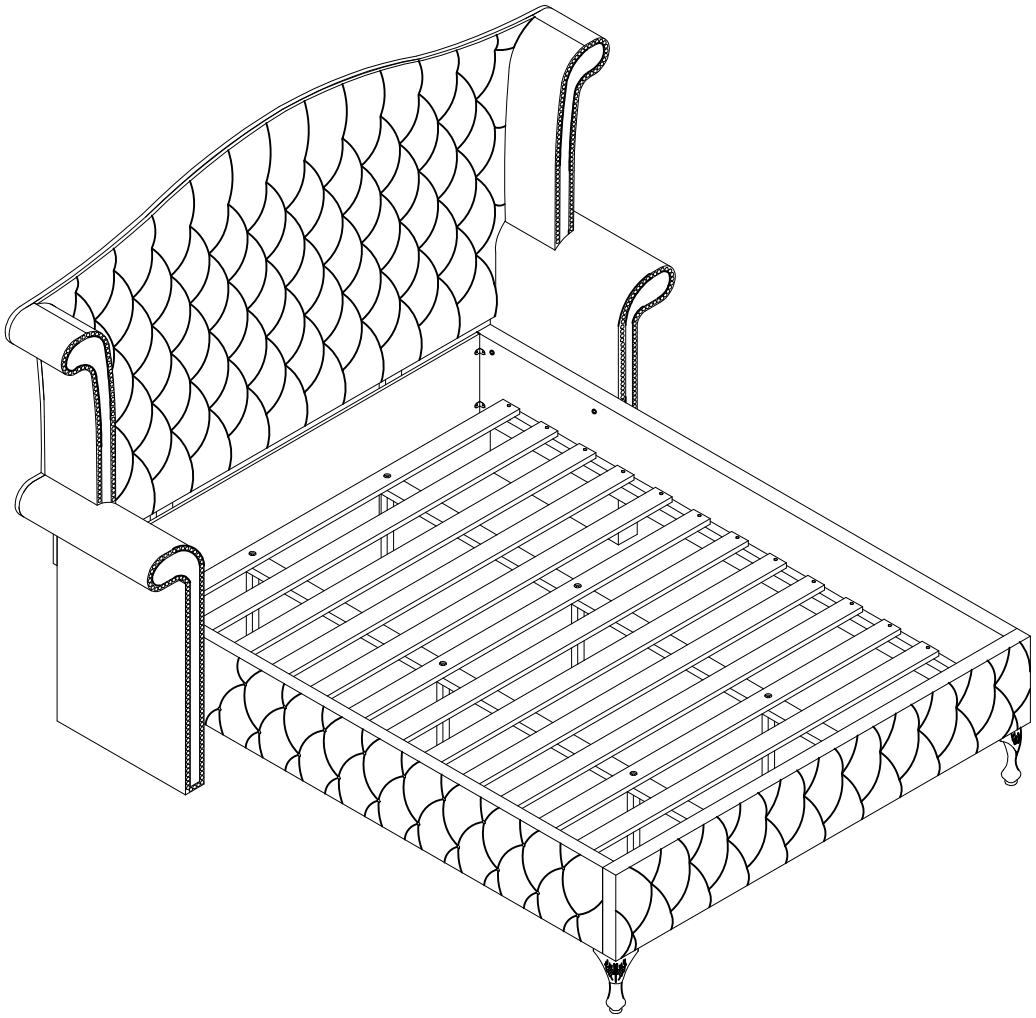



INNER SIZE : 61.02" X 81.1"

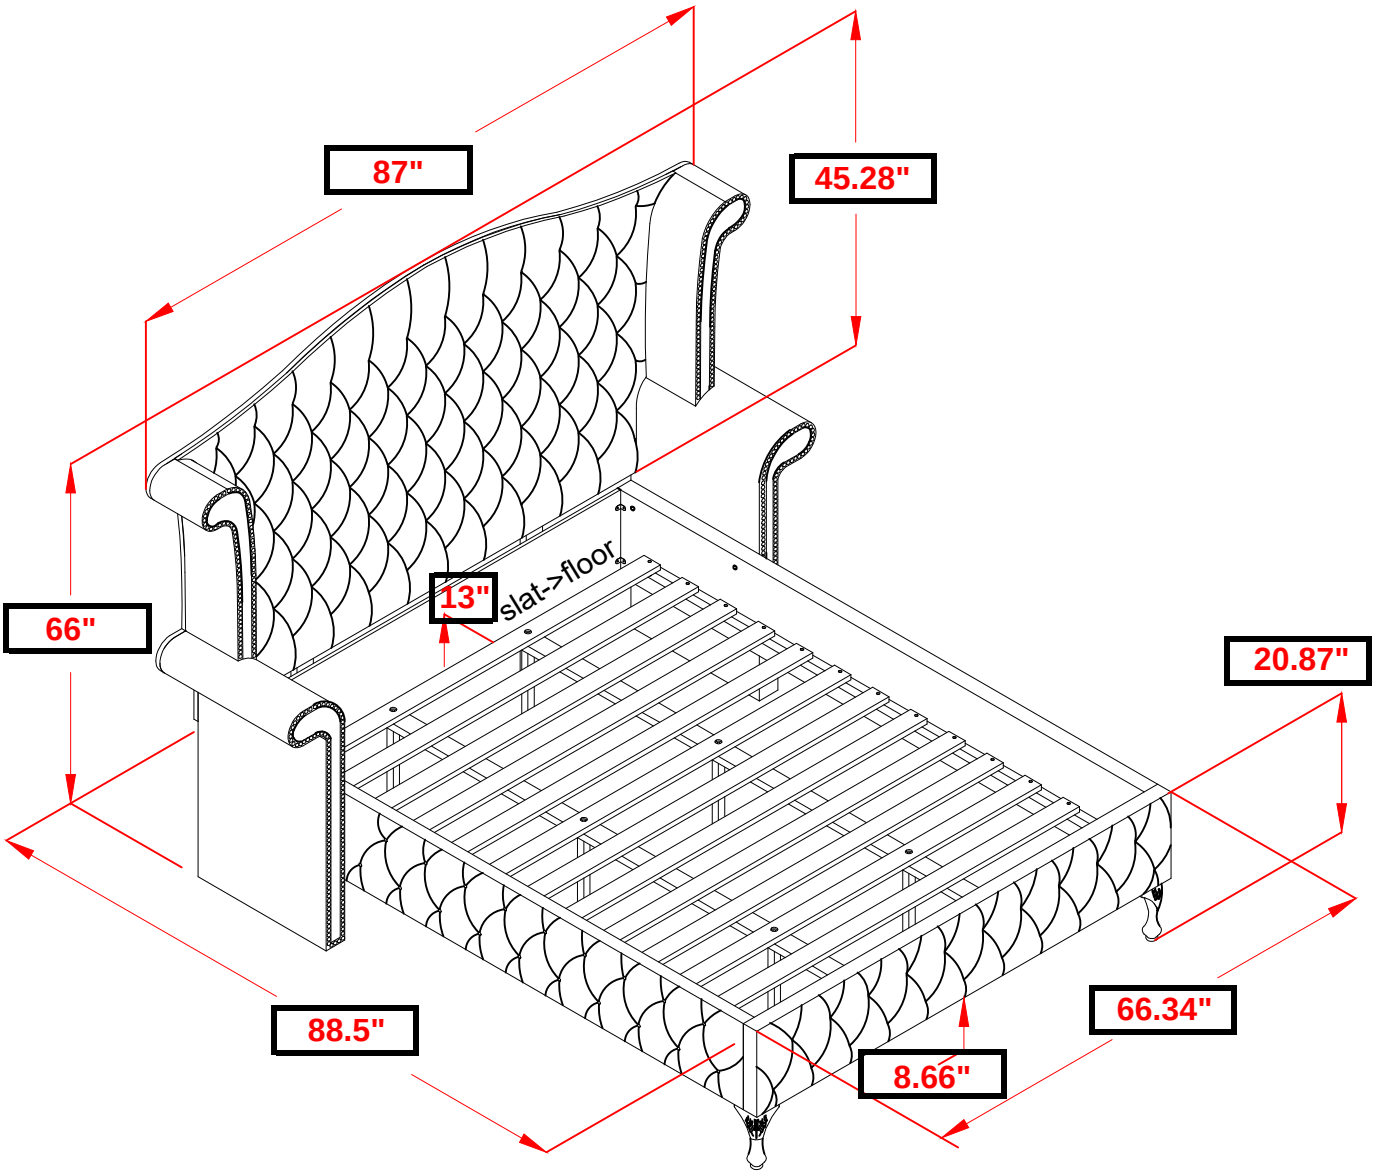

Note : Dimension tolerance ±5%