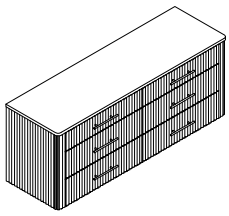
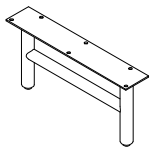
ASSEMBLY INSTRUCTION FOR ACME FUNITURE




MODEL #BD04095

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Seperate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any parts(s) are missing or damaged , please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*****Do not fully tighten screws until fully assembled*****

COMPONENT PARTS		
DESCRIPTION	PART NAME	QTY (PCS)
①	DRESSER 	1
②	LEG 	2

HARDWARE REQUIRED

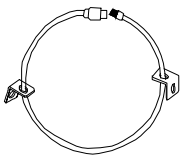
Ⓐ		BOLT	Ø5/16" x 20mm	12 PCS
Ⓑ		LOCK WASHER	Ø5/16"	12 PCS
Ⓒ		FLAT WASHER	Ø5/16"	12 PCS
Ⓓ		ALLEN KEY	M5 x 60mm	1 PC
Ⓔ		ANTI TIP-KITS-METAL		1 SET

Attention

*** Some number parts listed on the Intruction sheet may not be In parts bag as they may already beassembled. Carefully check parts and packing materials prior to ordering replacements.


How to assemble:

STEP 1

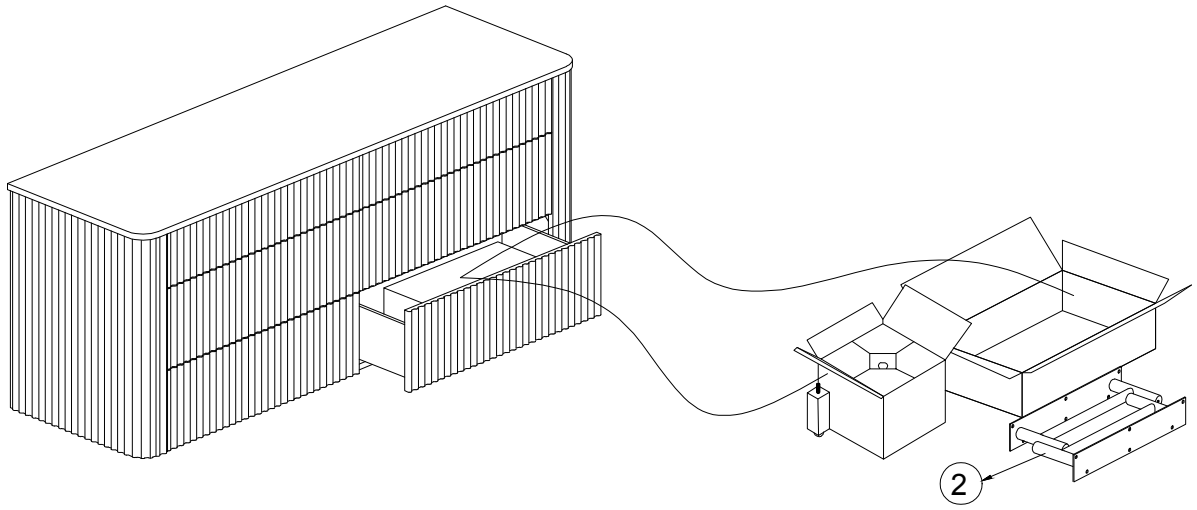


The Legs are inside the right bottom drawer


STEP 2

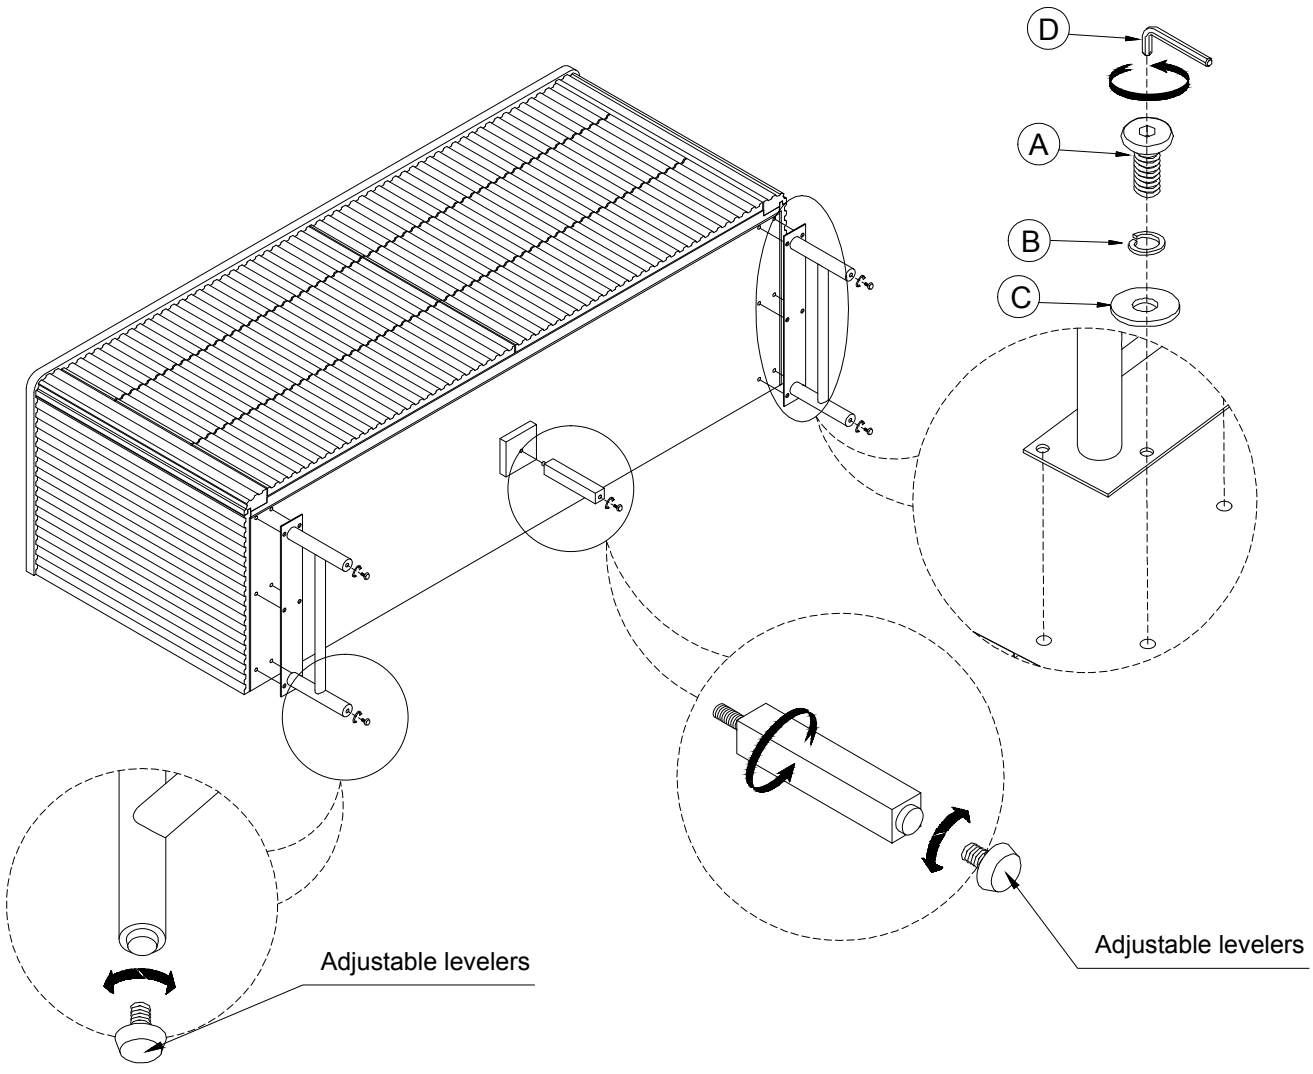


How to assemble:


STEP 3

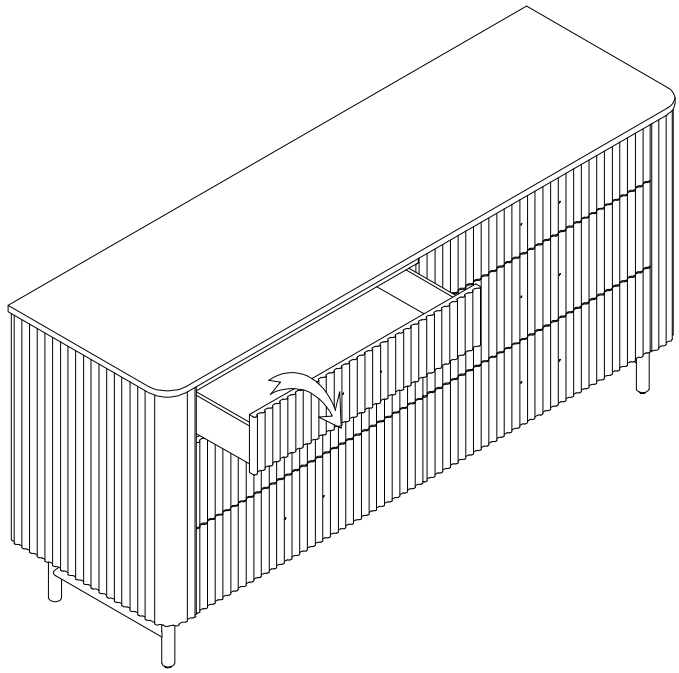

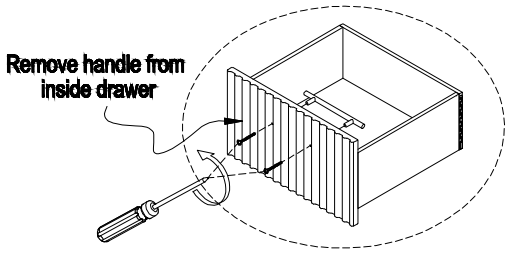

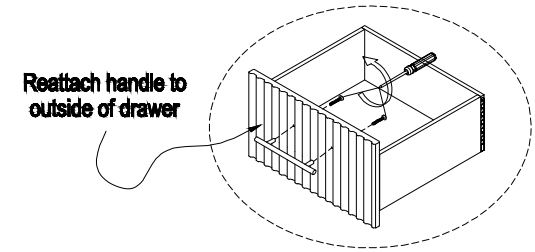

STEP 4

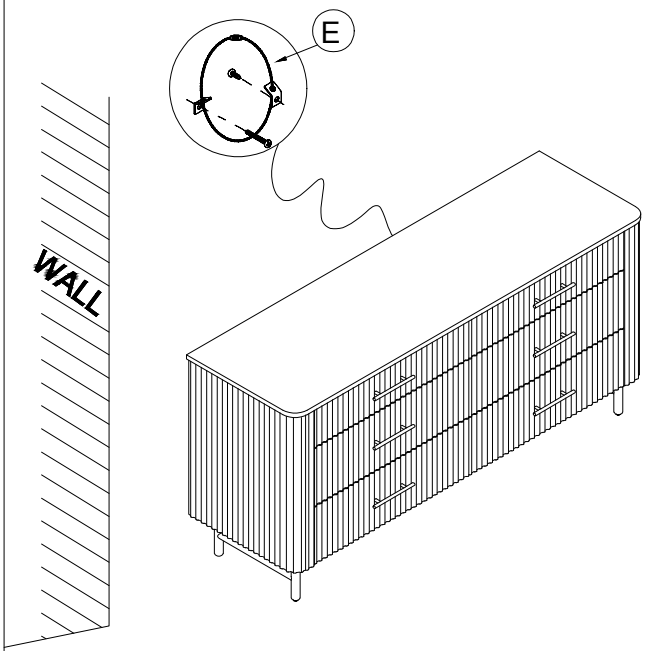

COMPLETED

