




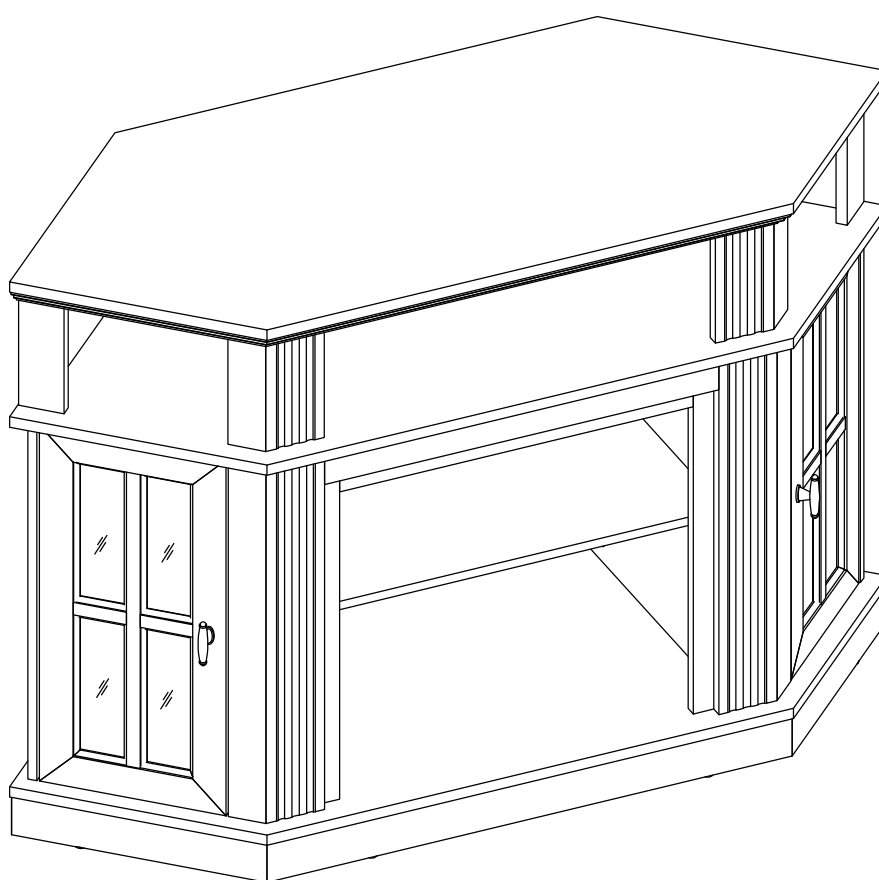

WARNING!



MAXIMUM LOAD
220 lb/100kg

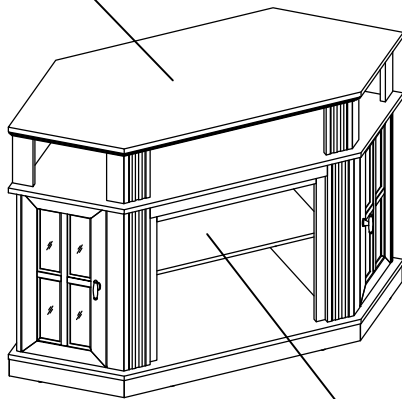


MAXIMUM LOAD
20 lb/9.1kg




Estimated Time for Assembly

45 mins

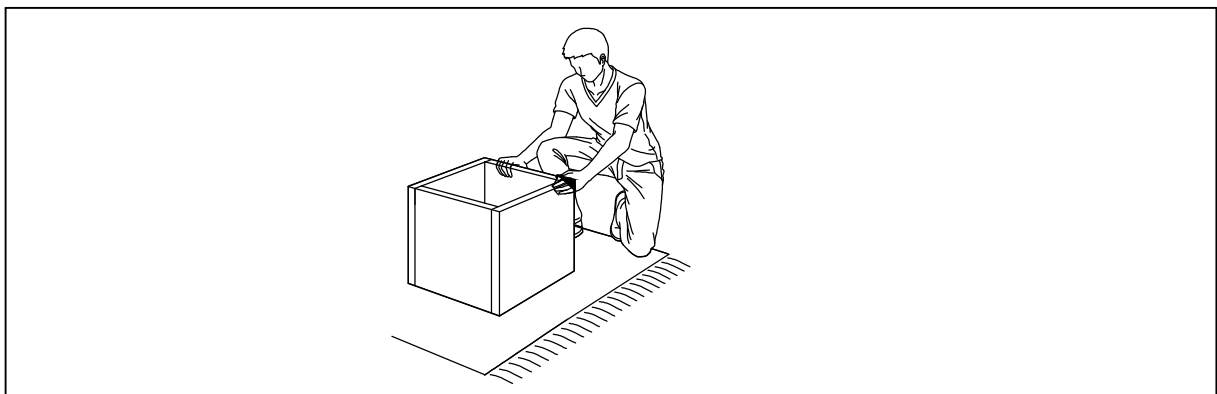


Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

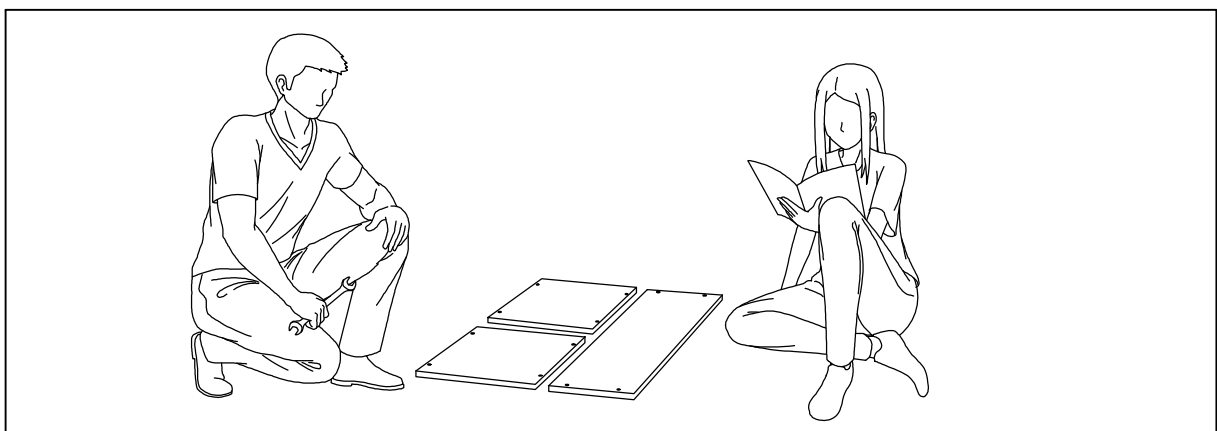


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


Not actual size

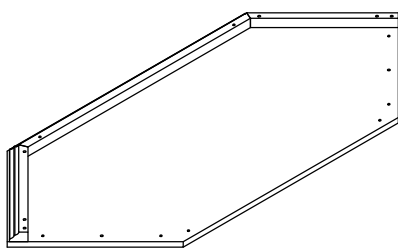


① X1

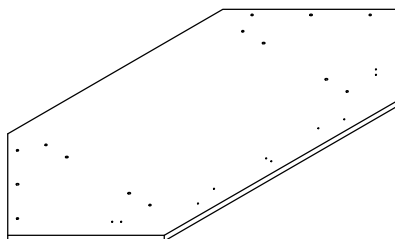


② X1

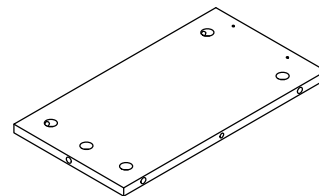


③ X2

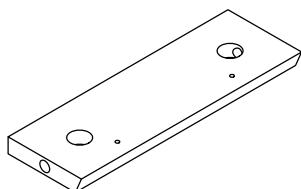


④ X2

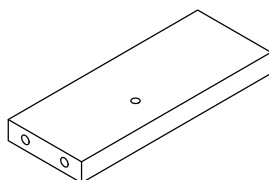


⑤ X1

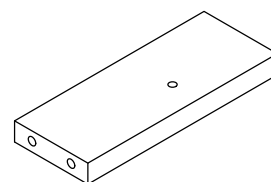


⑥ X1

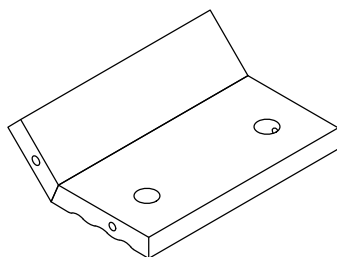


⑦ X2

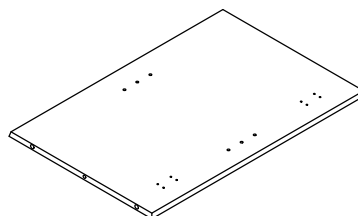


⑧ X2

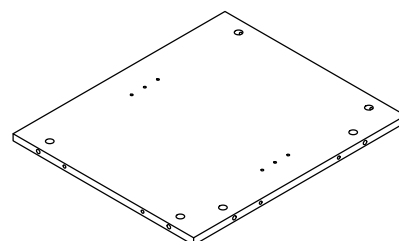


⑨ X2

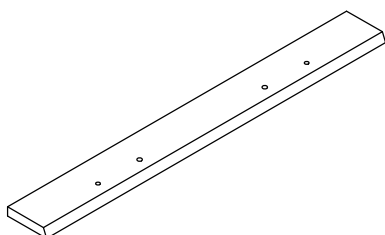

⑩ X2

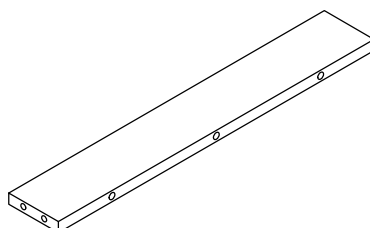


⑪ X1

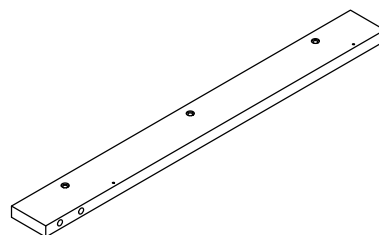


⑫ X1

BOARD IDENTIFICATION


Not actual size

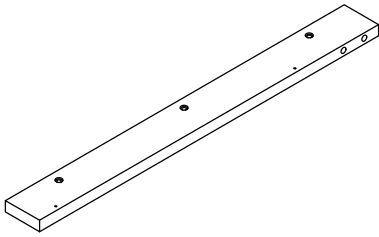


⑬X1

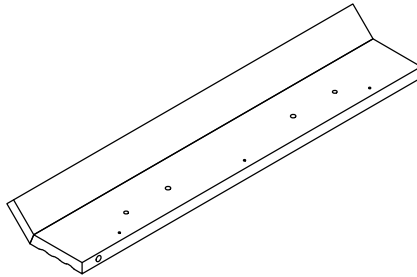


⑭X1

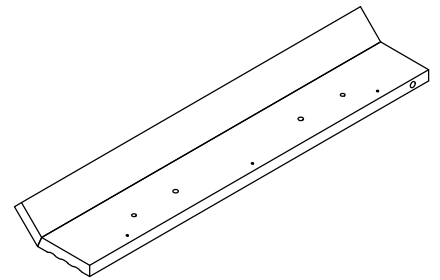


⑮X1

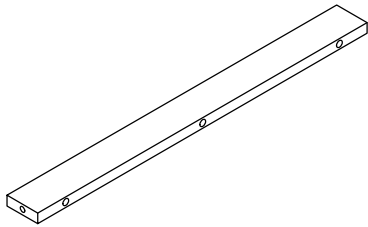


⑯X1

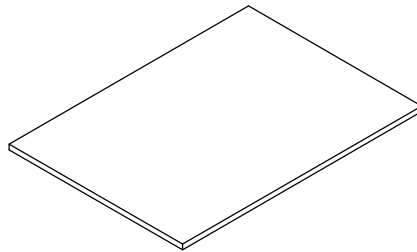


⑰X1

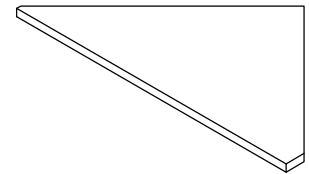


⑱X2

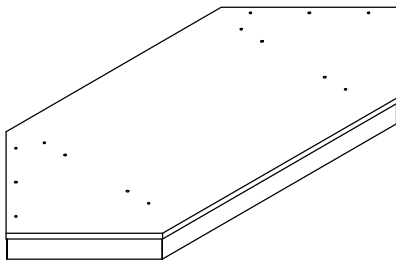








⑲X1

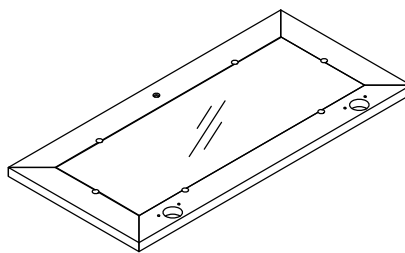

⑳X2

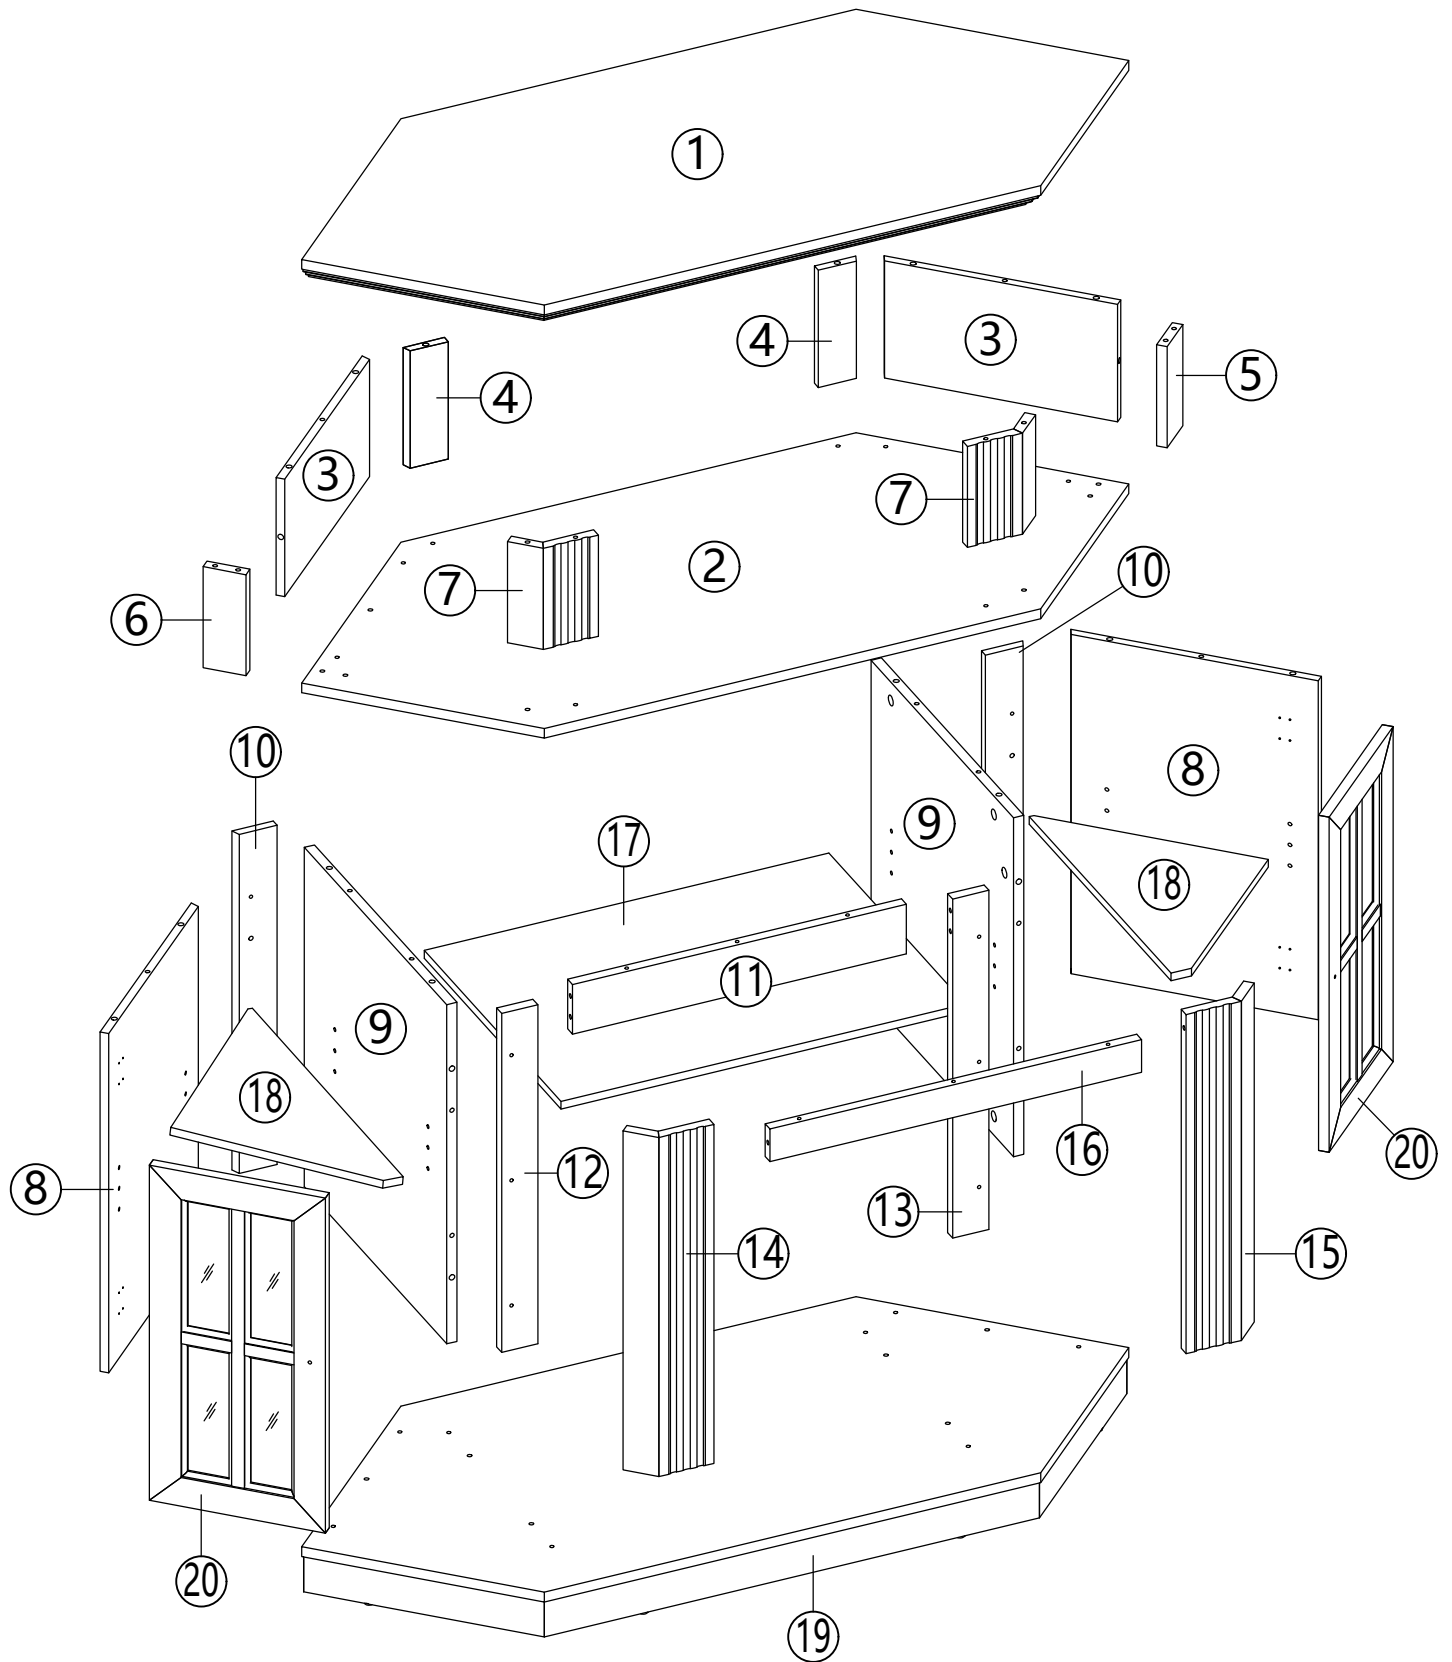


HARDWARE PART LIST





(A) X38+2  $\phi 6 \times 35$	(B) X38+2  $\phi 15 \times 9.5$	(C) X36+2  $\phi 6 \times 30$	(D) X6+1  $\phi 4 \times 50$
(E) X4+1  $\phi 4 \times 35$	(F) X12+1  $\phi 5 \times 16$	(G) X48+2  $\phi 3.5 \times 12$	(H) X6+1  $\phi 4 \times 25$
(I) X2  $65 \times 12 \times 30$	(J) X2+1  $M4 \times 19$	(K) X2  $30 \times 16 \times 10$	(L) X4  $\phi 25$
(M) X6+1  $\phi 8 \times 40$	(N) X10+1  $33 \times 8.4 \times 18$	(O) X1  $90 \times 30 \times 5$	

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

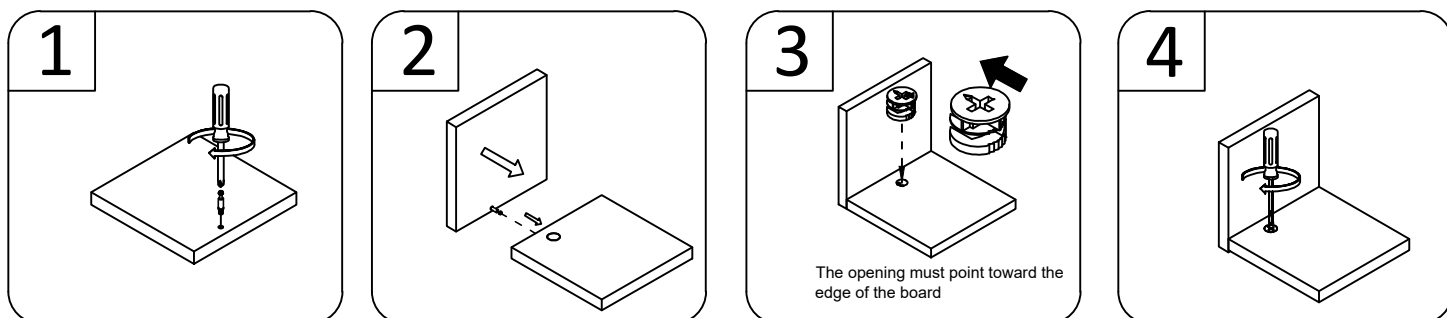



STEP 1

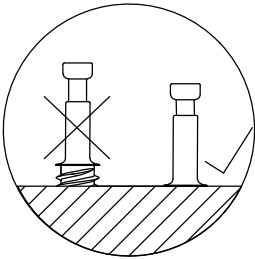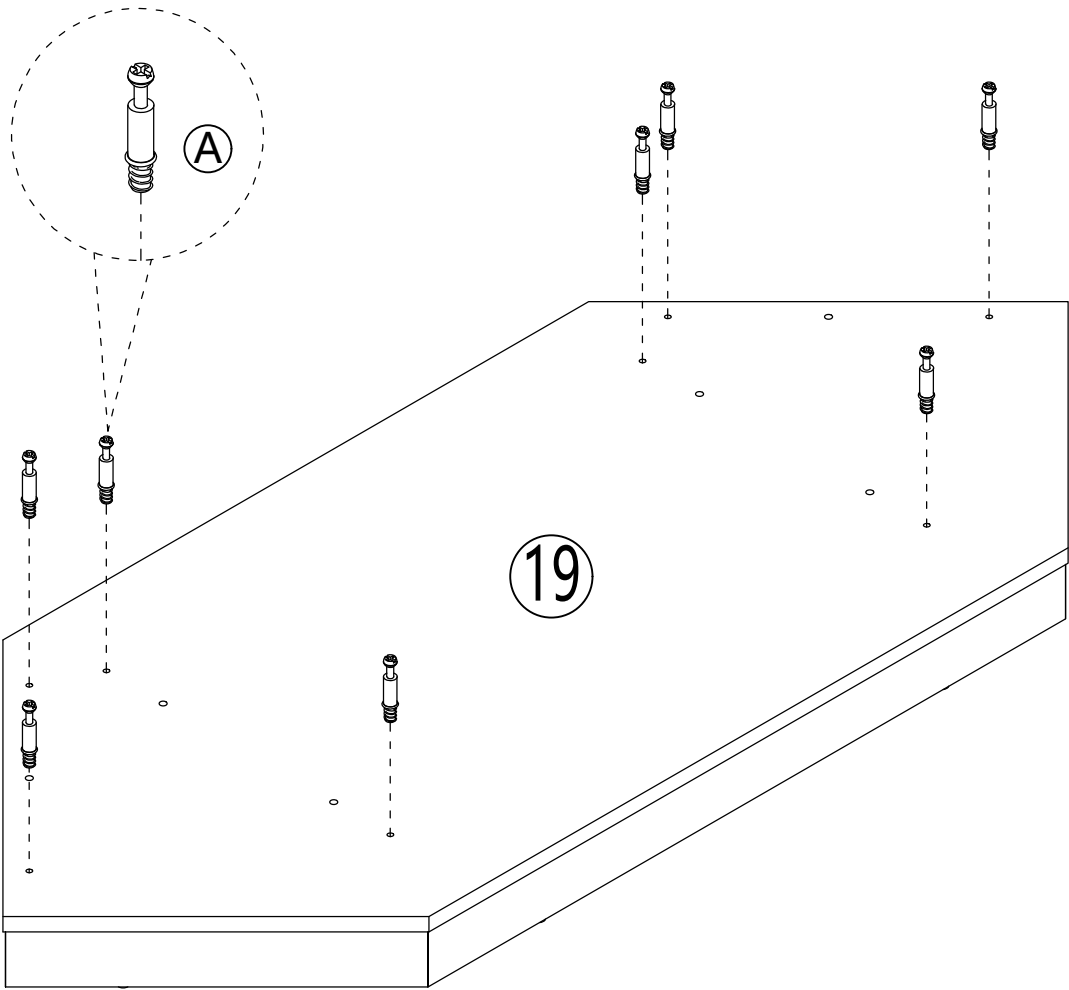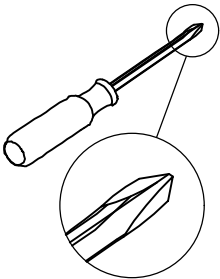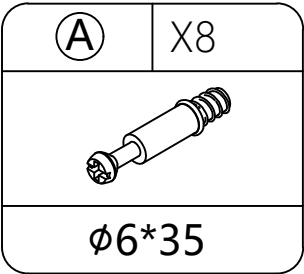


STEP 2

Ⓒ	X20
	
ø6*30	






Ⓜ	X2
	
ø8*40	

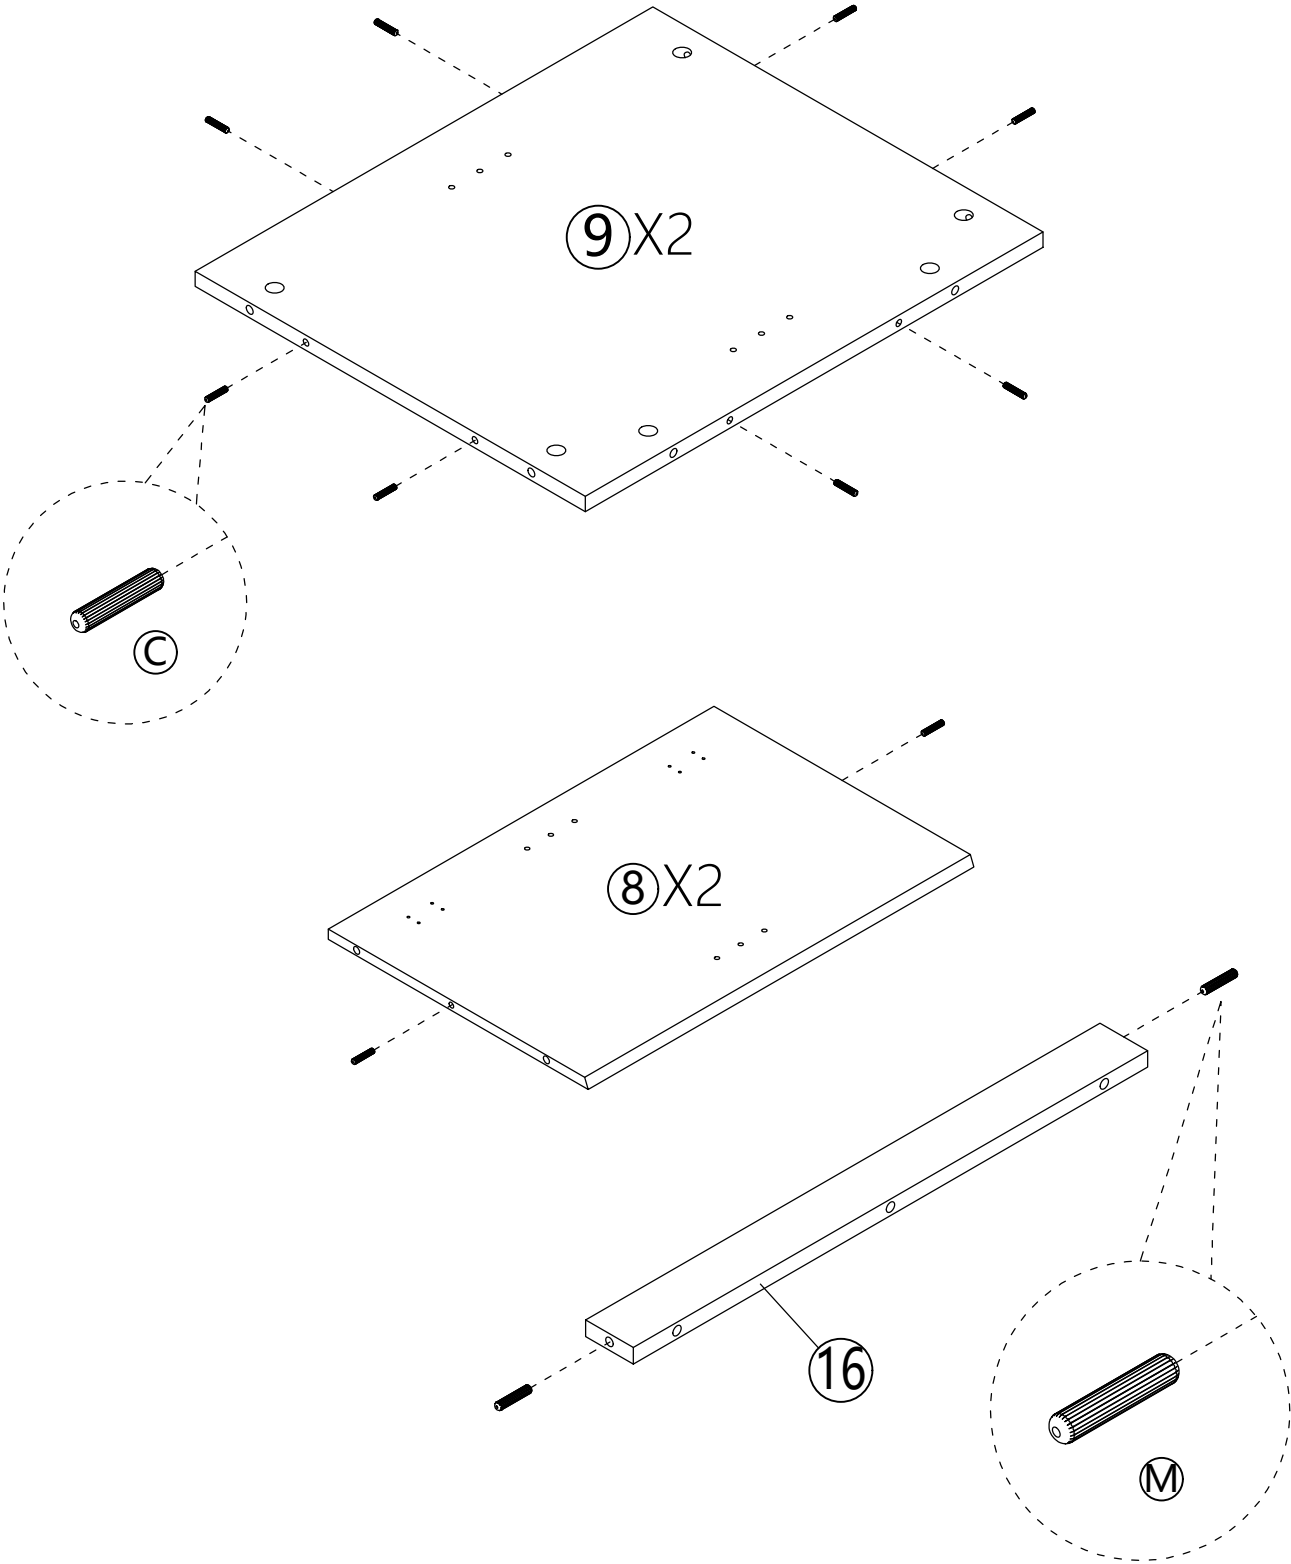

STEP 3



(A)	X4
	
ø6*35	

(B)	X4
	
ø15*9.5	

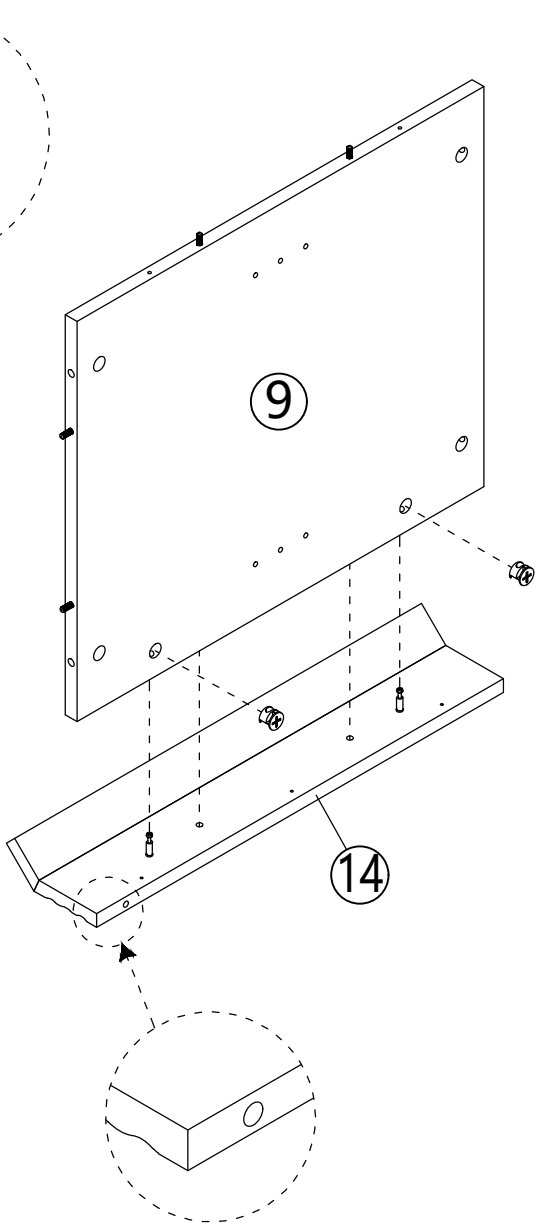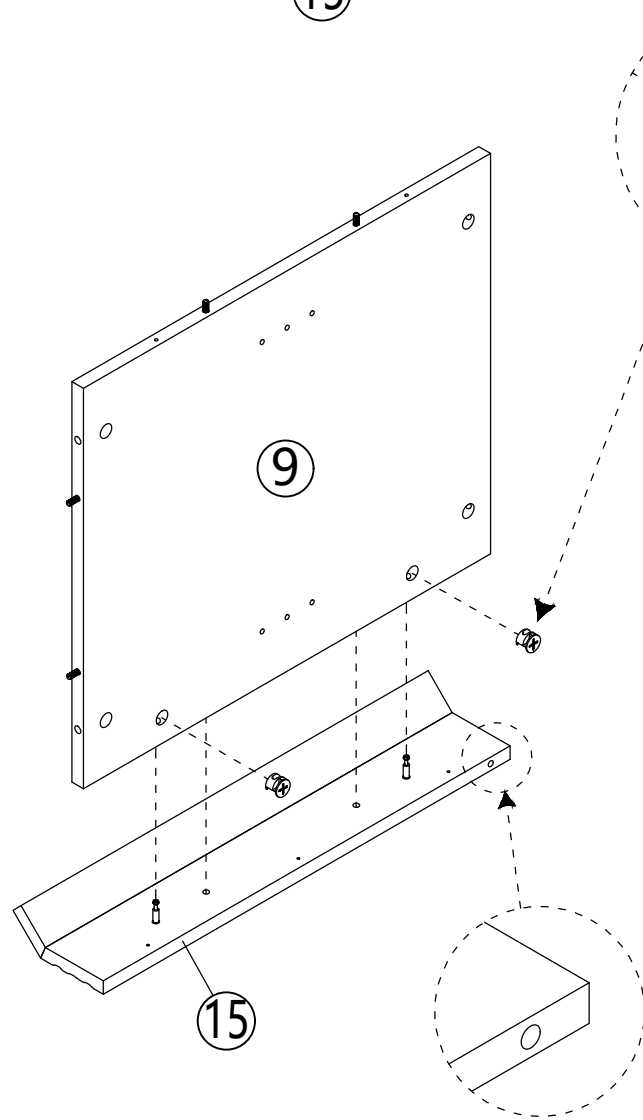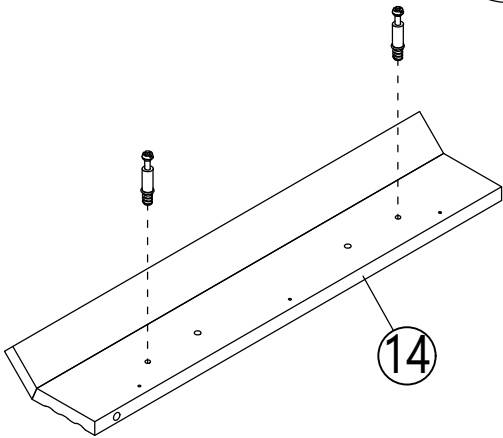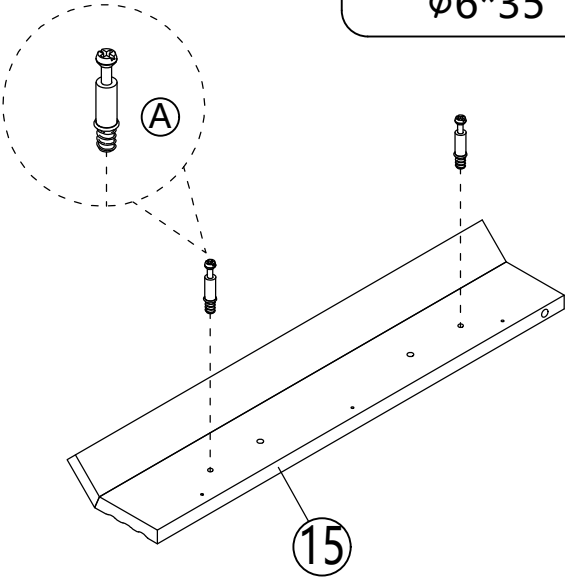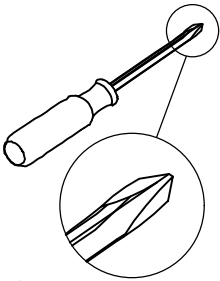


STEP 4

(B)	X2
	
ø15*9.5	

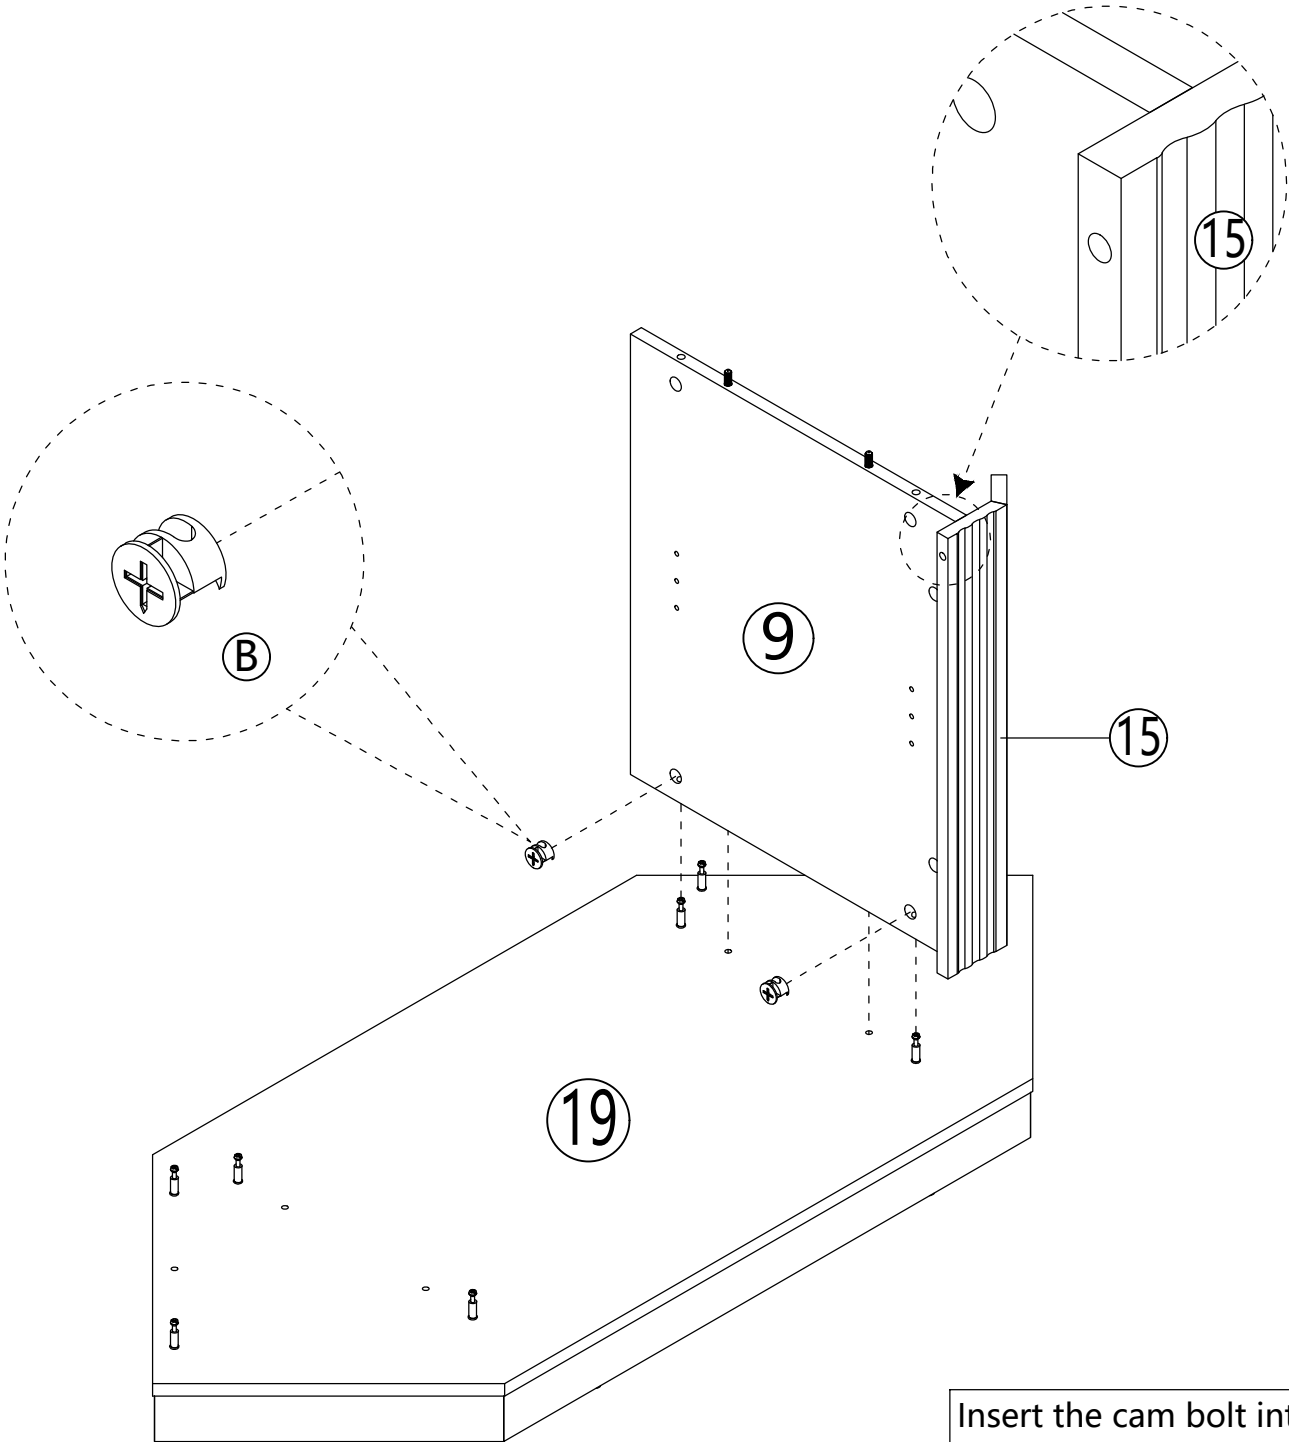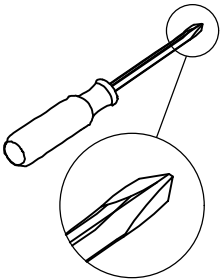


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

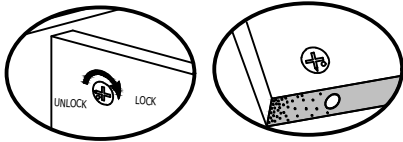




Proper orientation of CAM LOCK

STEP 5

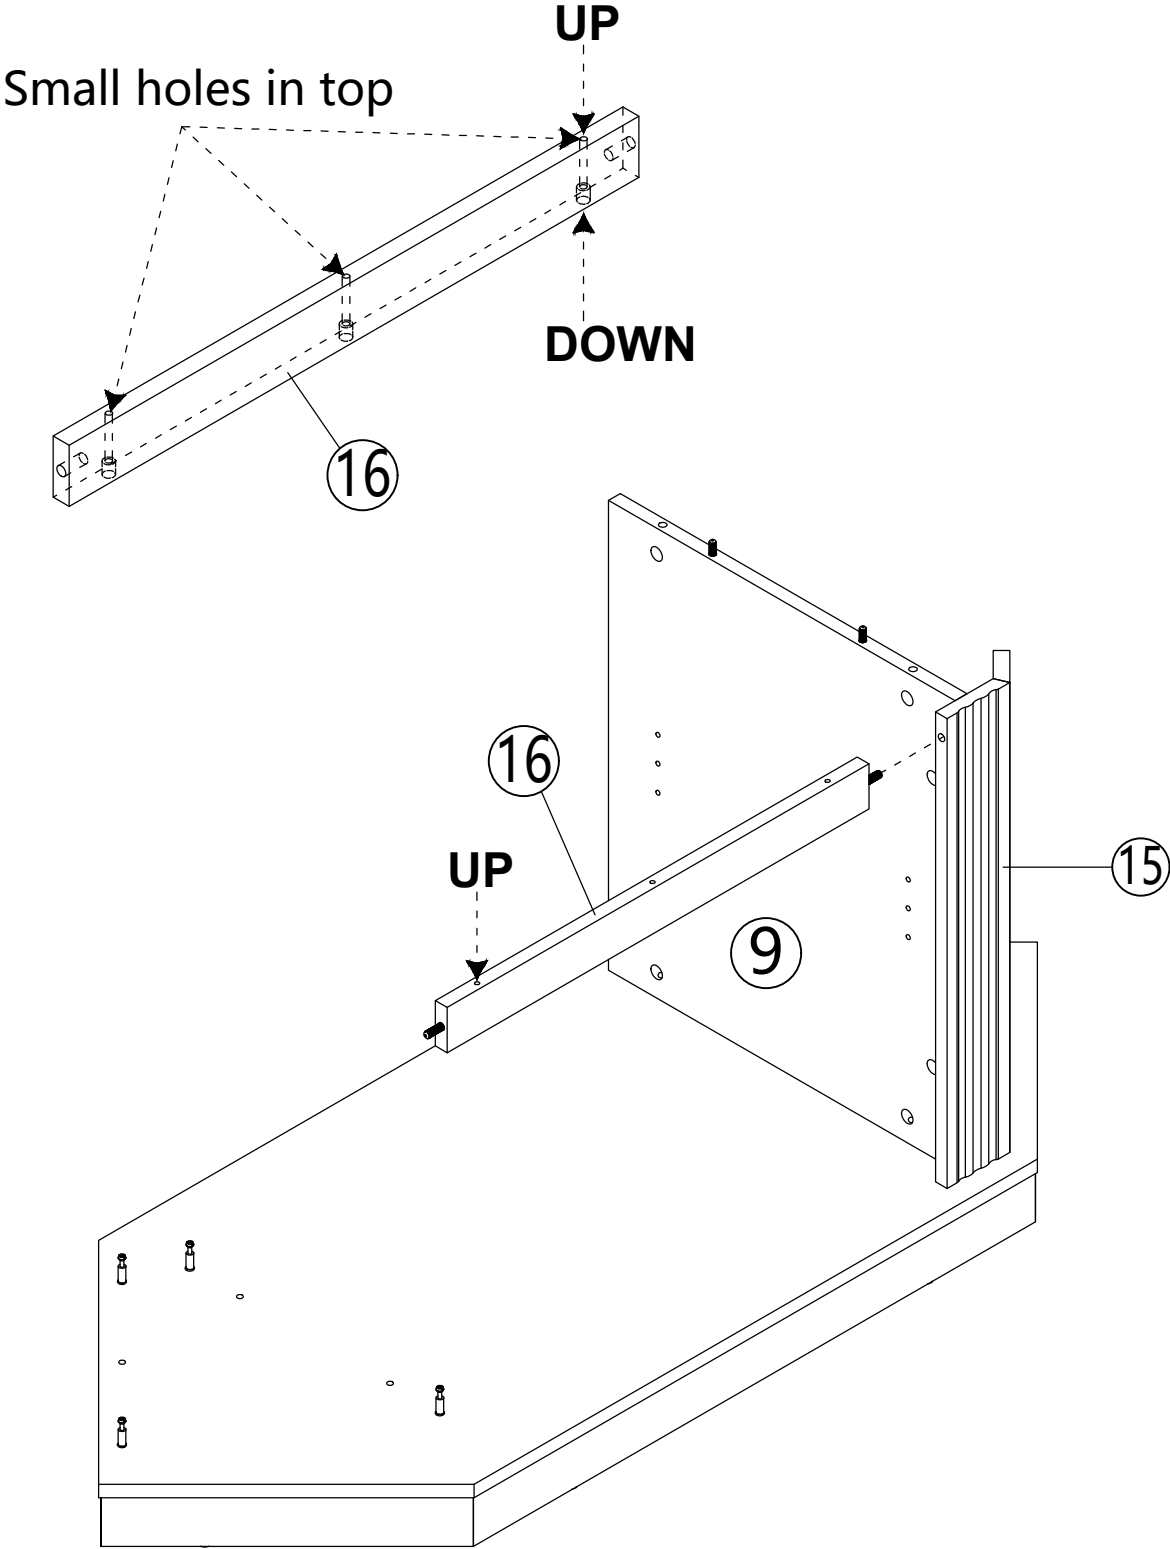


STEP 6

(B)	X2
	
ø15*9.5	

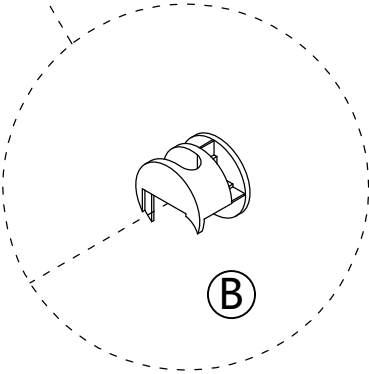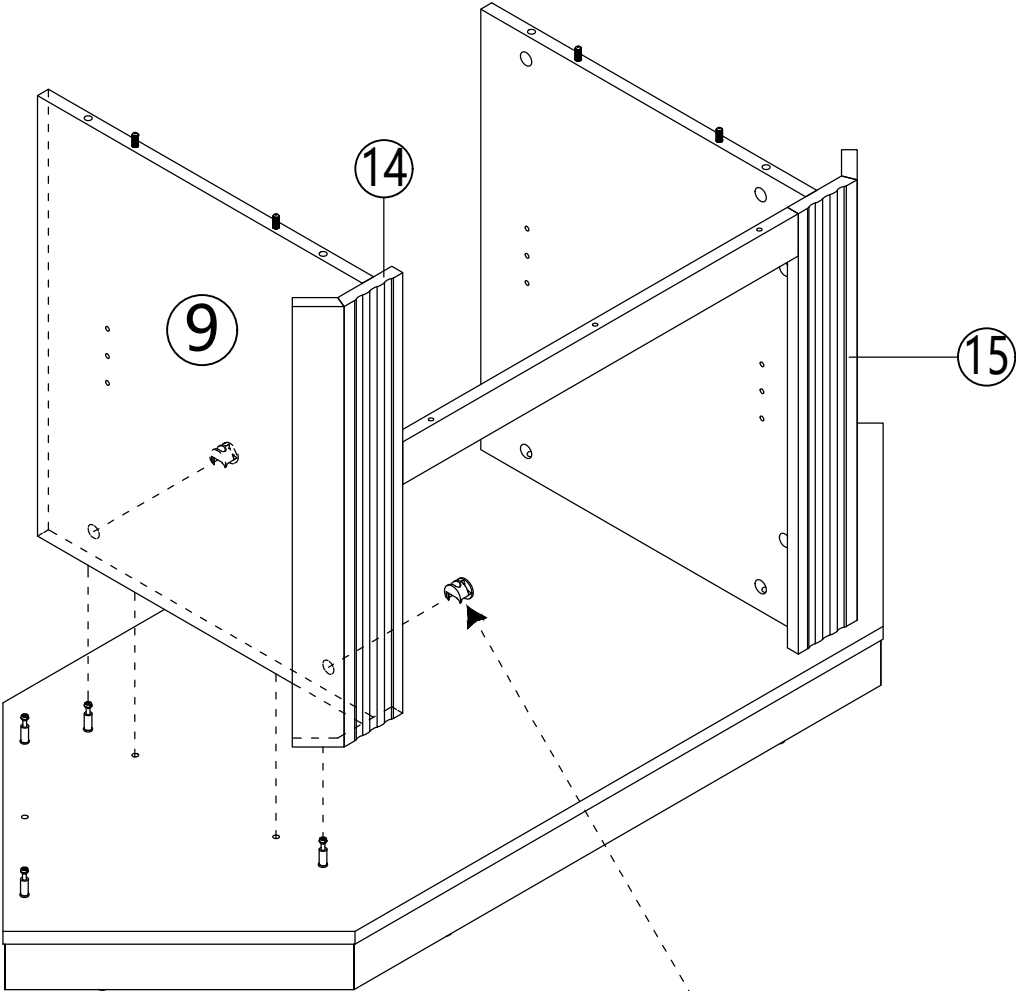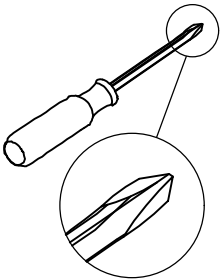


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

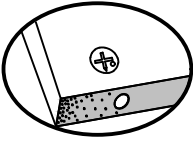


Proper orientation of CAM LOCK

STEP 7



M	X4
	
ø8*40	

WITHOUT EDGE BANDING

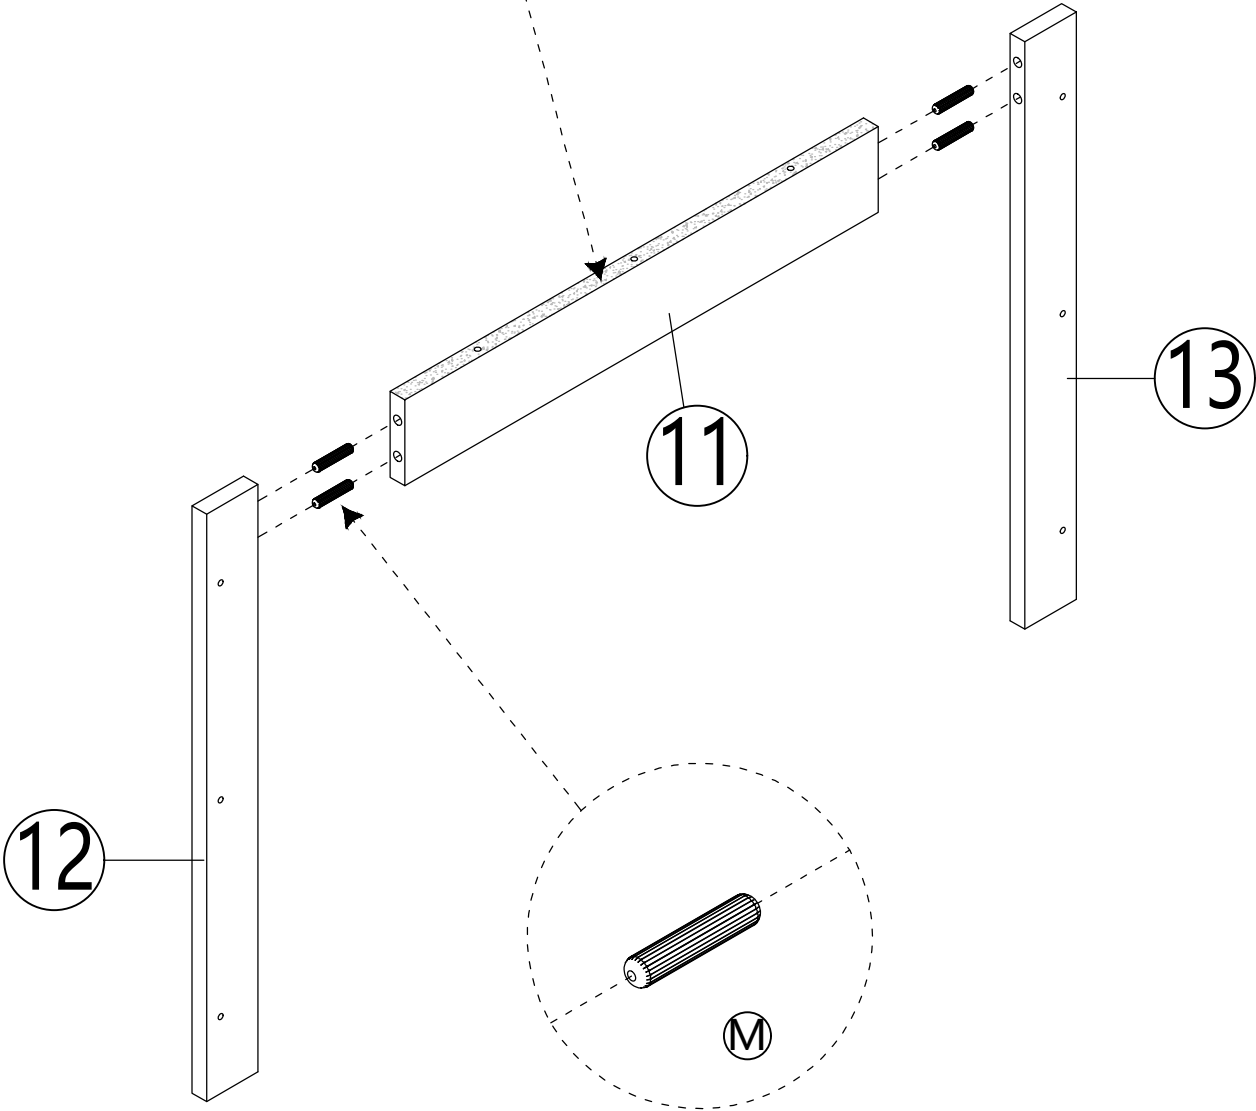


STEP 8





(H)	X6
	
ø4*25	

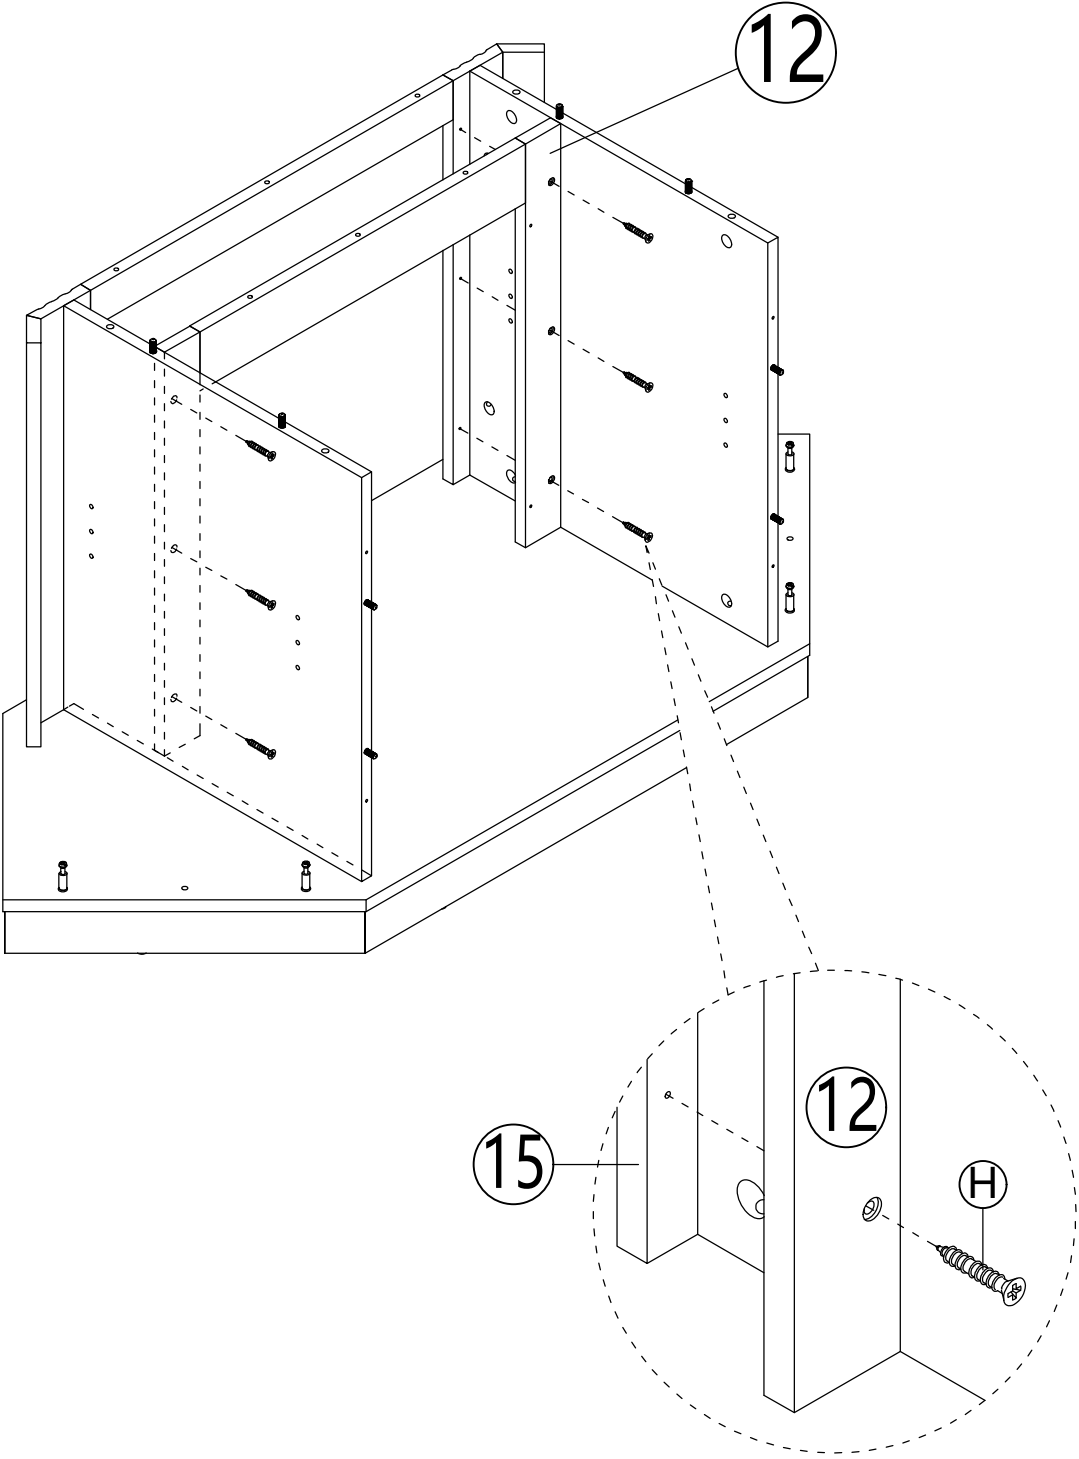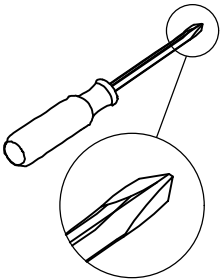

STEP 9


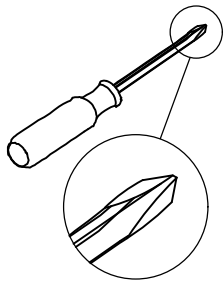


Ⓔ	X4
	
ø4*35	

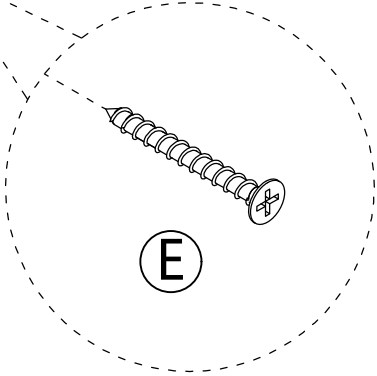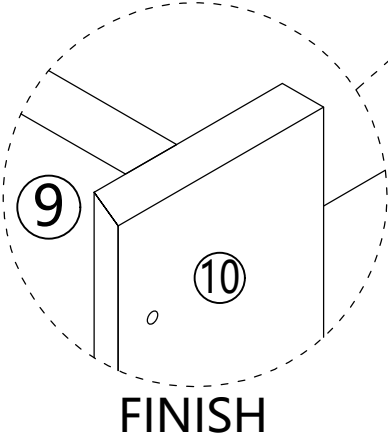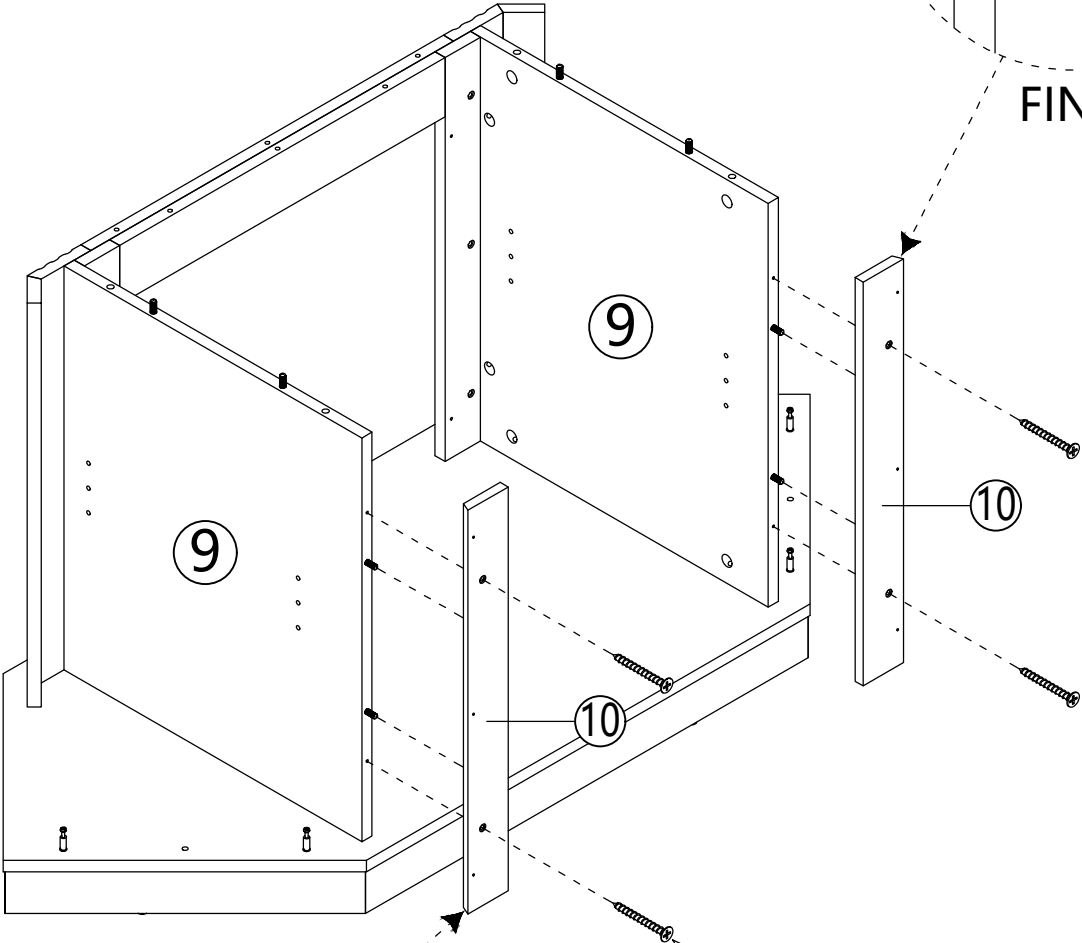
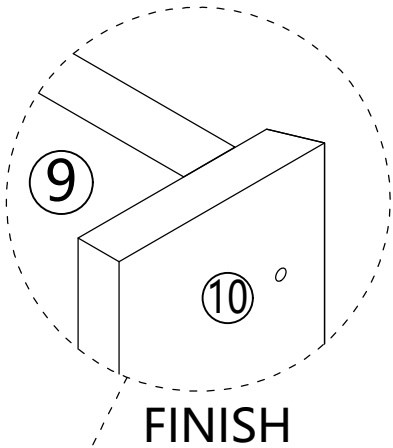


STEP 10


(B)	X2
	
Ø15*9.5	

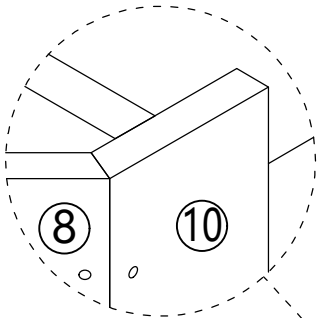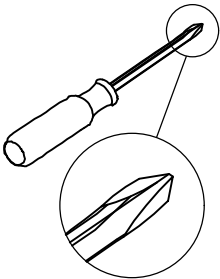

FINISH

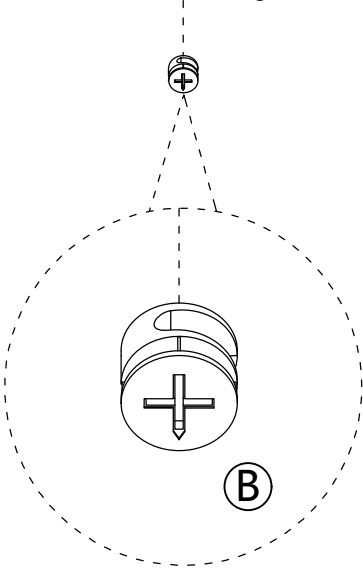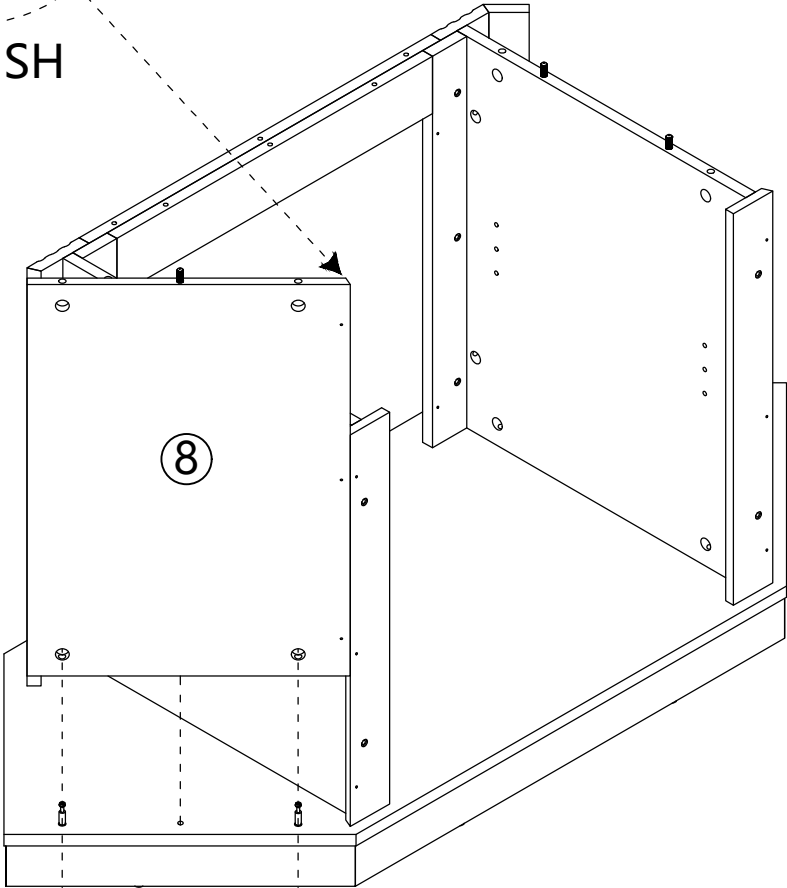



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

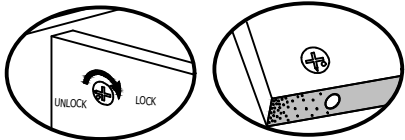


Proper orientation of CAM LOCK

STEP 11


(B)	X2
	
ø15*9.5	

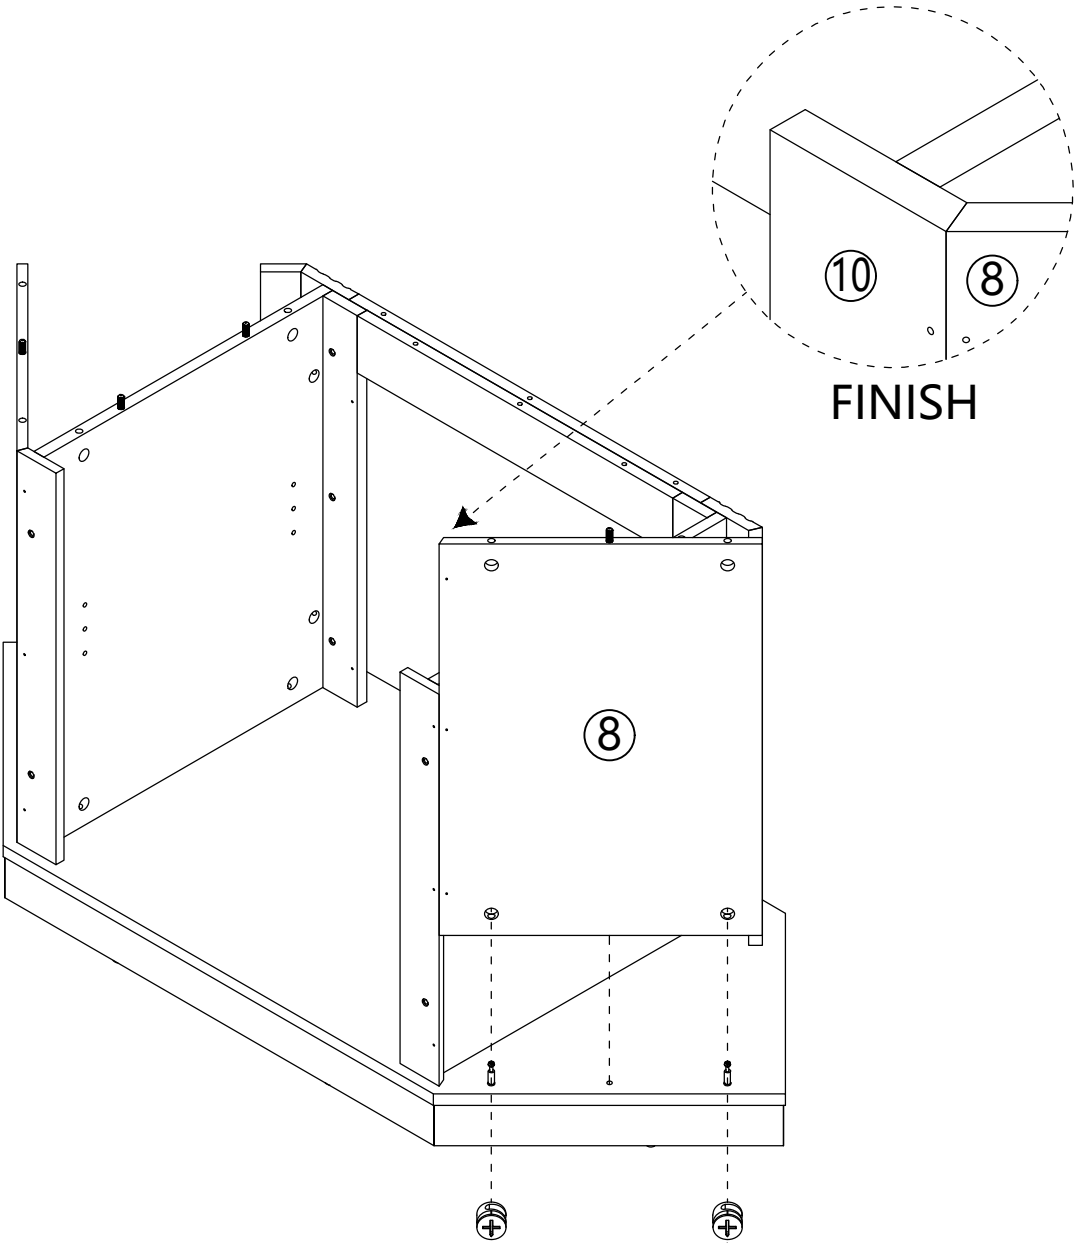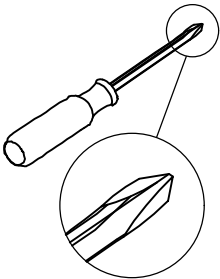

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

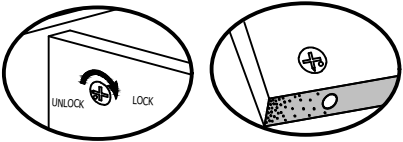

Proper orientation of CAM LOCK


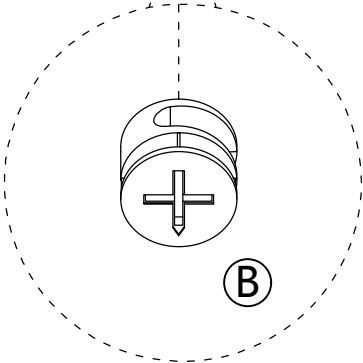


STEP 12

(A)	X16
ø6*35	




(G)	X4
ø3.5*12	

(K)	X2
30*16*10	

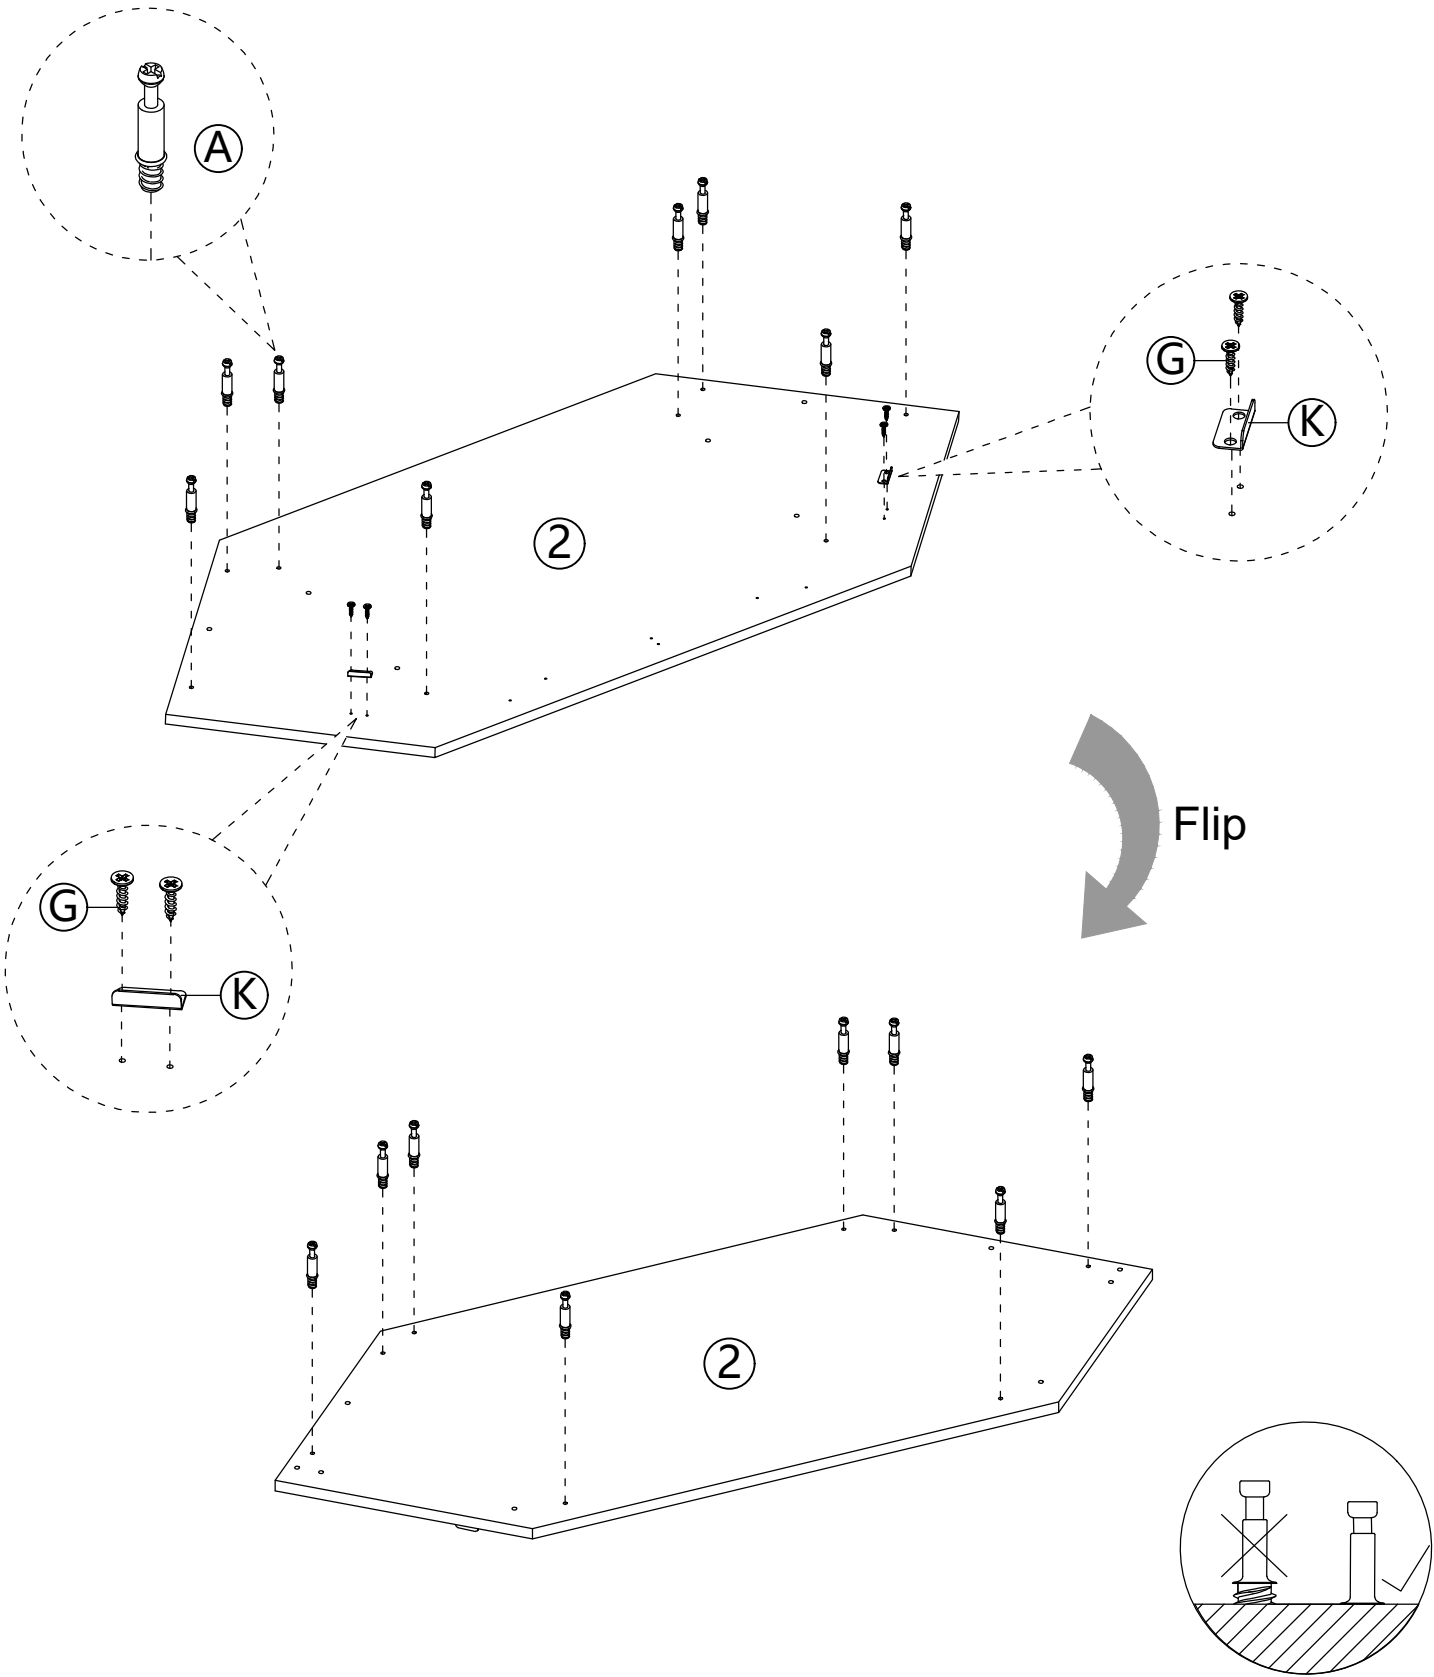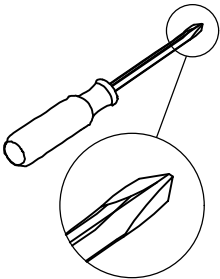


STEP 13

(B)	X8
	
ø15*9.5	


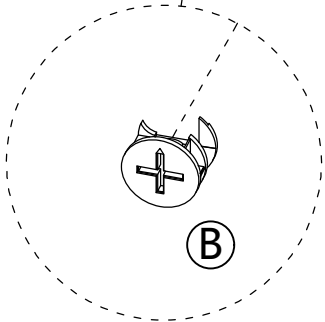
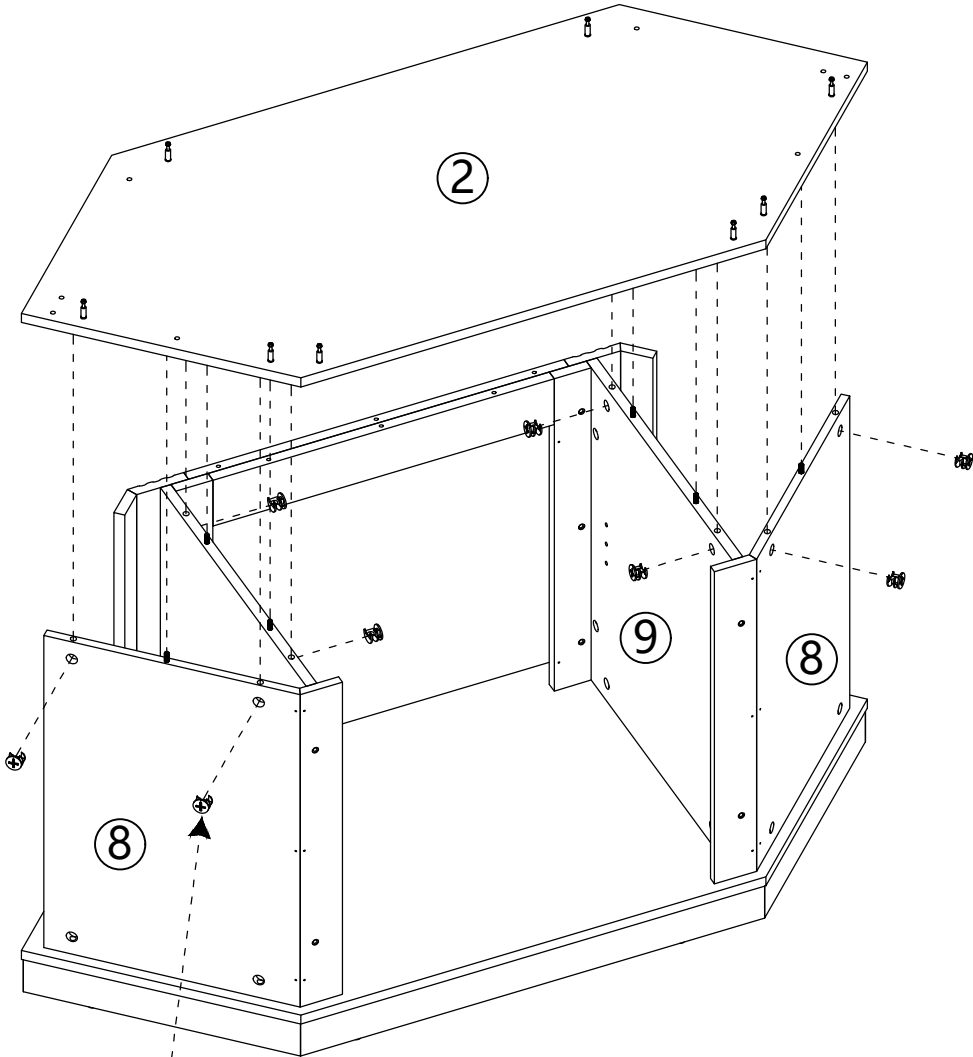
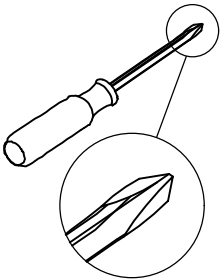


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

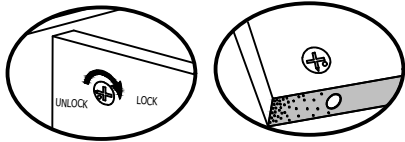


Proper orientation of CAM LOCK

STEP 14

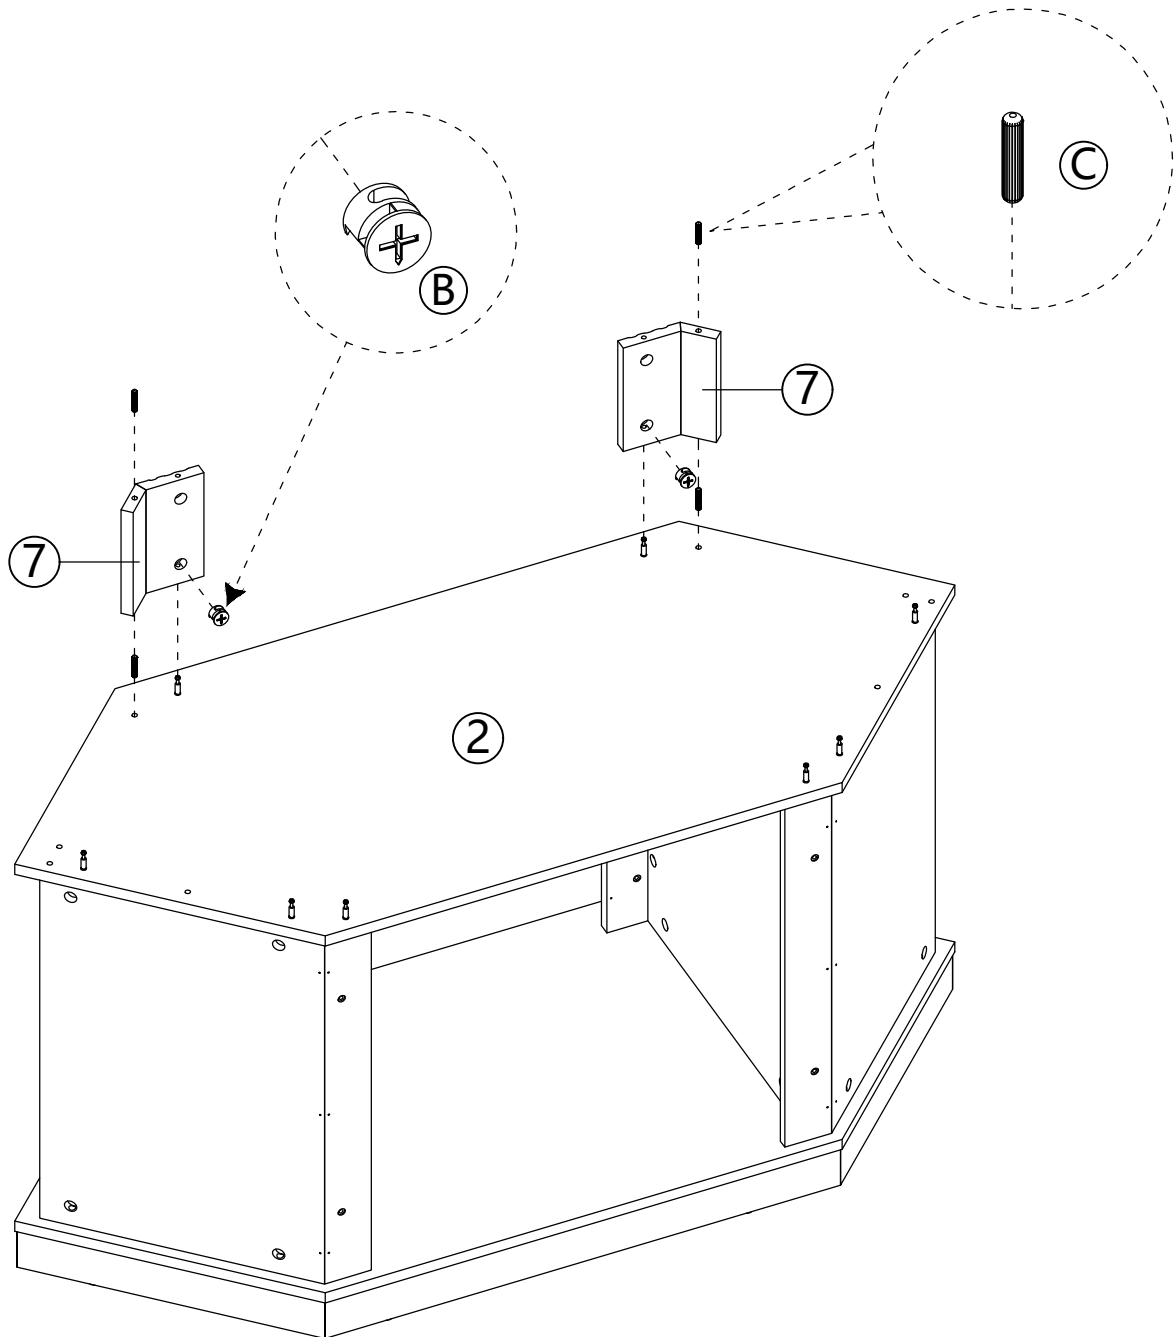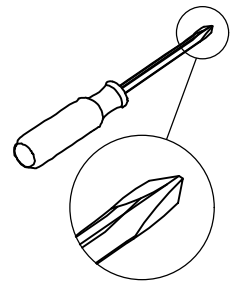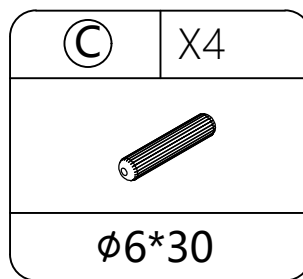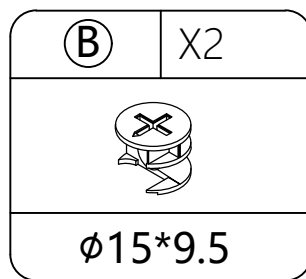


Insert the cam bolt into the hole first, then insert the cam lock and lock it.






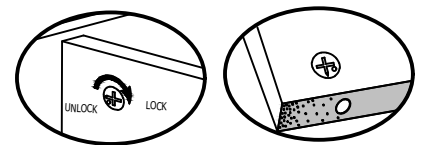


Proper orientation of CAM LOCK


STEP 15

Ⓐ	X2
	
φ6*35	

Ⓒ	X12
	
φ6*30	

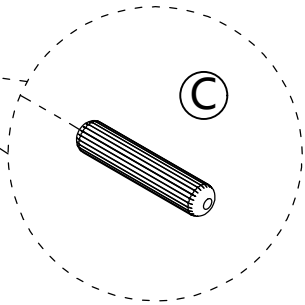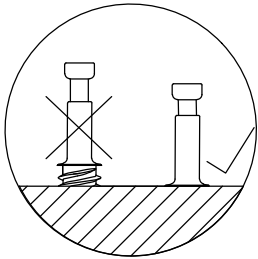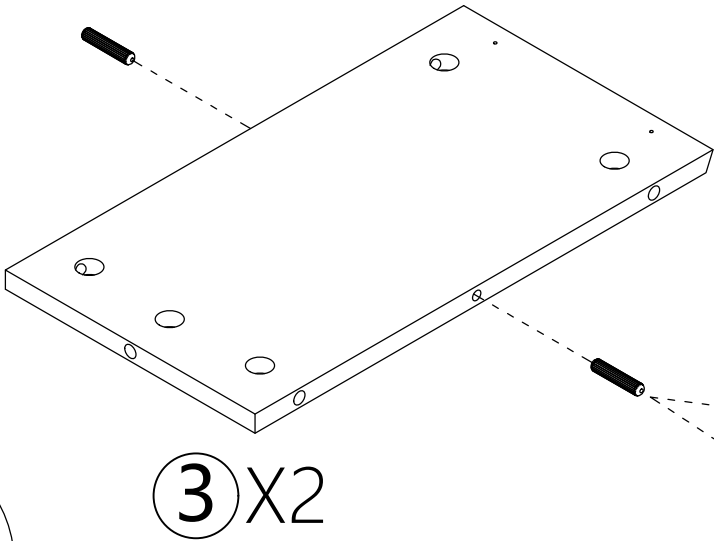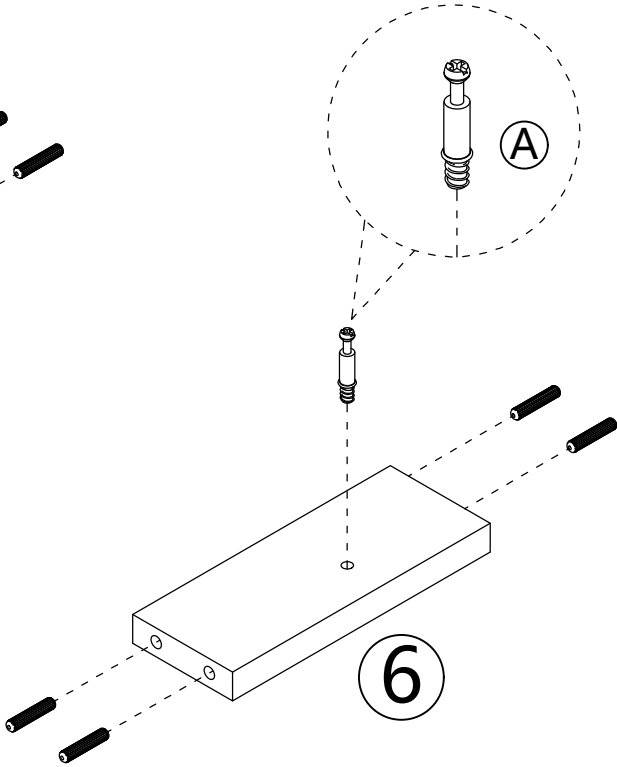
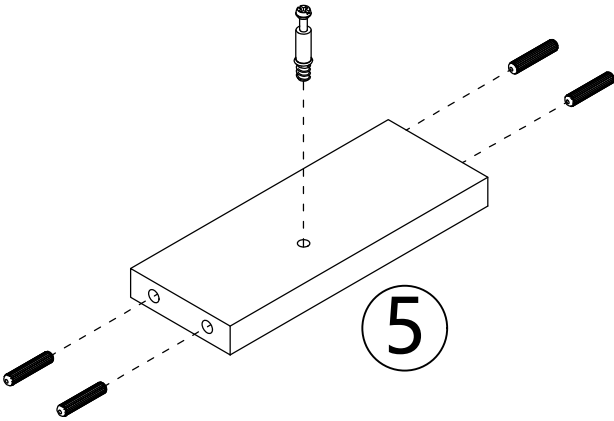
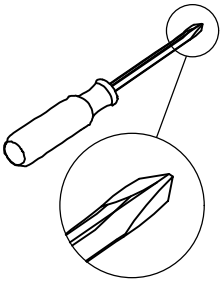


STEP 16

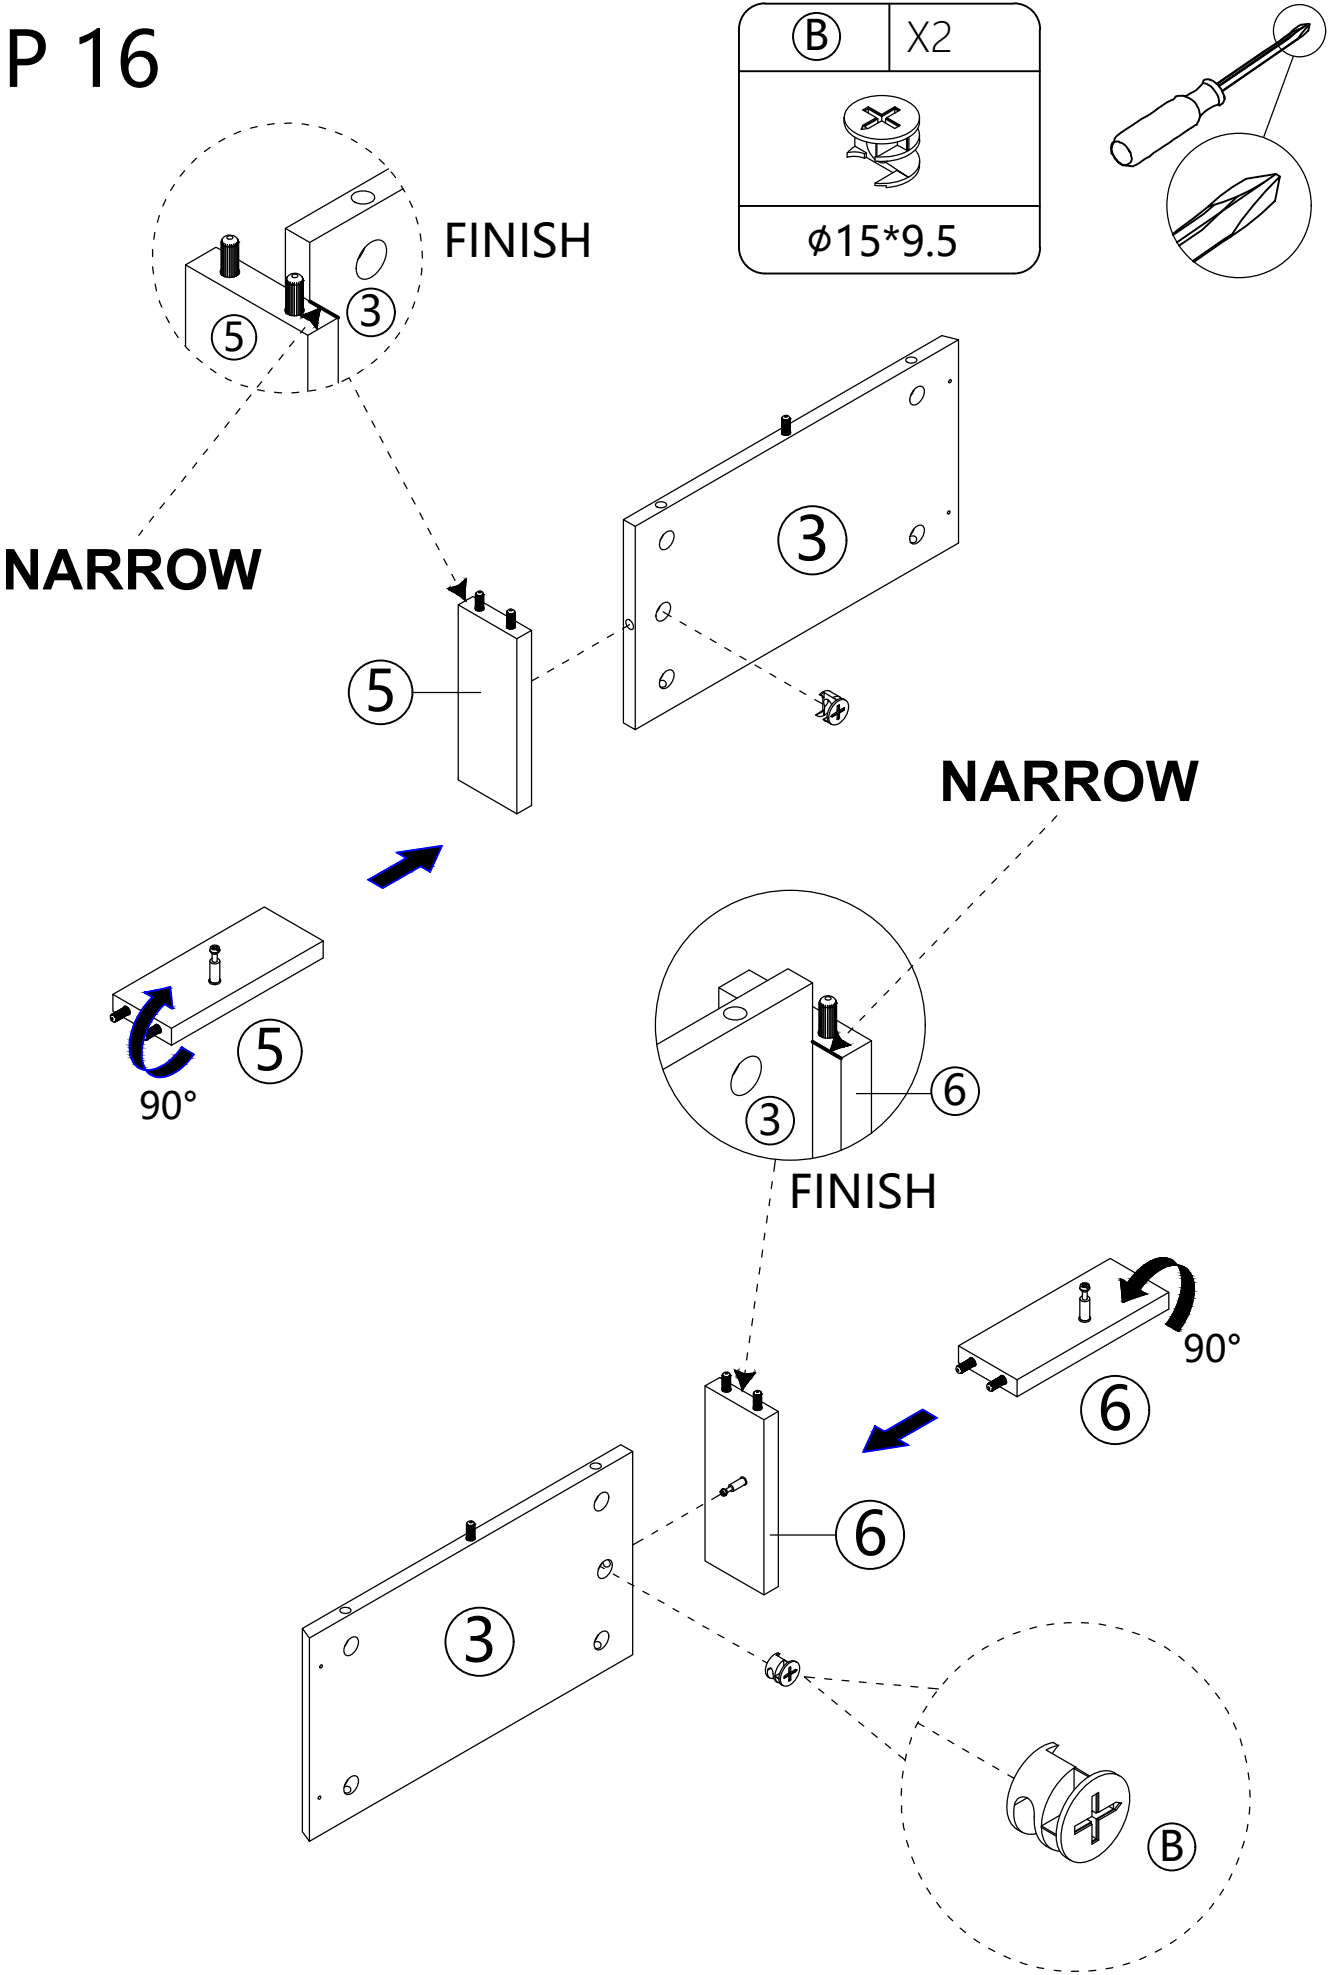


STEP 17

Ⓑ	X4
	
ø15*9.5	

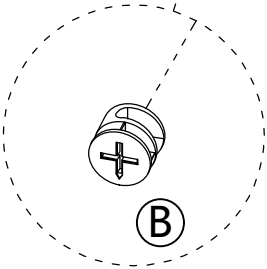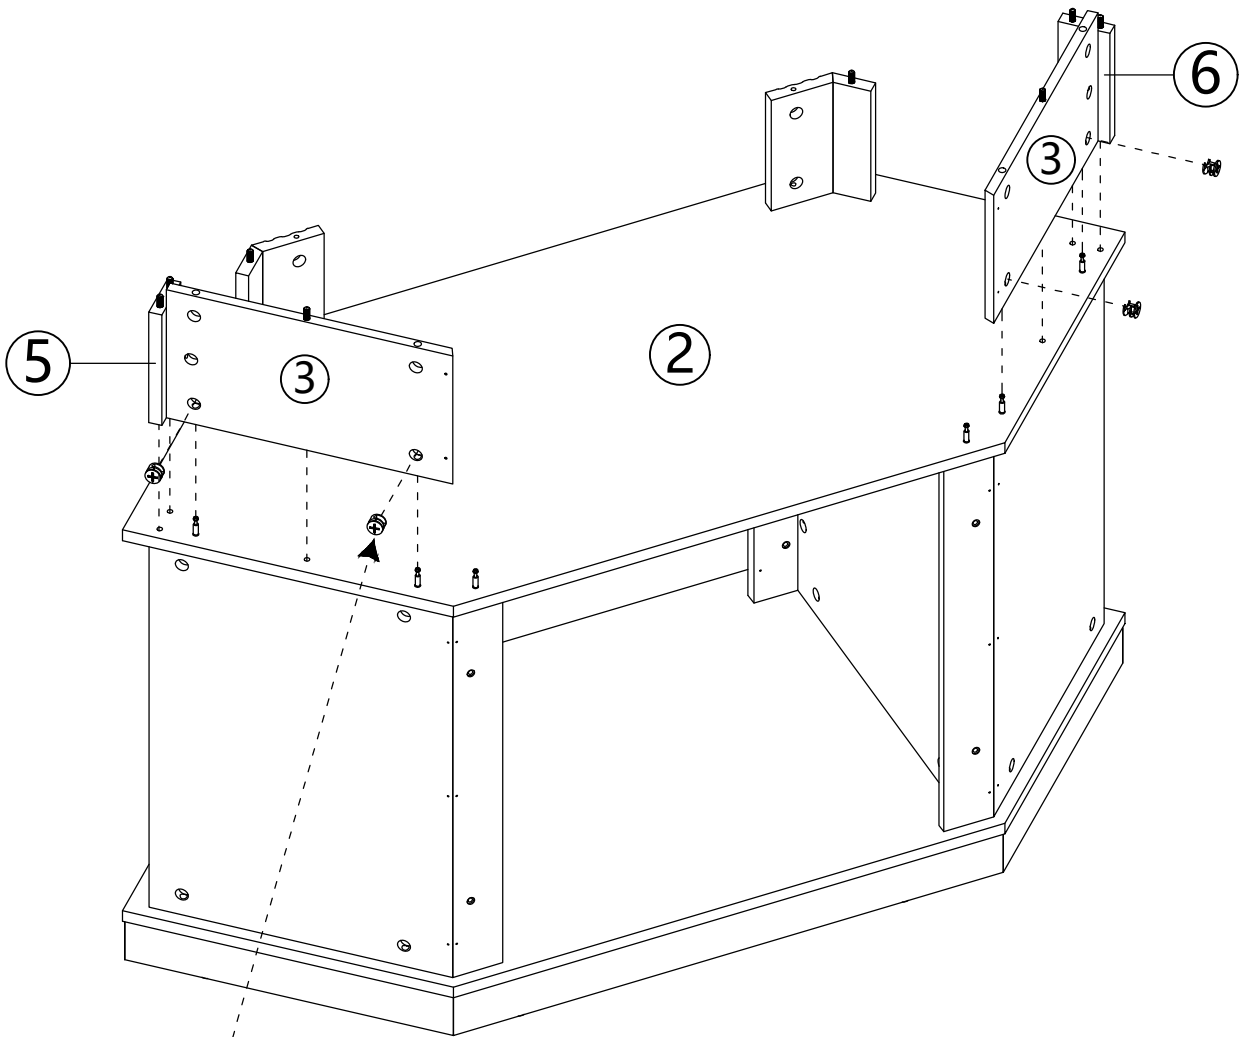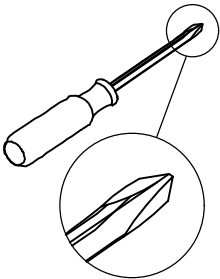



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

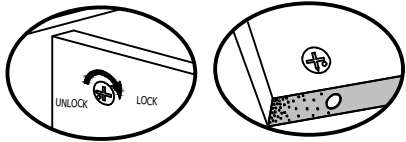


Proper orientation of CAM LOCK





STEP 18

Ⓑ	X2
	
ø15*9.5	

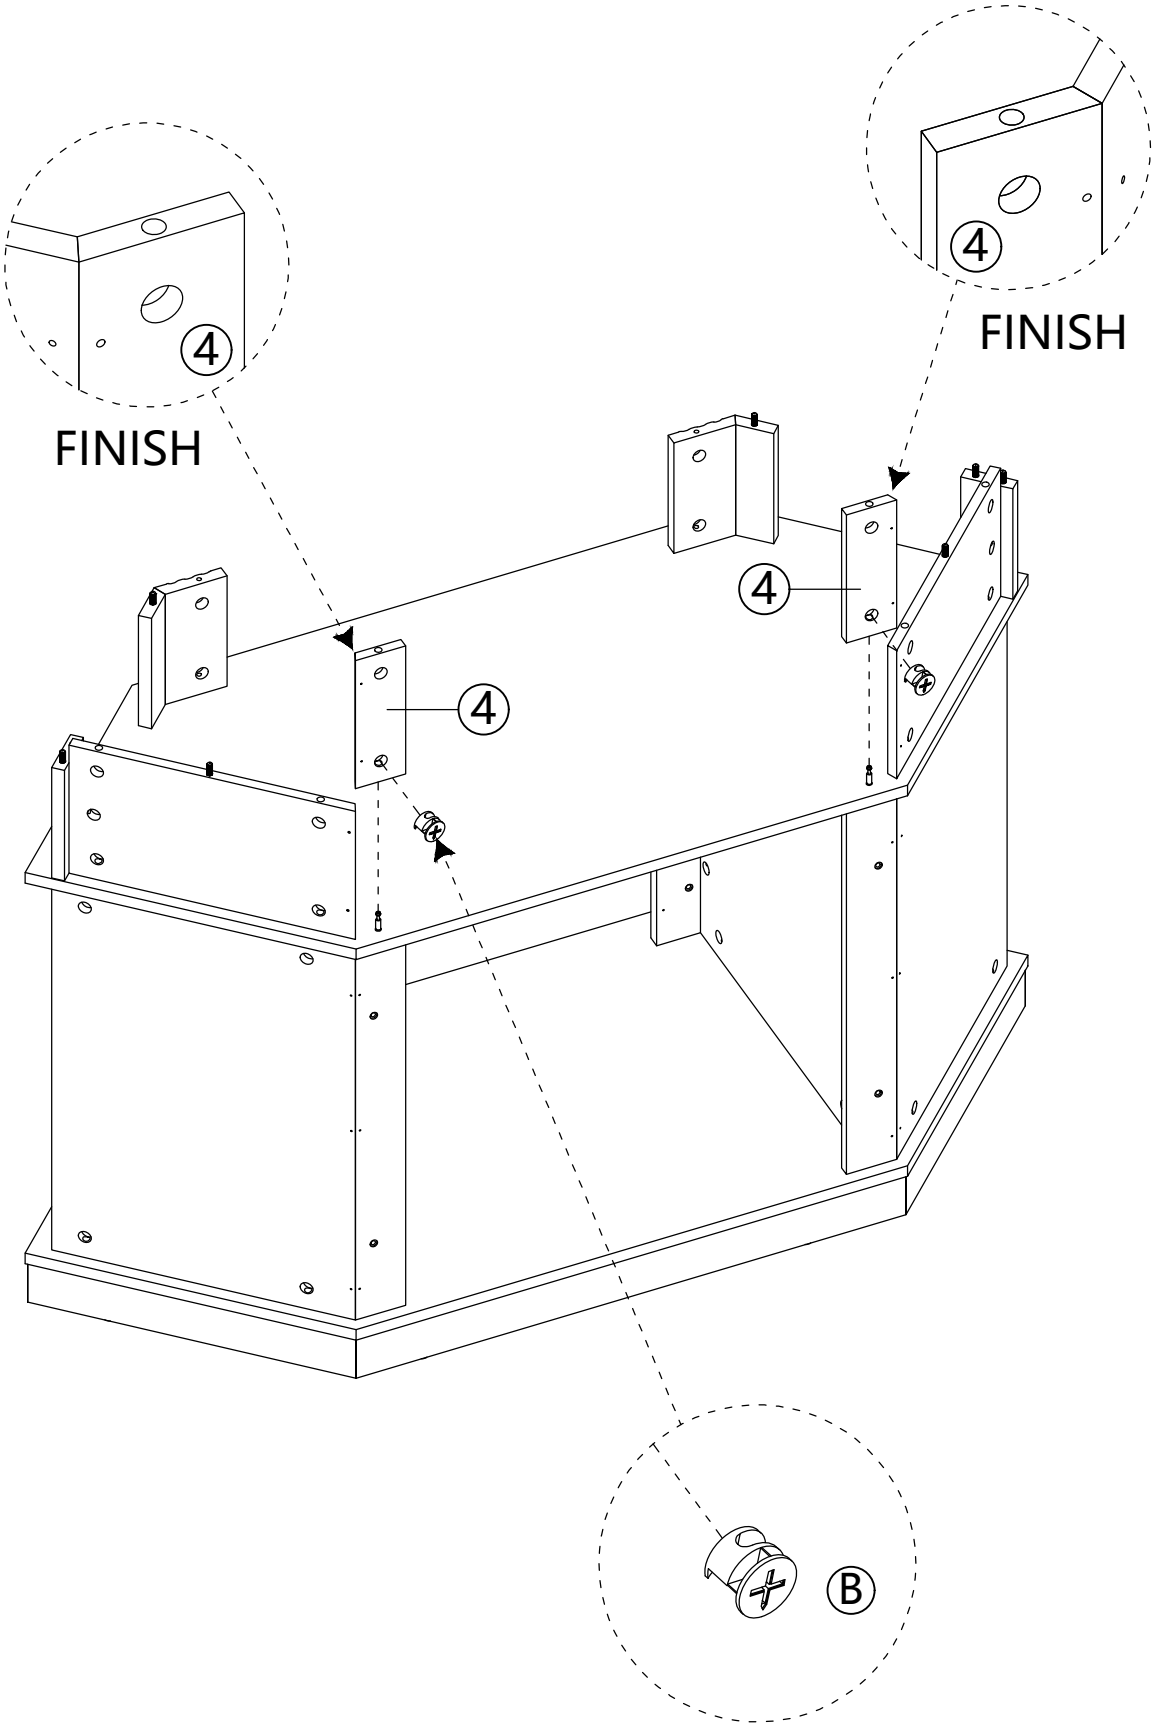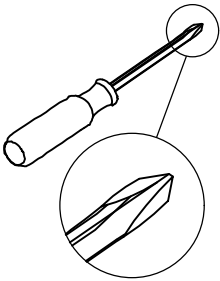


STEP 19

(A)	X8
	
ø6*35	ø15*9.5

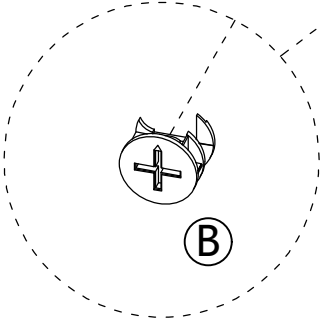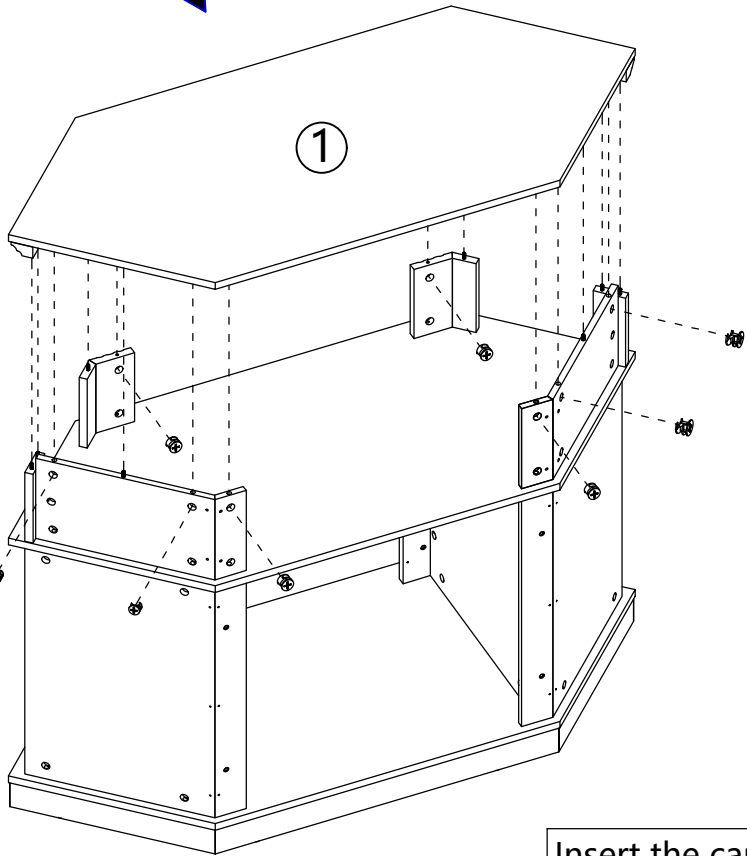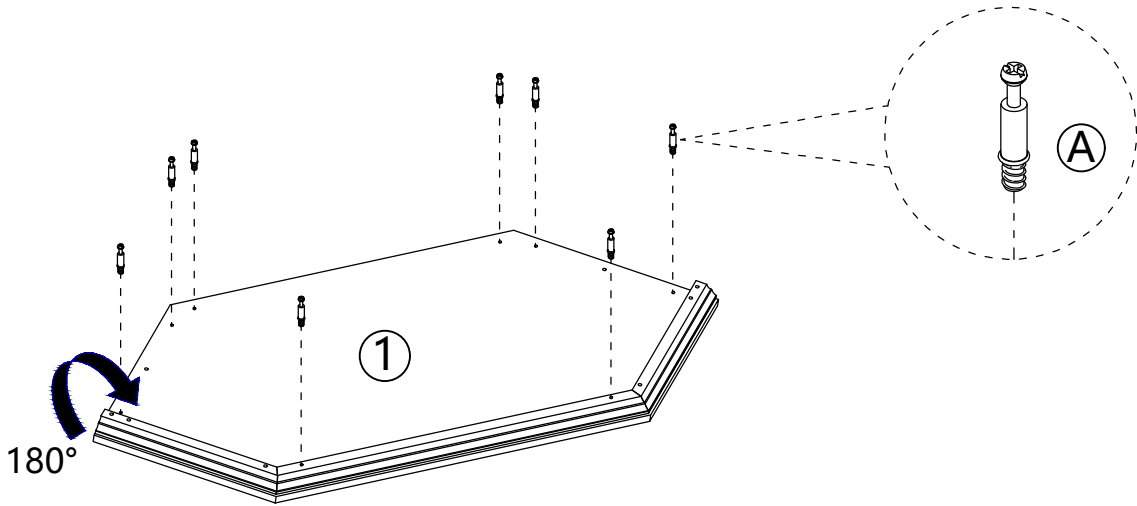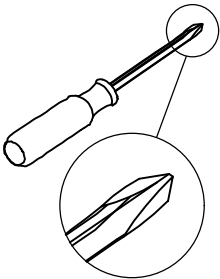


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



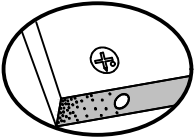


Proper orientation of CAM LOCK

STEP 20



(G)	X20
	
ø3.5*12	

(N)	X10
	
33*8.4*18	

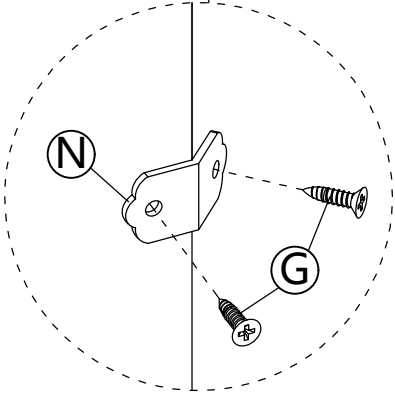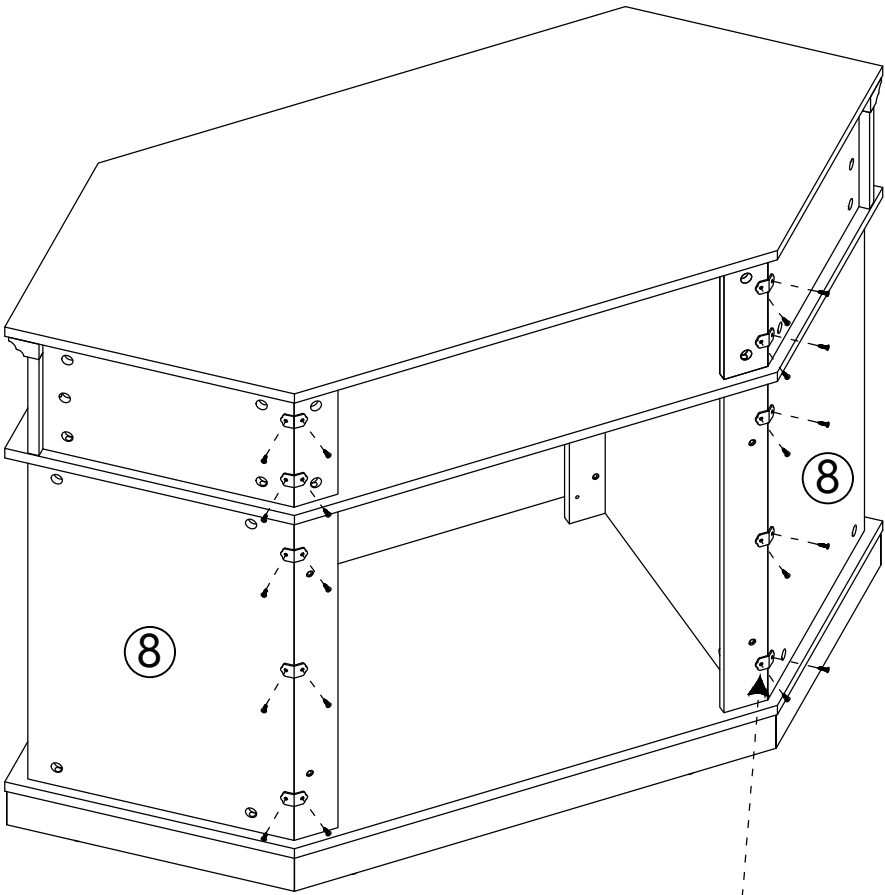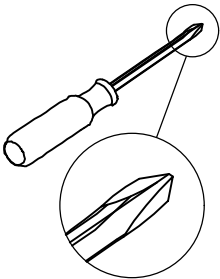



STEP 21

Ⓓ	X6
	
ø4*50	

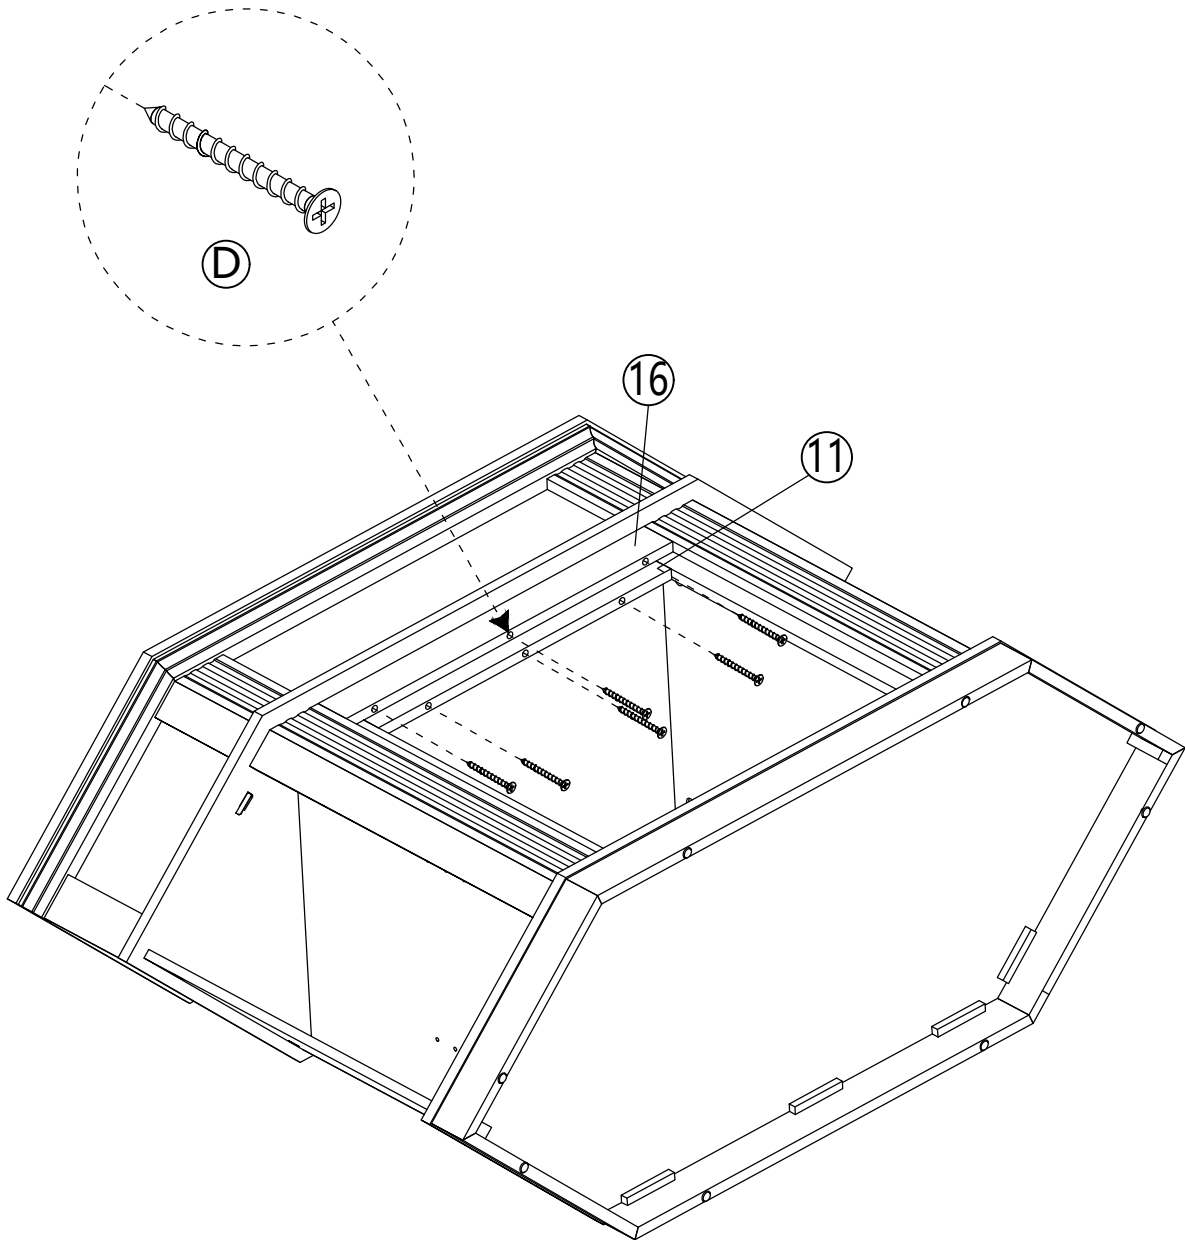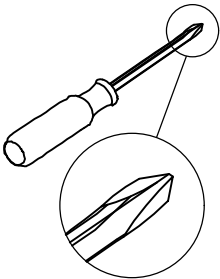


STEP 22

ⓕ	X12
	
ø5*16	

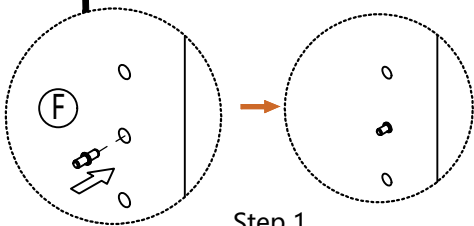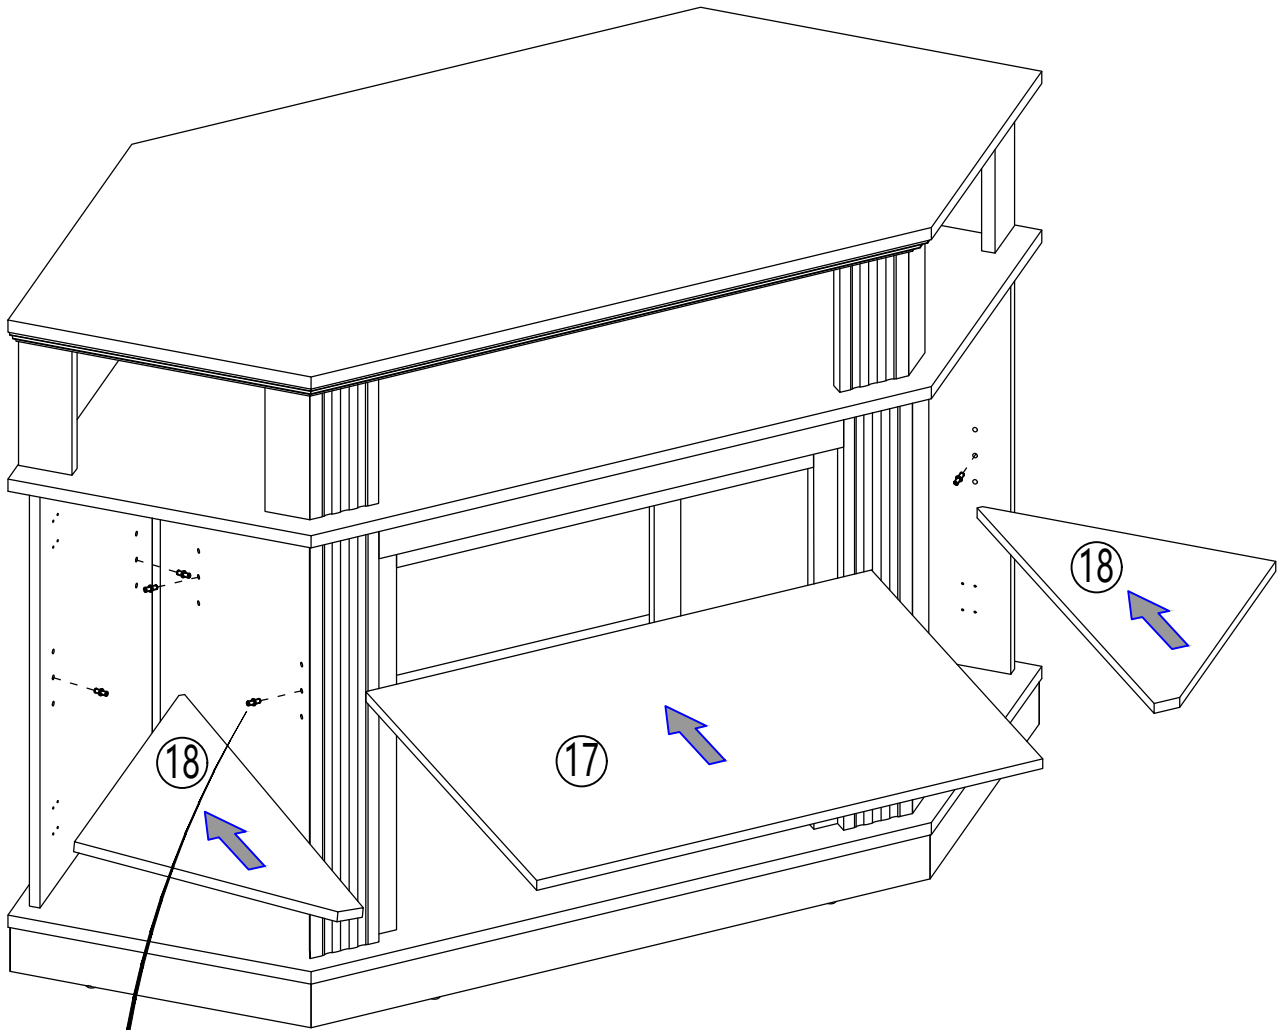


Step 1
Select the desired height
and put it in


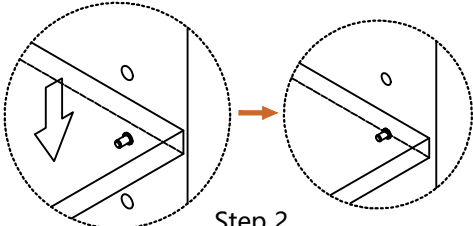


Step 2
Aim the board gaps down

STEP 23






Ⓒ	X8
	
ø3.5*12	

Ⓕ	X4
	
ø25	

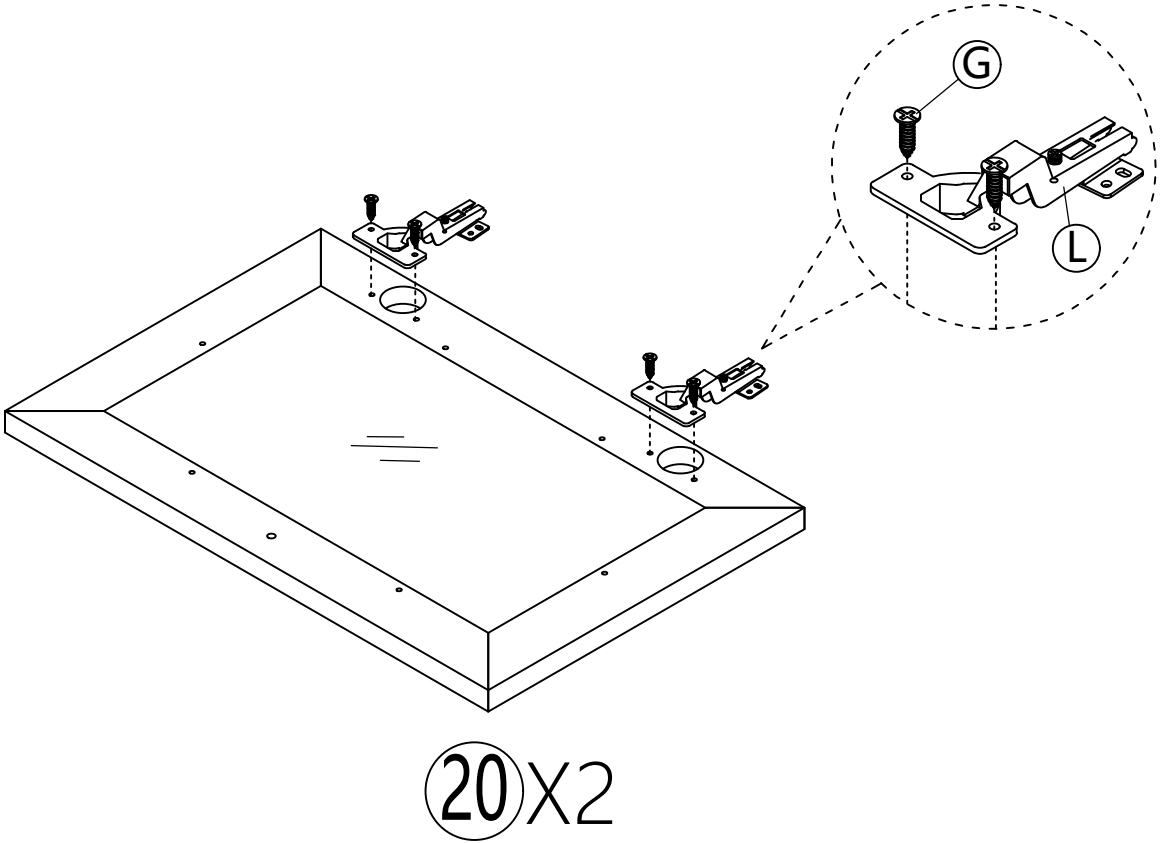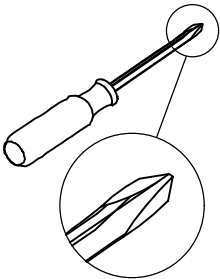


20X2



STEP 24

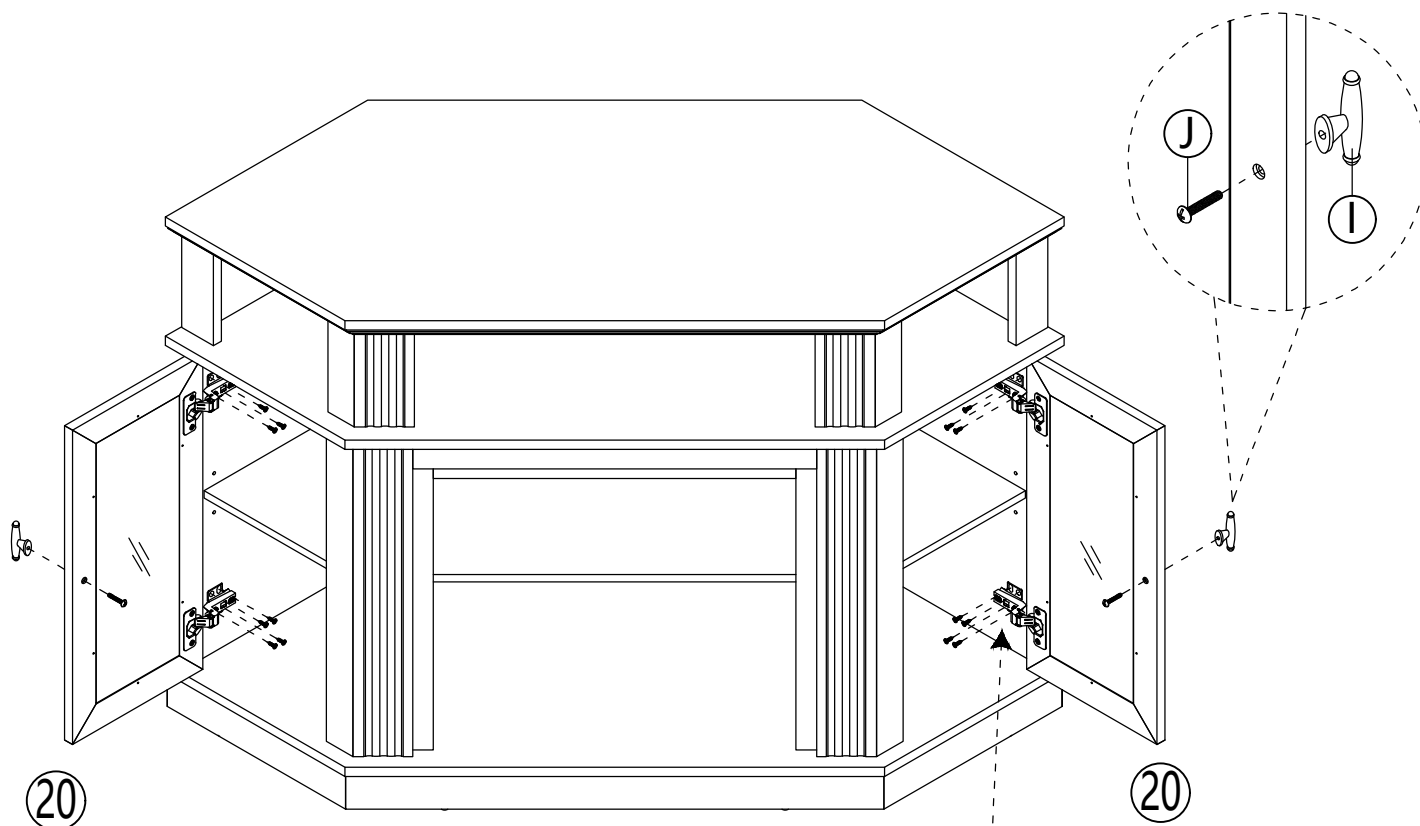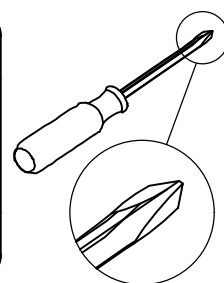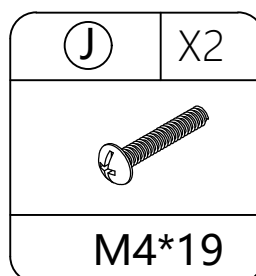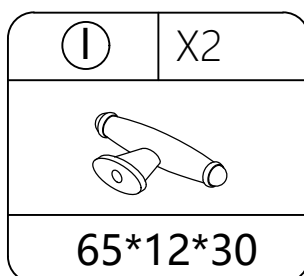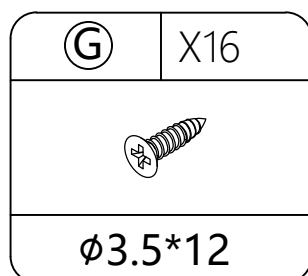



Pre-drilled



Locked with panel Pre-drilled.
After you adjustable the gap, You
can Locked the other three screws.

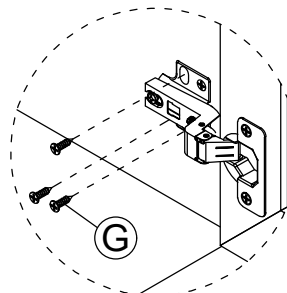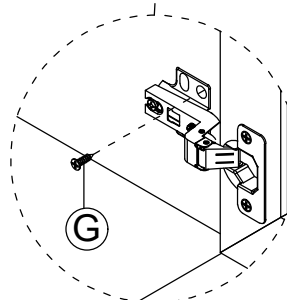


STEP 25

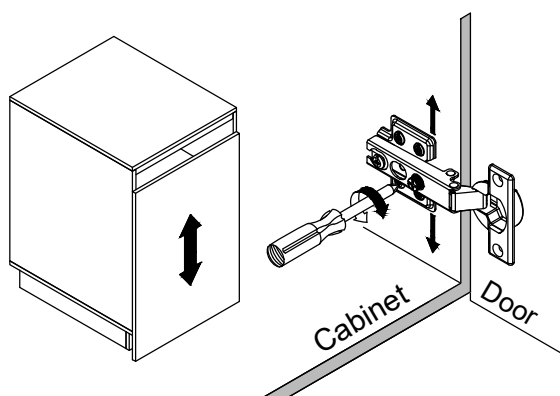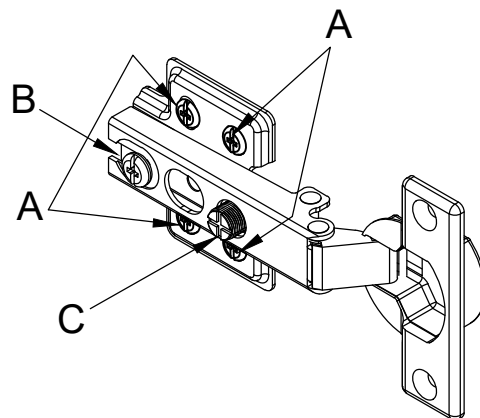


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few millimetre. Then tighten back up.

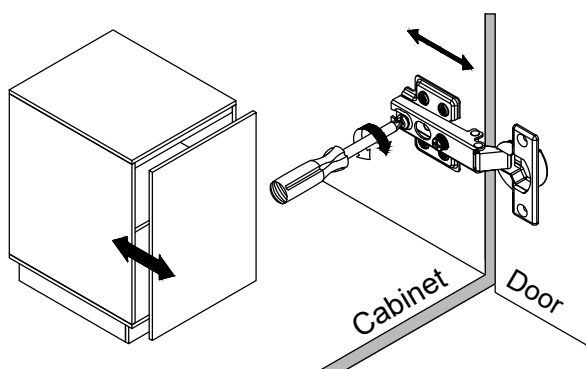

To adjust depth.


Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

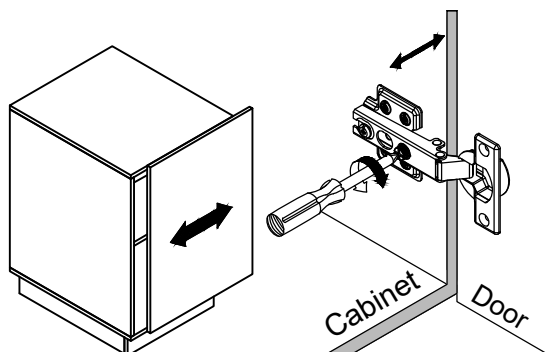

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

STEP 26

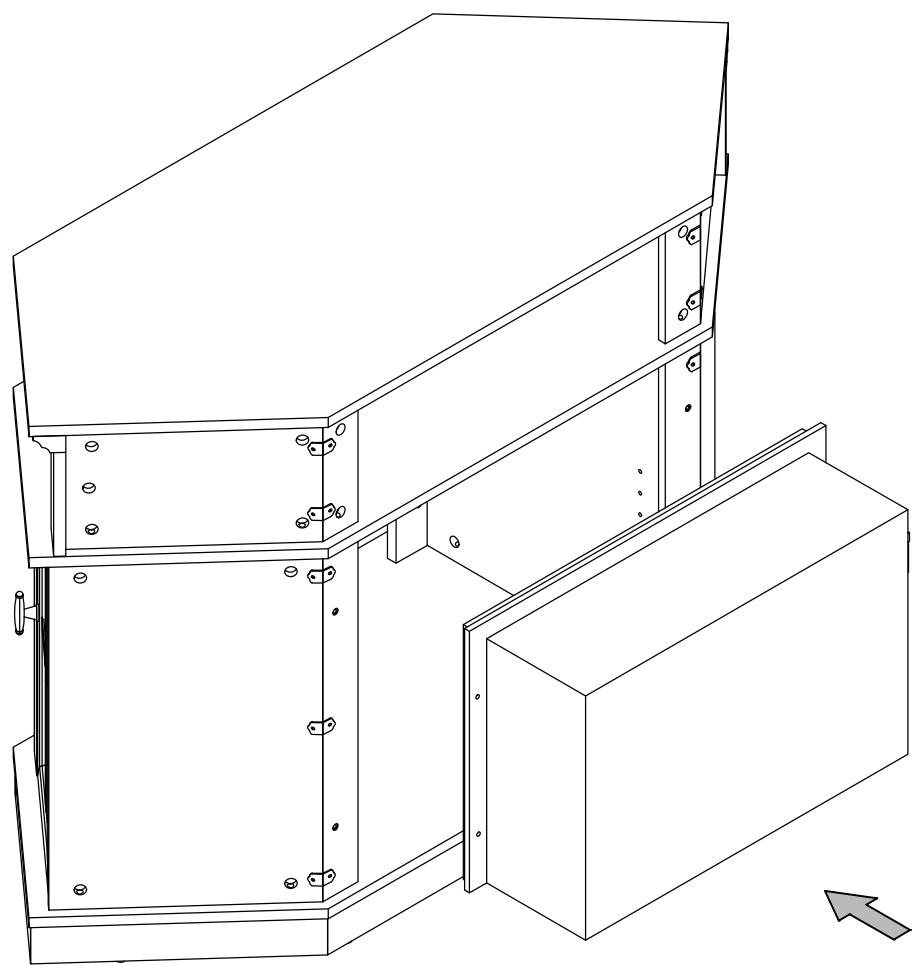

FURNITURE CARE AND MAINTENANCE

Particleboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- . Tighten all bolts and screws again within the first 2 weeks of assembly
- . Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- . Clean the surface of the particleboard with a lightly dampened cloth
- . Small amount of mild soap can be used if necessary
- . Dry the surface immediately after cleaning.
- . DO NOT use bleach or alcohol detergent to clean the surface.
- . DO NOT apply wood treatment on parts made with particleboard.

Particleboard will swell and distort when suffer damage.
Make sure to dry the furniture immediately after cleaning