



## Page 1 of 3

## Made in Viet Nam

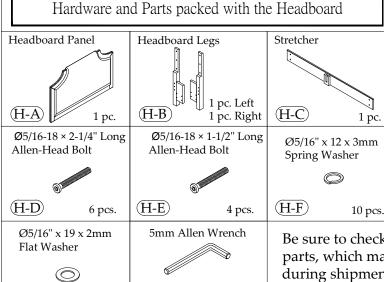

(H-H)

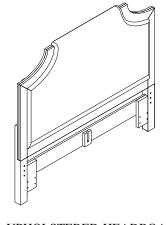

4/6-5/0 UPHOLSTERED HEADBOARD 6/0-6/6 UPHOLSTERED HEADBOARD

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. To prevent possible scratches or damage, this furniture should be assembled on a soft surface such as a blanket or carpet.

## **ASSEMBLY STEPS:**

10 pcs.

(H-G


1. Place the Headboard Panel (H-A) face down on the soft surface.

1 pc.


2. Attach the Left and Right Legs (H-B) to the back of the Headboard Panel using the 2-1/4" long Allen-Head Bolts (H-D), Spring Washers (H-F) and Flat Washers (H-G). Do not fully tighten Bolts until after next step.

1 pc.

- 3. Attach the Stretcher (H-C) to the Legs as shown using the 1-1/2" long Bolts and Washers as before.
- 4. Adjust parts for correct fit if necessary and tighten all Bolts using the Allen Wrench (H-H).
- 5. Carefully lean the back of the assembled Headboard against the wall where the bed will be used.

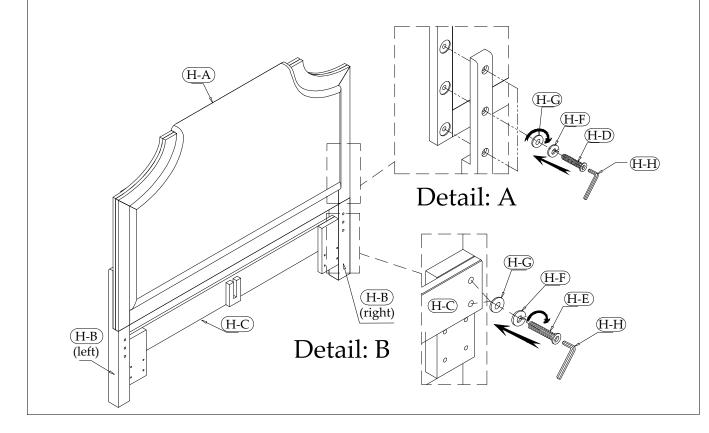

## Queen Headboard Assembly Instructions

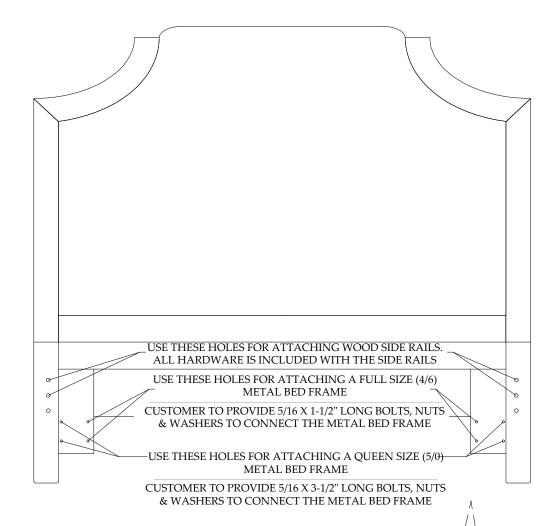

5/0 Queen Panel Bed

The Headboard may be used alone with a Queen or Full Size

Metal Bed Frame

