



# Assembly Instruction

## Model: 7866 PRS


### STEP 1

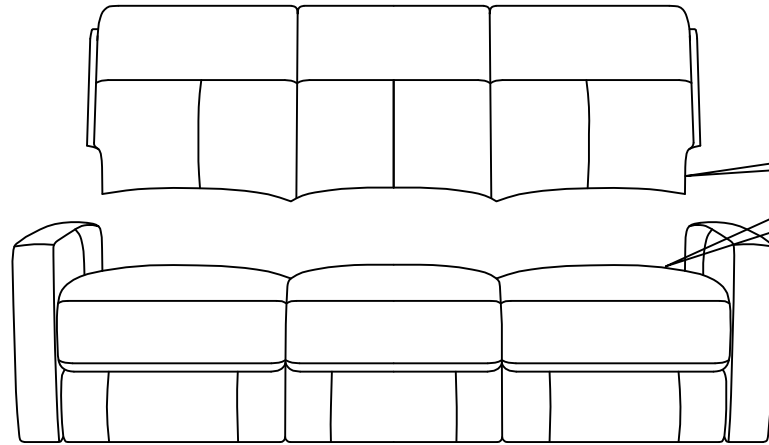


PUSH THE BACK DOWN UNTIL IT SNAPS IN PLACE, A MUST INSERT INTO B, EXACTLY LIKE C.

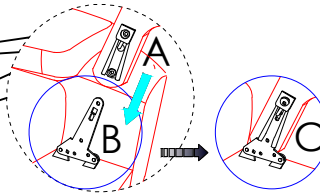



### STEP 2

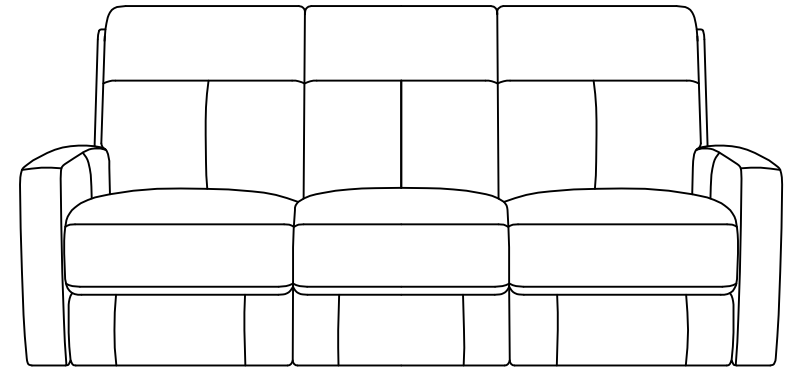


### STEP 3

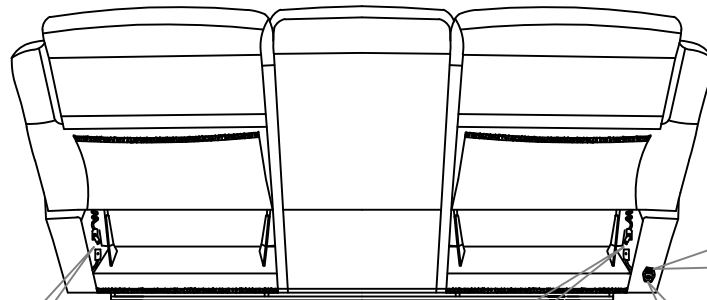


POWER SWITCH

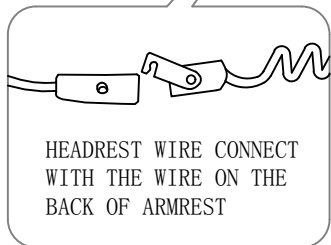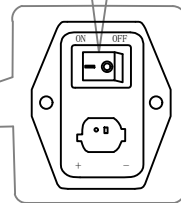

HEADREST WIRE CONNECT WITH THE WIRE ON THE BACK OF ARMREST

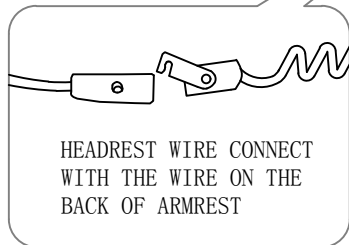


HEADREST WIRE CONNECT WITH THE WIRE ON THE BACK OF ARMREST

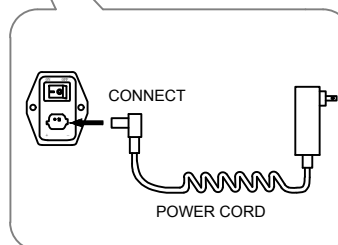


CONNECT

POWER CORD

### STEP 4

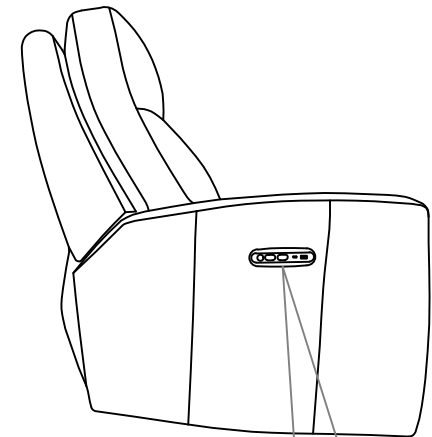

OPERATE THE OPEN/CLOSE FUNCTIONS OF THE HEADREST AND SEAT BY PRESSING THE POWER BUTTONS

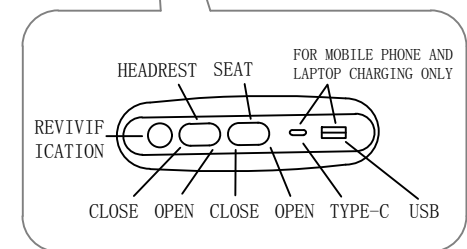

FOR MOBILE PHONE AND LAPTOP CHARGING ONLY

REVIVIFICATION

HEADREST SEAT

CLOSE OPEN CLOSE OPEN TYPE-C USB