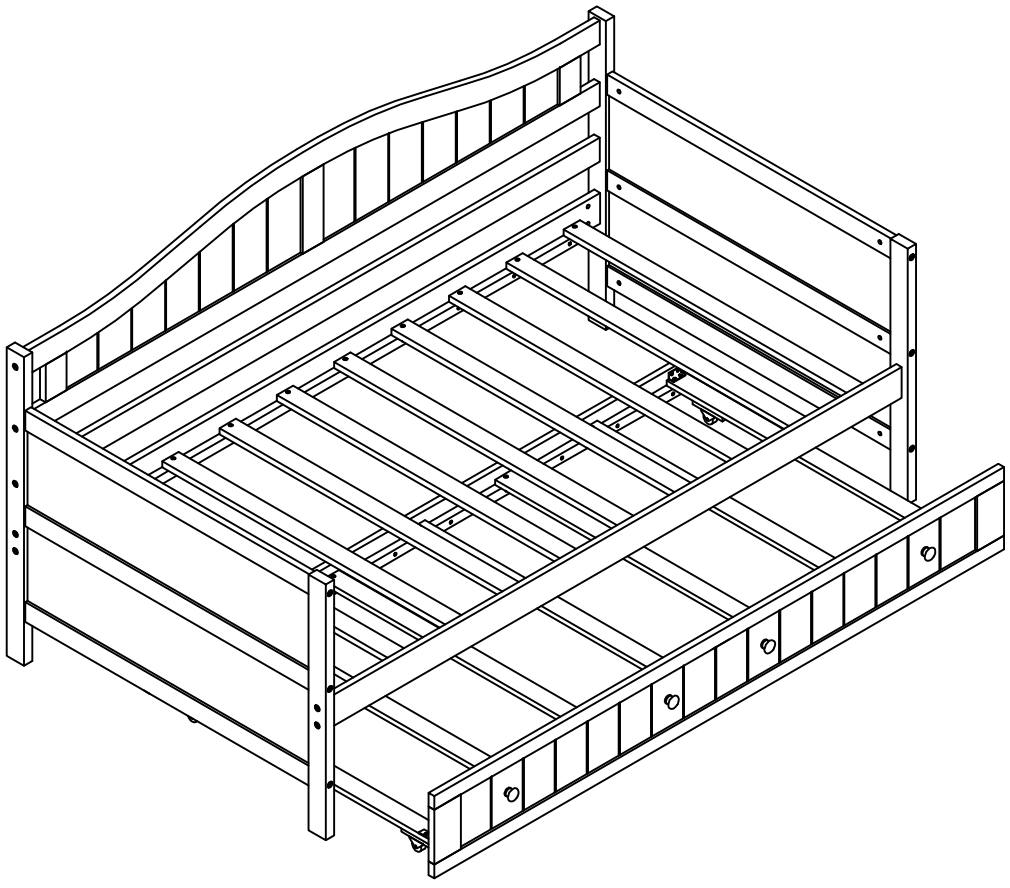
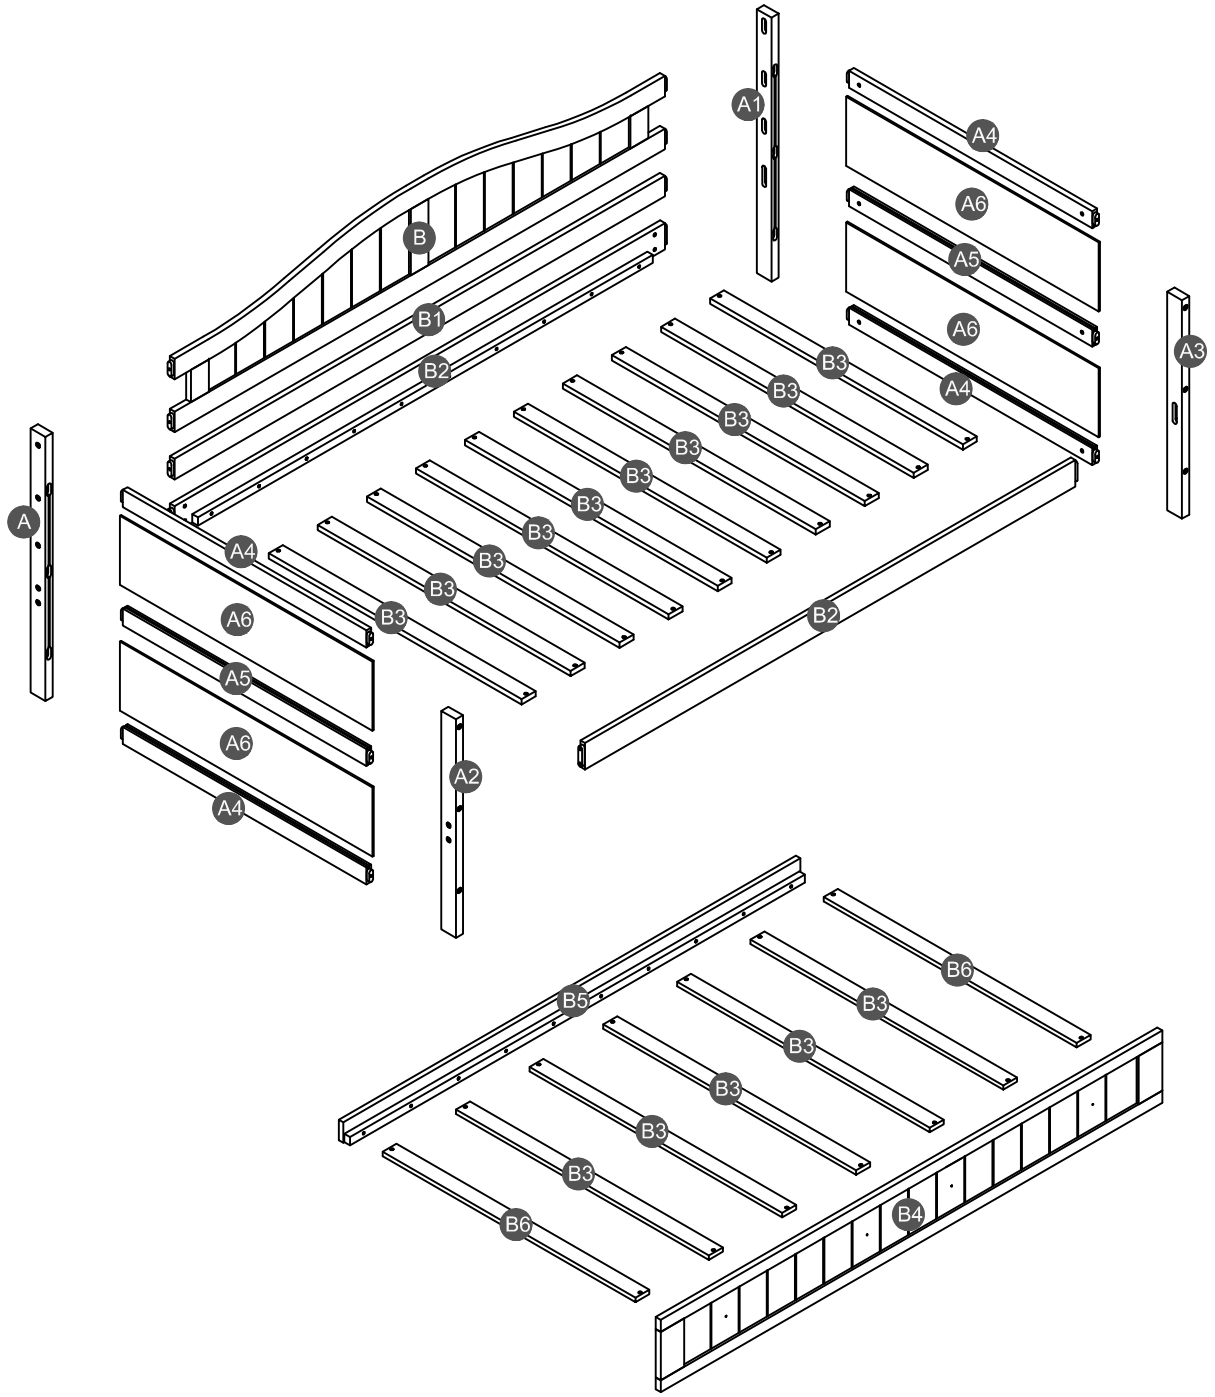
ASSEMBLY INSTRUCTIONS











TWIN DAYBED WITH TRUNDLE









Detail View


A1
A4
A6
A5
A6
A3
A4
B
B1
B2
B3
B3
B3
B3
B3
B3
B3
B3
B3
A
A4
A6
A5
A6
A4
B2
A2
B6
B5
B3
B3
B3
B3
B3
B6
B4




Part List

A  Leg HB (Left) - 1pc	**A1**  Leg HB (Right) - 1pc	**A2**  Leg FB (Left) - 1pc
A3  Leg FB (Right) - 1pc	**A4**  Horizontal bars HB&FB - 4pcs	**A5**  Horizontal center HB&FB - 2pcs
A6  Side panel (HB&FB) - 4pcs	**B**  Guard rail (back)- 1pc	**B1**  Horizonta bar (back) - 1pc
B2  Side rail (Front & Back) - 2pcs	**B3**  Slats - 15pcs	**B4**  Front panel of Trundle - 1pc
B5  Back panel side rail of Trundle -1pc	**B6**  Slats of Trundle - 2pcs	

Hardware List

1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	**2**  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)	**3**  1/4"*15 (9.5mm) Horizontal-Hole bolts(26pcs)
4  Ø4*30mm Wood screws (46pcs)	**5**  Ø3.5*15mm Wood screws (16pcs)	**6**  Ø38*31mm Pine Knob (4pcs)
7  3/16"*15mm Ph zinc(Knob) (4pcs)	**8**  80*45*19 mm Drawer stopper (2pcs)	**9**  40*17*17*1.6mm Metal bracket (2pcs)
10  100*61*20 mm Wheels (4pcs)	**11**  95*95*18*3mm Metal bracket (2pcs)	**12**  Ø1/4"*16*2mm Flat Washer (4pcs)
13  (1/4")4.5*58mm Allen key (1pc)		

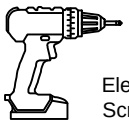OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)







Electric Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

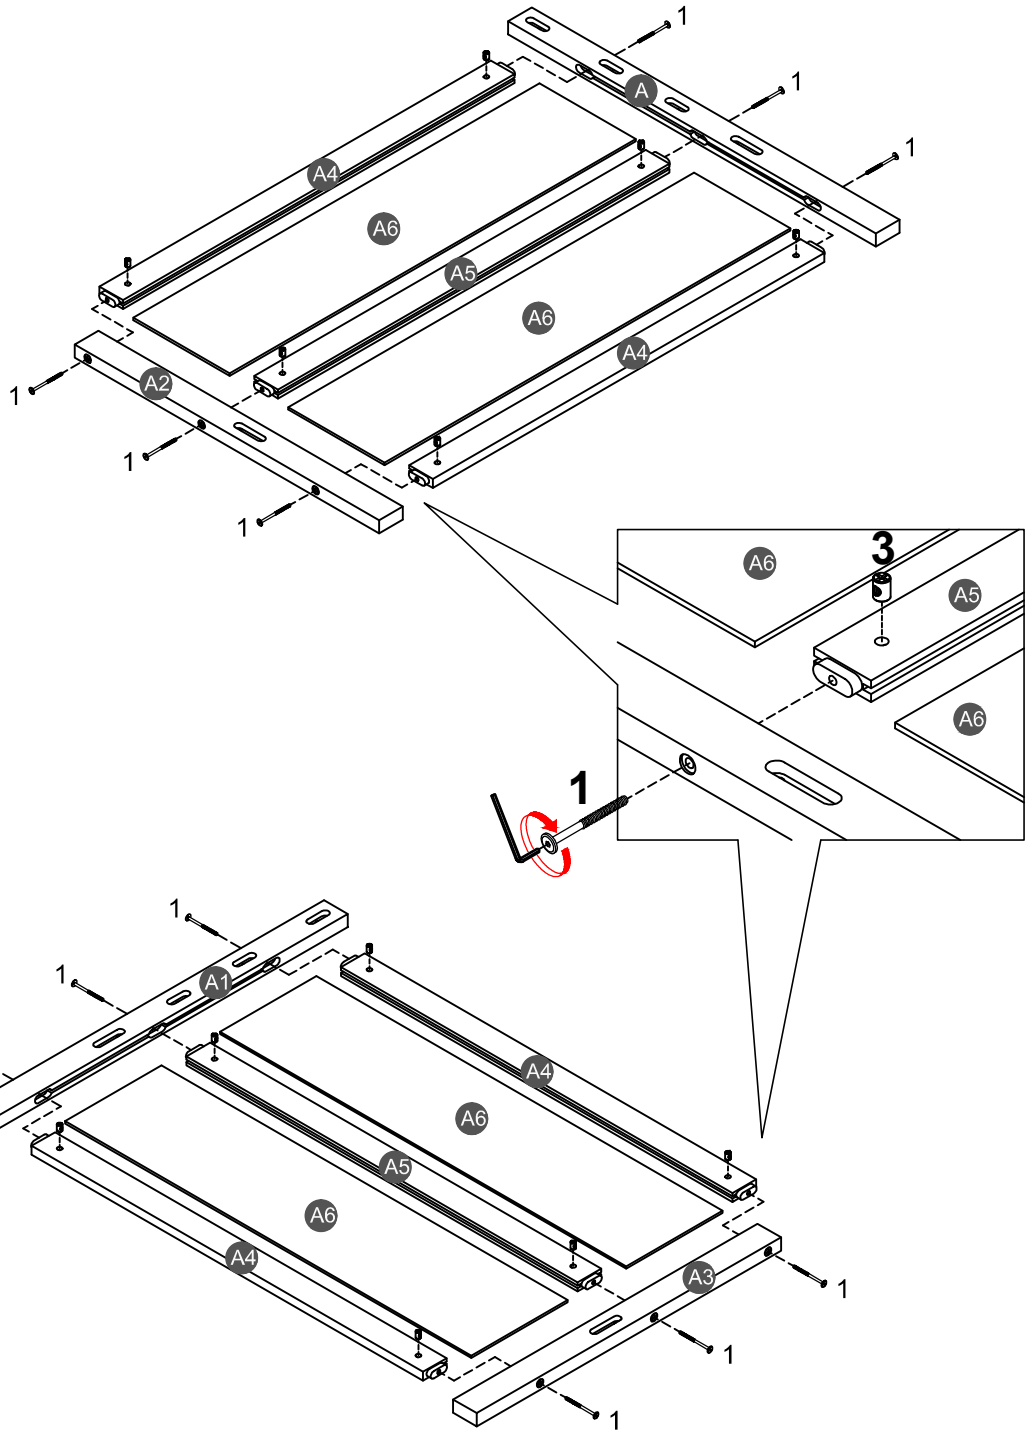STEP 1:

1	3
12PCS	12PCS




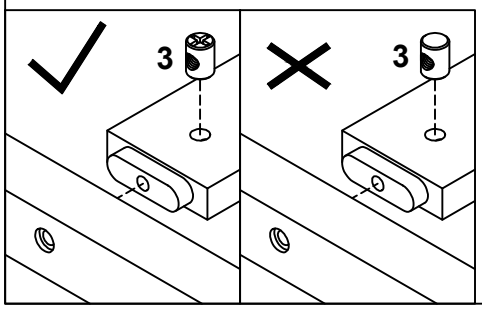

Note:Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 2:

4	8
4PCS	2PCS

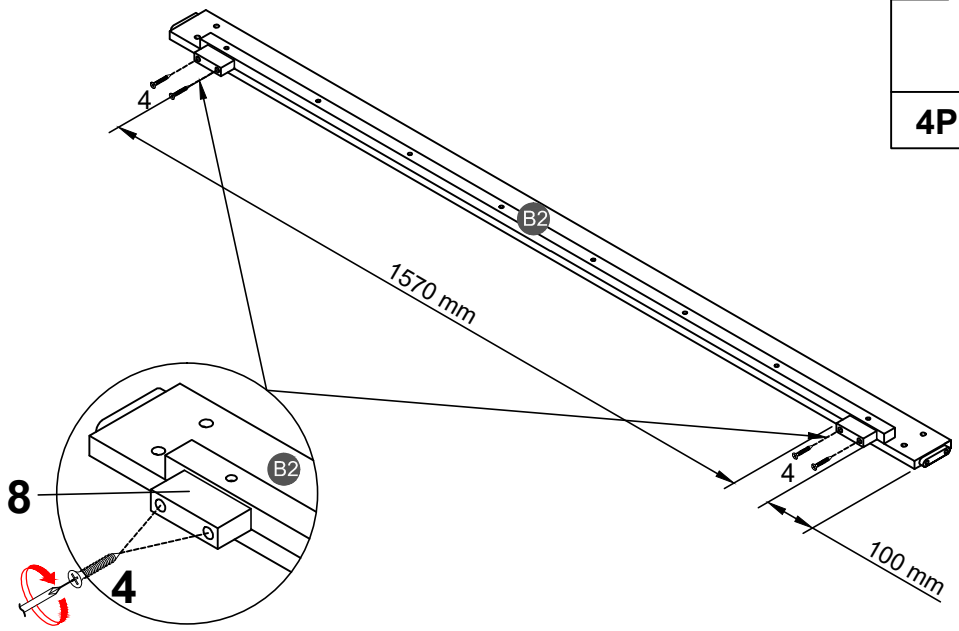

STEP 3:

2	3
14PCS	14PCS

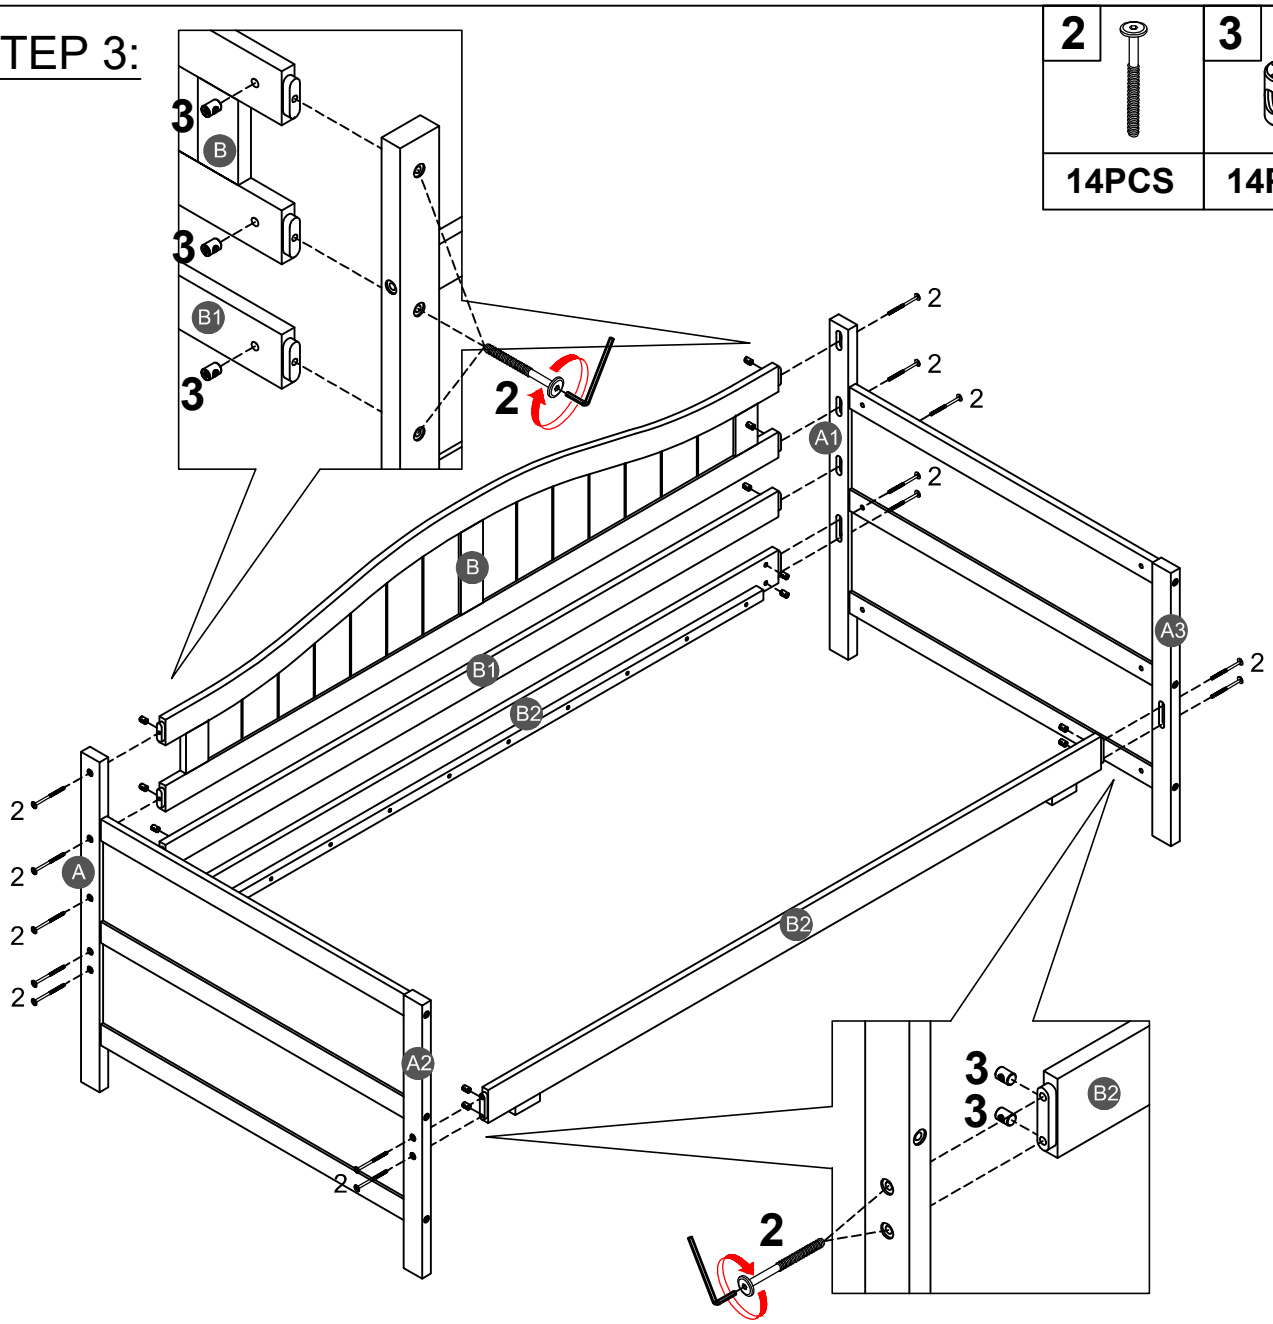



STEP 4:

4

20PCS

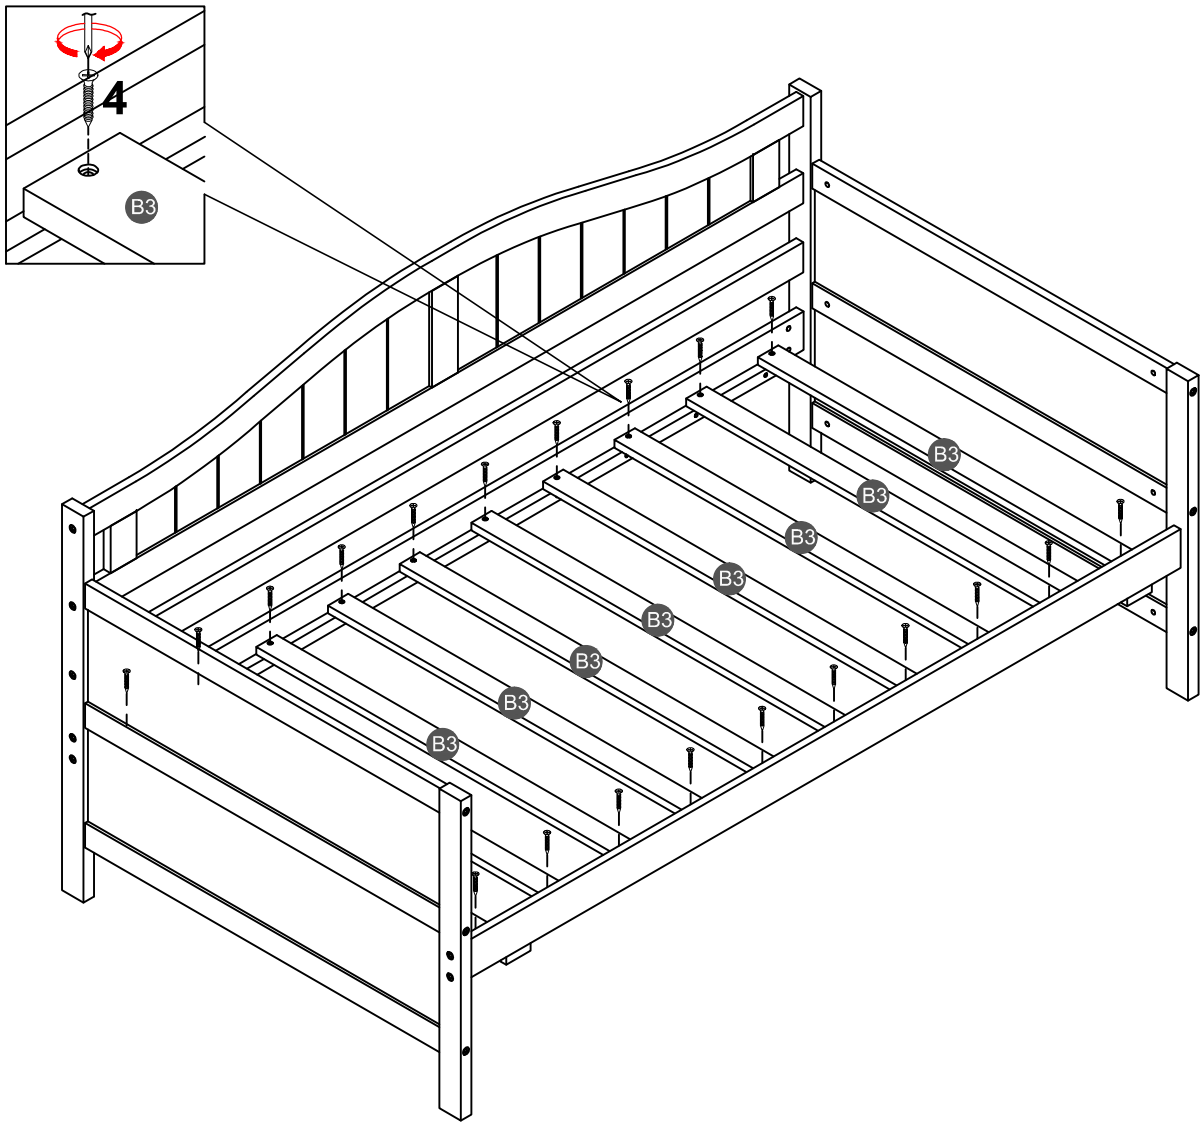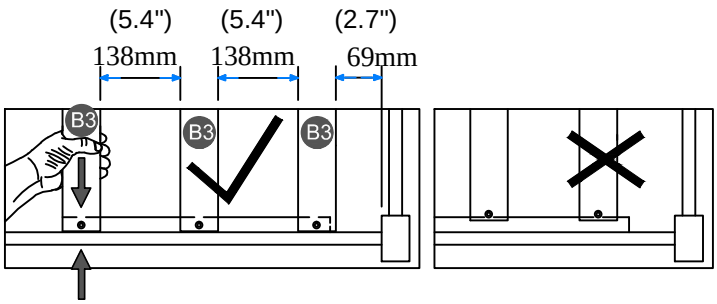For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.






NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.


STEP 5:


4	10
8PCS	4PCS

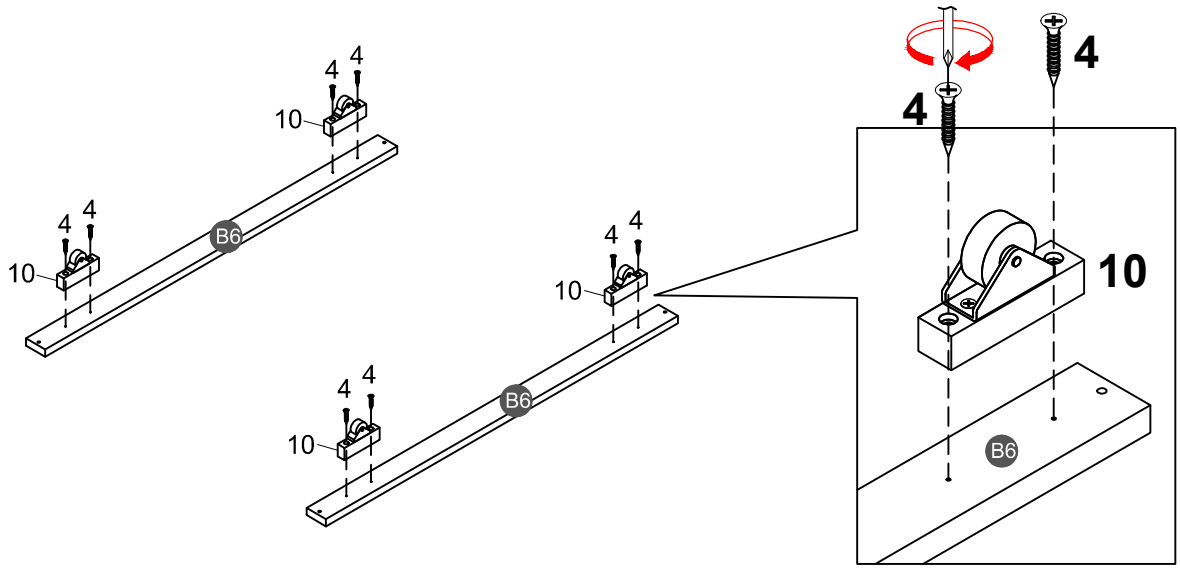


STEP 6:

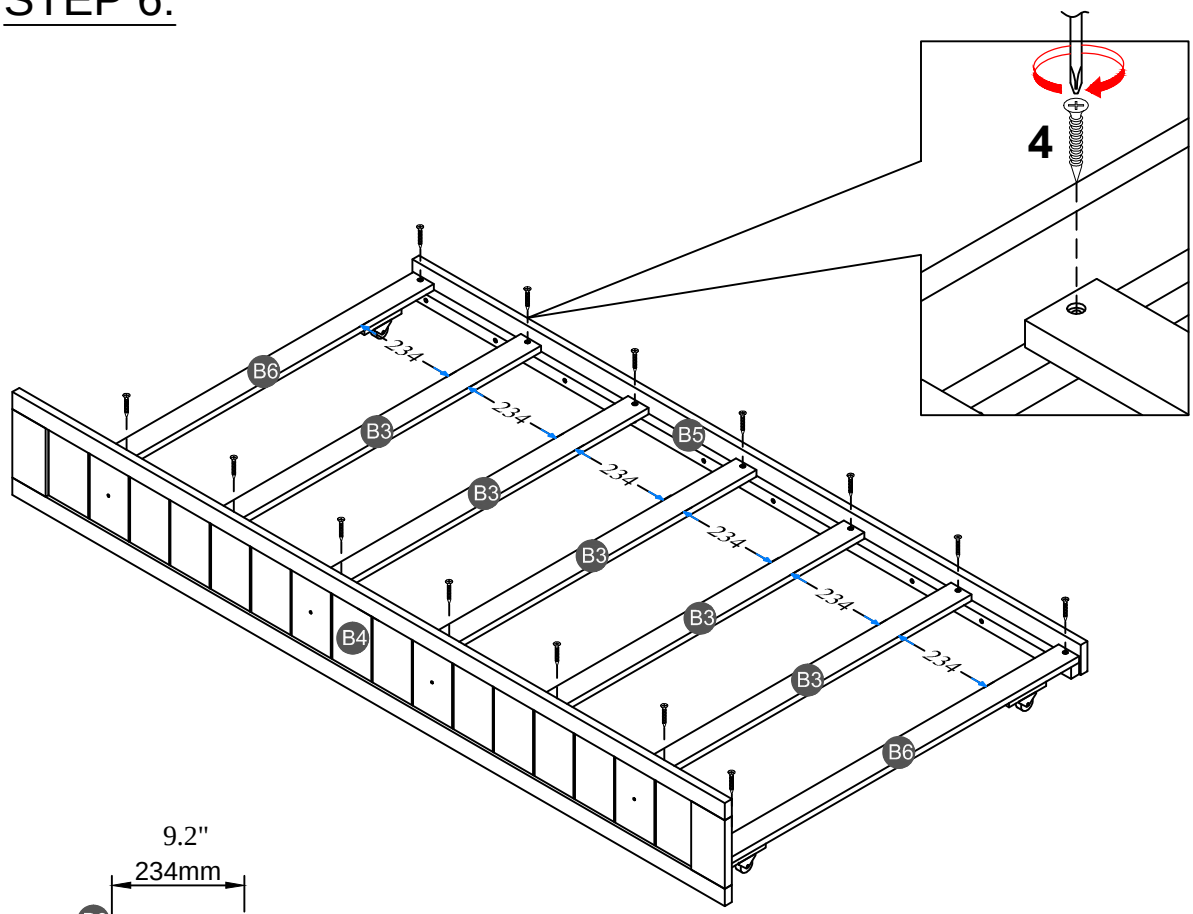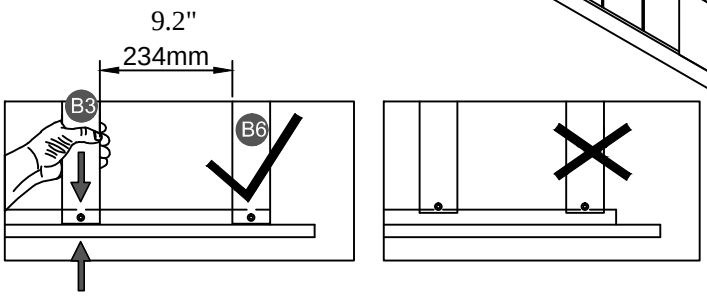4
14PCS






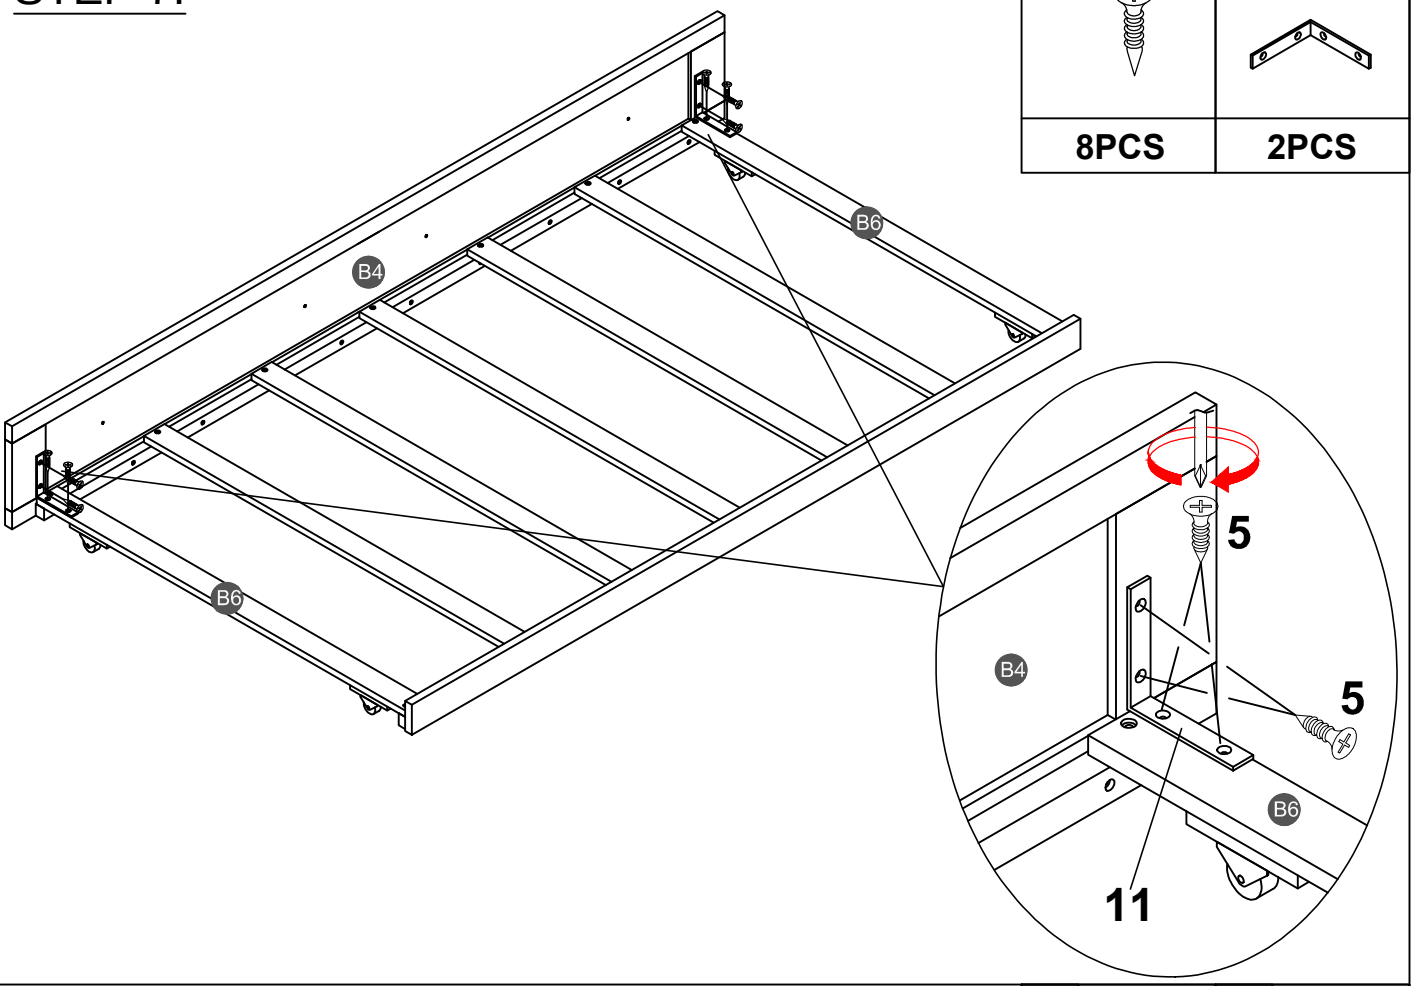STEP 7:



5	11
8PCS	2PCS

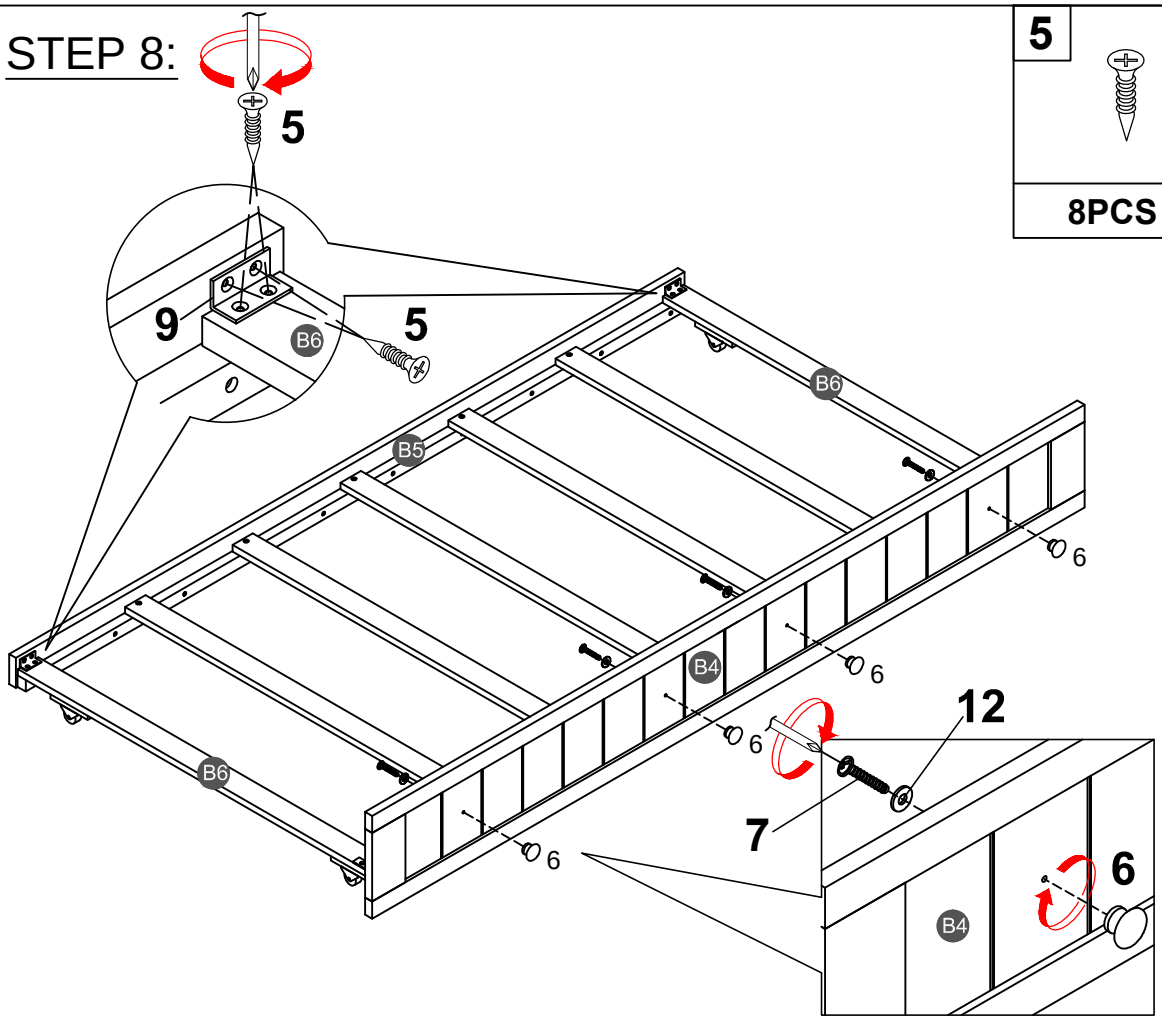STEP 8:




5	6
8PCS	4PCS

7
4PCS

9
2PCS

12
4PCS

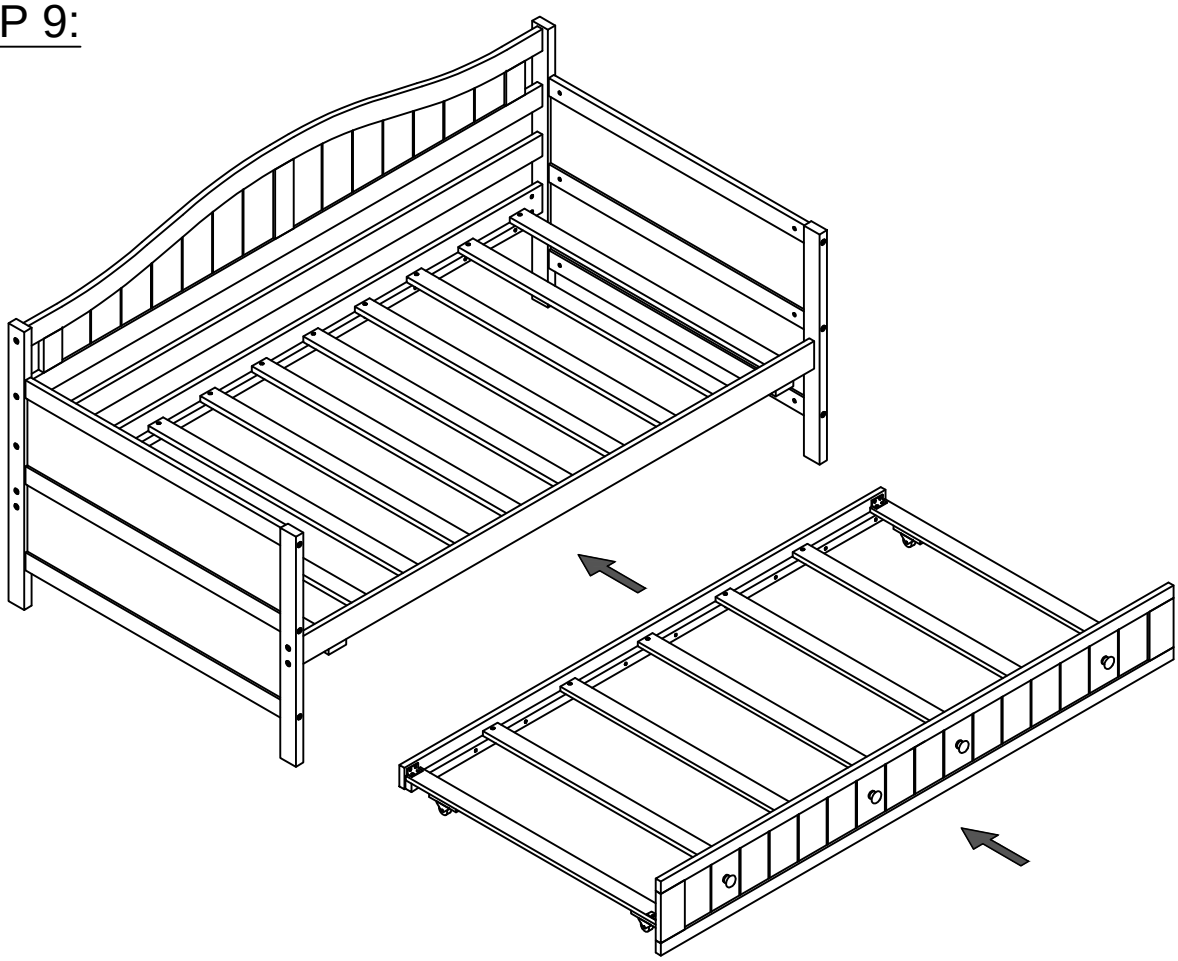STEP 9:



Push Trundle under the bottom of bed.

