

12 x 20FT

WQOT226TN-1/WQOT211MS-1

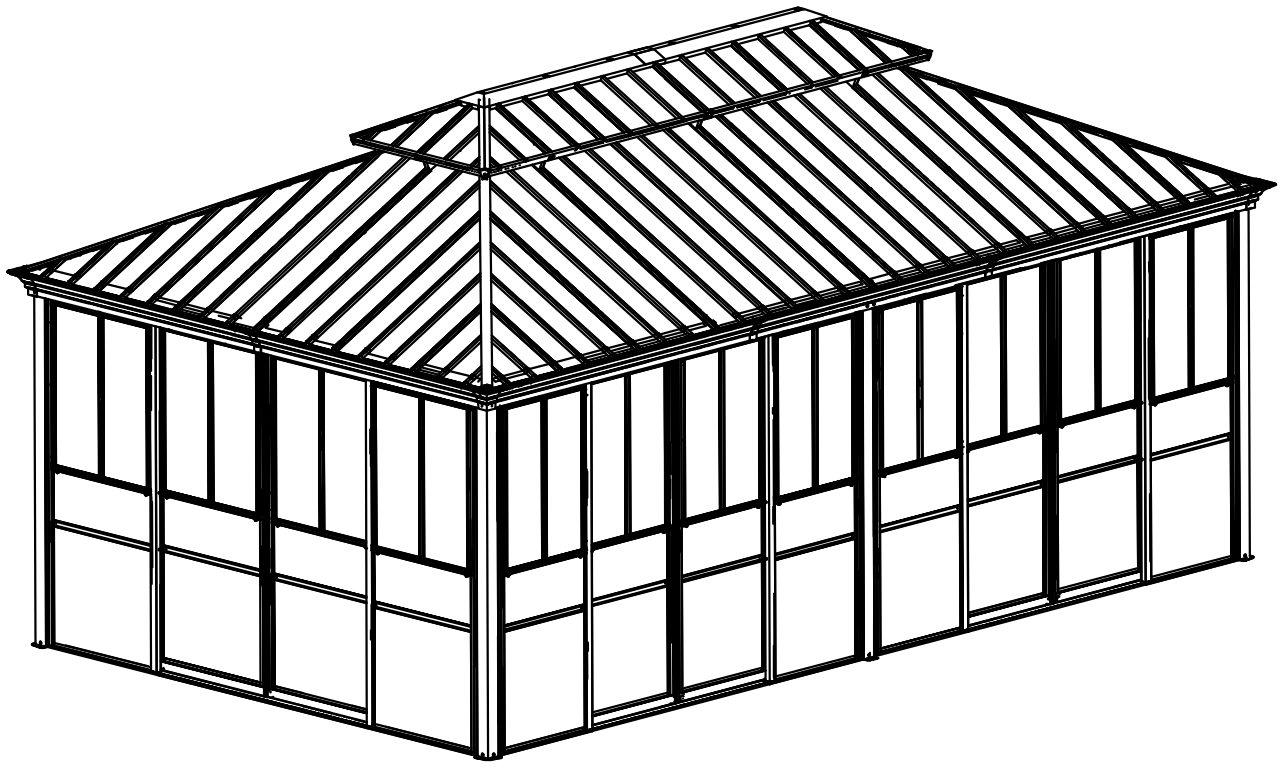

Note: The sunroom needs to be installed in cooperation with five people.


Assembly of this product requires the following tools, these tools are not included, please bring your own, if you have questions, please contact us.

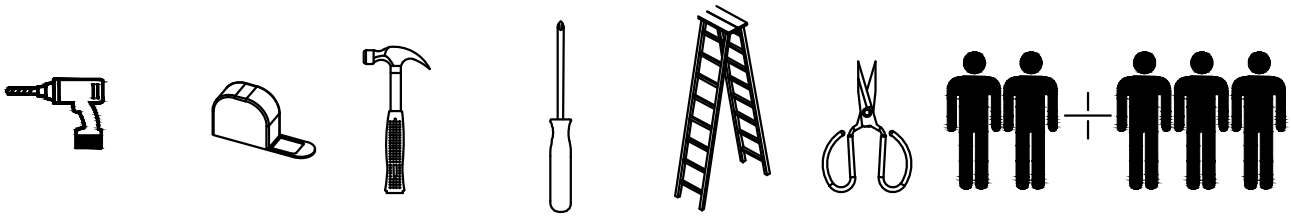



Pistol Drill Tape Measure Hammer Screwdriver Ladder scissor 5 people


ATTENTION:

1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us. We will check and offer you the best solution soon.
4. If you have any problems, please feel free to contact us. Our professional customer service and after-sales team are always ready to help you.
5. You can reach us via email at **customer01service@hotmail.com.**

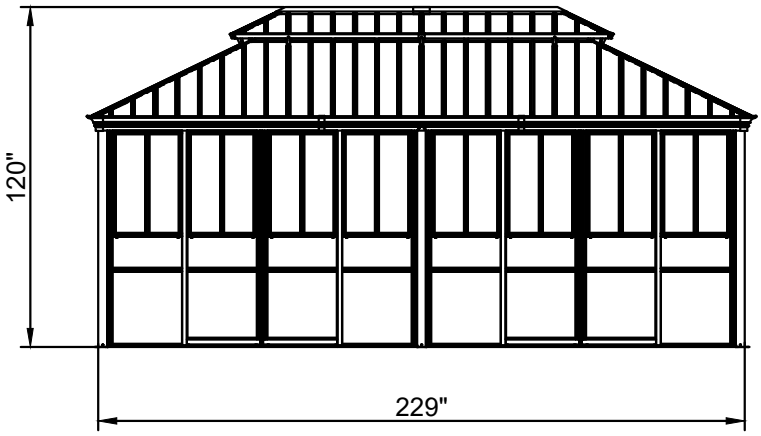
120"
229"

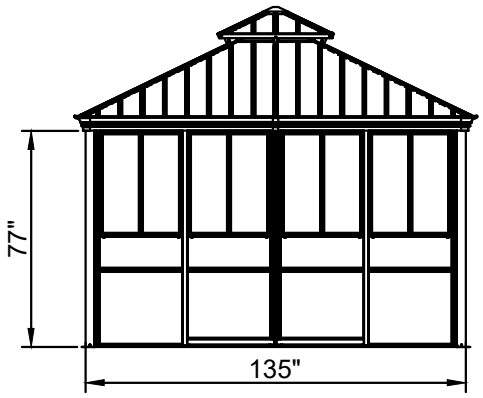
77"
135"

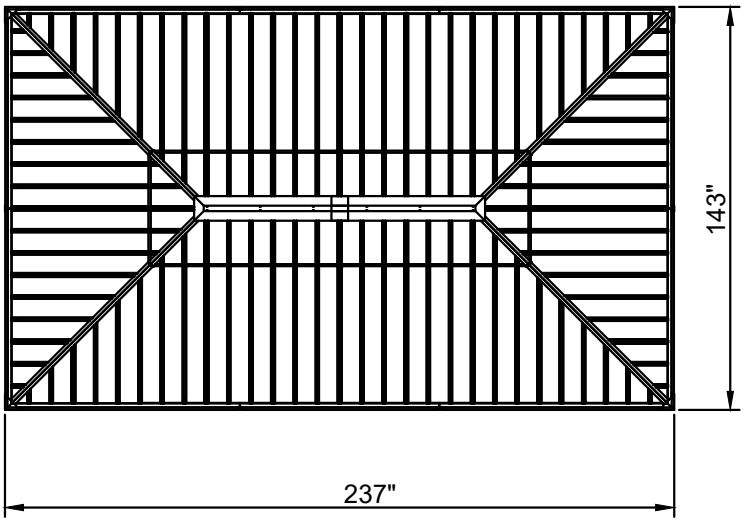
143"
237"

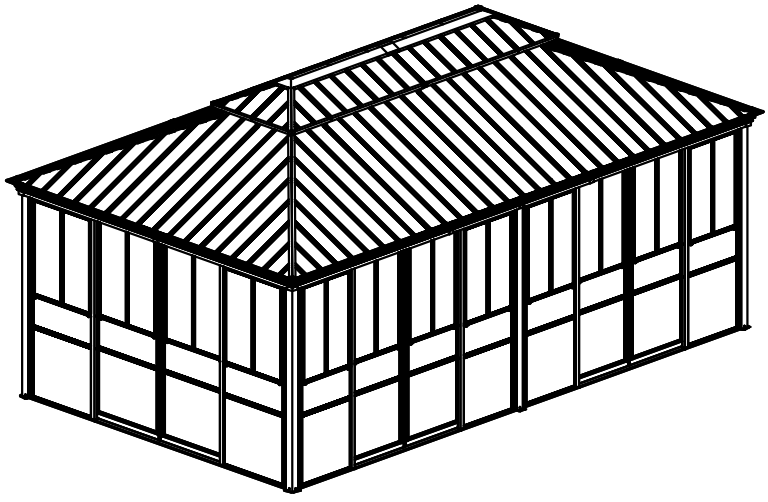

Box 1

Part #	Qty
AB1	2
AB2	2
E	4
D1	2
D2	2
D3	2
D4	2
D33	2
D34	2
M7N	4
M2D	1
MD1	96
MD2	192
MD3	48
MD4	24
MD5	24
3-1	24
23	112
K	4
U1	6
U2	6
U3	6
U4	6
G1	2
12x20 ABABBABAAFAFAGAG ACACACACAFAFAGAG CACACACAAFAGAGAG ADADDADAAFAGAGAG AEAEAEAEAFAGAGAG EAEAEAEAAFAGAGAG	1
24	1

3

Box 2

Part #	Qty
AB9	2
AB10	2
G5	2
G6	2
M1B	6
M2B	6
M2C	5
M1F	2
M4P	4
Y	112

Box 3

Part #	Qty
JA1	4
JA2	2
I5	2
I6	2
V1	2
V4a	2
V4b	2
M1A	6
M2A	6
M1F	4
M4J	2
M7J	2

Box 4

Part #	Qty
JE3	6
JE4	2
Z	64
M5G	6
P	6
M1D	6
M2D	1
M7J	2
M4K	4
M8K	4
M9G	20
M1G	24
4-1	24
5-1	1

Box 5

Part #	Qty
M1C	6
M2D	1
M2C	1
M5G	10
M4M	4
M7M	8
M4H	4
M7H	8
M8K	4
M8P	8
M4L	16
K1	6

AJ1	4
AJ2	2
W	4
W1	8
JZ1	6
JZ2	4
JZ3	2
MQ2	48
N	8
N1	2
Z1	8
Z2	8
1.2.3.4.5.6.7.8.9 10.11.12.13.14.15 16.17.18.19.20.21 22.25.26	1

Box 6

Part #	Qty
M5B	6
M6B	6
AB11	2
I1	2
M10	2
L10	2
L8b	1
5-1	1
M2D	3
M4N	2
M1E	8

Box 7

Part #	Qty
F1	8
F3	4
M1E	32
F5	3
MS1	8
MS16	32
M9G	12
E5	4
M8L	32

Box 8


Part #	Qty
1R-1	48
1R-2	16
1R-5	32
MS1	8
MS2	8
MS3	4
MS4	4
MS17	16
MS18	8
MS19	8
M1S	8
M5S	16
M1E	8

Box 9


Part #	Qty
R1	2
R2	2
R3	2
R4	2
R5	2
R6	2
R8	2
R9	2
S1	2
S2	2
S3	4

Box 10


Part #	Qty
R1	2
R2	2
R3	2
R4	2
R5	2
R6	2
R8	2
R9	2
S1	2
S2	2
S3	4

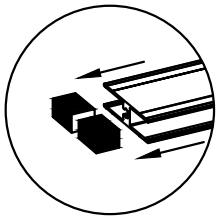

Take out the plastic (packing material) blocks at both ends of the profiles numbered M1E, M1G, M5G, M9G, M4H,M7H,M4L and M8L.



JA1 4x



JA2 2x




AB1 2x




AB2 2x



AB9 2x




AB10 2x




AB11 2x



E 4x

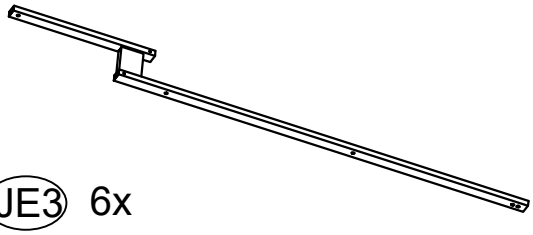

JE3 6x

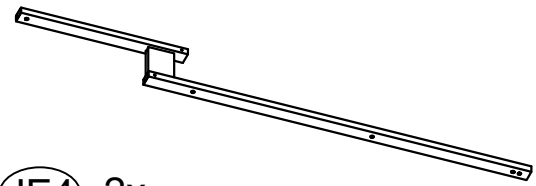


JE4 2x




D1 2x




D2 2x

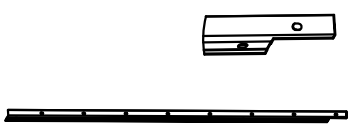


D3 2x



D4 2x

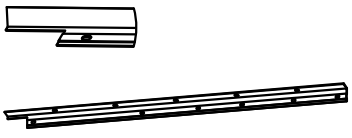

D33 2x

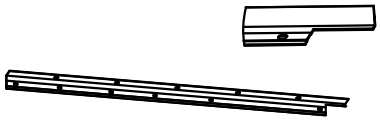


D34 2x




E5 4x




F1 8x

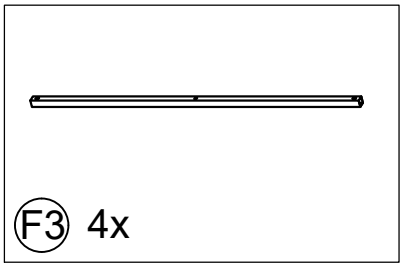


F3 4x

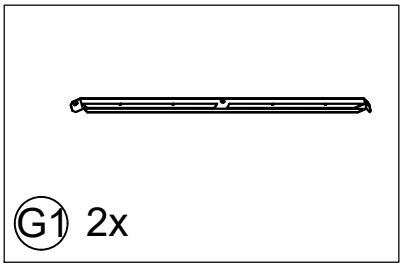


G1 2x

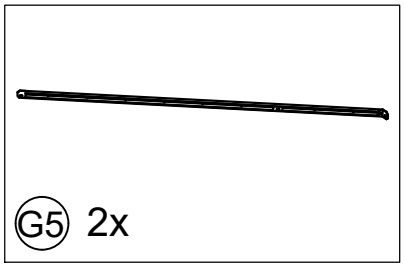


G5 2x

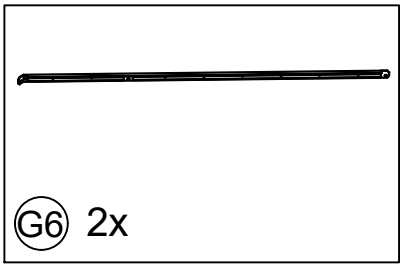


G6 2x

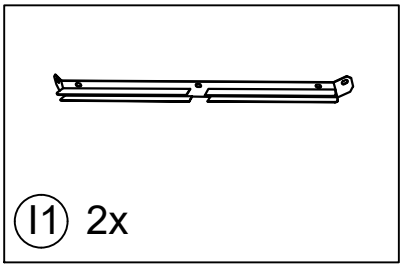


I1 2x

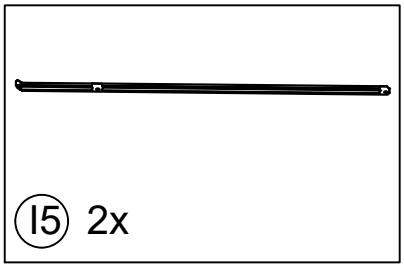


I5 2x

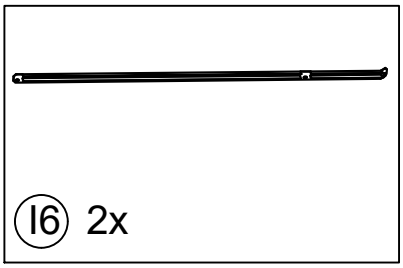


I6 2x

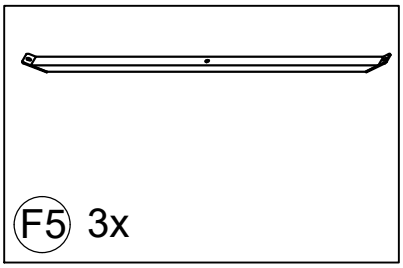


F5 3x

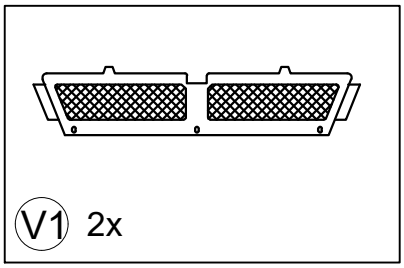


V1 2x

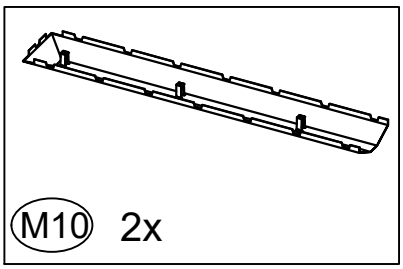


M10 2x

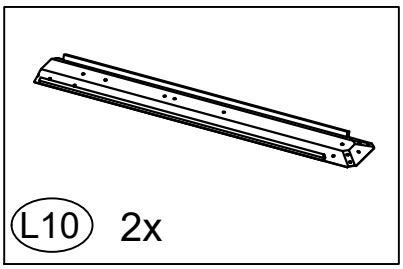


L10 2x

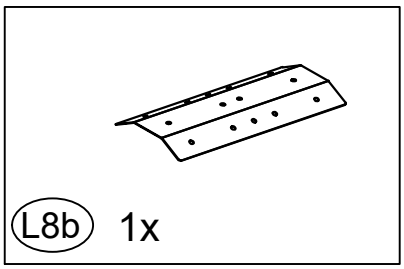


L8b 1x

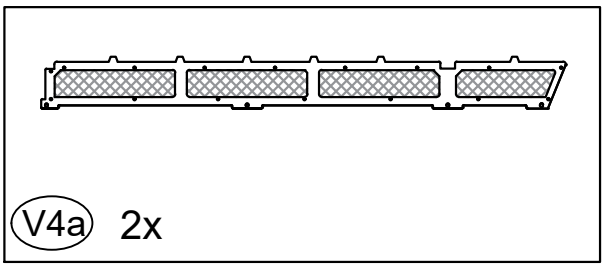


V4a 2x

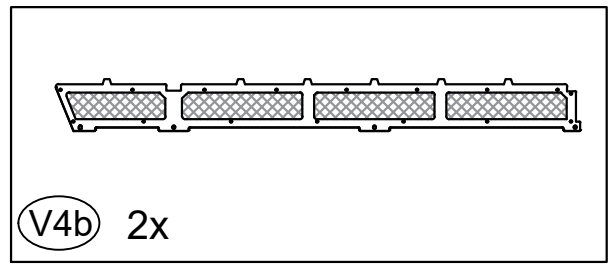


V4b 2x

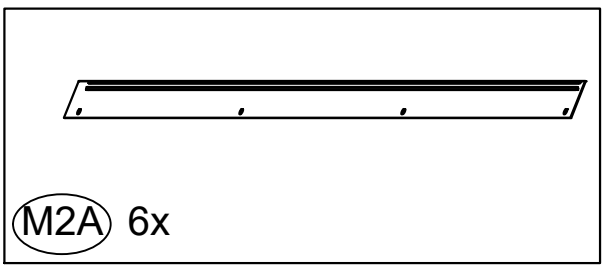


M2A 6x

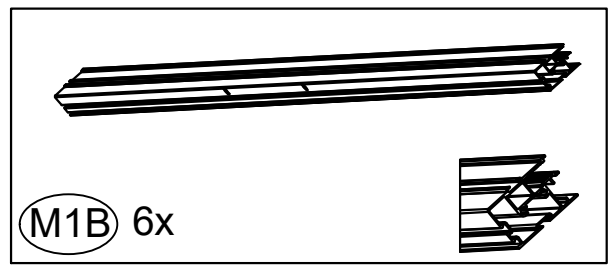


M1B 6x

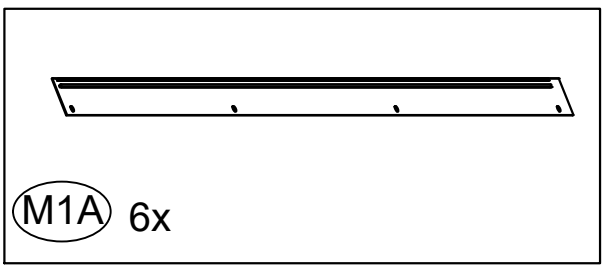


M1A 6x

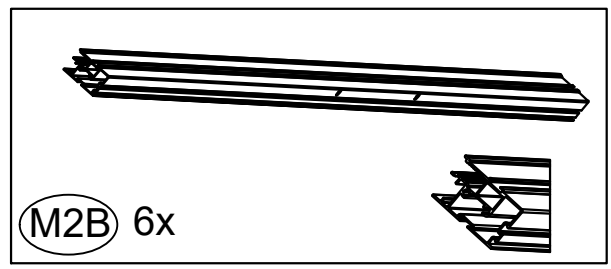


M2B 6x

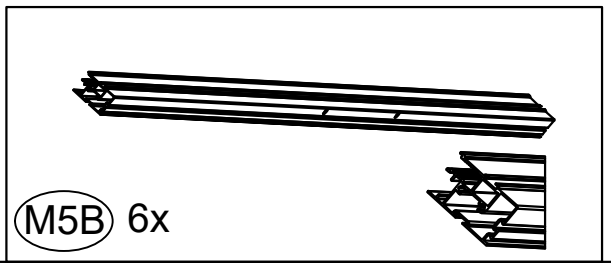


M5B 6x

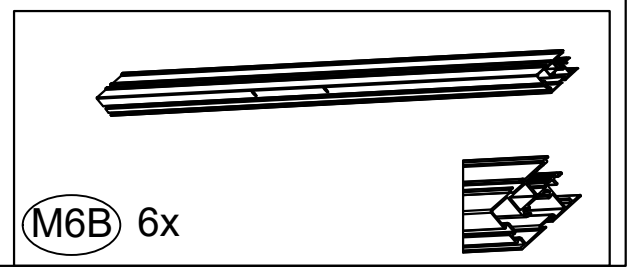


M6B 6x

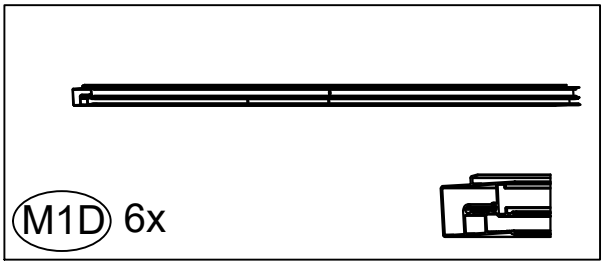


M1D 6x

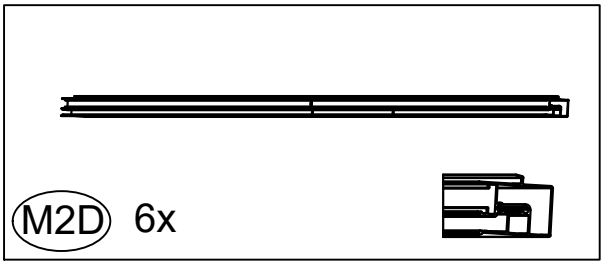


M2D 6x

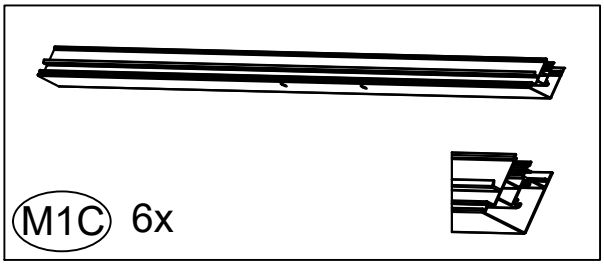


M1C 6x

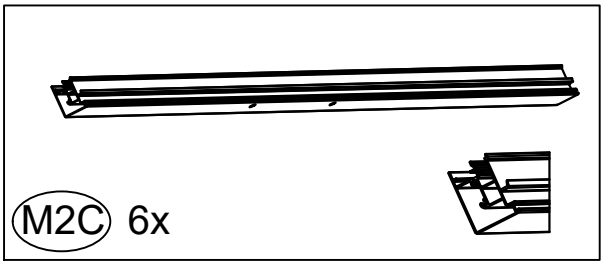


M2C 6x

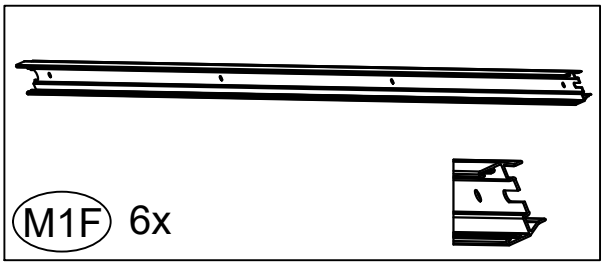


M1F 6x

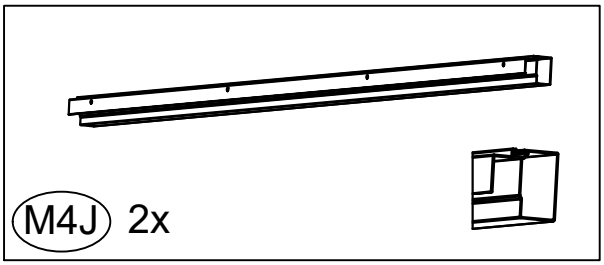


M4J 2x

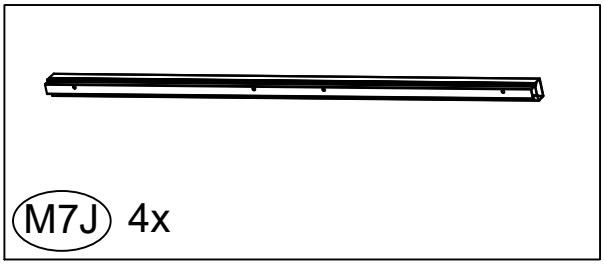


M7J 4x

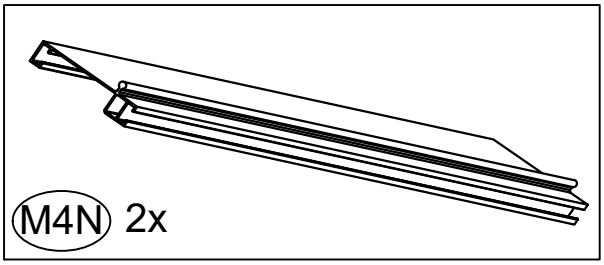


M4N 2x

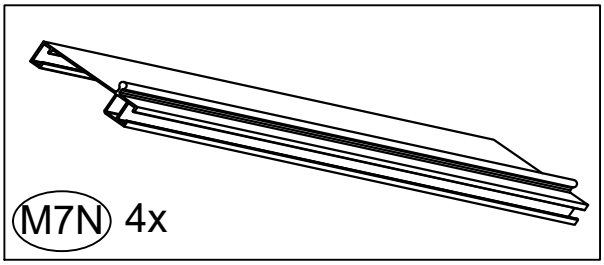


M7N 4x

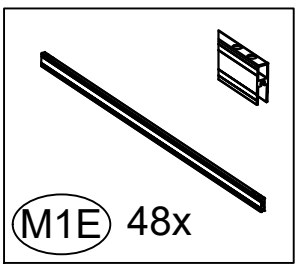


M1E 48x

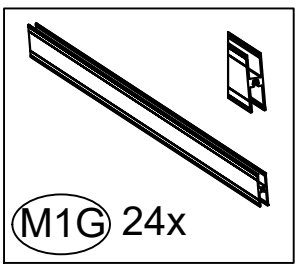


M1G 24x

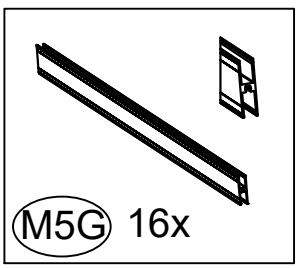


M5G 16x

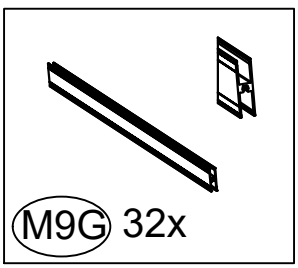


M9G 32x

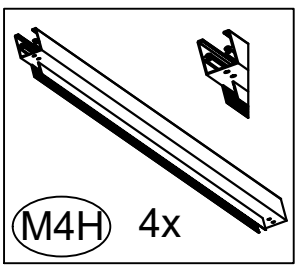


M4H 4x

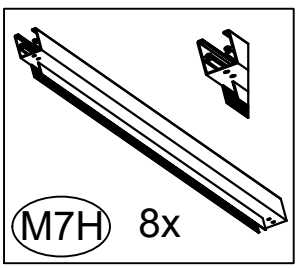


M7H 8x

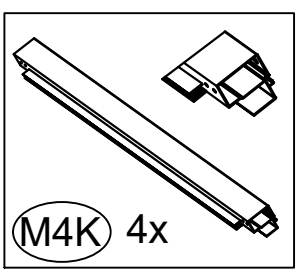


M4K 4x

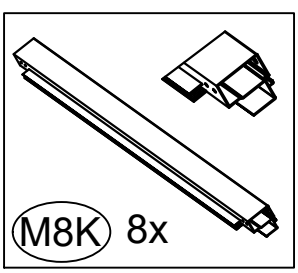


M8K 8x

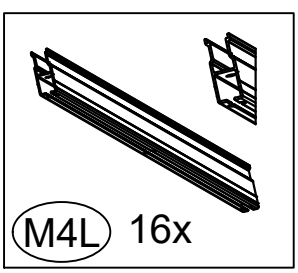


M4L 16x

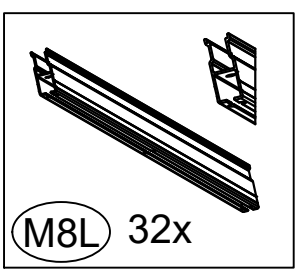


M8L 32x

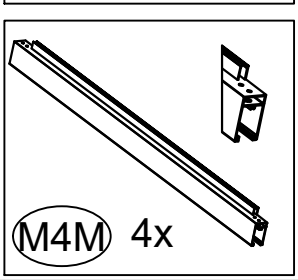


M4M 4x

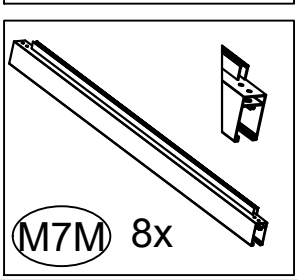


M7M 8x

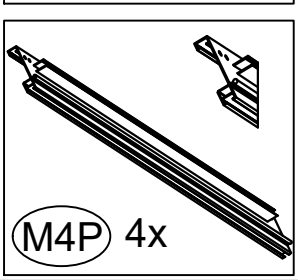

M4P 4x

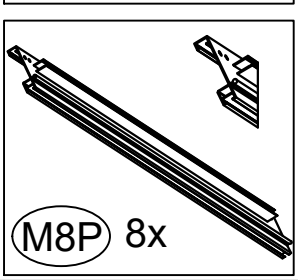


M8P 8x

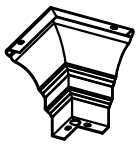


K 4x



K1 6x

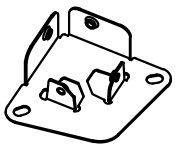


AJ1 4x

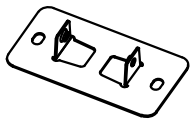


AJ2 2x




W 4x




W1 8x




P 6x




JZ1 6x




JZ2 4x

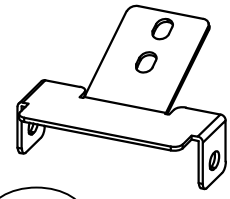


JZ3 2x




Z 64x

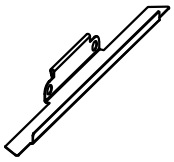

Z1 8x

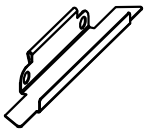

Z2 8x

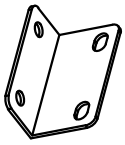

MQ2 48x




N 8x




N1 2x




Y 112x



MD1 96x




MD3 48x



MD4 24x




MD5 24x



6.2*11*15


3-1 24x

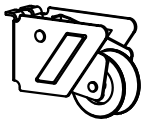


4-1 24x




5-1 2x

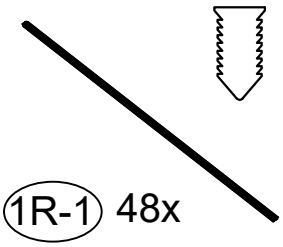


1R-1 48x

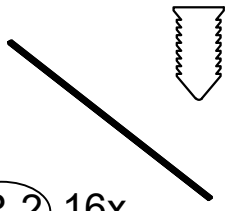


1R-2 16x

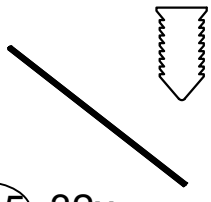


1R-5 32x




R1 4x




R2 4x




S1 4x




S2 4x



R3 4x



R4 4x




R5 4x




R6 4x




R8 4x




R9 4x

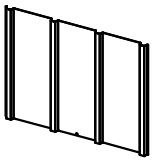


S3 8x




MS1 16x




MS2 8x

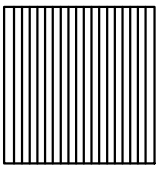


MS3 4x

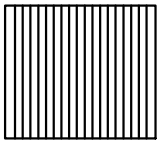


MS4 4x




MS16 32x




MS17 16x

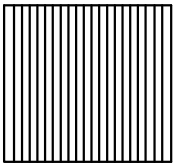


MS18 8x

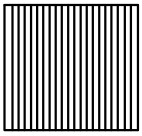


MS19 8x

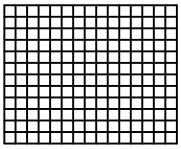

M1S 8x

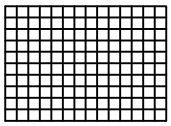


M5S 16x




U1 6x



U2 6x



U3 6x



U4 6x

12x20							
AB	AB	BA	BA	AF	AF	AG	AG
AC	AC	AC	AC	AF	AF	AG	AG
CA	CA	CA	CA	AF	AG	AG	AG
AD	AD	DA	DA	AF	AG	AG	AG
AE	AE	AE	AE	AF	AG	AG	AG
EA	EA	EA	EA	AF	AG	AG	AG



MD2 192x



M6x15

1 440x




M6x25

2 100x



ST 4.8x12

3 52x



4 **3x**



M6x50

5 12x



6 12x




M6x10

7 22x



8 12x




9 2x




M6

10 118x




M6

11 24x




M4x20

12 240x




M4x35

13 168x



M4x50

14 96x



15 36x




M5x6

16 144x




M5

17 72x



M5x12

18 72x



M6

19 112x




4mm

20 2x



2.5mm


21 2x

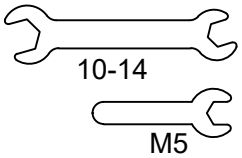

10-14


M5

22 1x




Rubber Gasket

23 112x

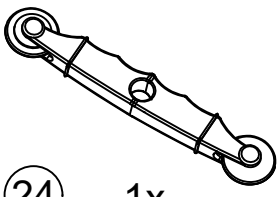

24 1x



M5x15

25 24x



M4x12


26 6x




JA1 4x



JA2 2x

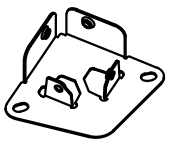

AJ1 4x

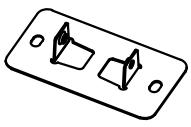


AJ2 2x





M6x15

1 12x


11

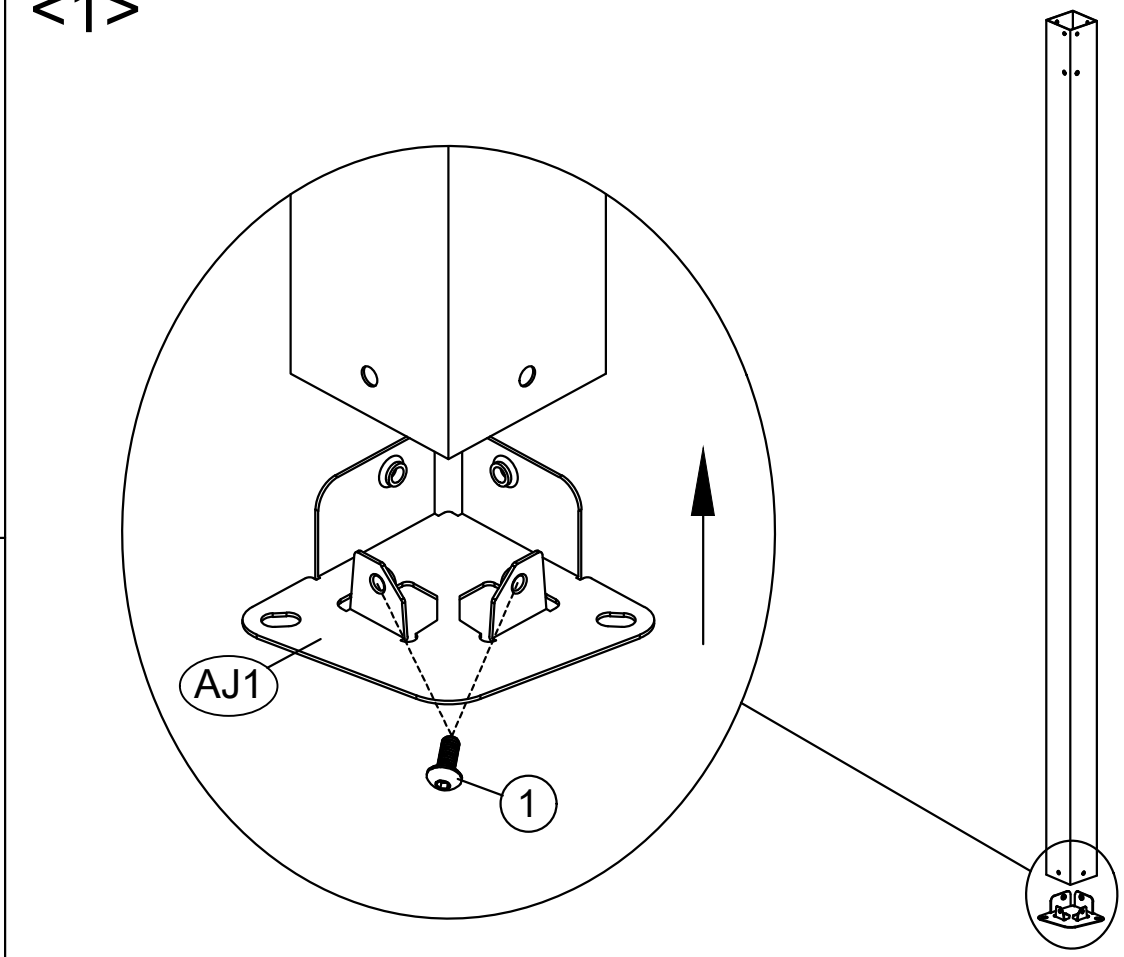

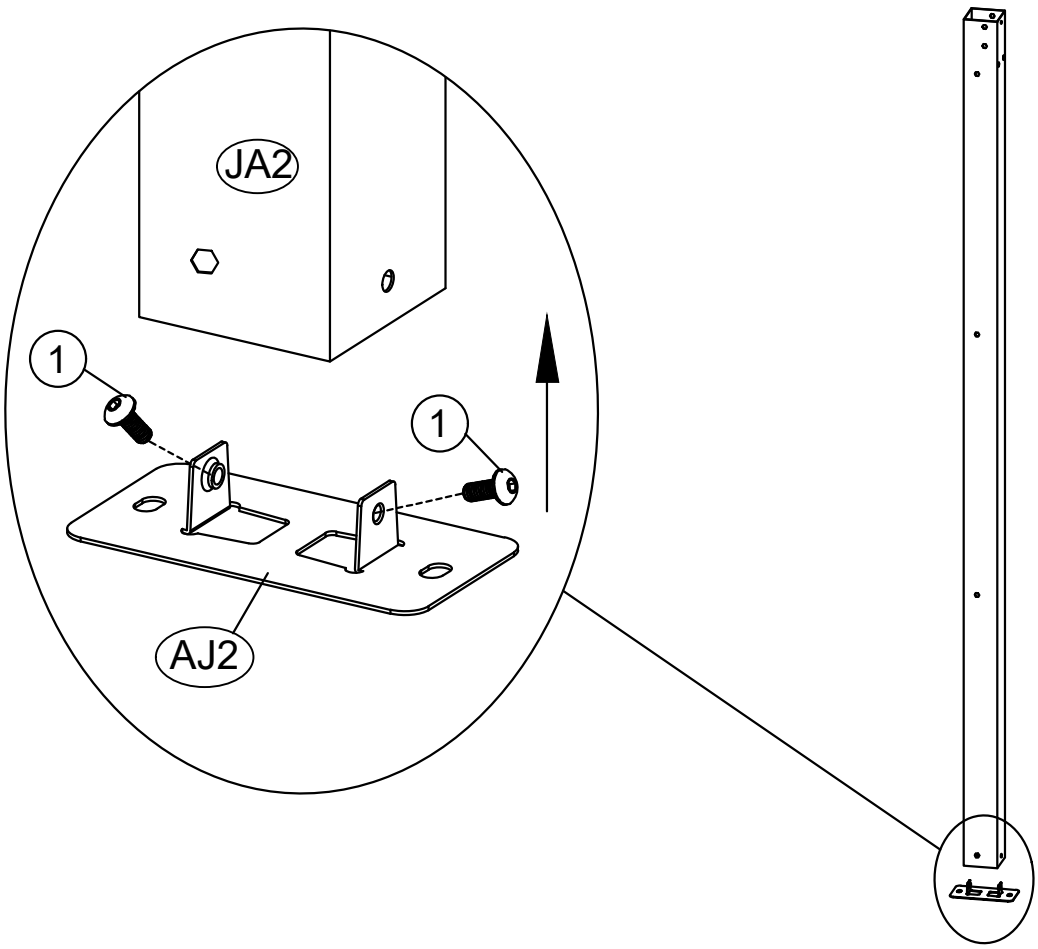


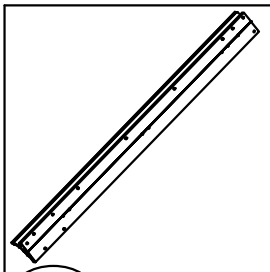


AB1 2x

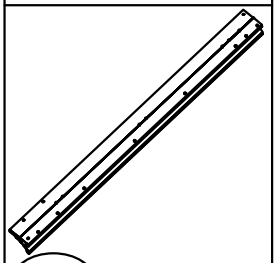


AB2 2x

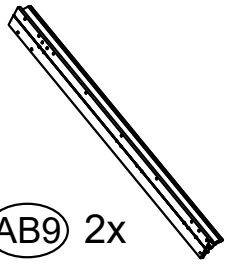


AB9 2x

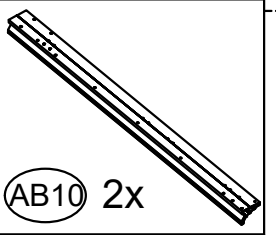

AB10 2x

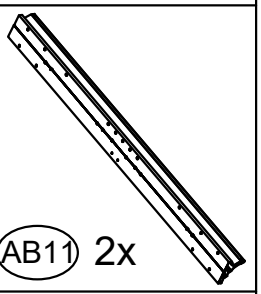

AB11 2x



P 6x





M6x15

1 92x



D1 2x

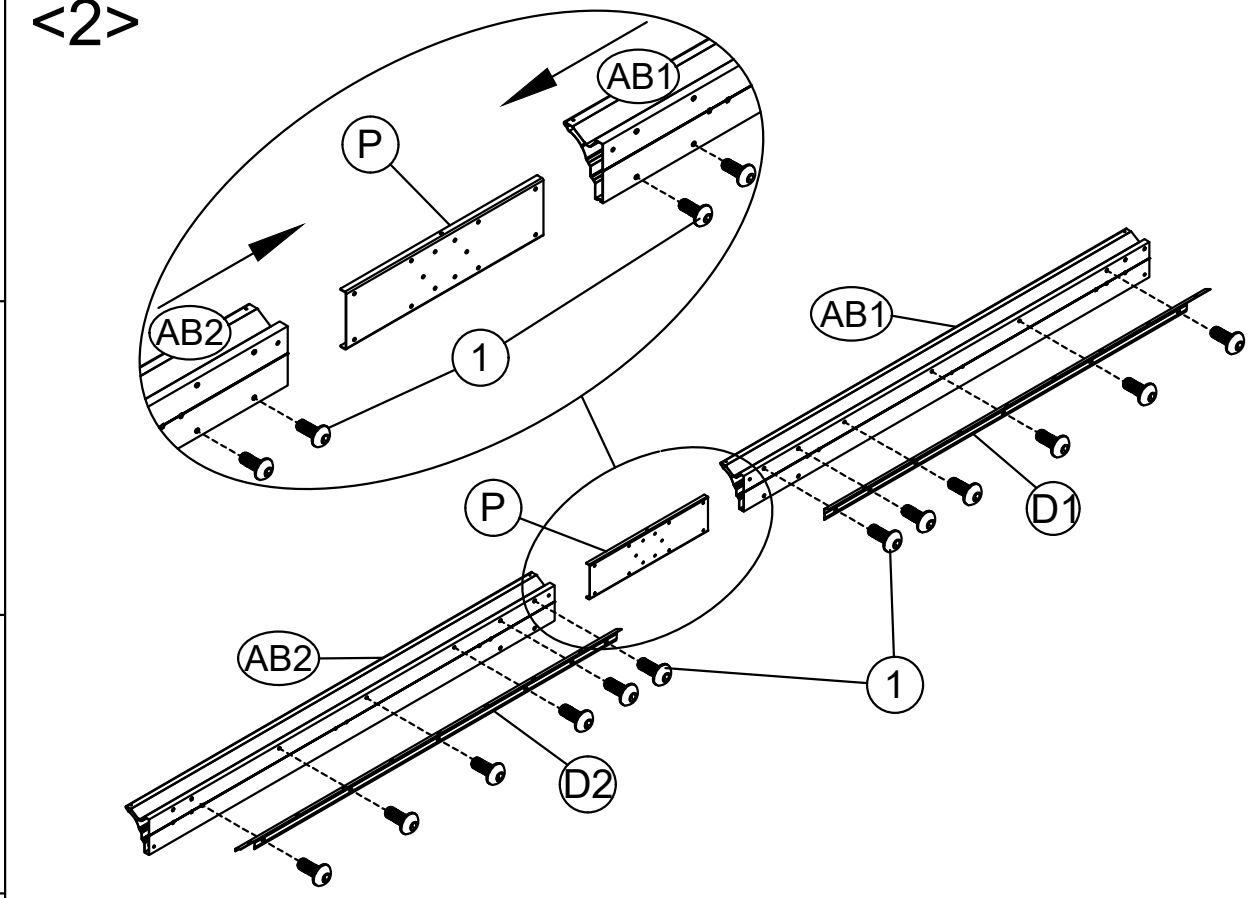

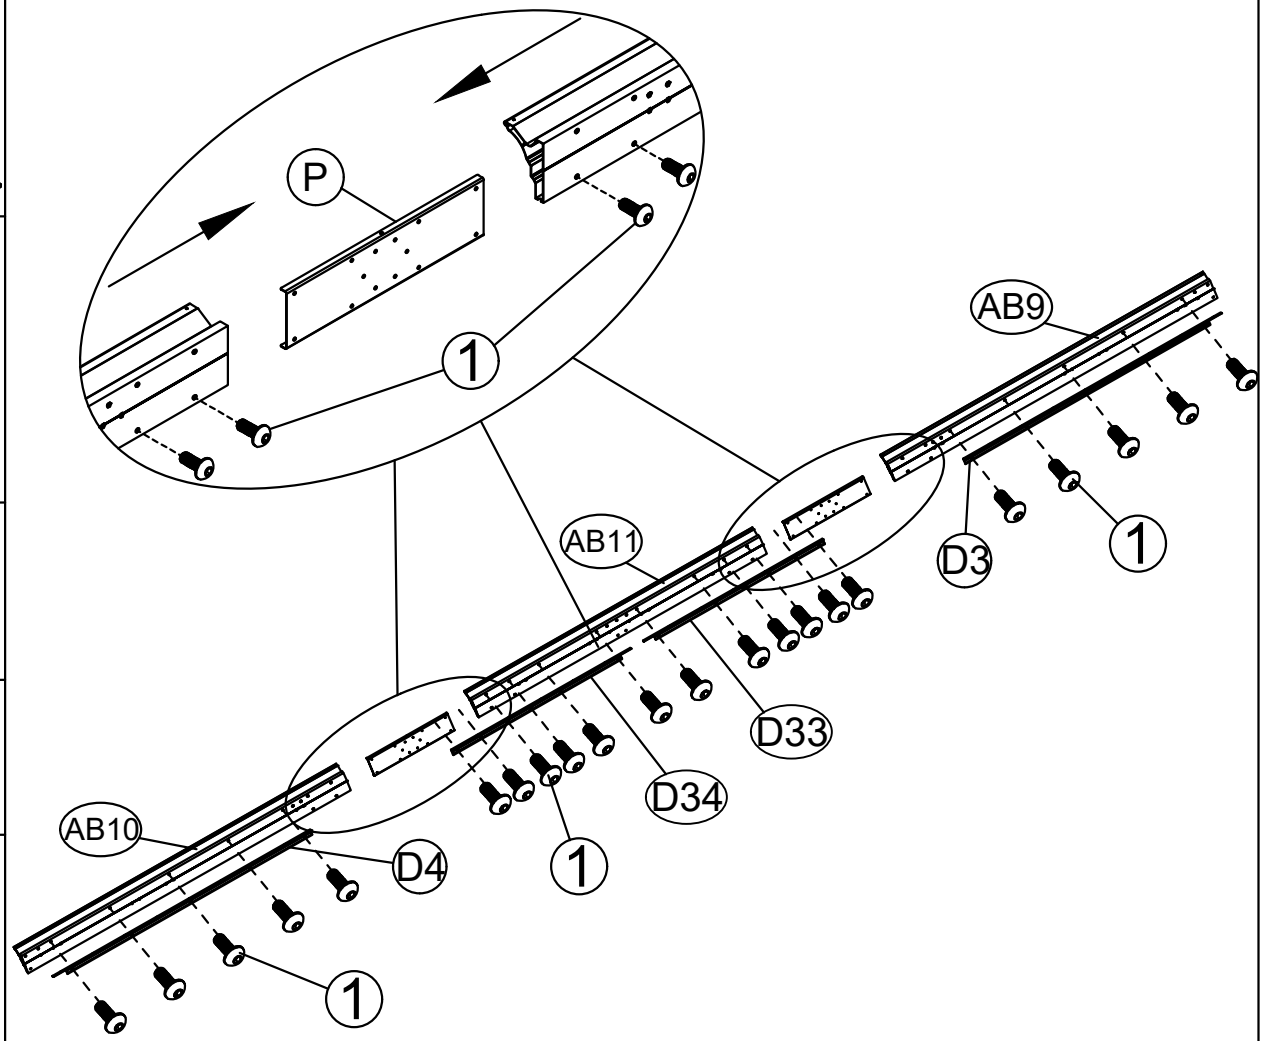

12

D2 2x

D3 2x


D4 2x



D33 2x




D34 2x

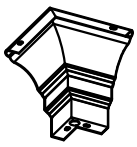

K 4x



K1 6x

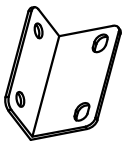

MQ2 12x



M6x15


1 52x




6 12x




3 28x

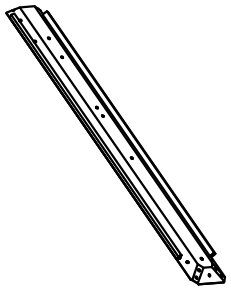

L10 2x



L8b 1x

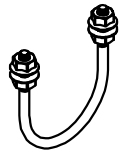

9 2x



M6x10


7 10x




M6

10 10x


14

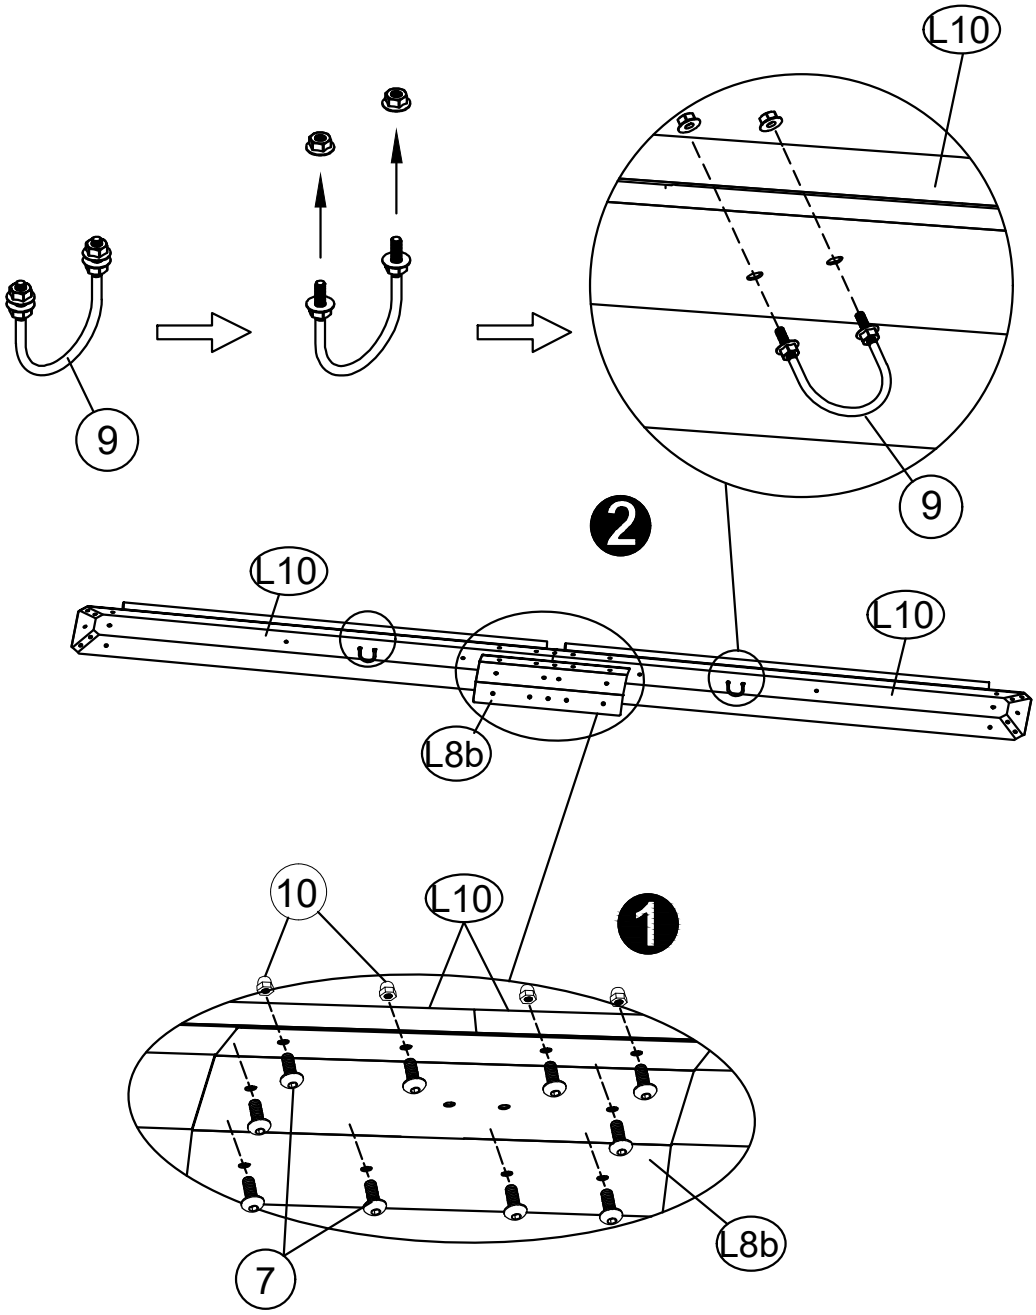


<5>

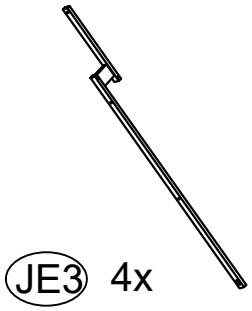

JE3 4x

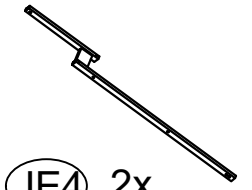


JE4 2x

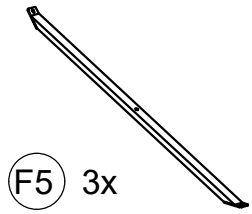


F5 3x



JZ1 4x

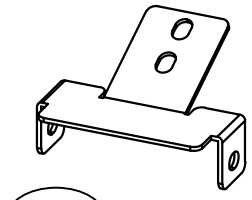

JZ3 2x

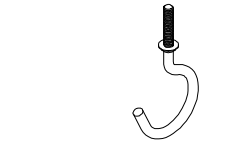


4 **3x**




M6x15

1 36x


15

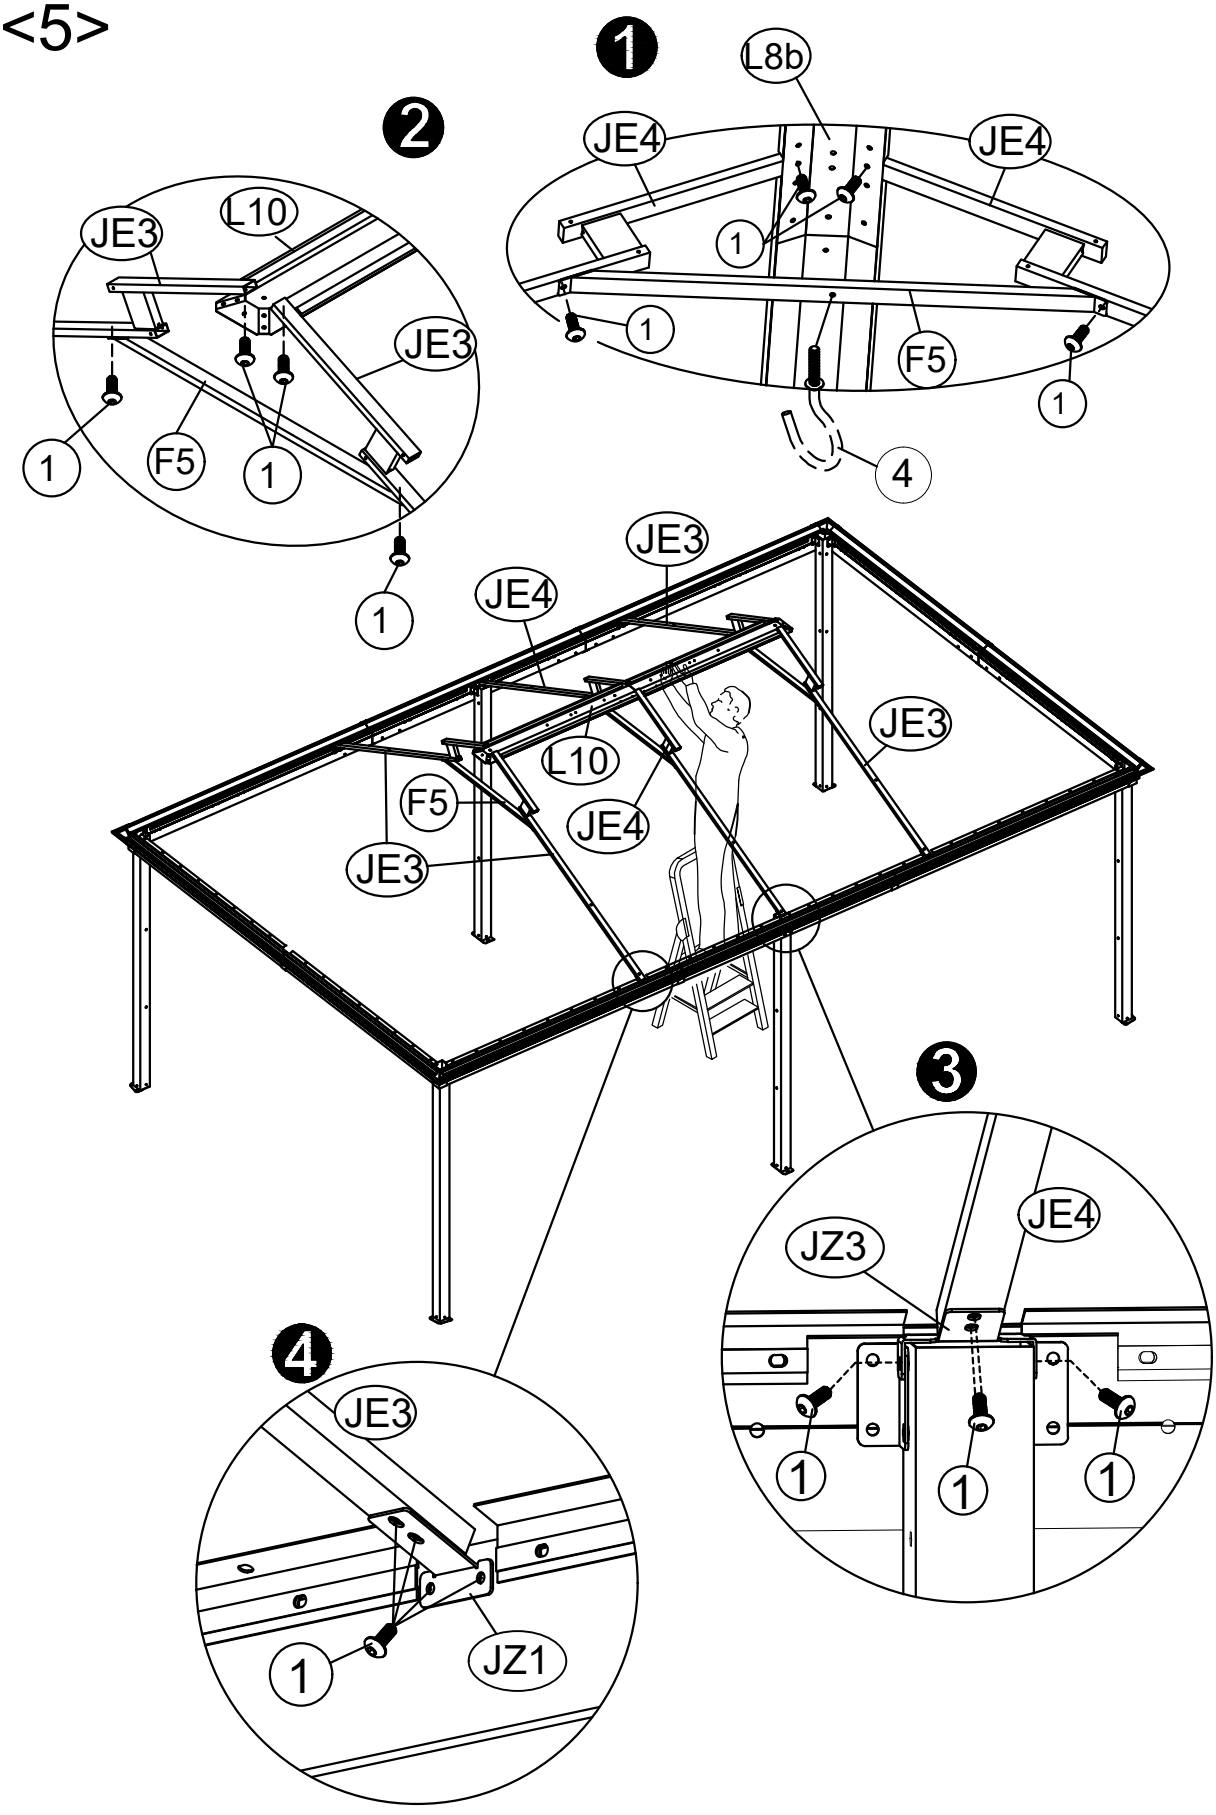

Note:
1. Let one person stand on the ladder to lift "L10" and hold and let others fasten the screws connecting both ends of "JE3"&"JE4".
2. Please do not let go of holding "L10" until all the "JE3"&"JE4" screws are installed.

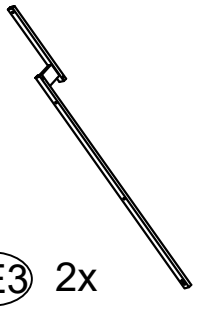


JE3 2x

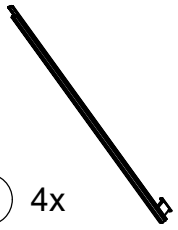


E 4x



E5 4x



JZ2 4x




JZ1 2x




M6x15


1 38x

16

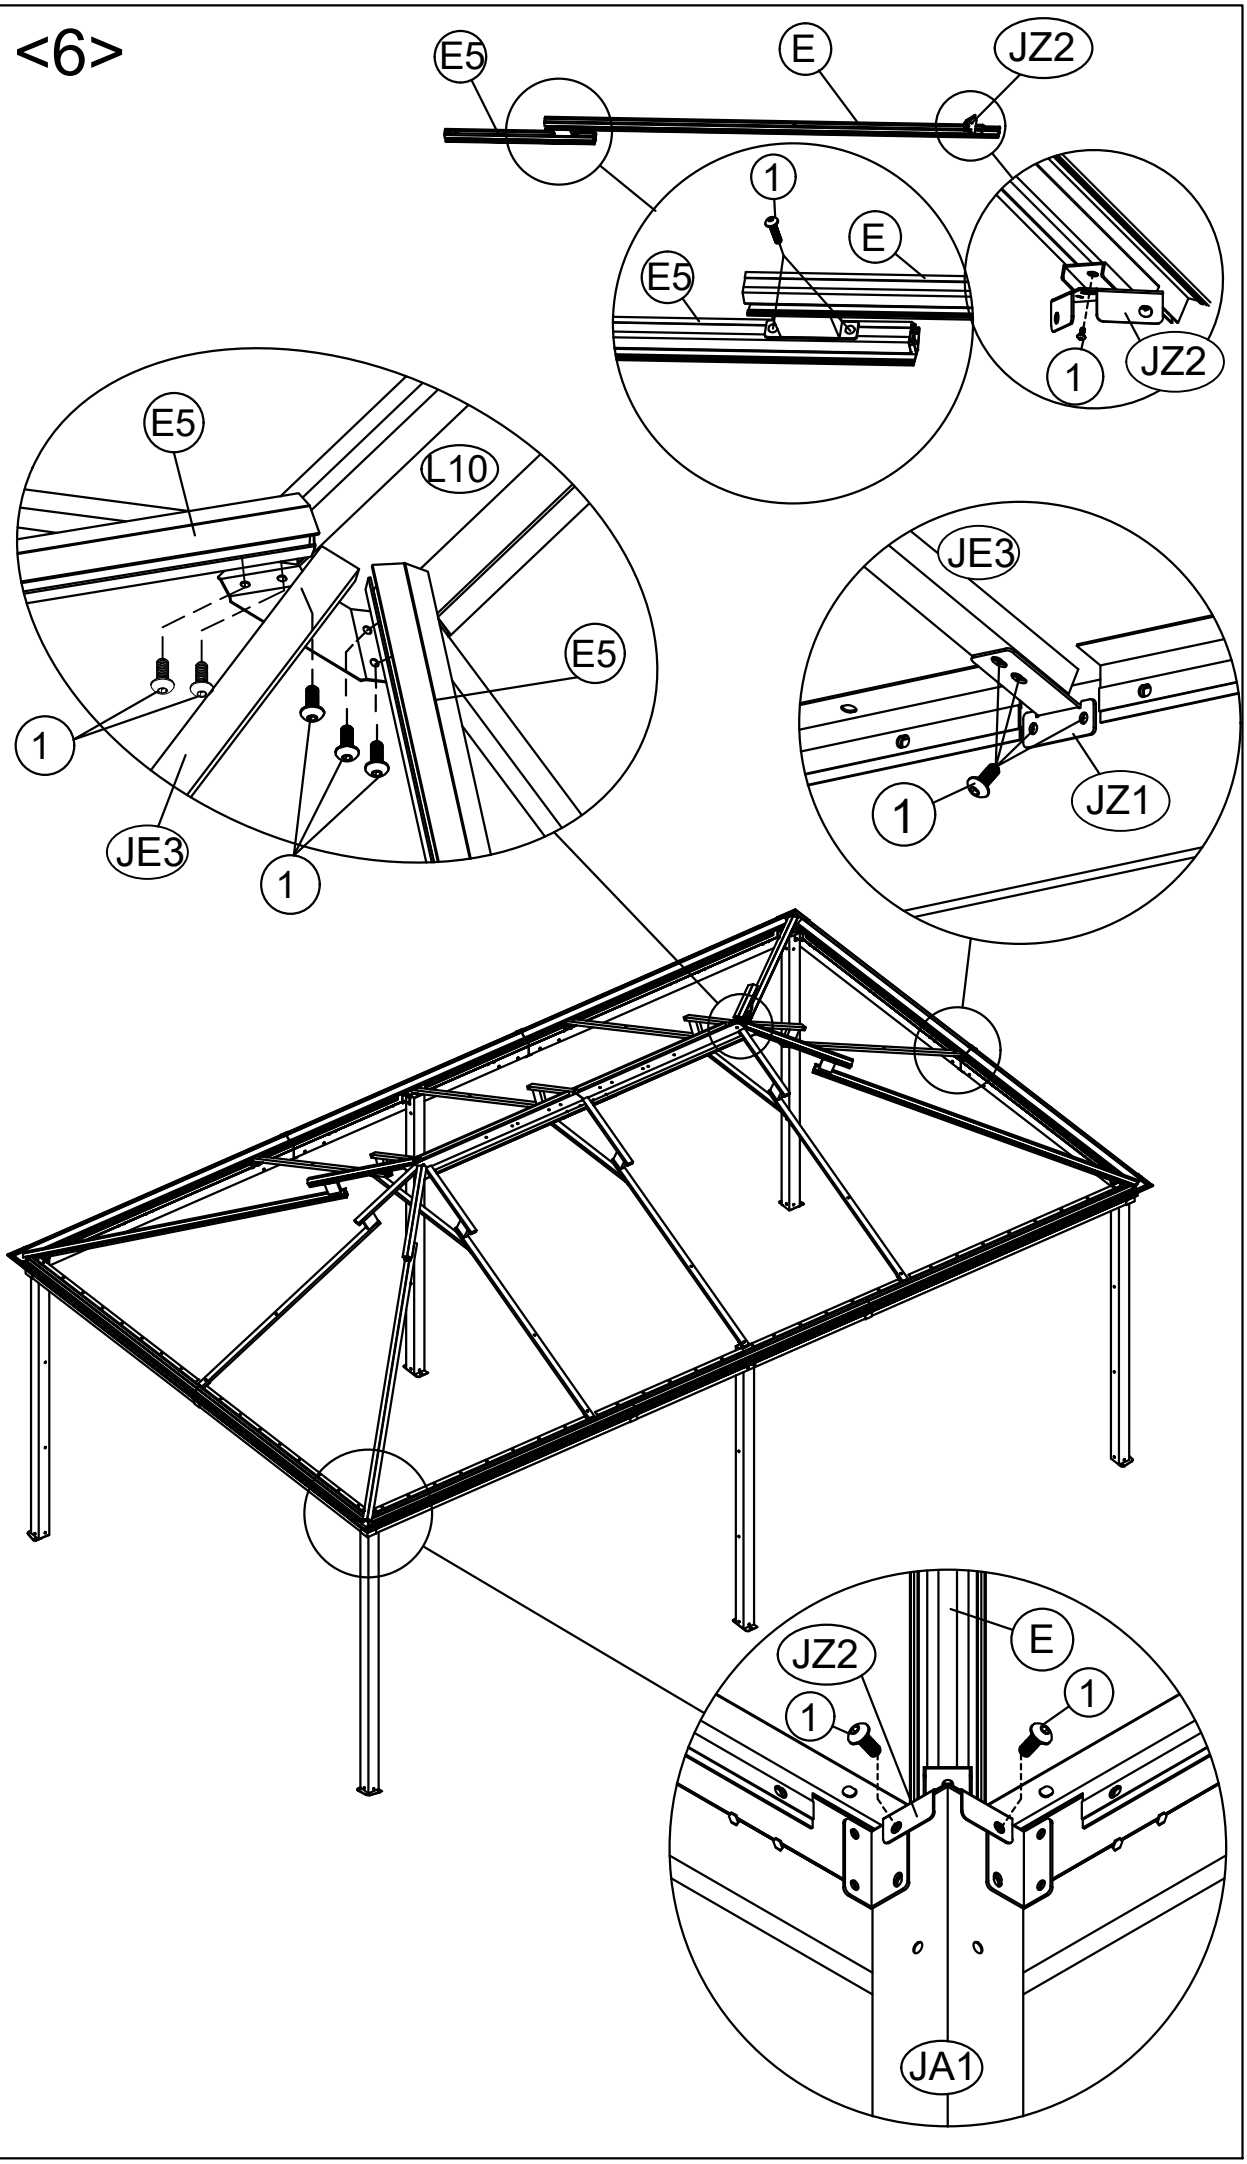


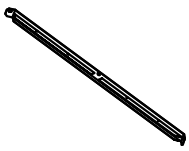

G1 2x

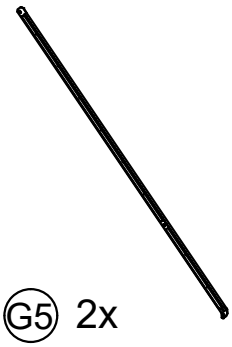

G5 2x

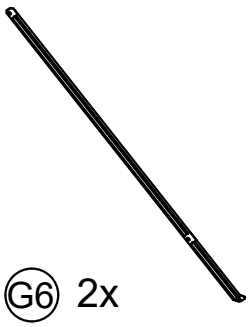

G6 2x



N1 2x




N 4x




M6x15


1 12x


17

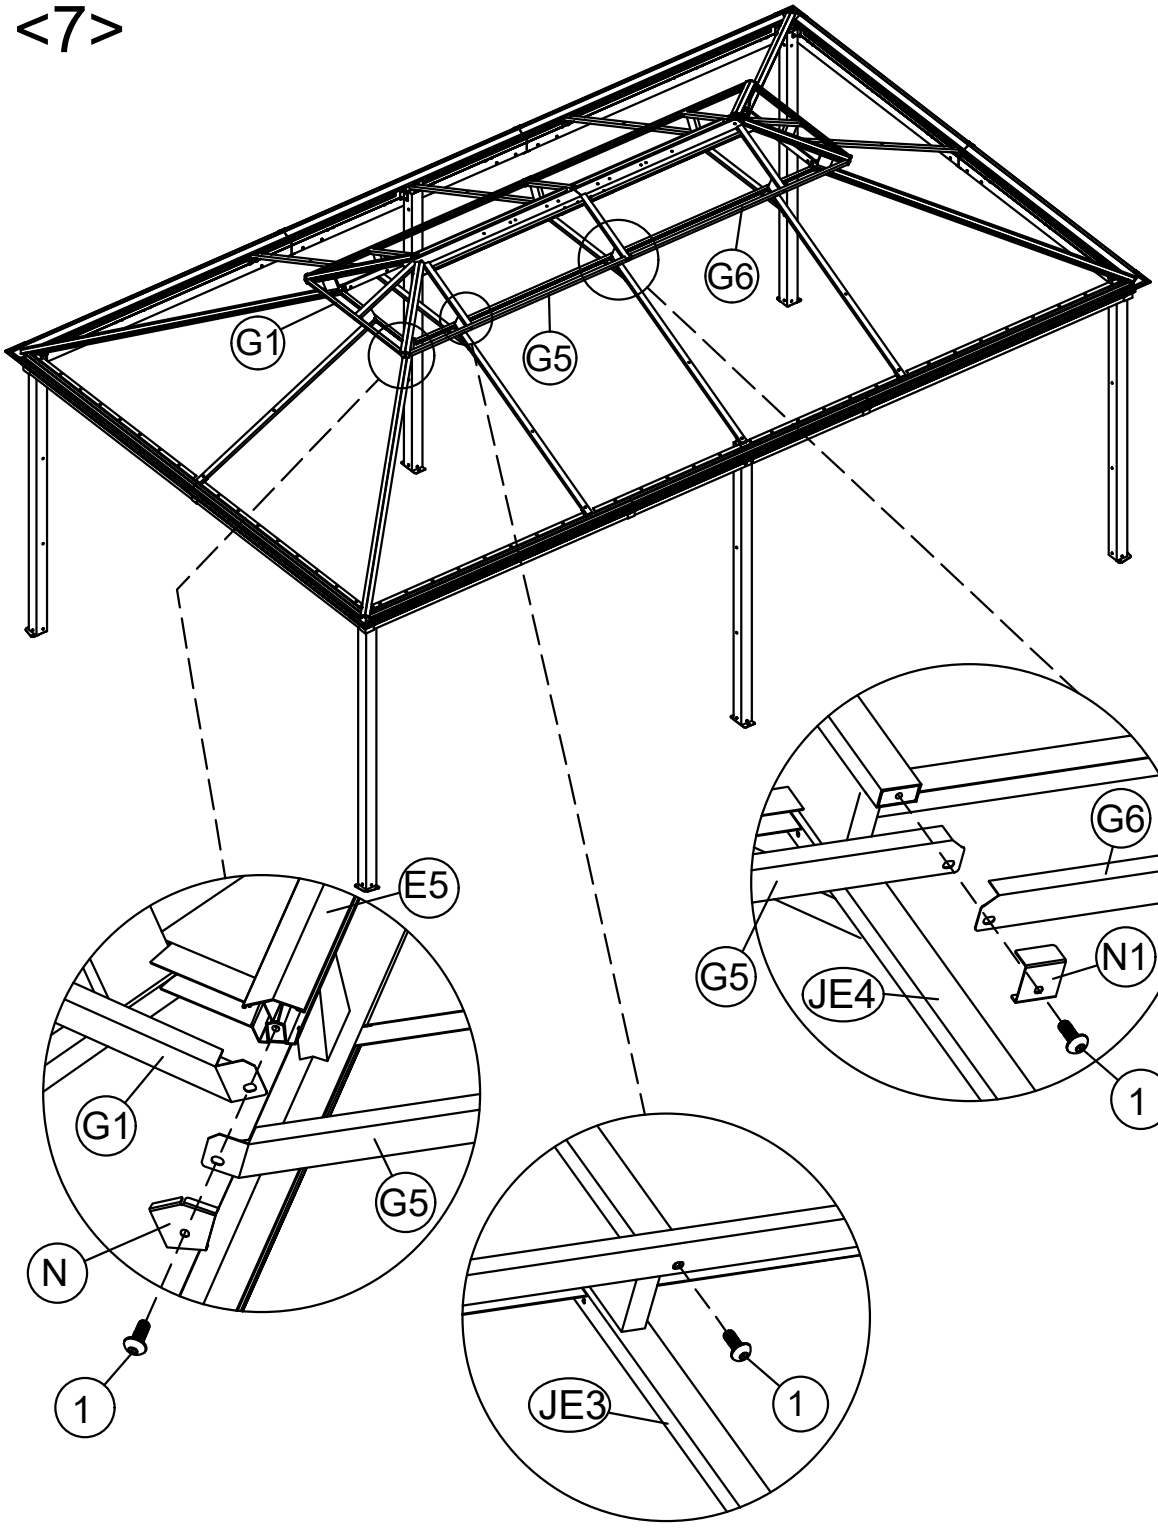


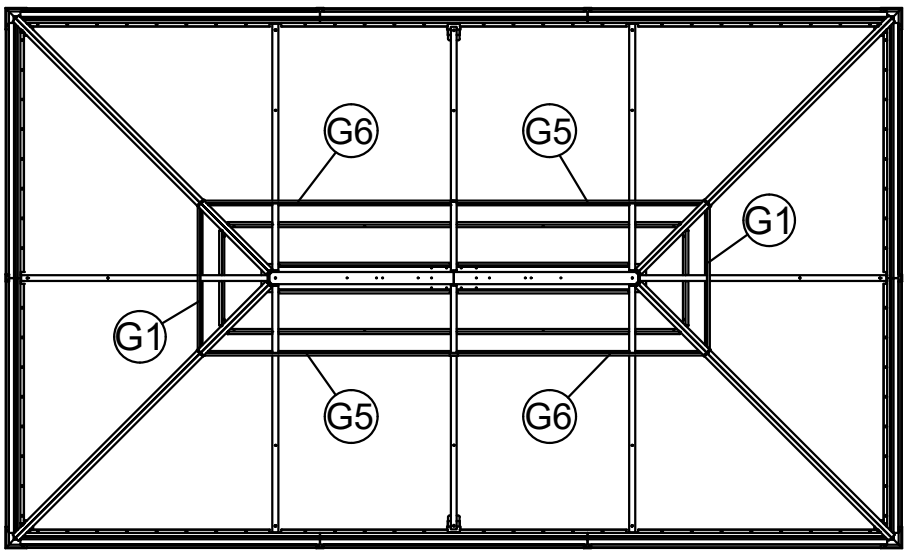

<8>

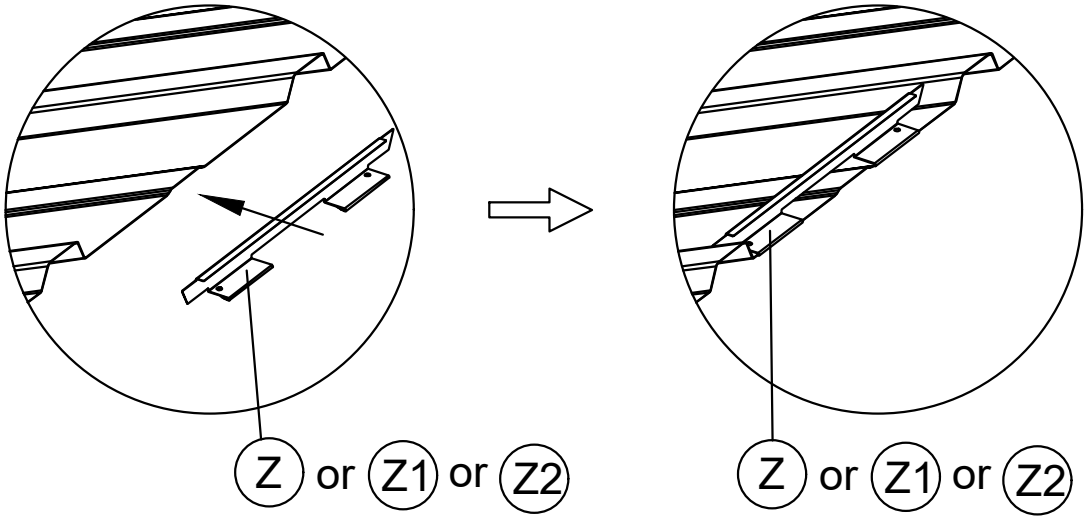

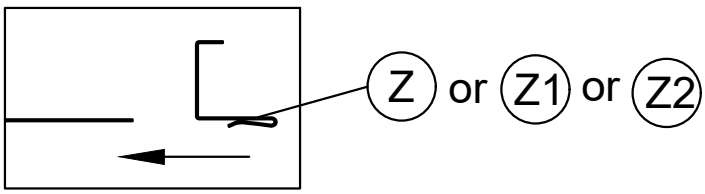

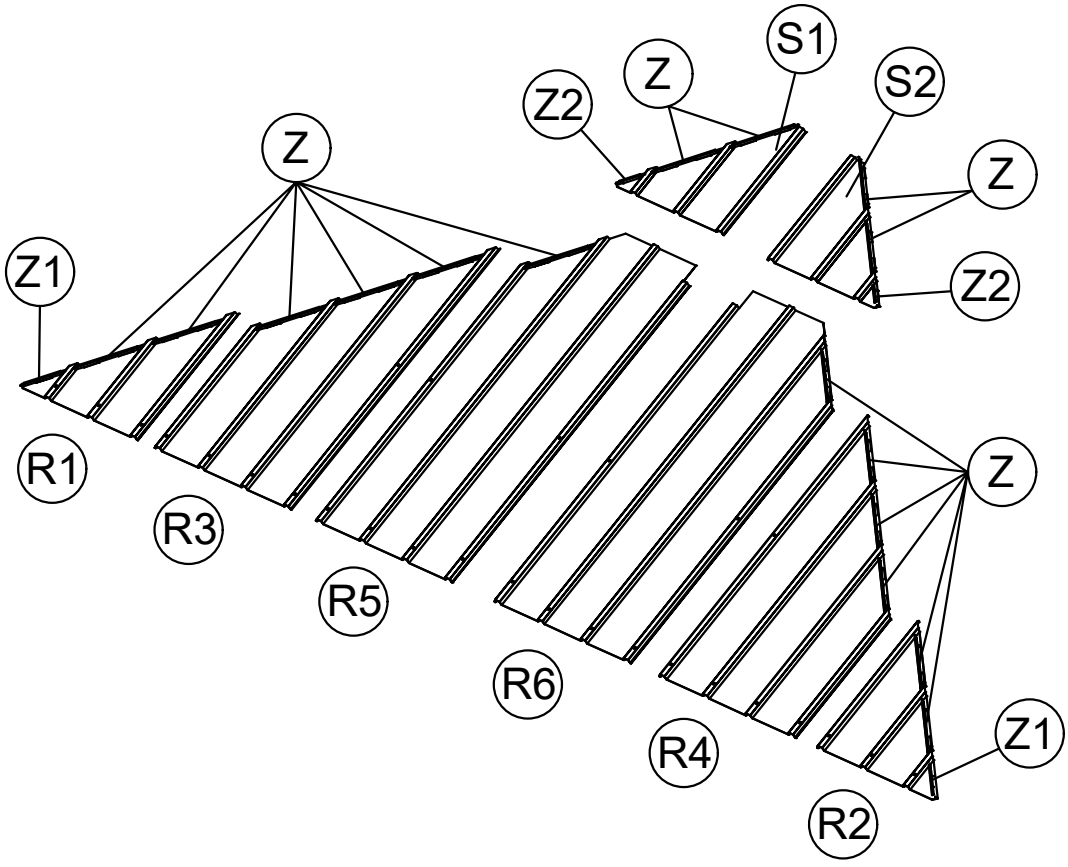

S1 2x S2 2x

R1 2x R2 2x

R3 2x R4 2x

R5 2x R6 2x

Z 32x

Z1 4x

Z2 4x

S1 2x S2 2x

S3 8x

R1 2x R2 2x

R3 2x R4 2x

R5 2x R6 2x


R8 4x R9 4x

Z 32x


Z1 4x

Z2 4x


<9>

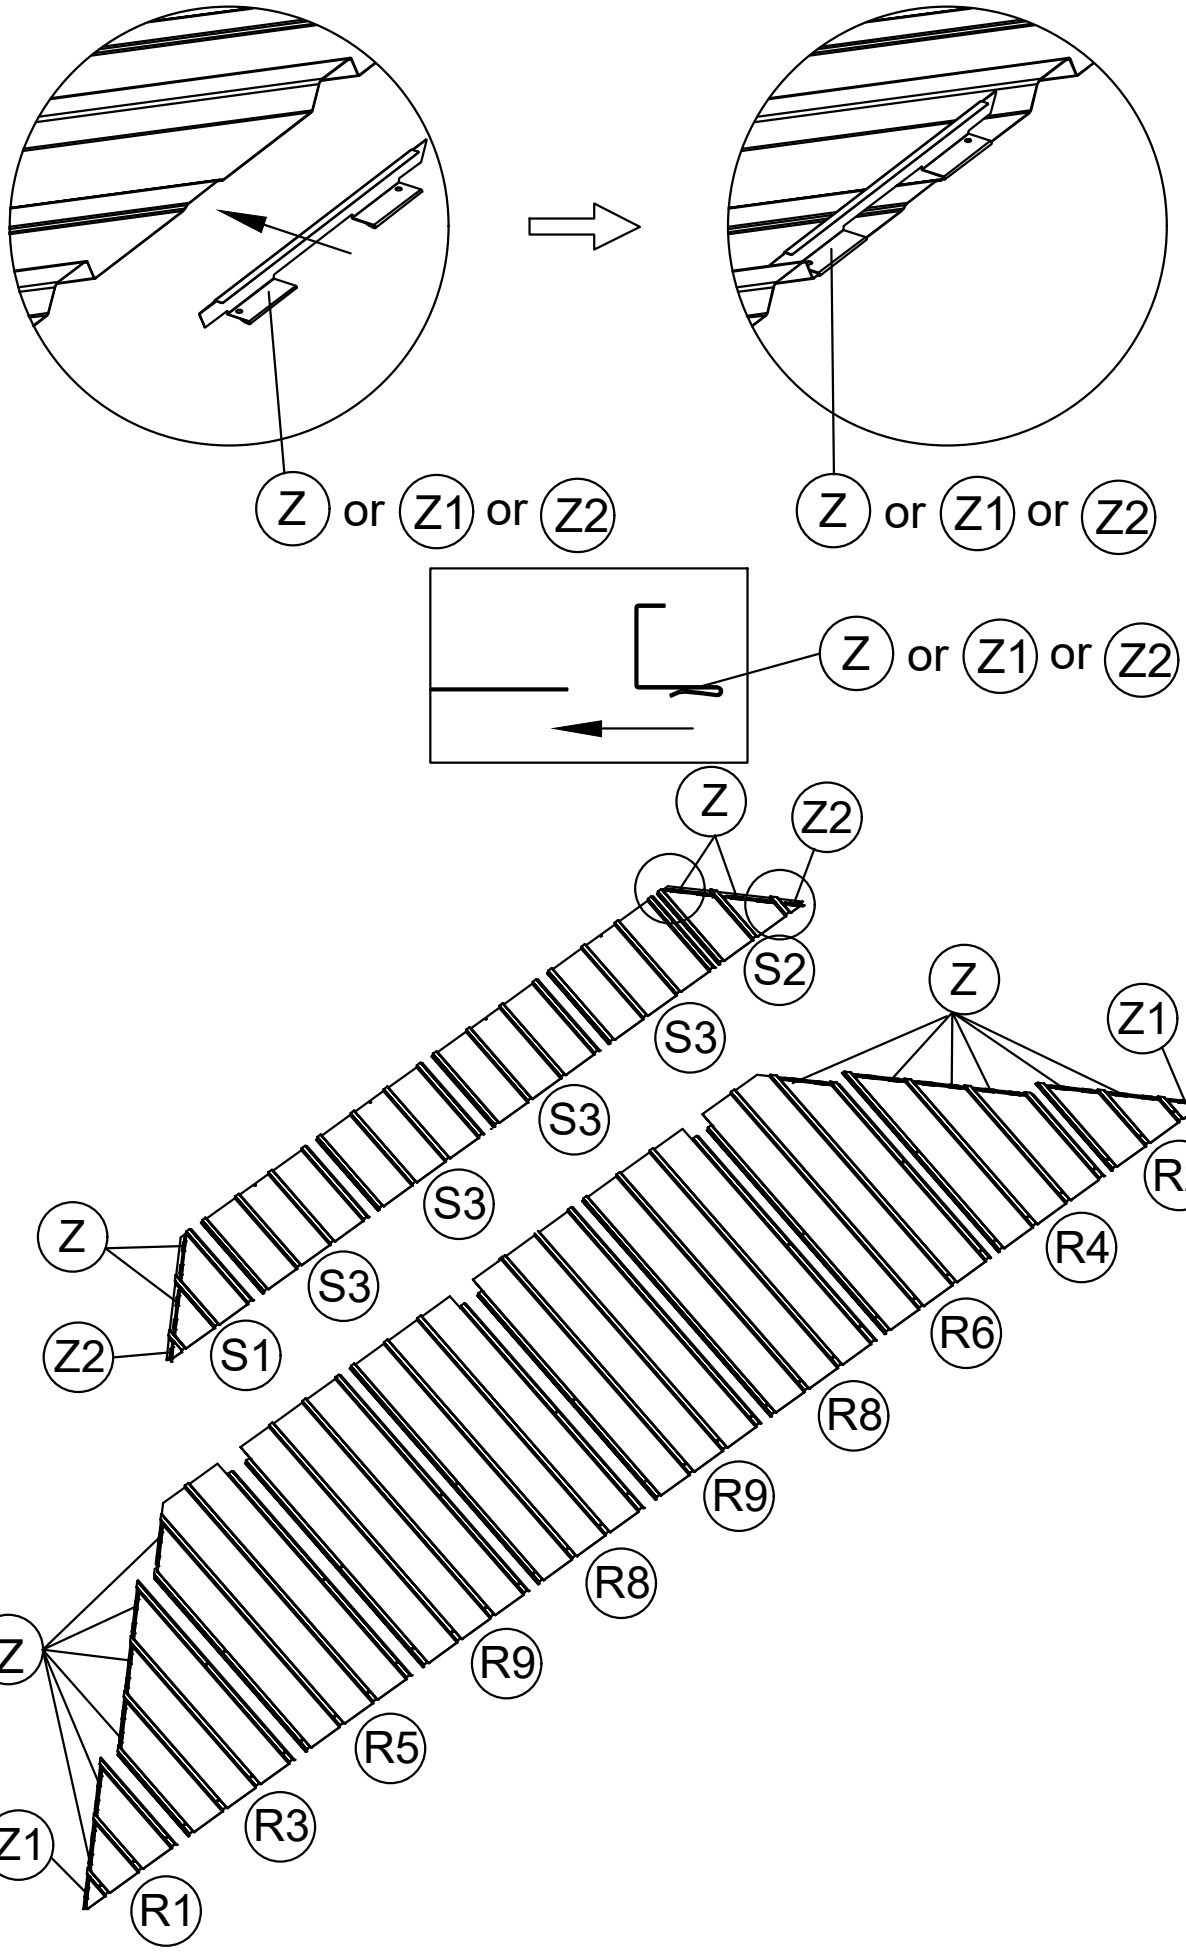



<10>

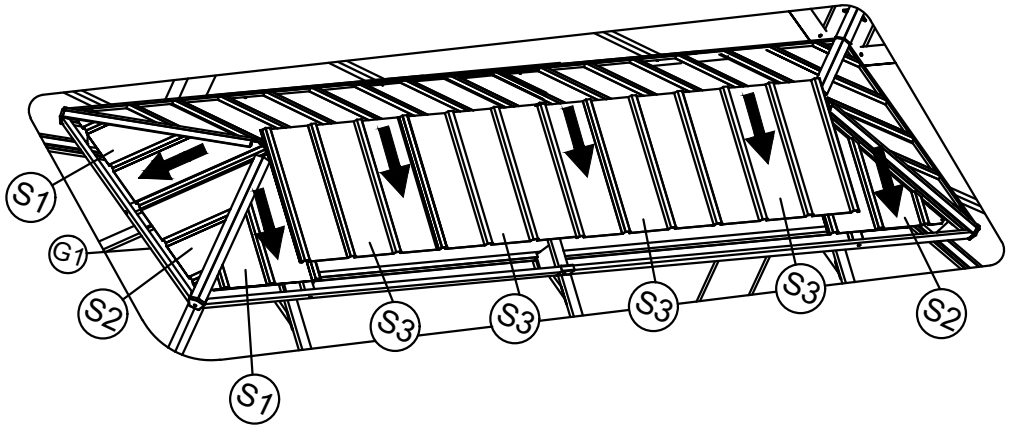

When installing the Roof plates (S2) onto the short side, pls detach the right end of the Roof Rib(G1) first. And then install the right end of Roof Rib (G1) again after S2 is installed.

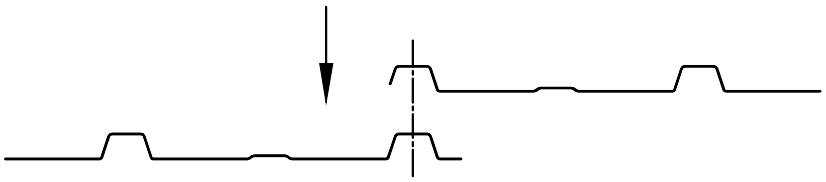

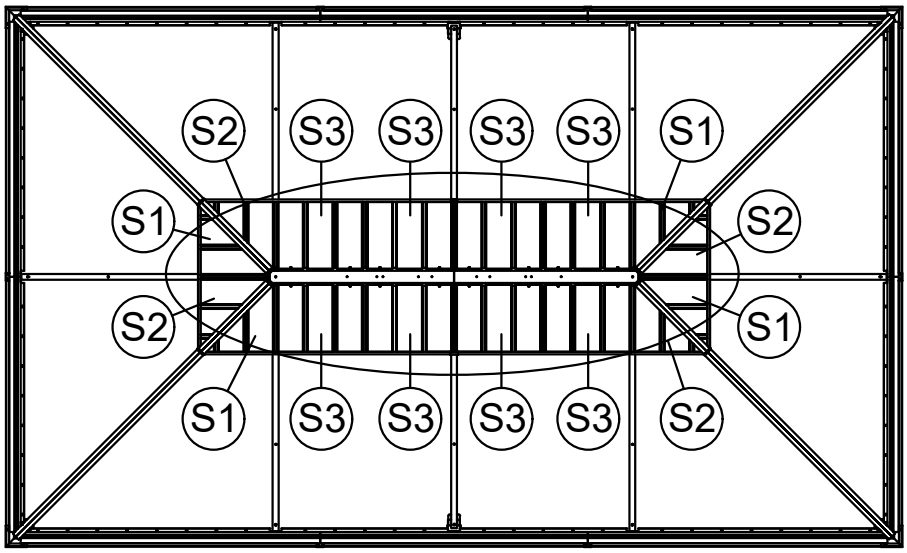

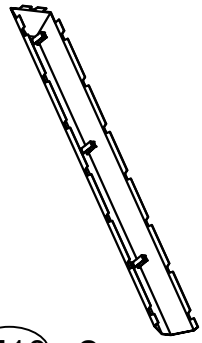


M10 2x





M6x15

1 6x


<11>

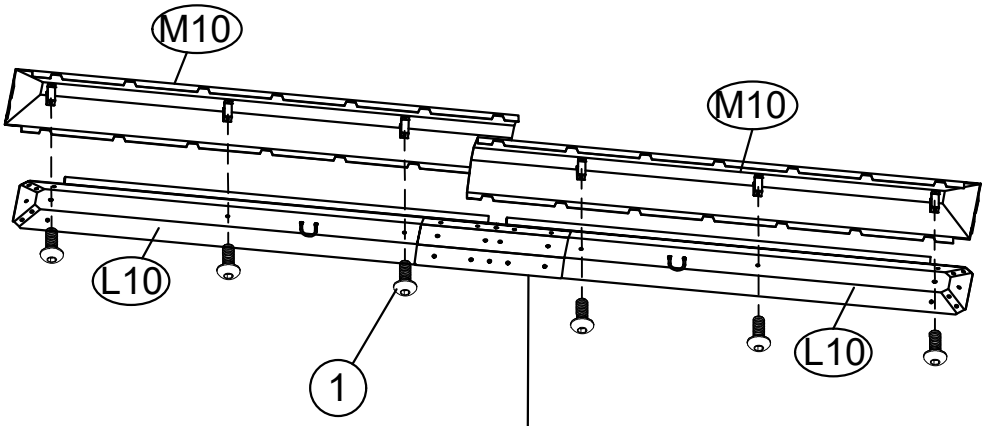

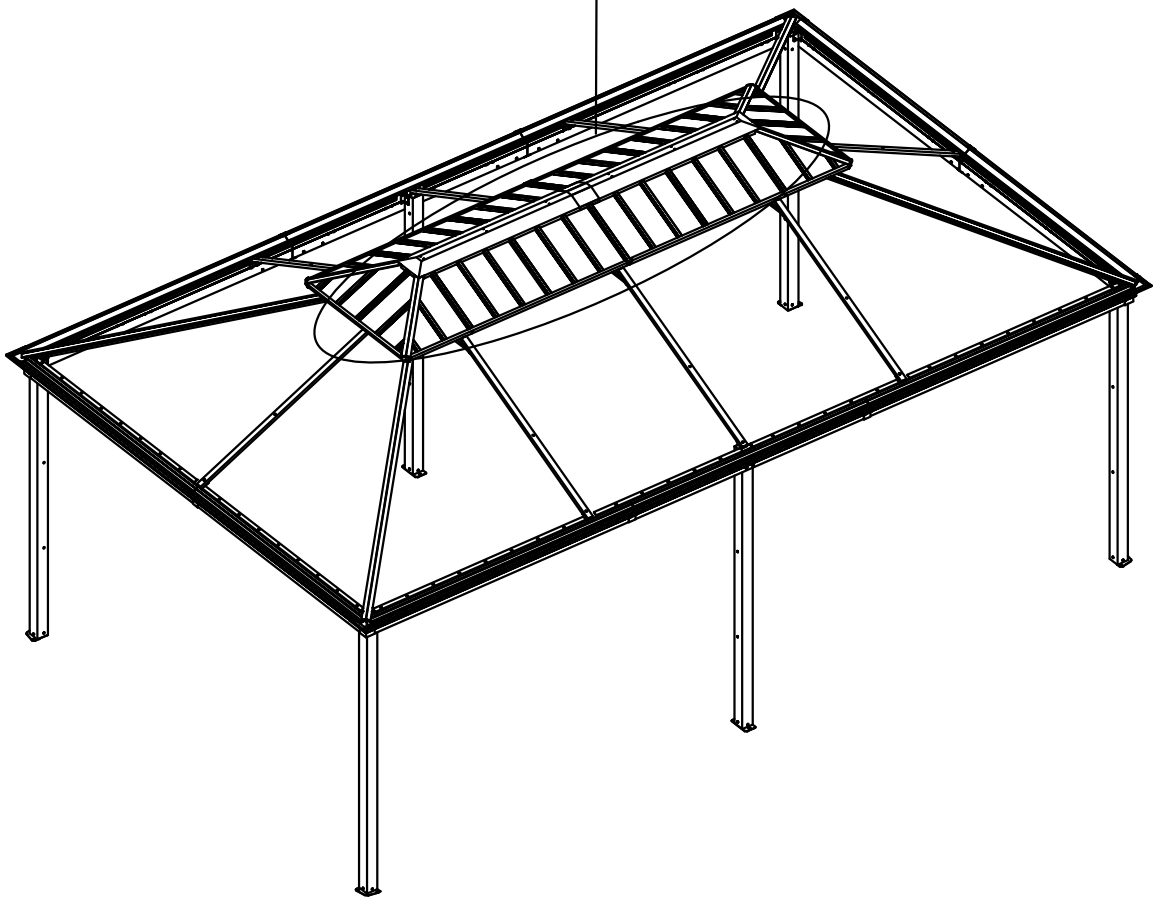

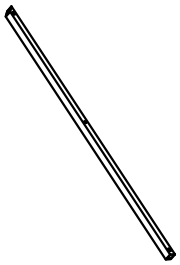


F1 8x

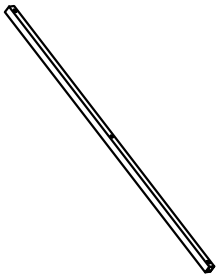

F3 4x



W 4x





W1 8x




M6x15


1 36x

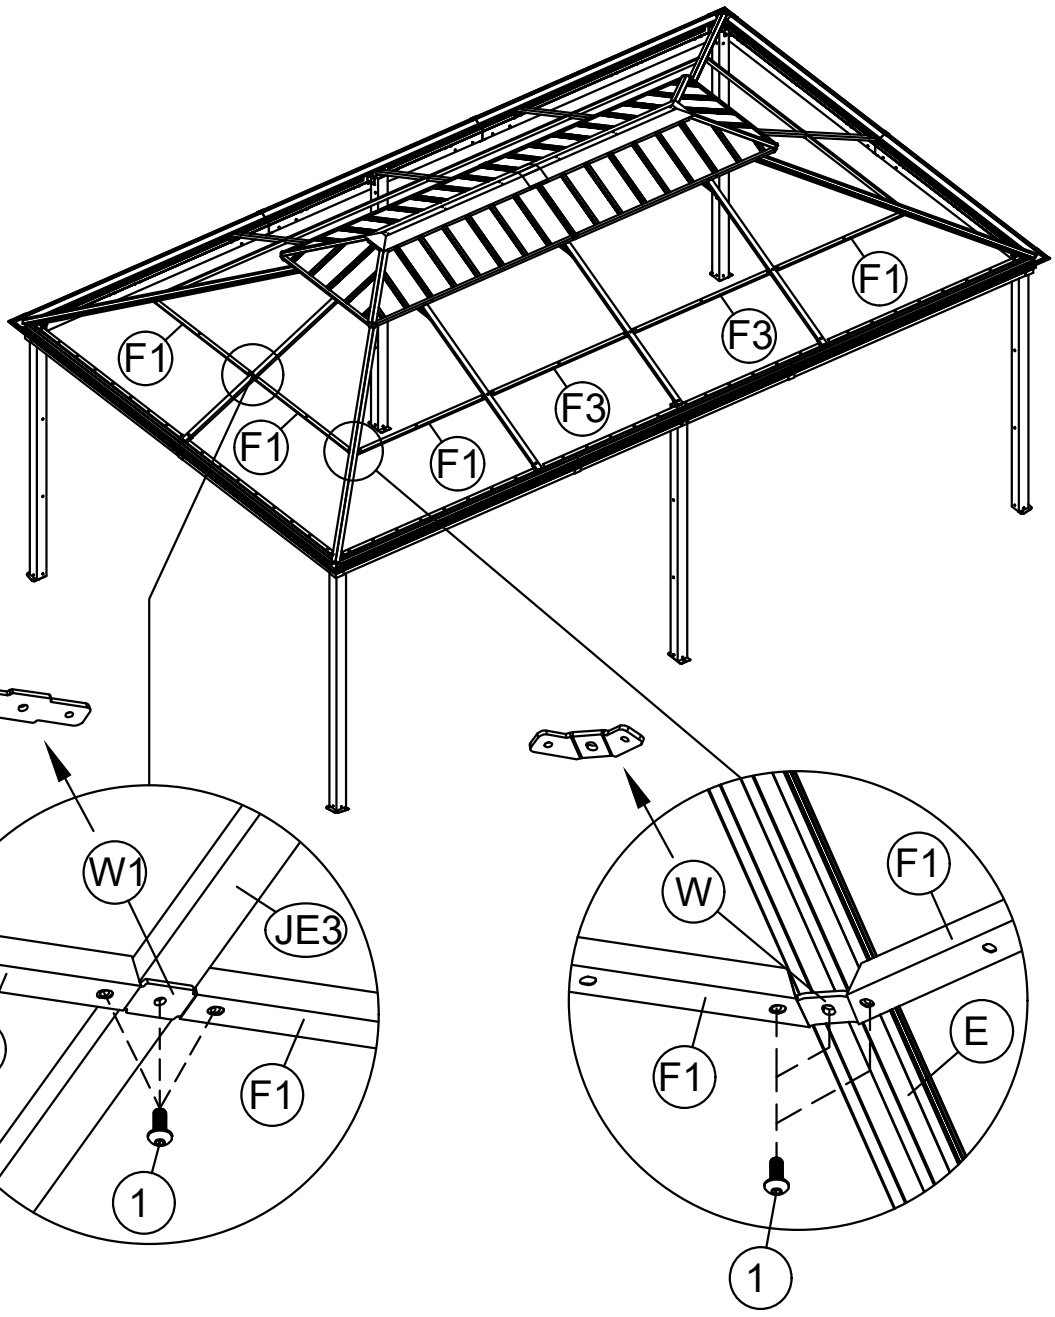

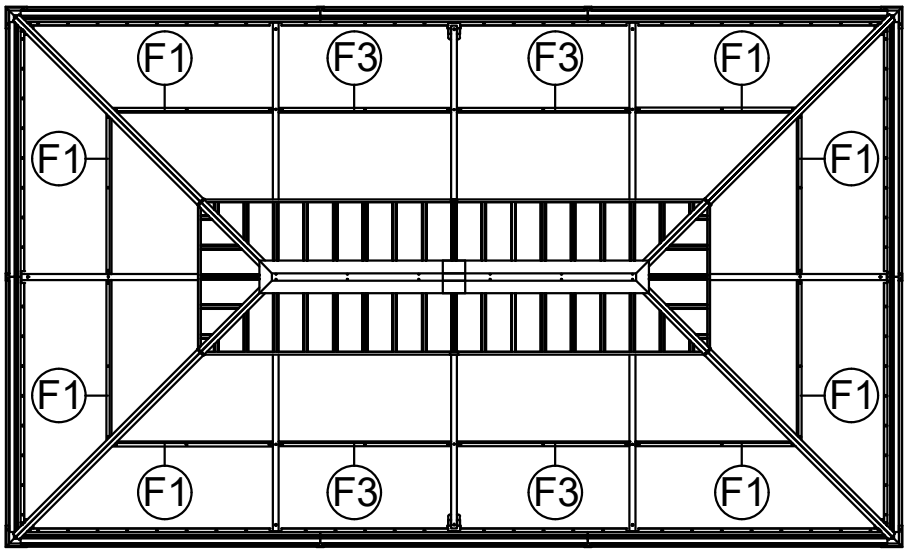


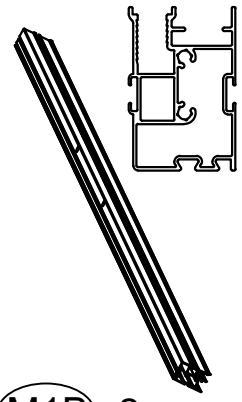


M1B 2x

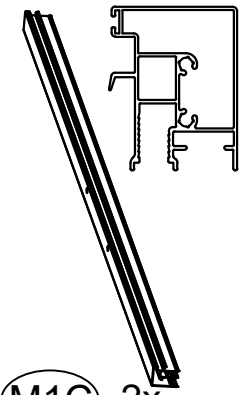


M1C 2x

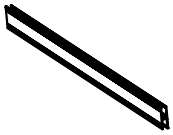

M5G 4x



MS2 2x

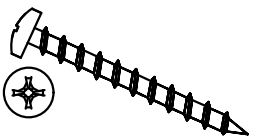



M4x50


14 8x

For component AB, repeat two times.


AB 2x

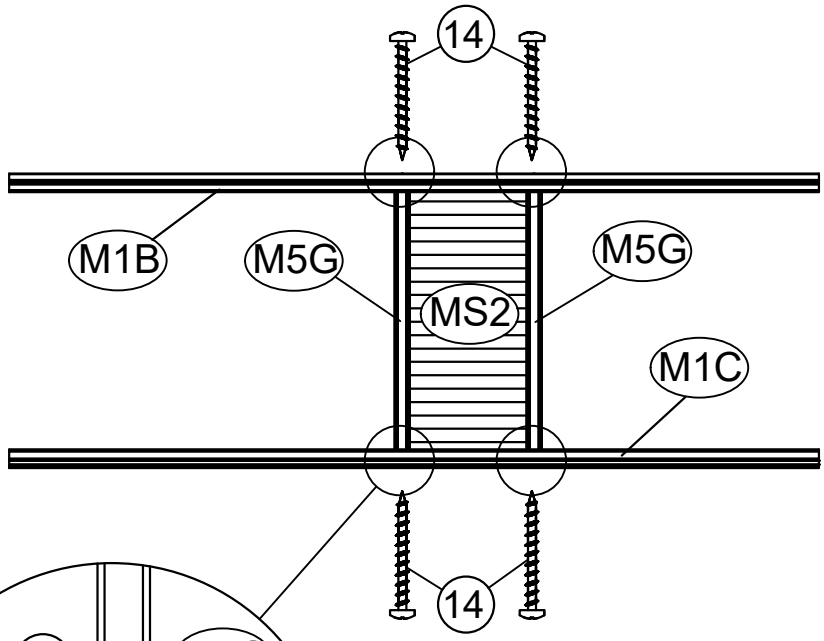

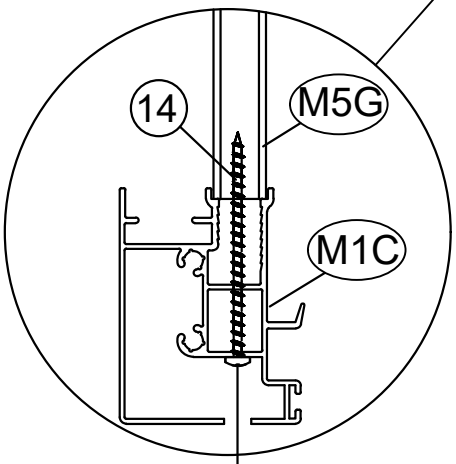

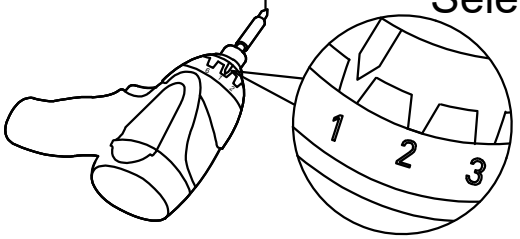


Select the low gear.

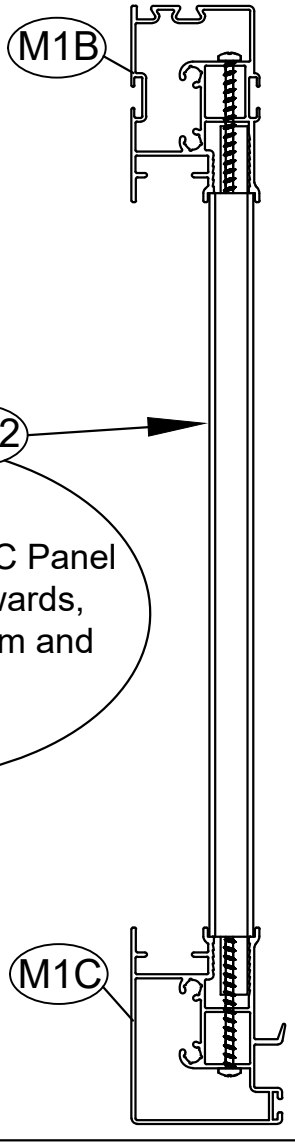


With the side of the PC Panel with text facing outwards, tear the protective film and installing.


Install all door frames according to the instructions on pages 23 to 29.

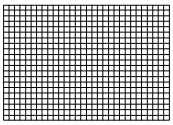

M1S 2x

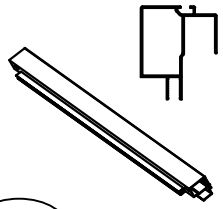

M4K 2x




M4x20


12 8x

<14>

For component AB, repeat two times.


AB 2x

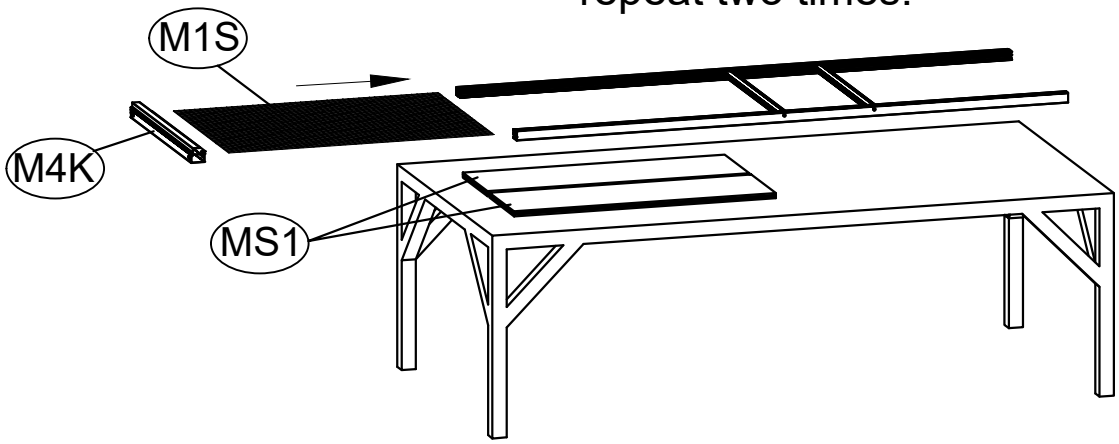

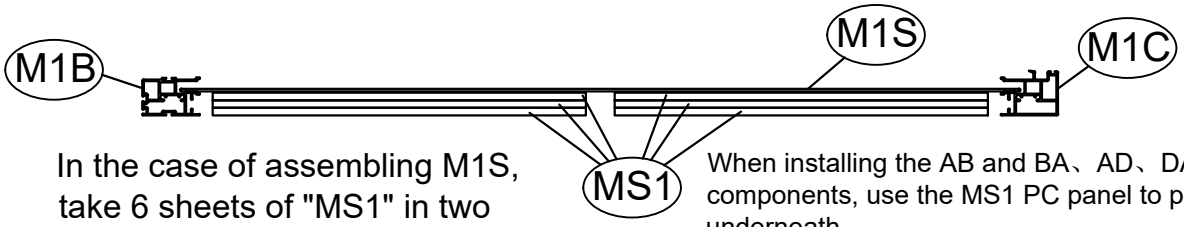

In the case of assembling M1S, take 6 sheets of "MS1" in two piles and drain the bottom, lift the "M1S".

When installing the AB and BA、AD、DA components, use the MS1 PC panel to pad underneath.
When installing the AC and CA 、AE、EA components, use the MS16 PC panel to pad underneath.

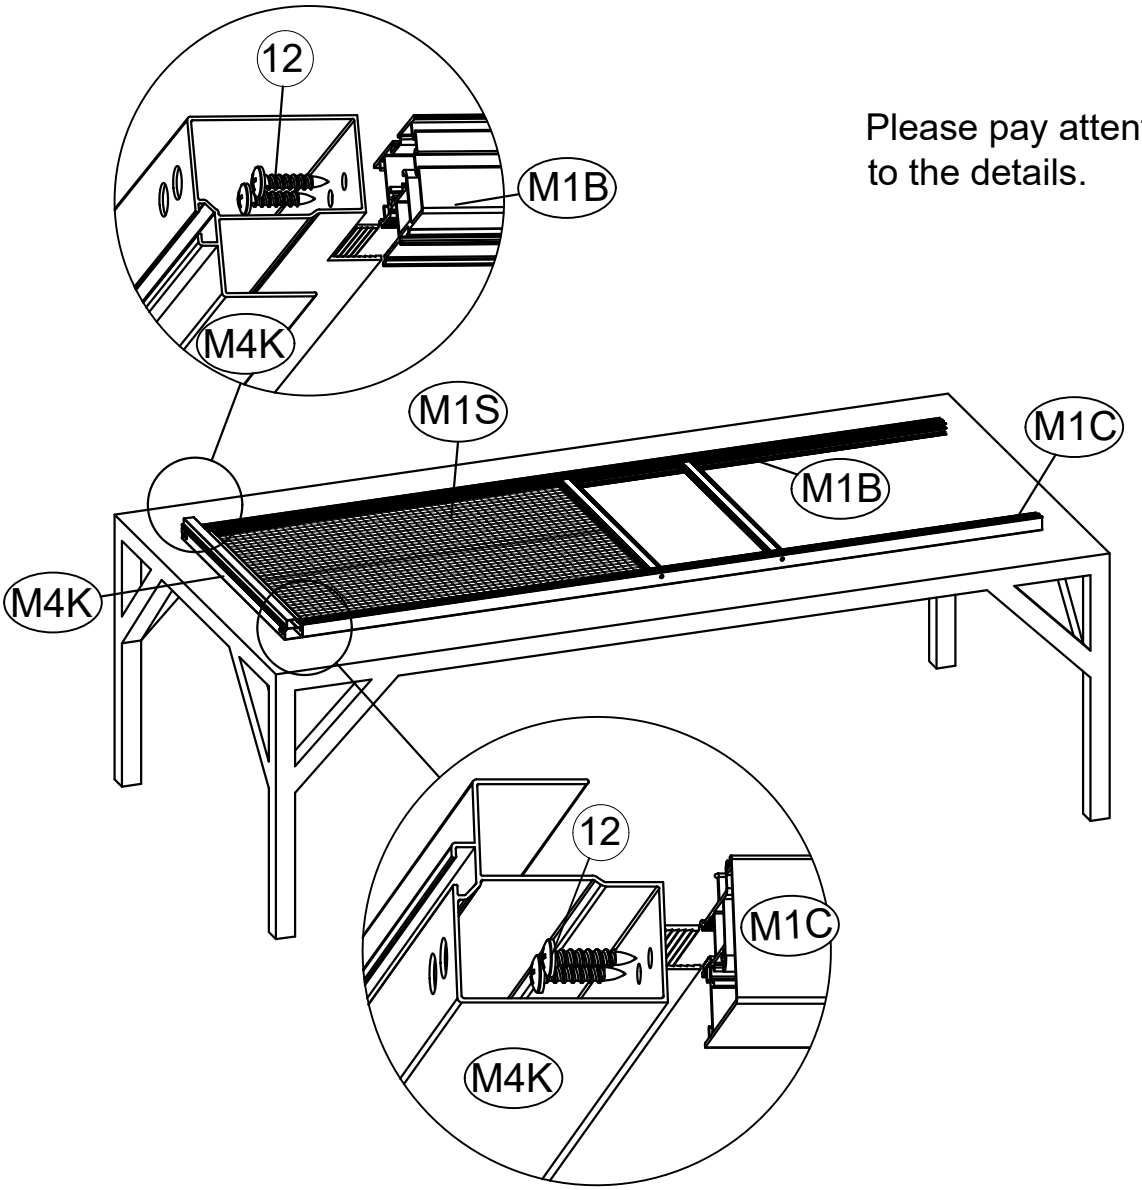


Please pay attention to the details.


<15>

For component AB, repeat two times.

AB 2x

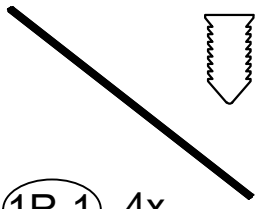



1R-1 4x

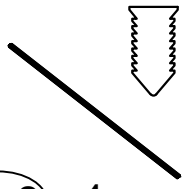



1R-2 4x

Before installing the parts (1R-1 and 1R-2)，move the gauze by hand to ensure makes enough space around the gauze.

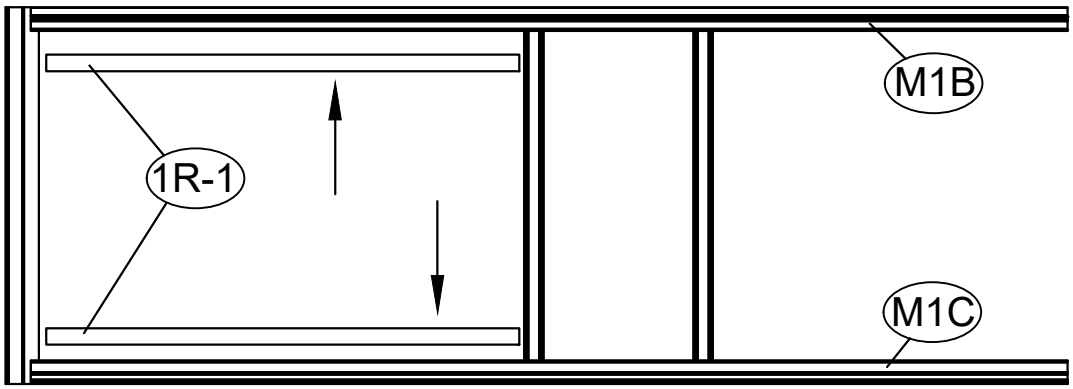


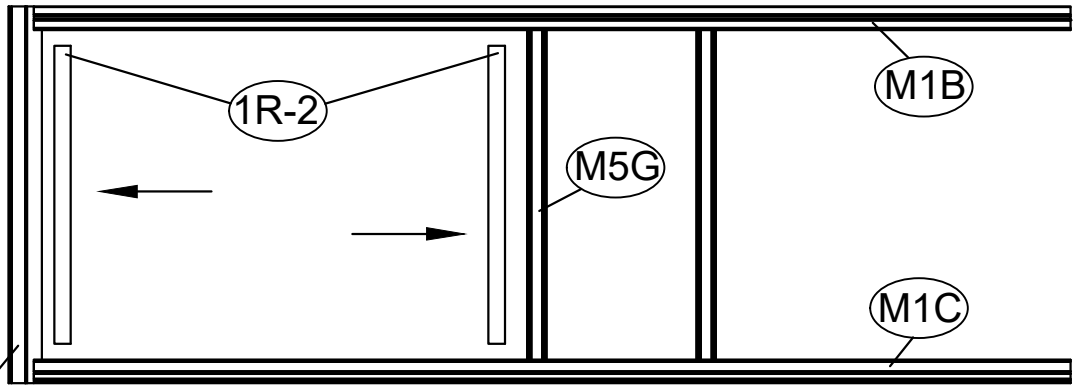

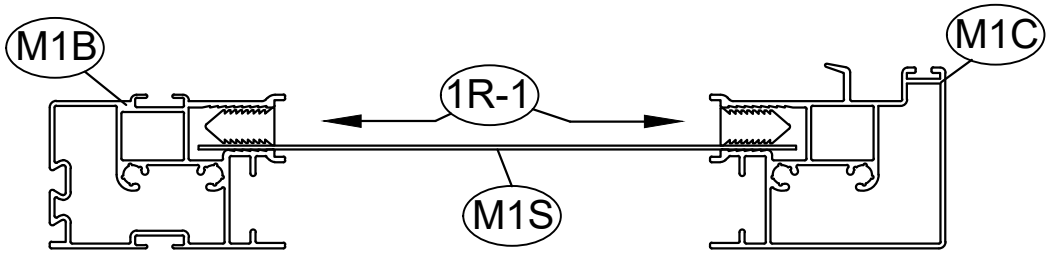

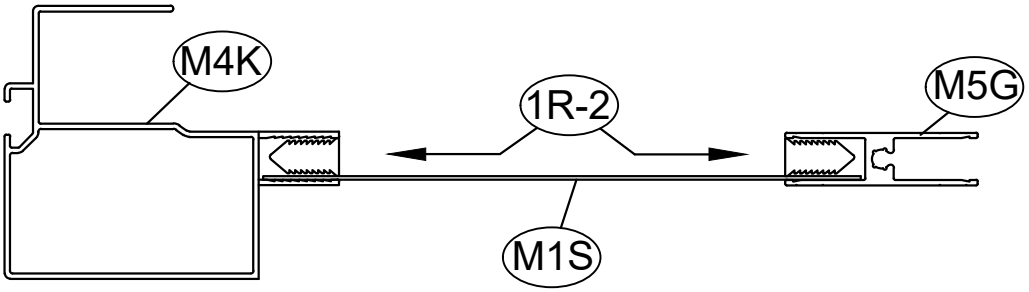


This picture is for subsequent reference

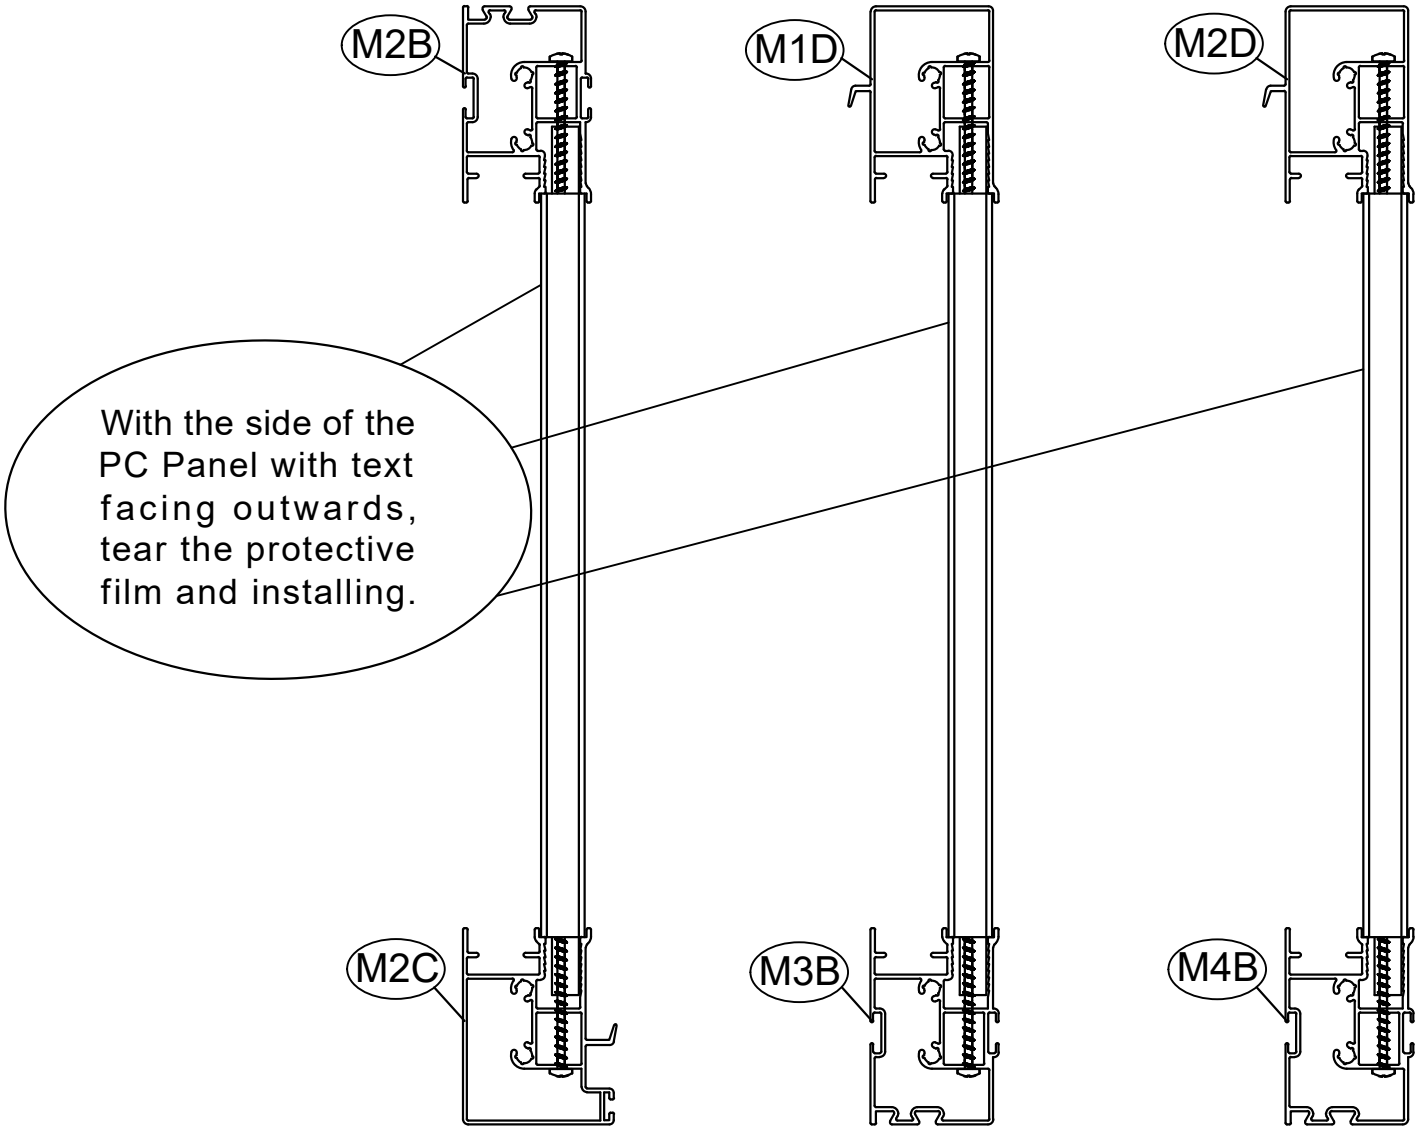


<17>

This picture is for subsequent reference.

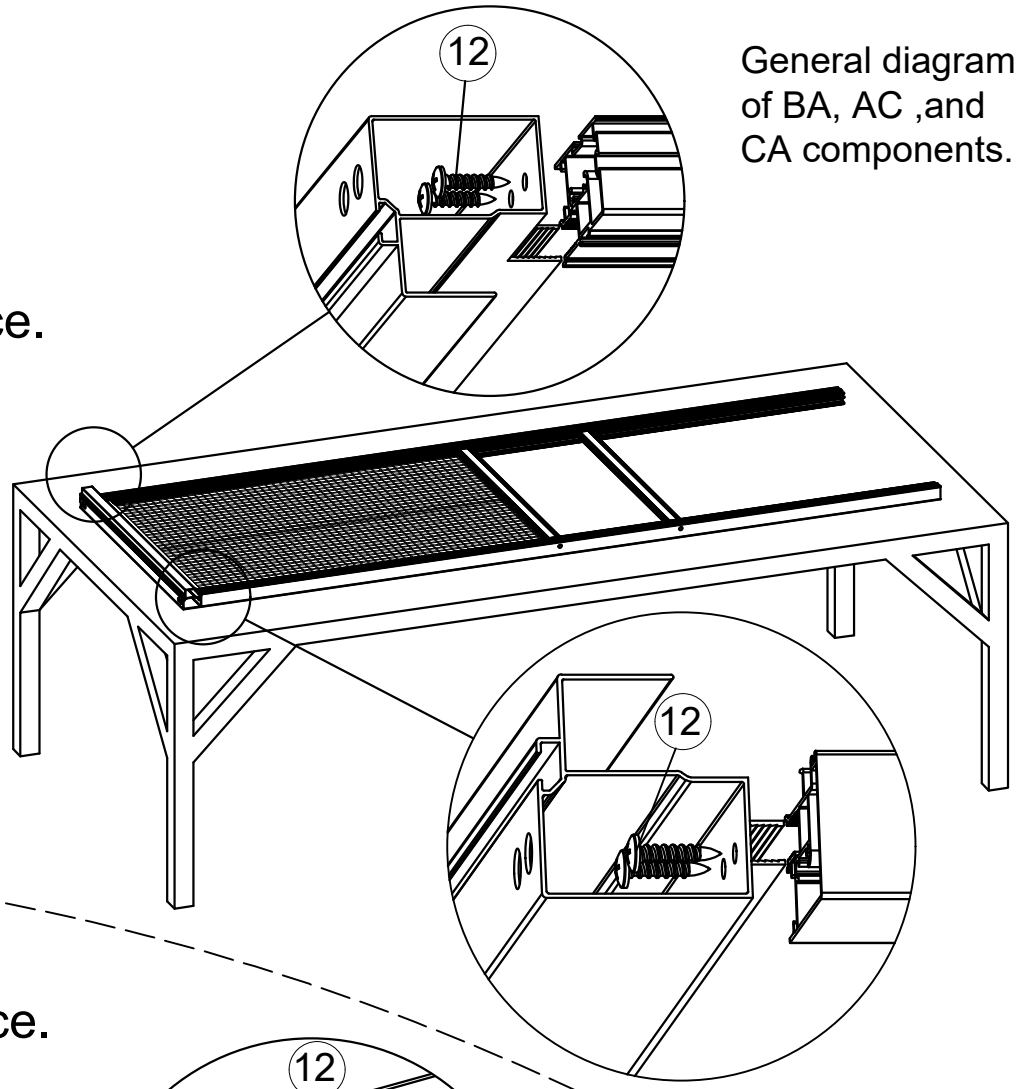

General diagram of BA, AC ,and CA components.

This picture is for subsequent reference.

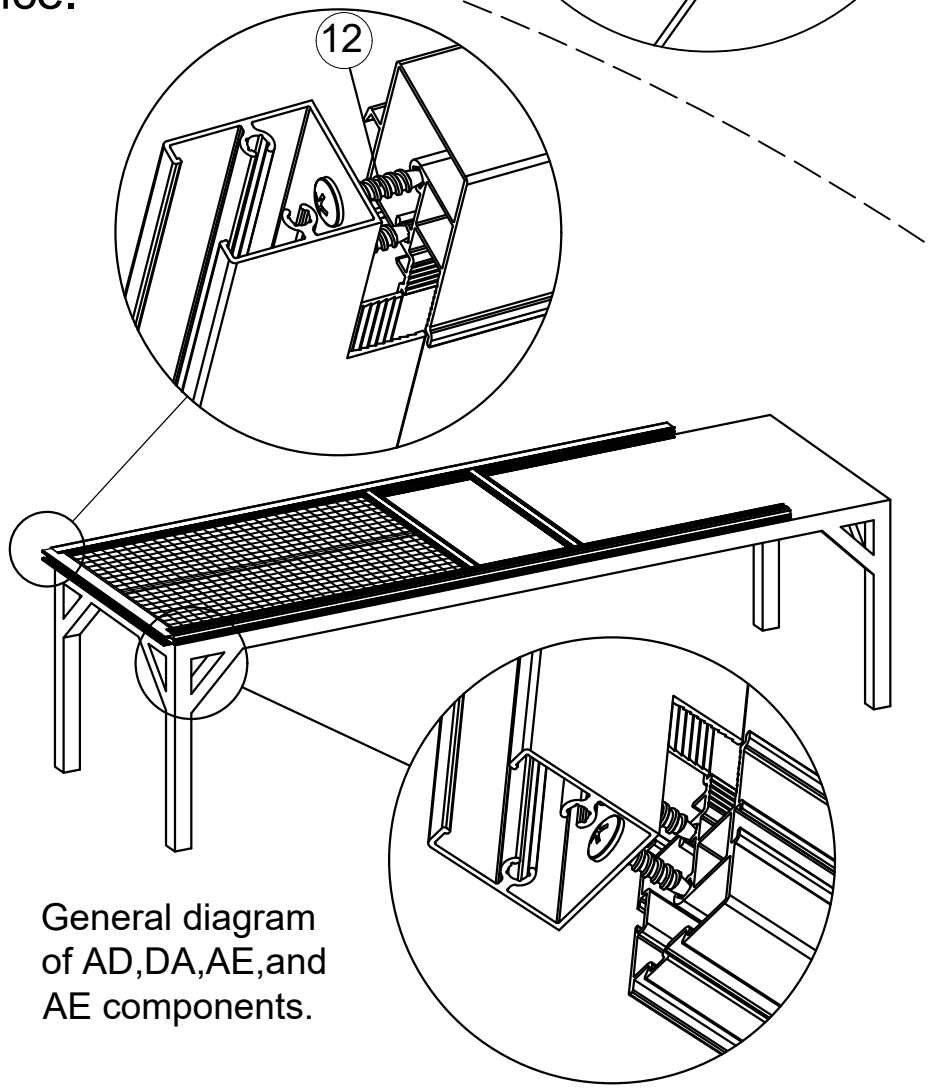


General diagram of AD,DA,AE,and AE components.

<18>

Door frame BA, AC, CA, AD, DA, and AE, and EA installation follow pages 23 to 29.


M4K	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M2B	2x
M2C	2x
14	8x
12	8x

For component BA, repeat two times. BA 2x

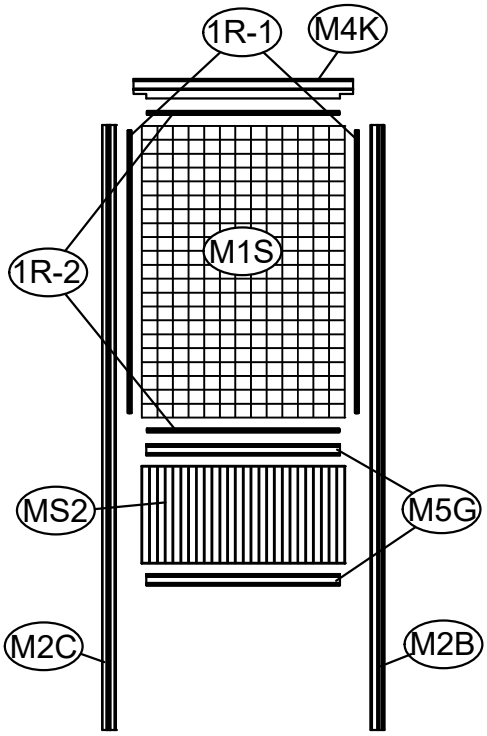


M8K	4x
1R-1	8x
1R-5	8x
M9G	8x
M5S	4x
MS17	4x
M1B	4x
M1C	4x
14	16x
12	16x

For component AC, repeat four times. AC 4x

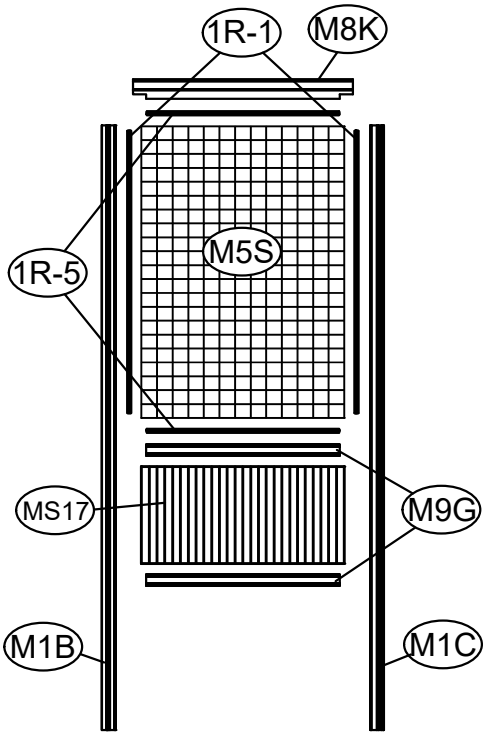

M8K	4x
1R-1	8x
1R-5	8x
M9G	8x
M5S	4x
MS17	4x
M2B	4x
M2C	4x
14	16x
12	16x

For component CA, repeat four times. CA 4x

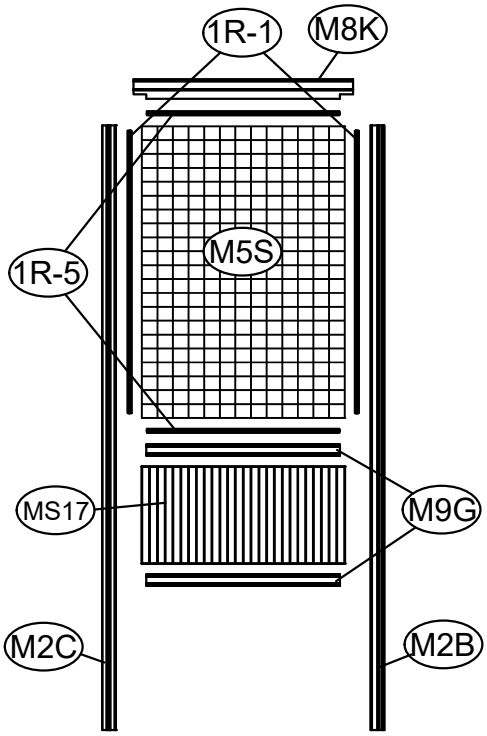


Component AB is symmetric
BA, and AC is symmetric CA.

M4H	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M5B	2x
M1D	2x
14	8x
12	8x

<19>

AD 2x


For component AD,
repeat two times.

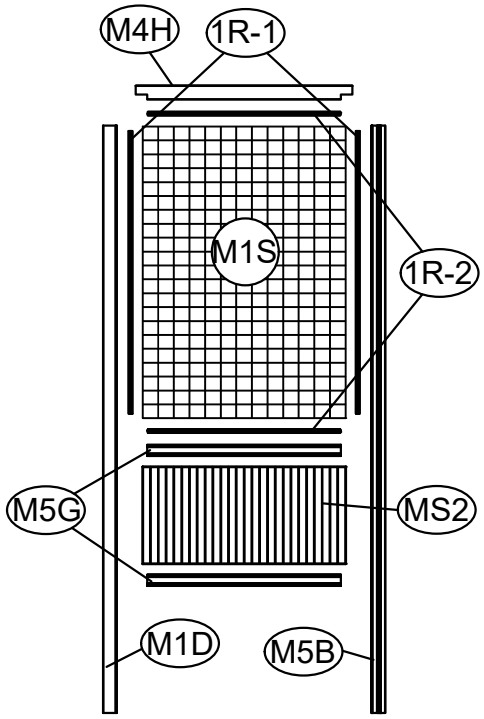

M4H	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M6B	2x
M2D	2x
14	8x
12	8x

For component DA,
repeat two times.


DA 2x

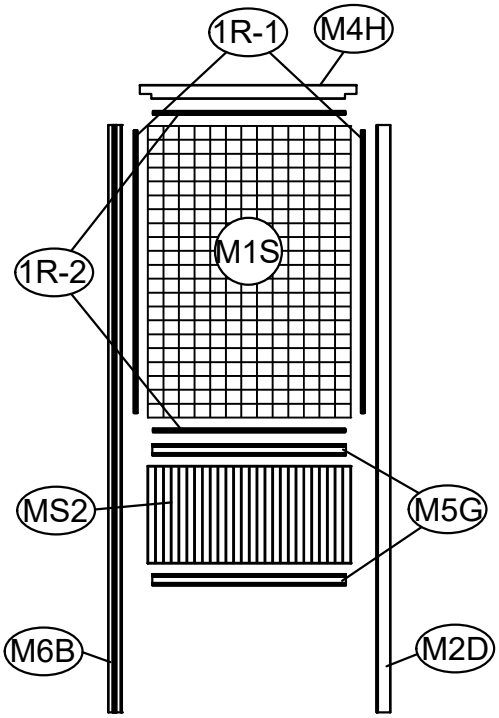

M7H	4x
1R-1	8x
1R-5	8x
M9G	8x
M5S	4x
MS17	4x
M5B	4x
M1D	4x
14	16x
12	16x

For component AE,
repeat four times.


AE 4x

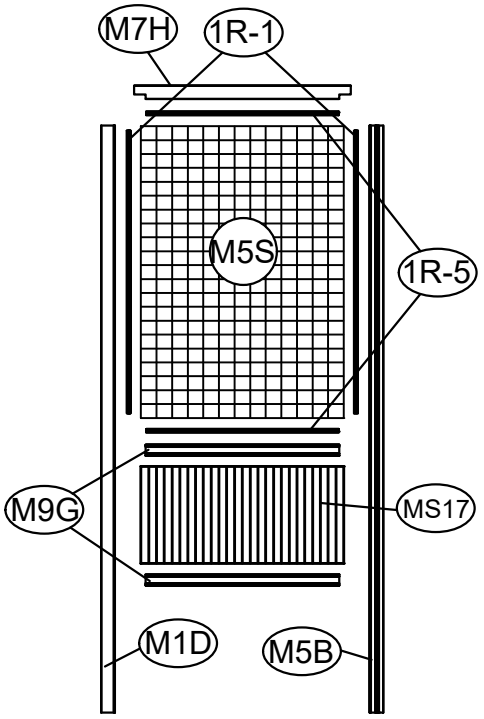

M7H	4x
1R-1	8x
1R-5	8x
M9G	8x
M5S	4x
MS17	4x
M6B	4x
M2D	4x
14	16x
12	16x

For component EA,
repeat four times.

EA 4x

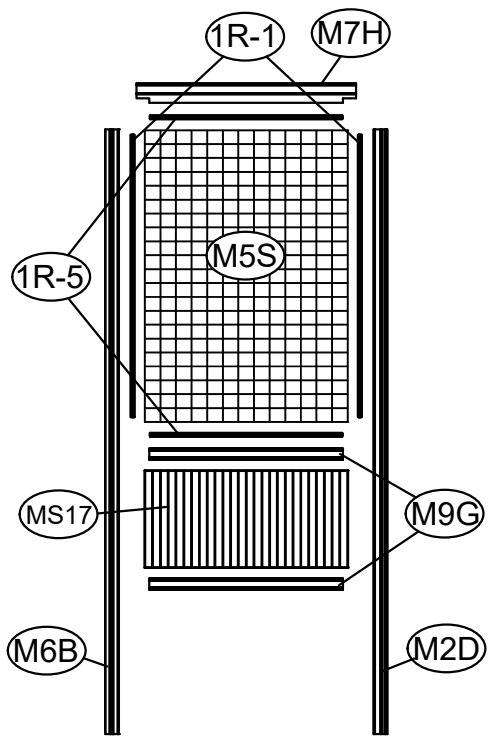

Component AD is symmetric
DA, and AE is symmetric EA.

M1E 16x

M1G 8x

M4L 16x


MS1 16x

M4x35


13 48x

For component AF, repeat eight times.

AF 8x

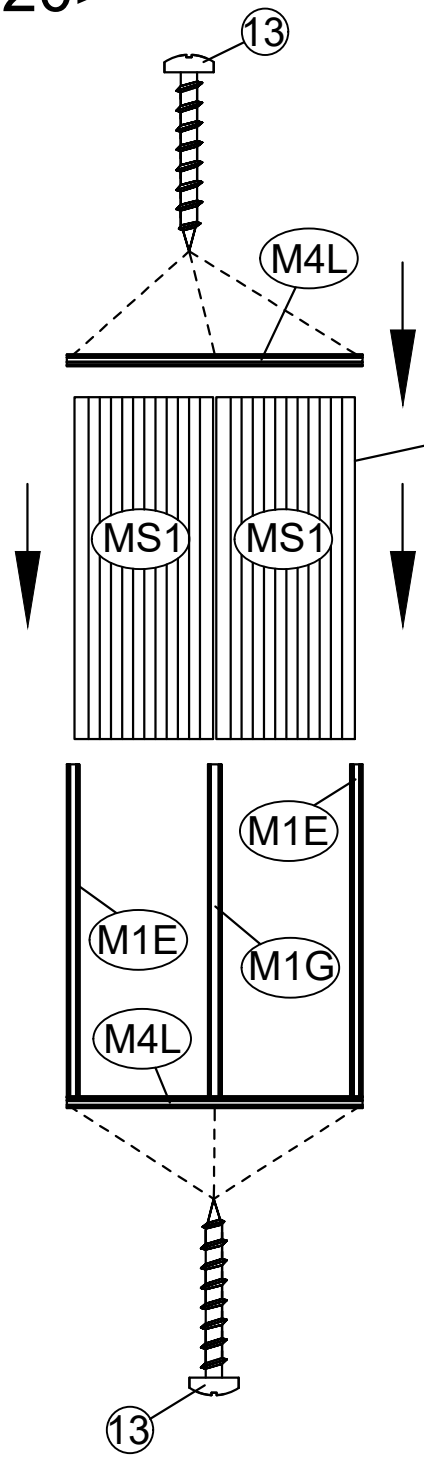


With the side of the PC panel with the text facing outward, tear off the protective film and installing. After installation, be sure to leave the front side unchanged for the next step.

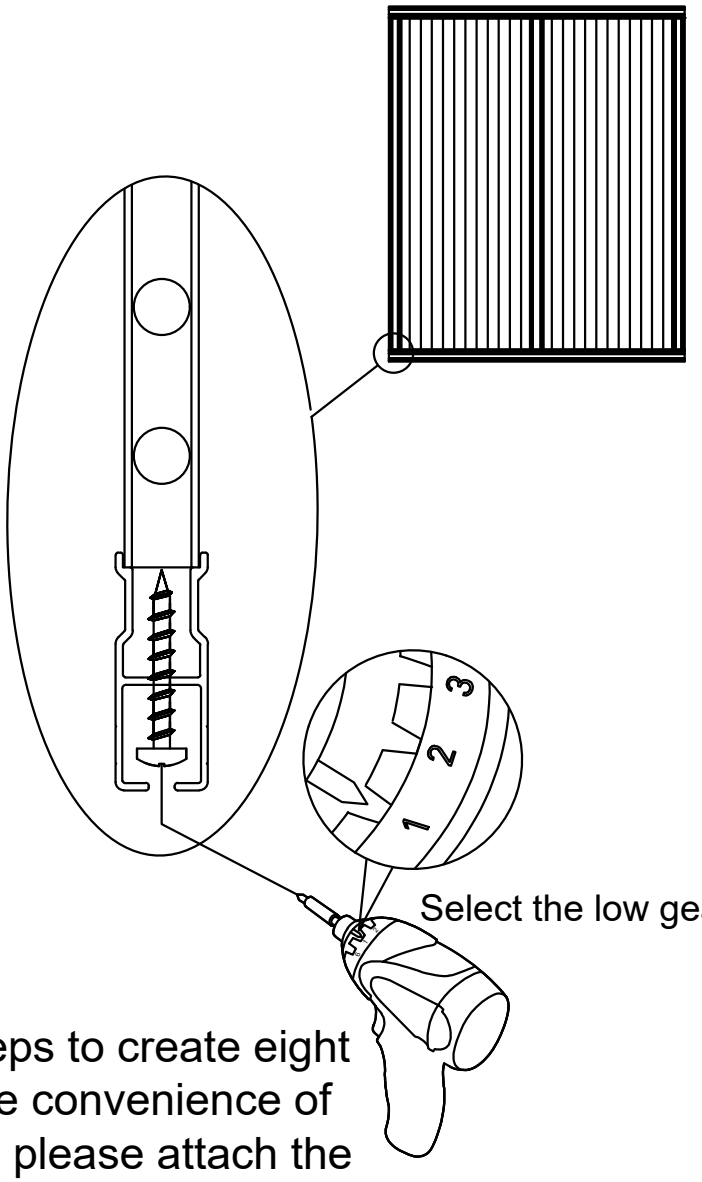


Select the low gear.


Repeat the previous steps to create eight AF components. For the convenience of the following assembly, please attach the letter AF in a prominent position on the front.

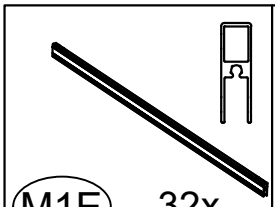


M1E 32x

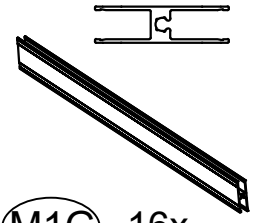


M1G 16x

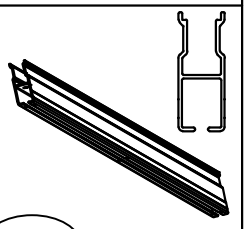

M8L 32x



MS16 32x





M4x35

13 96x


For component AG, repeat sixteen times.


AG 16x

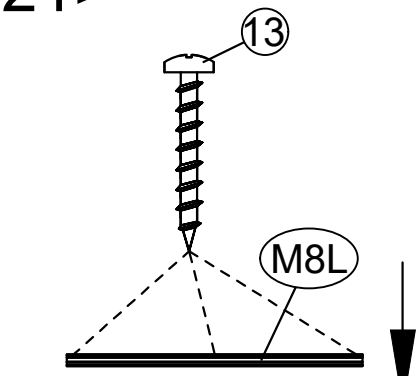

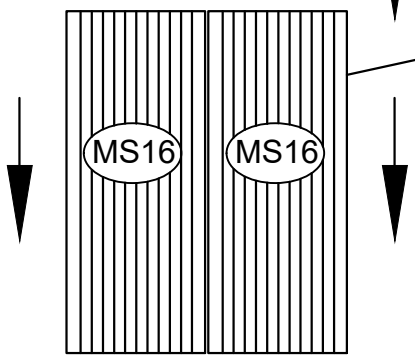


With the side of the PC panel with the text facing outward, tear off the protective film and installing. After installation, be sure to leave the front side unchanged for the next step.

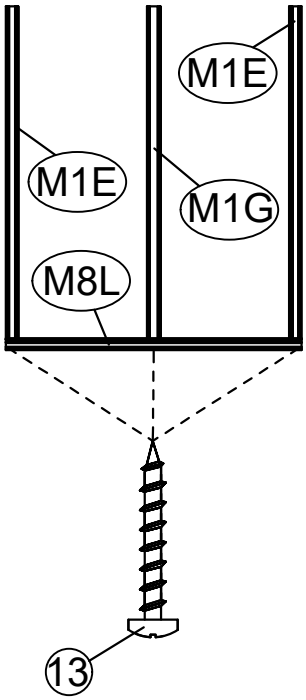

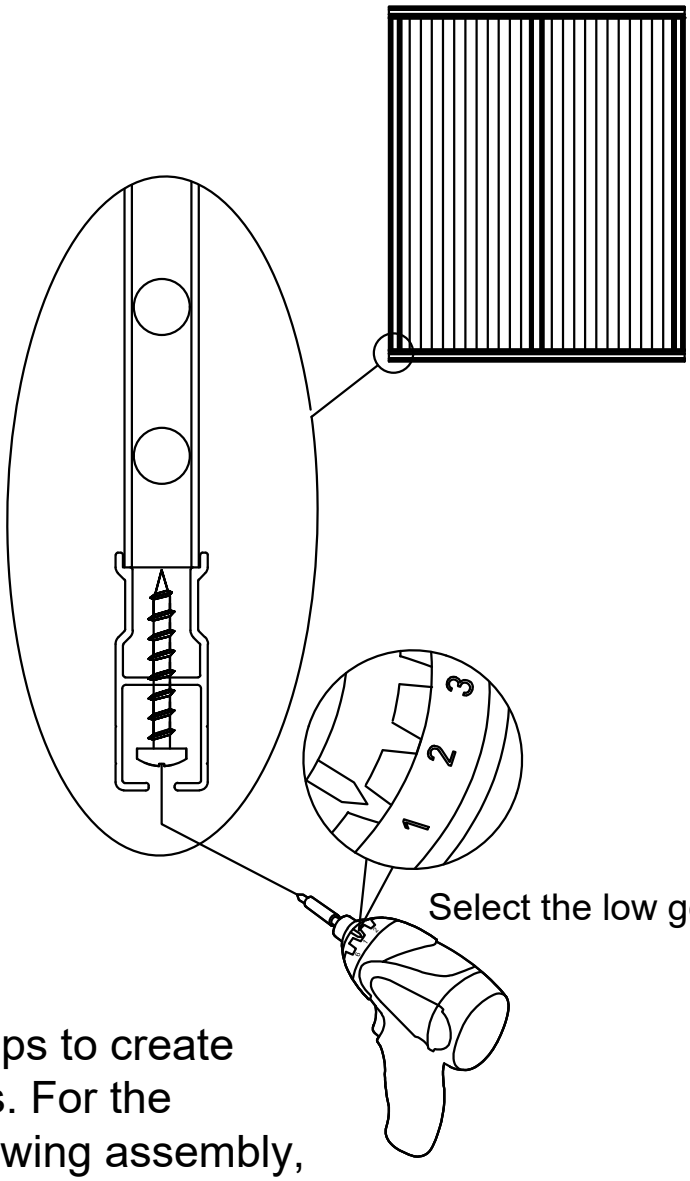

Select the low gear.


Repeat the previous steps to create sixteen AG components. For the convenience of the following assembly, please attach the letter AG in a prominent position on the front.



MD1 96x



MD2 192x




MD3 48x


<22>

AF 8x

AG 16x

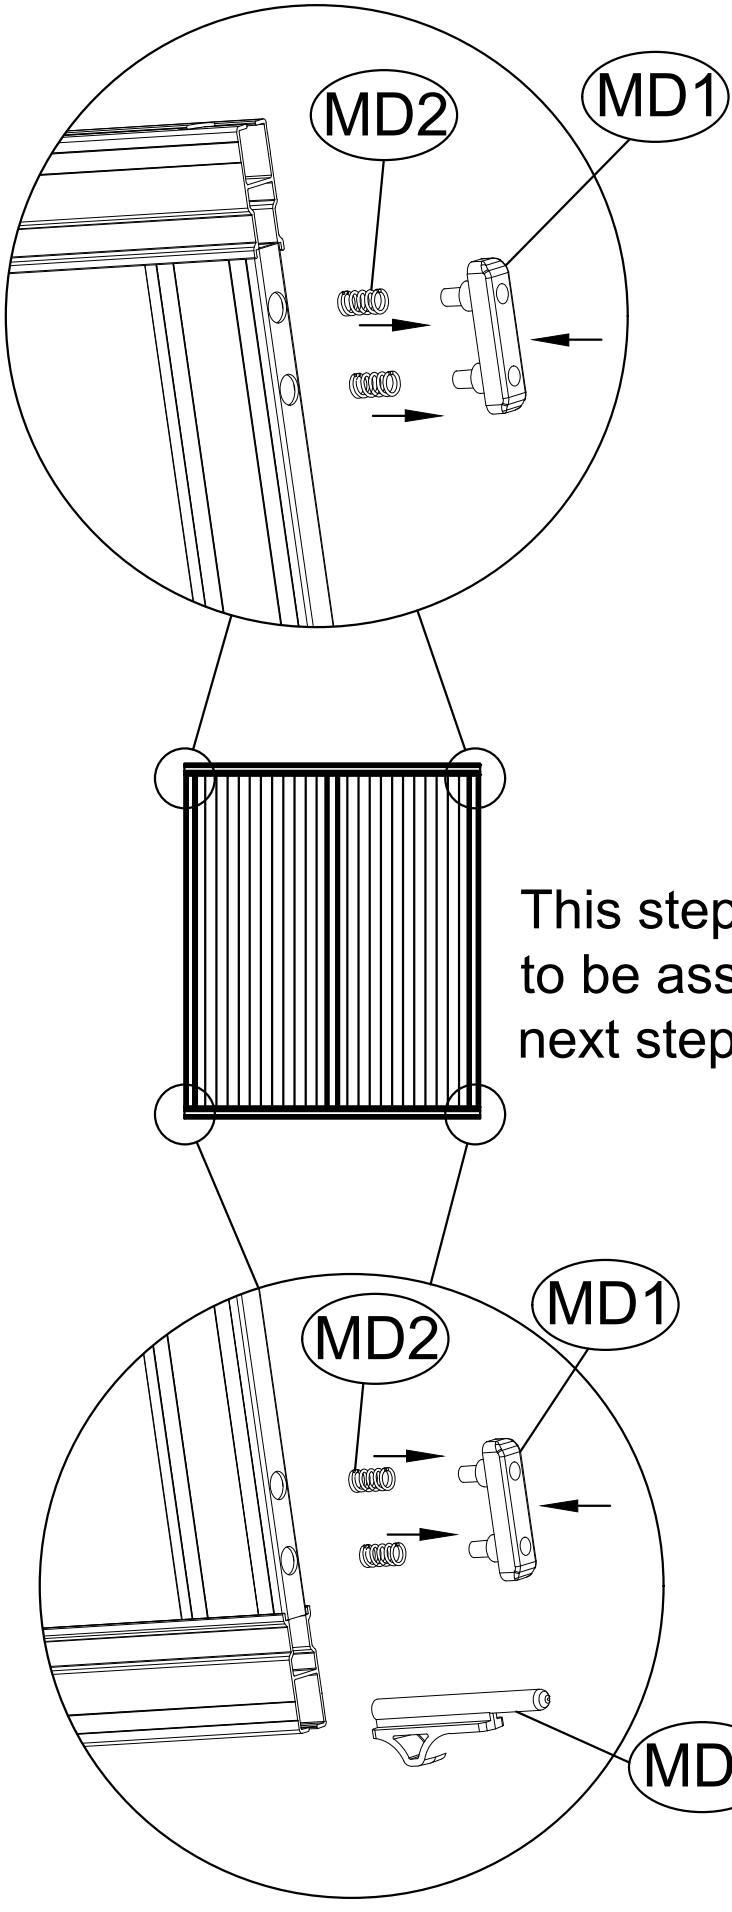


This step is recommended to be assembled with the next step together.

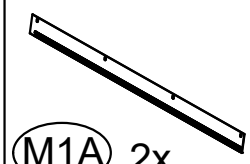


M1A 2x




M2A 2x

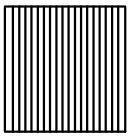

MS3 4x

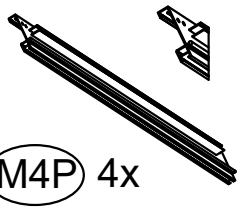


M4P 4x





M4x20


12 16x


AB 2x BA 2X

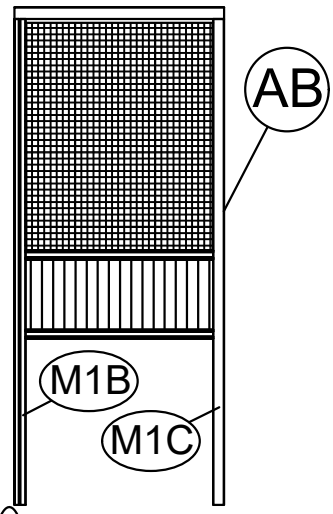


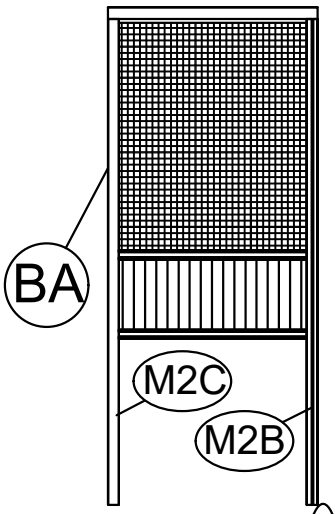


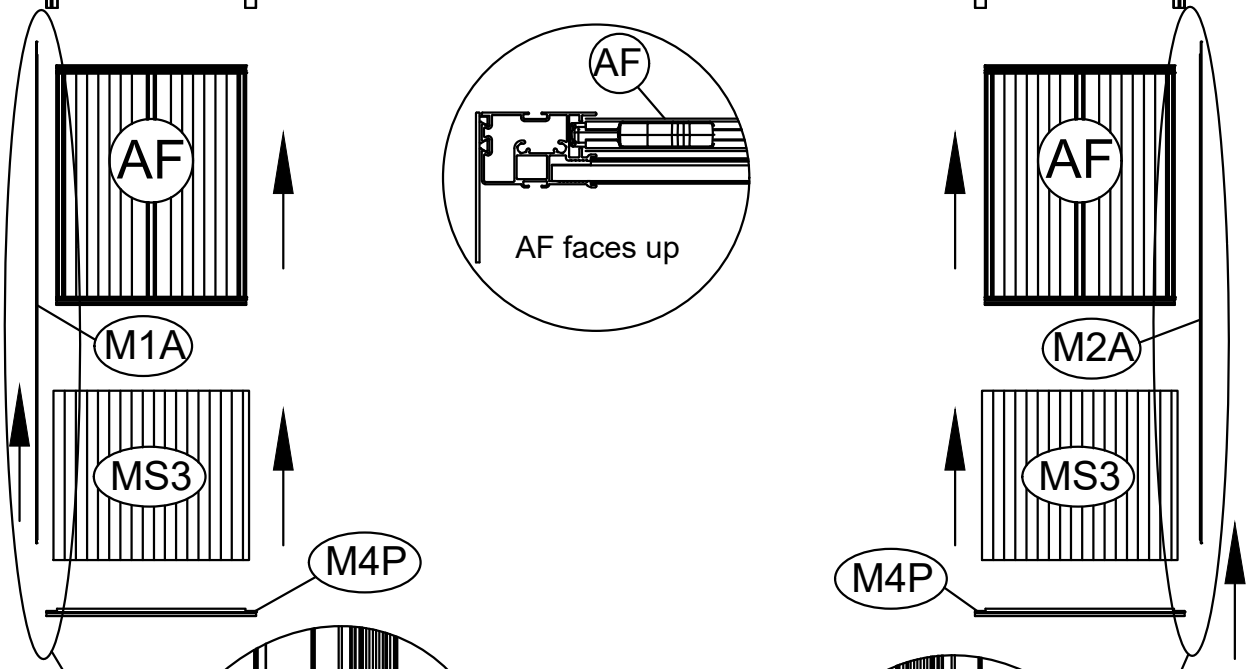

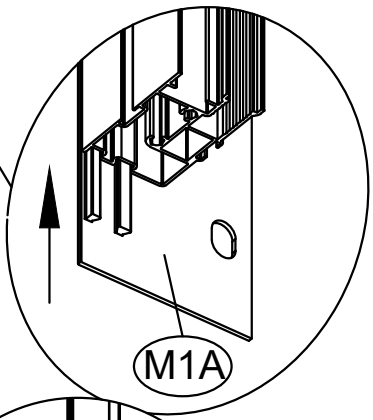

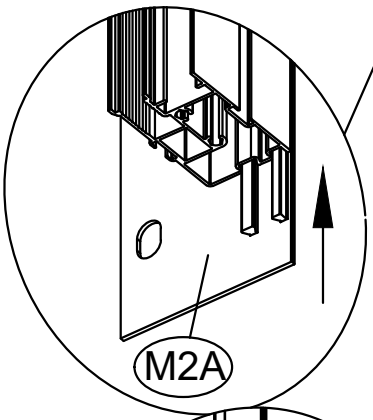

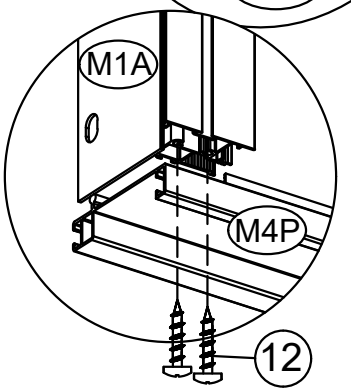

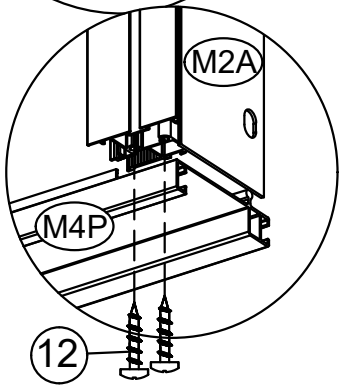

AC 4x CA 4X

M1A 4x


M2A 4x


MS18 8x

M8P 8x


M4x20

12 32x

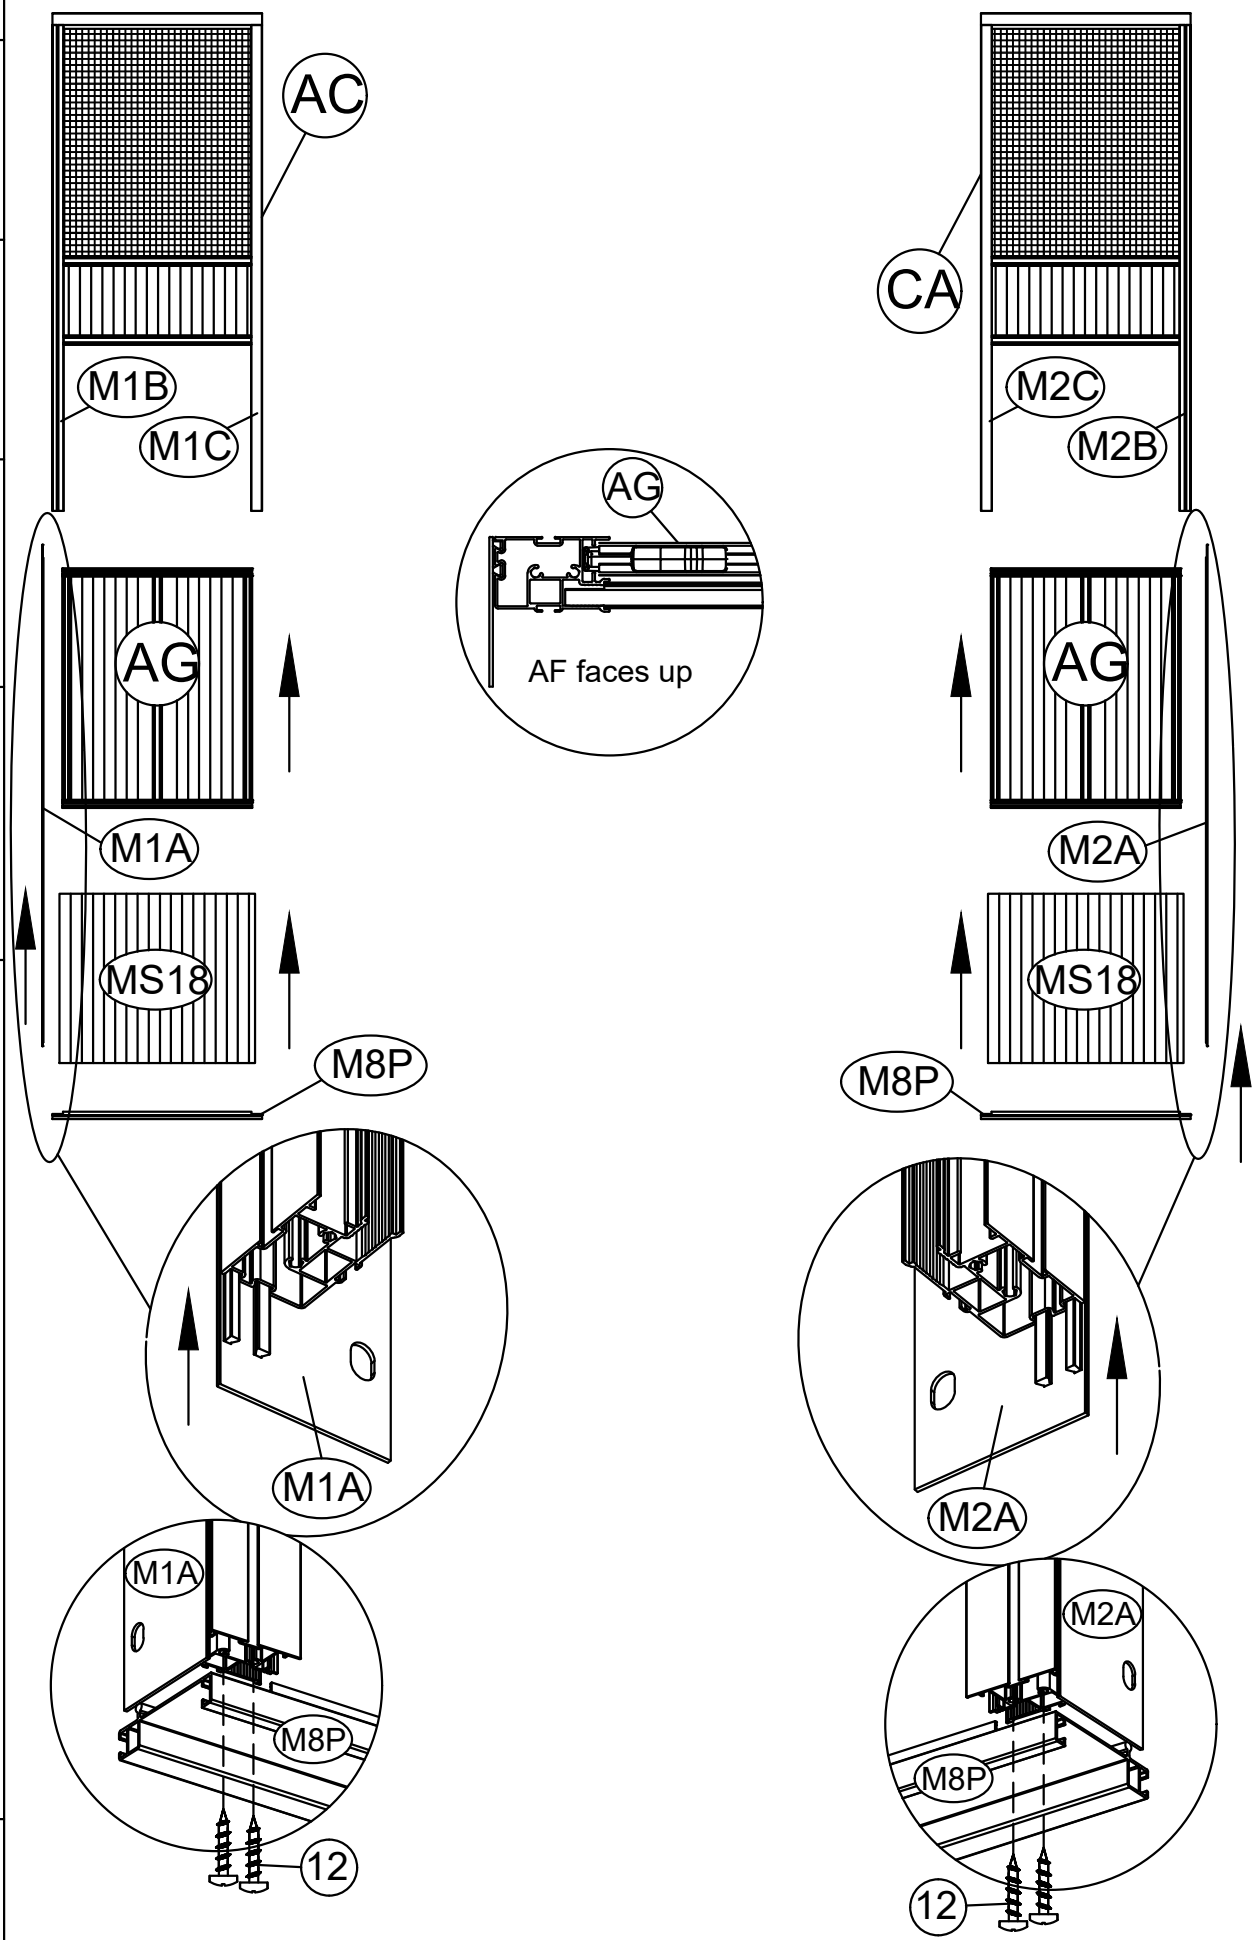


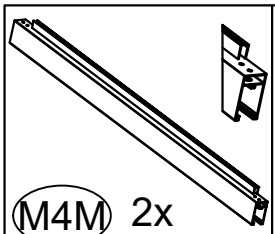

M4M 2x

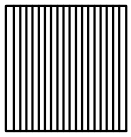

MS4 2x




M4x20

12 16x




MD5 4x



MD4 4x





4-1 4x





M4x35


13 4x

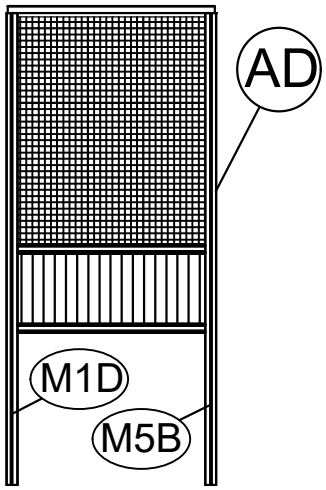

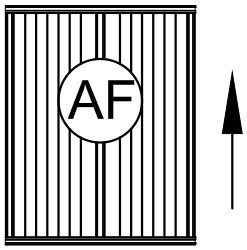


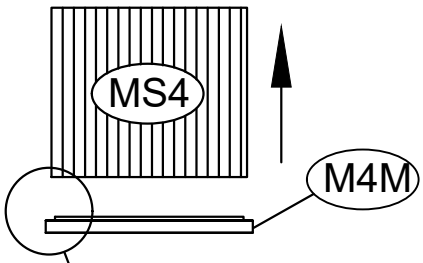


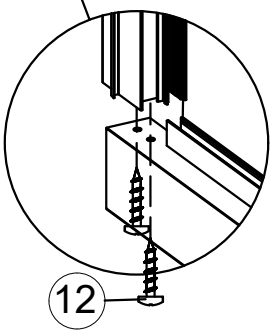


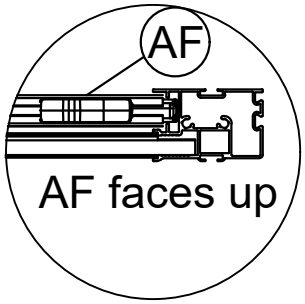

AD 2X

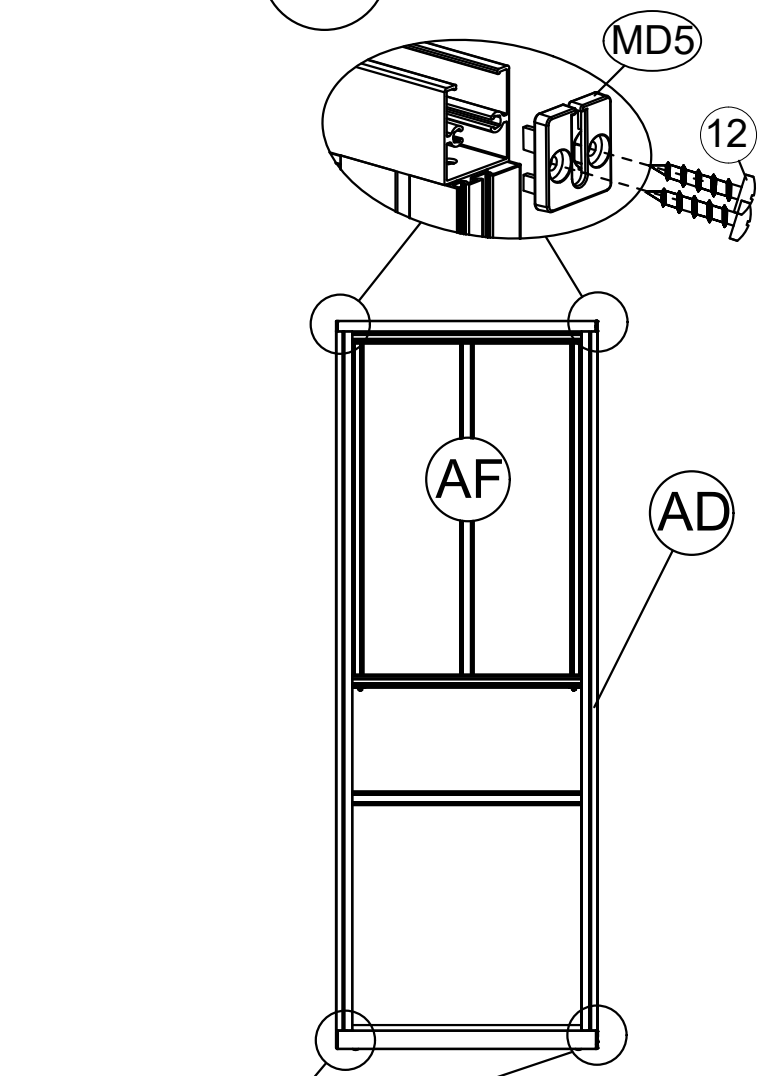

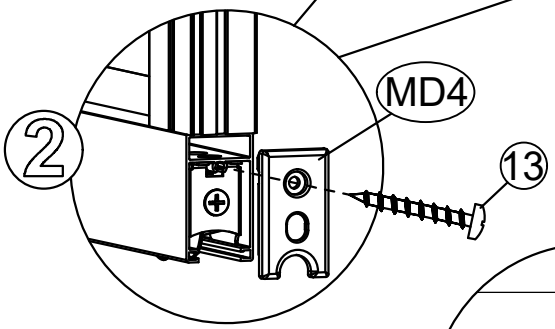

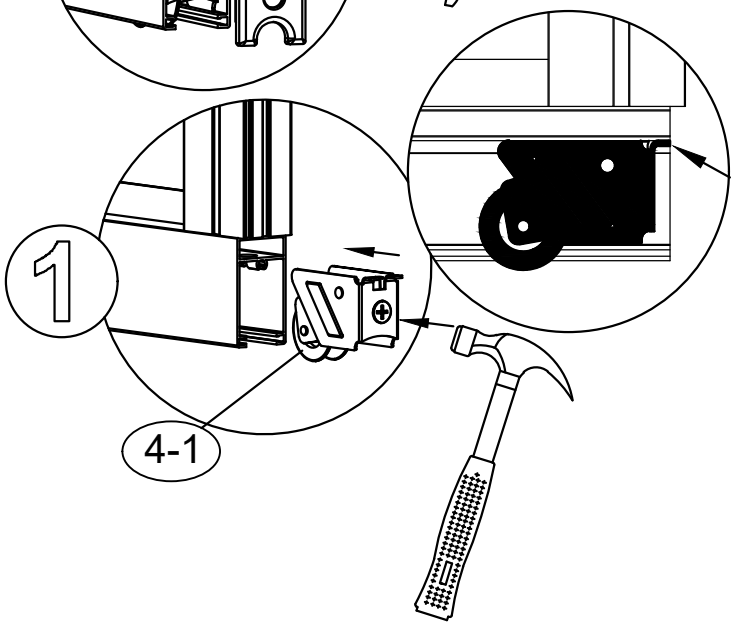


Tap gently so that the pulley is flush with the profile.


<26>

Door frame DA, AE, and EA installation follow pages 34 to 35.


M4M	2x
MS4	2x
MD4	4x
MD5	4x
4-1	4x
12	16x
13	4x

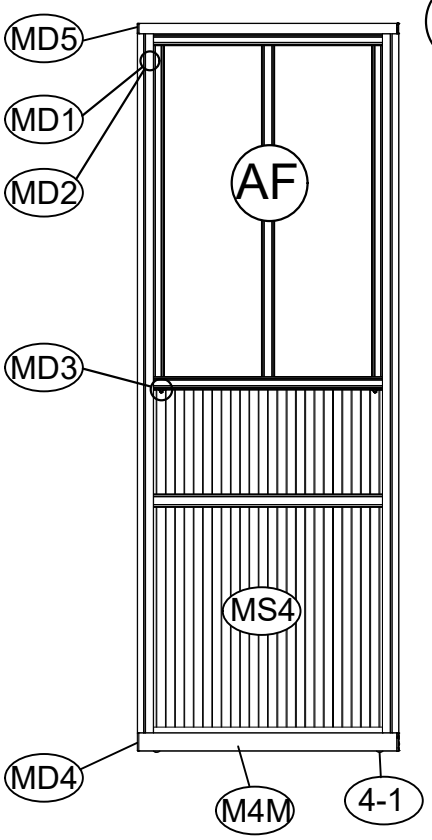

M7M	4x
MS19	4x
MD4	8x
MD5	8x
4-1	8x
12	32x
13	8x

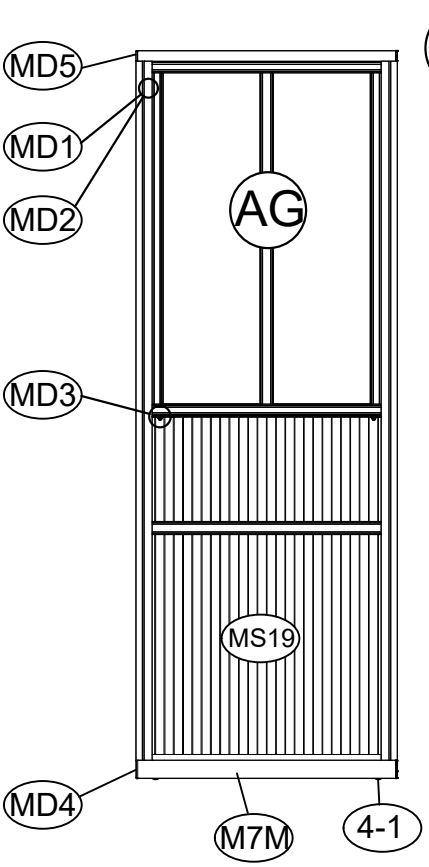


M7M	4x
MS19	4x
MD4	8x
MD5	8x
4-1	8x
12	32x
13	8x

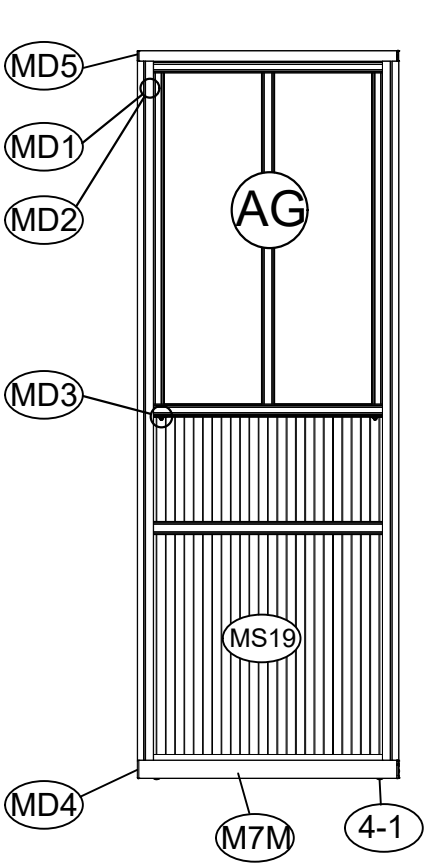

Component AD is symmetric DA, AE is symmetric EA.




5-1 2x

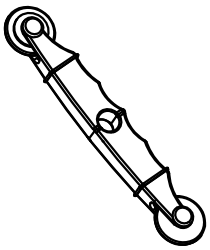


24 1x


<27> Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

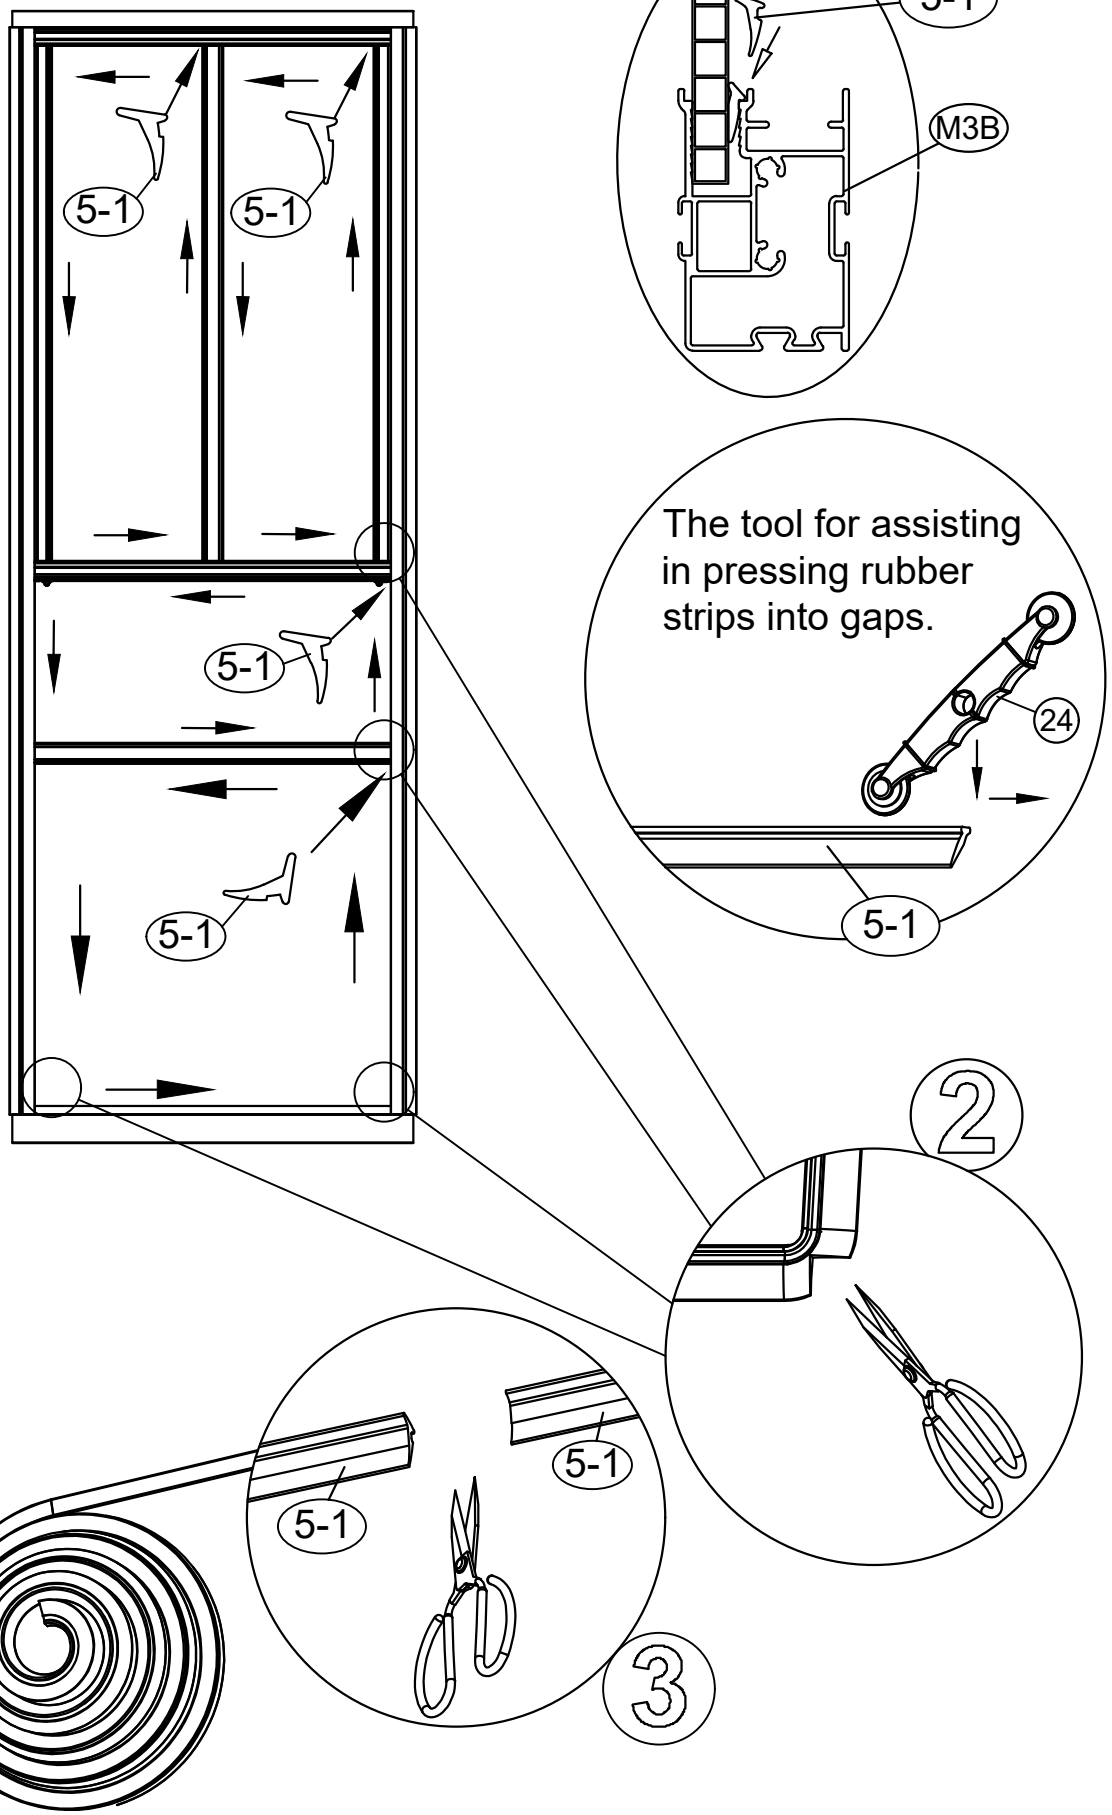


All door frames, AB, BA, AC, CA, AD, DA, AE, EA, follow this method.

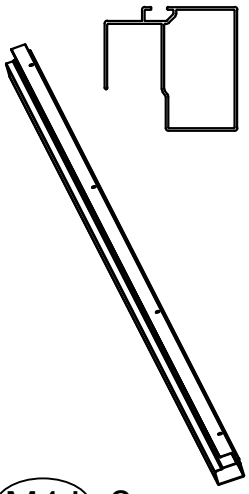

M4J 2x

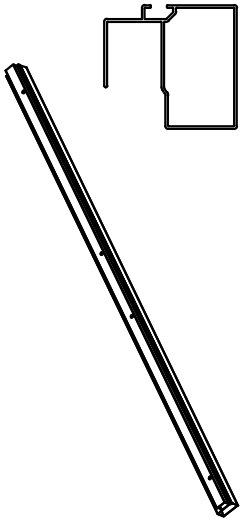


M7J 4x



6.2*11*15

3-1 24x



M6


11 24x





M6x15


1 24x

38

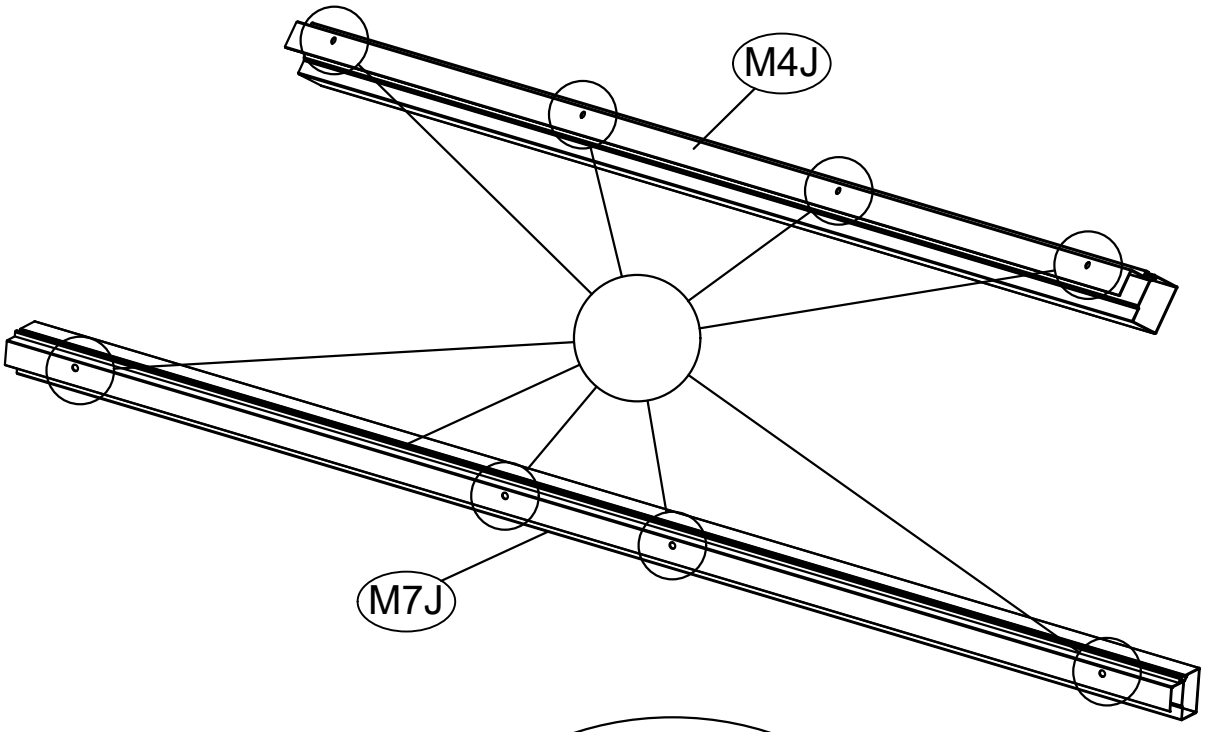


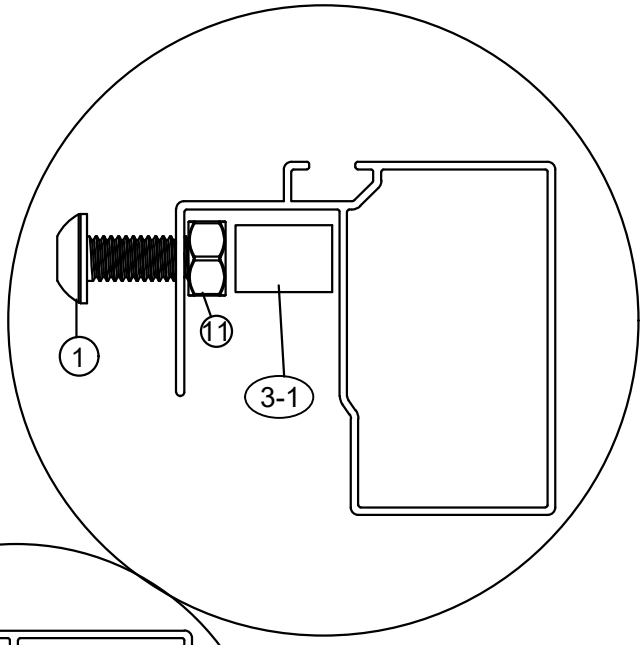

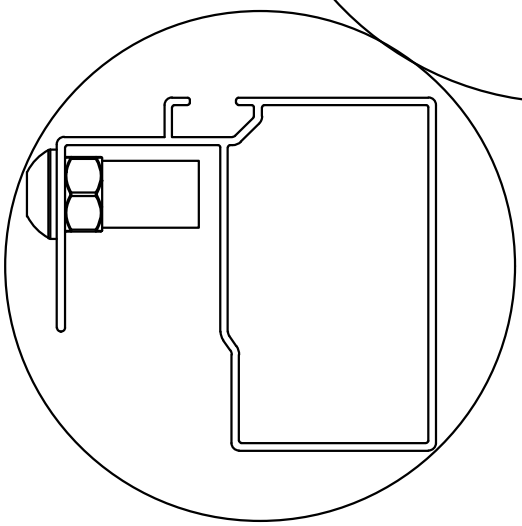

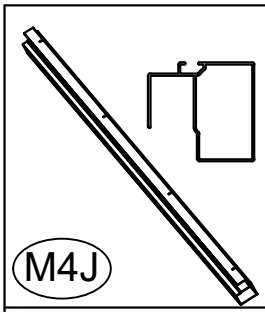

M4J

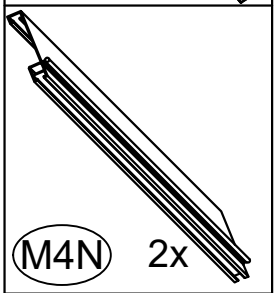

M4N 2x




15 12x




M5*6

16 48x


<29>

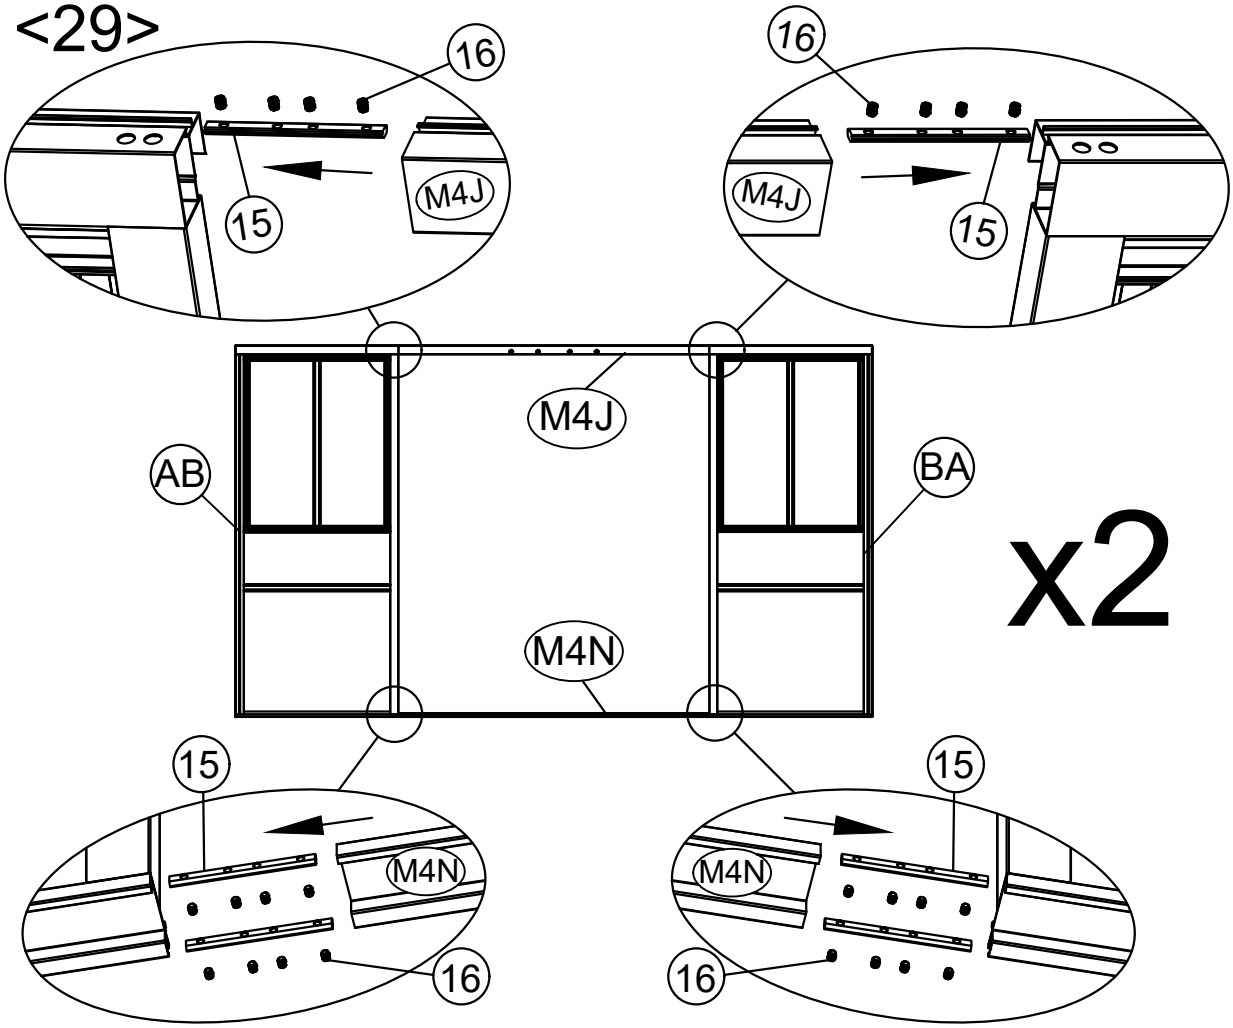

x2

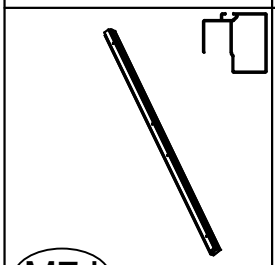

M7J

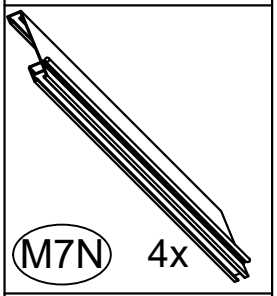

M7N 4x




15 24x




M5*6

16 96x

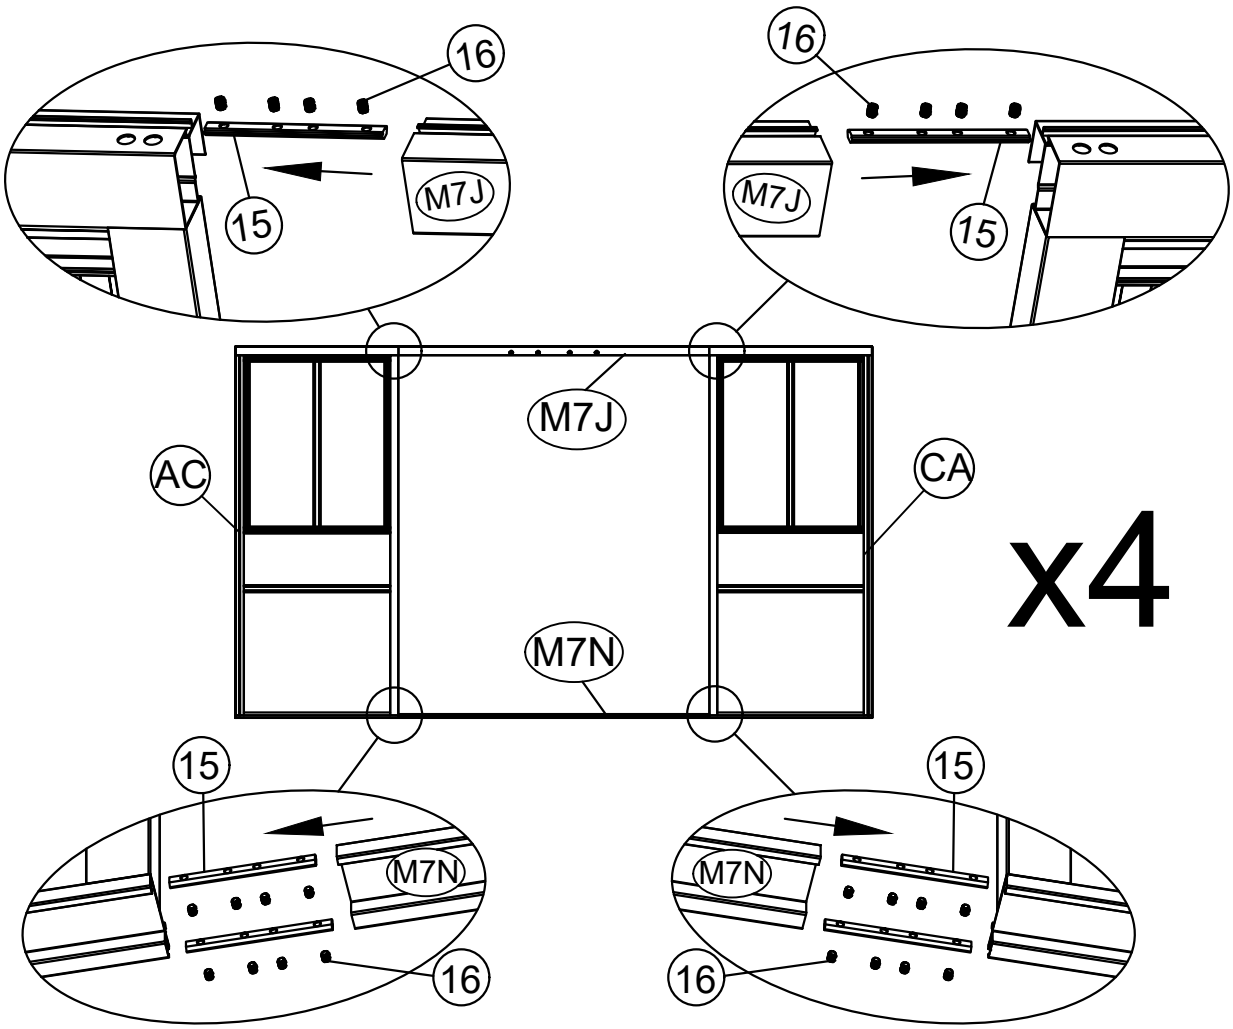

x4

<30>

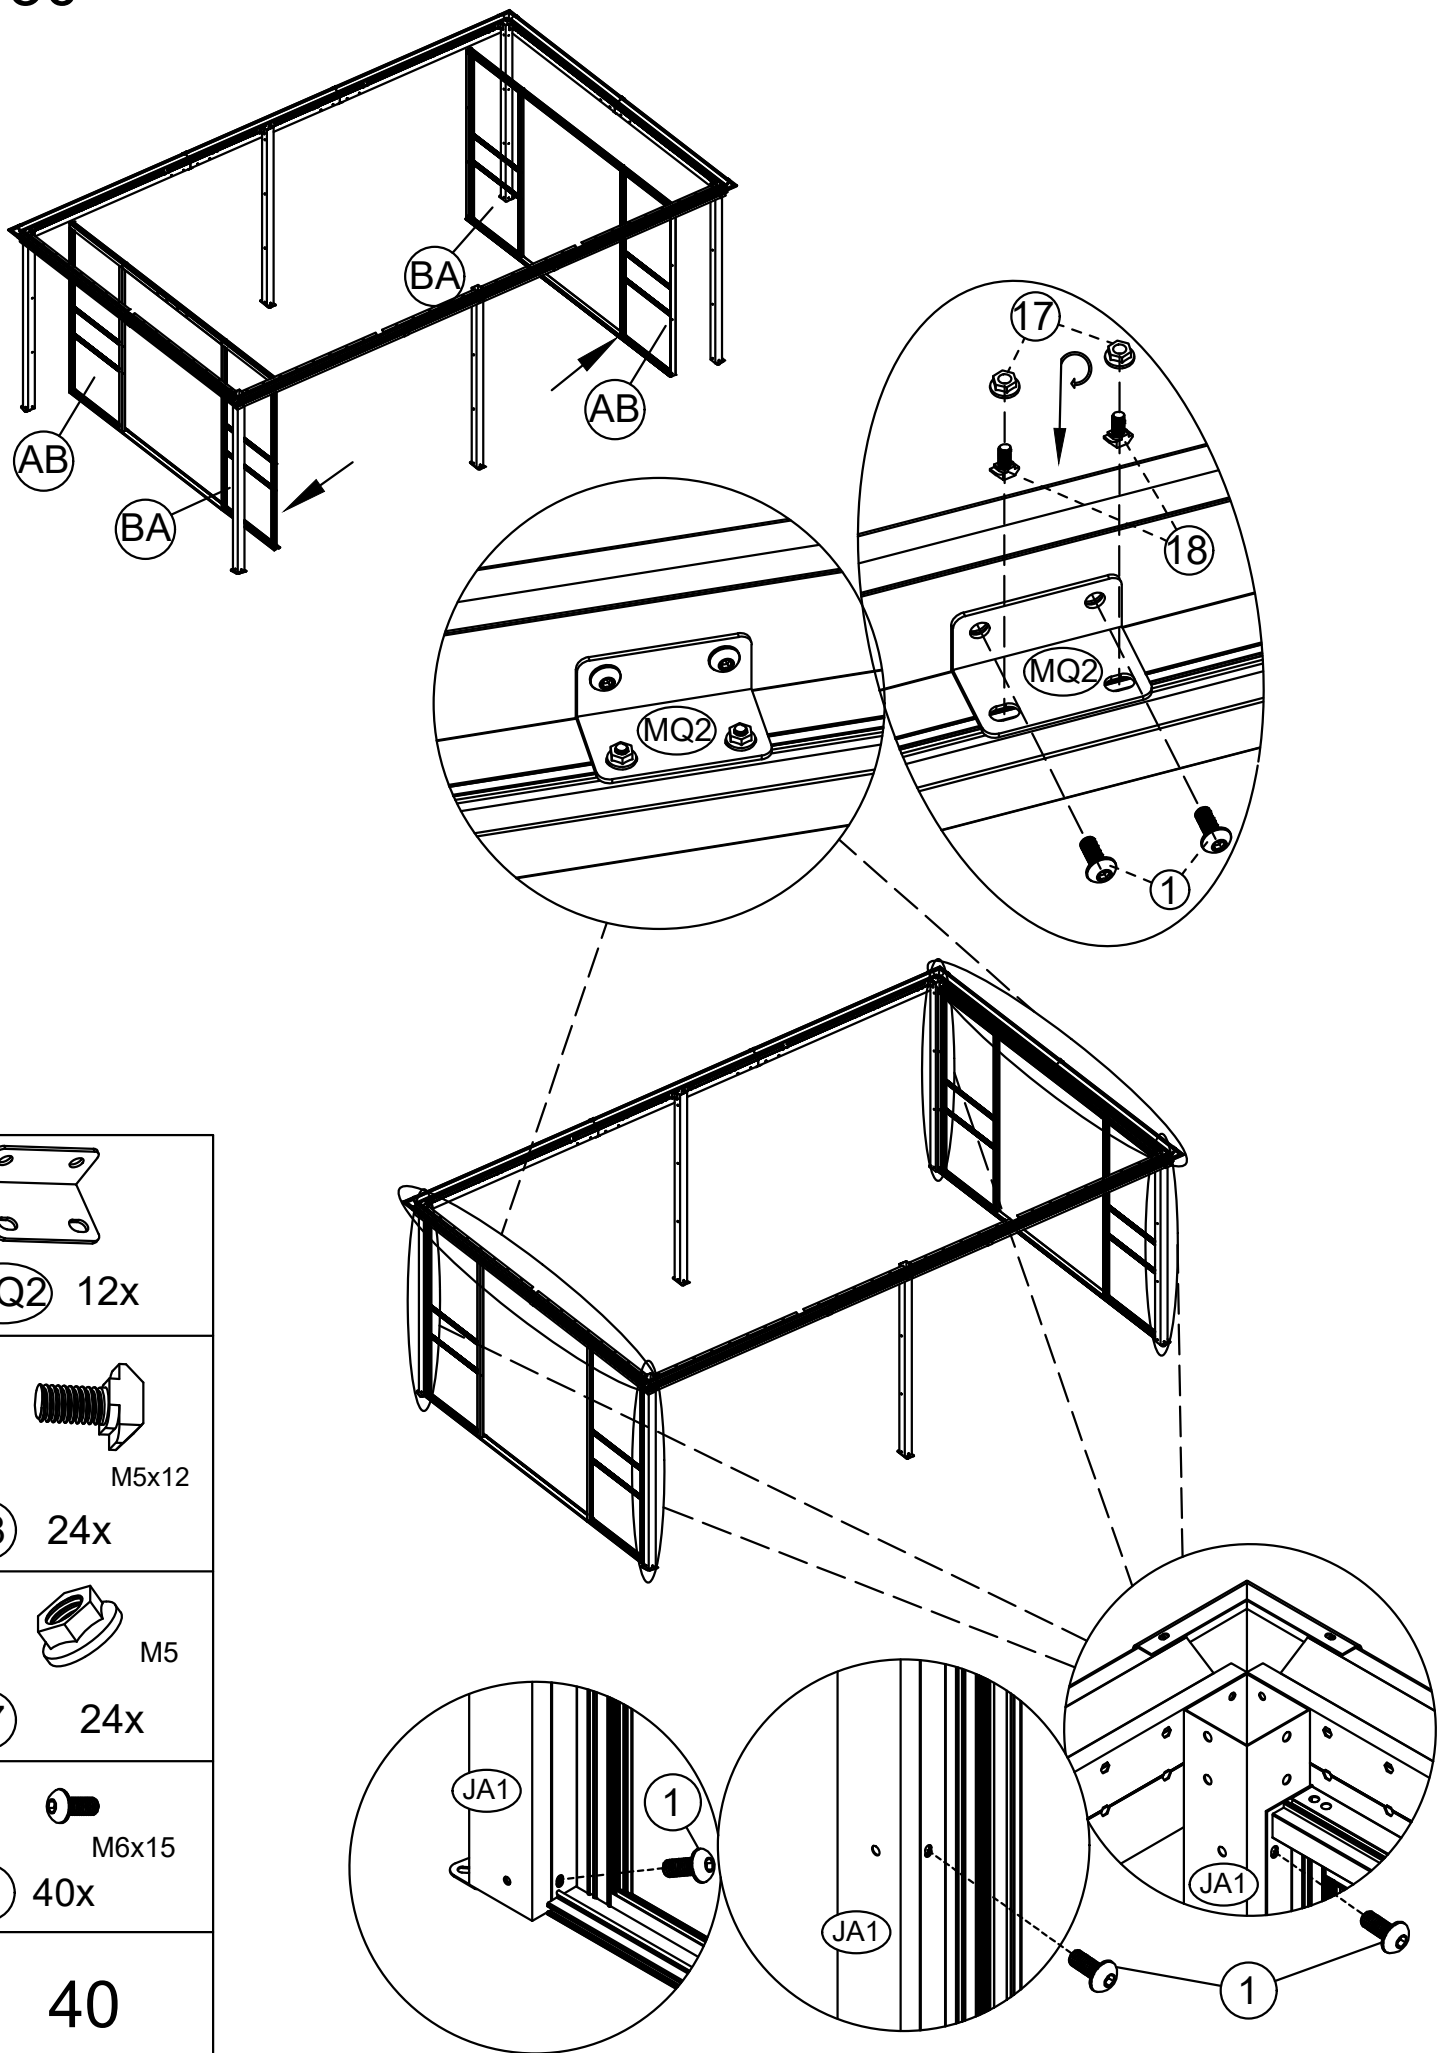

MQ2 12x

M5x12

18 24x

M5


17 24x


M6x15


1 40x


40


<31>

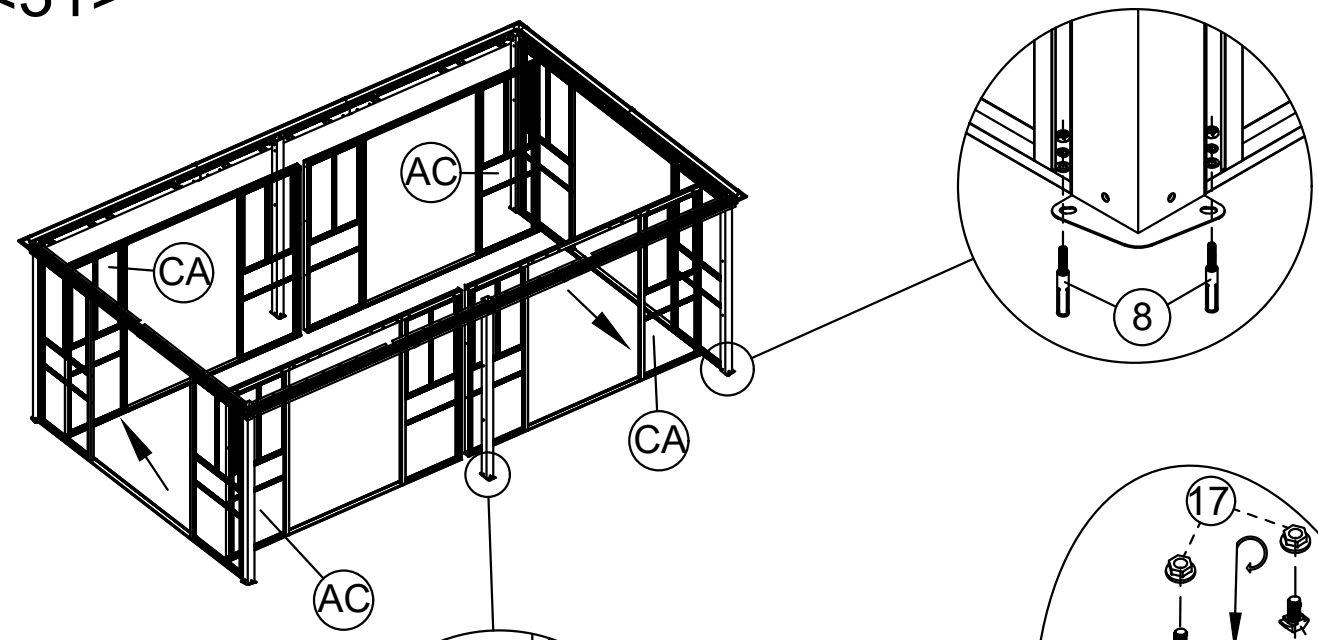


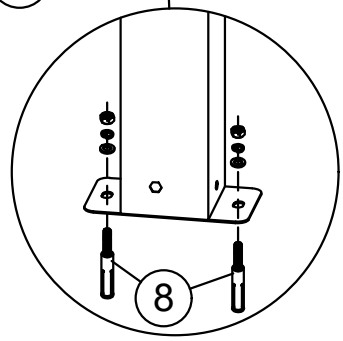

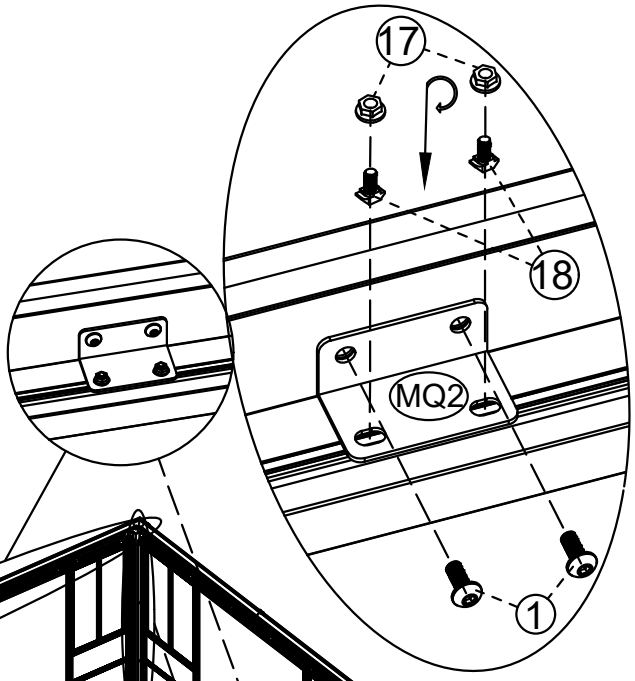


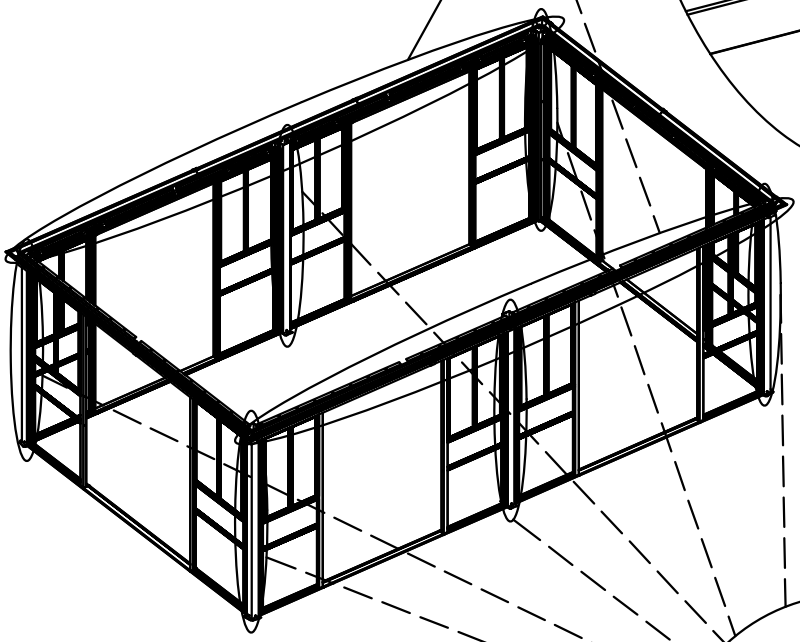

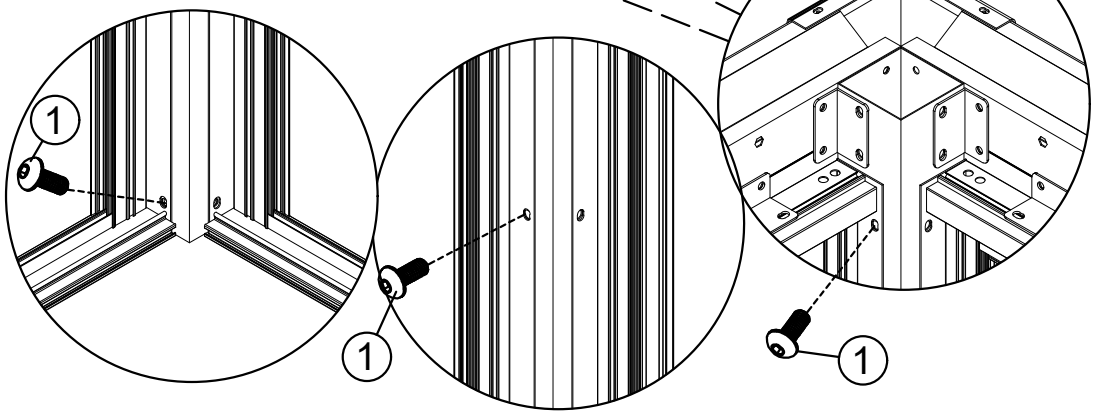


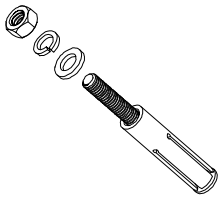

8 12x



MQ2 24x



M5x12

18 48x



M5


17 48x





M6x15


1 80x

41

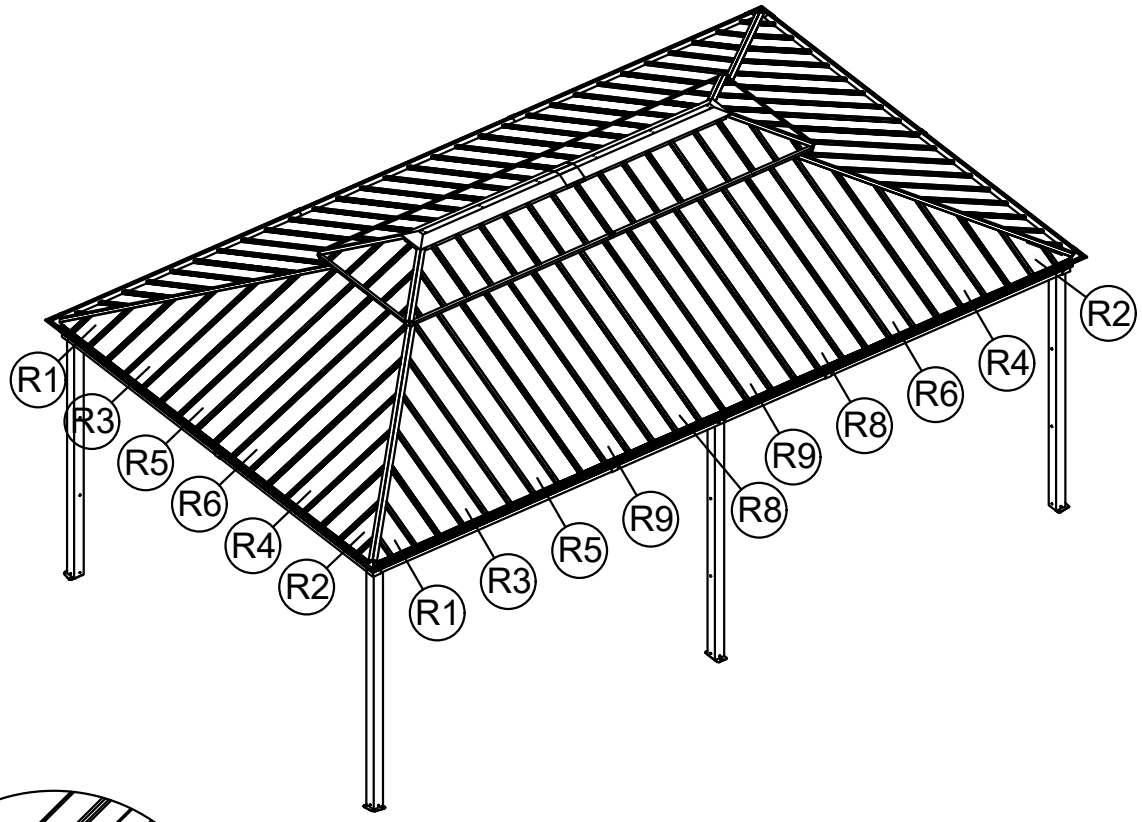

R1
R3
R5
R6
R4
R2
R1
R3
R5
R9
R8
R9
R8
R6
R4
R2

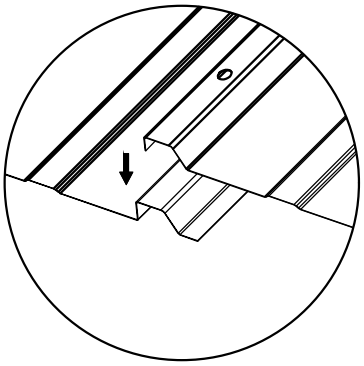

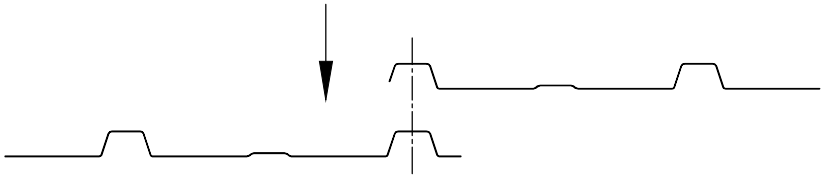


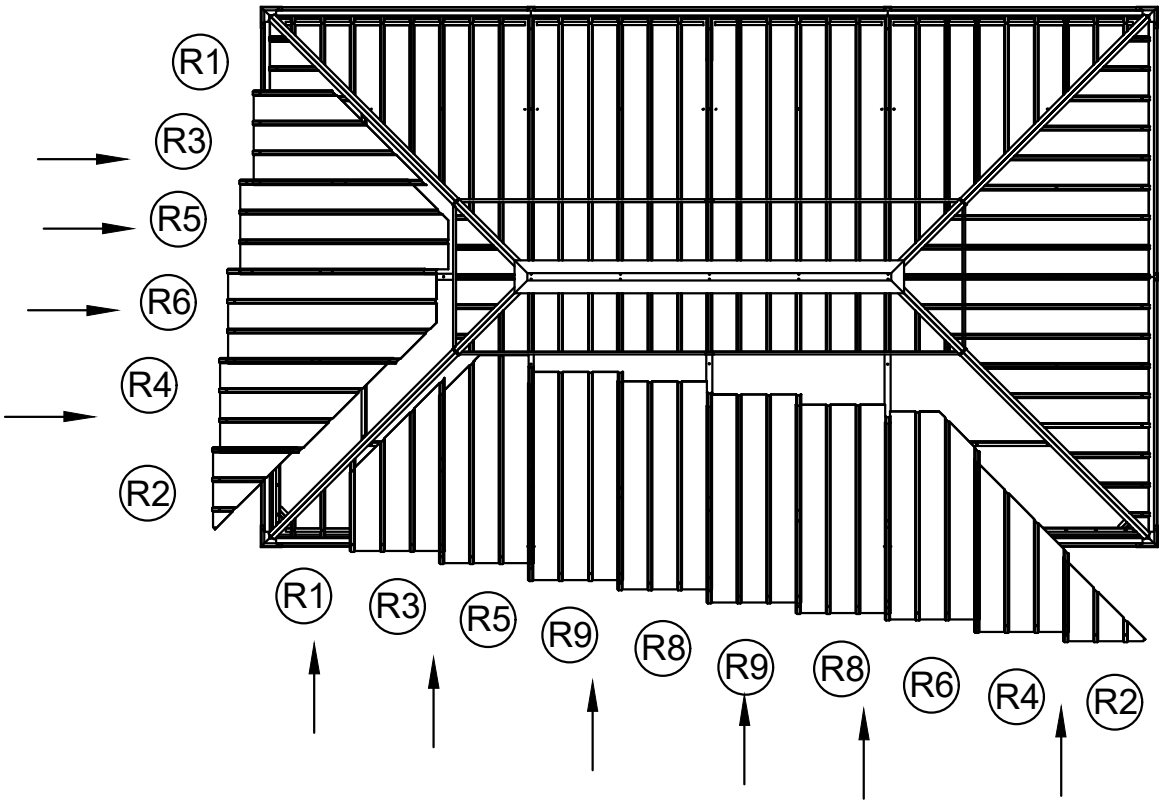
R1
R3
R5
R6
R4
R2
R1
R3
R5
R9
R8
R9
R8
R6
R4
R2

<33>

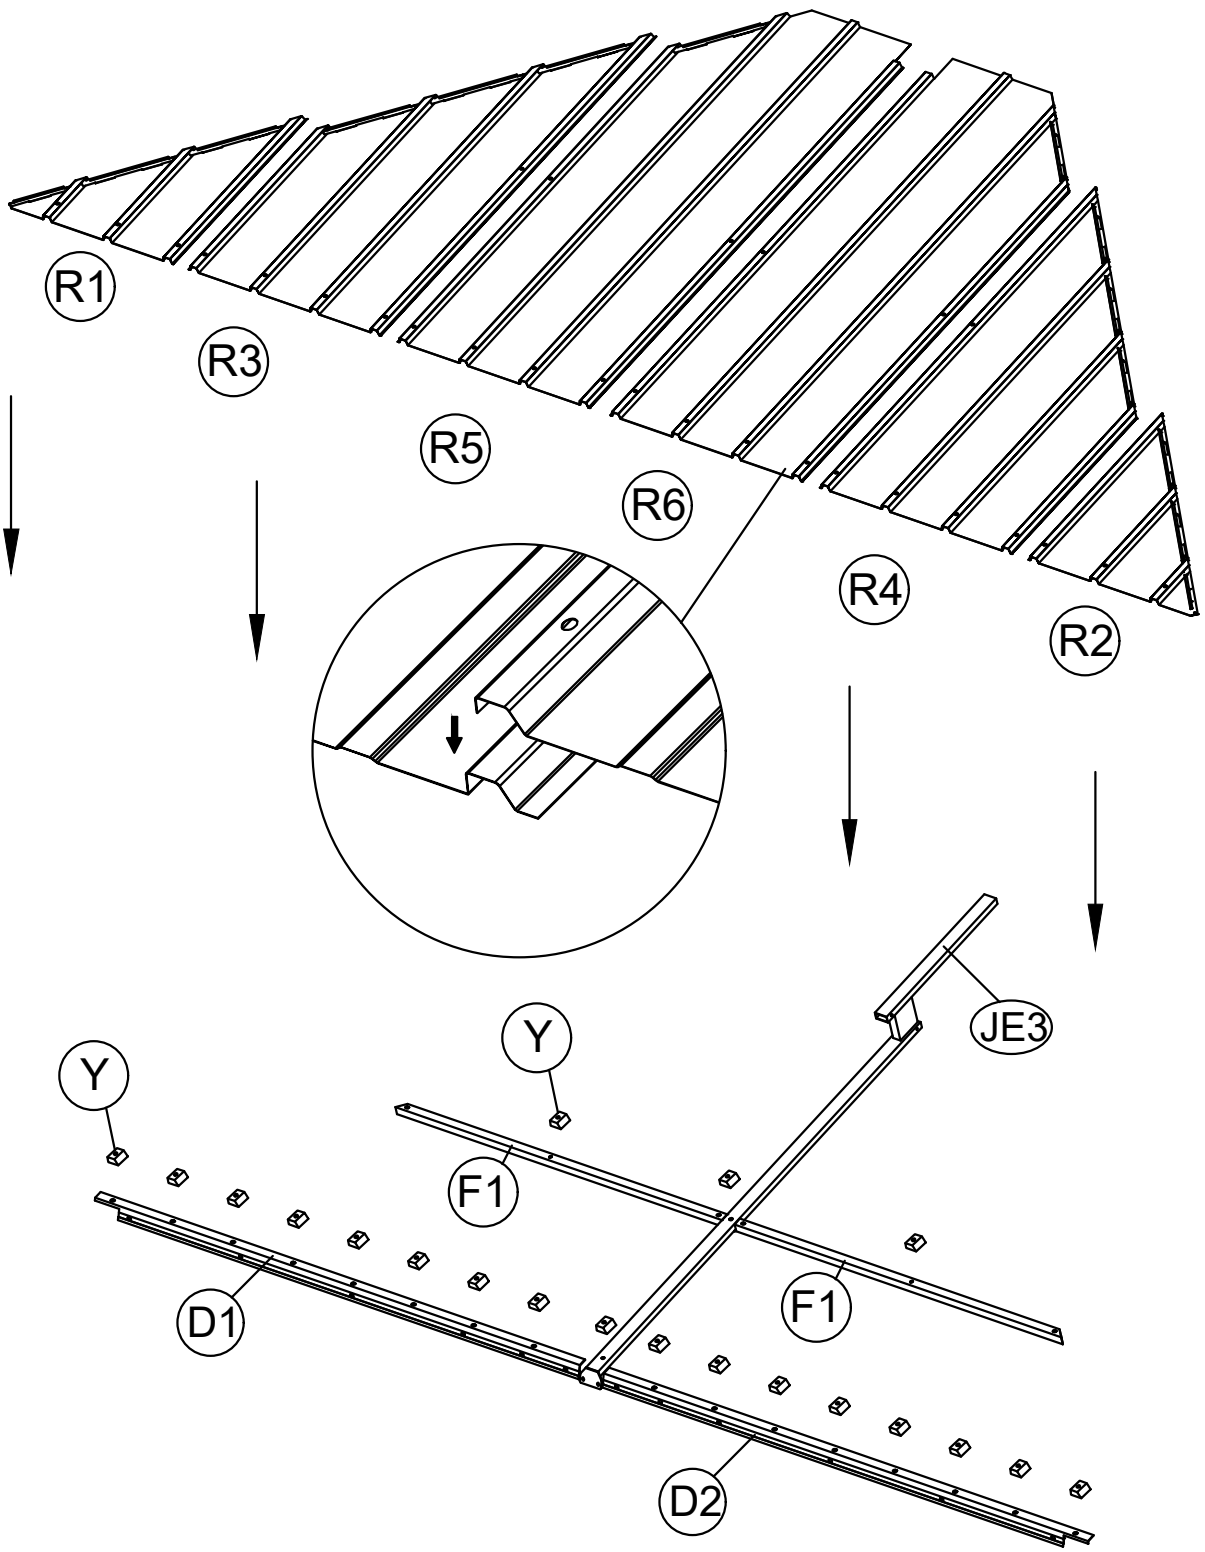


<34>

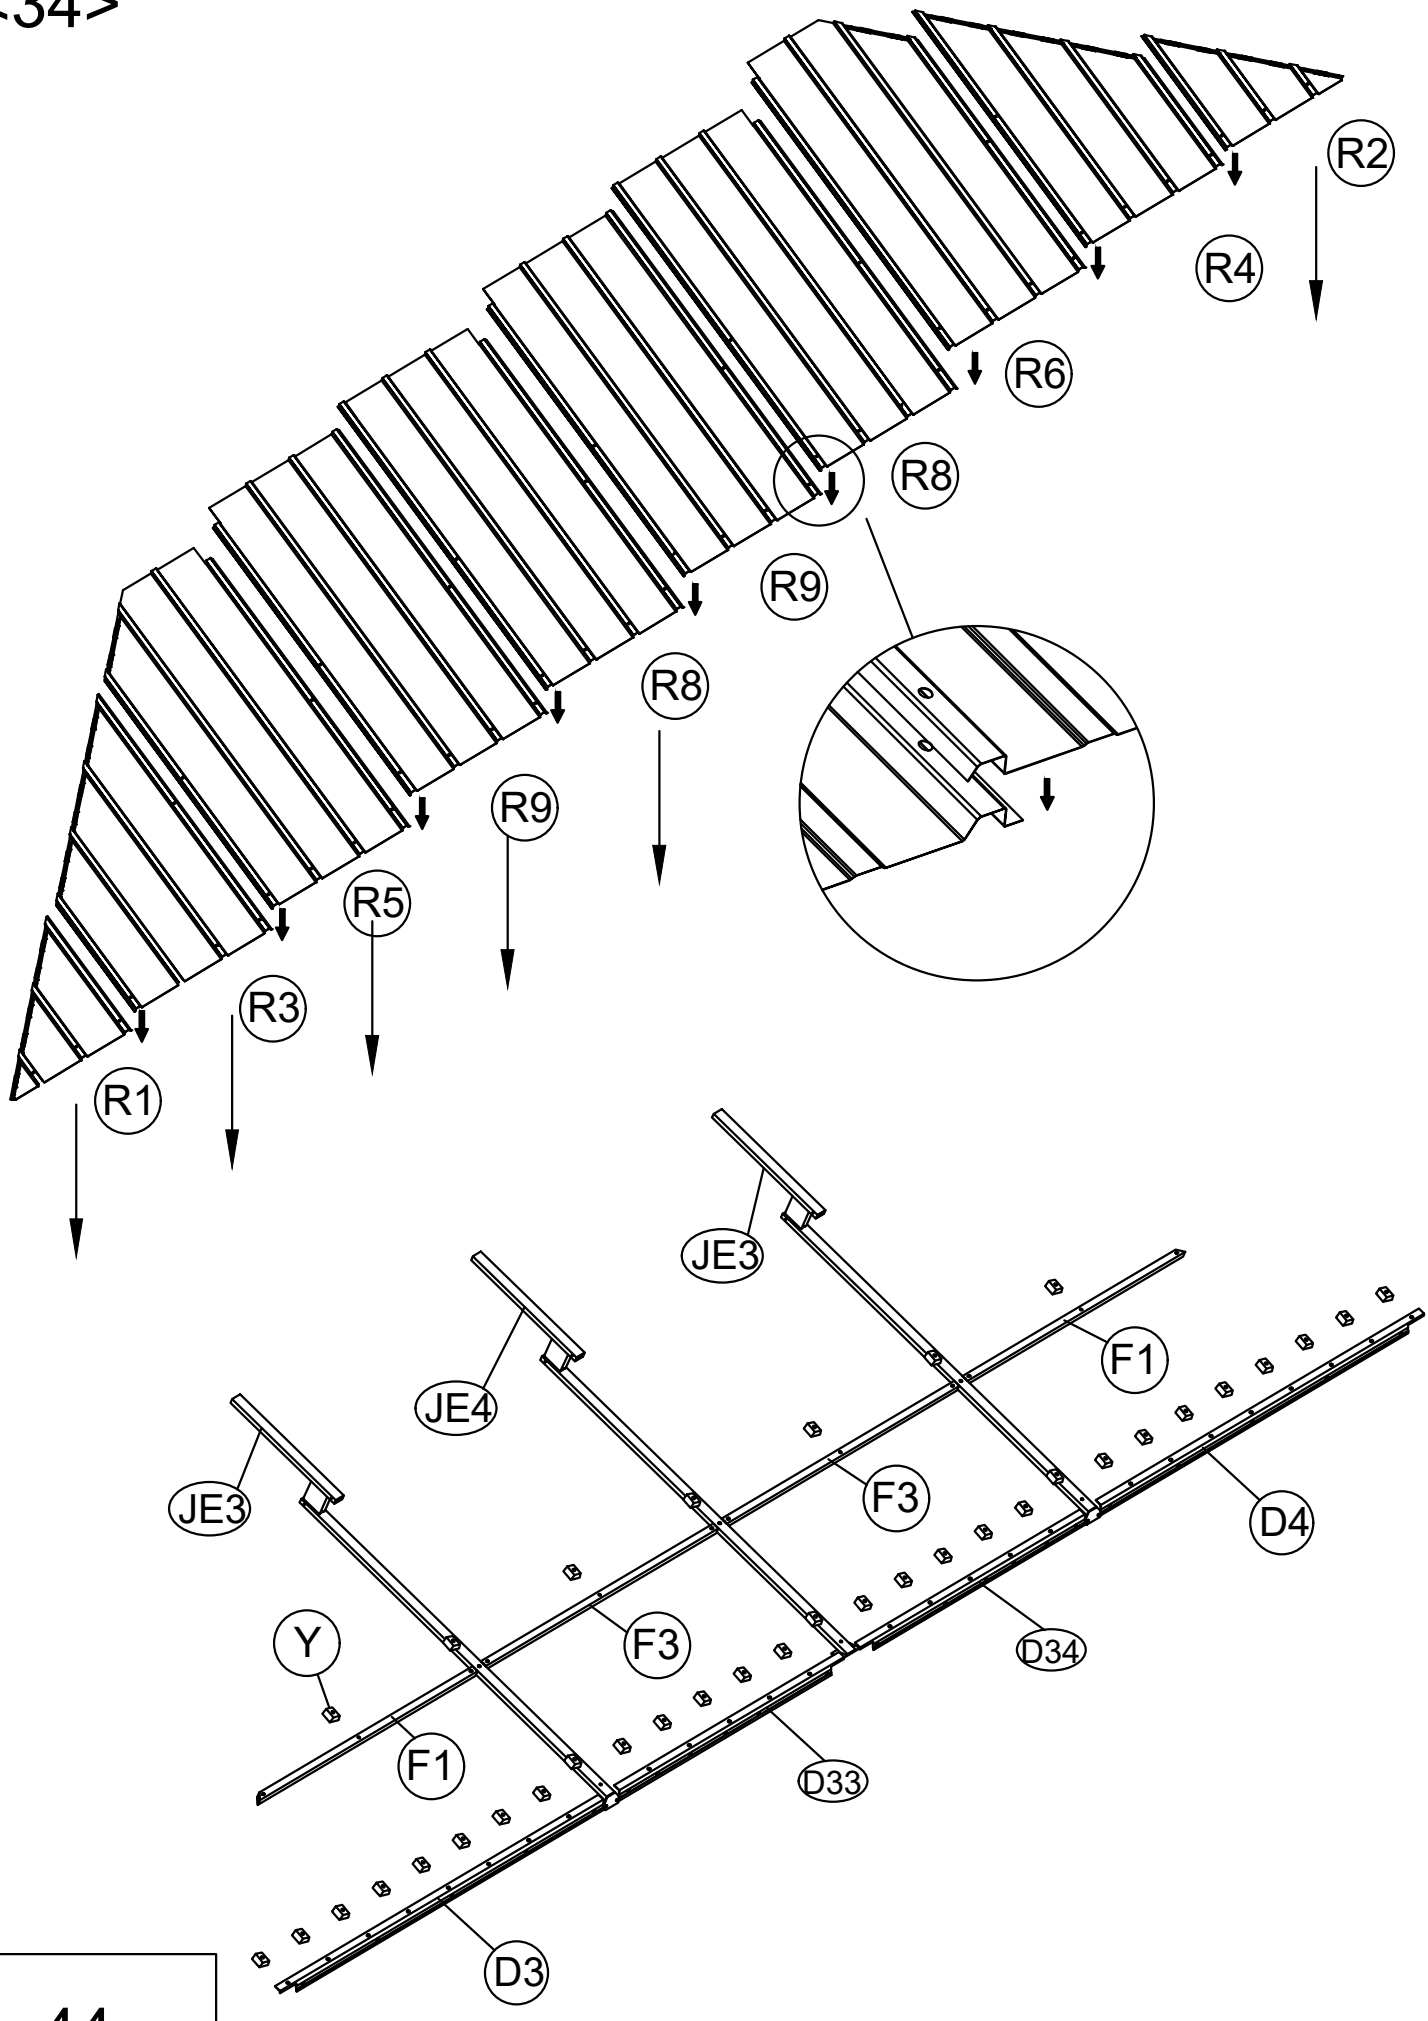



M6x25

2 100x




M6x50

5 12x




M6

10 96x



M6

19 112x




Rubber Gasket


23 112x




Y 112x

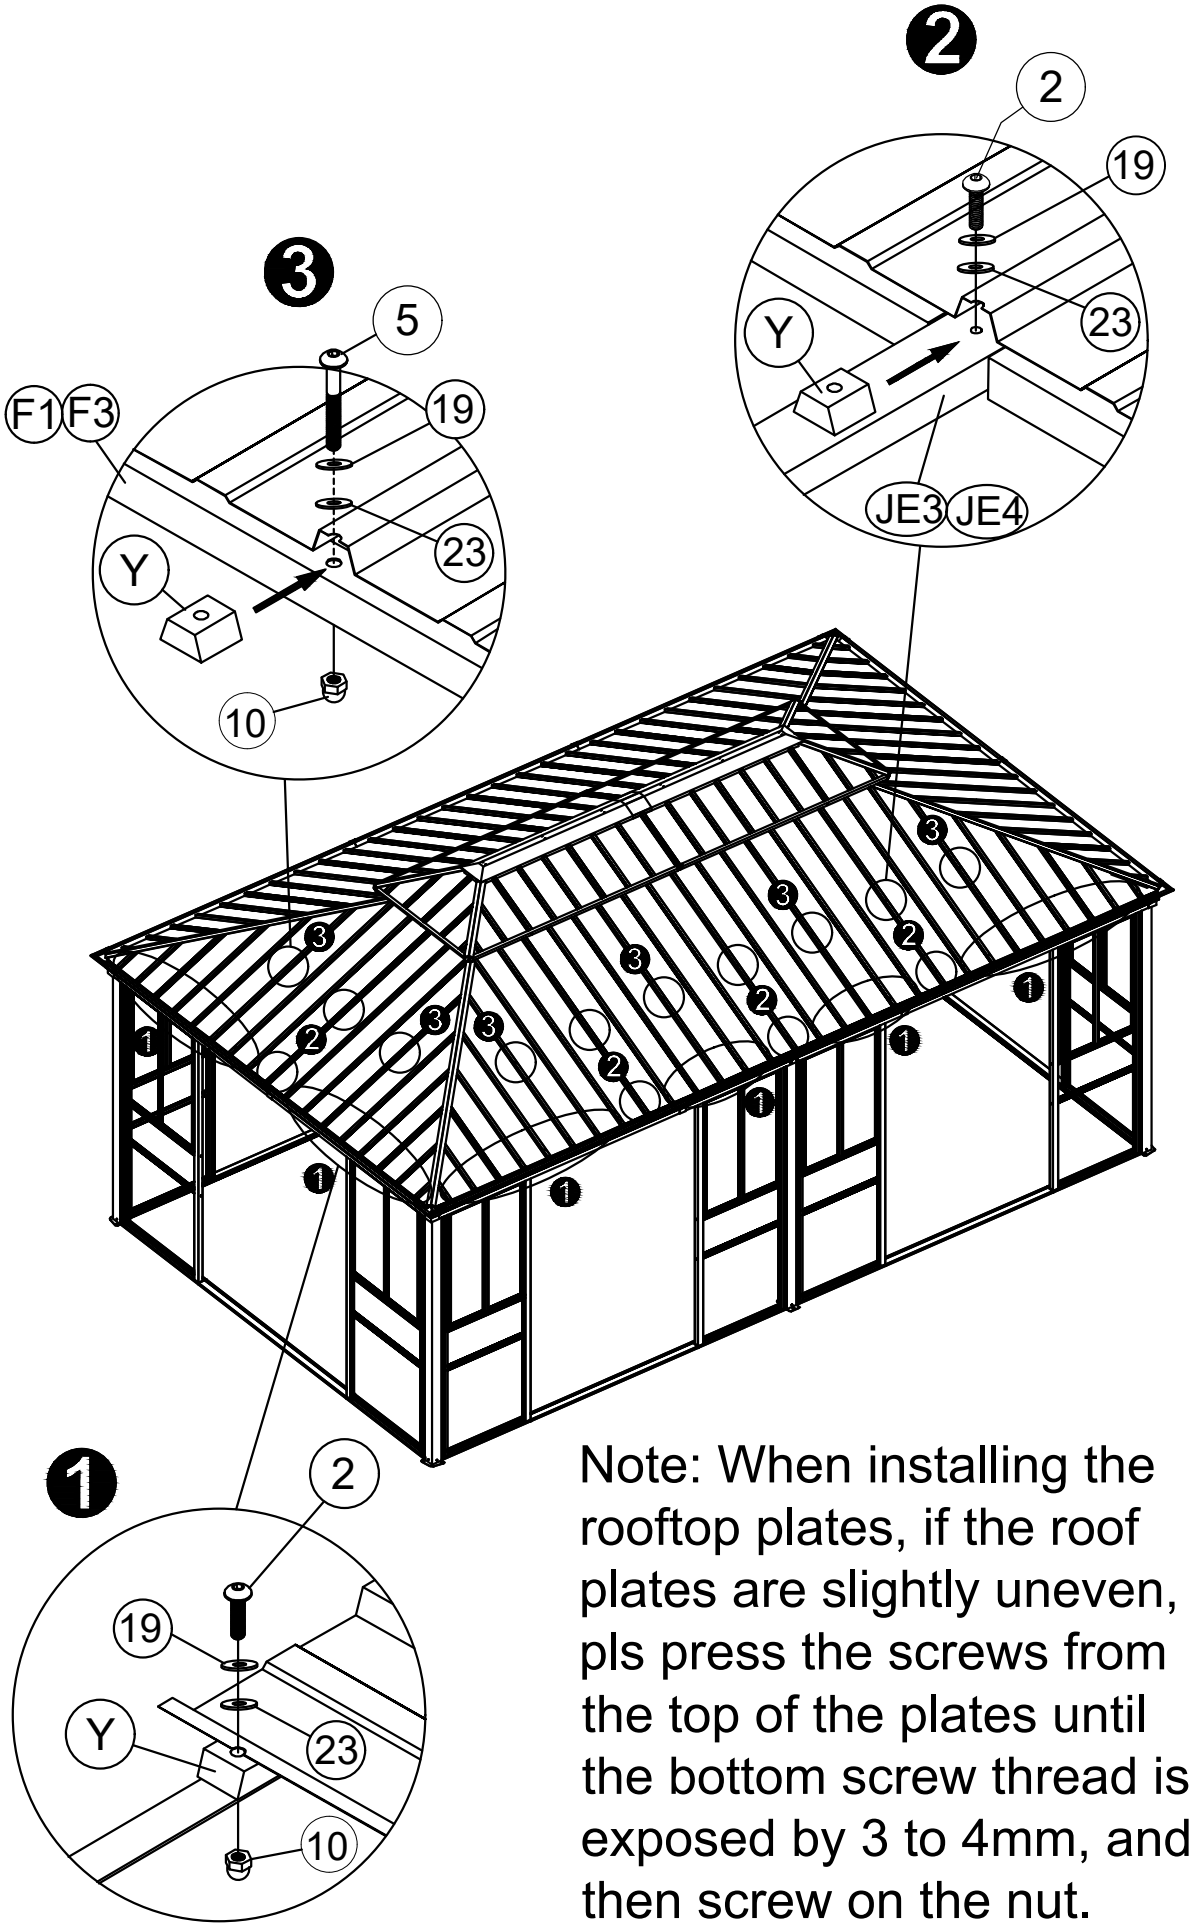


Note: When installing the rooftop plates, if the roof plates are slightly uneven, pls press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.

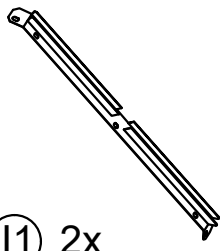

I1 2x

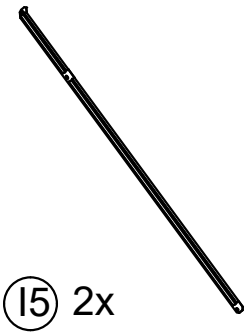


I5 2x

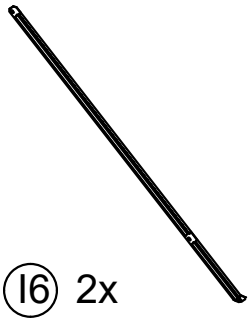


I6 2x




N 4x




V1 2x

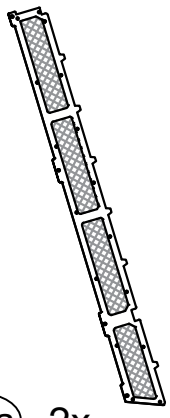

V4a 2x

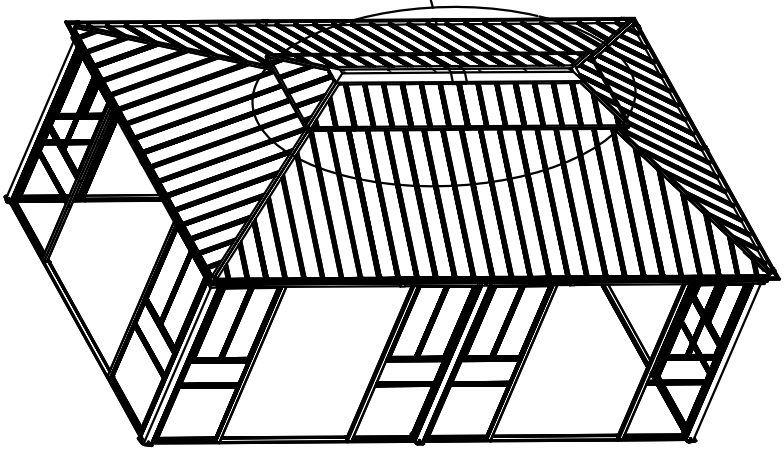

46



V4b 2x



M6x15

1 12x




M6x10

7 12x



10 12x M6

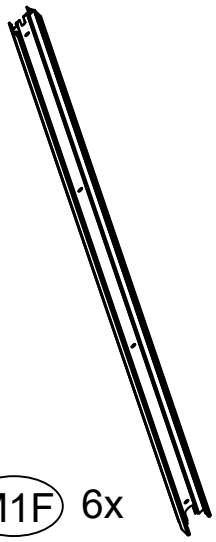

M1F 6x


ST 4.8x12


③ 24x

<37>

DA 2x EA 4x

Pay attention to the installation direction of the left and right sides of the door.

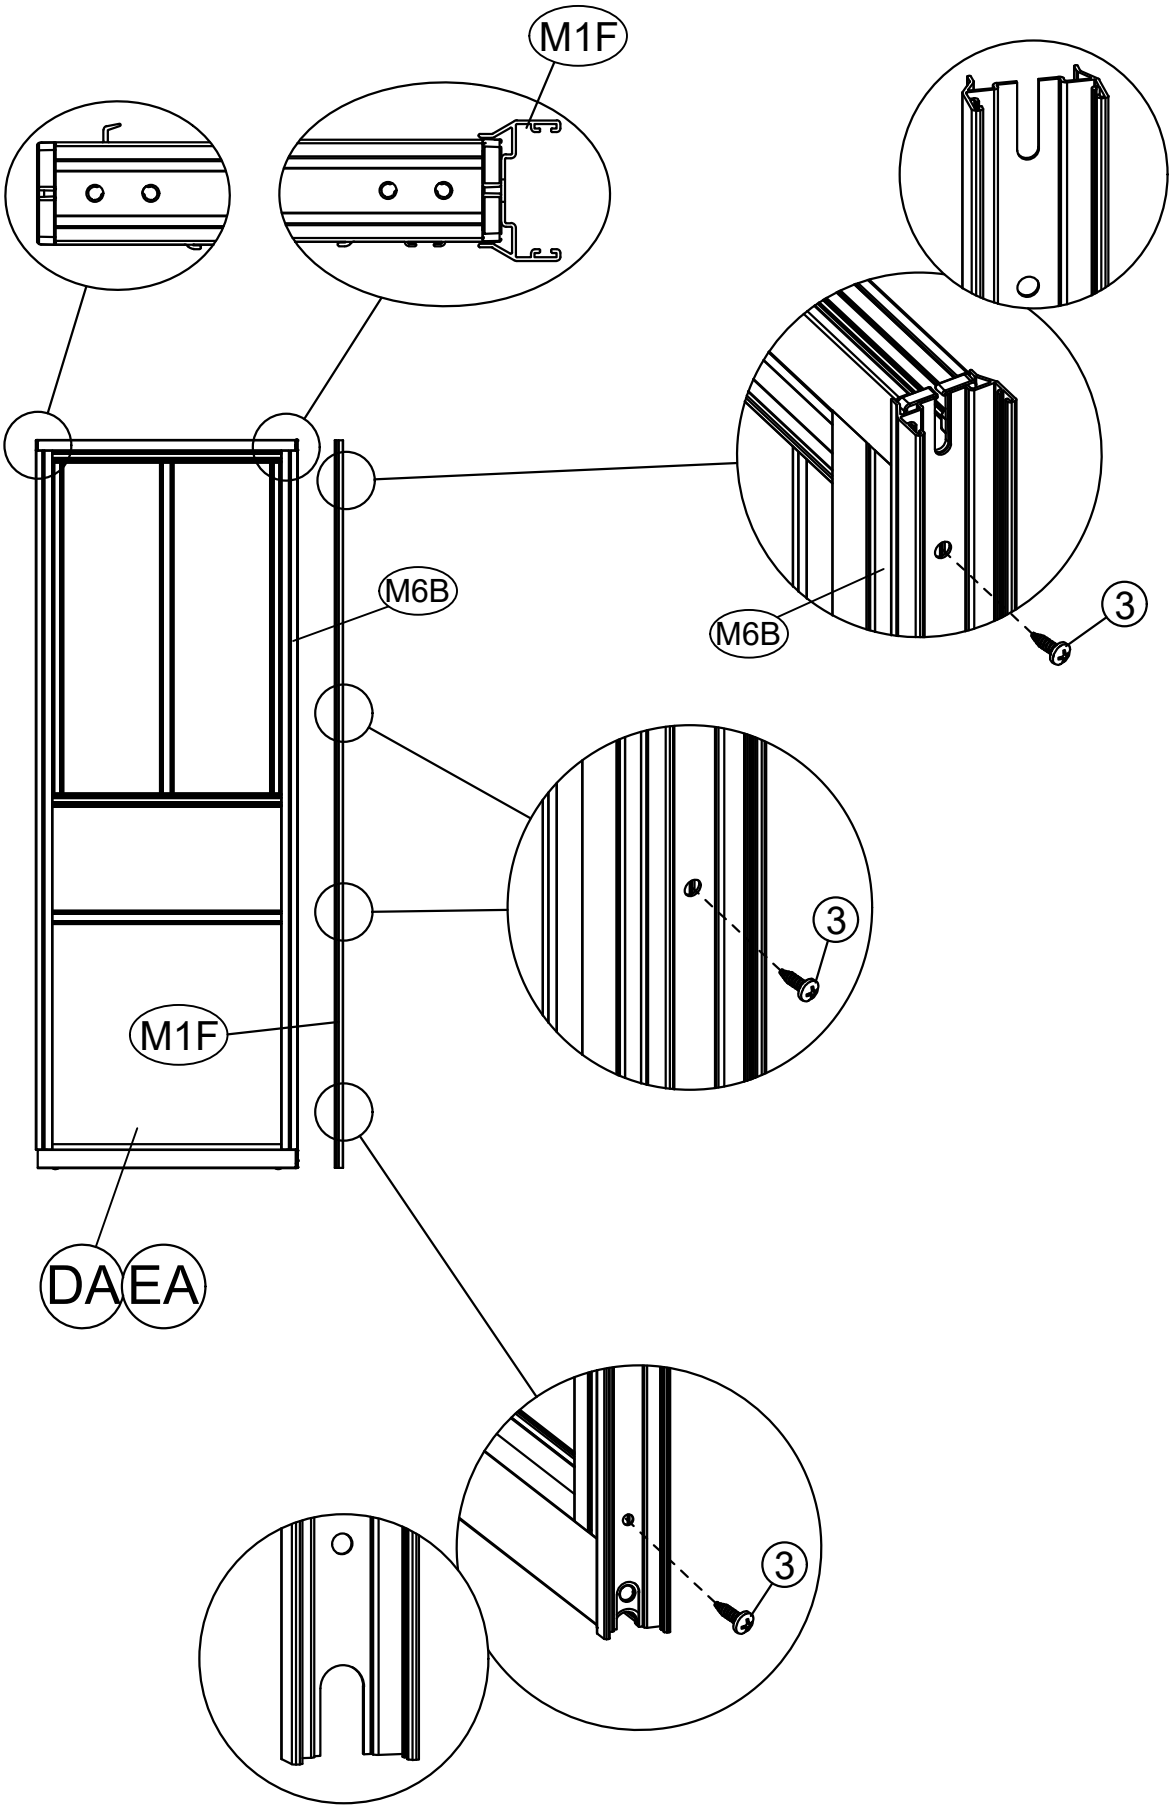




U1 6x



U2 6x




U3 6x



M4x12

26 6x



U4 6x




M5x15


25 24x

48


DA 2x EA 4x

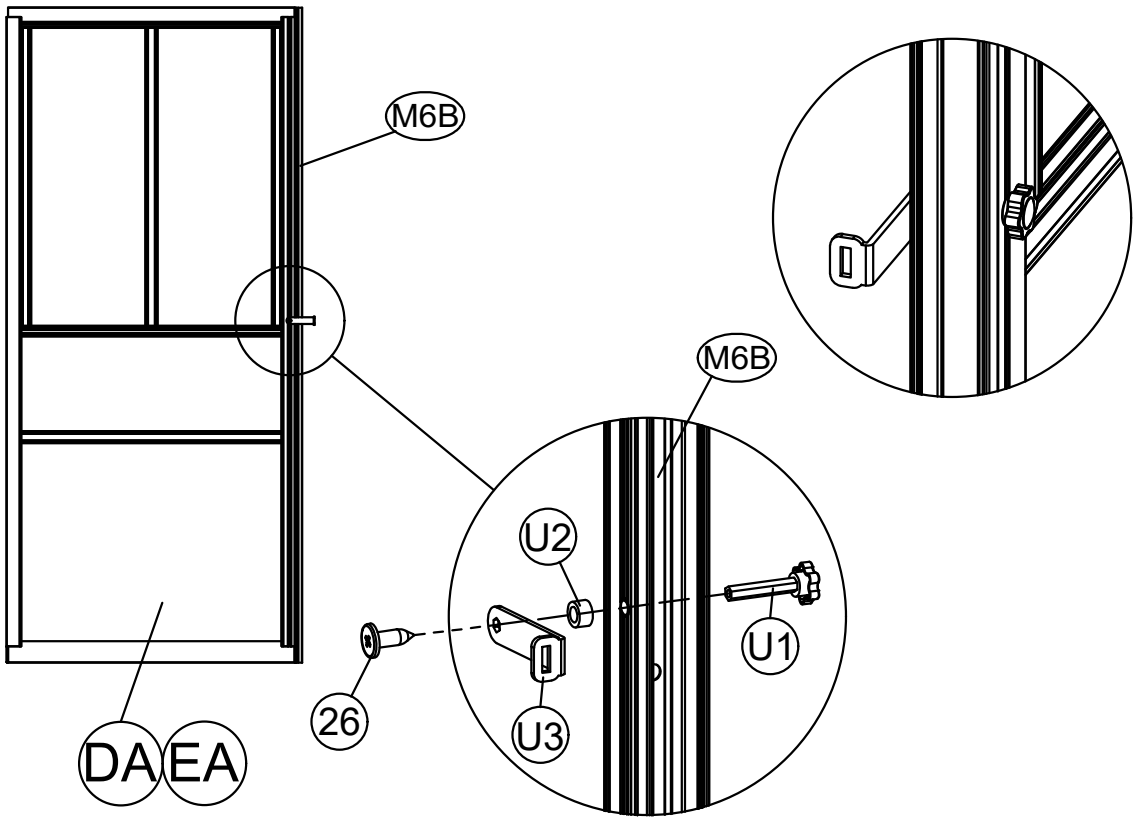


AD 2x AE 4x

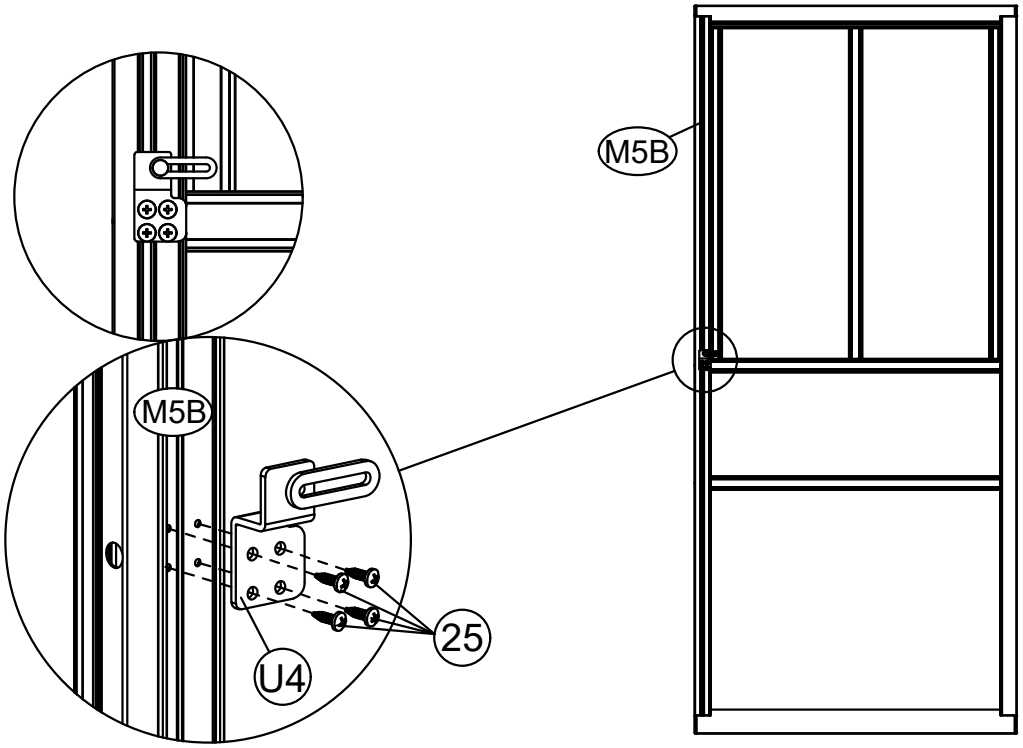

<39>

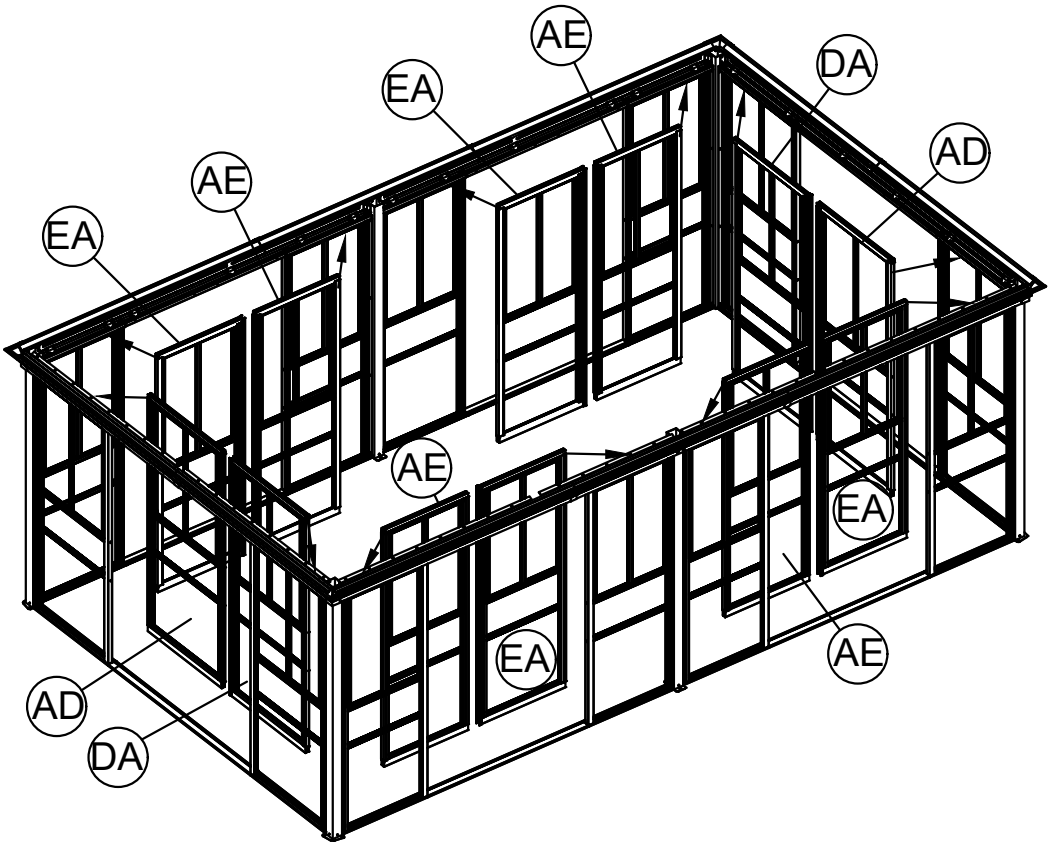



Carefully align the door and gently insert it from the inside into the upper slot.

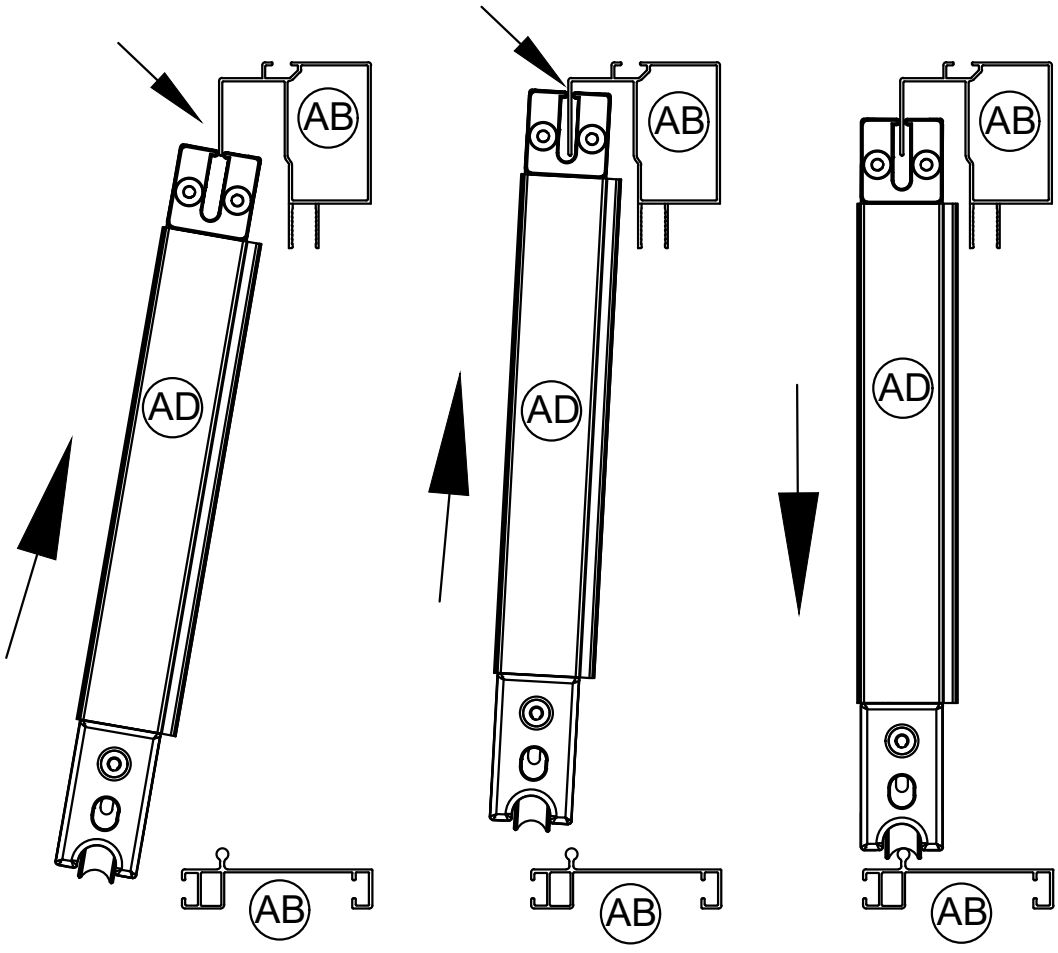

Repeat the previous steps for other components.

<40>

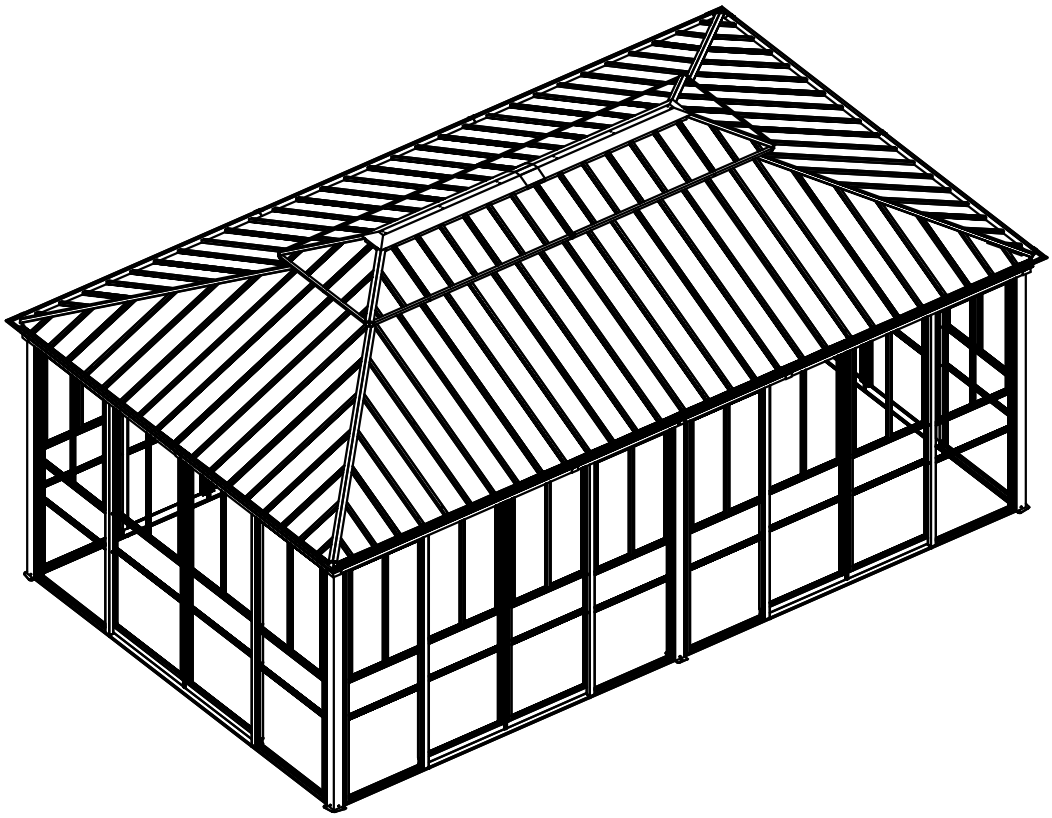

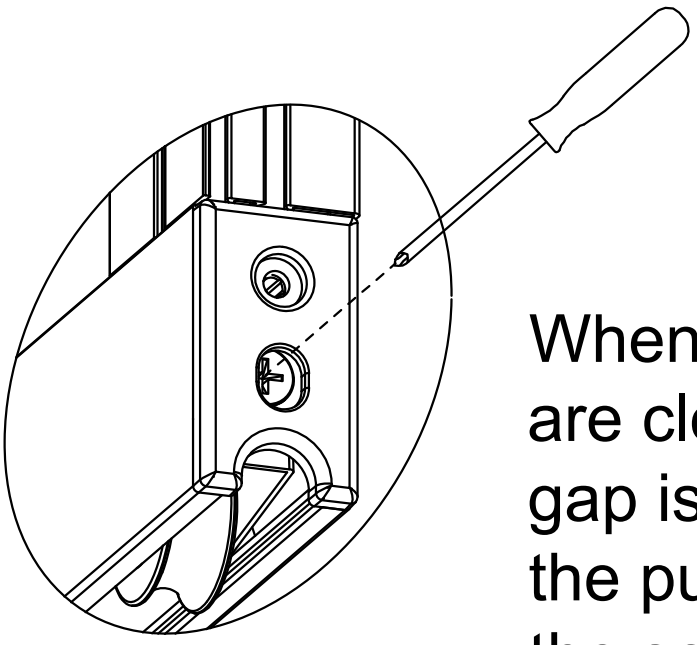

When the two sliding doors are closed and an obvious gap is found, the height of the pulley can be adjusted by the screw on the pulley.

<41>

