




ASSEMBLY INSTRUCTION

ITEM: MV-5969-90351-02 Duval 5/0 Headboard and Footboard
MV-5969-90352-02 Duval 5/0 Platform Panel
MV-5969-90353-02 Duval 5/0-6/6 Side Rails and Center Rail
MV-5969-90367-02 Duval 6/0-6/6 Headboard and Footboard
MV-5969-90368-02 Duval 6/6 Platform Panel
MV-5969-90363-02 Duval 6/0 Side Rails, Center Rail, Platform Panel

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.


HARDWARE LIST OF RAILS				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Spanner Wrench		1PC
B		Nut	Ø5/16"	10PCS
C		Lock Washer	Ø5/16"	16PCS
D		Lock Washer	Ø1/4"	2PCS
E		Flat Washer	Ø5/16"*22mm	18PCS
F		Threaded Rod	Ø5/16"*85mm	8PCS
G		Threaded Rod	Ø5/16"*65mm	2PCS
H		Allen Wrench	69*27.2*4mm	1PC
I		Allen Wrench	73*29*5mm	1PC
J		Bolt	5/16*50mm	6PCS
K		Bolt	1/4*50mm	2PCS

PARTS LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Headboard	1PC
2		Footboard Rail	1PC
3		Leg Frame	1PC
4		Cleat	2PCS
5		Left Side Rail	1PC
6		Right Side Rail	1PC
7		Slat	1PC
8		Support Leg	2PCS
9		Platform Panel	3PCS

HARDWARE LIST OF FOOTBOARD				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
M		Screw	1 1/4"	12PCS


ITEM: MV-5969-90351-02 Duval 5/0 Headboard and Footboard
 MV-5969-90352-02 Duval 5/0 Platform Panel
 MV-5969-90353-02 Duval 5/0-6/6 Side Rails and Center Rail
 MV-5969-90367-02 Duval 6/0-6/6 Headboard and Footboard
 MV-5969-90368-02 Duval 6/6 Platform Panel
 MV-5969-90363-02 Duval 6/0 Side Rails, Center Rail, Platform Panel

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip—do not fully tighten bolts until assembly is complete. It will make assembly easier.

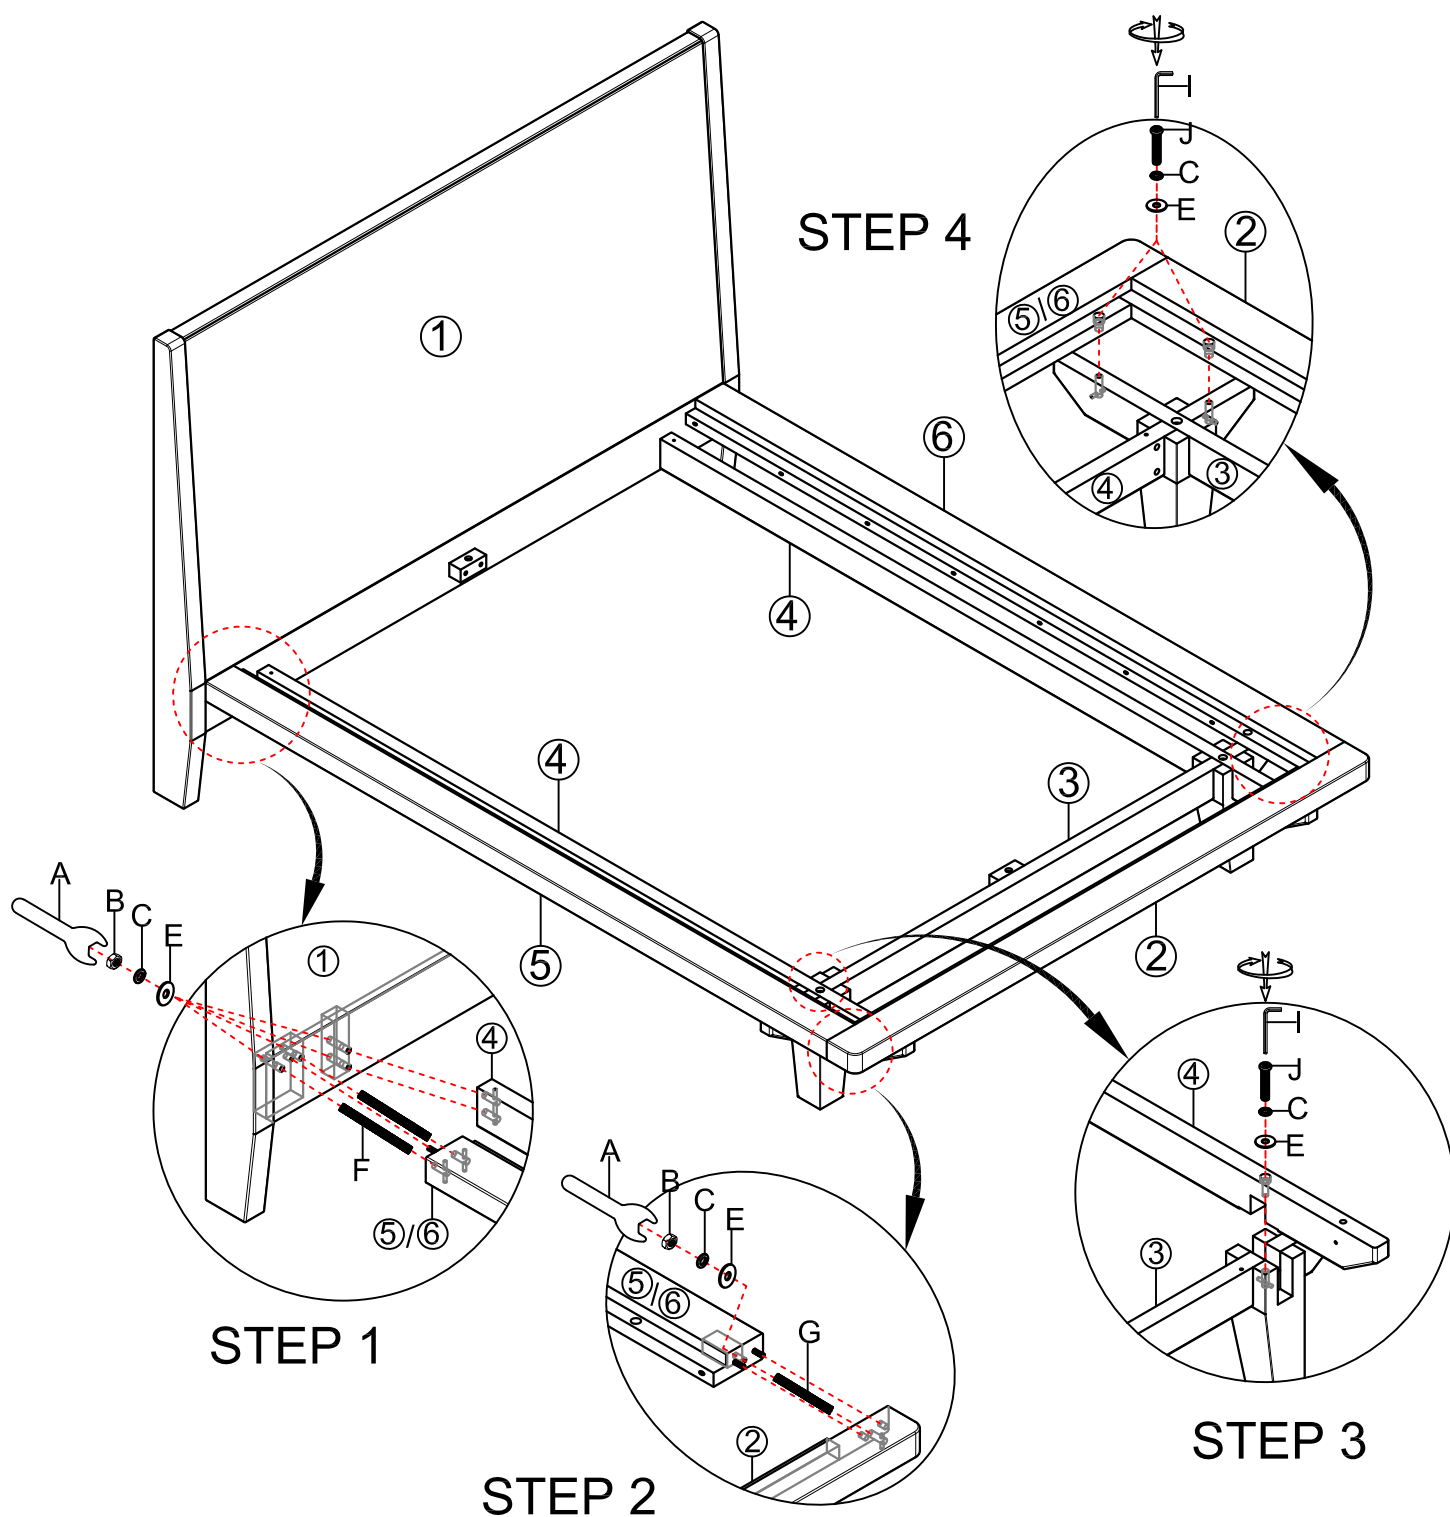

ITEM: MV-5969-90351-02 Duval 5/0 Headboard and Footboard
 MV-5969-90352-02 Duval 5/0 Platform Panel
 MV-5969-90353-02 Duval 5/0-6/6 Side Rails and Center Rail
 MV-5969-90367-02 Duval 6/0-6/6 Headboard and Footboard
 MV-5969-90368-02 Duval 6/6 Platform Panel
 MV-5969-90363-02 Duval 6/0 Side Rails, Center Rail, Platform Panel

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

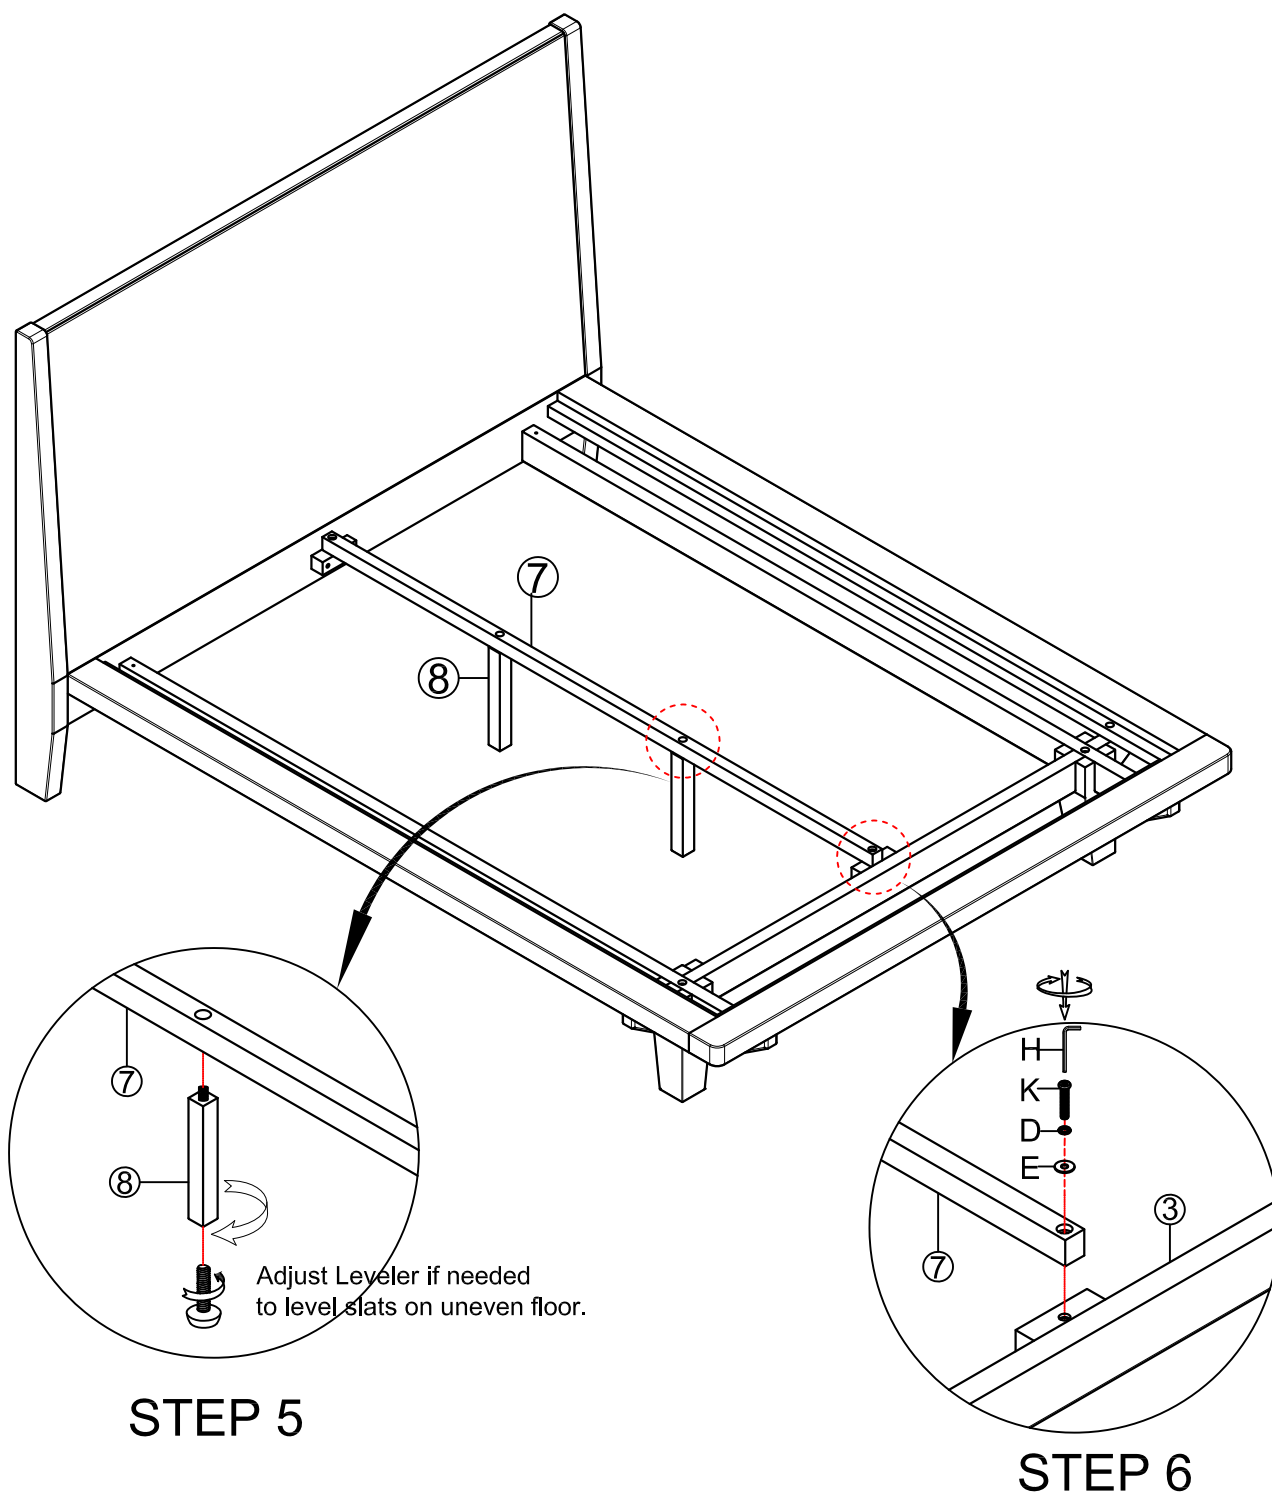




ASSEMBLY INSTRUCTION

ITEM: MV-5969-90351-02 Duval 5/0 Headboard and Footboard
MV-5969-90352-02 Duval 5/0 Platform Panel
MV-5969-90353-02 Duval 5/0-6/6 Side Rails and Center Rail
MV-5969-90367-02 Duval 6/0-6/6 Headboard and Footboard
MV-5969-90368-02 Duval 6/6 Platform Panel
MV-5969-90363-02 Duval 6/0 Side Rails, Center Rail, Platform Panel

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

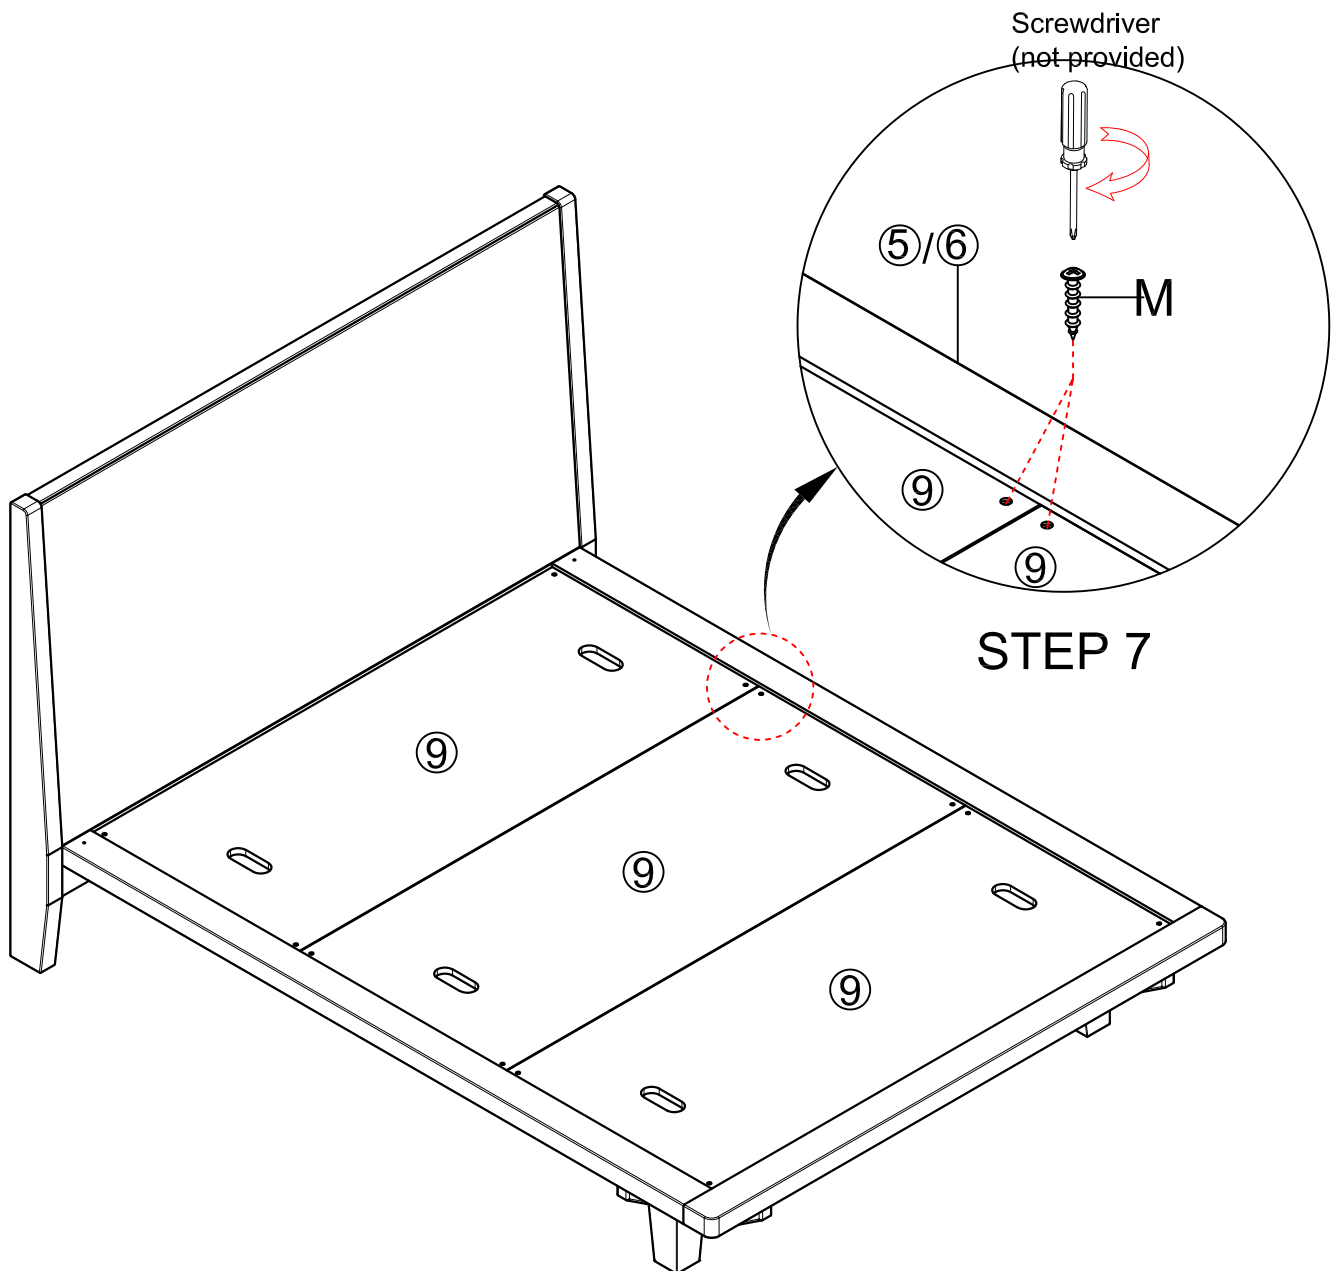



ASSEMBLY INSTRUCTION

ITEM: MV-5969-90351-02 Duval 5/0 Headboard and Footboard
MV-5969-90352-02 Duval 5/0 Platform Panel
MV-5969-90353-02 Duval 5/0-6/6 Side Rails and Center Rail
MV-5969-90367-02 Duval 6/0-6/6 Headboard and Footboard
MV-5969-90368-02 Duval 6/6 Platform Panel
MV-5969-90363-02 Duval 6/0 Side Rails, Center Rail, Platform Panel

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

Step 1: Attach left side rail (5) and right side rail (6) to headboard by using threaded rods (F), flat washers (E), lock washers (C), and nuts (B), tighten all components with spanner wrench (A).

Step 2: Assemble footboard rail (2) to left side rail (5) and right side rail (6) using threaded rods (G), flat washers (E), lock washers (C) and nuts (B), secure all with spanner wrench (A).

Step 3: Connect leg frame (3) and cleats (4) with bolts (J), lock washers (C) and flat washers (E), then use allen wrench (I) to tighten all components.

Step 4: Connect the complete leg frame (3) with cleats (4) to left & right side rails (5 & 6) and footboard rail (2), using bolts (J), lock washers (C) and flat washers (E) and tighten all with allen wrench (I).

Step 5: Screw support legs (8) to the slat (7).

Step 6: Attach slat (7) between headboard and footboard by using bolts (K), lock washers (D) and flat washers (E), then use allen wrench (H) for fasten.

Step 7: Put platform panels (9) onto left and right side rails and secure them with Phillips head screwdriver.