

Bathroom cabinet

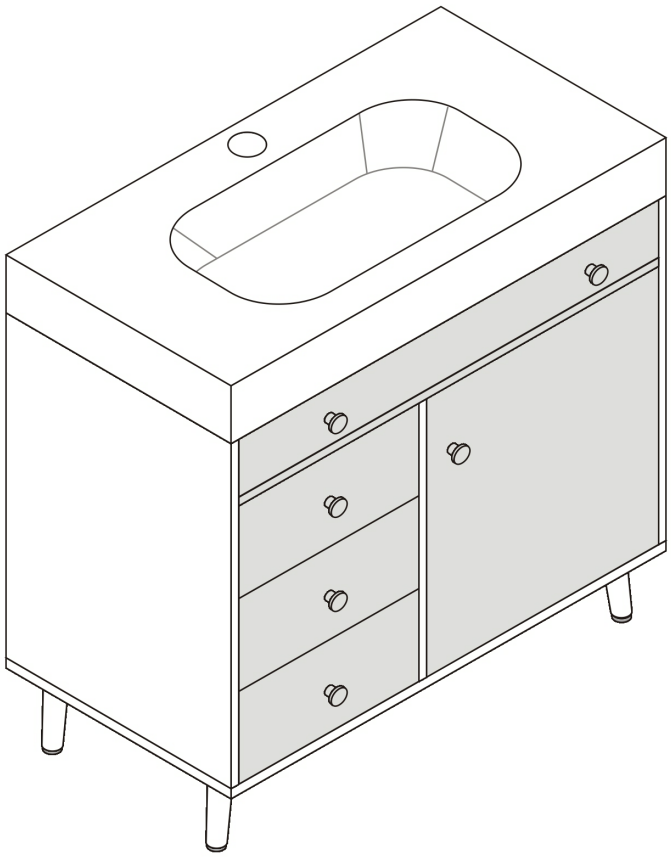

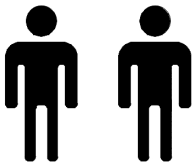


2 Persons


L752*W455*H593MM

Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

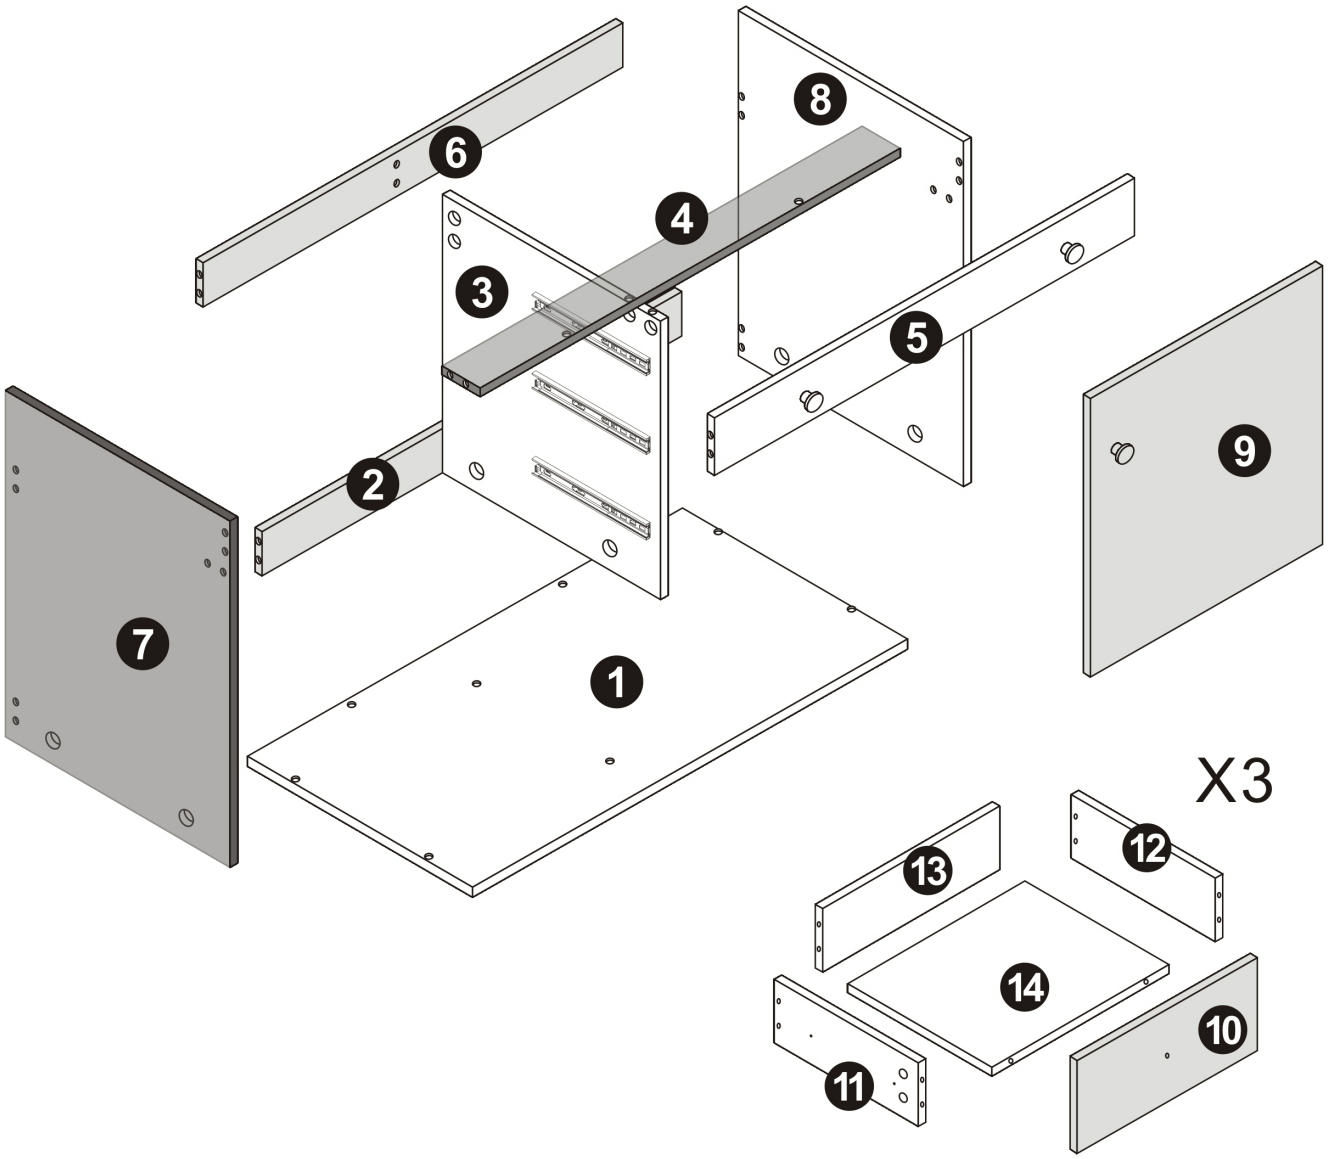


Disassembly and installation of accessories

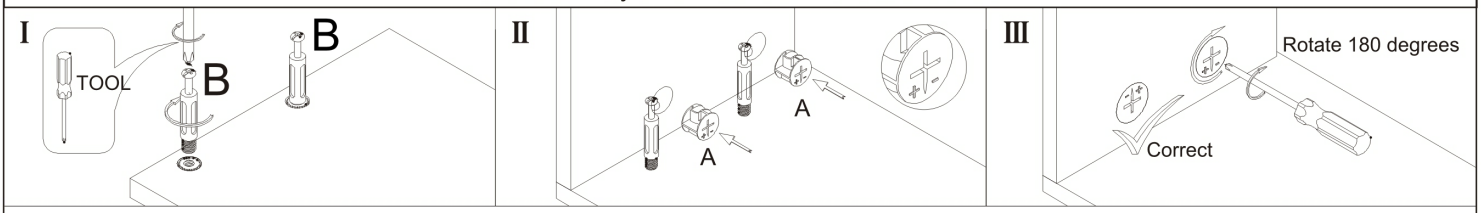

A	48PCS	B	48PCS	C	72PCS	D	30PCS	E	6PCS	F	6PCS	G	4PCS	H	1PCS
15*10mm		6*28mm		3.5*14mm		3.5*35mm		4*18		Handles		Sponge Mat		8mm	


I	2PCS	J	2PCS	K	3PCS	L	4PCS	M	1PCS	N	2PCS
Expansion screw		Corner code		Three-section Rail		Hardware Feet		Hardware Feet		Mid bend	

1

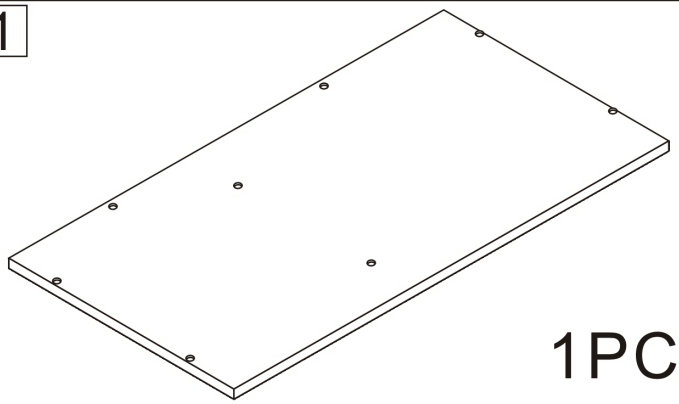


1PC

2

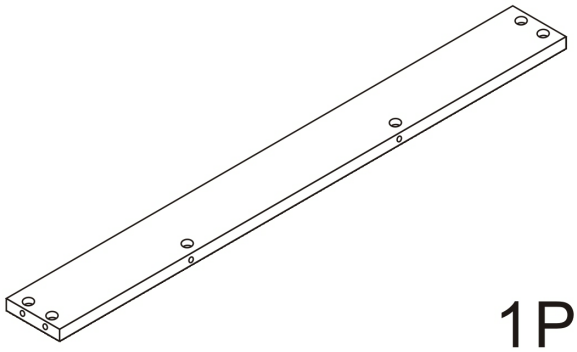


1PC

3

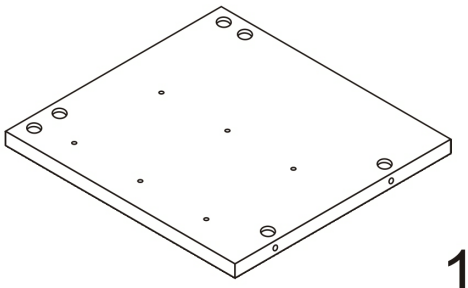


1PC

4

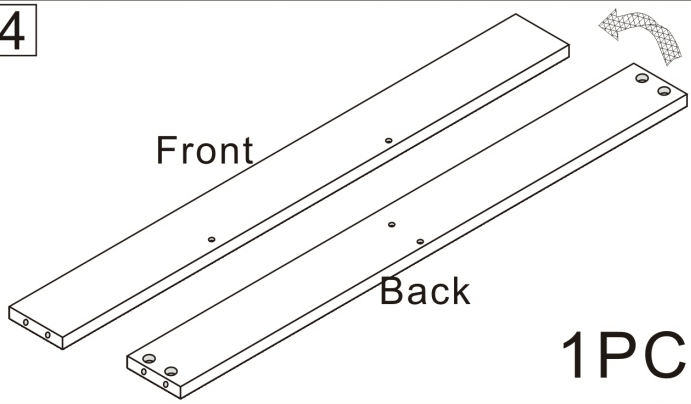


1PC

5

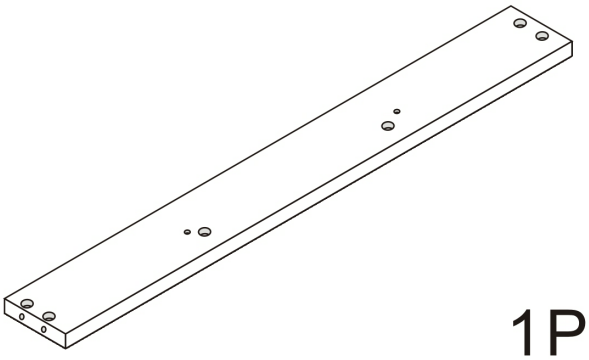


1PC

6

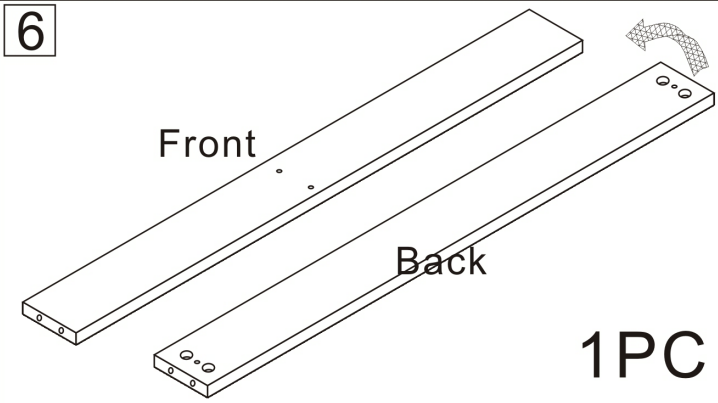


1PC

7

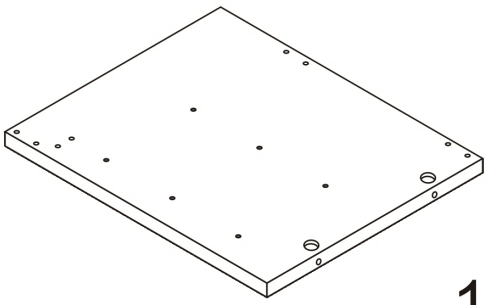


1PC

8

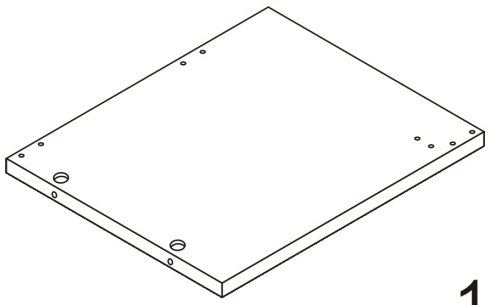


1PC

9

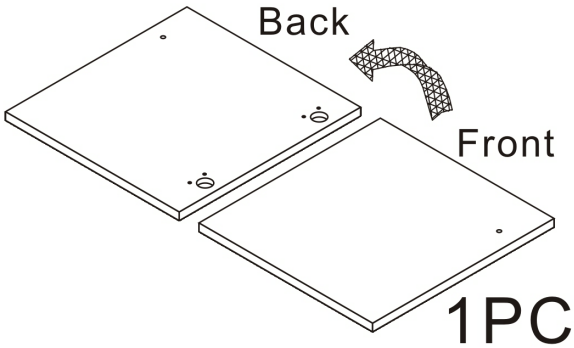


1PCS

10

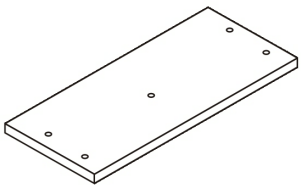


3PCS

11

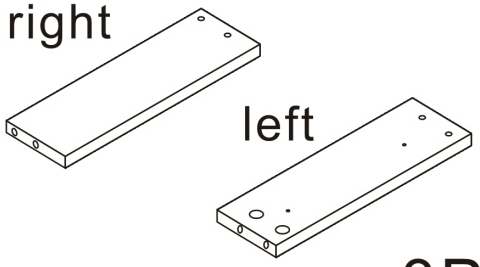


3PCS

12

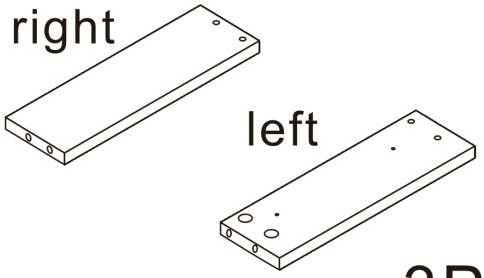


3PCS

13

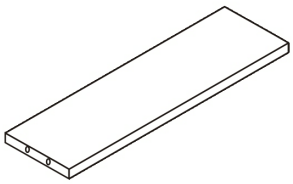


3PCS

14

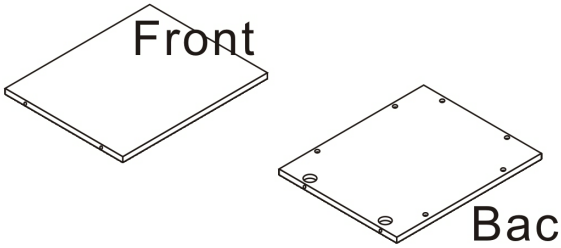


1PC


1

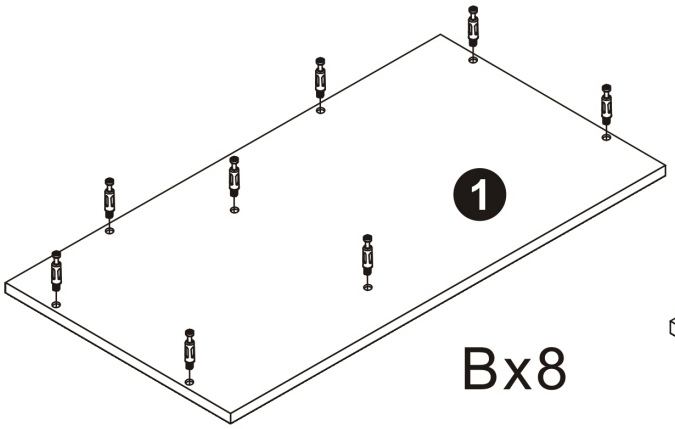


Bx8

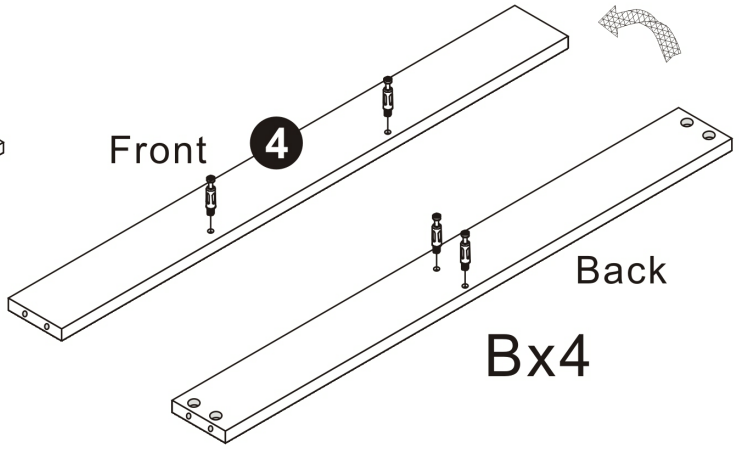


Bx4

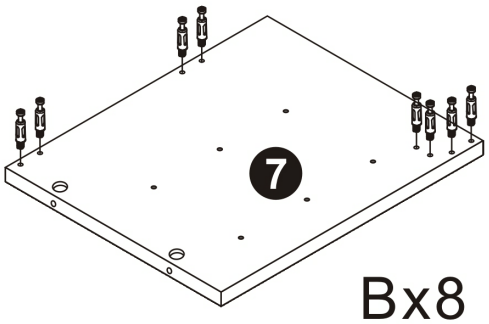


Bx8

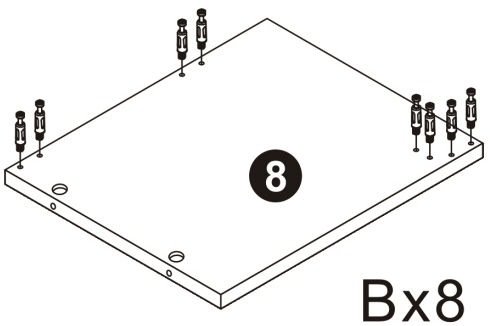

Bx8

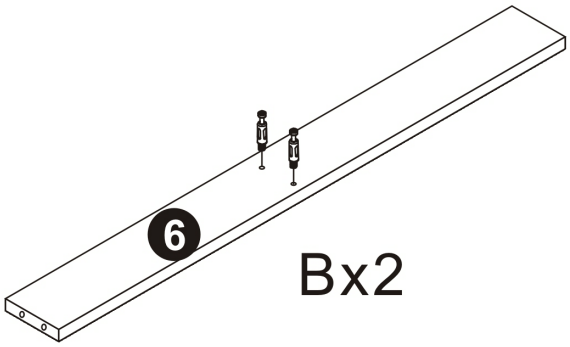


Bx2

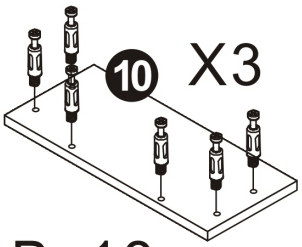

Bx18


B	48PCS
	
6*28mm	


2

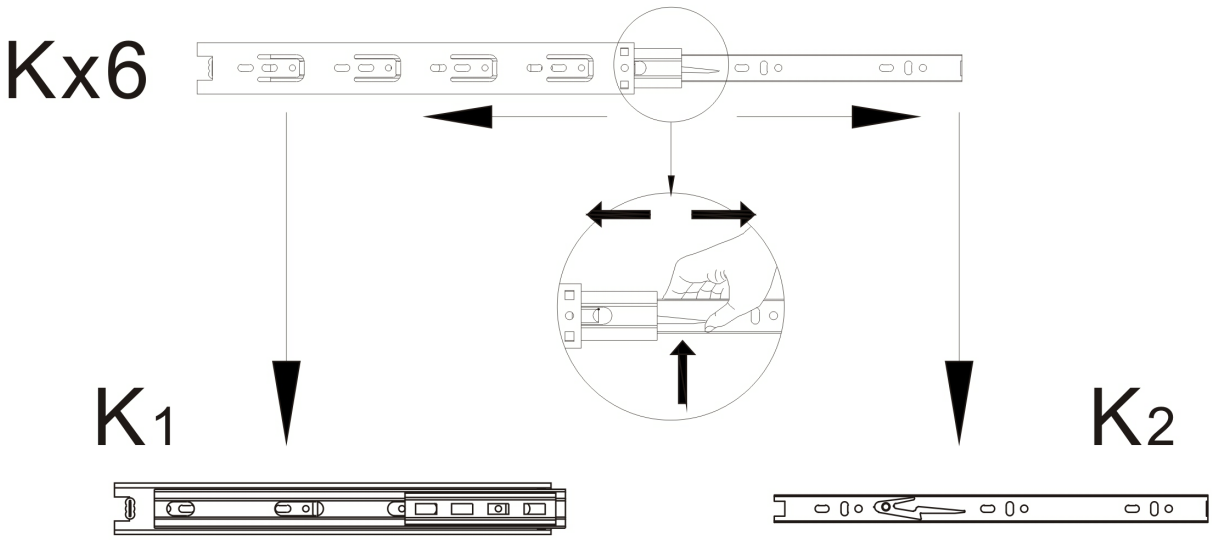


K1	3PCS
	
Three-section Rail	

3

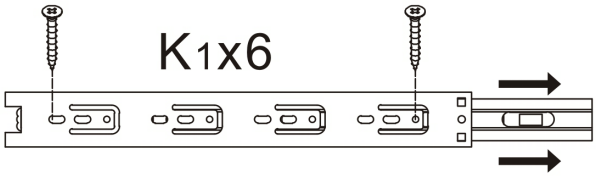

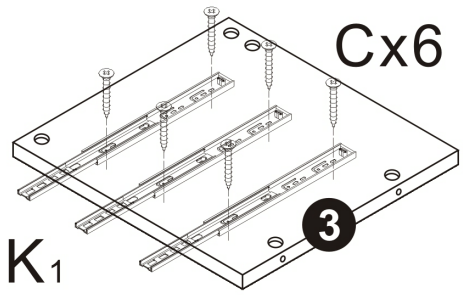


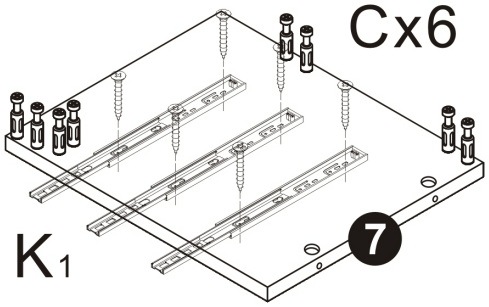

C	12PCS
	
3.5*14mm	


K1	3PCS
	
12 inch Three-section Rail	

4

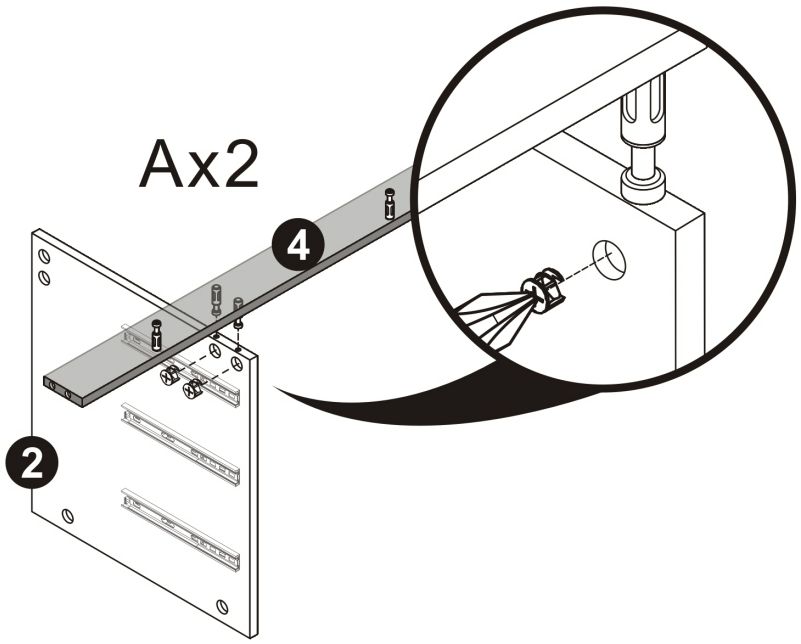


A	2PCS
	
15*10mm	

5

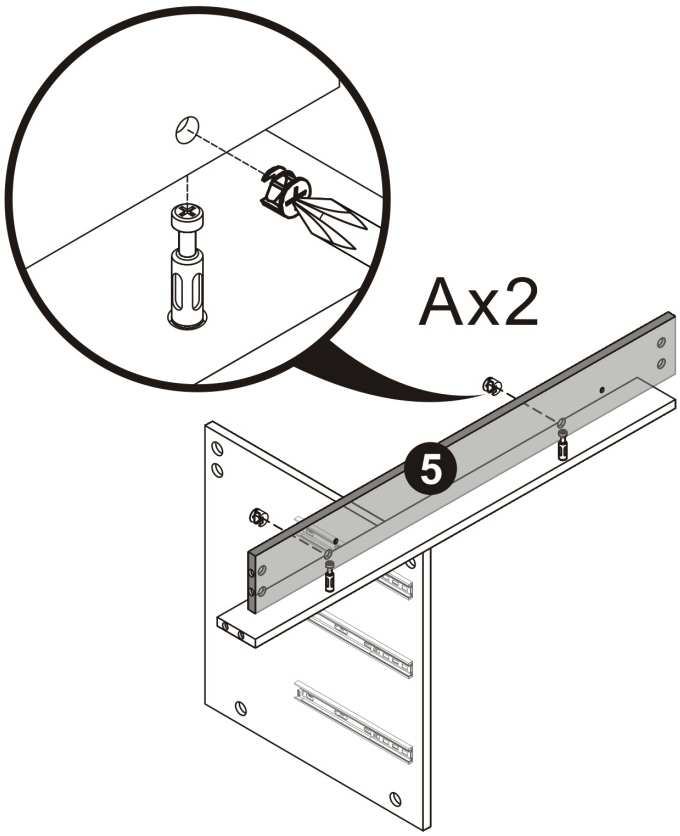


A	2PCS
	
15*10mm	

6

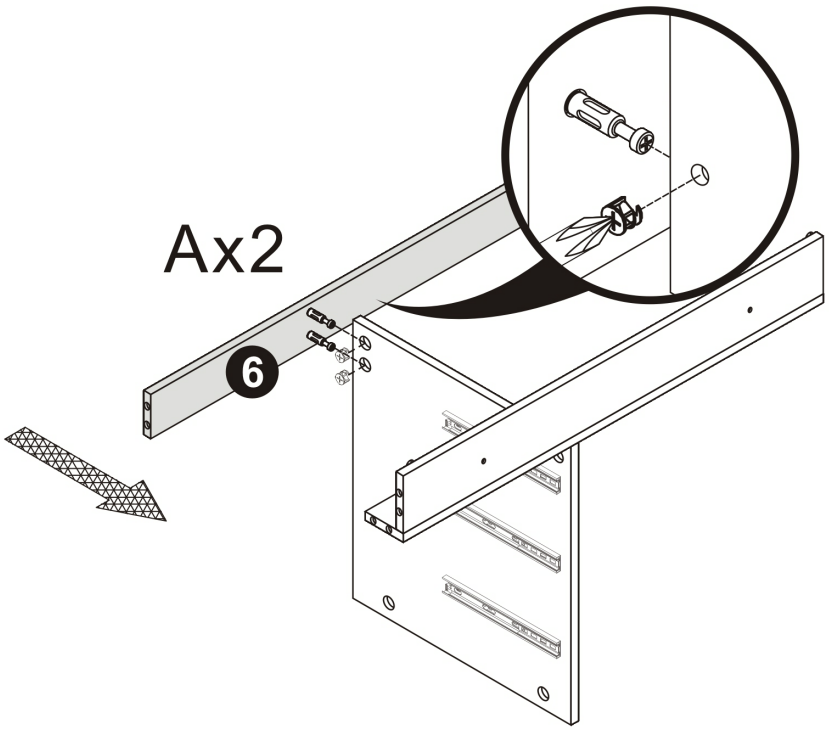


A	2PCS
	
15*10mm	

7

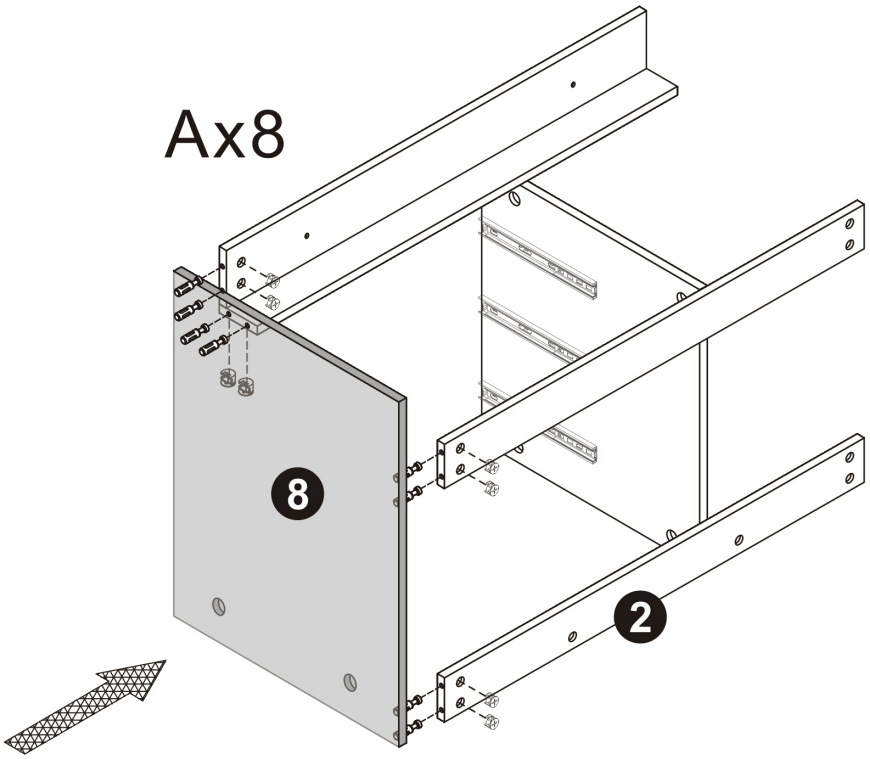


A	8PCS
	
15*10mm	

8

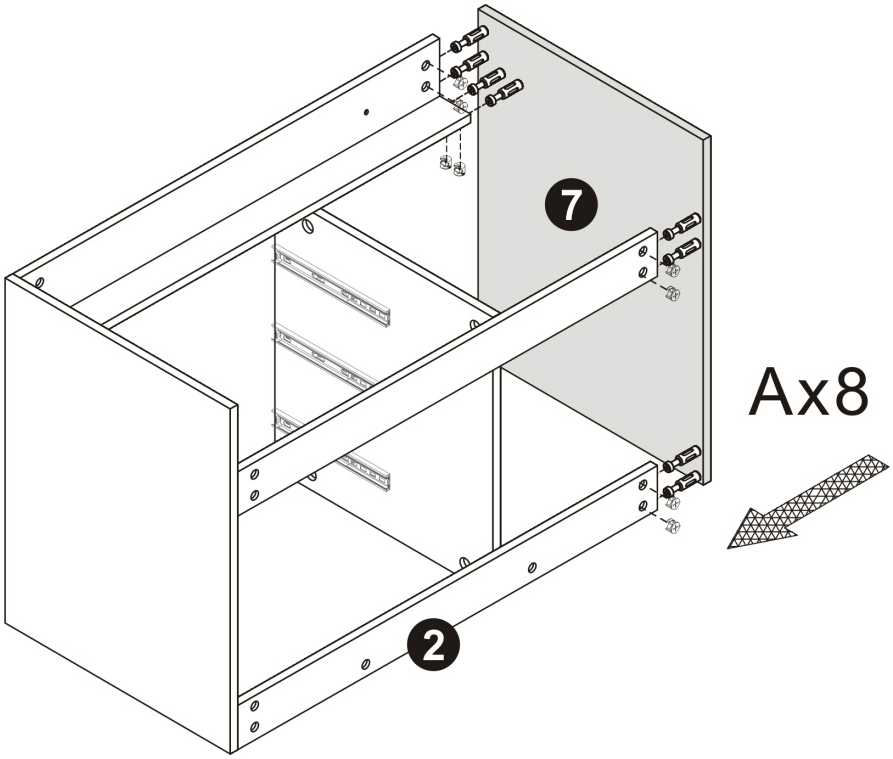


A	8PCS
	
15*10mm	

9

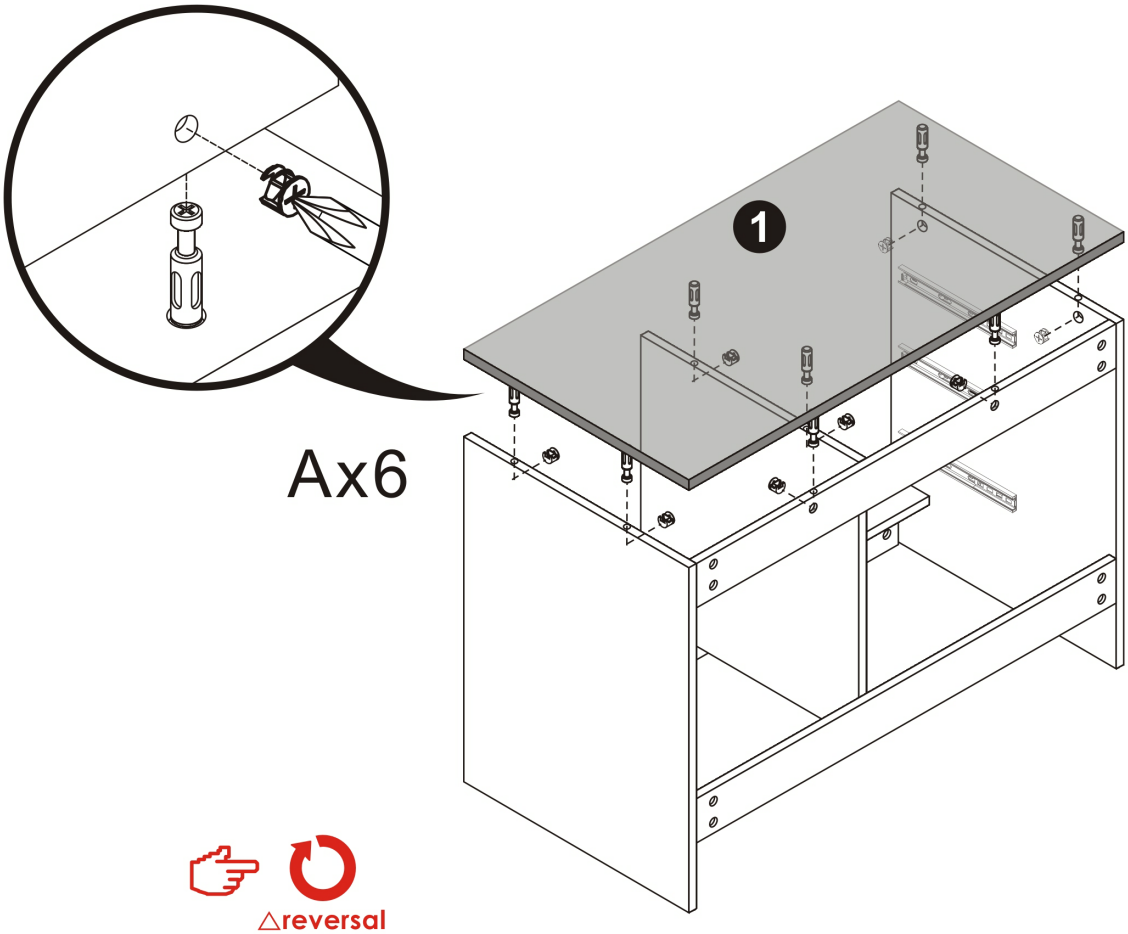


A	8PCS
	
15*10mm	

10

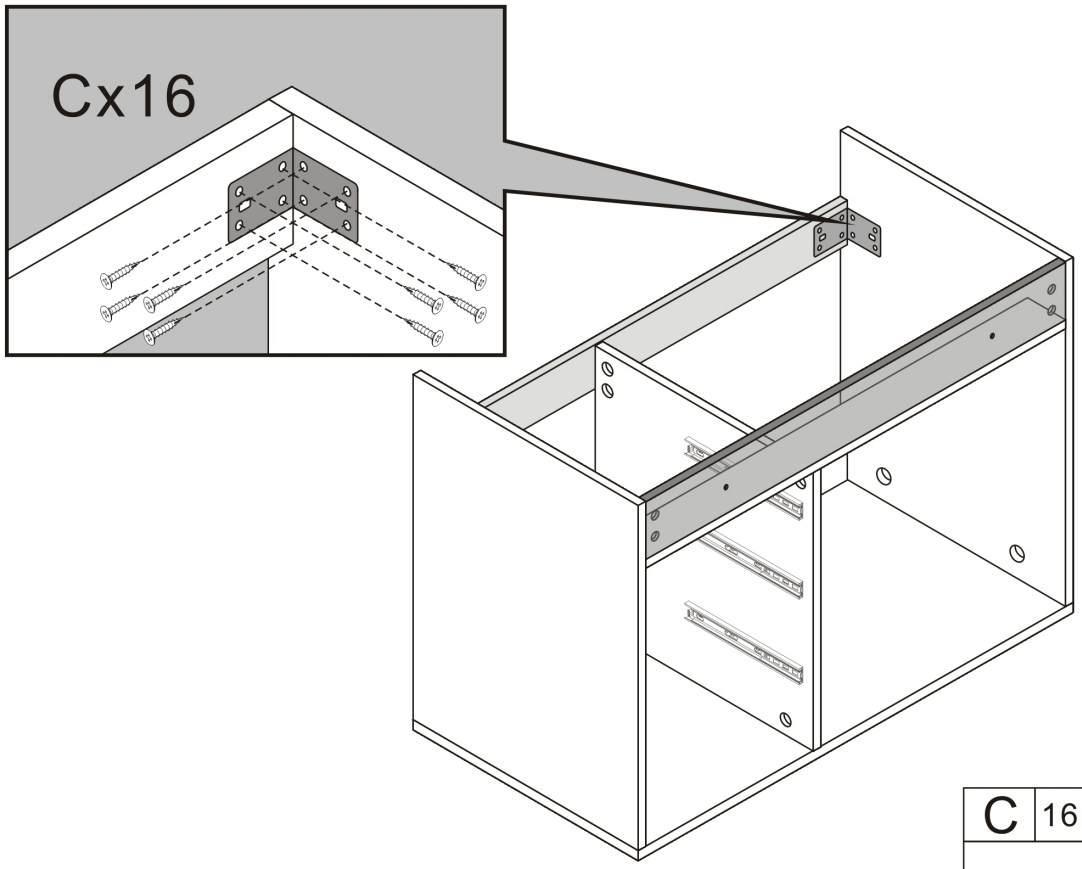



C	16PCS	J	2PCS
			
3.5*14mm		Corner code	


11

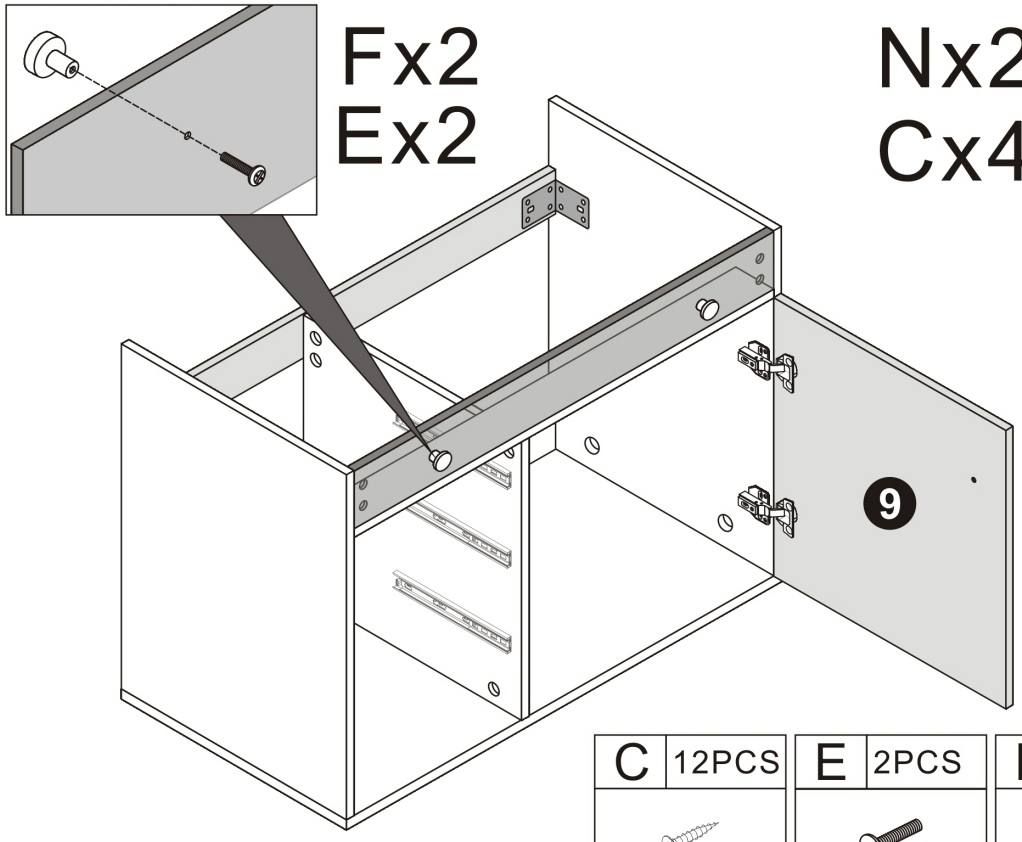


Nx2
Cx4

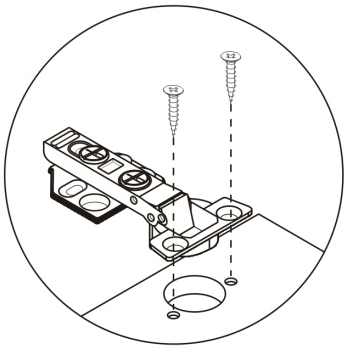

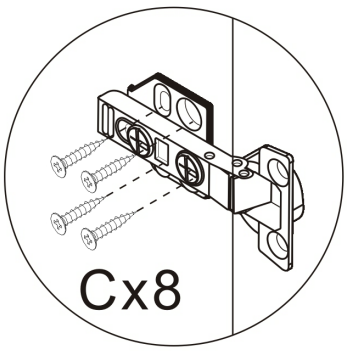

C	12PCS	E	2PCS	F	2PCS	N	2PCS
							
3.5*14mm		4*18		Handles		Mid bend	

12

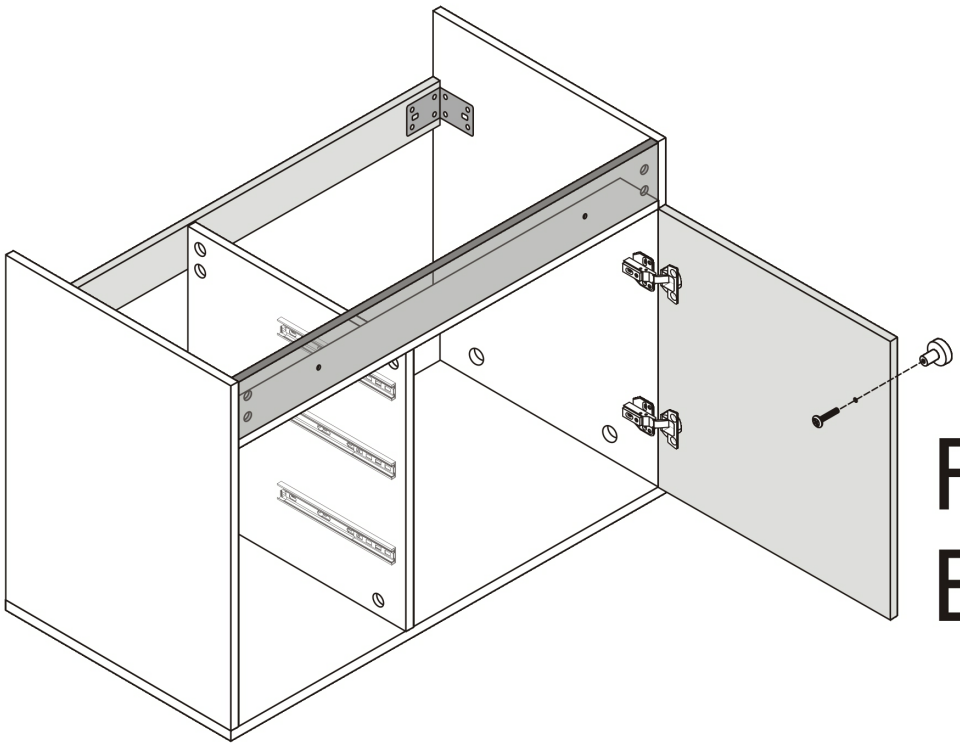


Fx1
Ex1

E	1PCS
	
4*18	

F	1PCS
	
Handles	


13

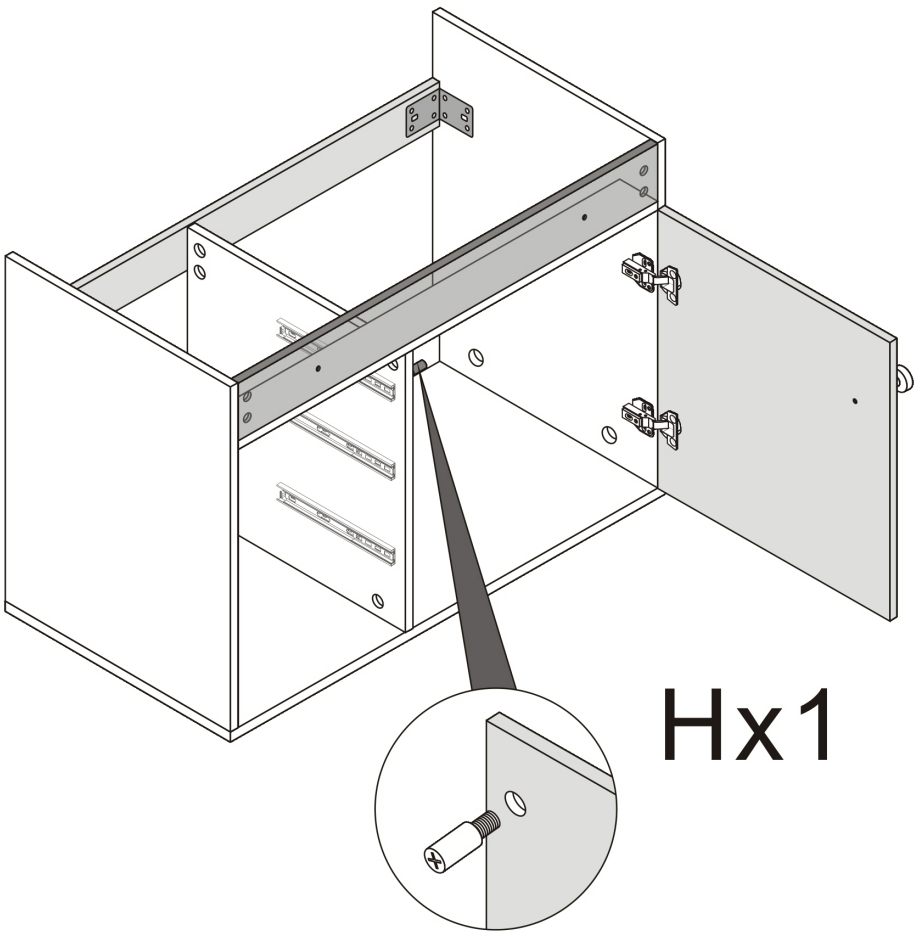

Hx1

H	1PCS
	
8mm	


14

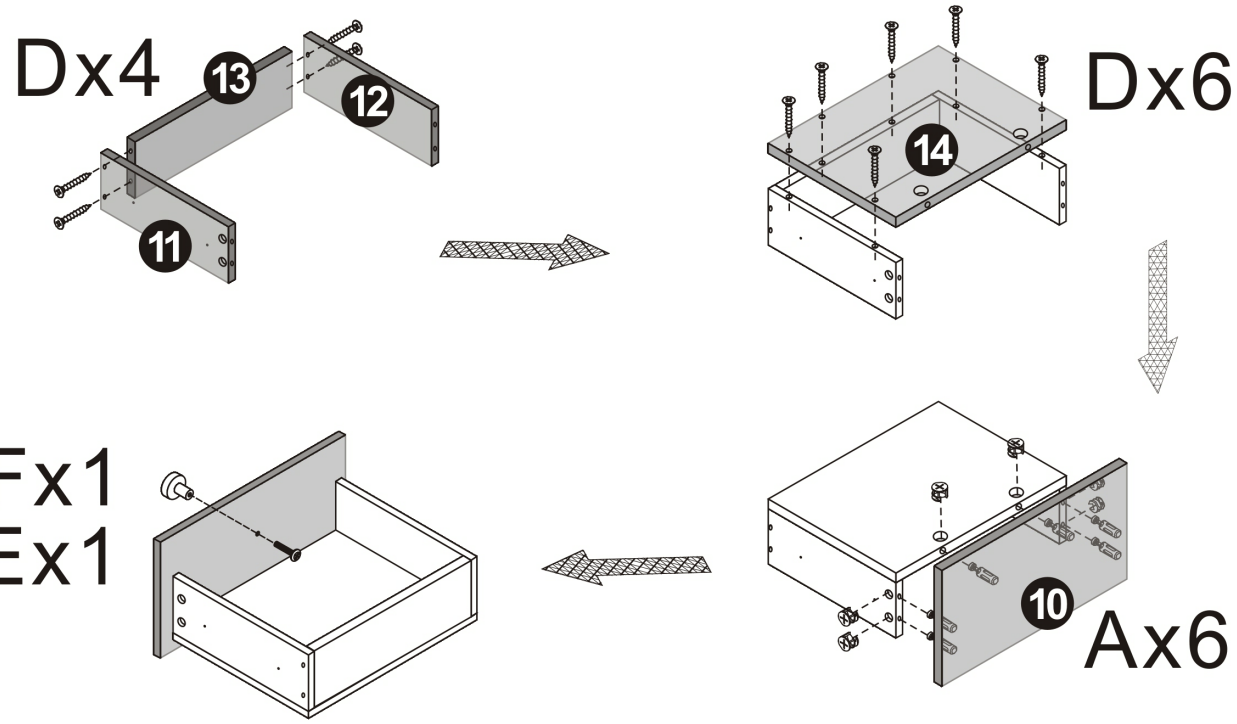


X3

A	18PCS	D	30PCS	E	3PCS	F	3PCS
							
15*10mm		3.5*35mm		4*18		Handles	

15

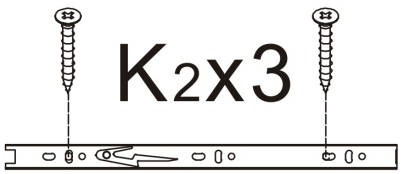


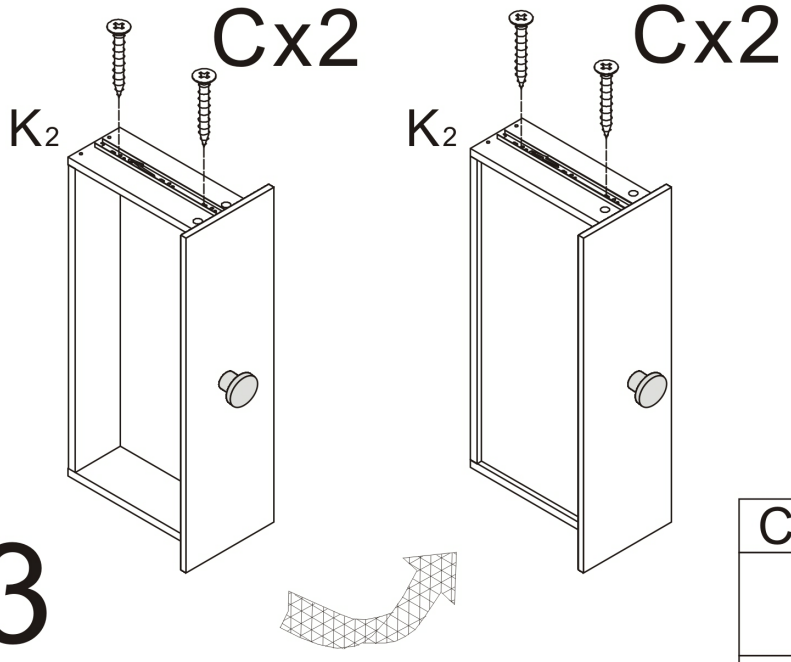



X3

C	12PCS	K	3PCS
			
3.5*14mm		Three-section Rail	

16

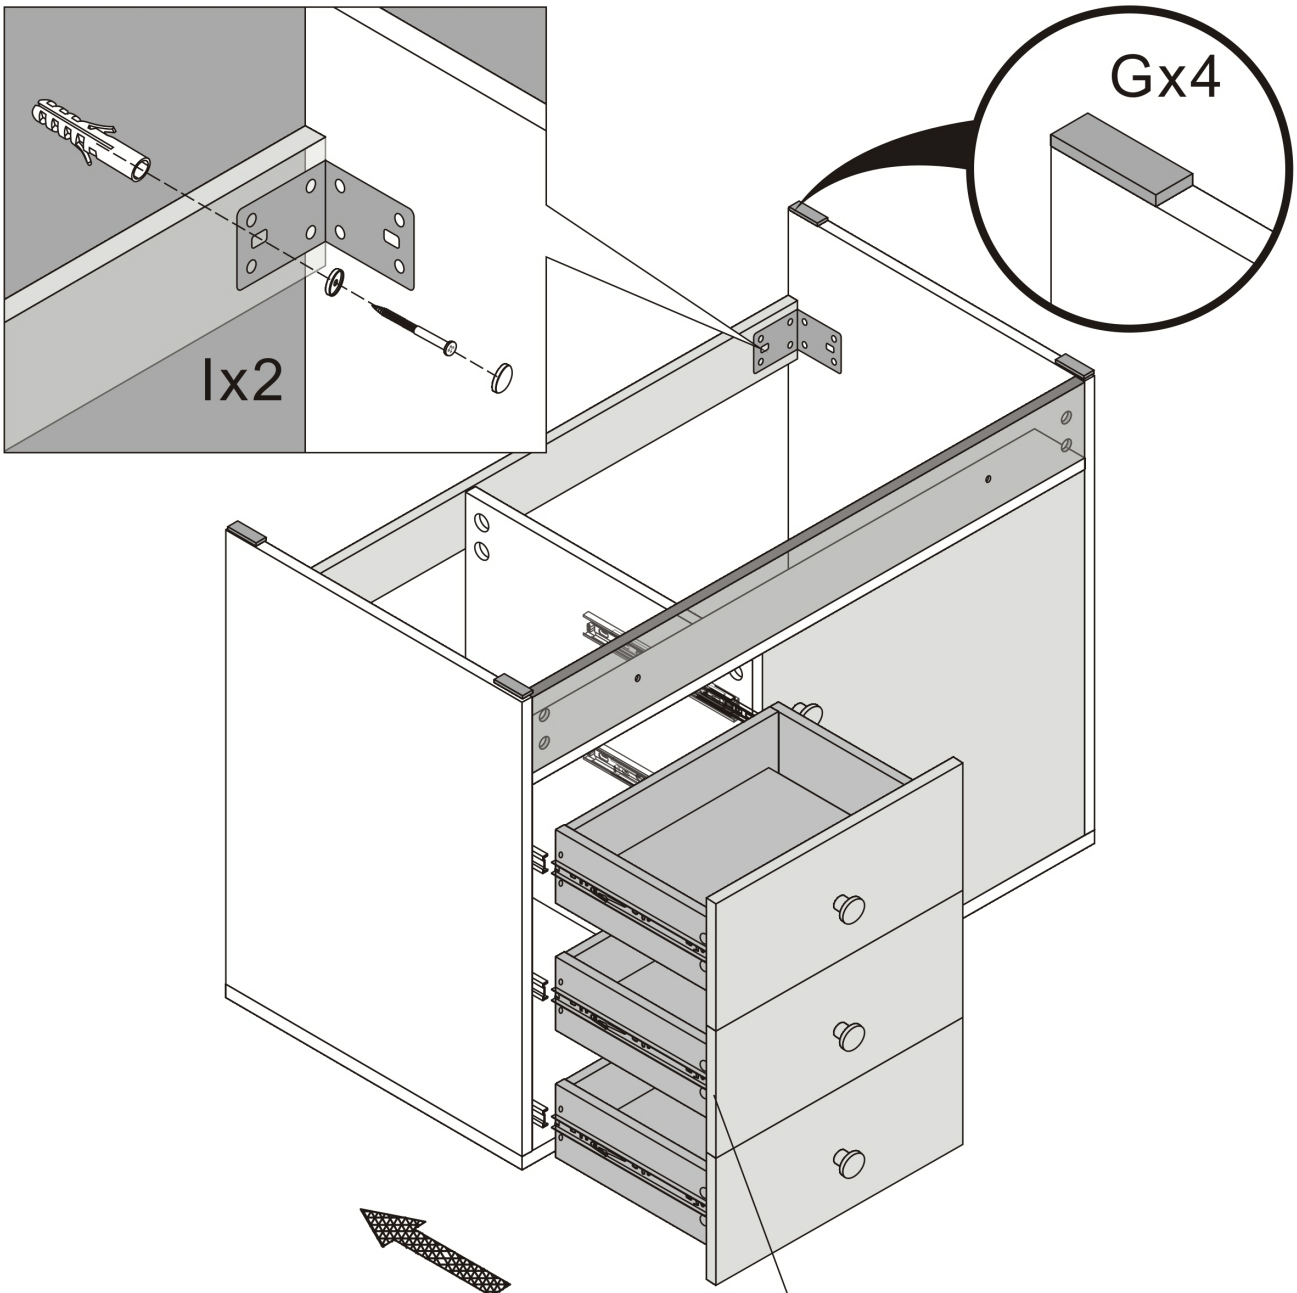


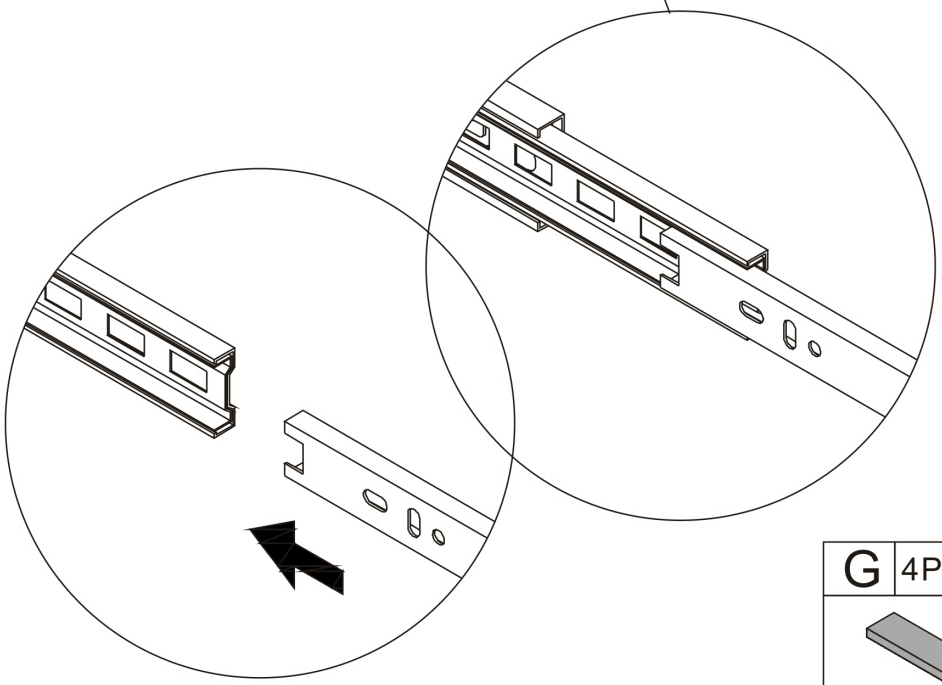


G	4PCS	I	2PCS
			
Sponge Mat		Expansion screw	

SPECIAL TIPS FOR DOOR ALIGNMENT
CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS
CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


A. Lateral adjustment (Moving door left-right) by screw adjusting
Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
Réglage latéral (porte mobile gauche-droite) par réglage à vis

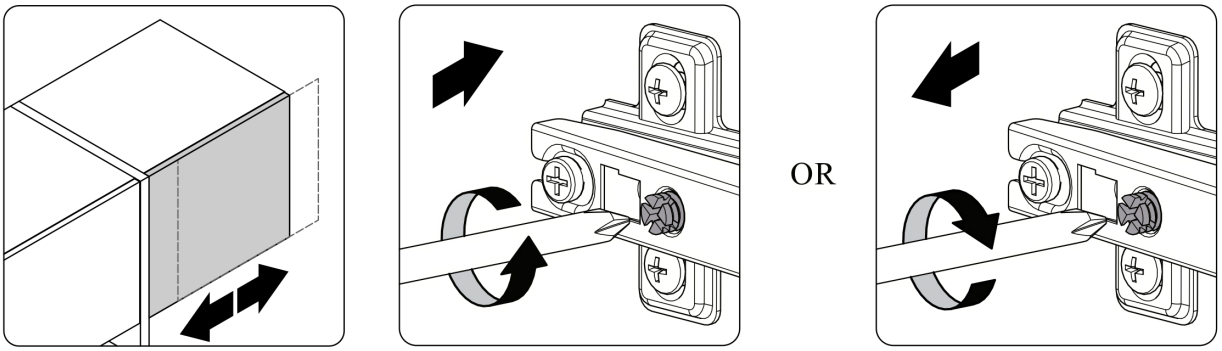


B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

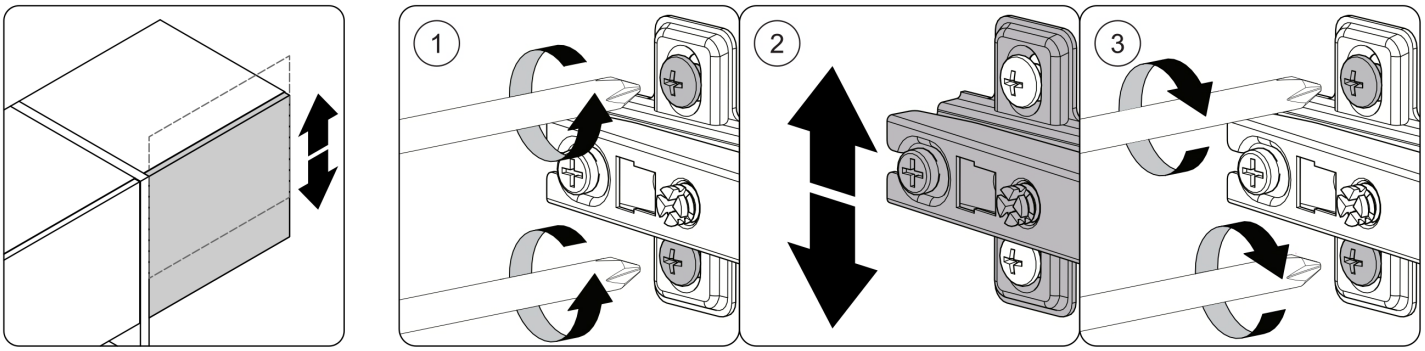

C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

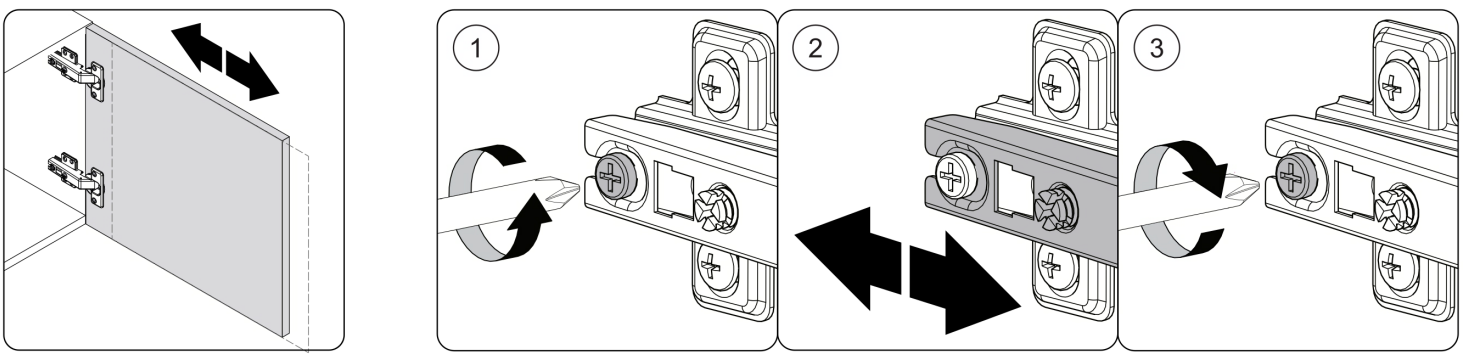


17

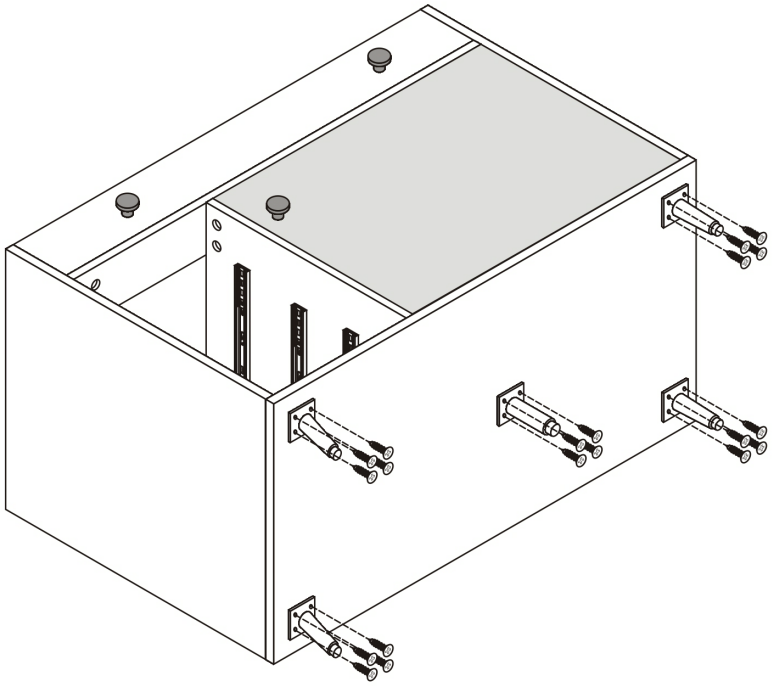

Cx20
Lx4
Mx1

C	20PCS	L	4PCS	M	1PCS
					
3.5*14mm		Hardware Feet		Hardware Feet	

18

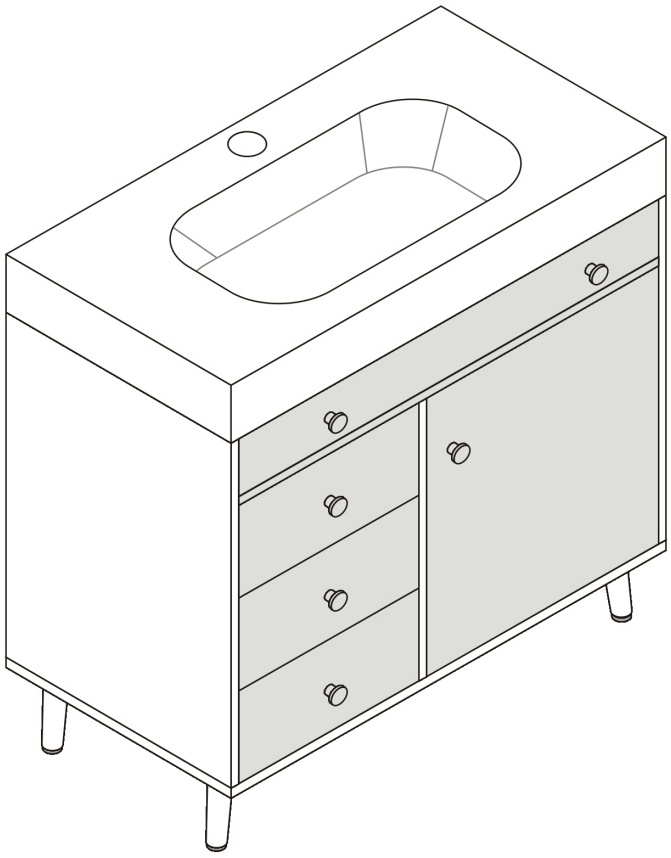

OK