
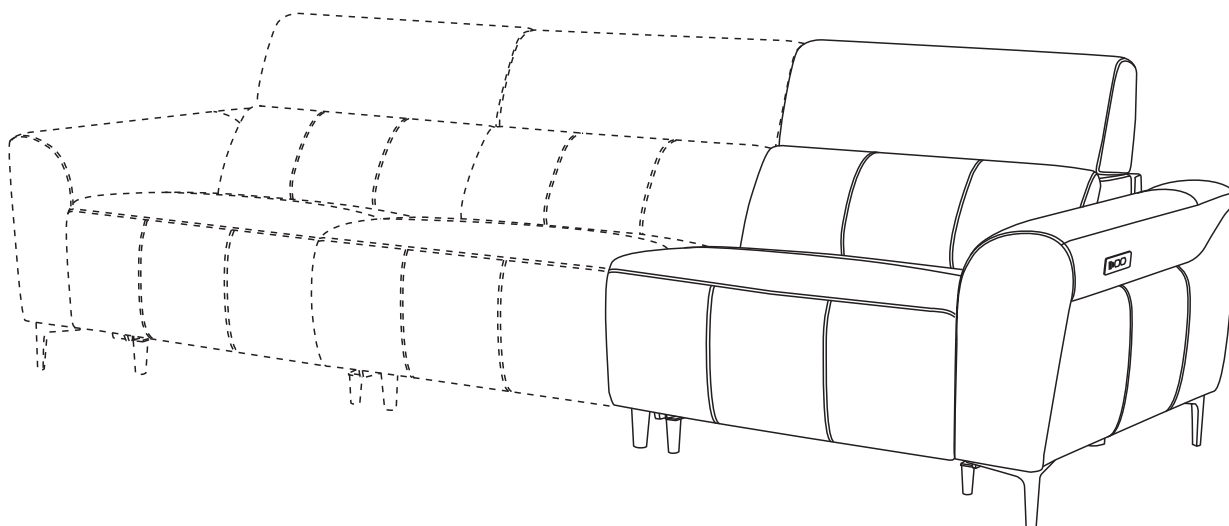
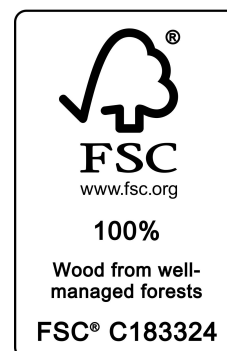
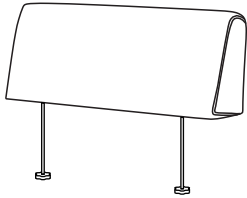
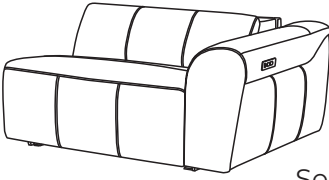

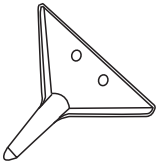


# Power Right Chair Assembly Manual




**CAUTION** THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.


## Parts

|                                                                                                            |                                                                                                                      |                                                                                                                |
|------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>A</b> <br>Headrest     | <b>B</b> <br>Seat                   | <b>C</b> <br>Power Cord     |
| <b>D</b> <br>Metal Feet×2 | <b>E</b> <br>Hexagon Socket Screw×4 | <b>F</b> <br>Plastic Feet×4 |
| <b>G</b> <br>Hex Key    |                                                                                                                      |                                                                                                                |

Before you begin: Locate both the All-in-One Kit (with hardware and tools) and the Power Cord (C) at the bottom of the Power Right Chair Seat.

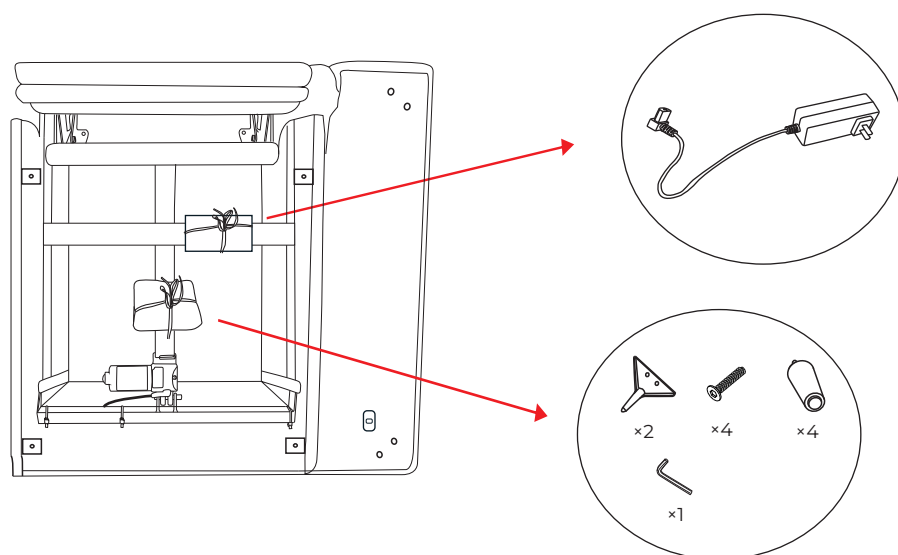


Step 1: Tip over the Power Right Chair, remove 2 Metal Feet (D) and 4 Hexagon Socket Screws (E). Align them with the holes as shown in the diagram, then use the Hex Key to tighten the screws, then tighten the Plastic Feet (F) directly.

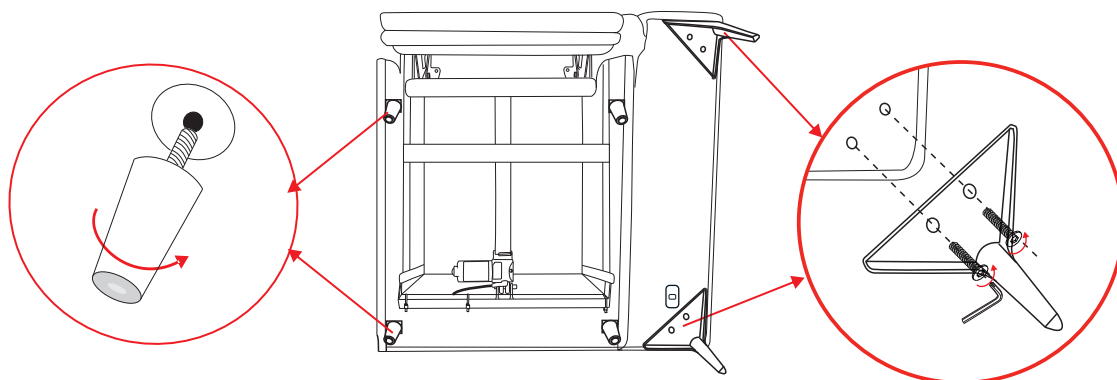


Step 2: As shown, unscrew the Five-Pointed Star Nut and Washer from the lower end of the Insertion Rod. Then insert the exposed Insertion Rod into the hole on the Backrest, place a Washer on the Five-Pointed Star Nut, and screw it in to secure the Headrest (A).

**Note:** If the screws are not fully tightened, it may cause the Headrest (A) to function improperly.

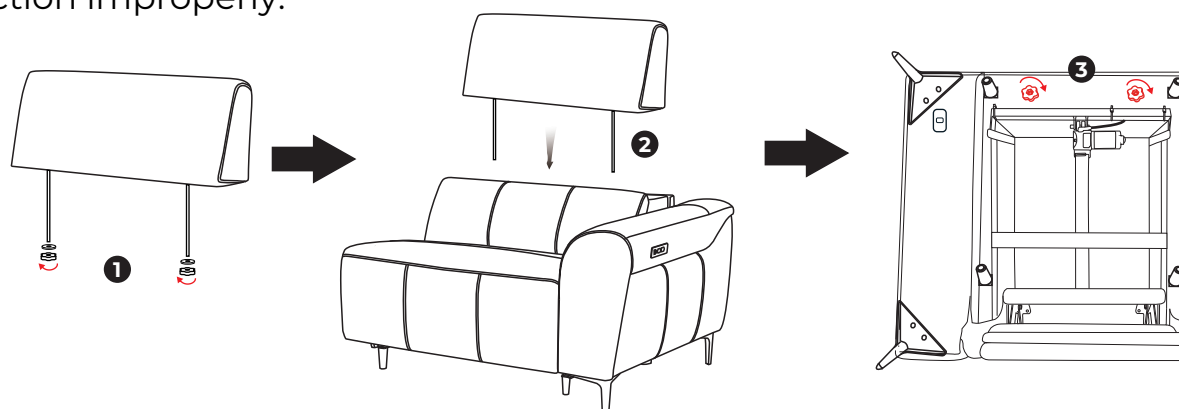


## How to Connect

Step 1: Lift the side of the sofa with the protruding side brackets, insert it into the side slots on the opposite side, to lock them into place.

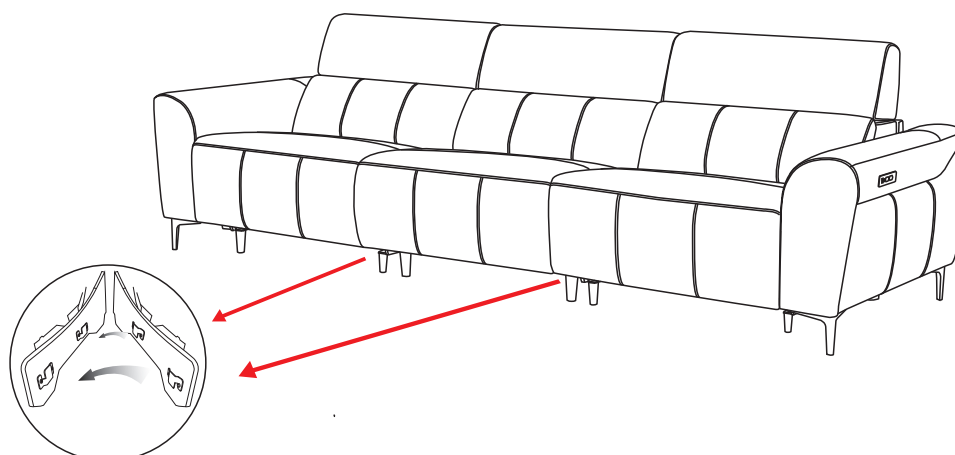

Step 2: Connect the wire piece by piece.

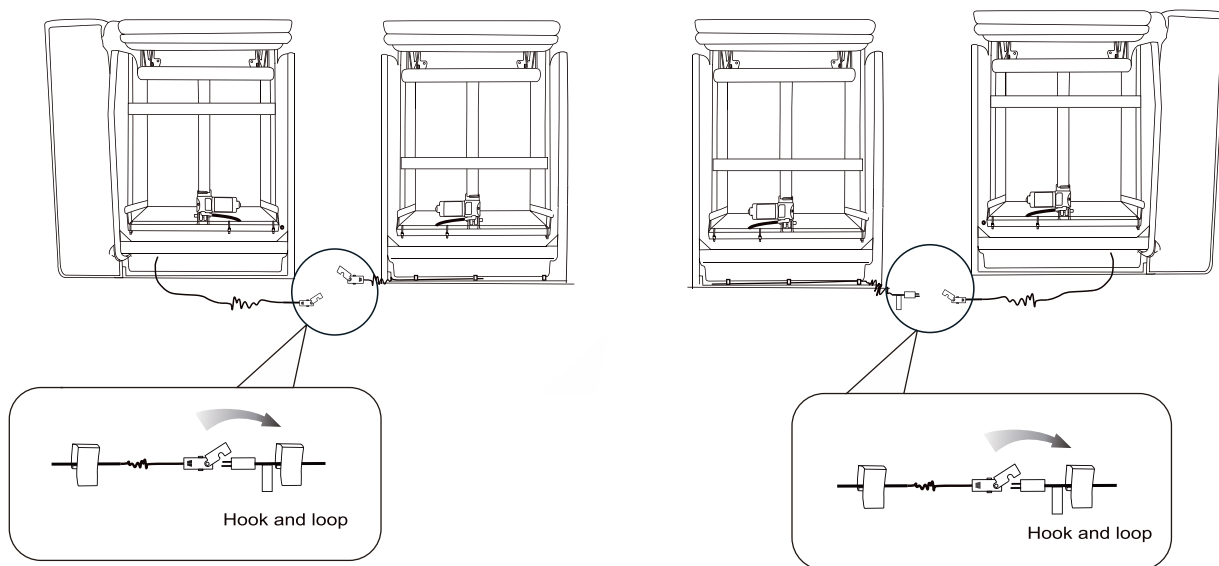

Step 3: Connect one end of the Power cord into the DC adaptor located at the bottom of the arm. Plug the other end of power cord into the power outlet.

**Note:** After all the connections are made, the green LED will be lit up.

