


Installation Instruction

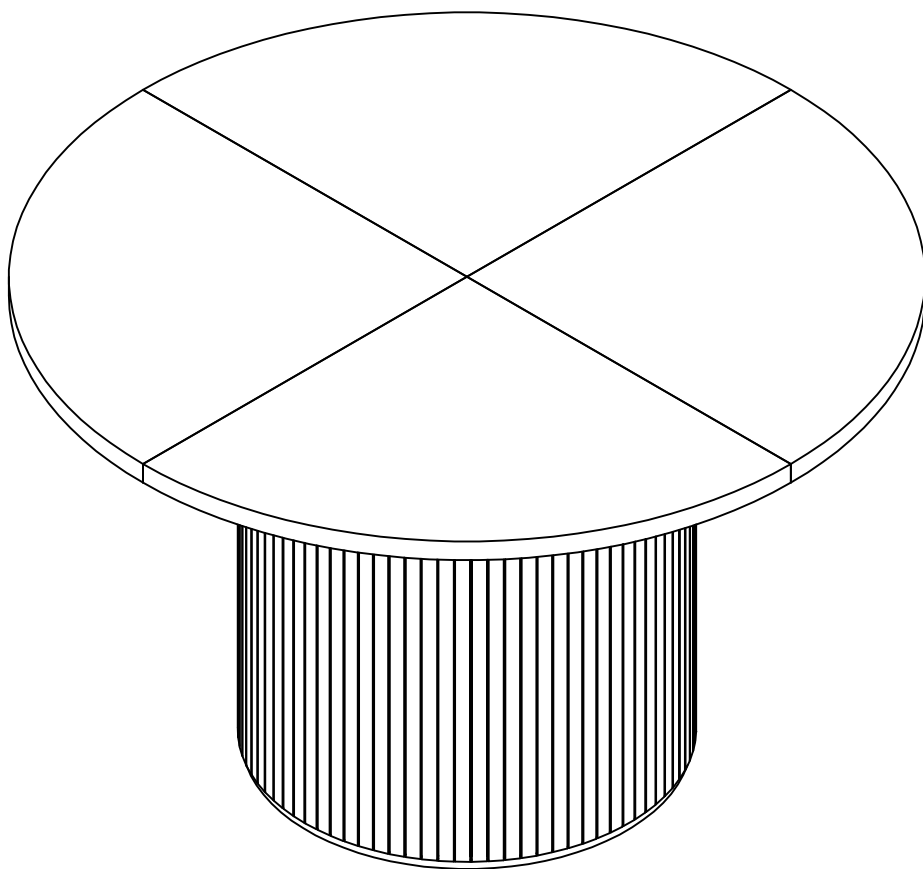

Instructions


Upon receipt of new products, they may possess a distinct scent that requires settling for a period of time. During transit, the foam might detach slightly, thus giving an appearance similar to glass fiber. The sawdust adhering to the board may cause minor discomfort to your hands. Kindly attempt wiping the board with a damp cloth to assess if the scratches on the board can be removed.

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled
- Keep all hardware parts out of reach of children.

QUICKFIT

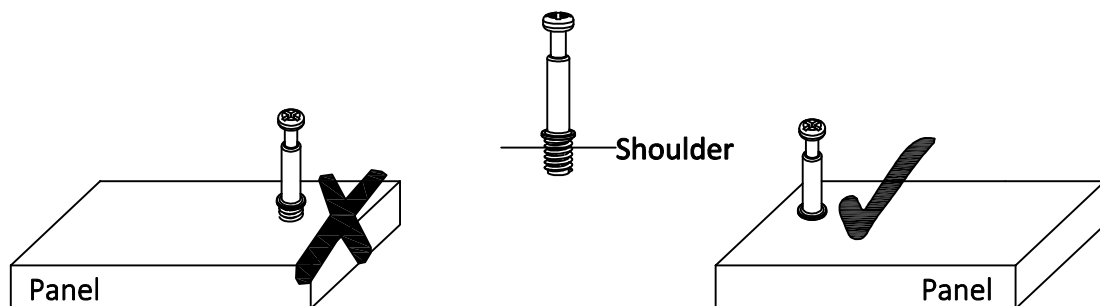

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

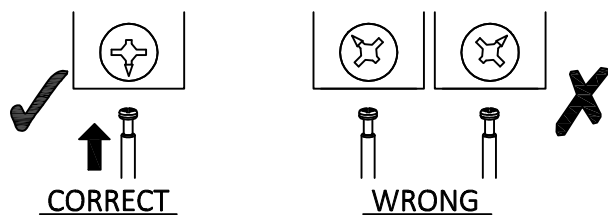

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

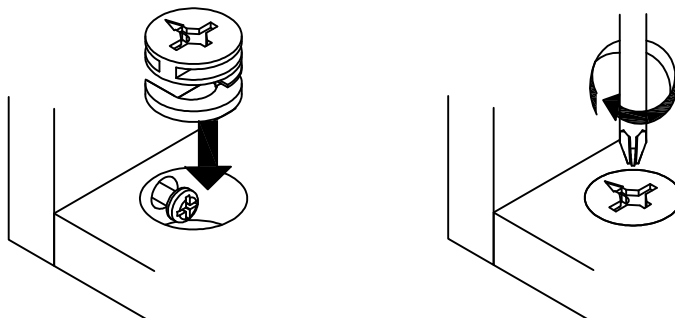

Turn cam lock clockwise to tighten.

Assembling


Estimated time for assembly



45 : 00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver










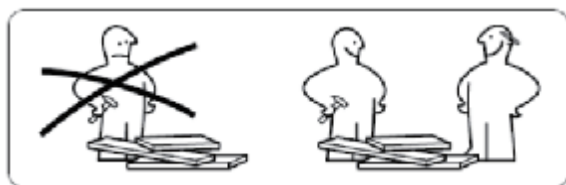









Weight Limitation



100 | **35**
lbs table top lbs per






	M6*35	Ⓐ x 12pcs
	Ø15*12	Ⓑ x 12pcs
	M10*50	Ⓒ x 16pcs
	M6*28	Ⓓ x 16pcs
	M3.5*14.	Ⓔ x 6pcs
	M6*12	Ⓕ x 16pcs
	M6*10	Ⓖ x 4pcs
	M4*55	Ⓗ x 1pc
	M6*32	Ⓘ x 4pcs

	Ⓢ x 4pcs
	Ⓣ x 1pc
	Ⓤ x 1pc
	Ⓡ x 2pcs
	Ⓟ x 1pc
	Ⓠ x 1pc
	Ⓡ x 4pcs
	Ⓢ x 1pc


IMPORTANT:


1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping

The Accessoriess

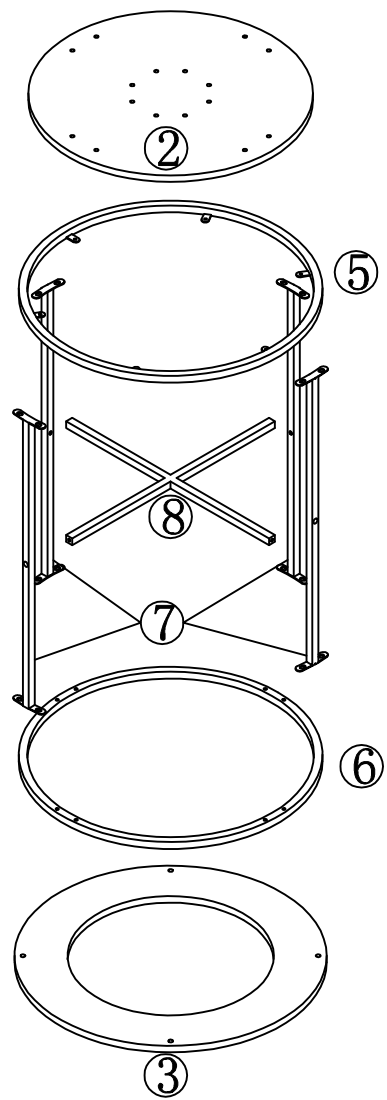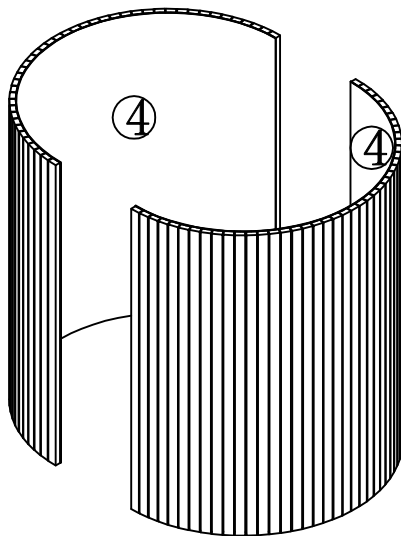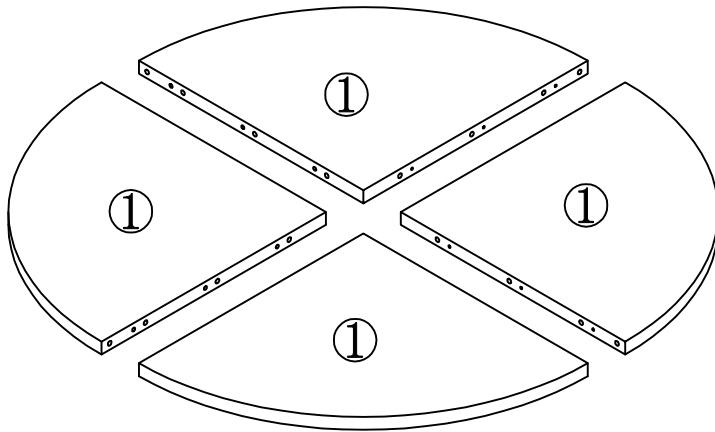


Step 1


A	x 12
	


C	x 16
	

When assembling the panel, please do not touch the groundy directly to avoid scratching the table top

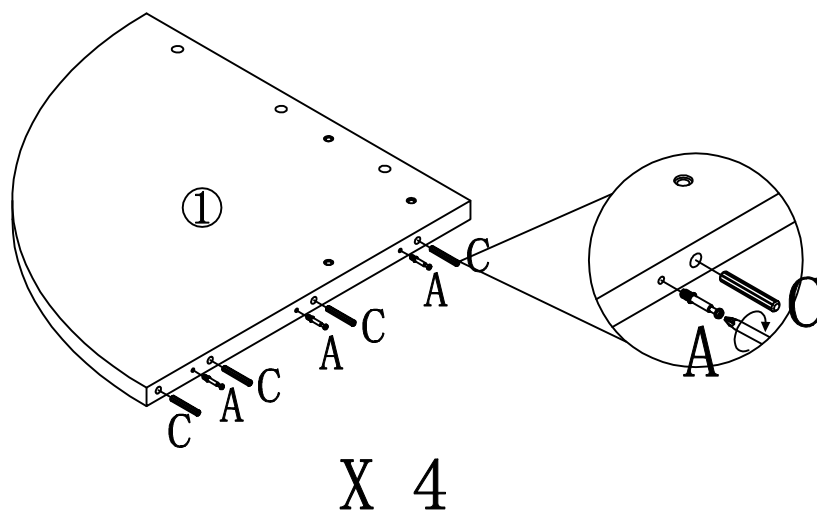


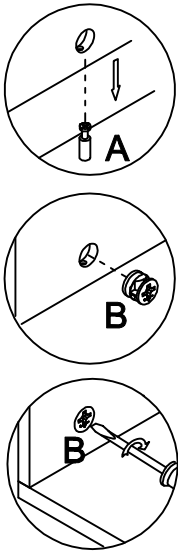
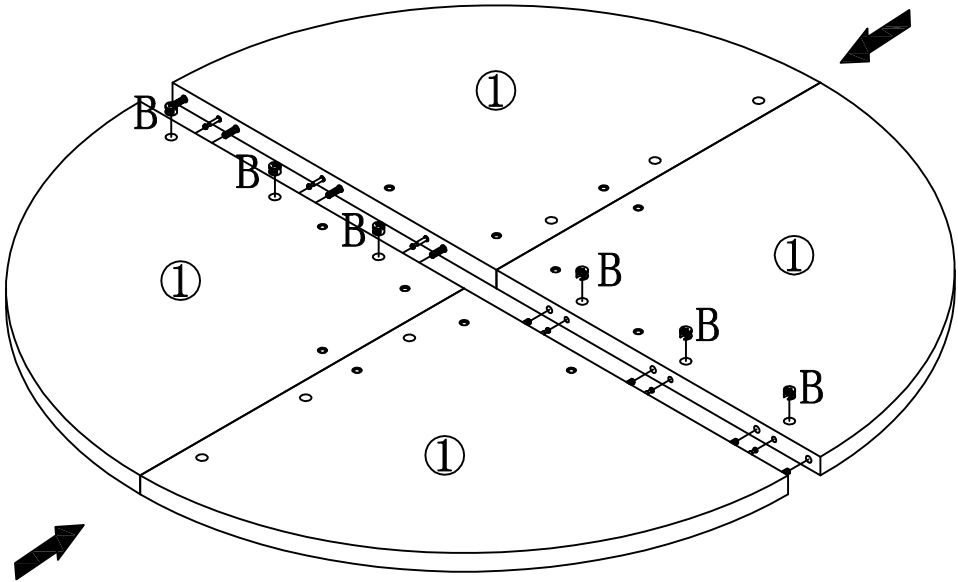
Step 2

B	x 6
	

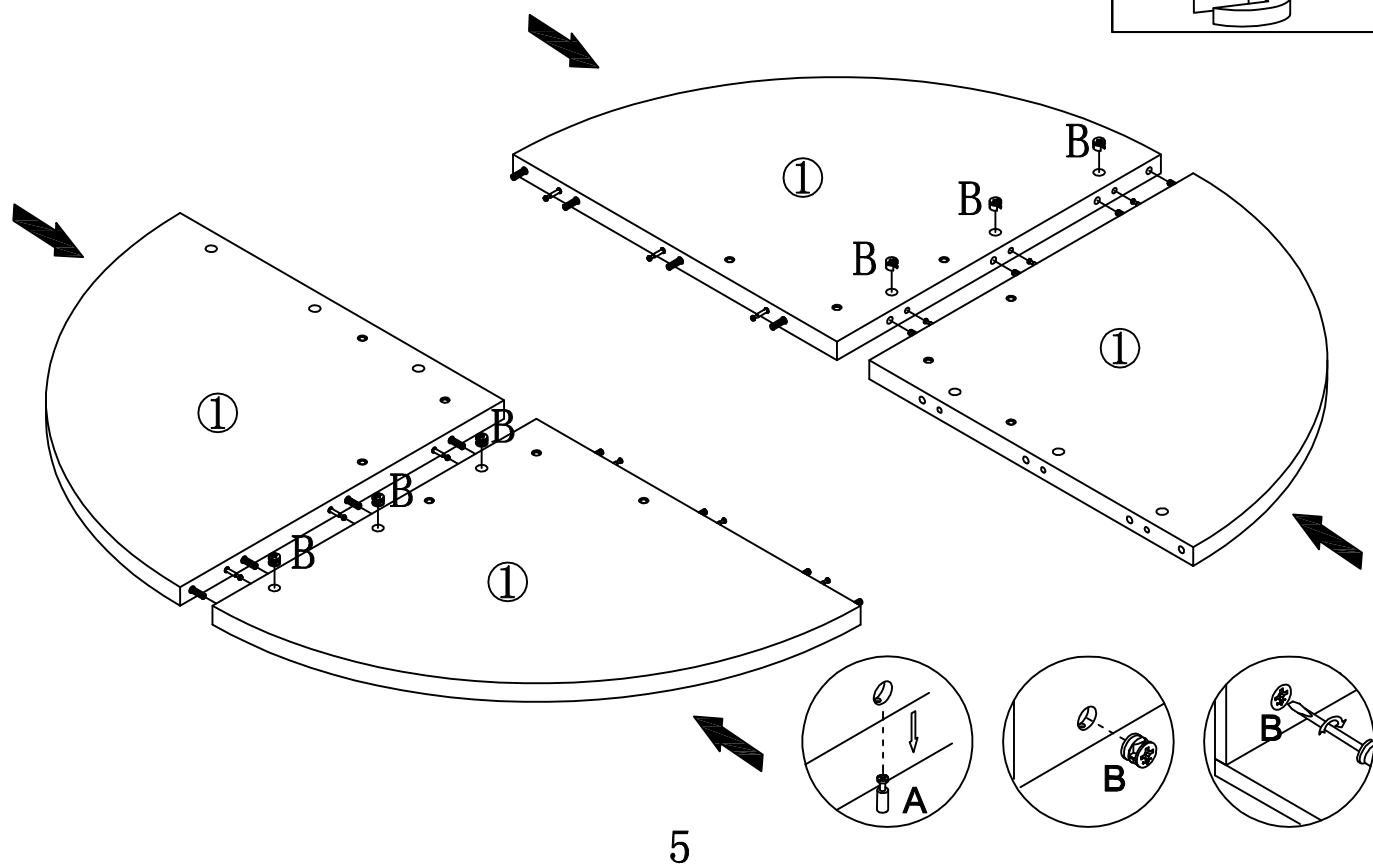


Step 3


B	x 6
	




Step 4


Align board No. 2 with the hole on board No. 1, and then install it with screw D


D	x 12
	


H	x 1
	

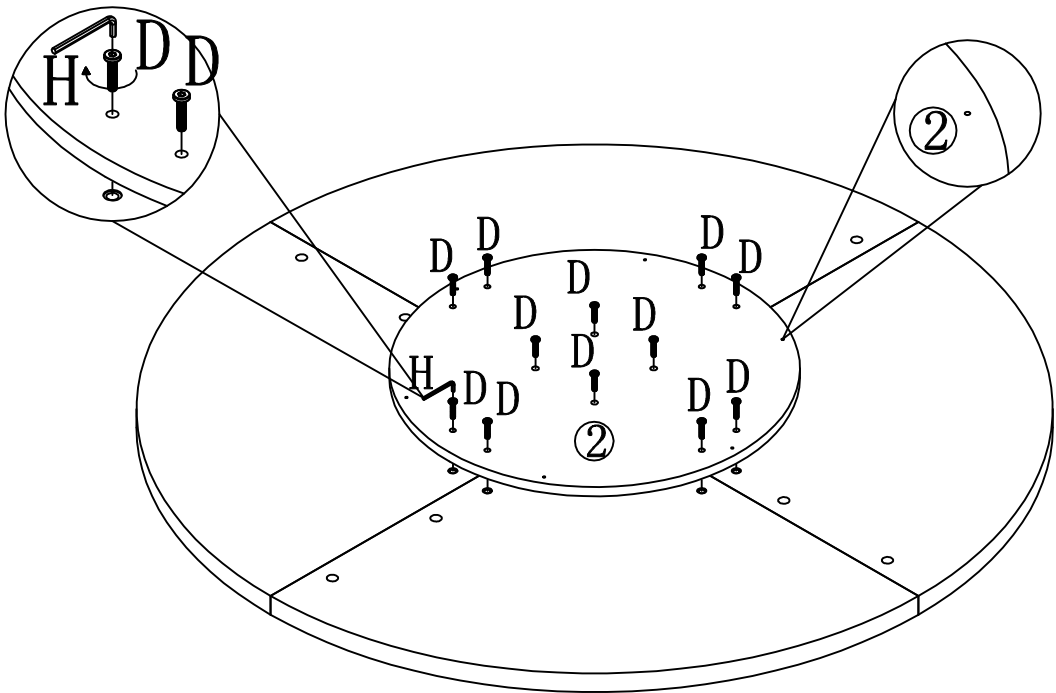


Step 5


H	x 1
	


I	x 4
	

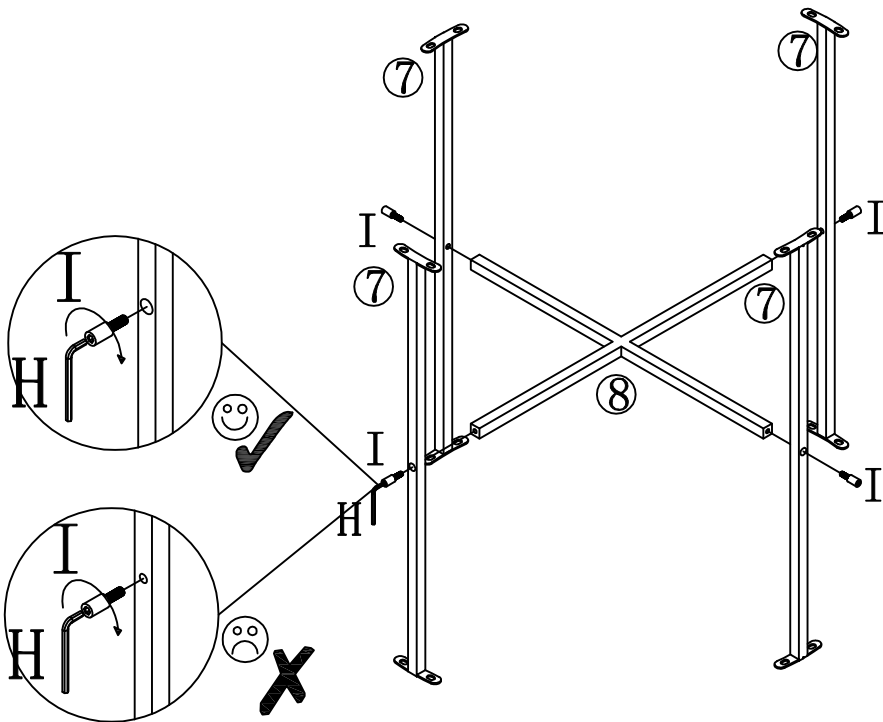


Step 6


F	x 8
	


H	x 1
	

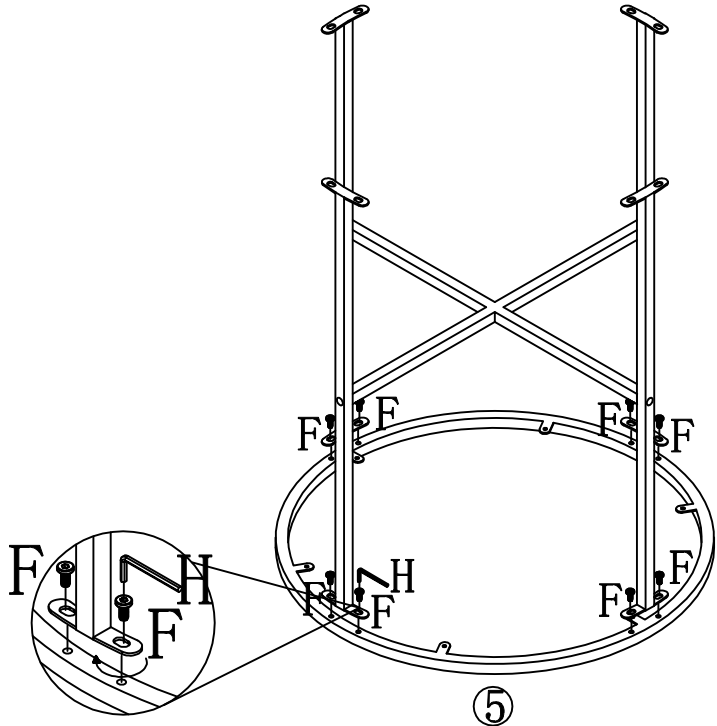


Step 7


F	x 8
	

H	x 1
	

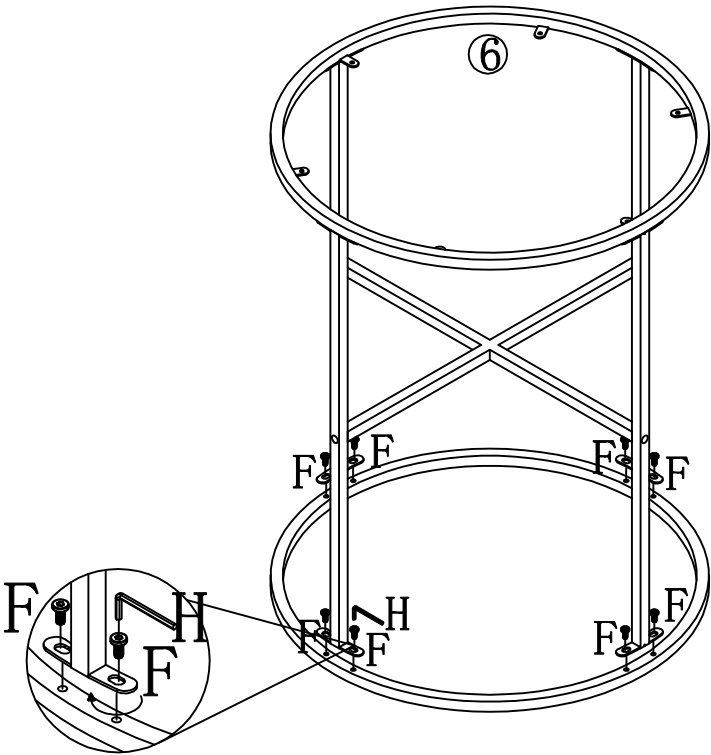


Step 8

E	x 6
	

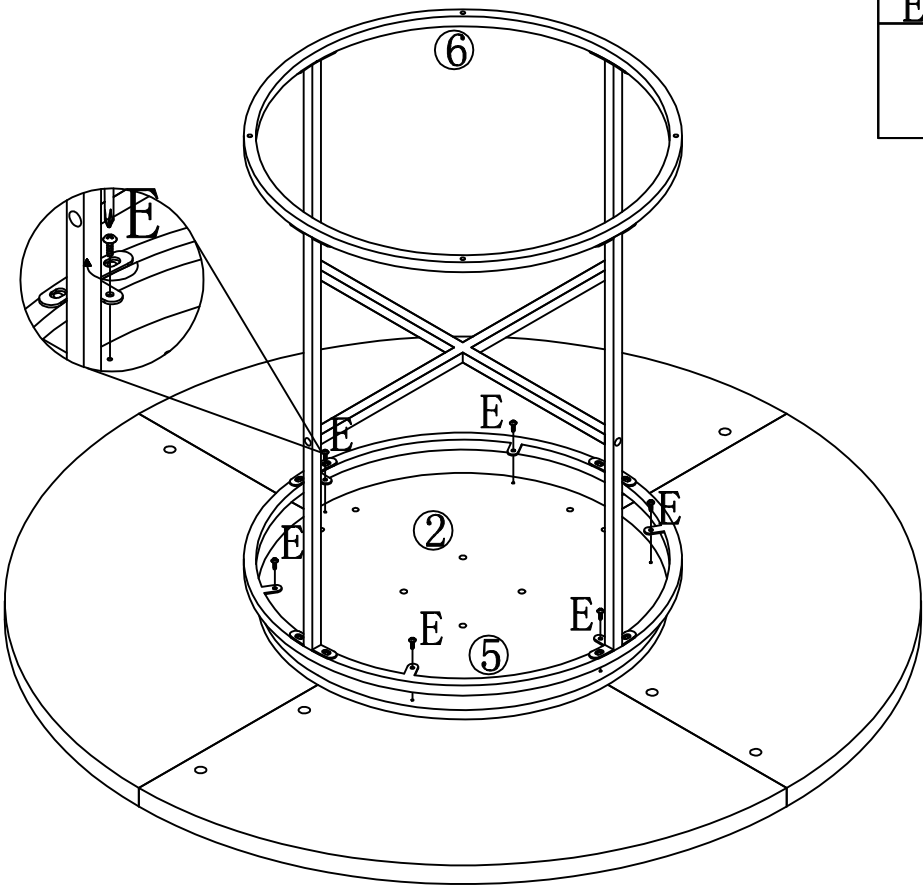


Step 9

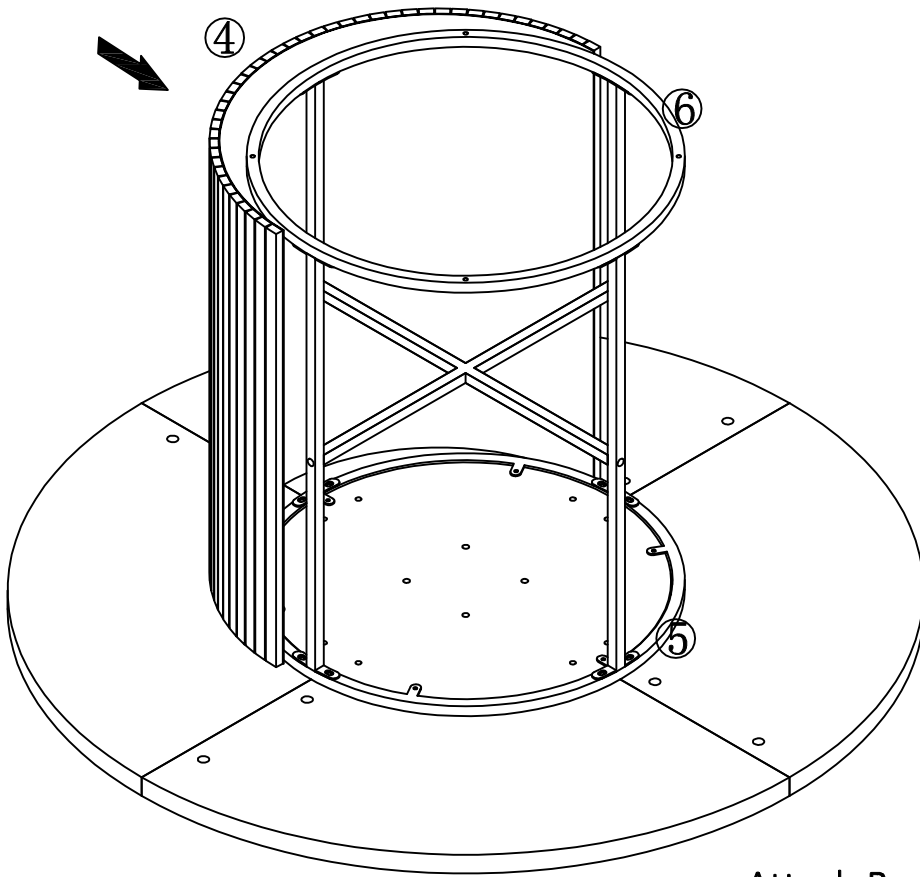


Attach Board 4 neatly to the Velcro of iron 5 and 6
(Attention: Please fully stretch part 4 and then stick it tightly along the Velcro to avoid gaps that affect the appearance. If there are obvious gaps, tear them off and stick them again.)


Step 10

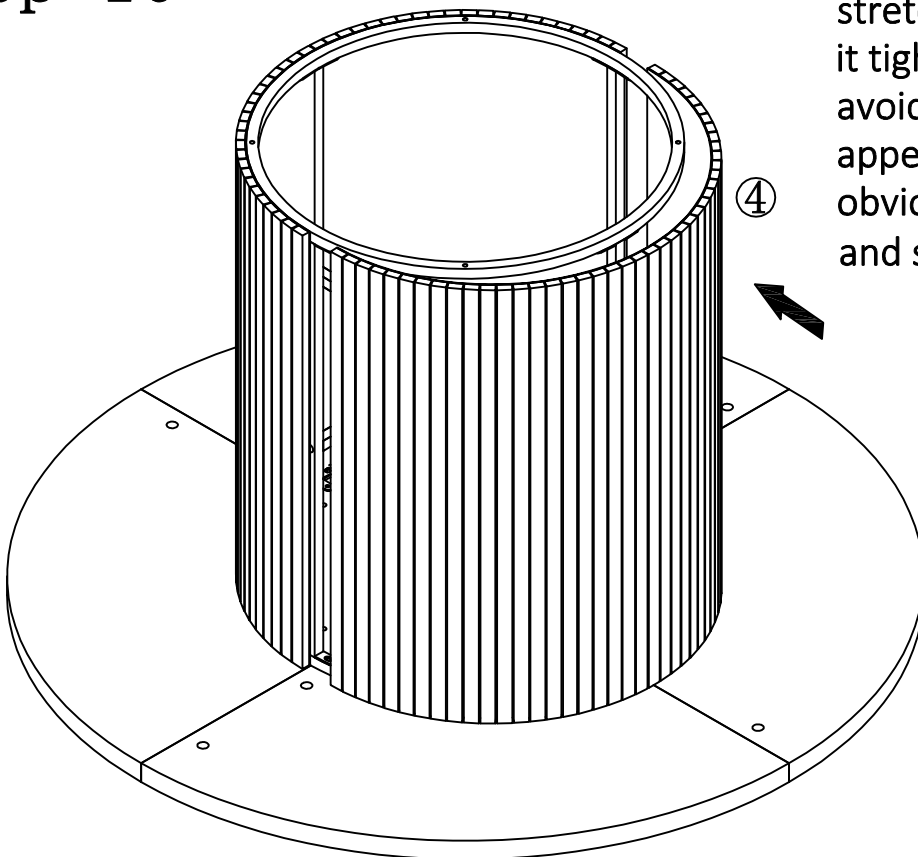

Step 11

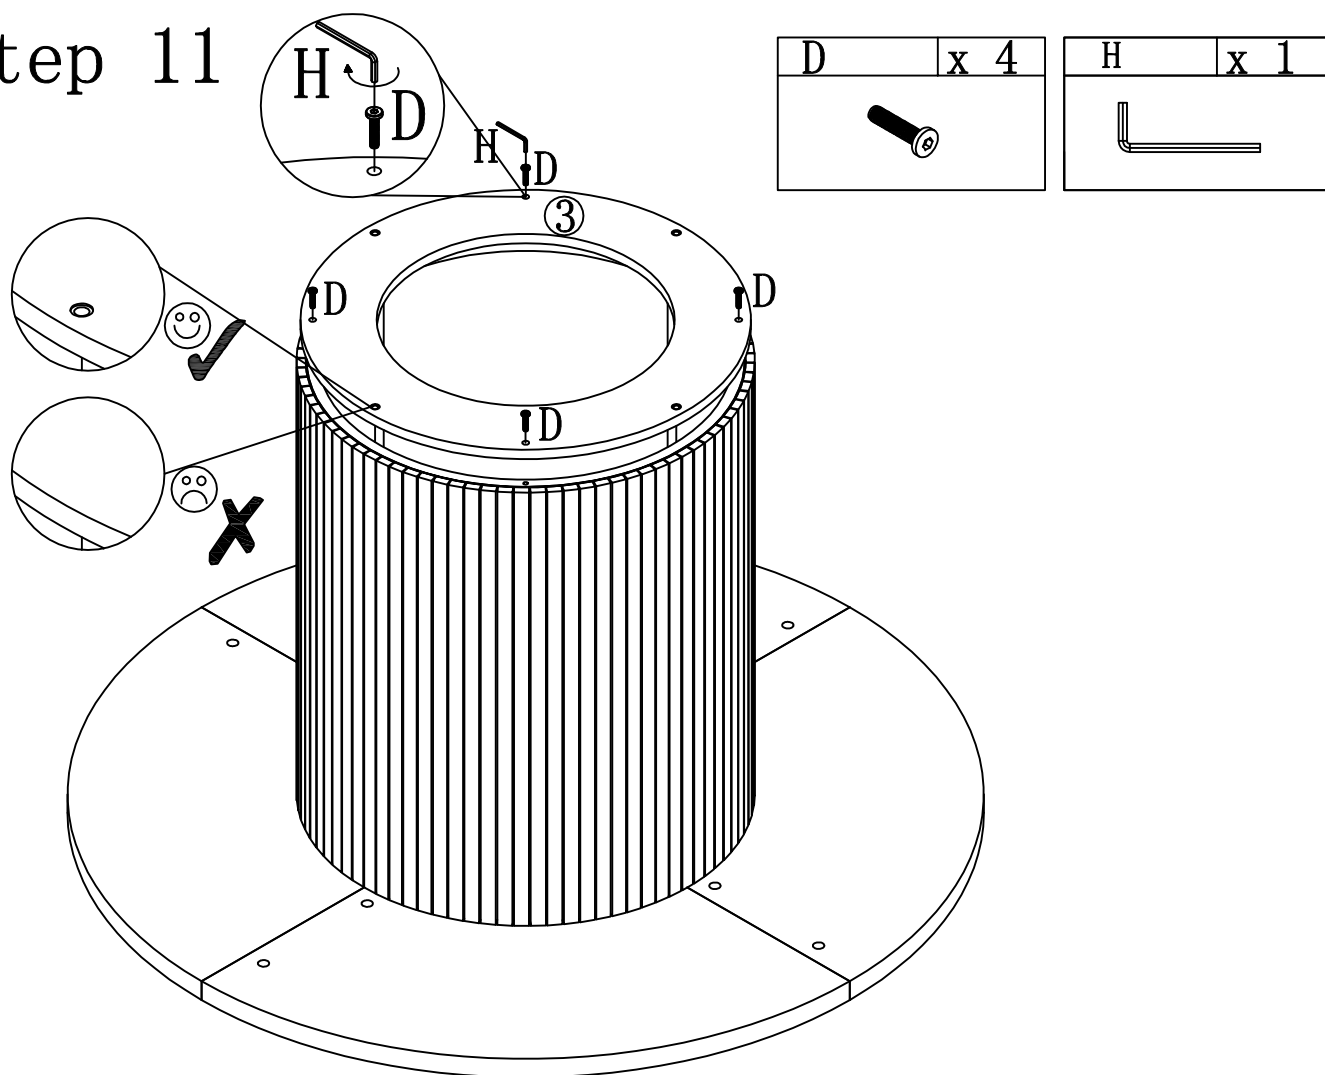

Step 12

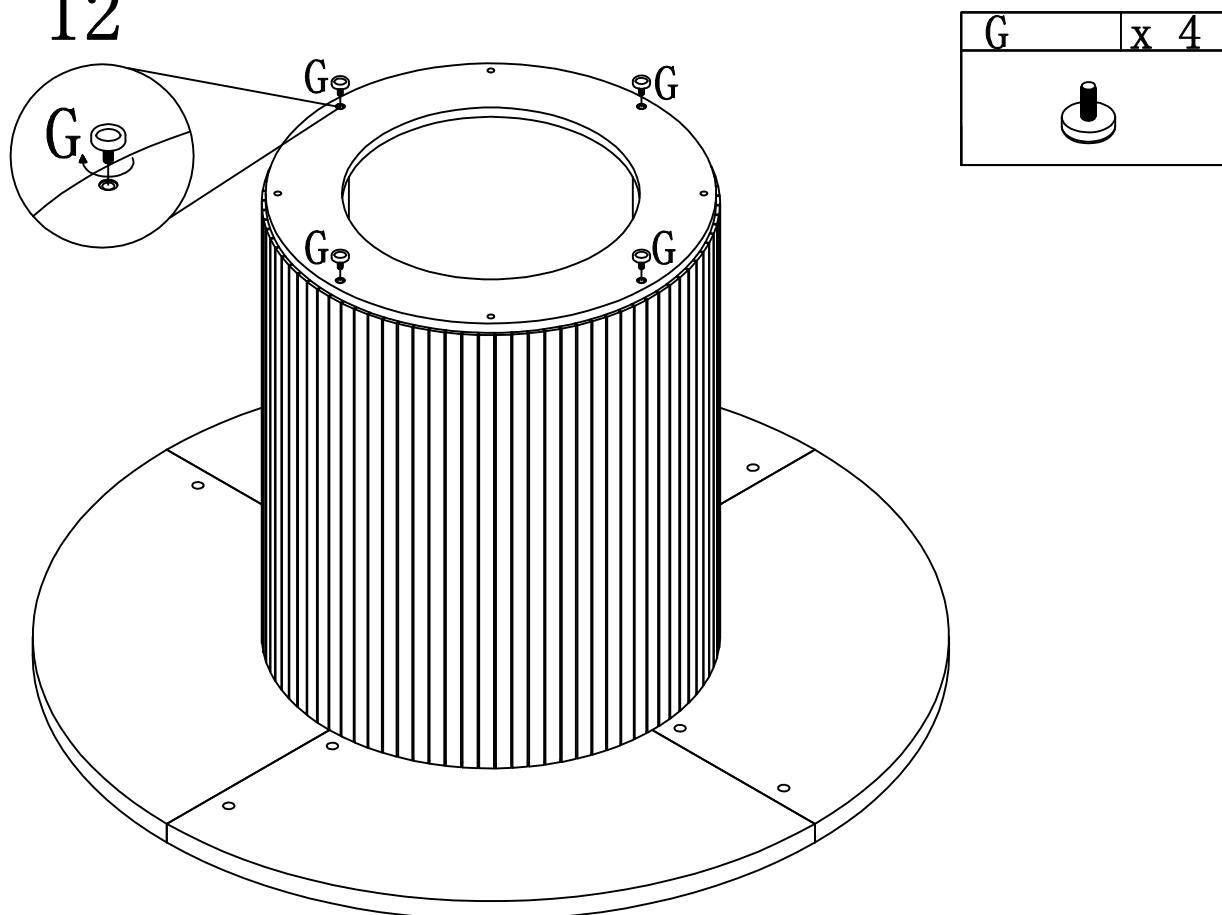

Step 13

