



INSTALLATION GUIDE









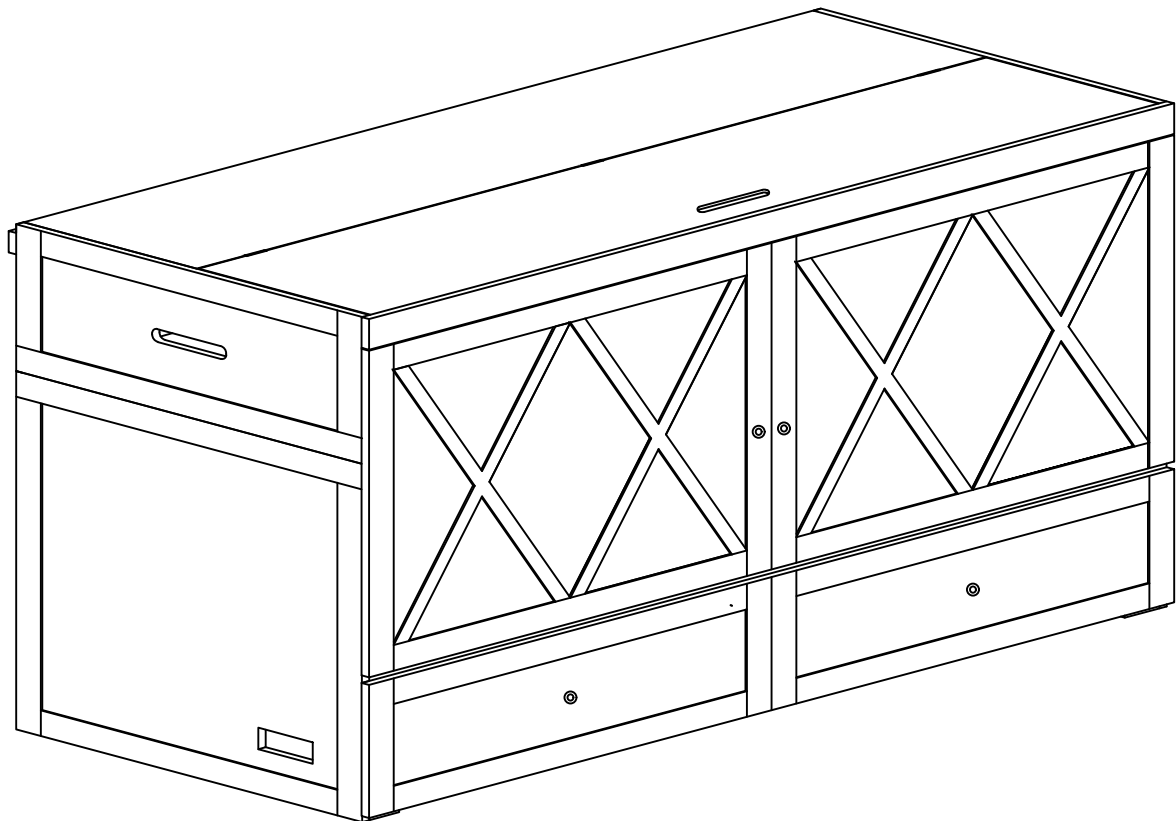



Suggest using electric tools for installation

SKU:16035S





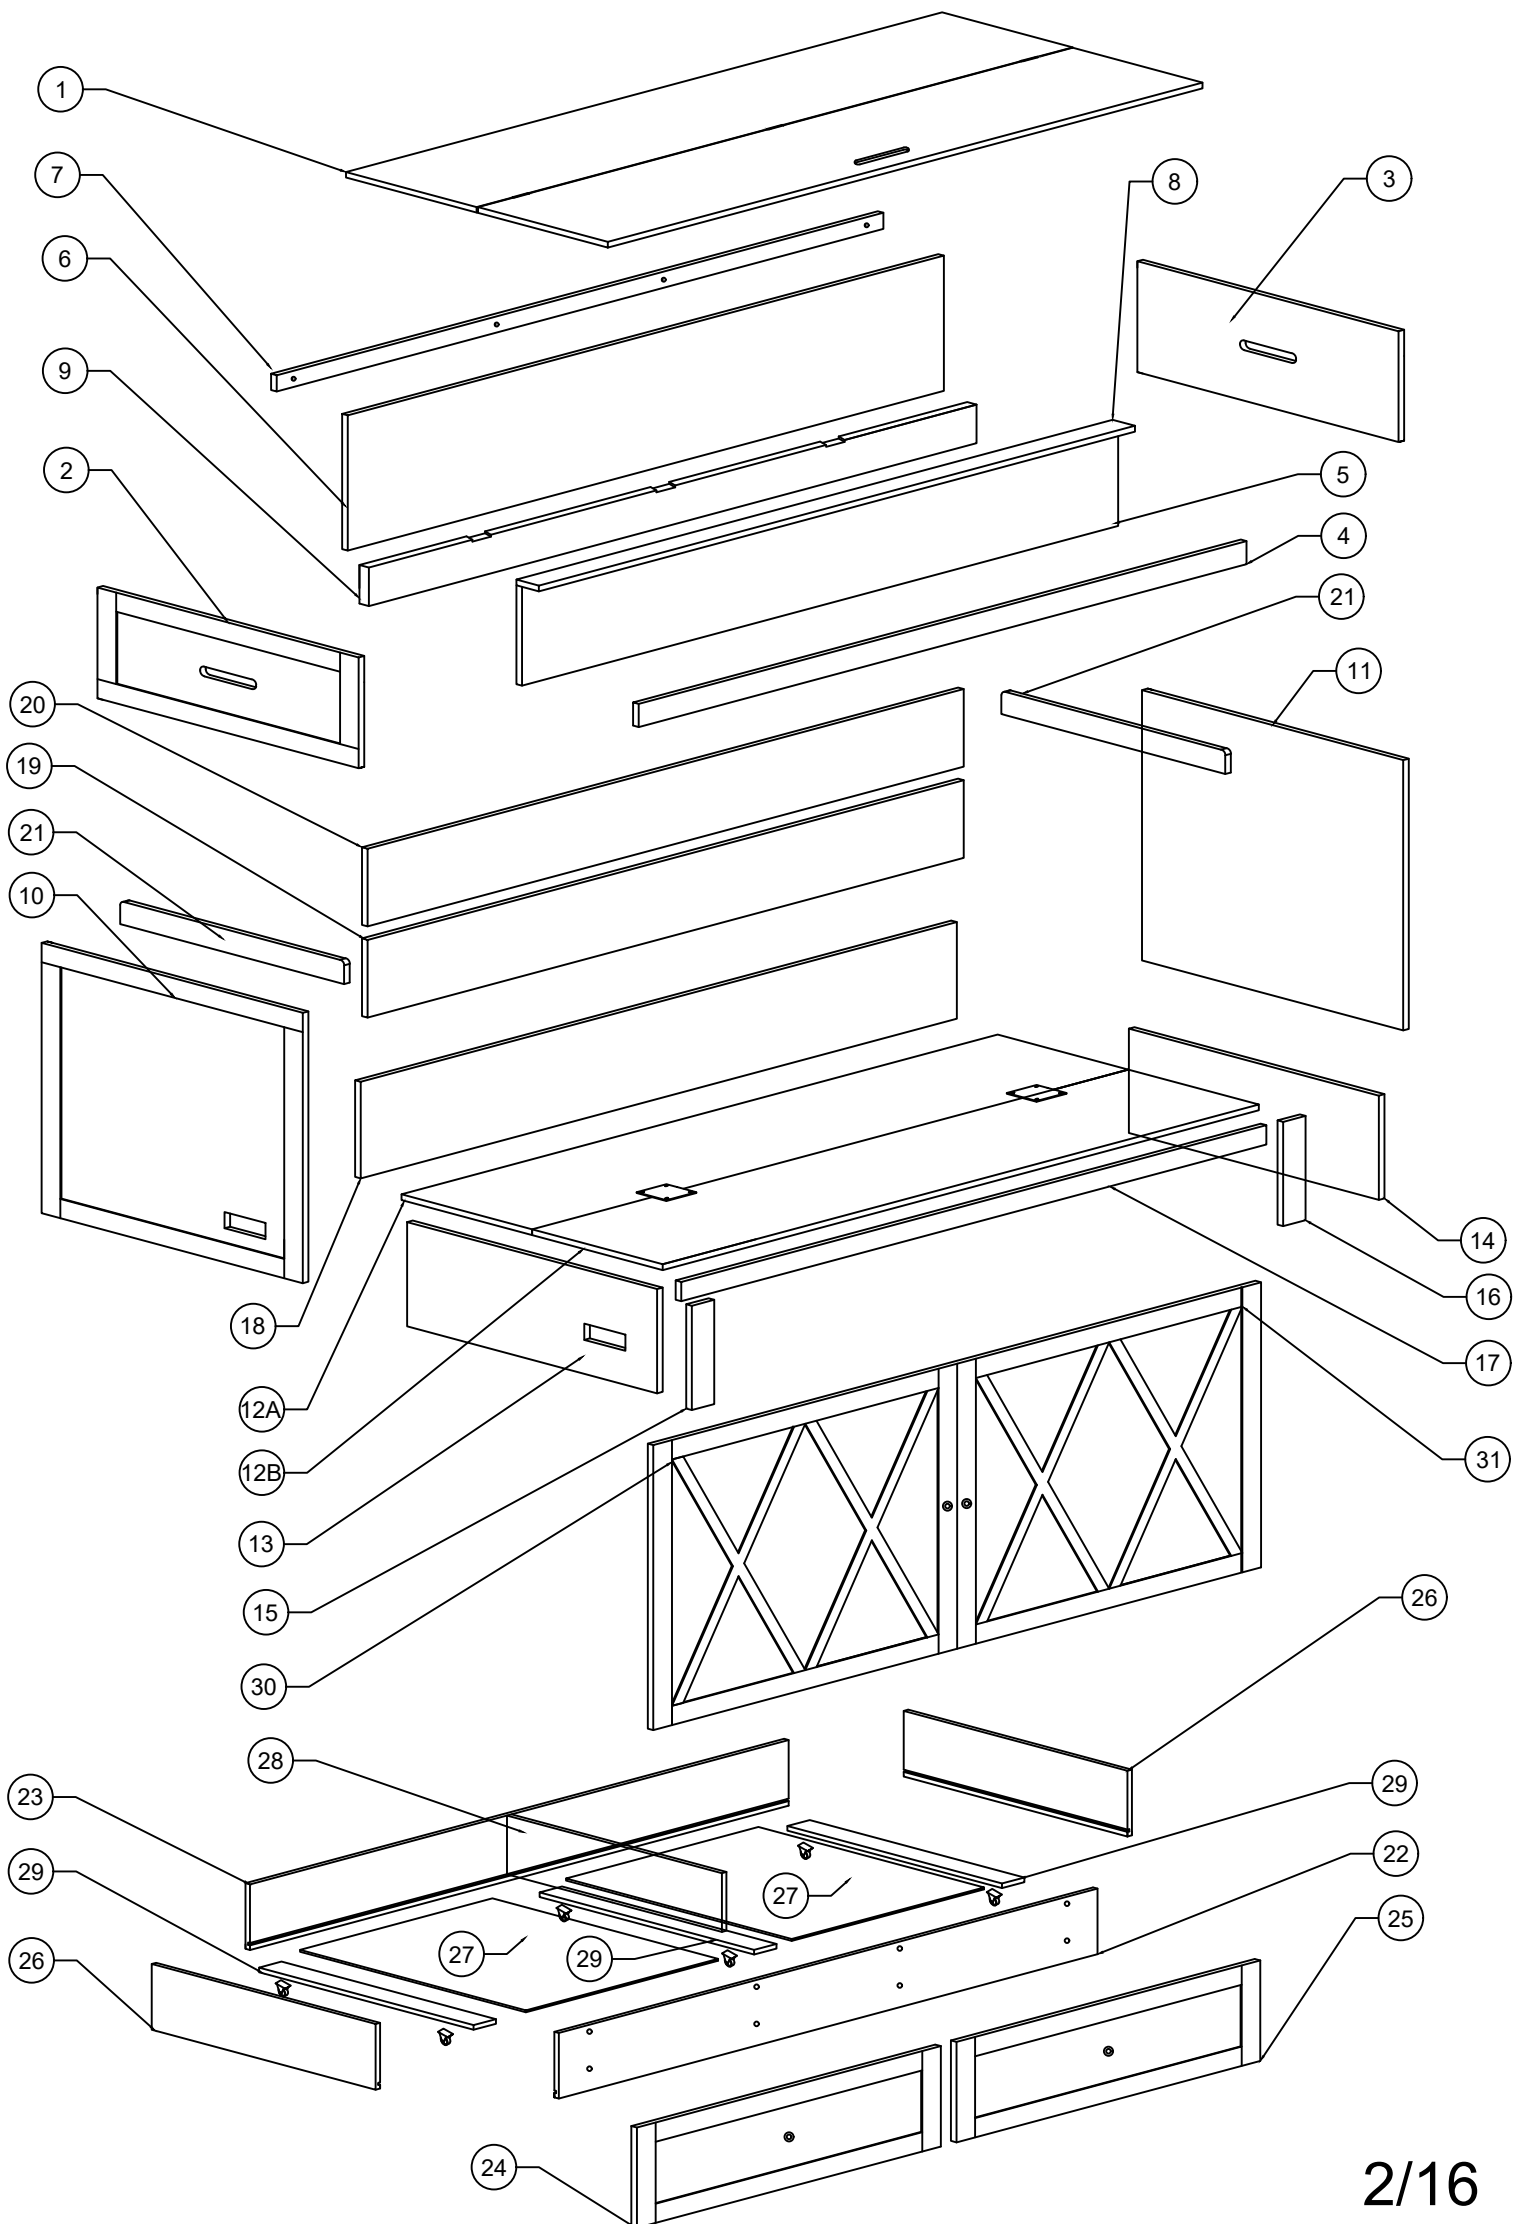


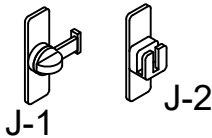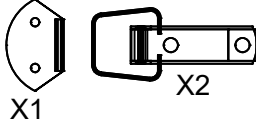A		48 PCS	J		2 PCS
B	 M15	48 PCS	T		1 PCS
C	 80*80	4 PCS	K		6 PCS
E	 M4*30	25 PCS	L		4 PCS
D	 M8*40	10 PCS	P		1 PCS
F	 M3.5*14	72 PCS	Q	 M7*38	17 PCS
H	 M4*18	4 PCS	R	 M6*13	17 PCS
I		4 PCS	Z	 M6*30	4 PCS
S	 M6*20	20 PCS	M	 M10*5	2 PCS
X	 X1 X2	2 PCS	Y		2 PCS
N	 M3.5*12	8 PCS			


A		7 PCS	B	 M15	7 PCS
---	--	-------	---	---	-------


STEP 1

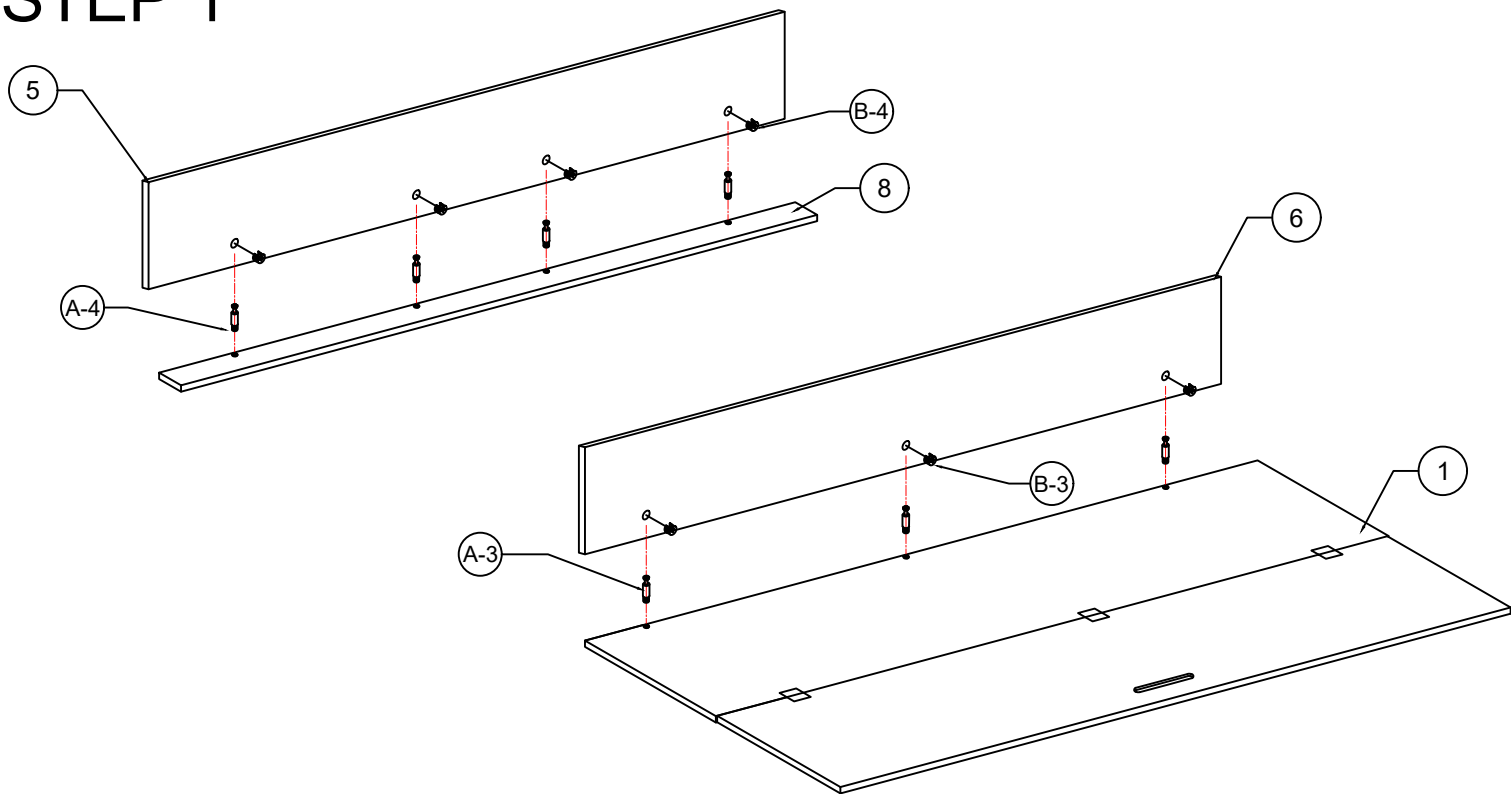


A		18 PCS	B	 M15	18 PCS
D	 M8*40	4 PCS			


STEP 2

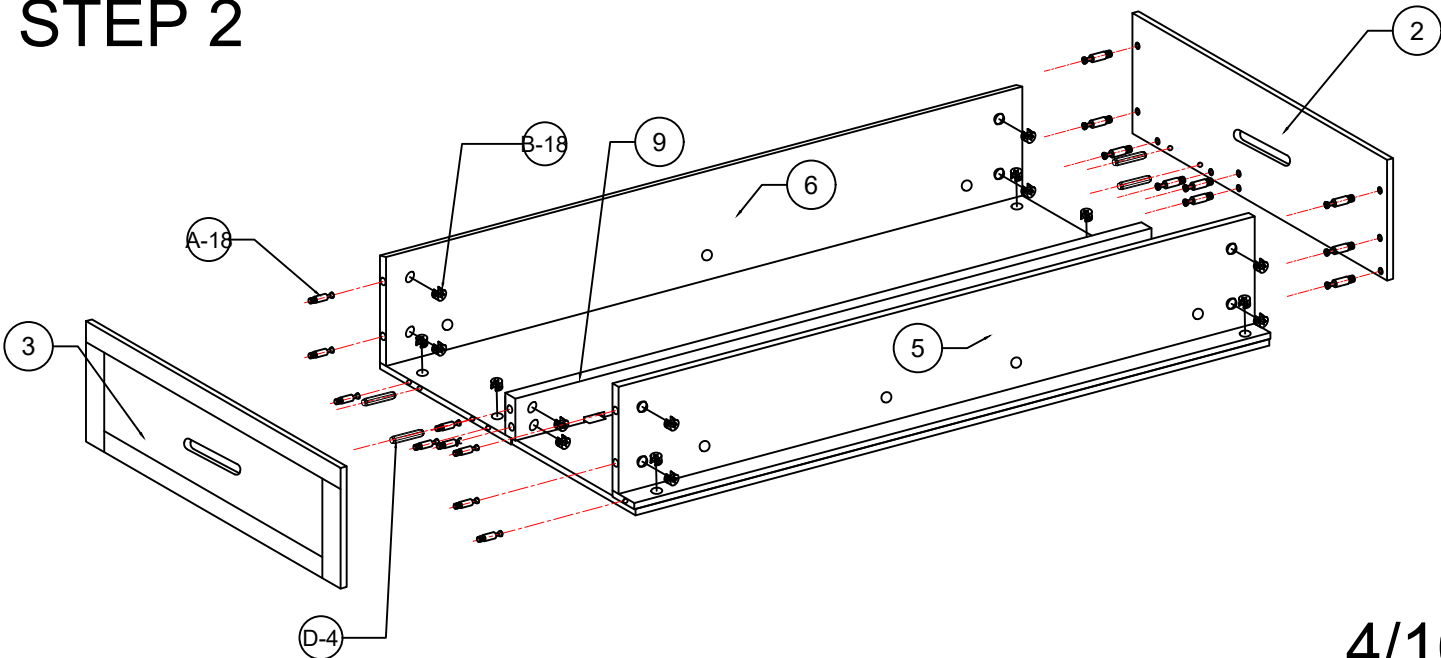


Y		2 PCS	N	 M3.5*12	8 PCS
---	--	-------	---	--	-------


STEP 3

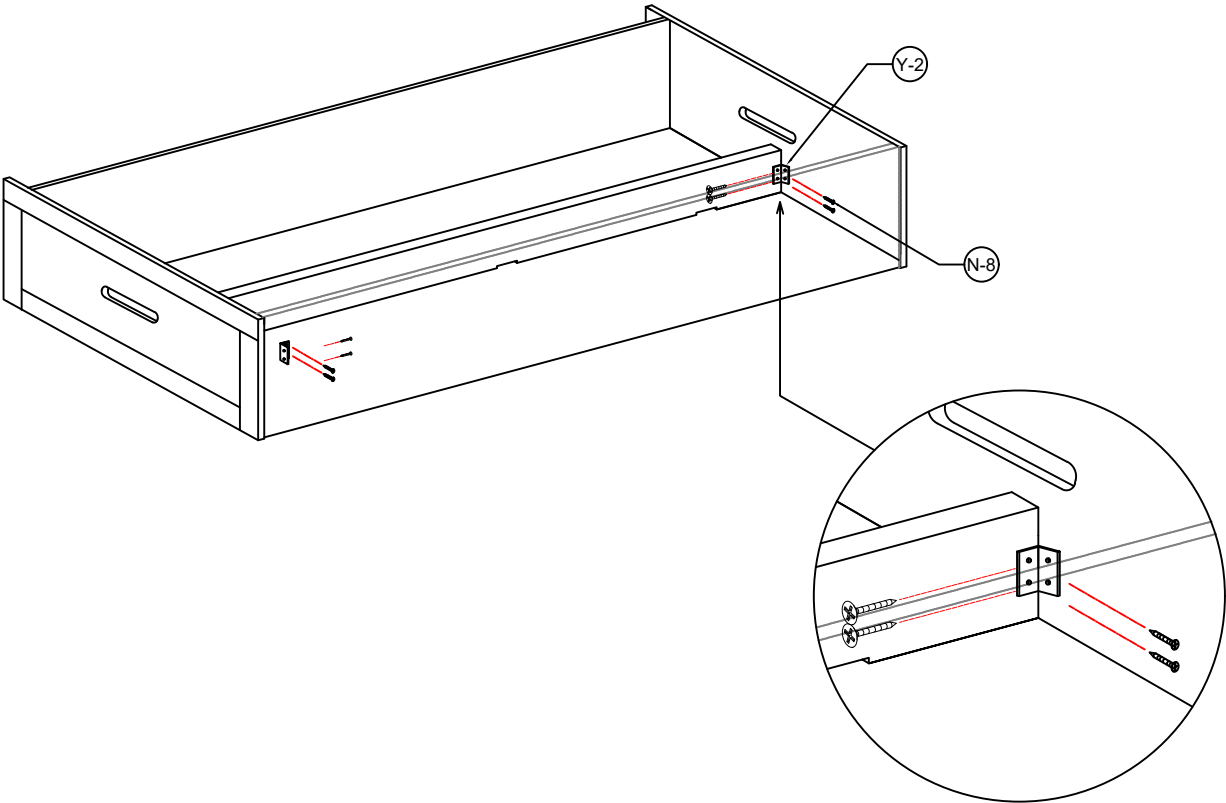


A		5 PCS	B	 M15	5 PCS
---	---	-------	---	--	-------


STEP 4

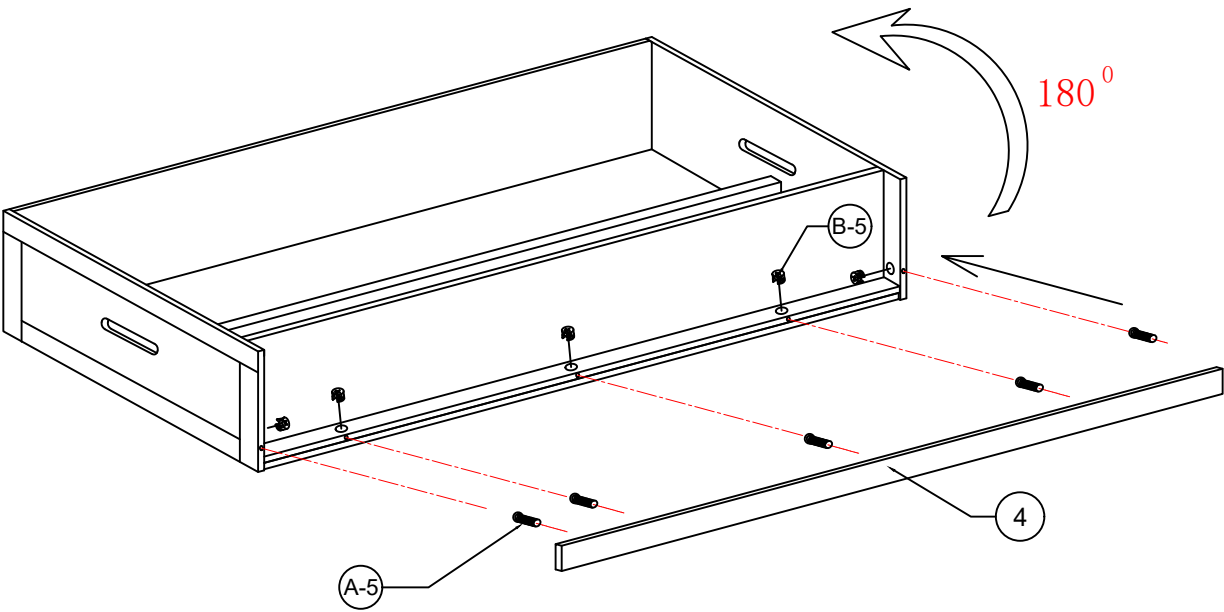


Z	 M6*30	4 PCS	F	 M3.5*14	4 PCS
X	 X1	2 PCS	M	  M10*5	2 PCS

STEP 5

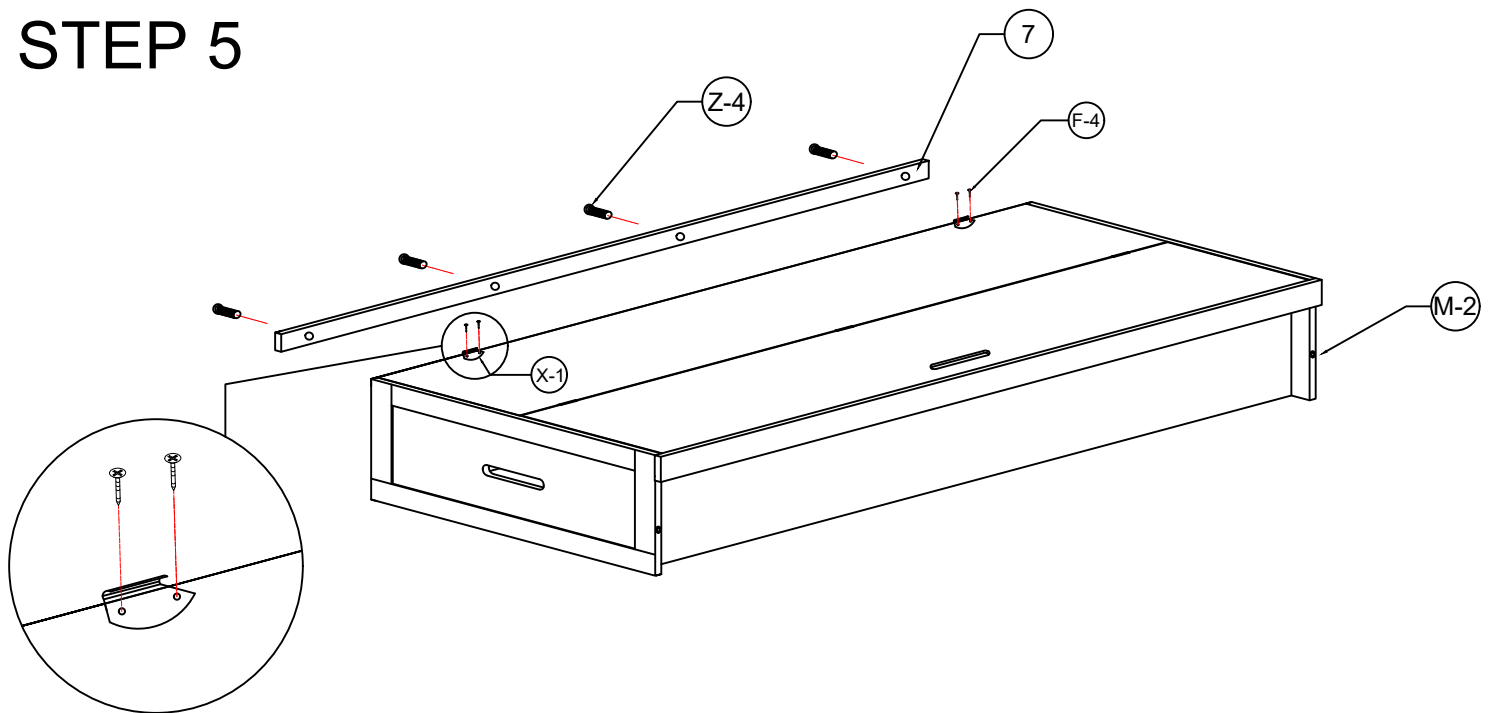


Q	 M7*38	4 PCS	D	 M8*40	2 PCS
---	--	-------	---	--	-------

STEP 6

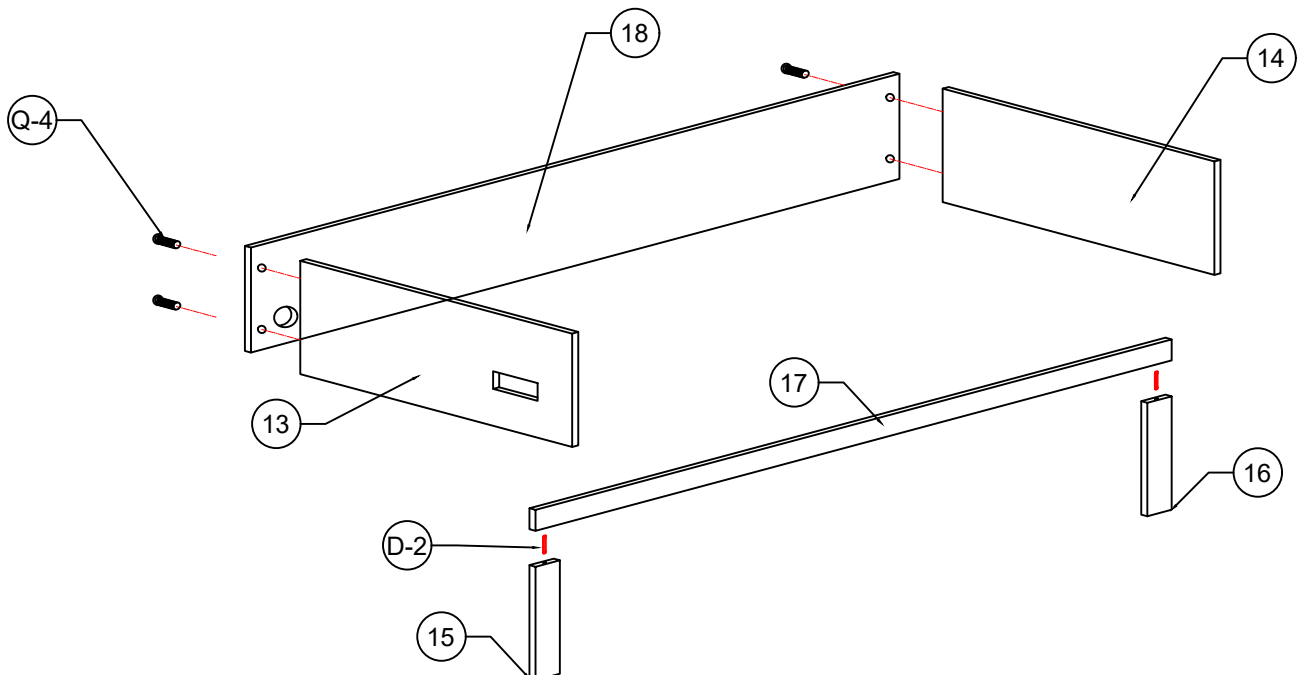

A



6 PCS


B



M15

6 PCS

STEP 7

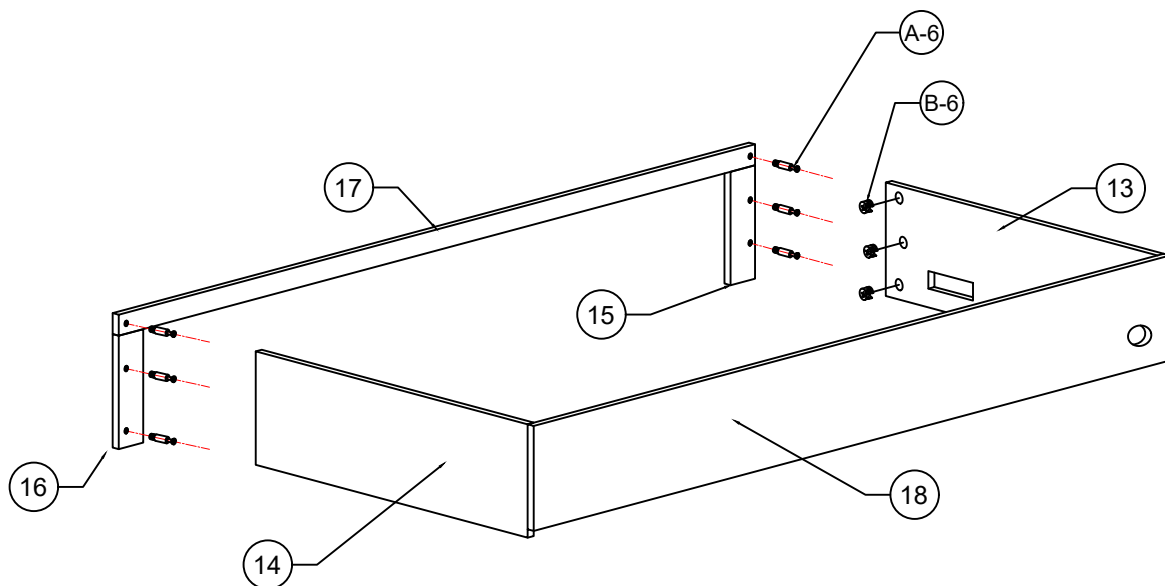


Q



M7*38


13 PCS



STEP 8

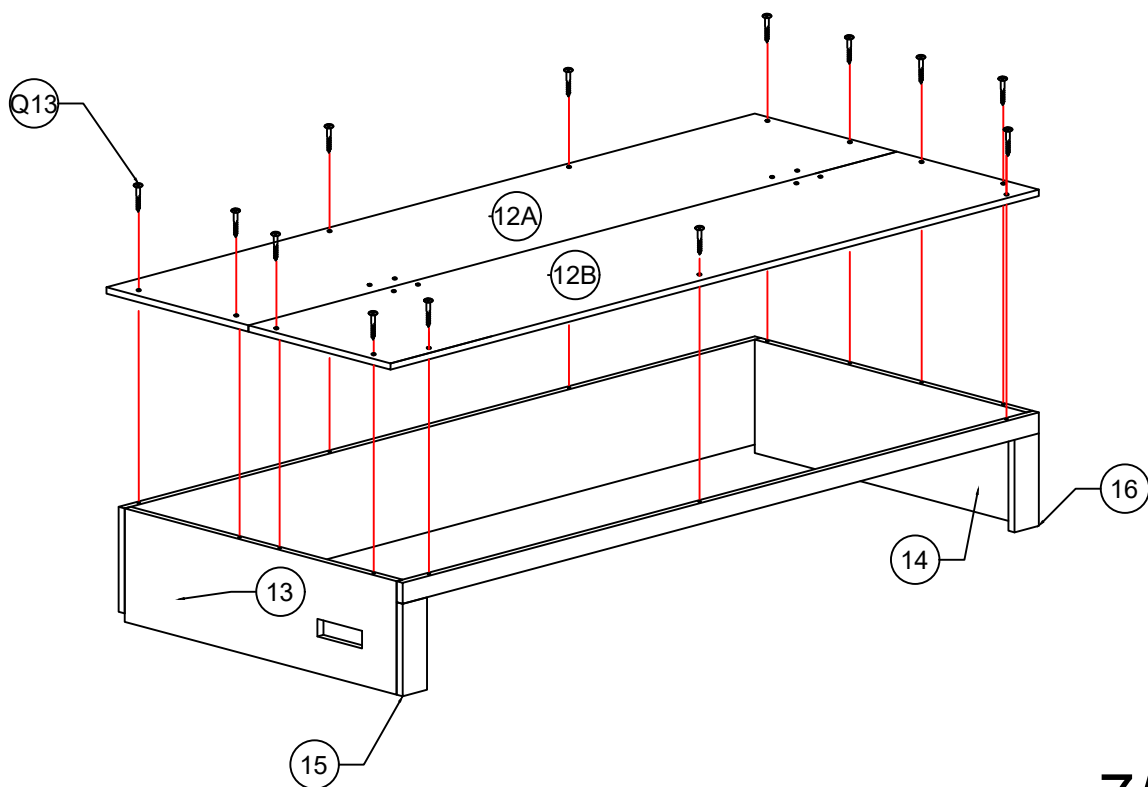


R	 M6*13	8 PCS	C	 80*80	2 PCS
---	---	-------	---	---	-------


STEP 9

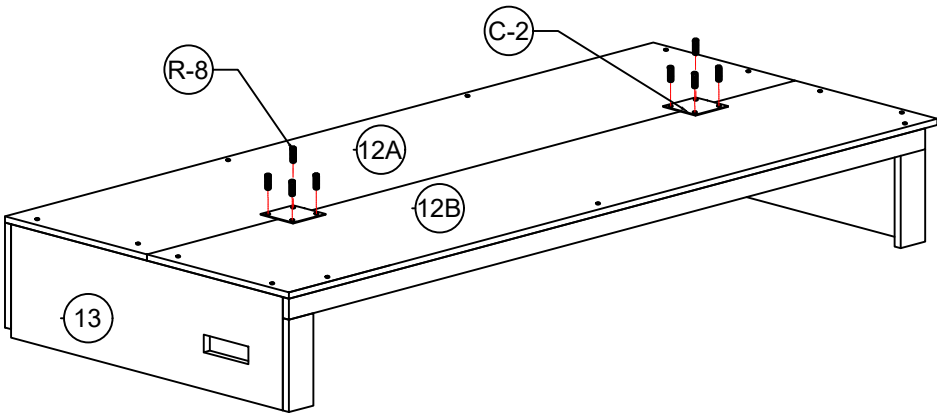


A		3 PCS	B	 M15	3 PCS
D		3 PCS			



STEP 10

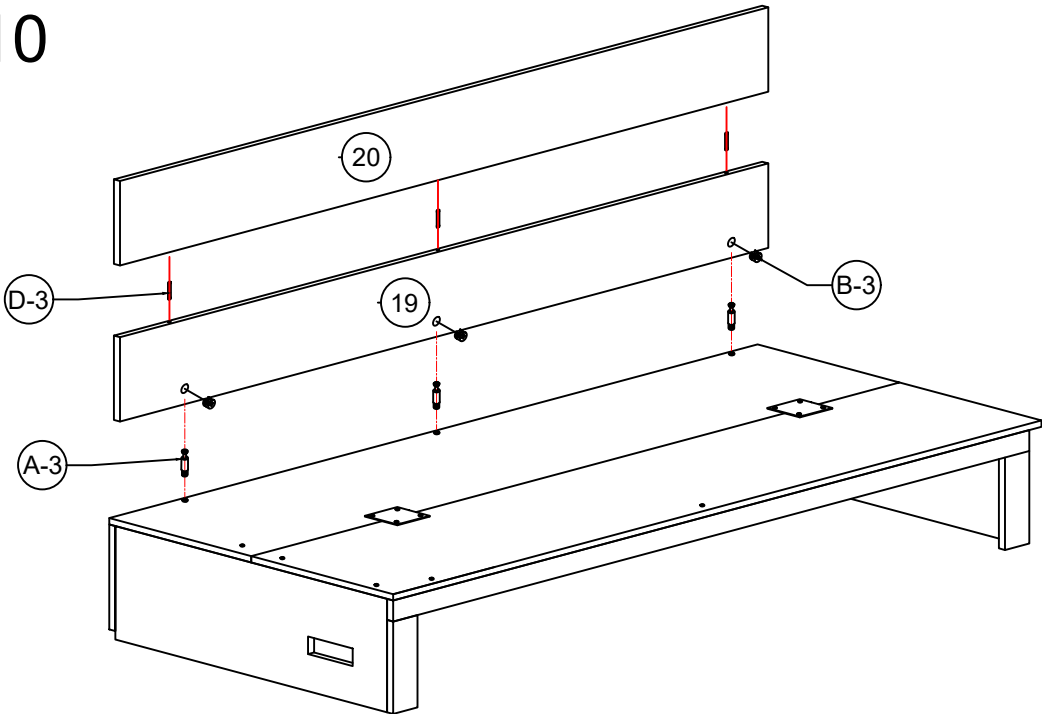


A		8 PCS	B	 M15	8 PCS
S	 M6*20	8 PCS			


STEP 11

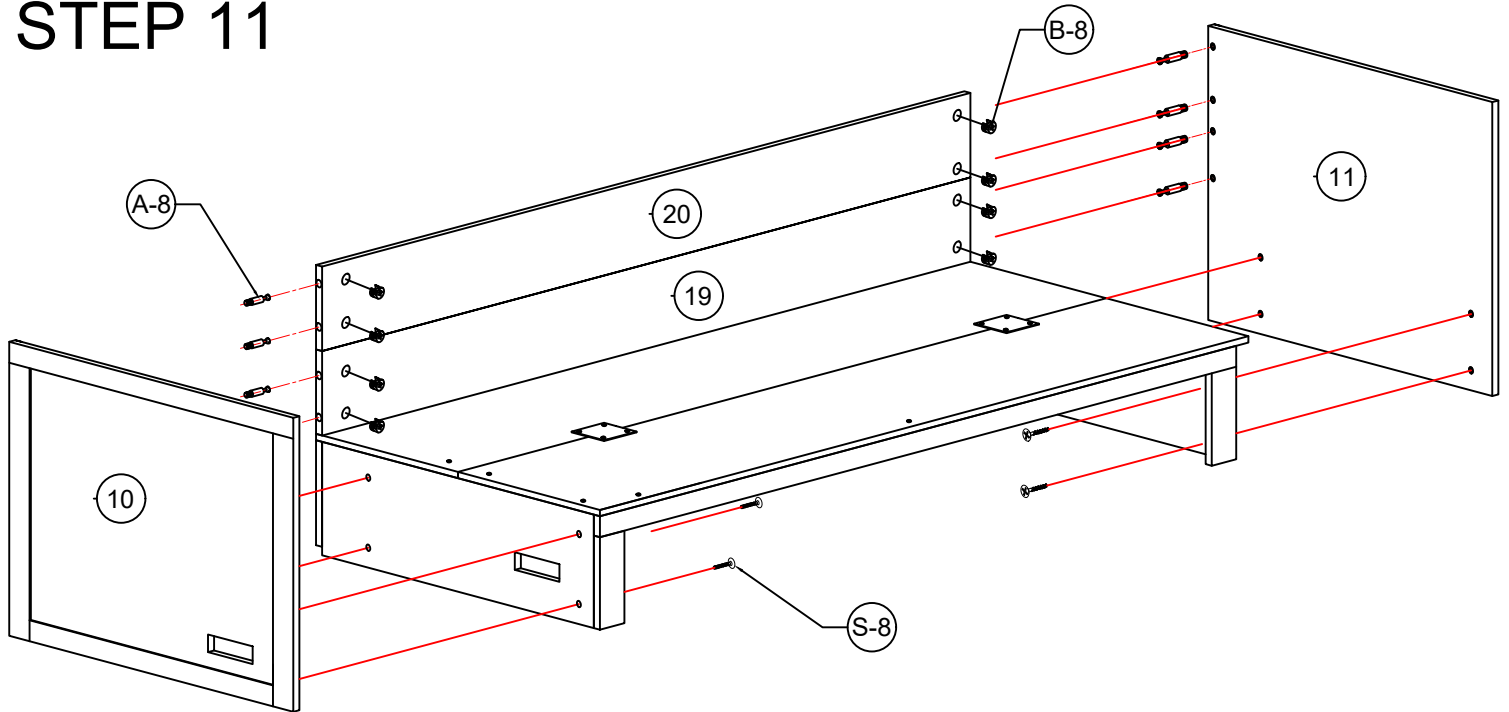


S	 M6*20	4 PCS	F	 M3.5*14	2 PCS
P		1 PCS			


STEP 12

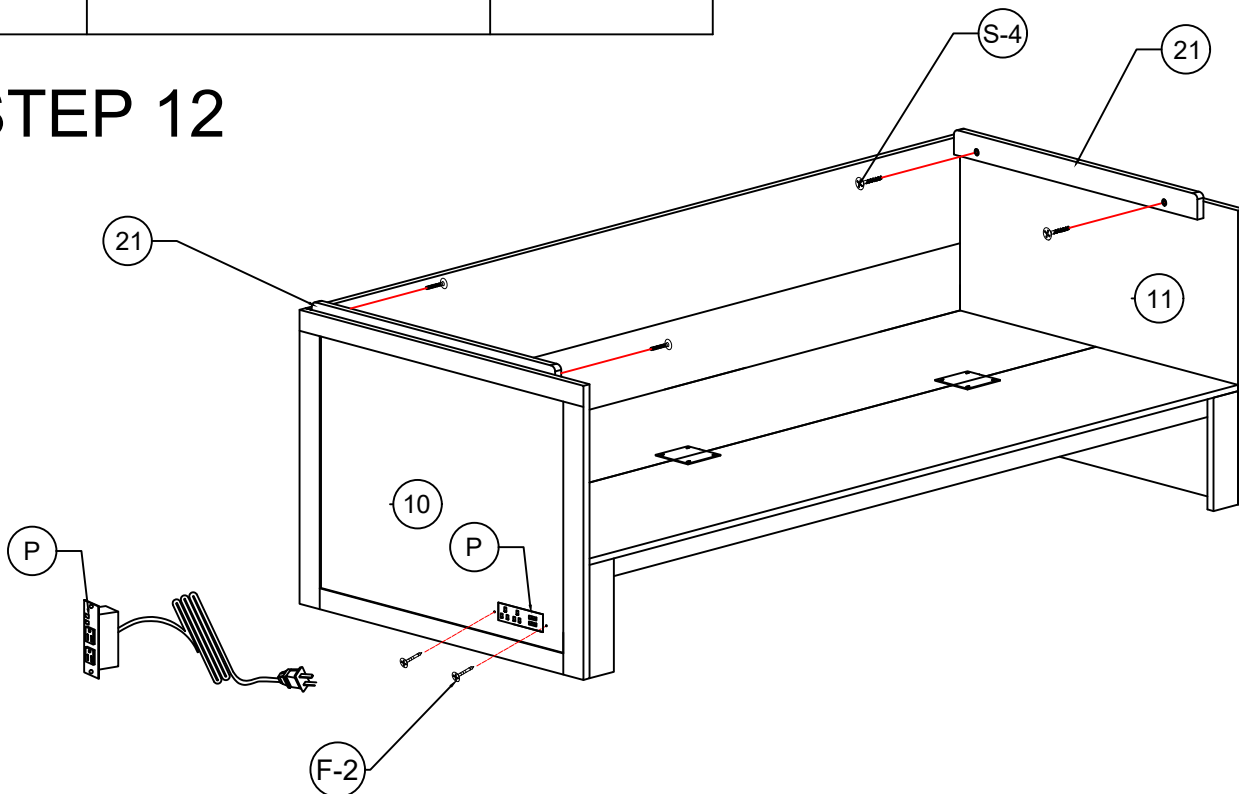


F	 M3.5*14	4 PCS	J	 J-2	2 PCS
---	--	-------	---	---	-------


STEP 13

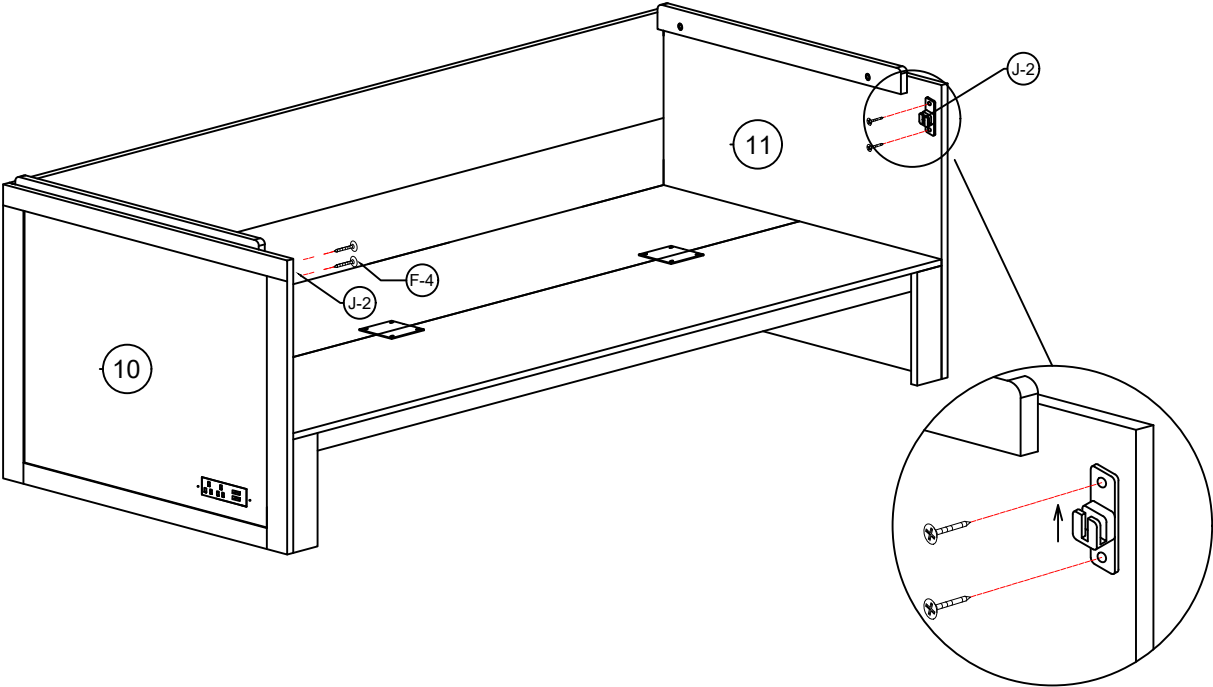


E	 M4*30	8 PCS	K		6 PCS
---	--	-------	---	---	-------

F	 M3.5*14	12 PCS
---	--	--------

STEP 14

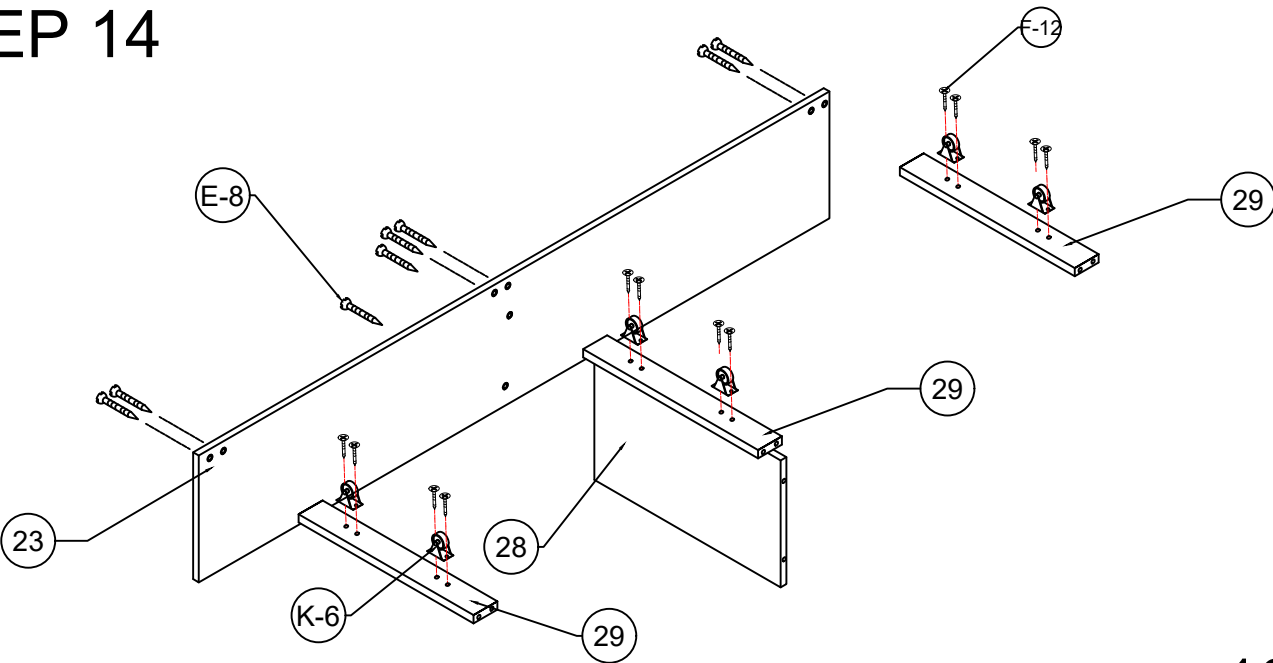


E




M4*30

8 PCS

STEP 15

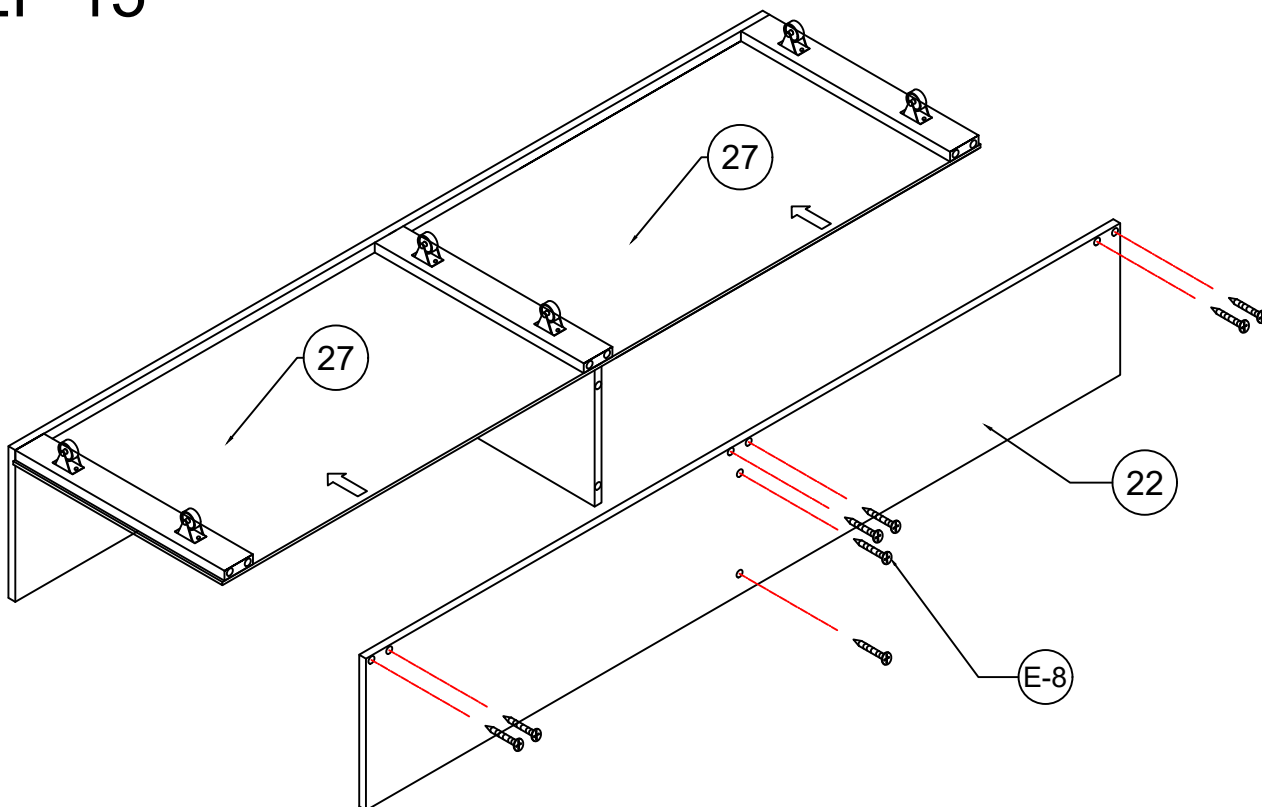


E




M4*30


8 PCS


STEP 16

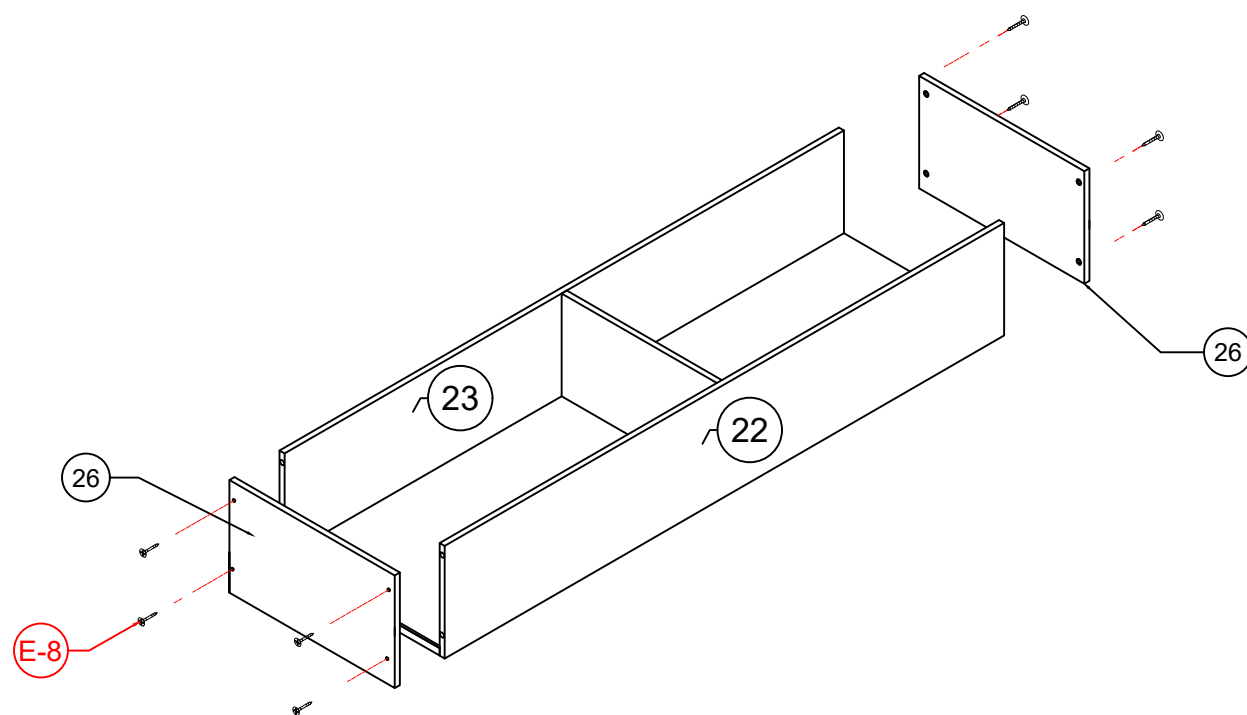


H	 M4*18	2 PCS	I	 	2 PCS
S	 M6*20	8 PCS			

STEP 17


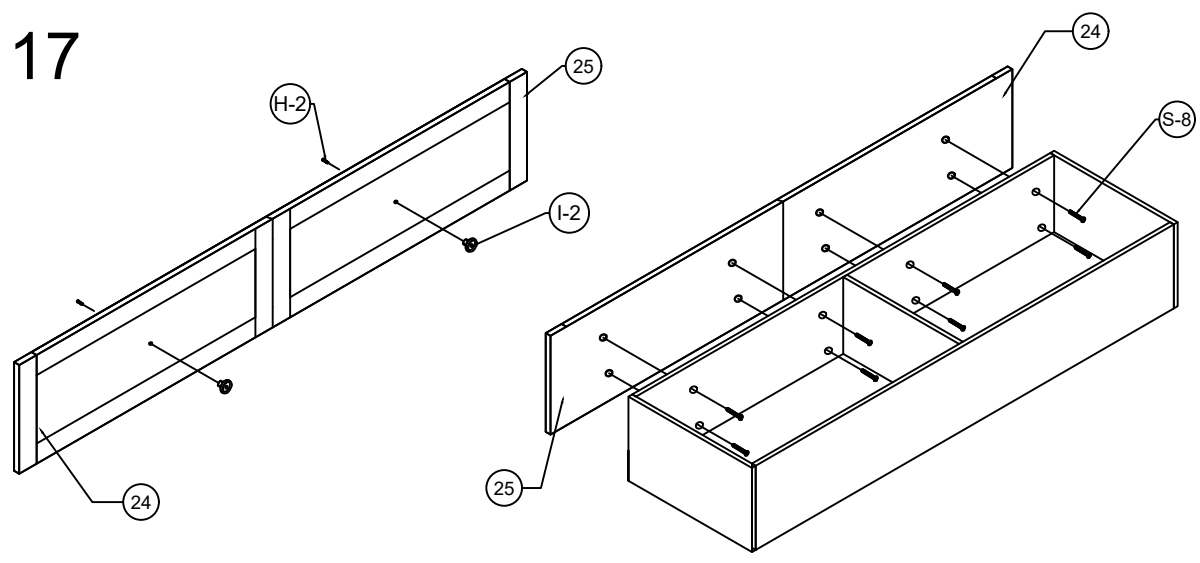


H	 M4*18	2 PCS	I	 	2 PCS
C	 80*80	2 PCS	R	 M6*13	8 PCS


STEP 18

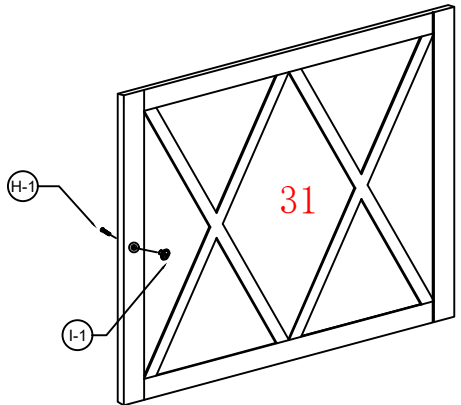

Install the handle first, then install the iron plate.

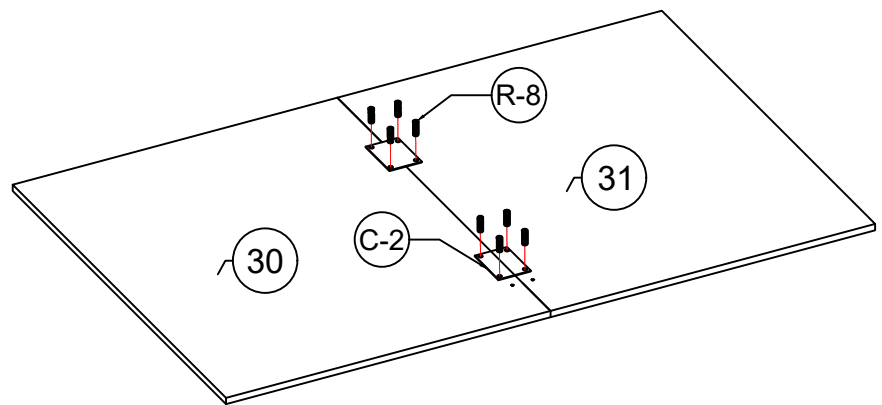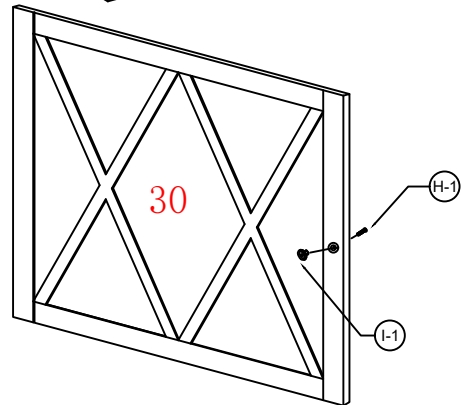


STEP 19

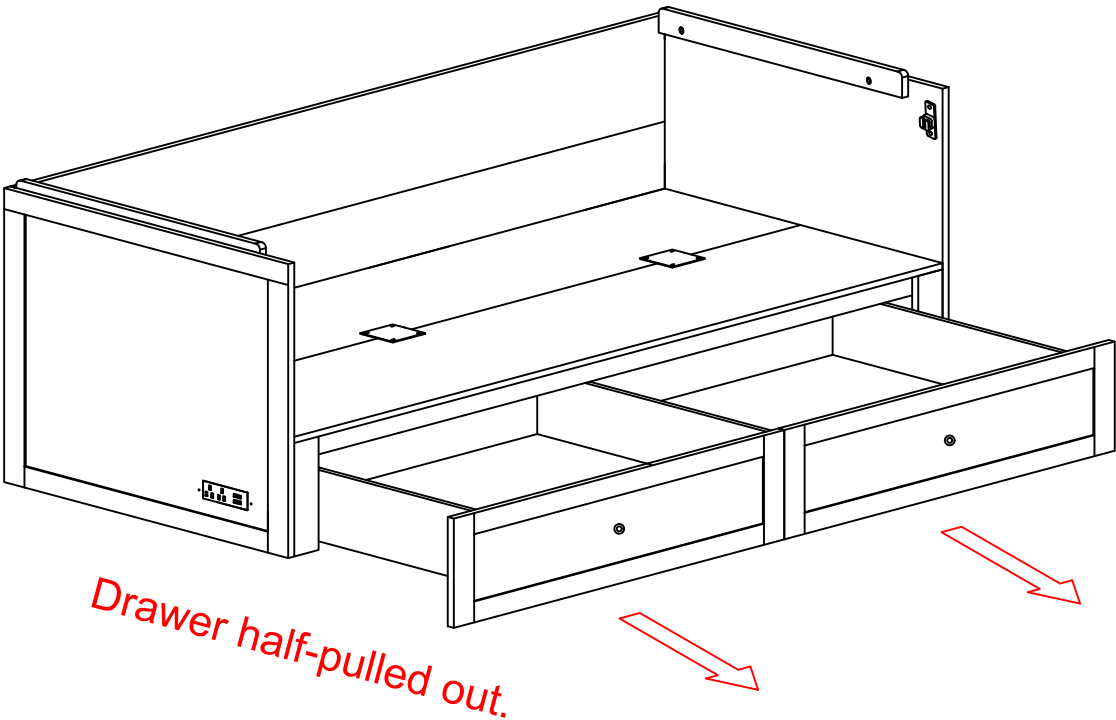


L		4 PCS	F	 M3.5*14	46 PCS
J	 J-1	2 PCS	X	 X2	2


STEP 20

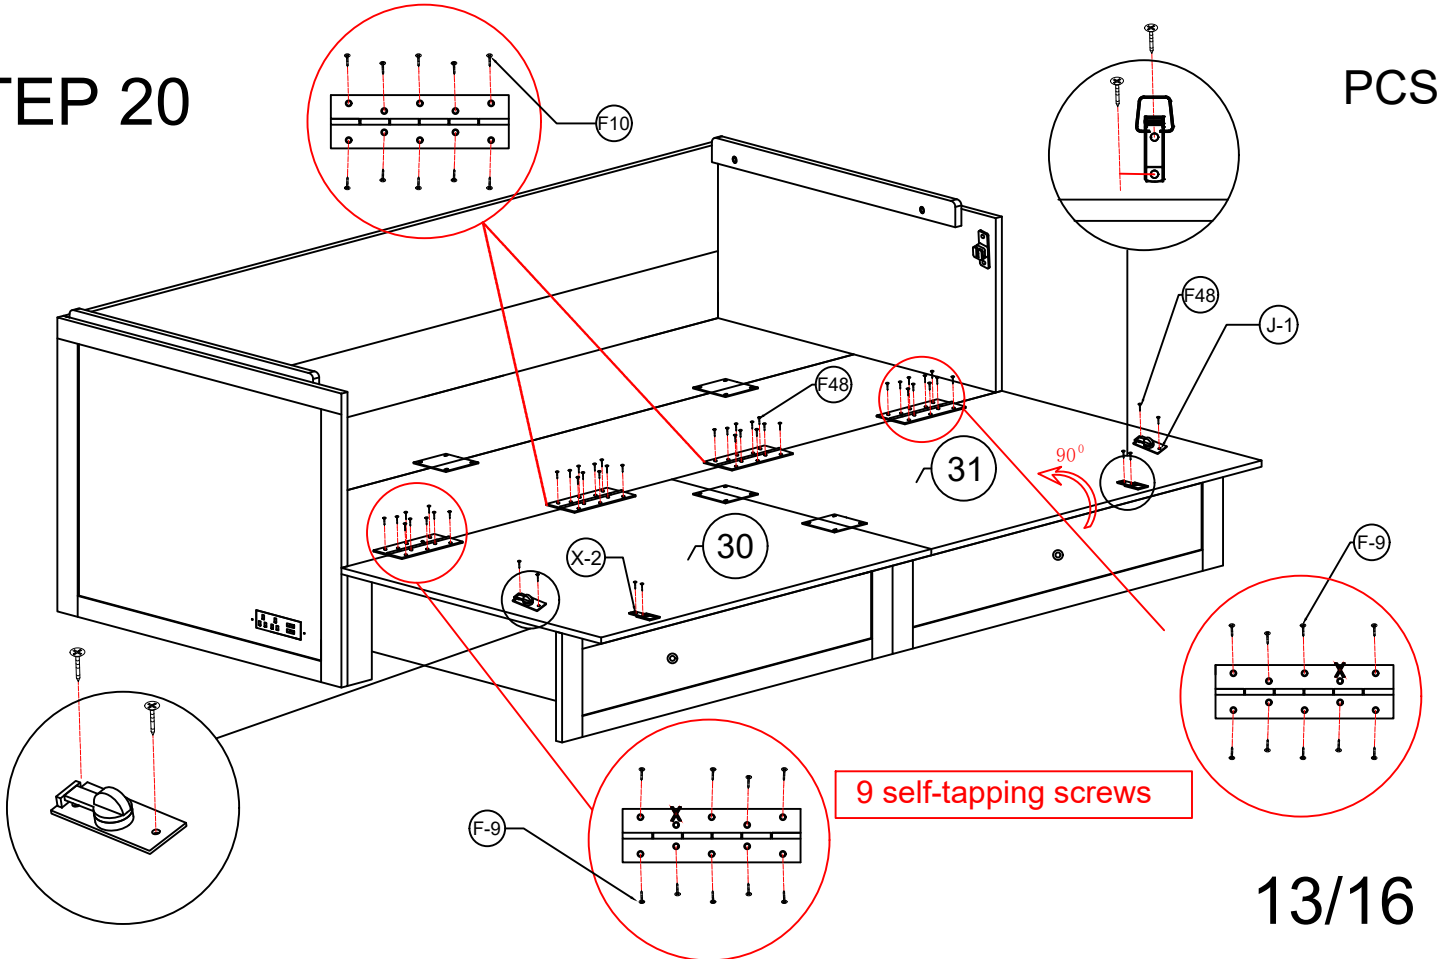


STEP 21

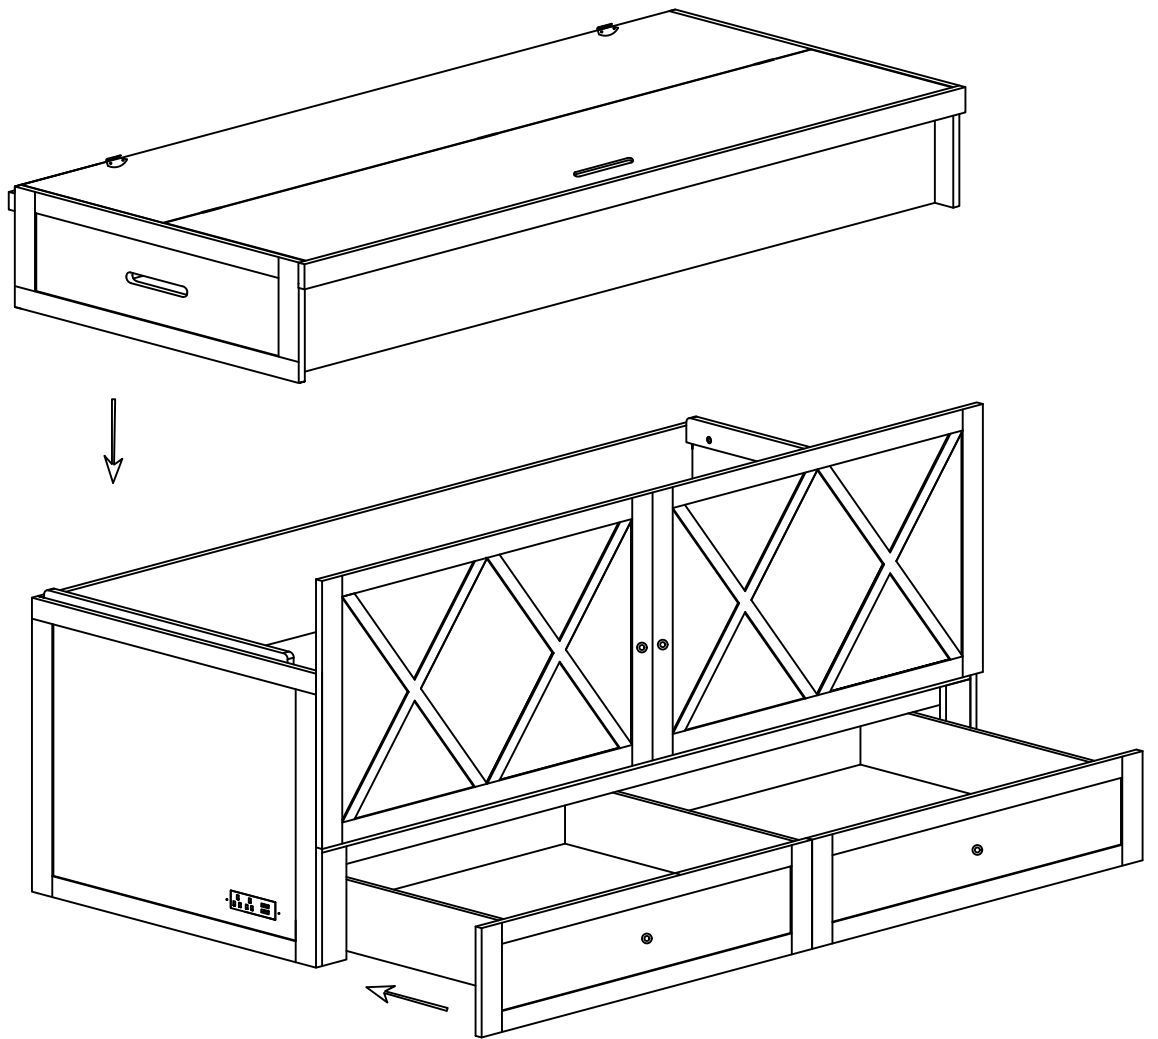


STEP 22

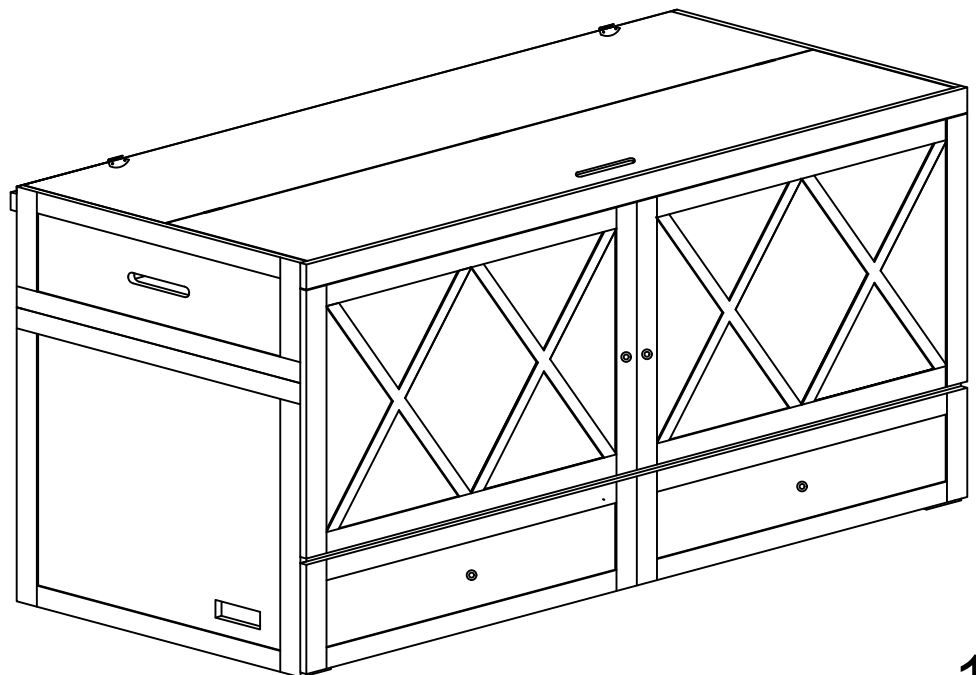


1

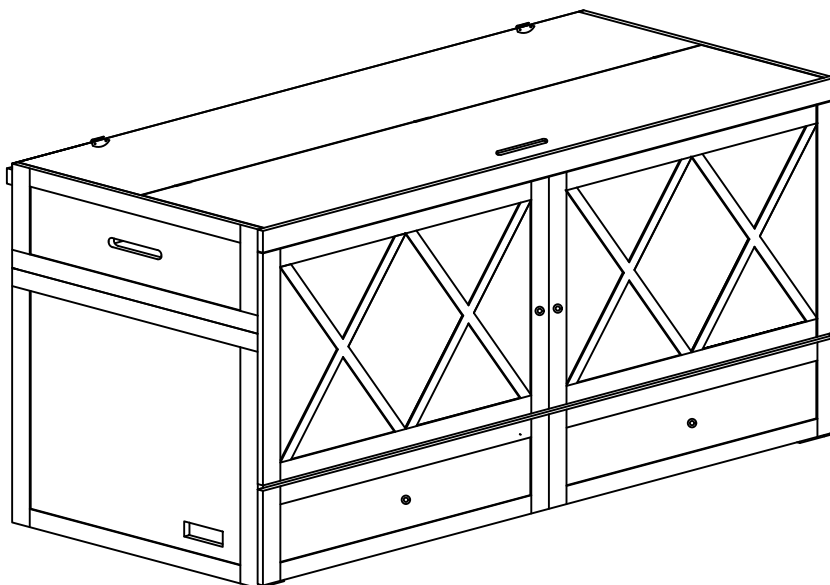


2

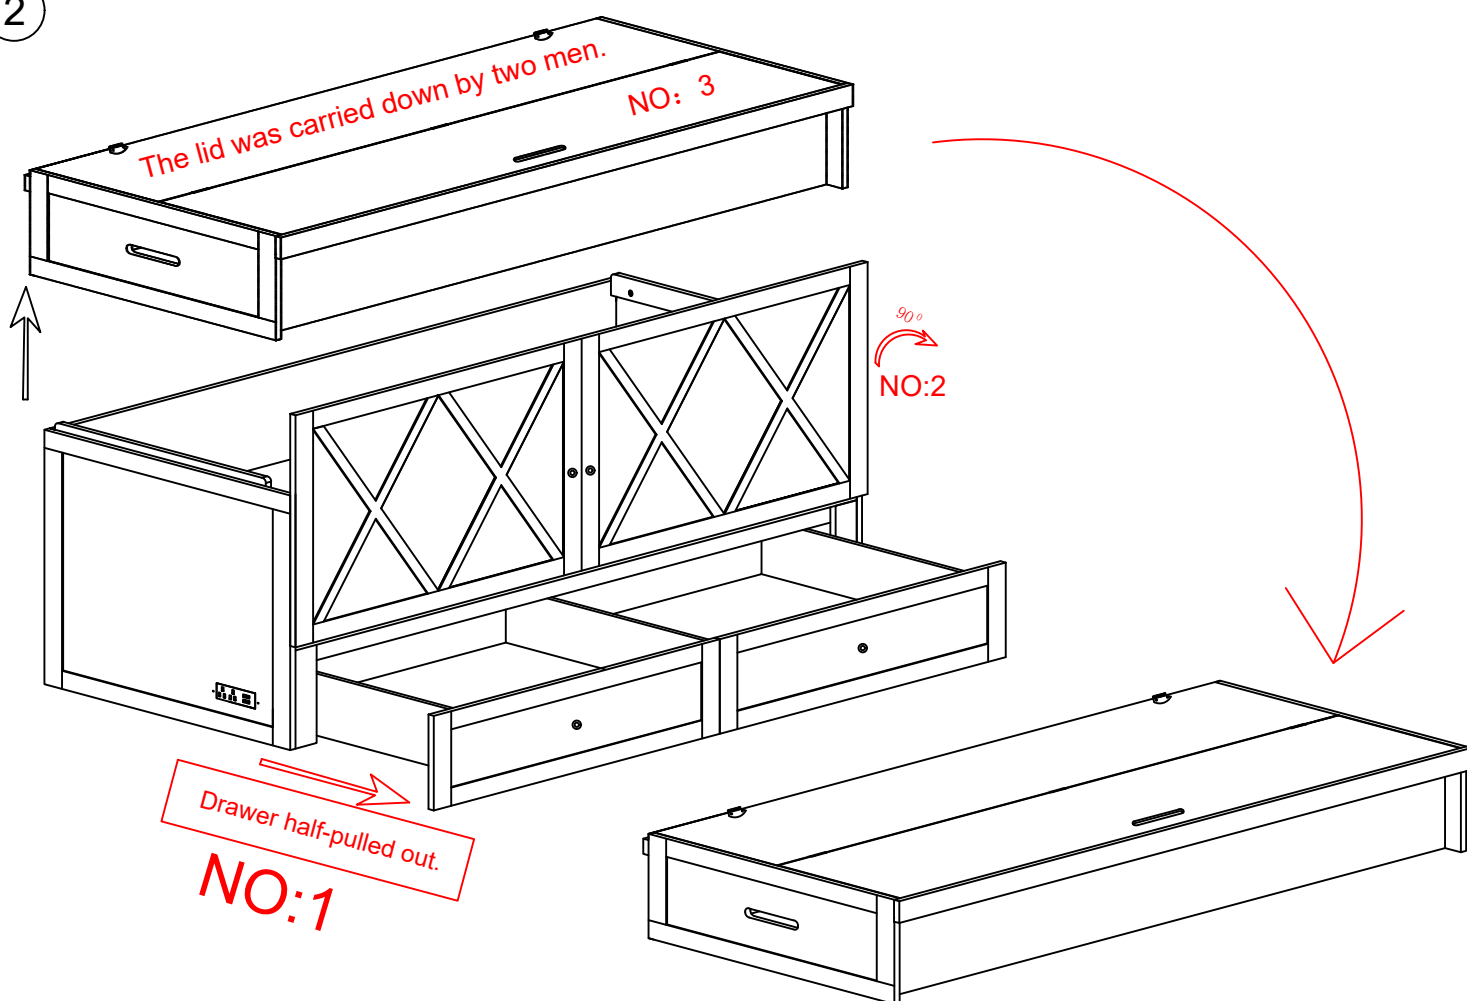

3

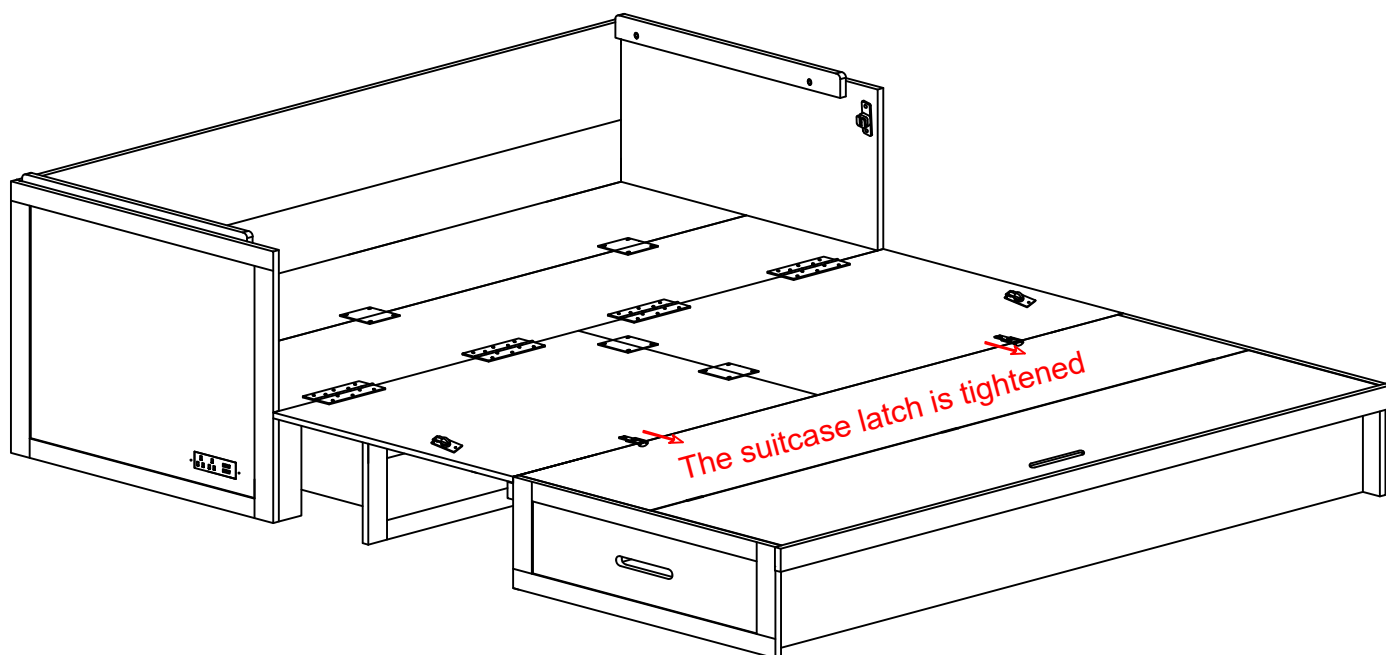


4


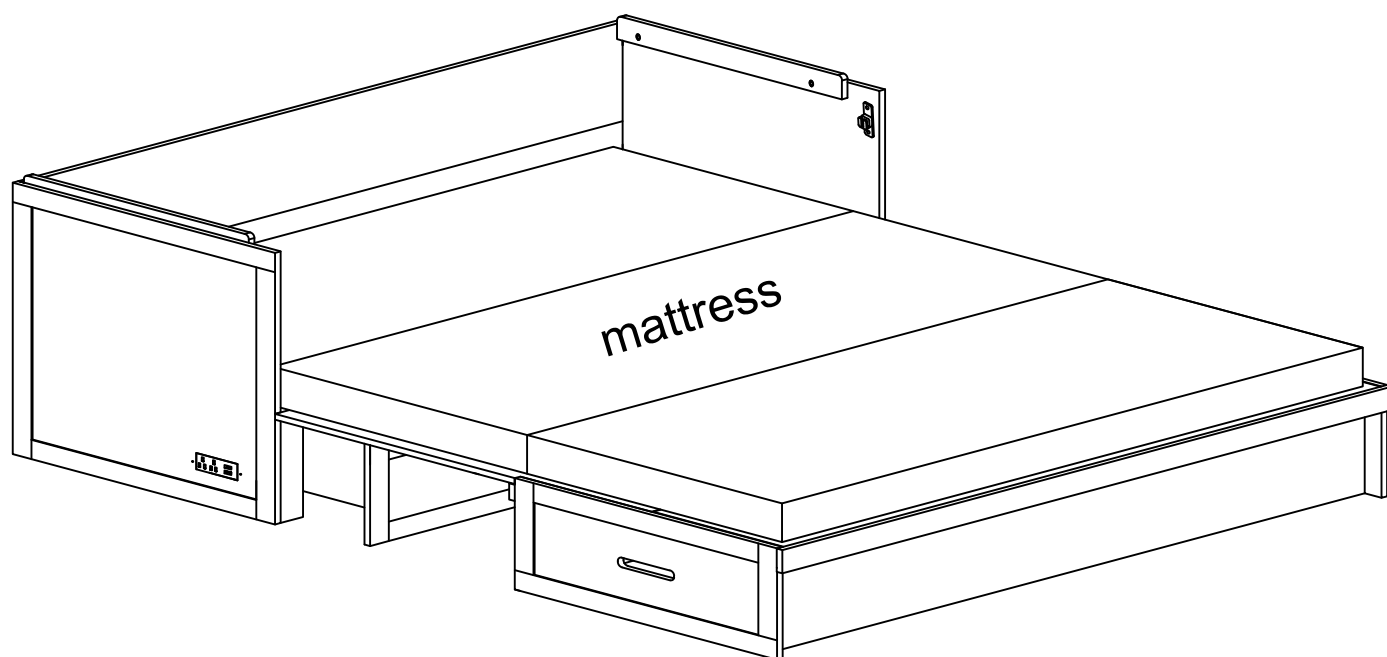


Operating Instructions



WARNING: HEAVY UNIT - TWO-PERSON OPERATION REQUIRED.

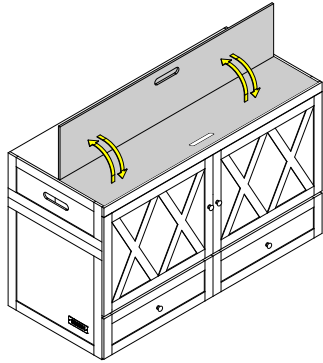


Flip up the lid for easy storage.

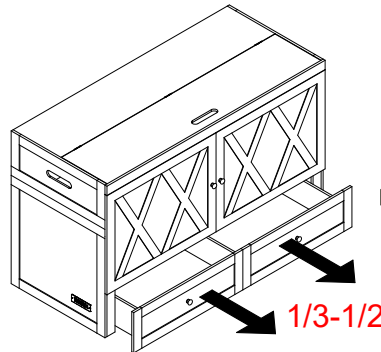


Just pull the drawer out partway—about a third or half of the way is fine.

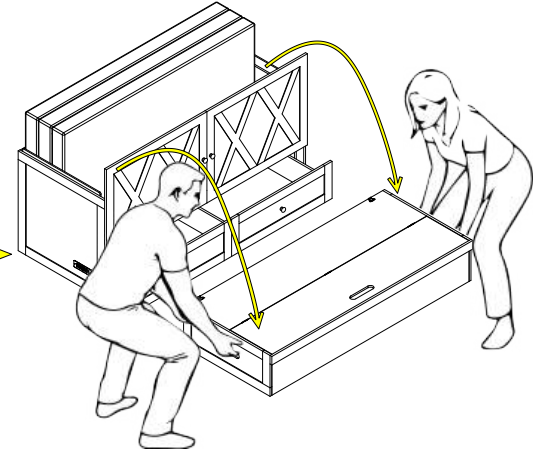


Carefully lift and lower the lid with two people.

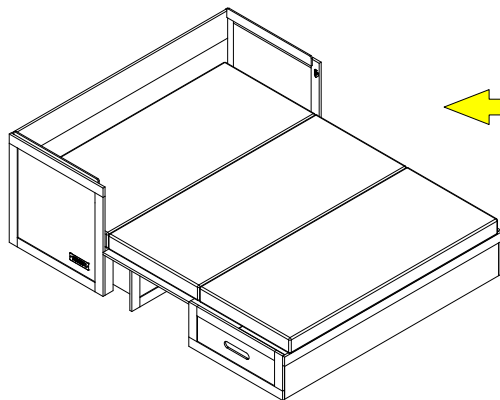

Unfold the mattress

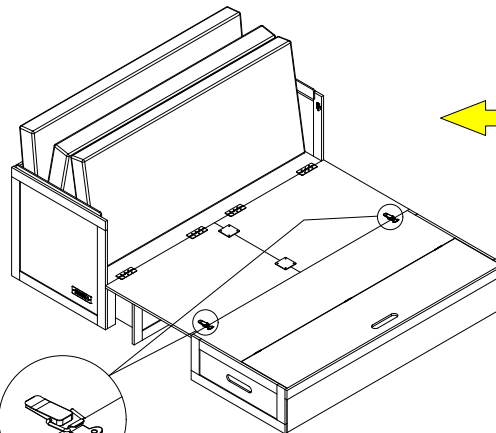

Lock

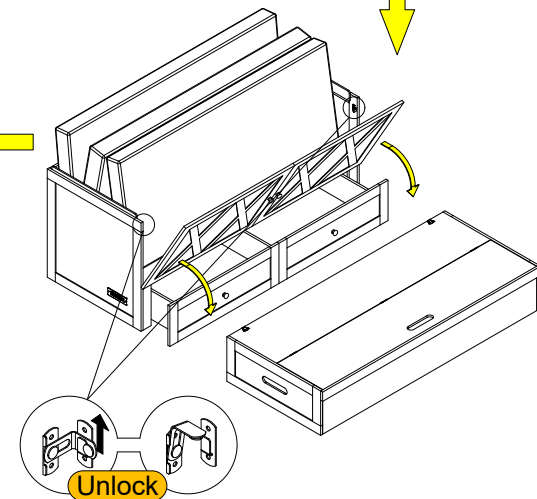

Unlock