

ASSEMBLY INSTRUCTION

MODEL: 4009-AT


CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT. THESE PIECES ARE HEAVY. IN ORDER TO PREVENT PERSONAL INJURY AND ENSURE THAT THIS PRODUCT IS NOT DAMAGED DURING THE ASSEMBLY PROCESS, IT IS STRONGLY RECOMMENDED THAT YOU ENLIST THE ASSISTANCE OF ONE OR MORE PEOPLE.

ATTENTION: VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE COMMENCER L'ASSEMBLAGE DE CE PRODUIT. LES PIECES SONT LOURDES. POUR EVITER TOUTE BLESSURE ET POUR VOUS ASSURER QUE LE PRODUIT N'EST PAS ENDOMMAGE'PENDANT L'ASSEMBLAGE, NOUS VOUS RECOMMANDONS DE FAIRE APPEL A UNE OU PLUSIEURS AUTRES PERSONNES.




CUIDADO: FAVOR DE LEER TODAS LAS INSTRUCCIONES ANTES DE ENSAMBLAR SU PRODUCTO. ESTAS PIEZAS SON PESADAS. PARA PREVENIR HERIDAS PERSONALES Y ASEGURAR QUE SU PRODUCTO NO SEA DAÑADO MIENTRAS ES ENSAMBLADO, SE RECOMIENDA LA ASISTENCIA DE UNA O MAS PERSONAS.

WARNING:.....PROTECTIVE GLIDE IS PLACED UNDER LEGS OF FURNITURE TO RESIST SCRATCHES TO FLOOR SURFACE. SOME FLOOR SURFACES CAN BE EXTRA SENSITIVE TO MARKING. IF YOU ARE NOT SURE CONSULT WITH YOUR DEALER.

AVERTISSEMENT... LES PIEDS DES MEUBLES SONT MUNIS DE PATINS DESTINÉS À PROÉGER LE PLANCHER. CERTAINS REVÊTEMENTS DE SOL PEUVENT ÊTRE TRÈS FRAGILES. EN CAS DE DOUTE, CONSULTER LE MARCHAND.

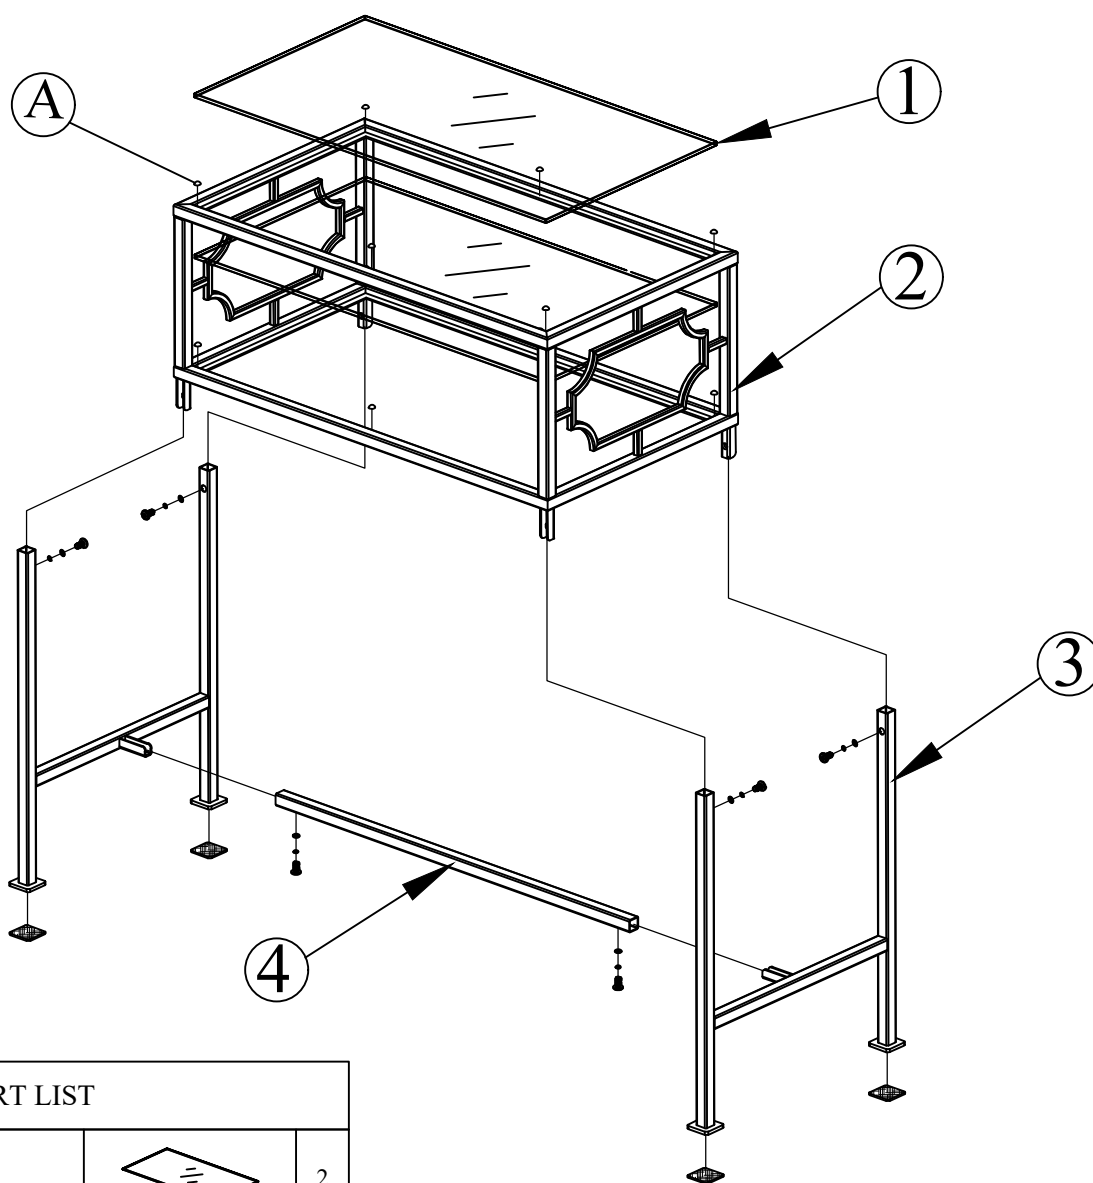

PART LIST

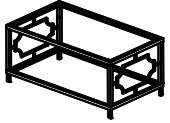PART LIST			
1	Glass		2
2	Table Frame		1
3	Leg Assembly		2
4	Stretcher		1

HARDWARE LIST


NO.	DESCRIPTION		Q' ty
A		Self adhesive glass mat (Ø8*3mm)	12
B		Screw (Ø1/4"*15mm)	6
C		Lock washer (1/4")	6
D		Flat washer (1/4"*16mm)	6
E		Allen wrench (4mm)	1

ASSEMBLY INSTRUCTION

MODEL: 4009-AT


STEP 1

Attach the Stretcher (4) to the Leg Assembly (3) using Flat Washer (D), Lock Washer(C), Screw(B) and Allen Wrench(E), do not tighten yet .

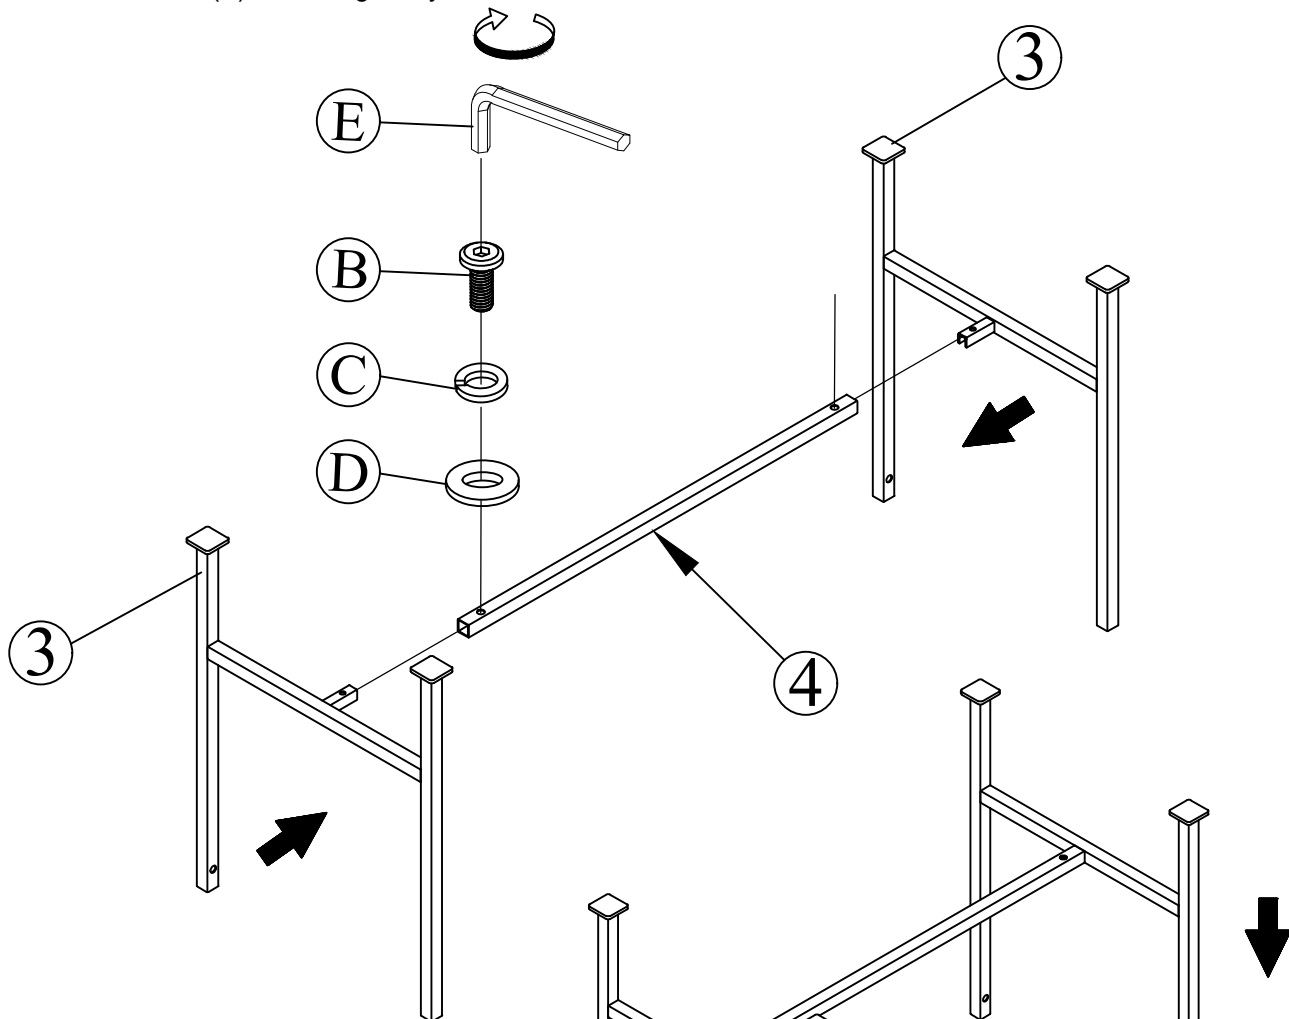

STEP 2

Attach the assembled Stretcher (4) and Leg Assembly (3) to the Table Frame (2) using Flat Washer (D), Lock Washer(C), Screw(B) and Allen Wrench(E), tighten all screws securely.

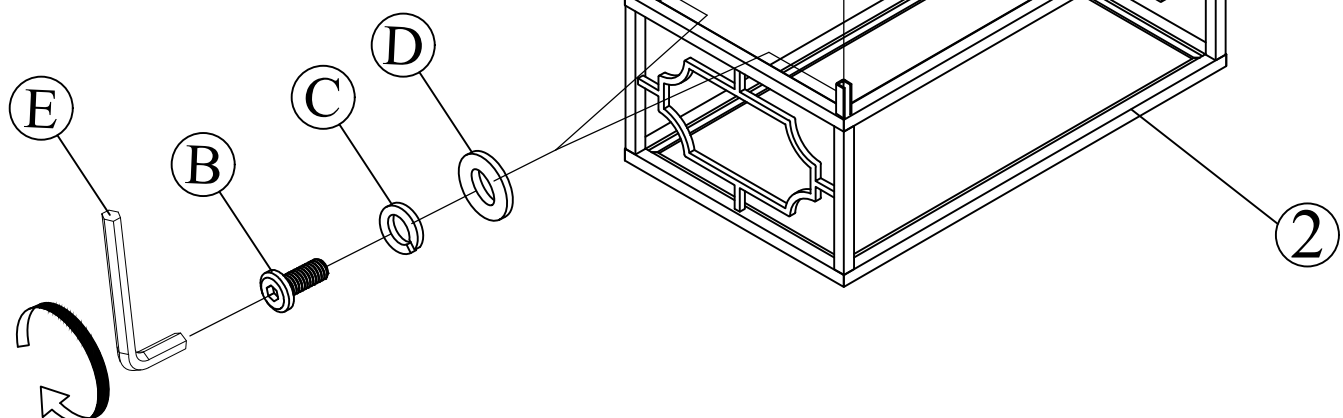

ASSEMBLY INSTRUCTION

MODEL: 4009-AT

STEP 3

Place the table right side up, stick the self-adhesive glass pad (A) to the metal bars of the top frame (2) and shelf frame (2), put one piece of glass (1) in the shelf frame diagonally first and lay it flat, then put the (1) other piece of glass in the top frame.

