



03

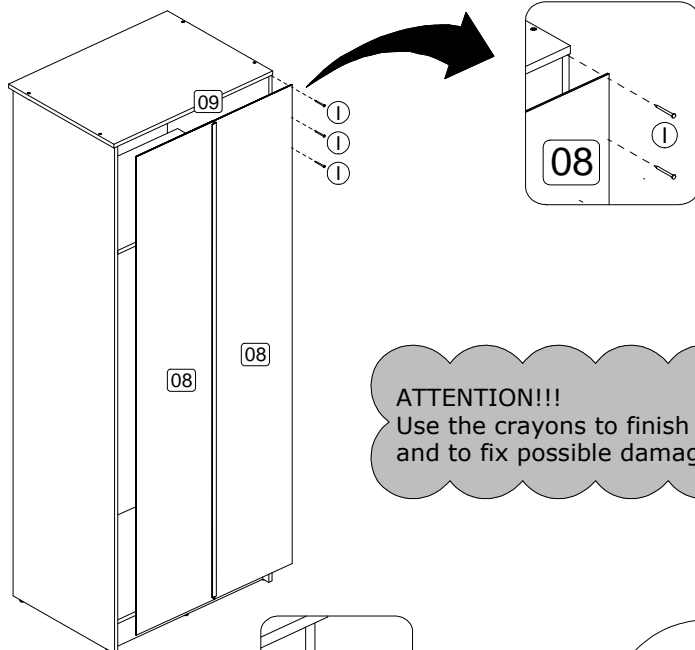

ATTENTION!!!
Use the crayons to finish edges
and to fix possible damaged pieces.


04

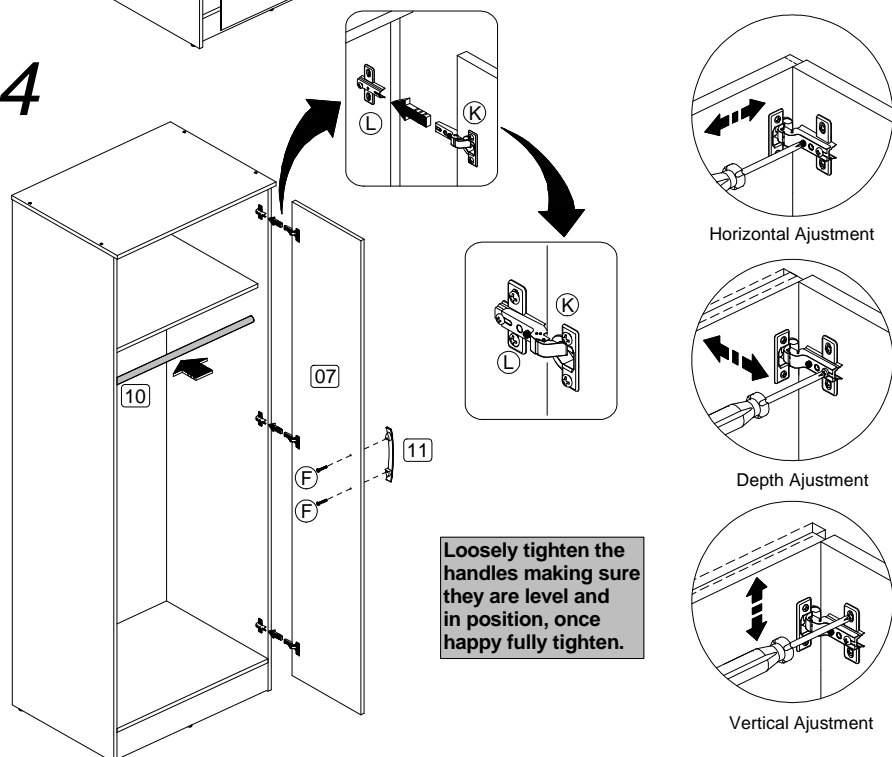

4

WARNING to all customers in instructions that all fittings must be used correctly to protect the product when in use.







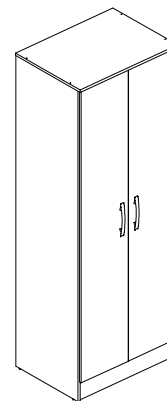








WARNING the product must be lifted when moving not dragged as again to protect the product.



ASSEMBLY INSTRUCTIONS

Wardrobe 2 Doors

HARDWARE KIT

A	 08x30	16
B		12
C		12
D		04
E	 4,5x45	04
F	 3,5x25	04
G	 3,5x20	04
H	 3,5x14	26
I	 10x10	60
J		06
K		06
L		06
M		02
N		02
O	 Crayons	03




Rev 01


WARNING to all customers in instructions that all fittings must be used correctly to protect the product when in use.

WARNING the product must be lifted when moving not dragged as again to protect the product.

BEFORE STARTING ASSEMBLY, IDENTIFY ALL PARTS AND ACCESSORIES.

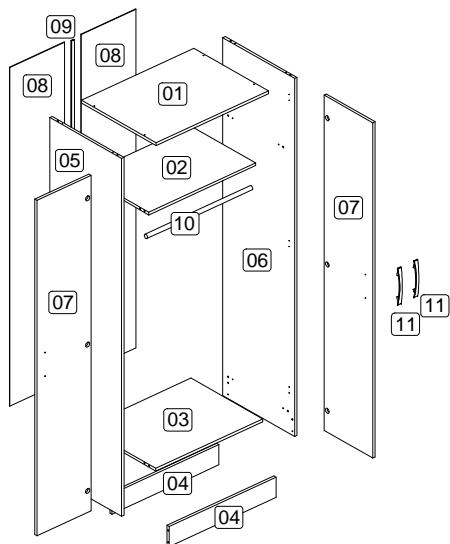


STAGE OF PREPARATION OF PARTS.

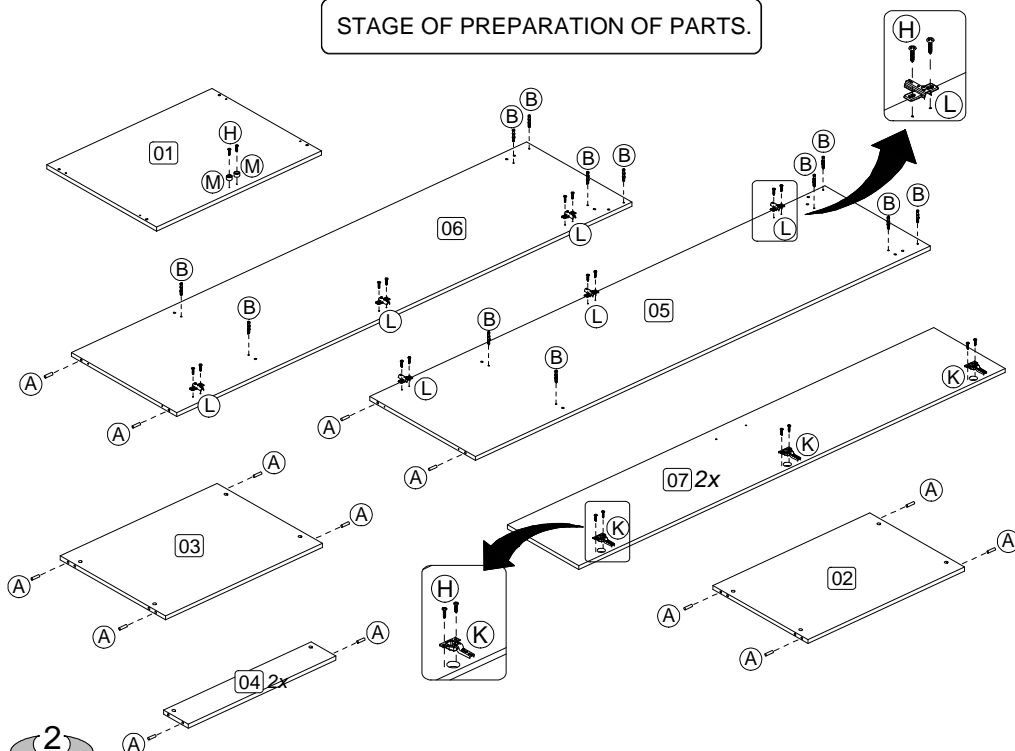


WARNING to all customers in instructions that all fittings must be used correctly to protect the product when in use.

WARNING the product must be lifted when moving not dragged as again to protect the product.

01

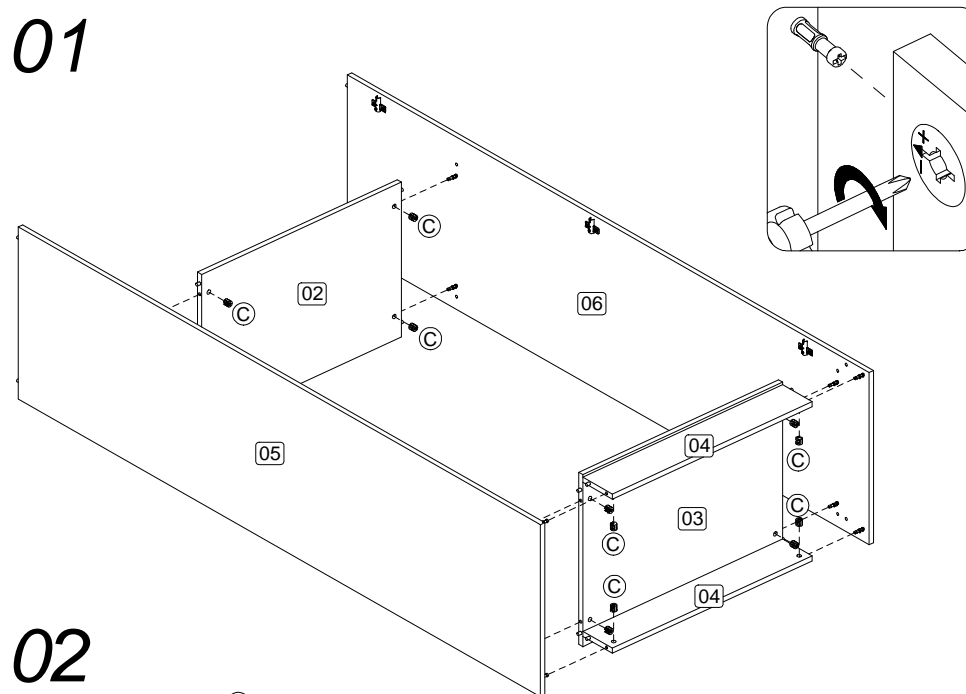

02

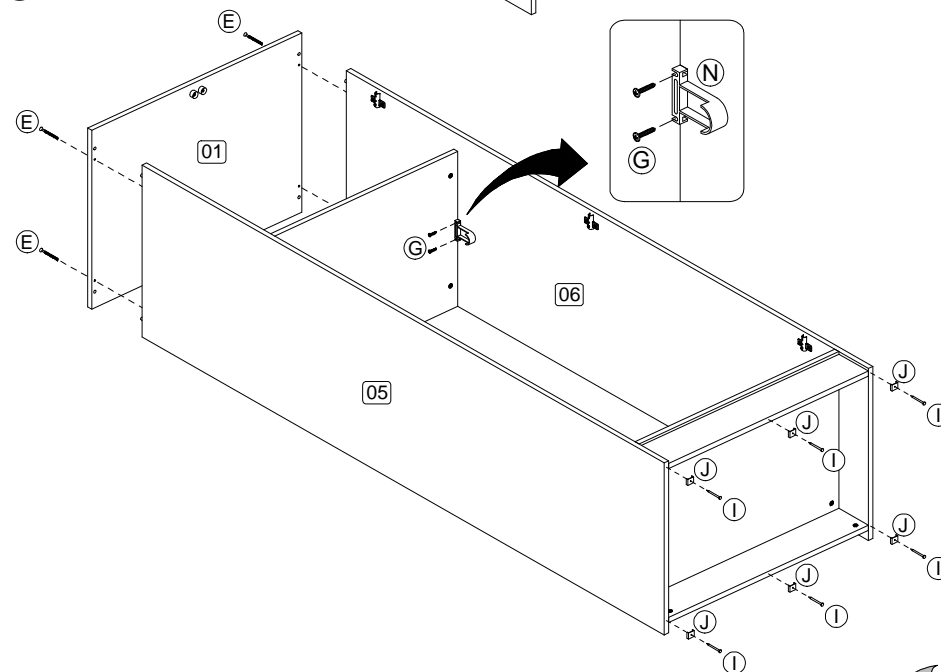

WARNING to all customers in instructions that all fittings must be used correctly to protect the product when in use.

WARNING the product must be lifted when moving not dragged as again to protect the product.