


Adirondack Chair


Assembly Guide

IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started.
Once all bolts are inserted, go back & tighten all the bolts.


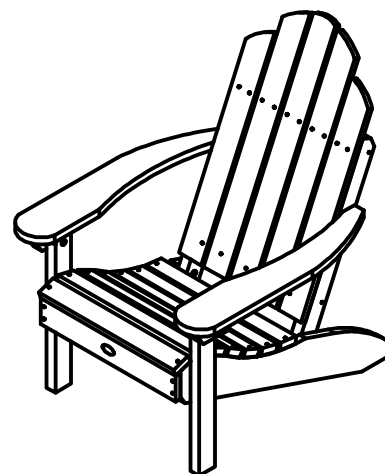


HARDWARE INCLUDED

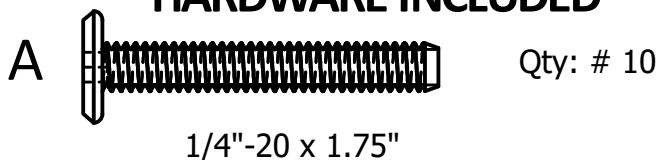


1/4"-20 x 1.75"

TOOLS INCLUDED

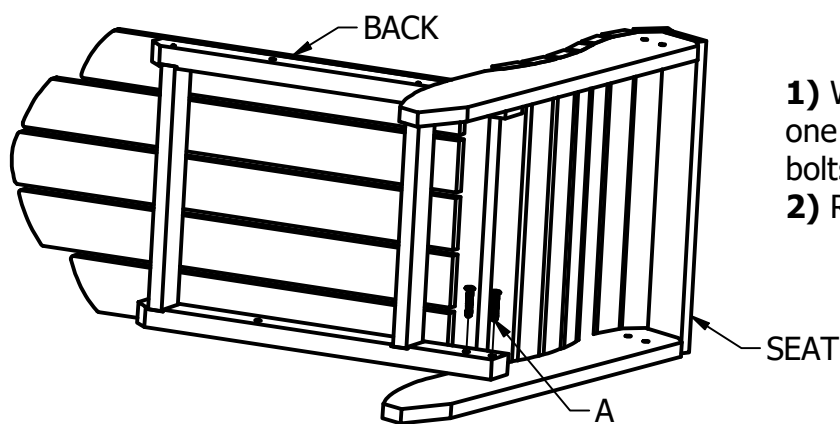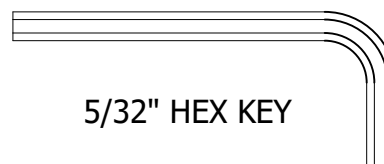

1) With the Back and Seat on their sides, attach one side of the Back to the Seat using two A bolts.

2) Repeat on other side.

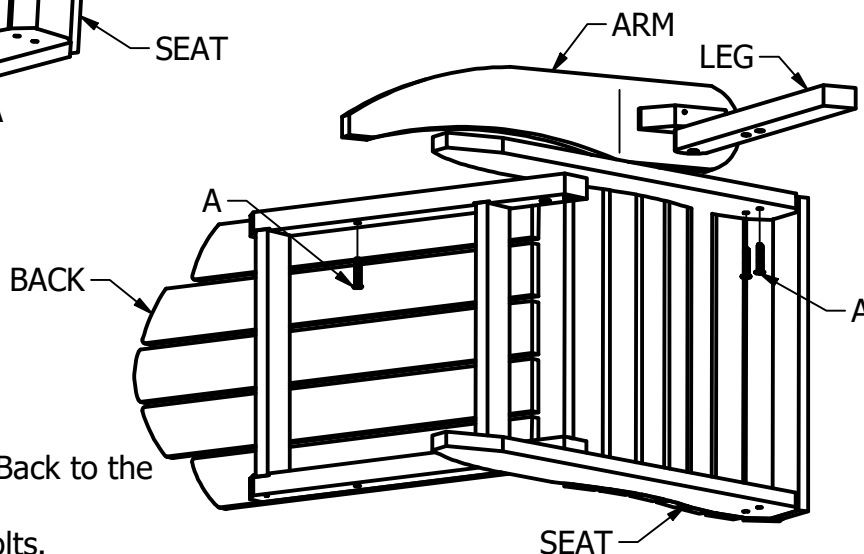

3) With the chair still on its side, attach the Back to the Arm using one A bolt.

4) Attach the Seat to the Leg using two A bolts.

5) Flip chair onto its other side and repeat steps 3 & 4.