

HELPFUL HINTS

! BEFORE YOU START

- Inspect product packaging to ensure the appearance is good.
- Read the assembly instruction carefully and follow it step by step.
- To avoid any scratching, putting a soft blanket on the floor is suggested.
- Identify, sort and count all the parts with tags.
- Find out installation position according to the drawing and install it in correct steps.

! OTHER


- People needed for assembly: 1-2
- Estimated assembly time: 0.5-1 hour.

! CAUTION




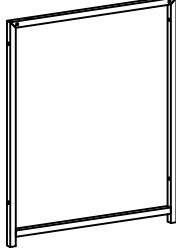






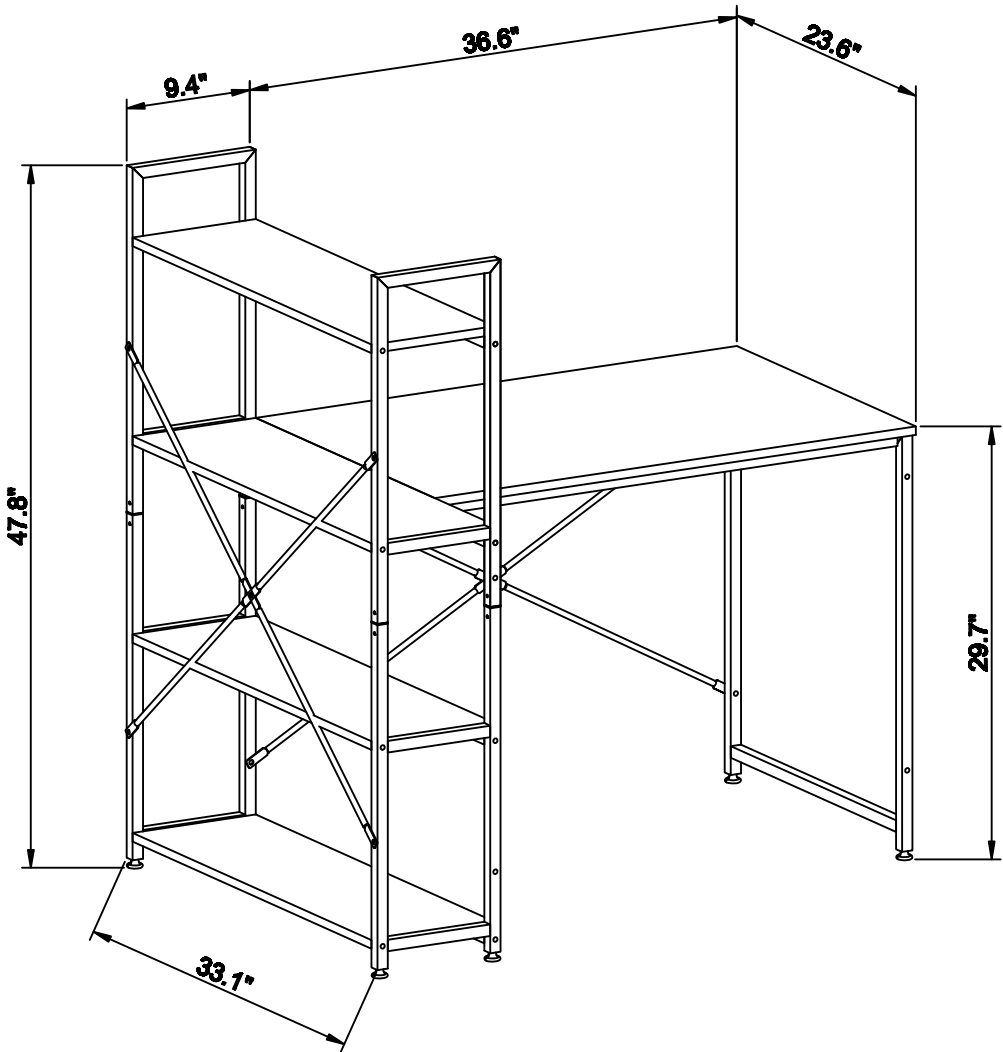

- Be cautious when using a power drill or power screwdriver.
- Please be aware to slow down and stop when screw is nearly tight.
- Do Not use any harsh chemicals or abrasive cleaners for this item.
- Push, pull or drag this item carefully.

DETAILS

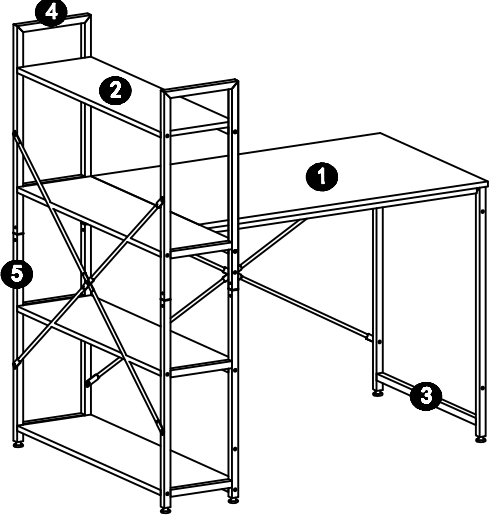








UNIT: INCH




PARTS LIST

		 ×1	 ×1
		 ×1	 ×2
 ×2	 ×2	 ×1	 ×3
 ×4	 ×6	 ×4	


ACCESSORIES LIST

No.	PICTURE	SIZE	QTY	No.	PICTURE	SIZE	QTY
A		M6x10	2	E		M6	10
B		M6x30	29	F		ST4x14	8
C		M6x35	12	G		ø8	4
D		ST5x60	8				

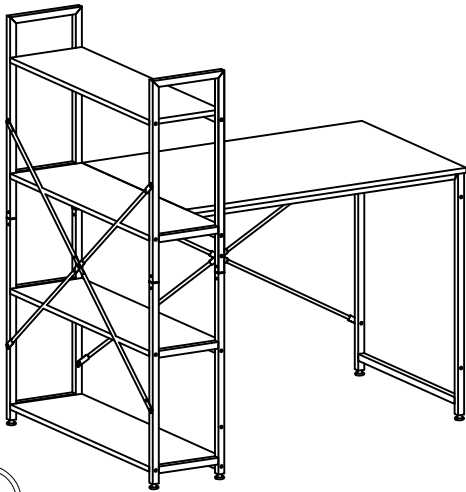


A

The shelves can be installed at left side "A"
or right side "B" according to your preference

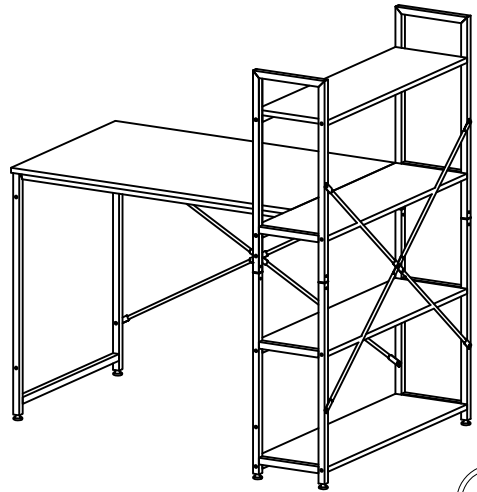


B

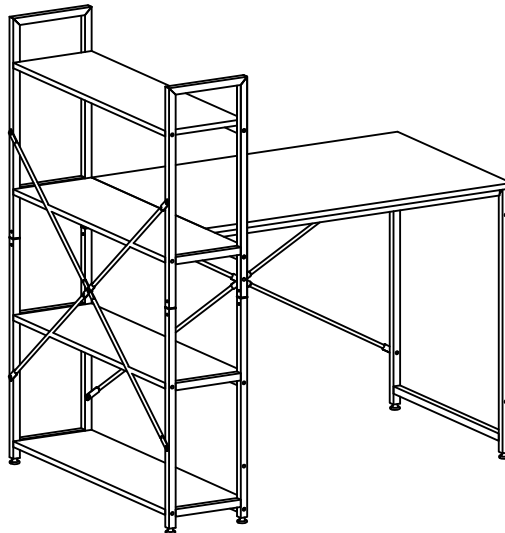



A

STEP 1

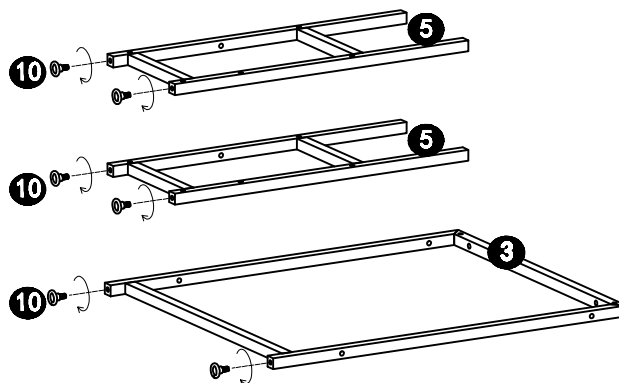


STEP 2

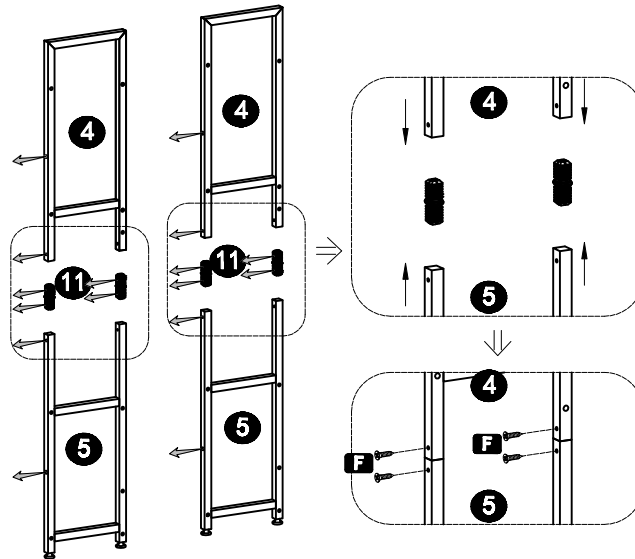

F  ST4x14 8

STEP 3

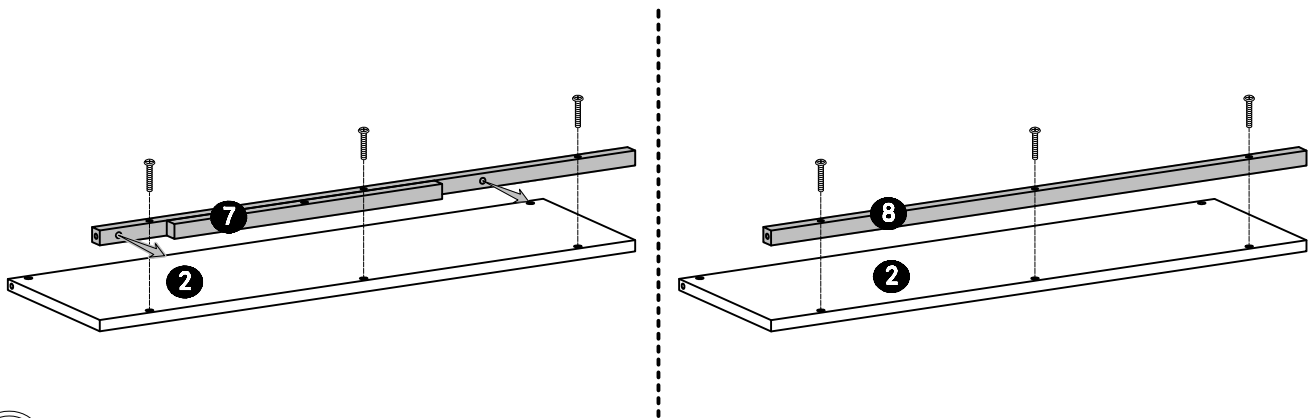


A


B  M6x30 12

× 3

STEP 4

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

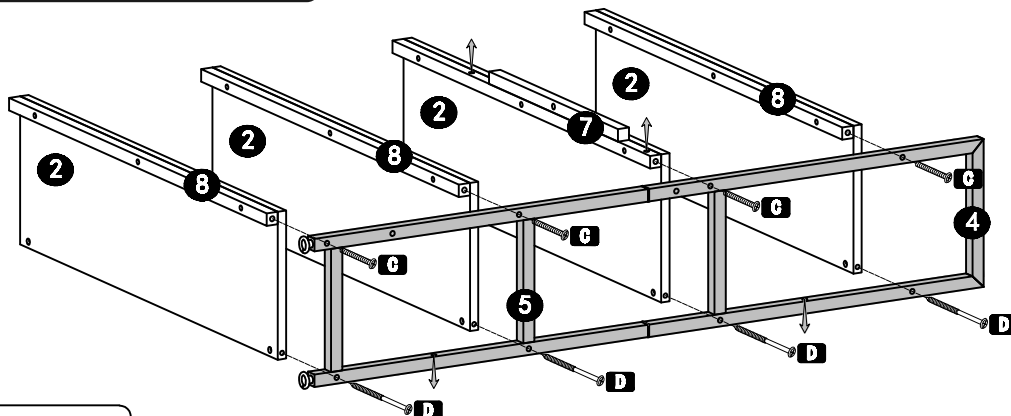


C  M6x35 4

D  ST5x60 4

STEP 5

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

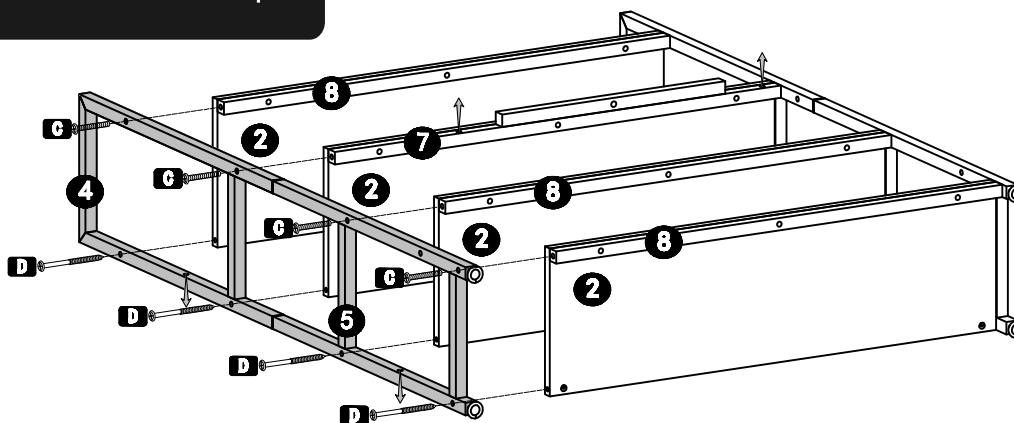


A

C  M6x35 4


D  ST5x60 4

STEP 6

※ Do not tighten the screws before step 8 finished

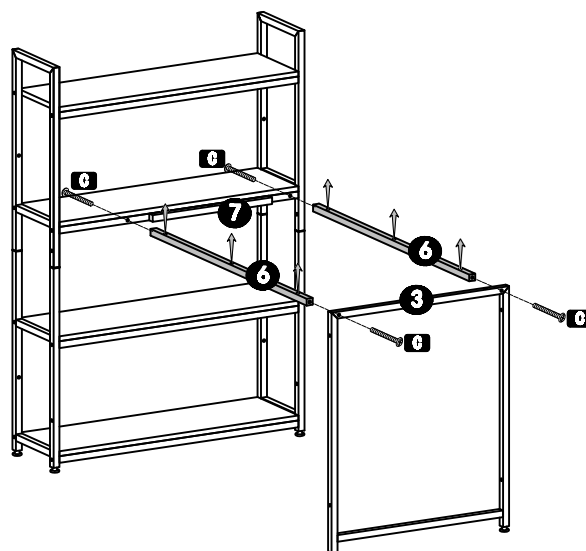


A

C  M6x35 4

STEP 7

※ Do not tighten the screws before step 8 finished

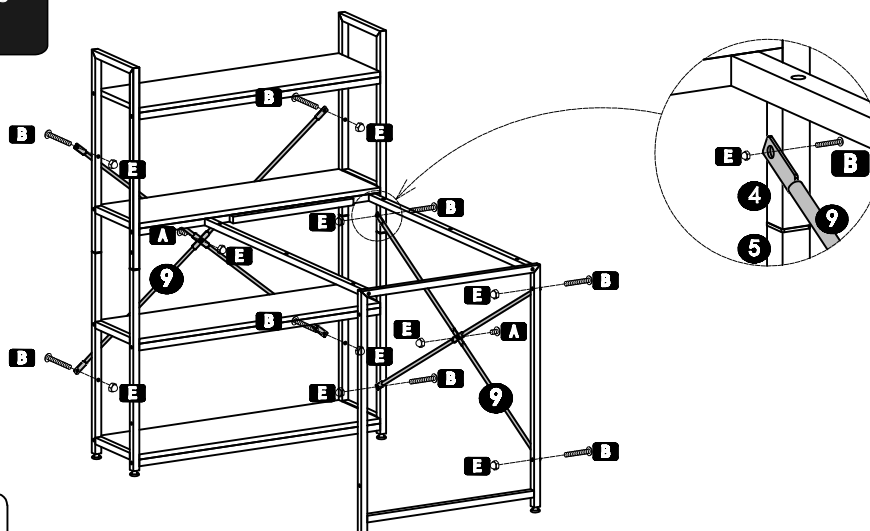

A


A  M6x10 2

B  M6x30 8

E  M6 10

STEP 8


※ Tighten all screws in this step when there is not gap.

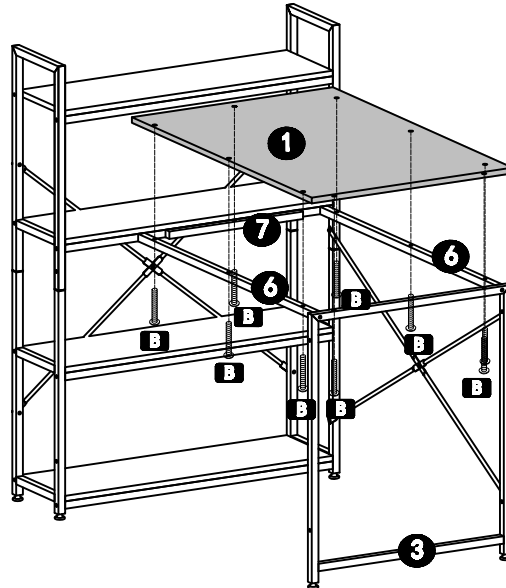

A


B  M6x30 9

STEP 9

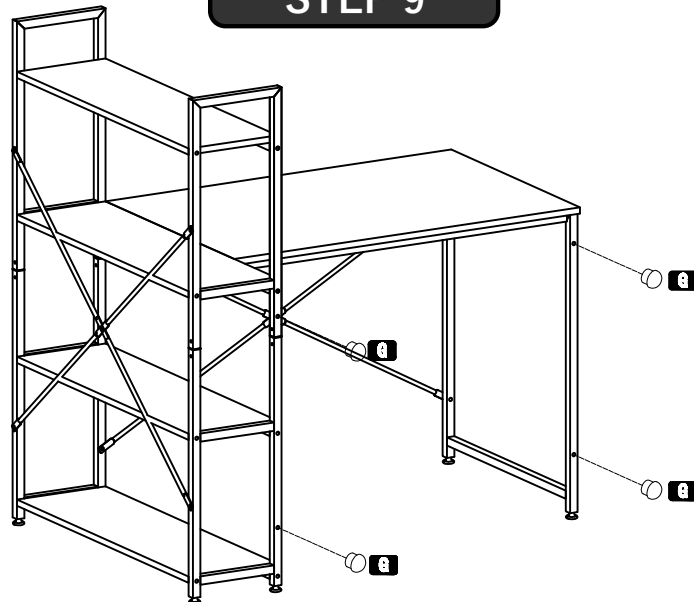


A

G  Ø8 4

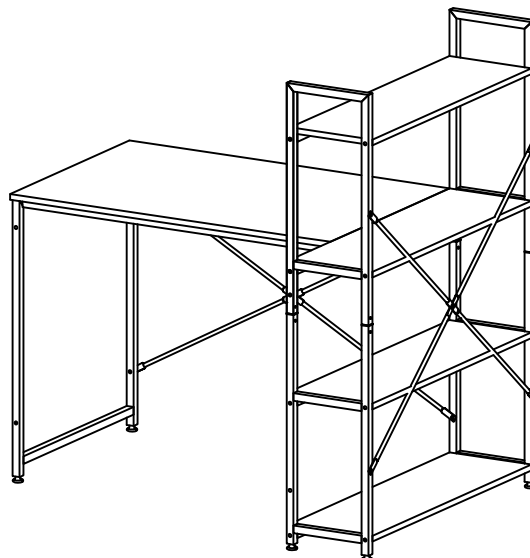


B

STEP 1


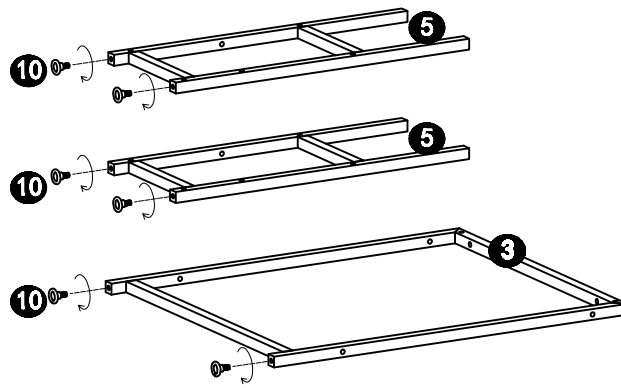


STEP 2

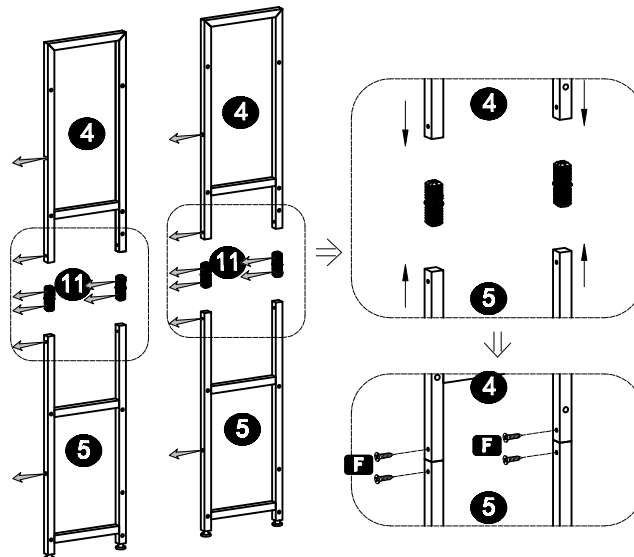

F  ST4x14 8

STEP 3

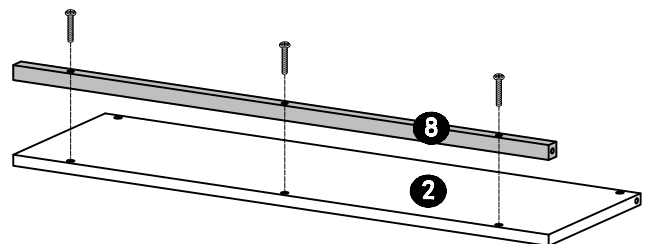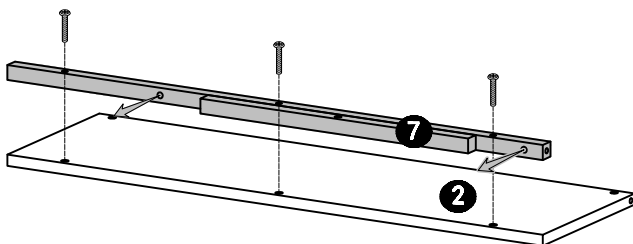


× 3

(B)

B  M6x30 12

STEP 4

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

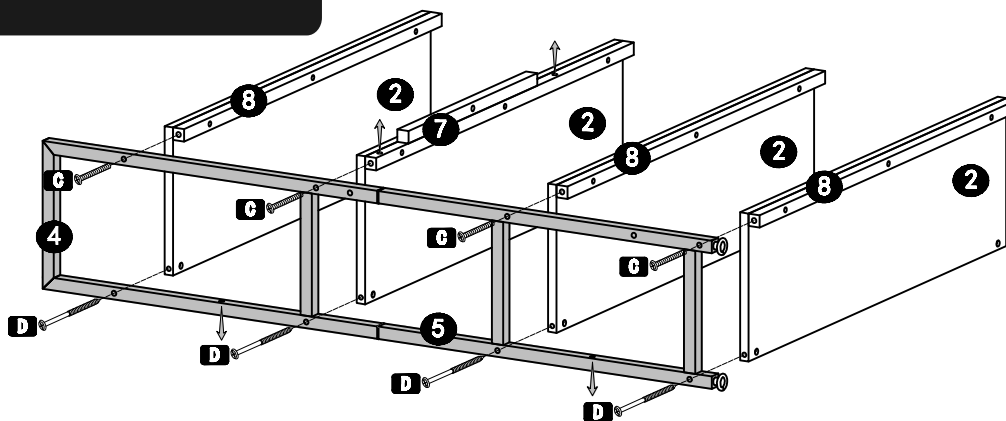


C  M6x35 4

D  ST5x60 4

(B)

STEP 5

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

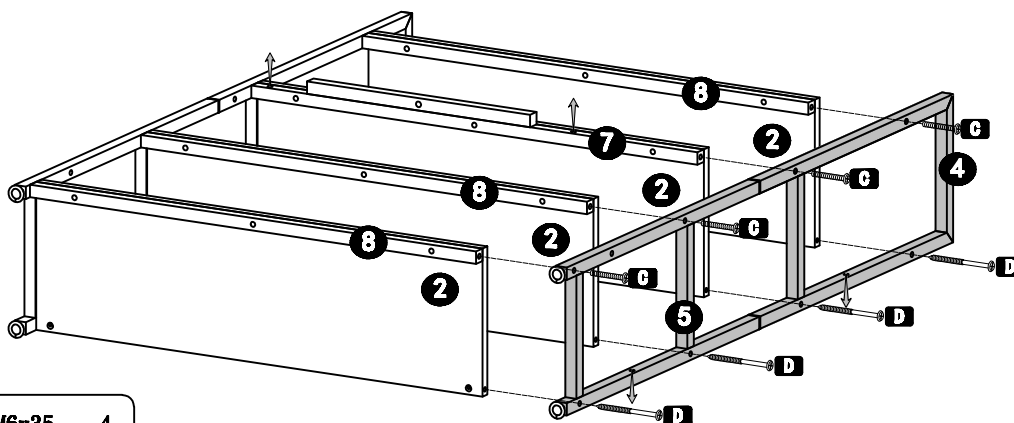


C  M6x35 4


D  ST5x60 4

(B)

STEP 6

※ Do not tighten the screws before step 8 finished

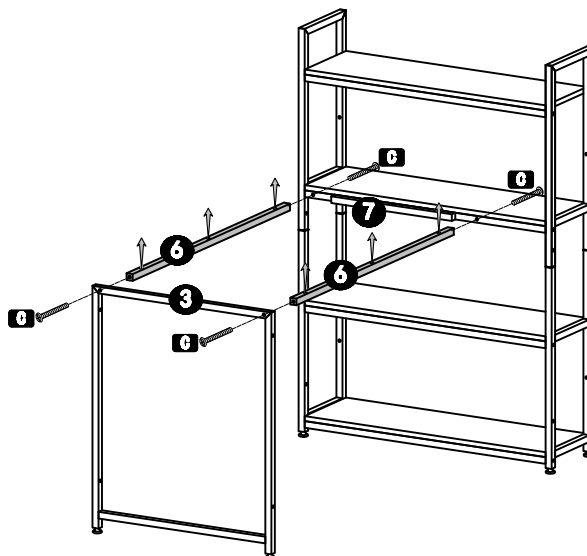


C  M6x35 4

(B)

STEP 7

※ Do not tighten the screws before step 8 finished

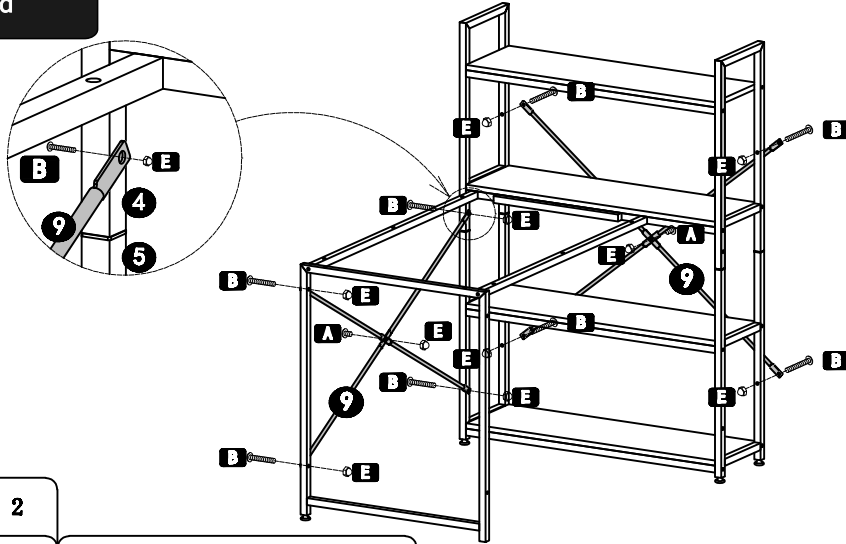

A  M6x10 2


B  M6x30 8

E  M6 10

(B)

STEP 8


※ Tighten all screws in this step when there is not gap.

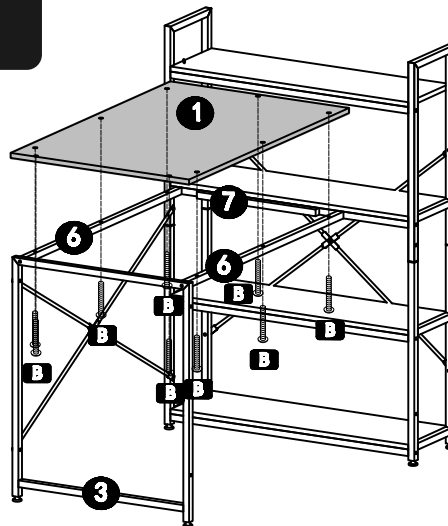

B  M6x30 9

(B)

STEP 9

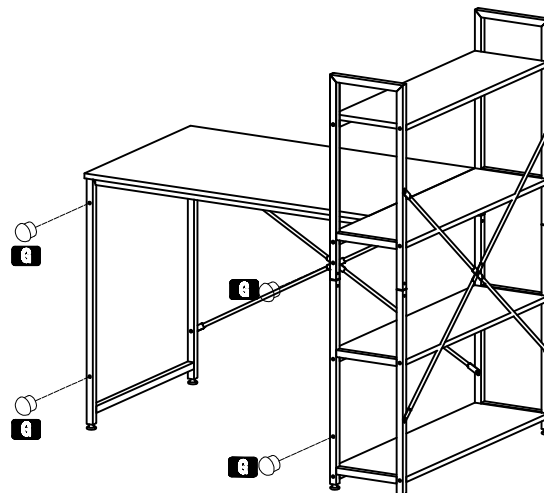

G  Ø8 4

(B)