





GOOD LIFE

Assembly Instructions



HOU797 / HOU816

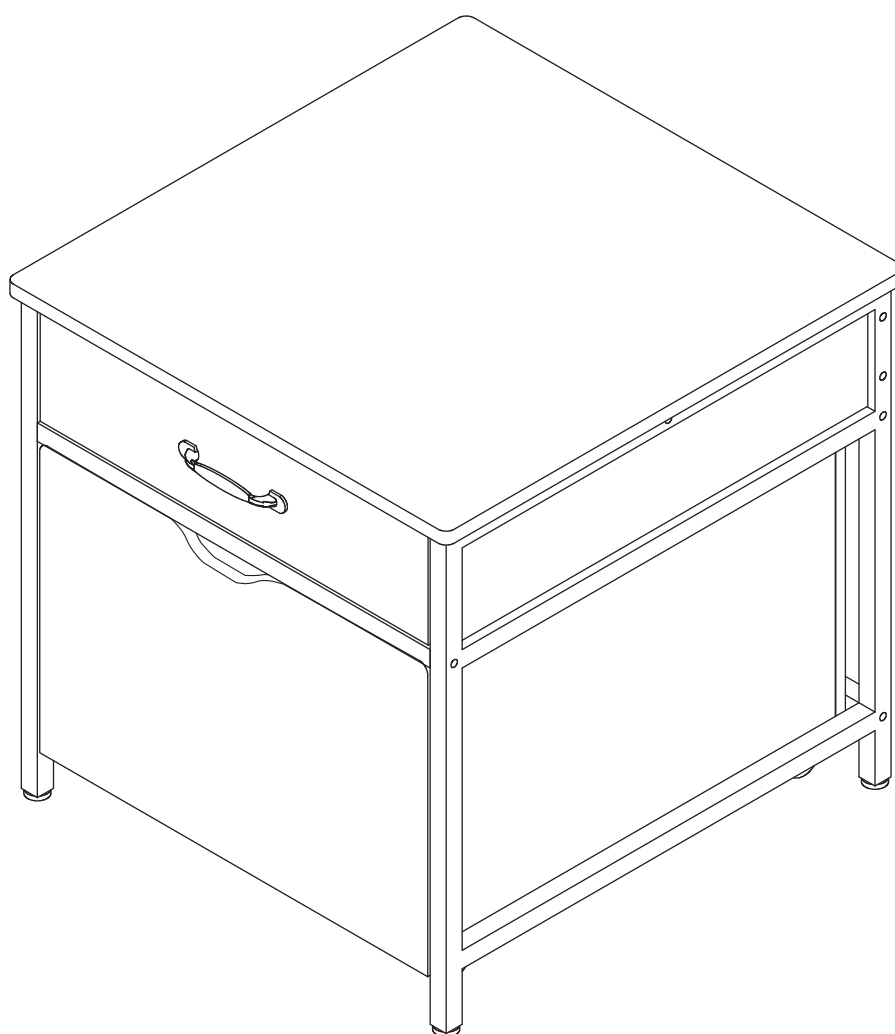


We come with the necessary tools for assembly
but for faster assembly, a power drill is recommended

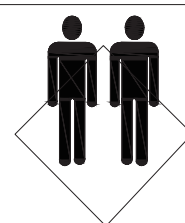




ASSEMBLED BY 2ADULTS

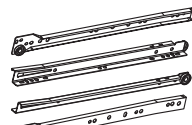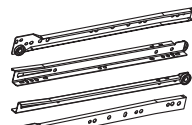 A X 8 +1	 B X12 +3	 C X 8 +1	 D X1
 E X4 +1 50x50	 F X28 +4 M4x10	 G1  G2 +1	 II
 H X2	 I X2	 J X1	 CL X1
 K X 8 +1	 L X4 +1 M4x30	 M X8 M6x35	 DL X1
 N X1 M6x30	 O X12 +2 M6x50	 P X4	 Q X1

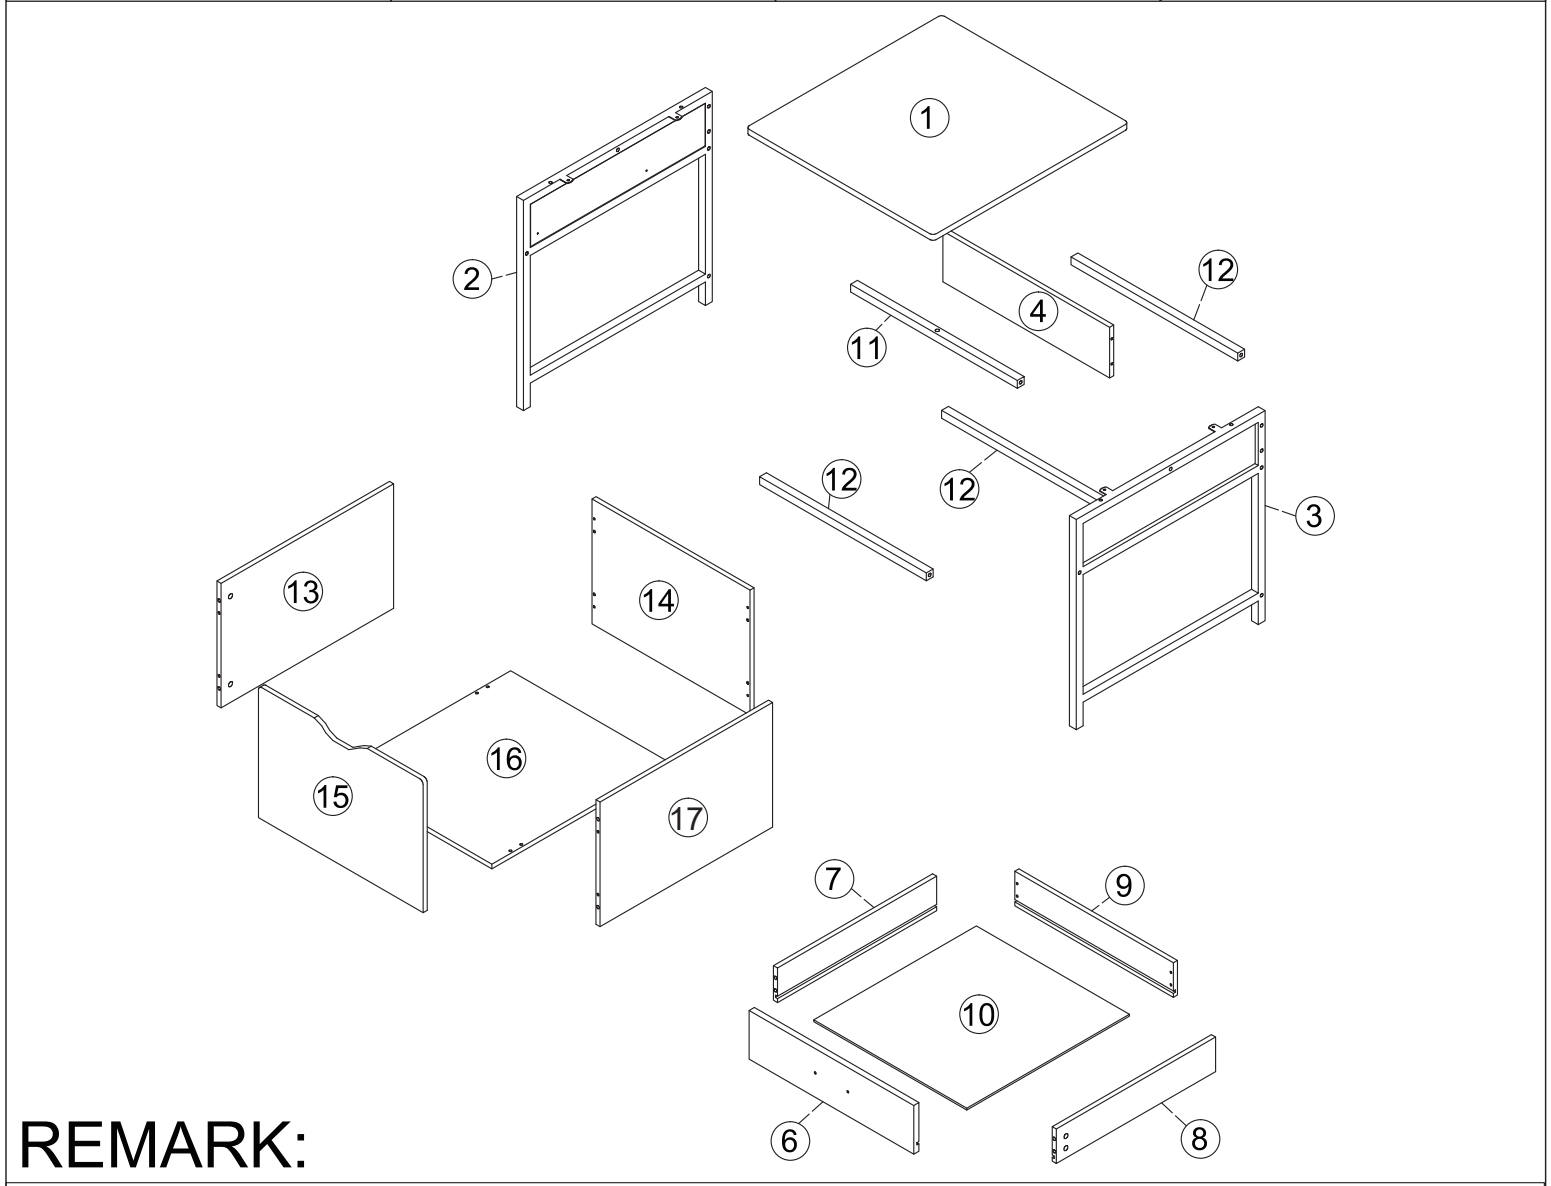


REMARK:

MINIFIX
POSITION

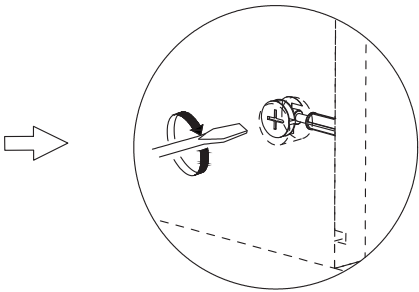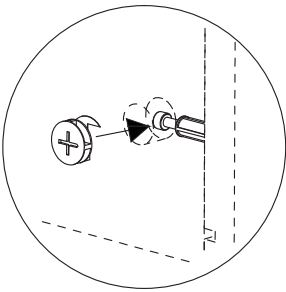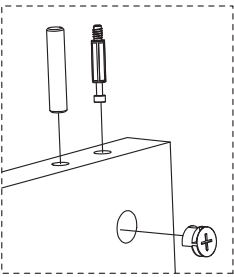


1

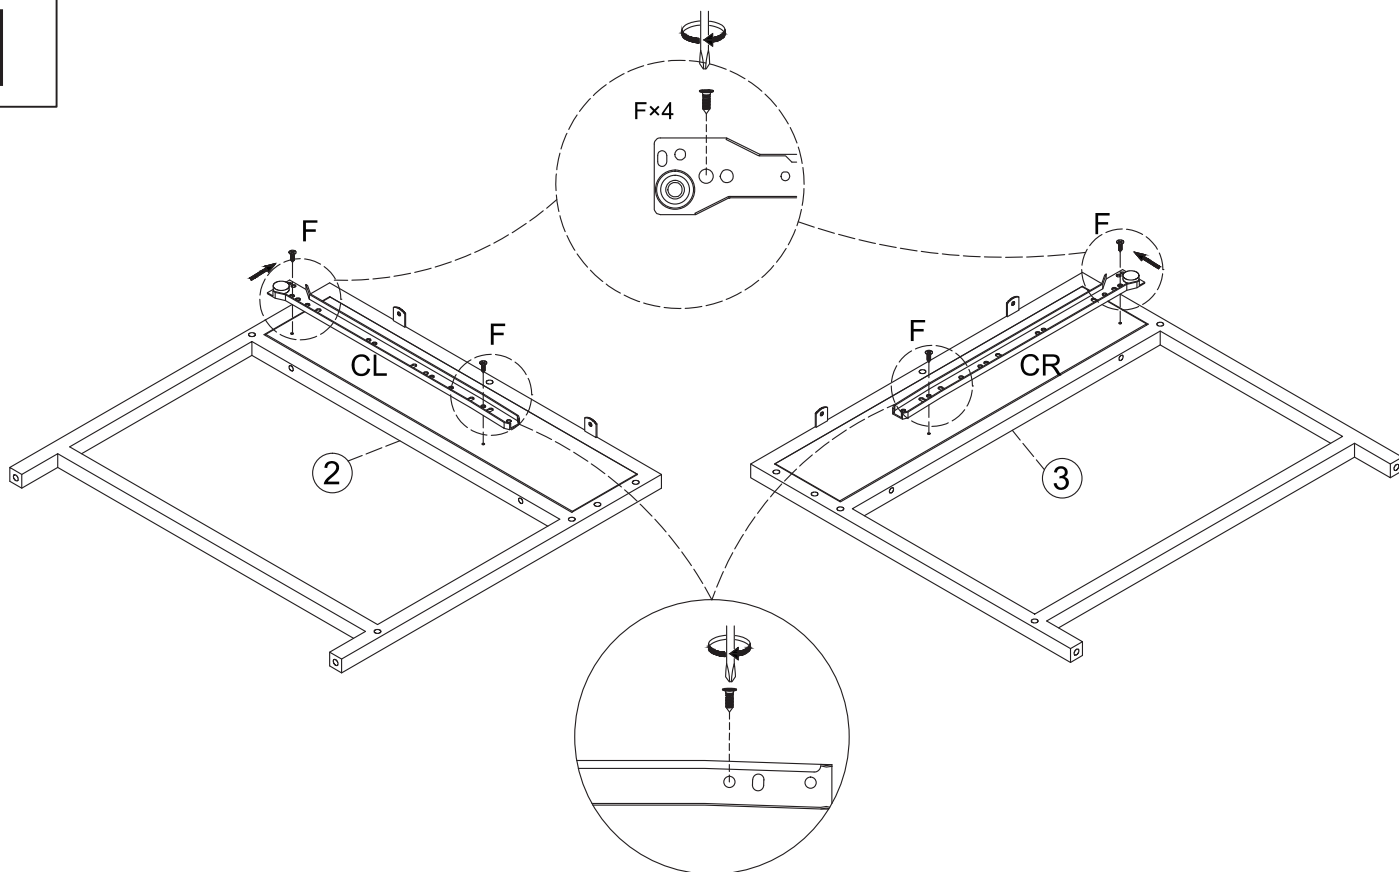


Attach Rail CL to Part# 2 and Rail CR to Part#3 with screws F*4 as shown



F X 4





CL X 1




CR X 1

2

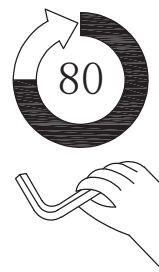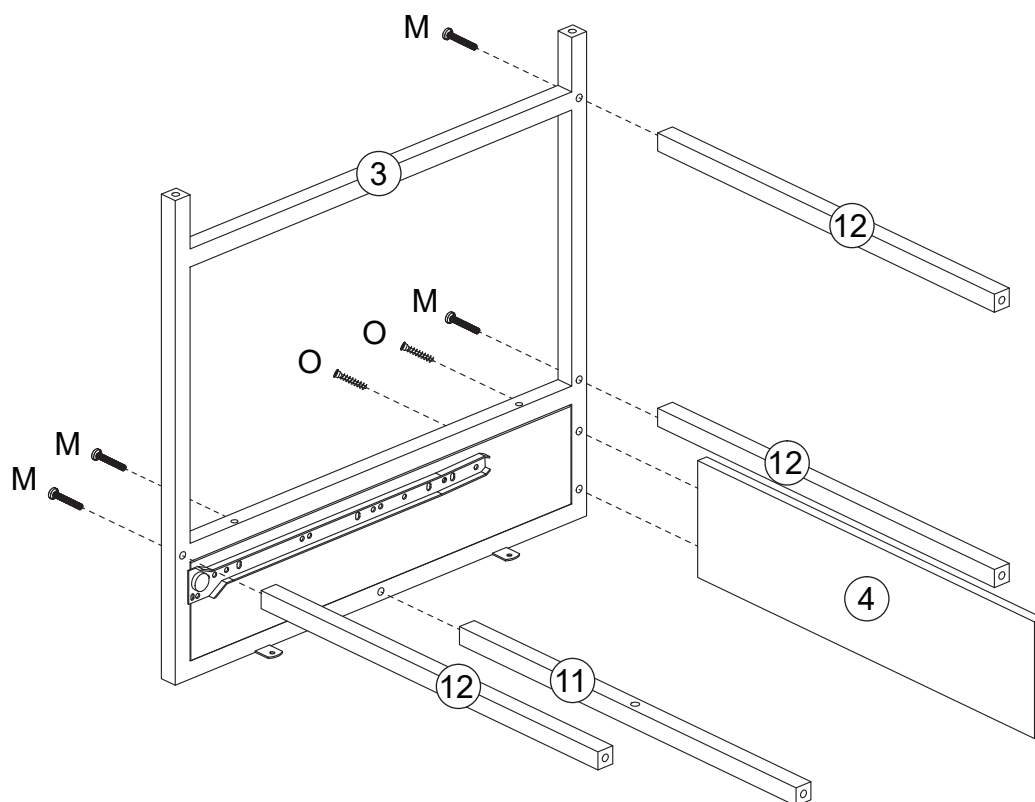

Attach Part# 11 and, Part#12*3 to Part#3 with screws M*4 as shown.
Attach Part#4 with Part#3 with screws O*2 as shown.




M X 4




O X 2

3

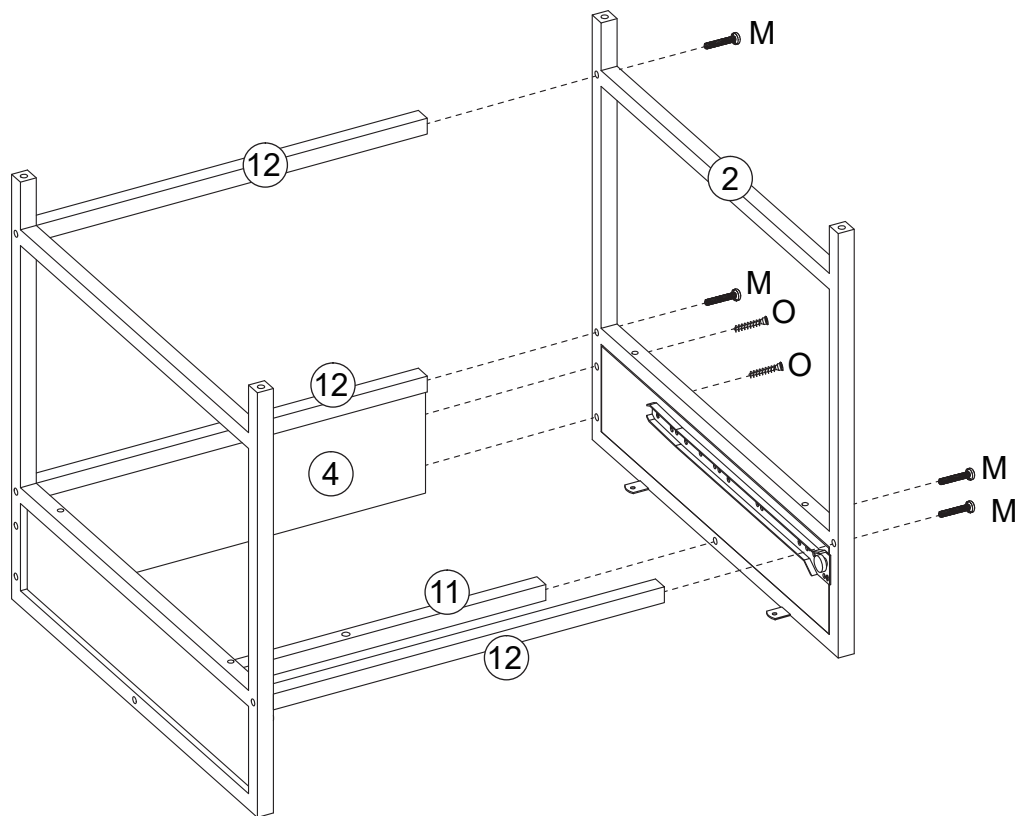

Attach Part# 11 and, Part#12*3 to Part#2 with screws M*4 as shown.
Attach Part#4 with Part#2 with screws O*2 as shown.




M X 4




O X 2

4

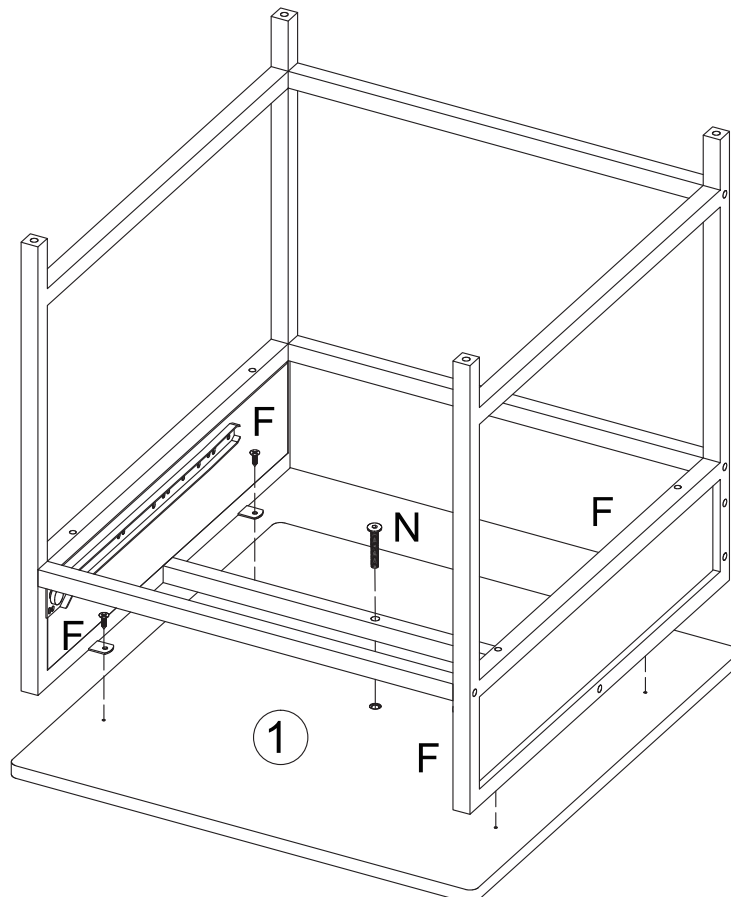

Attach the assembled unit to tabletop Part#1 with screws F*4 and N*1 as shown.




N X 1



F X 4

5

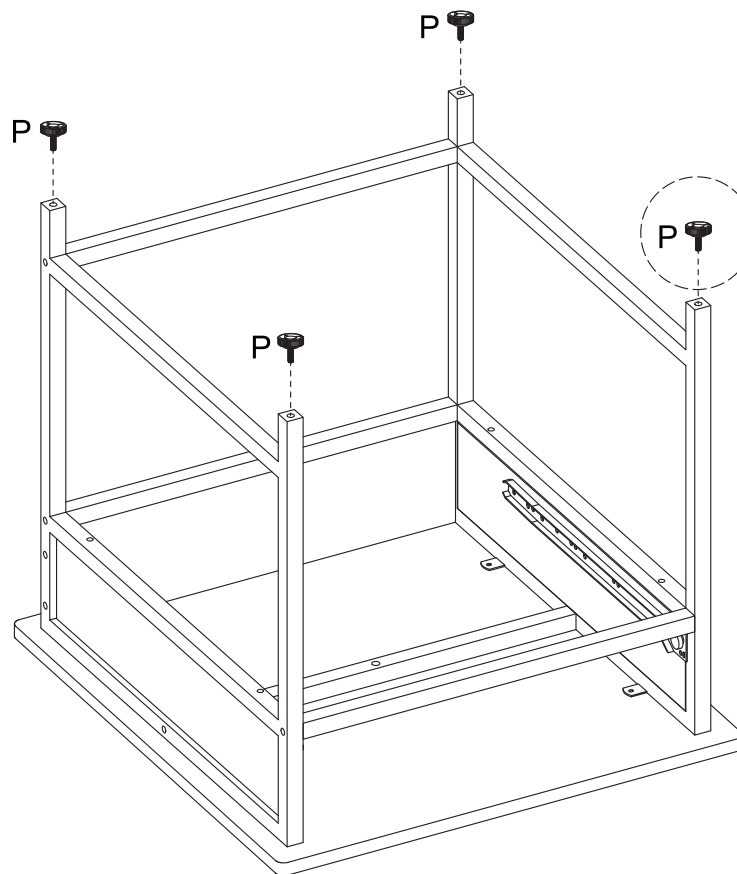

Attach adjustable feet P*4 as shown.




P X 4

6


REMARK:

Please do not screw **A** too deep or too shallow.

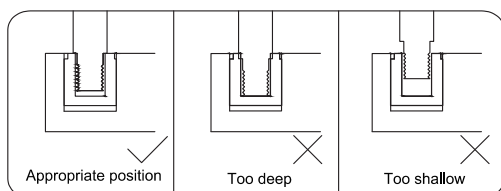

REMARK :

Put a blanket under the board to avoid scratch or damage.

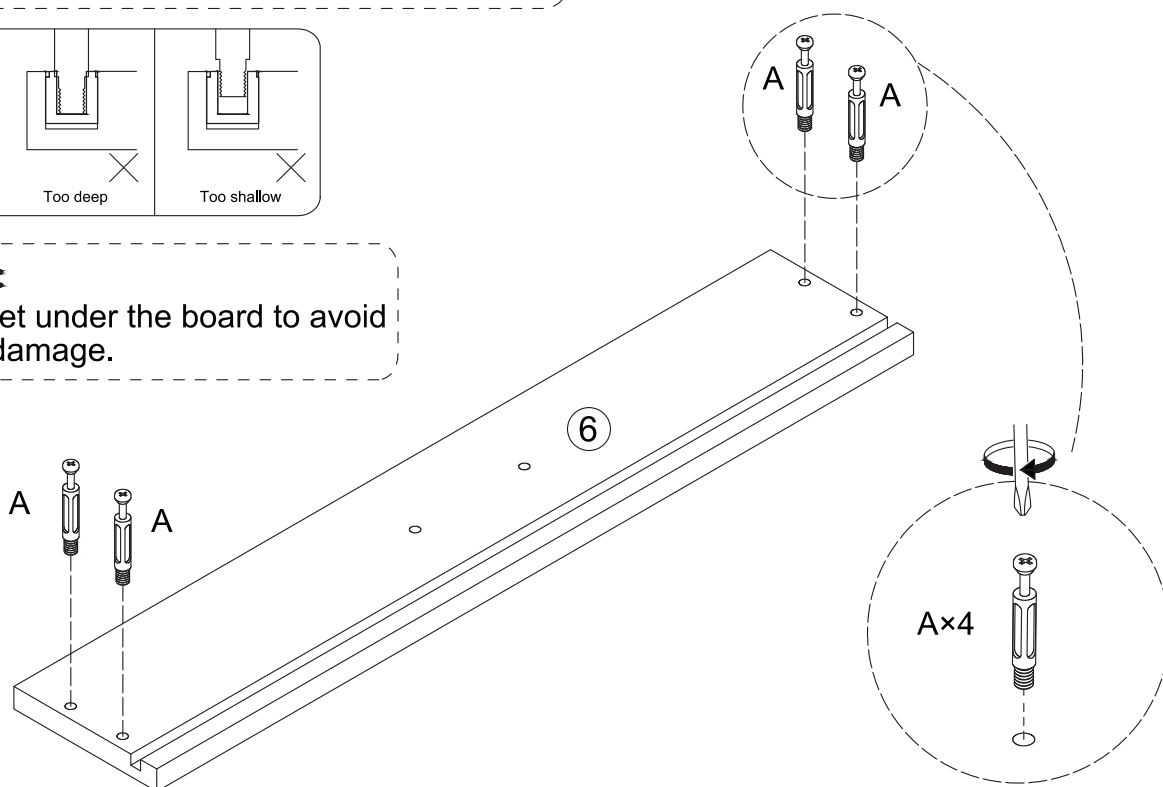


Install Cam Bolt A*4 into Part#6 as shown.



A X 4

7

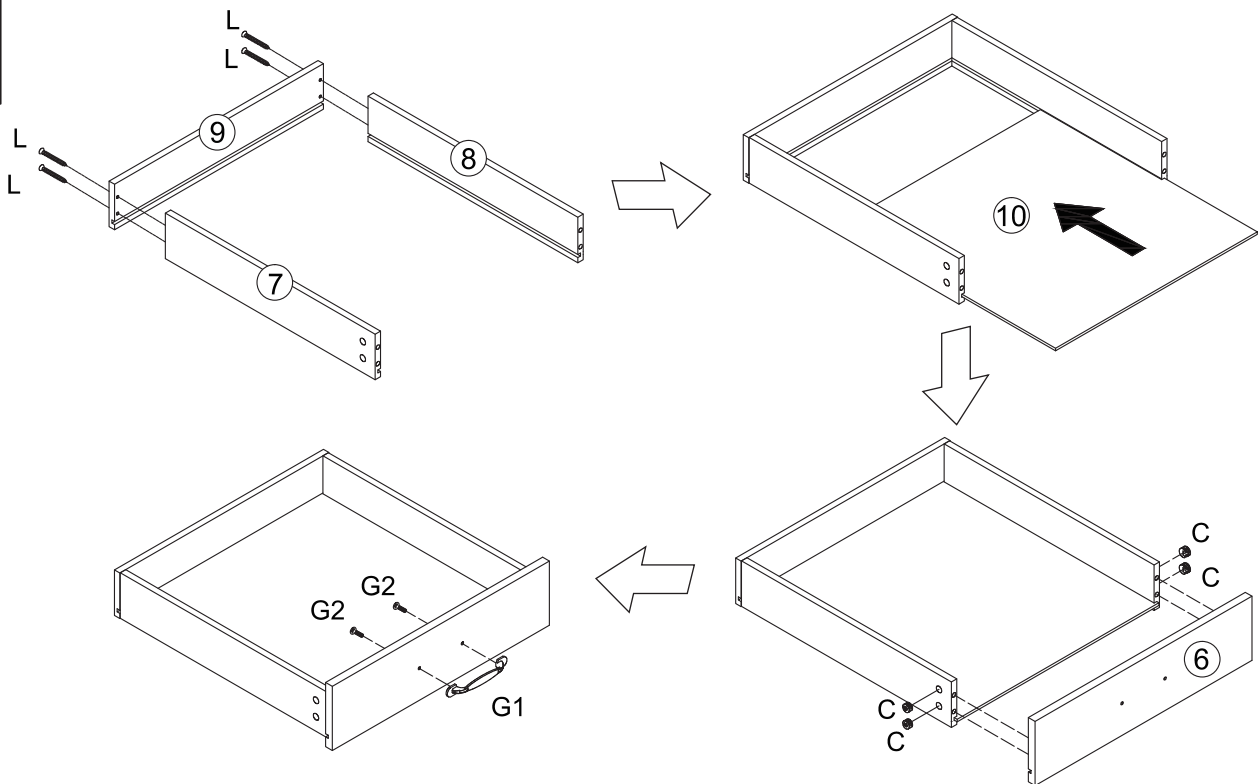


First, attach Part# 9 to Part #7 and Part# 8 with screws L*4 as shown.


Second, insert bottom part #10 as shown.

Third, install Nuts C*4 and turn C to secure position.

Last, install handle G1 to the assembled drawer with screws G2*2 as shown



8

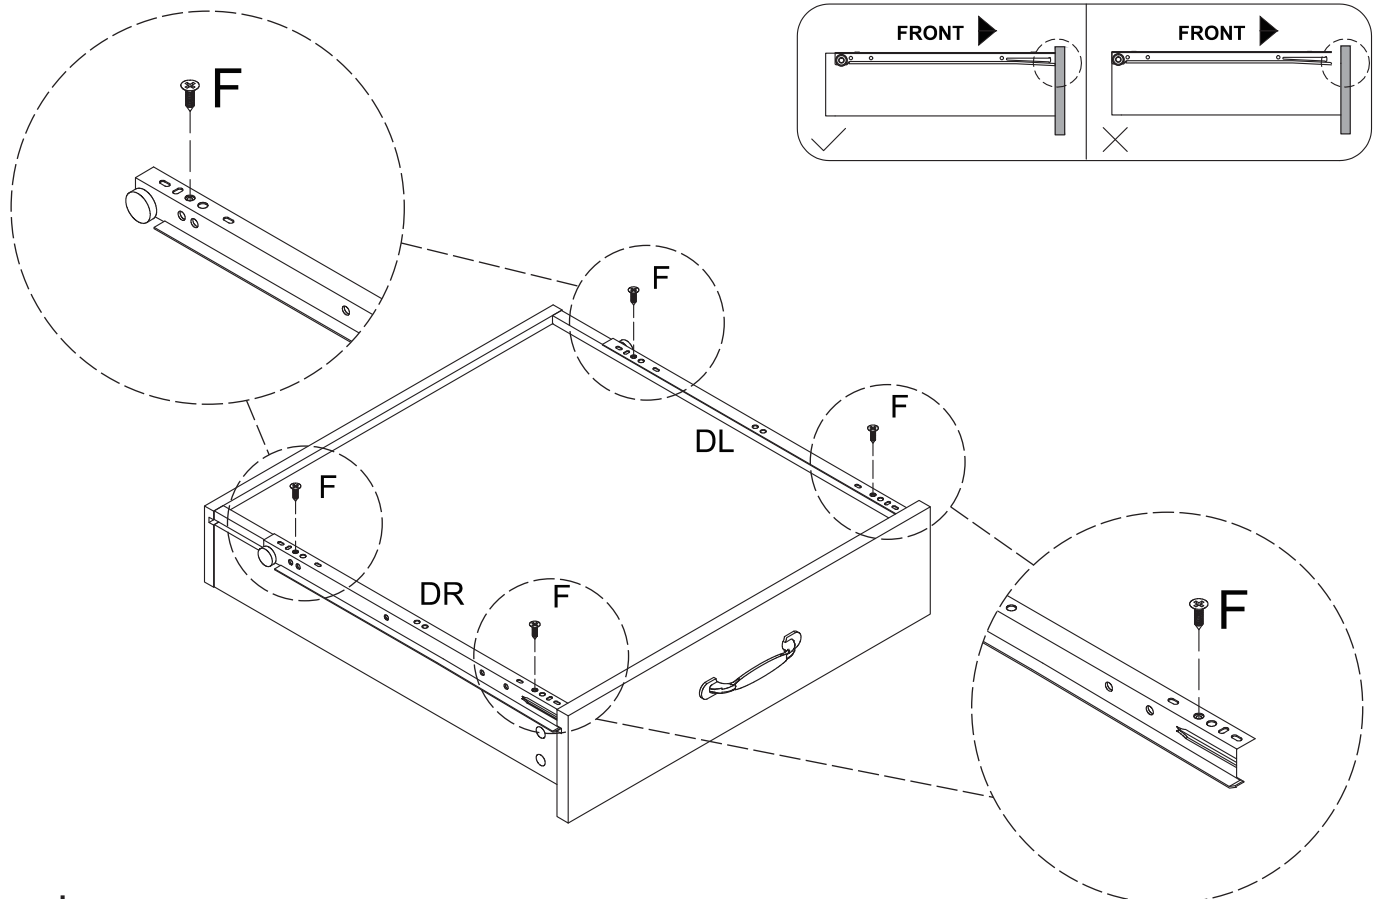


Turn the drawer over

Install rail part DL and DR to the drawer with screws F*4 as shown.



9

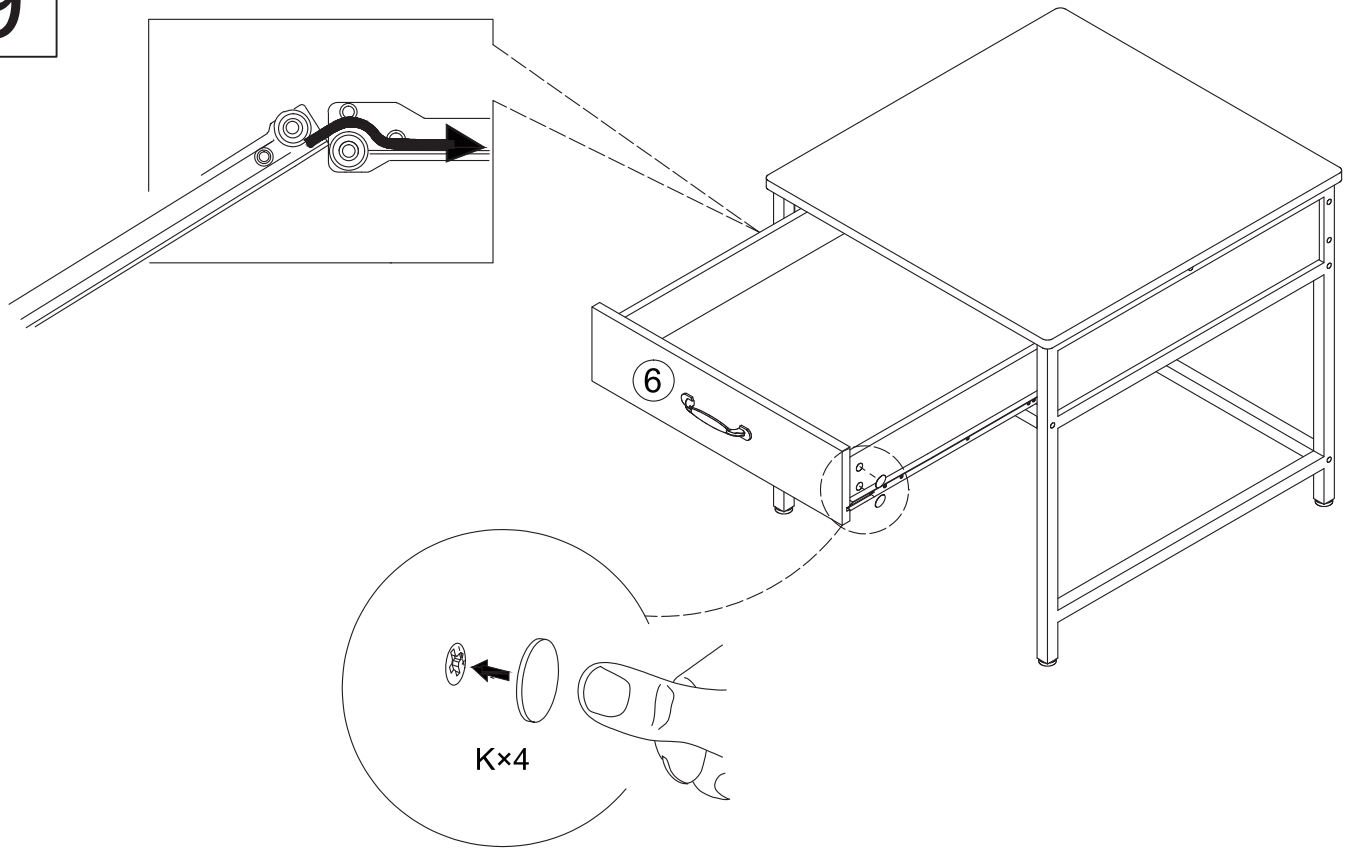


Put cover K*4 to the nuts for improved appearance(optional). Then put the drawer into the assembled unit as shown.




K X 4

10

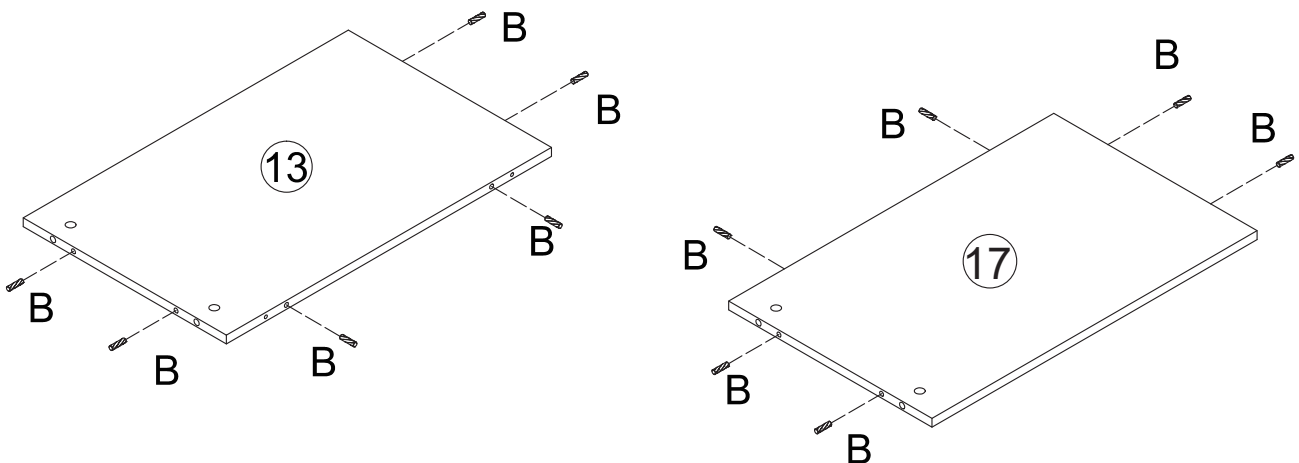


Put dowel B*12 into part#13 and Part#17 as shown.



B X 12

11

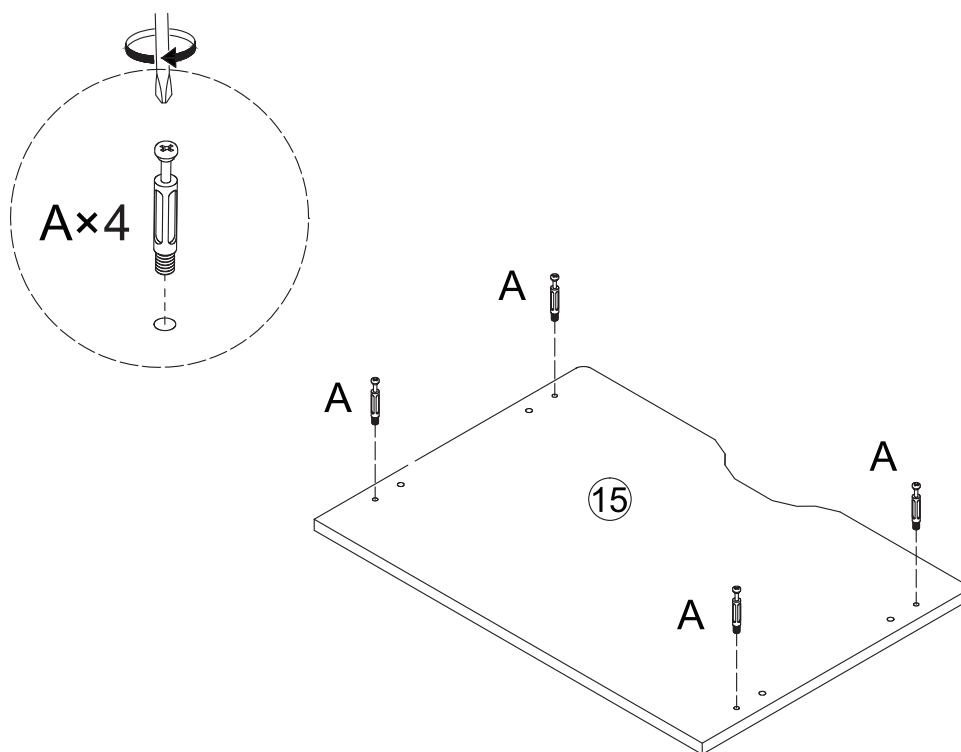


Install Cam Bolt A*4 into Part#15 as shown.



A X 4

12

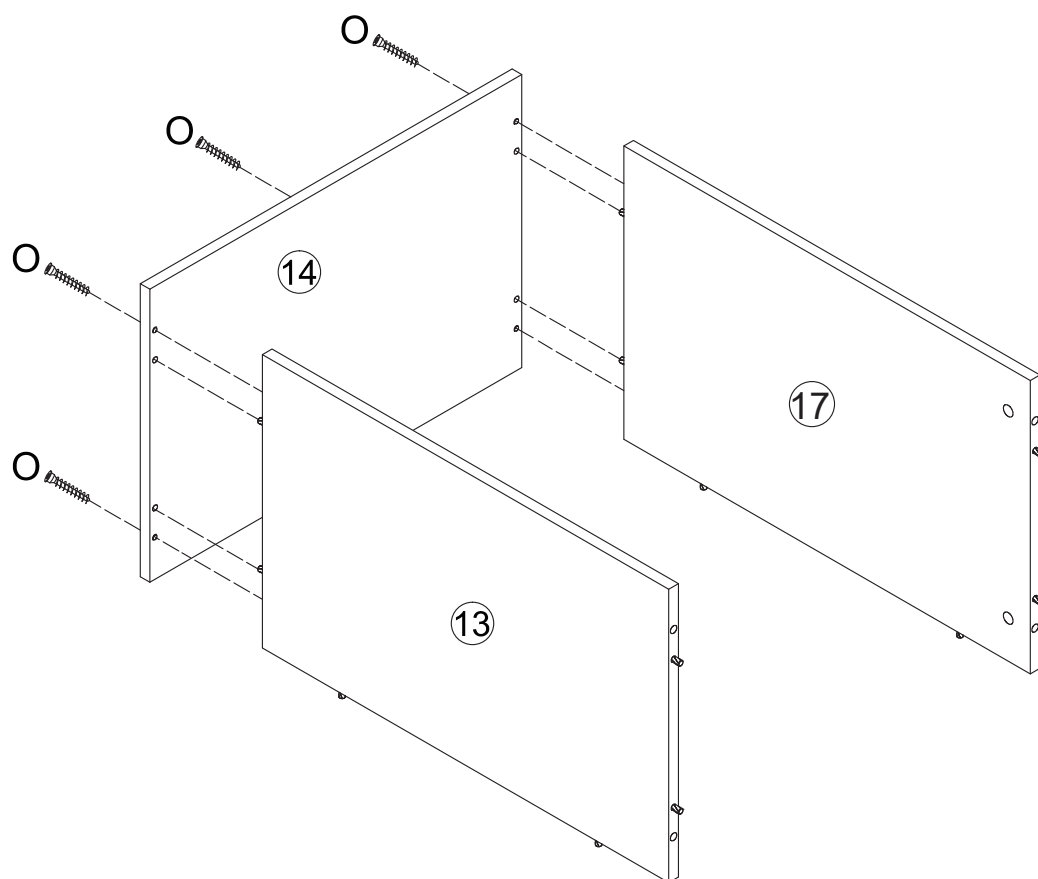


Connect Part#13 and Part#17 to Part#14 with screws O*4 as shown.




O X 4


13

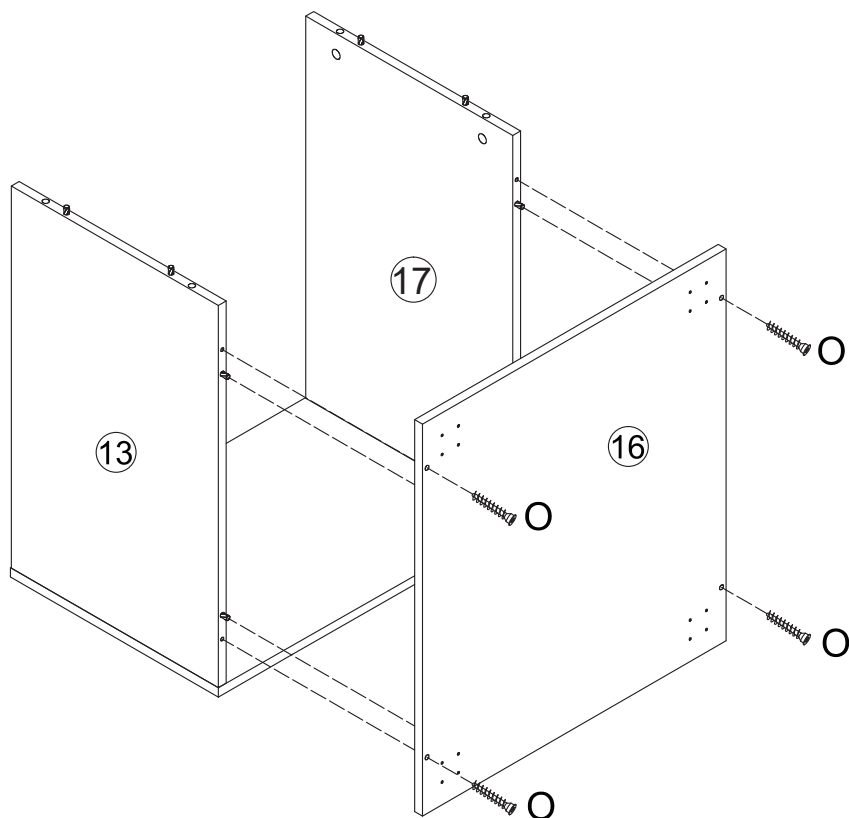

Attach Part#16 to Part#13 and Part#17 with screws O*4 as shown.

 O X 4


14

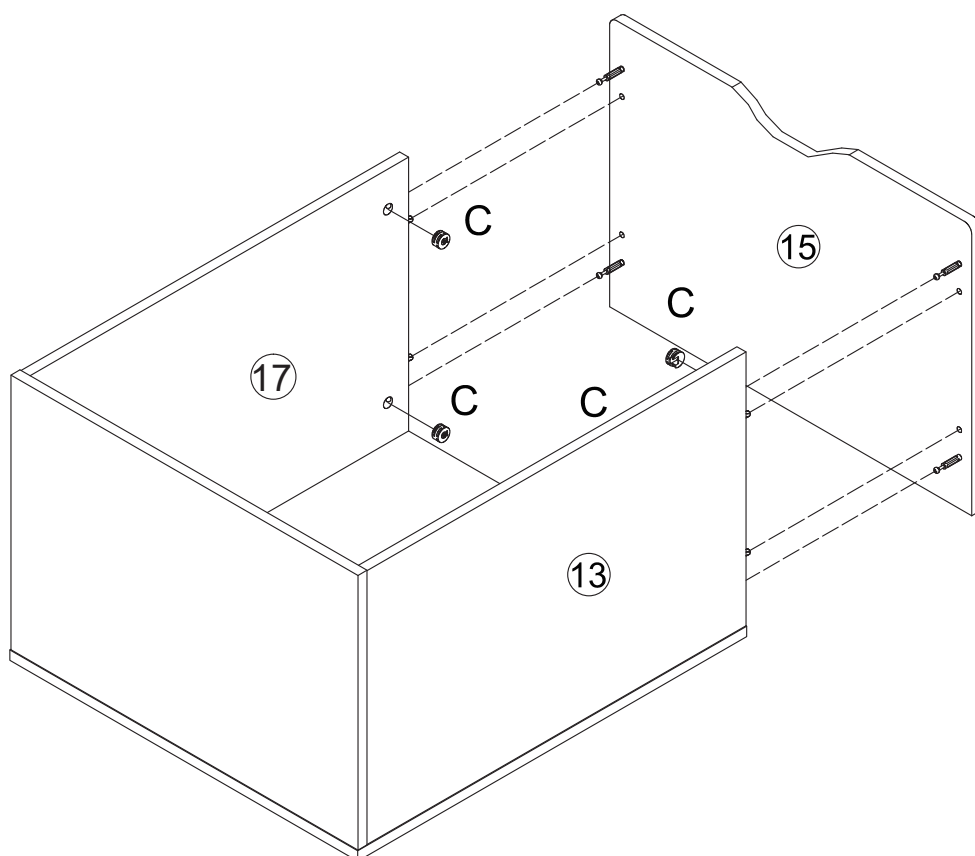

Attach Part #15 to the assembled unit with nuts C*4 as shown.
Turn C to secure position.

 C X 4

15

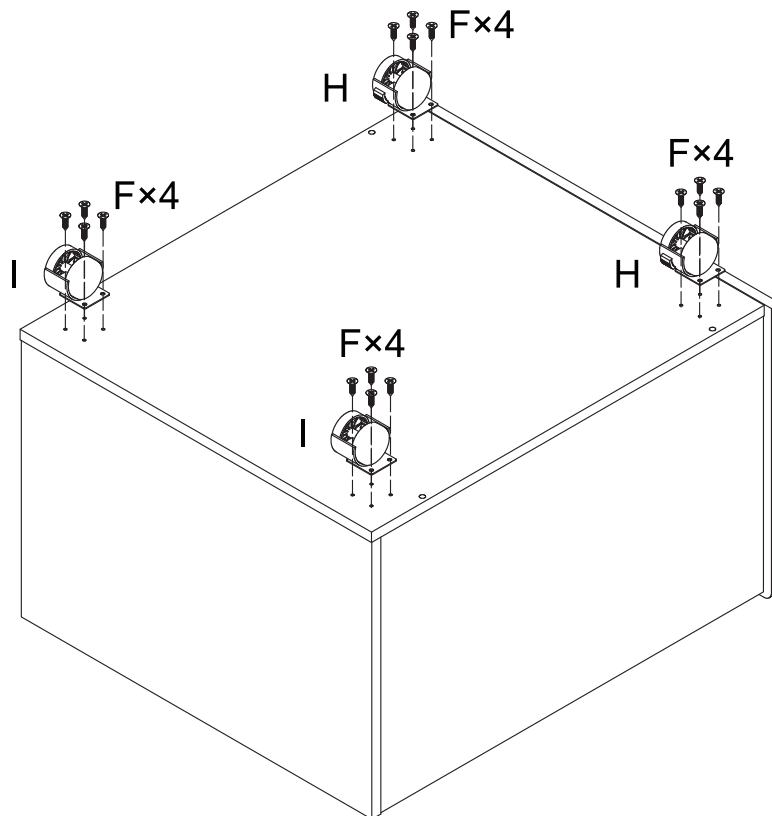

Attach Wheels H*2 and I*2 to the cabinet with screws F*16 as shown.
Reminder: The two wheels with brakes(H*2) are on the same side as the door with U-shaped groove



F X 16




H X 2



I X 2

16

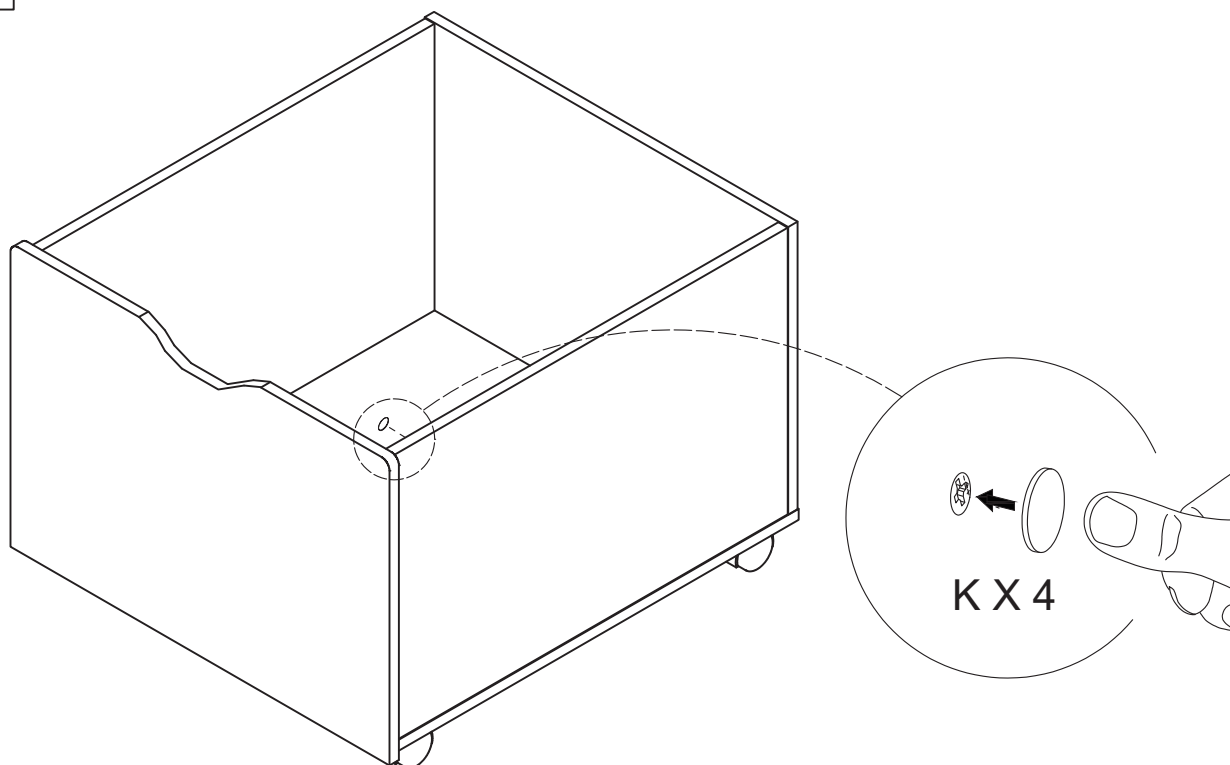


Put cover K*8 to the nuts for improved appearance (optional)




K X 4

17

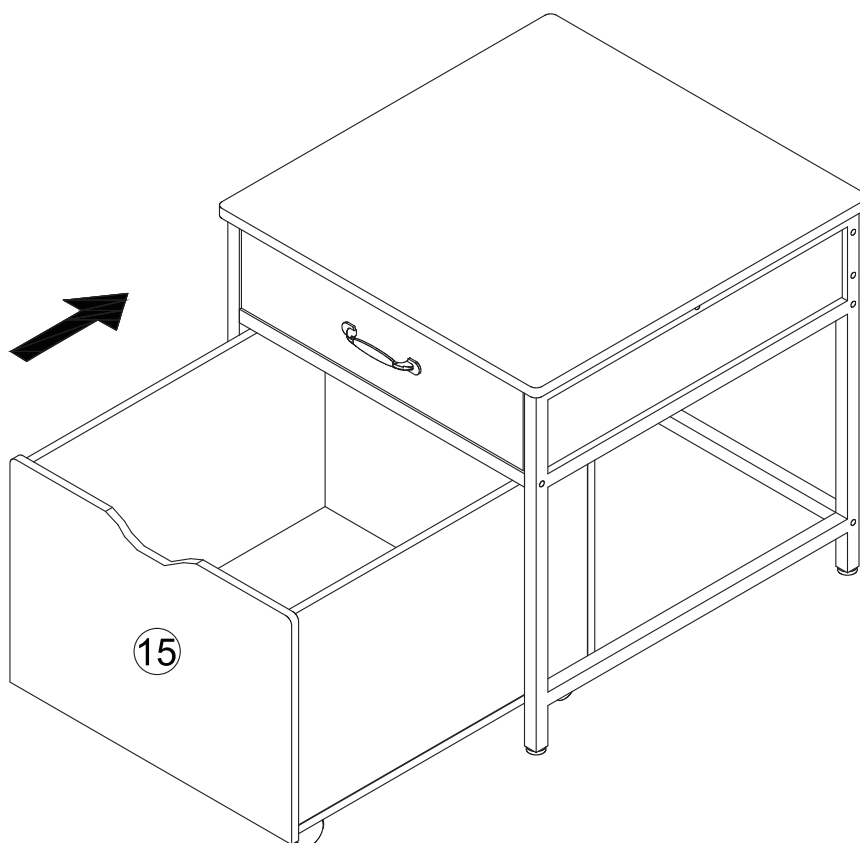


Push the movable cabinet into place

18

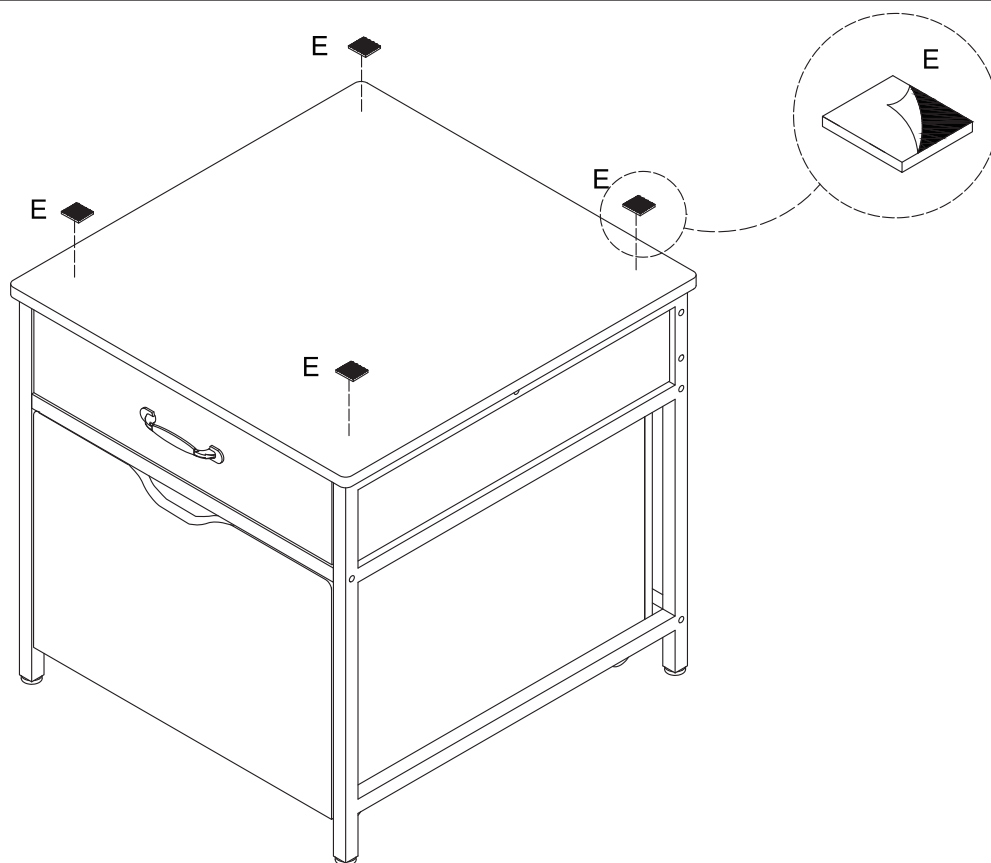

To make it safer to keep your refrigerator stationary, we offer anti-slip mats. You can place anti-slip mats according to the position of the refrigerator feet.



E X 4