

HEADBOARD

Twin Size
King Size

UNLESS OTHERWISE STATED, PLEASE DO NOT TIGHTEN BOLTS (AND/OR) SCREWS UNTIL UNIT IS COMPLETELY ASSEMBLED. Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required.

- HARDWARE LIST**
 A (4) Long Allen Bolts
 B (4) Short Allen Bolts
 C (4) Metal Washers
 D (4) Hex Nuts
 E (2) Foot Glides
 F (2) Finials
 G (1) Allen Wrench

- PARTS LIST**
 H (1) Headboard Grill
 I (2) Headboard Posts



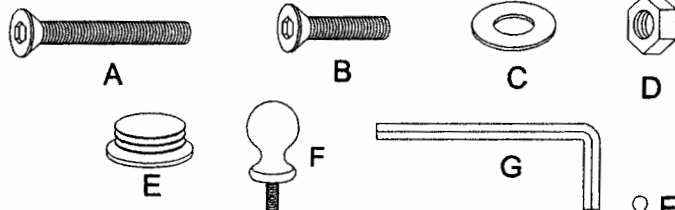


Figure 2

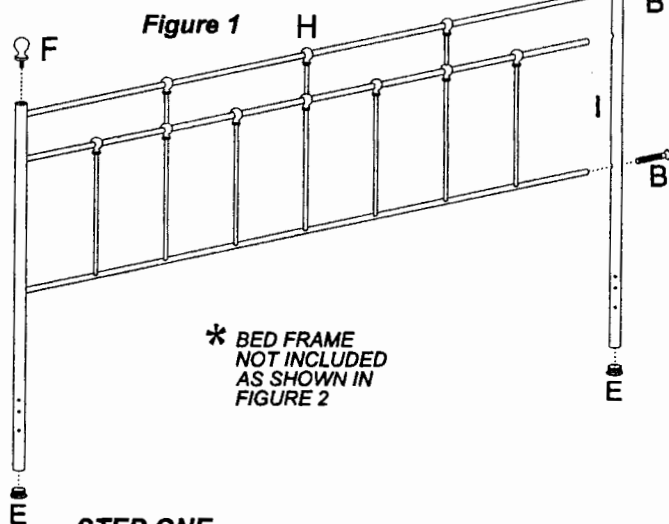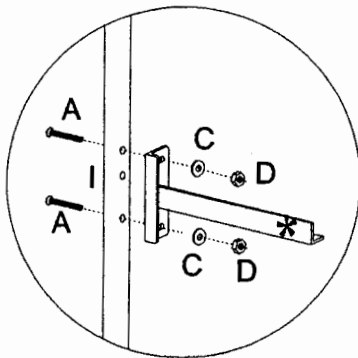

* BED FRAME
NOT INCLUDED
AS SHOWN IN
FIGURE 2

STEP ONE

Begin by first attaching each Headboard Post (I) to Headboard Grill (H), using 2 Short Allen Bolts (B) per each side. Tighten each Bolt only using Allen Wrench (G) provided with hardware.

STEP TWO

Insert each Foot Glide (E) into bottom of each Headboard Post (I), by pressing in Firmly. Insert 1 finial (F) into top of each headboard post. Firmly Tighten. The use of a rubber mallet may be necessary for fitting each foot glide. See Figure 1.

STEP THREE

Attach Bed Frame (*Not Included) to each Headboard Post (I), using 2 long Allen Bolts (A), 2 Metal Washers (C) & 2 Hex Nuts (D) per each side. Tighten all Bolts & Nuts for this step. The use of power tools is not recommended in the tightening of the Bolts, they may cause damage to the hardware. Assembly is complete.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.