

ASSEMBLY INSTRUCTIONS



SHOE CABINET

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

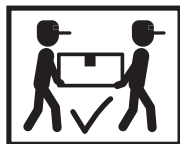


ASSEMBLY TIME

60 MINUTES


PARTS IDENTIFICATION

A LEFT SIDE
PANEL

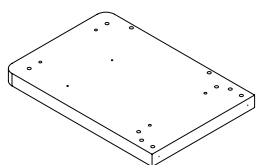


1 PC

B RIGHT SIDE
PANEL

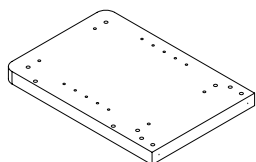


1 PC

C MIDDLE DIVIDER
PANEL

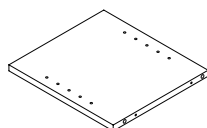


1 PC

D CROSS BRACE

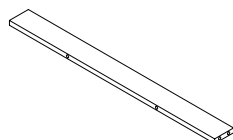


2 PCS

E BOTTOM PANEL

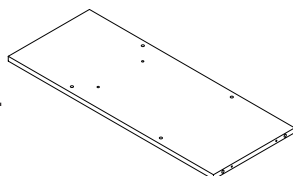


1 PC

F ADJUSTABLE
SHELF

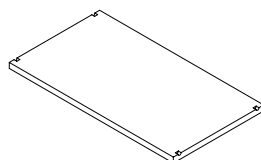


1 PC

G TOP PANEL

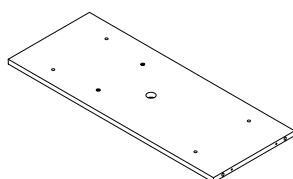


1 PC

H BACK PANEL

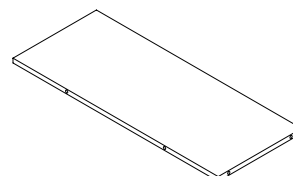


1 PC

I DRAWER
FRONT PANEL

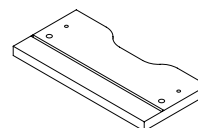


1 PC

J DRAWER BACK
PANEL




1 PC

K DRAWER LEFT
SIDE PANEL




1 PC

L DRAWER RIGHT
SIDE PANEL




1 PC

M DRAWER
BOTTOM PANEL

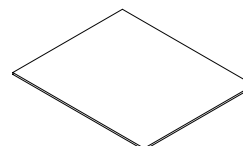

1 PC

N SEAT CUSHION

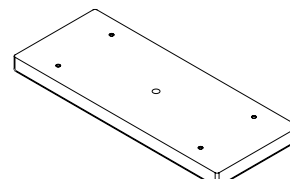










1 PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

HARDWARE IDENTIFICATION

Z

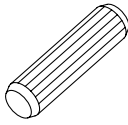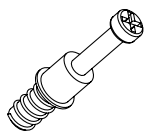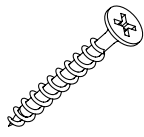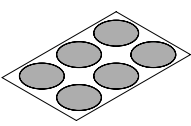NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	7	PLASTIC FEET Ø15mm		4 PCS
2	WOODEN DOWEL Ø8x30mm		34 PCS	8	PIN FOR ADJUSTABLE SHELF Ø4.9 x 15mm SR		4 PCS
3	CAM BOLT Ø7x35.5mm SR		2 PCS	9	GLIDES L = 250mm		1 SET
4	CAM LOCK Ø15x12mm SR		2 PCS	10	SCREW FOR HINGE Ø3x12mm BLK		10 PCS
5	LONG SCREW Ø4.5x42mm SR		12 PCS	11	BOLT M6x25mm BLK		4 PCS
6	SCREW Ø4.3x35mm SR		4 PCS	12	STICKER Ø20mm		1 PC


Z9 not included in blister packaging.

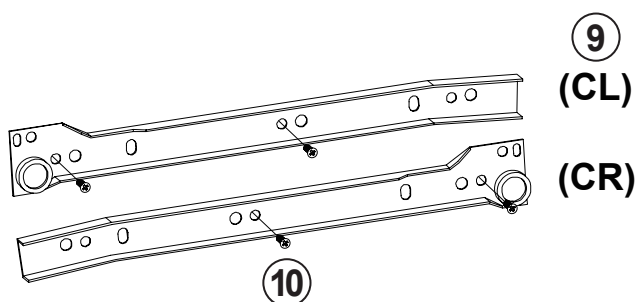


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



STEP 1

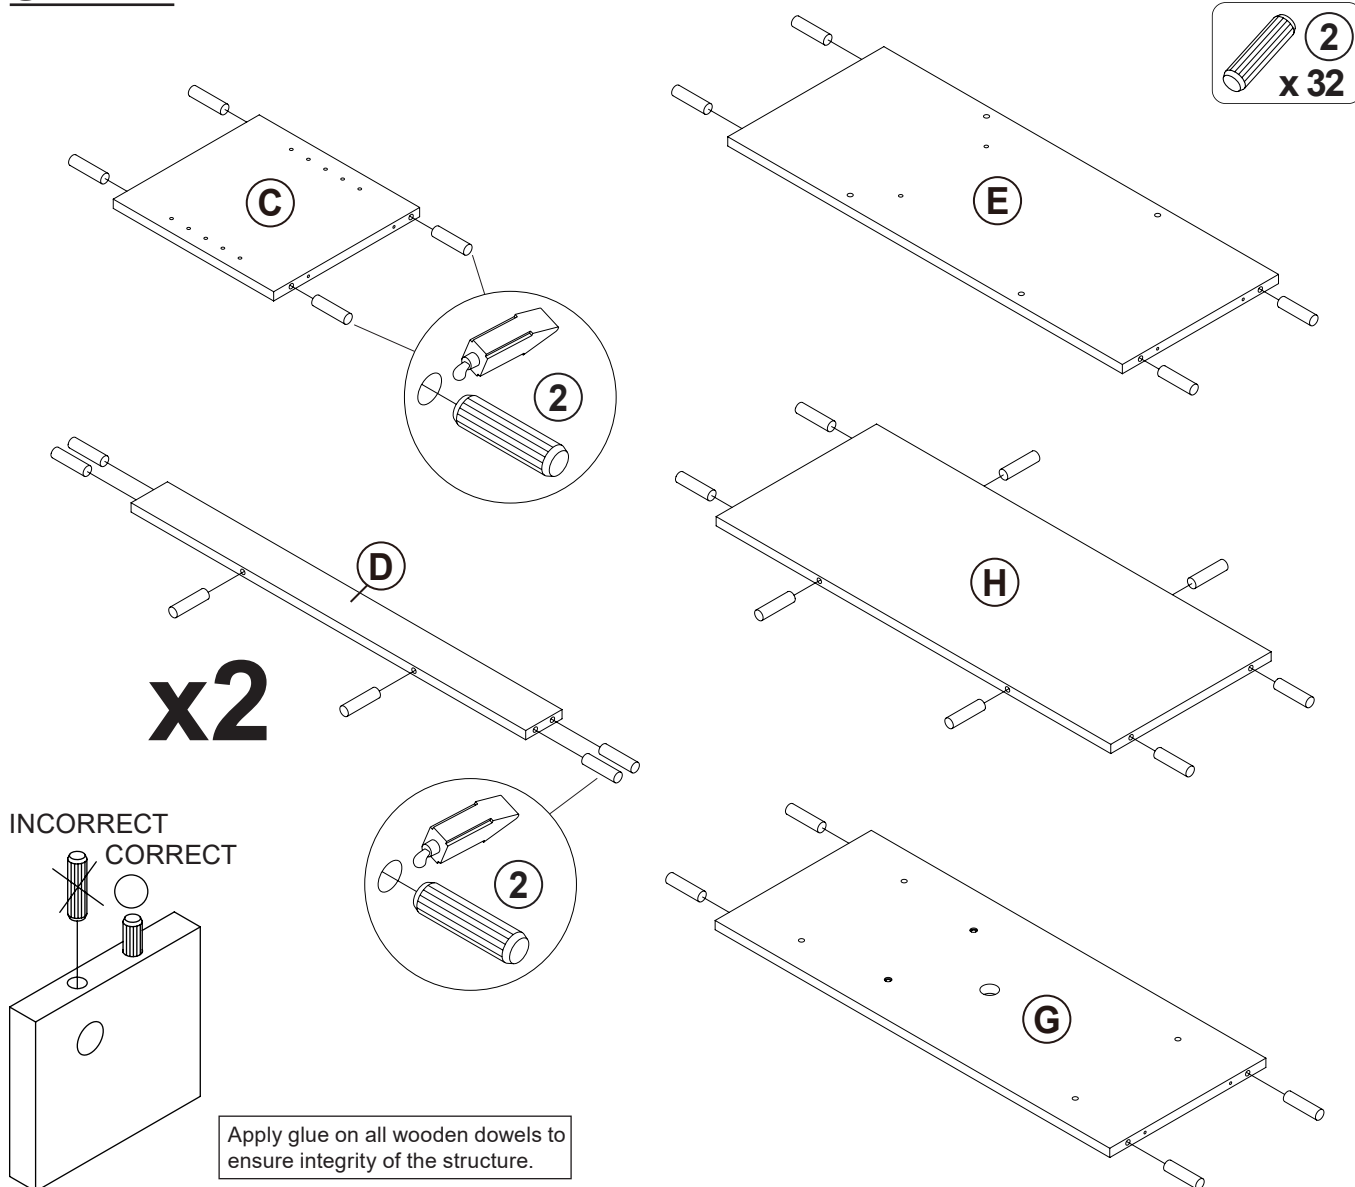


STEP 2

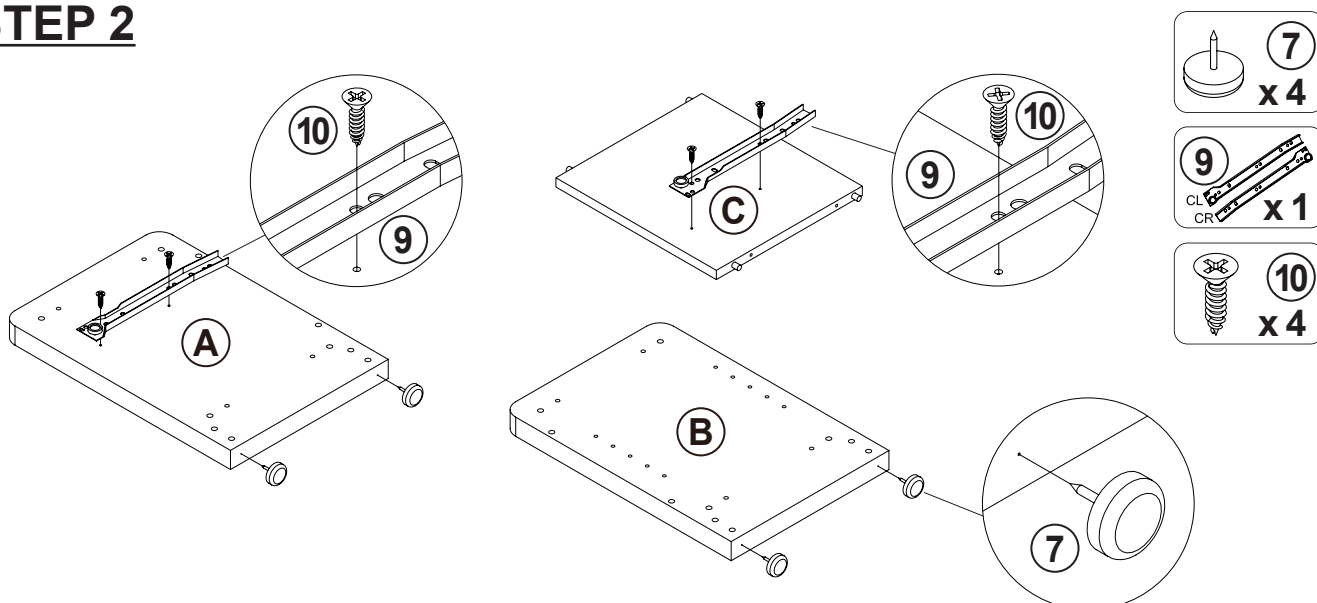



STEP 3

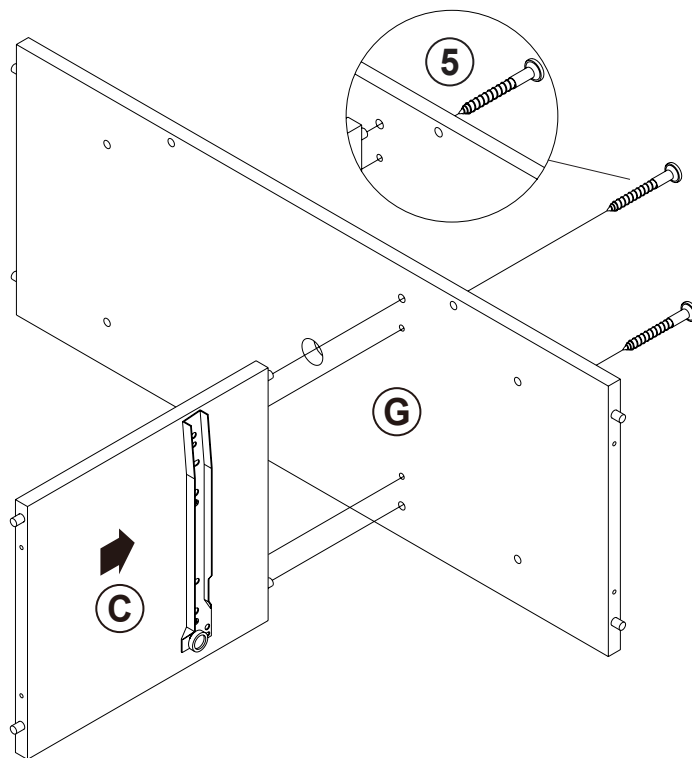


STEP 4

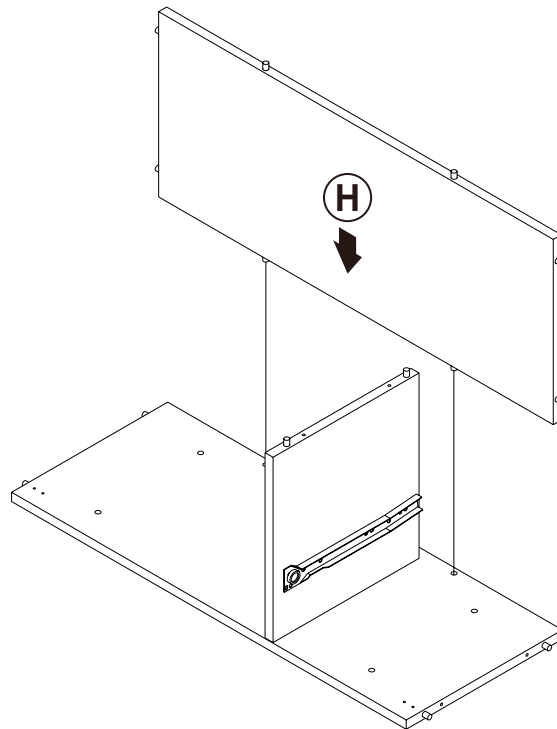


STEP 5

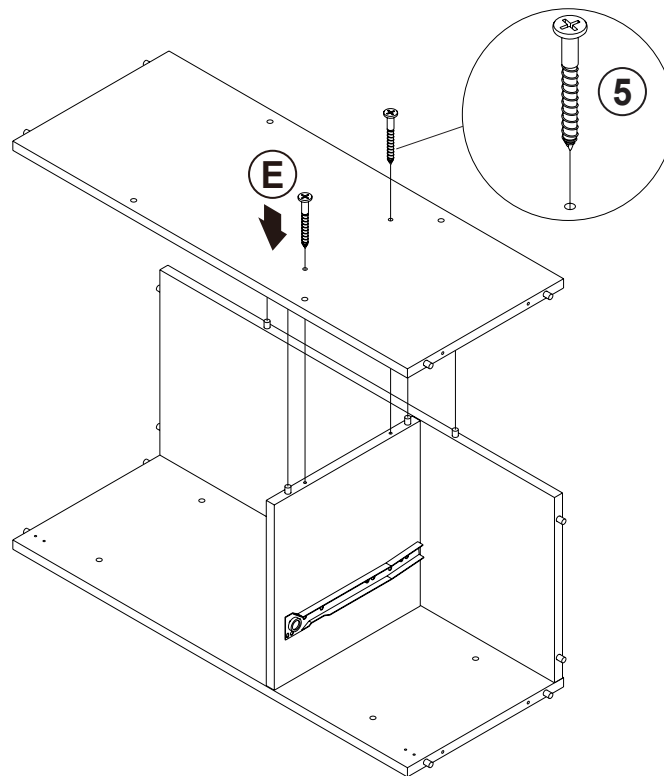


STEP 6

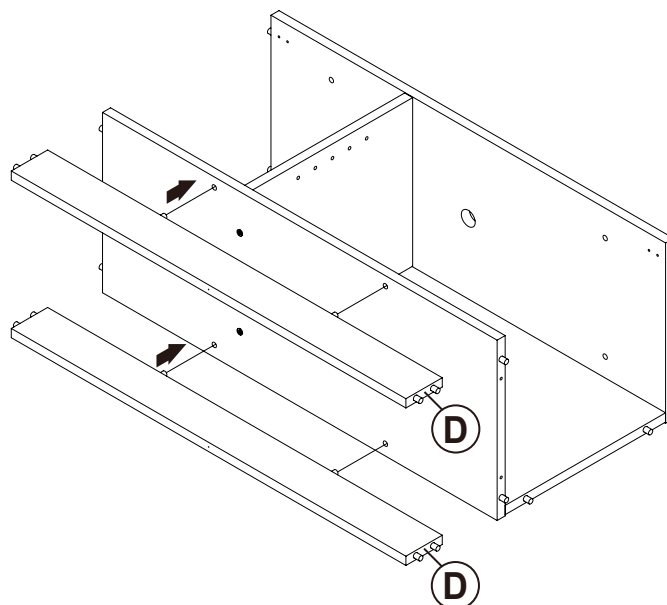



STEP 7

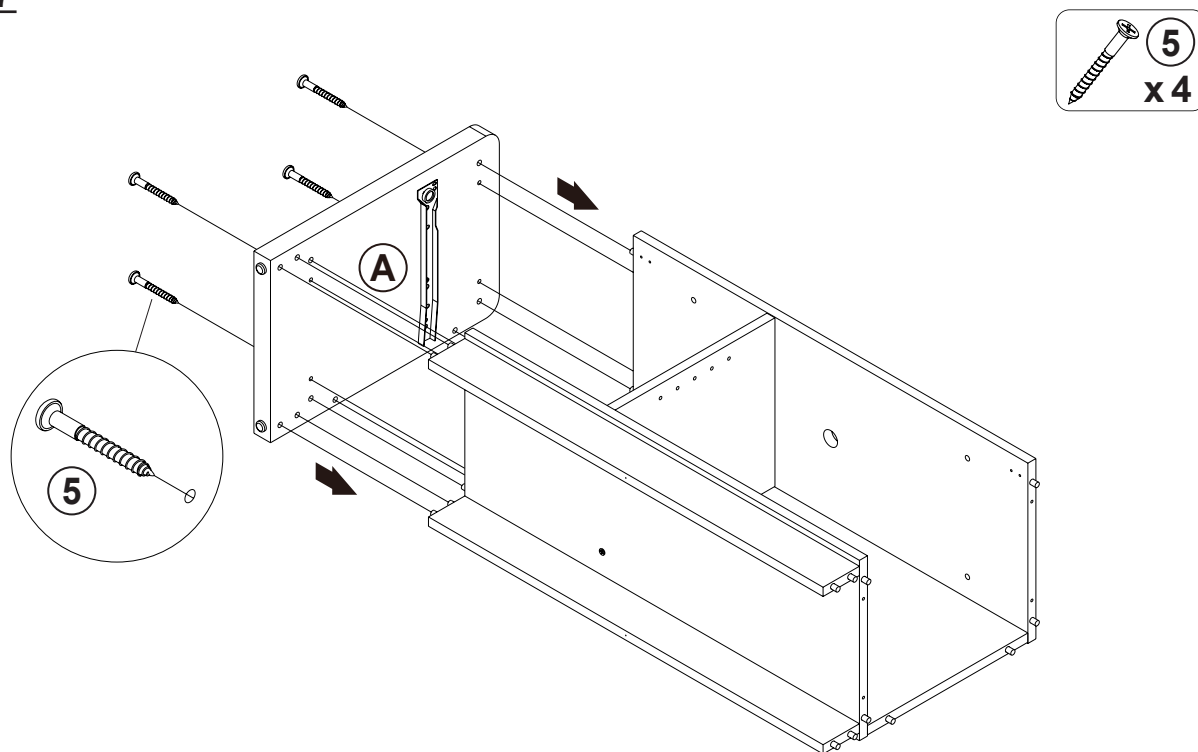


STEP 8

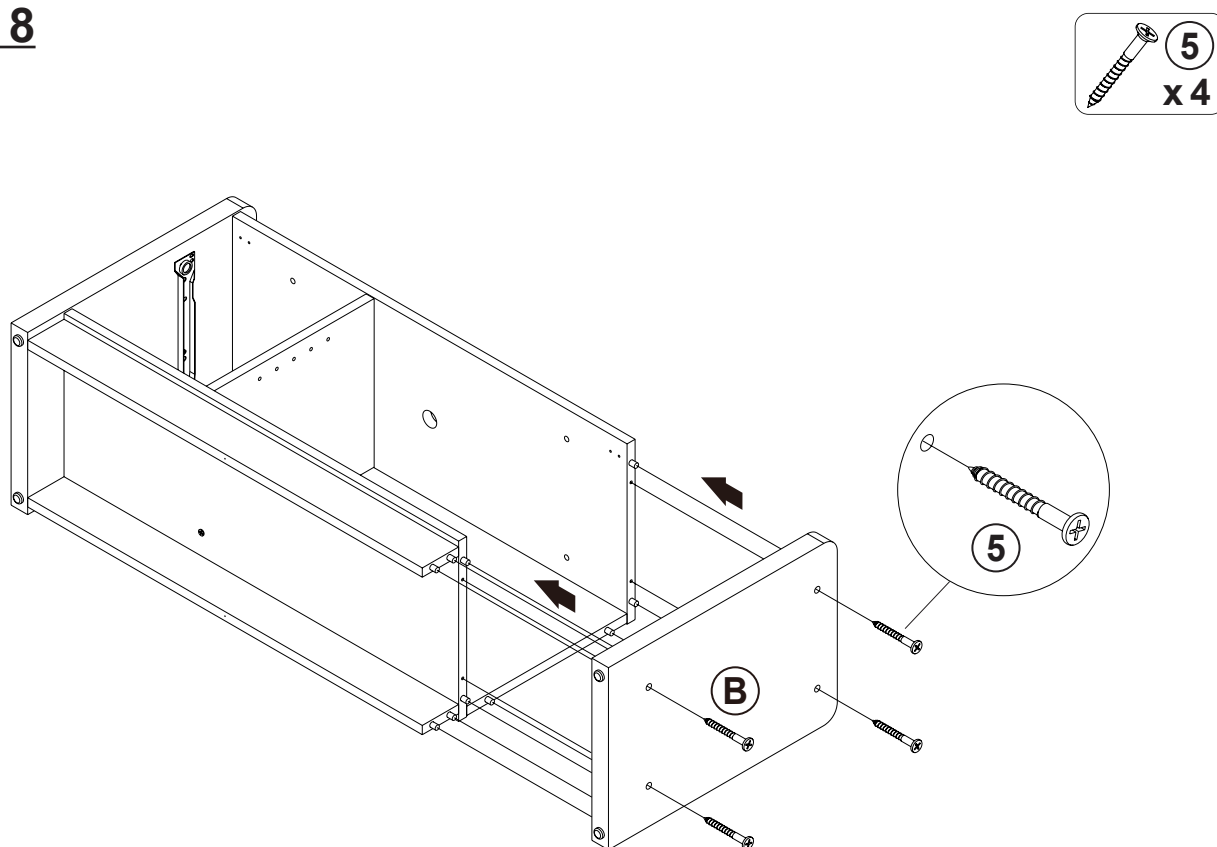


STEP 9

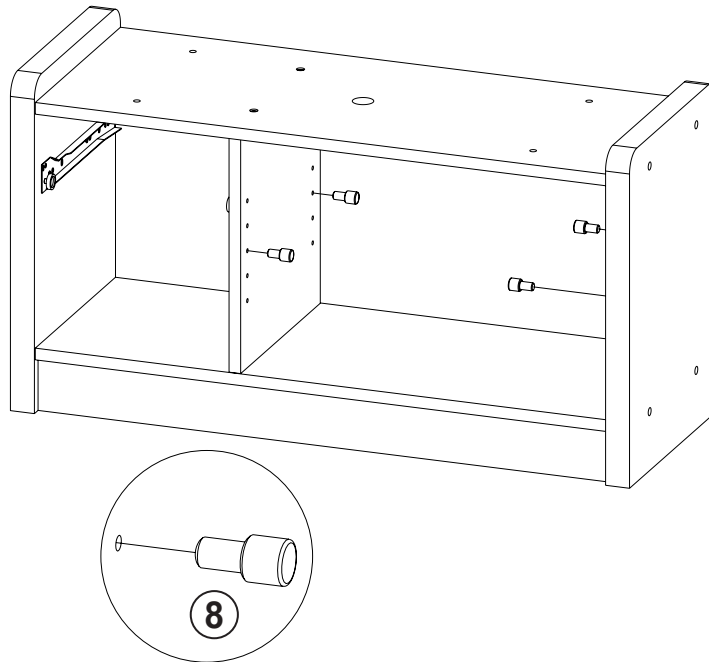




STEP 10

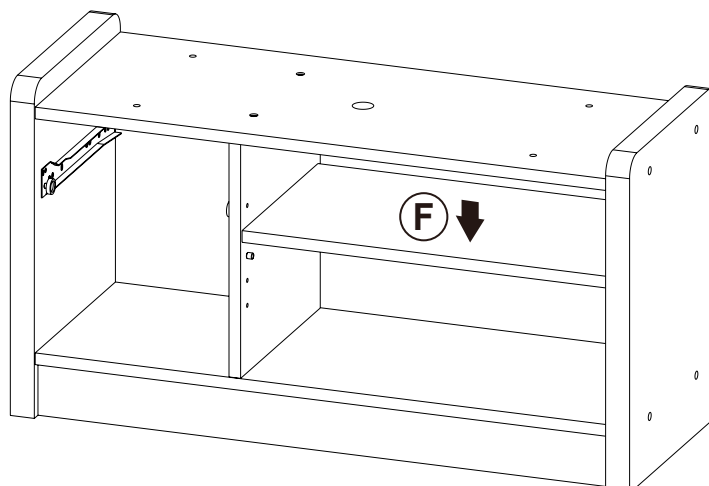


STEP 11

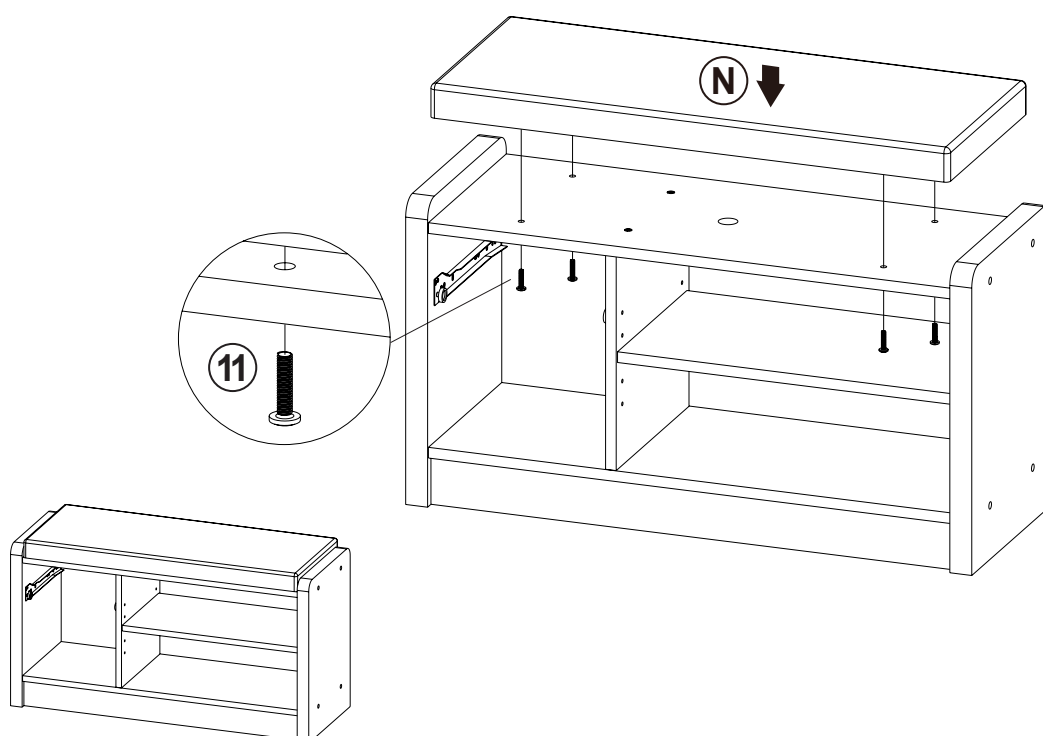

STEP 12

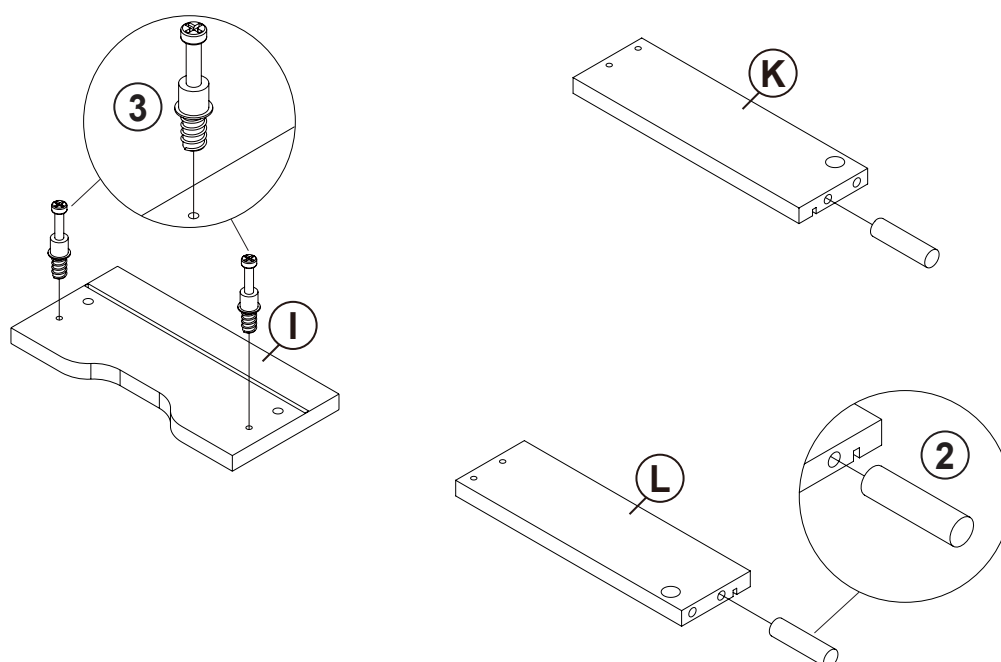


STEP 13

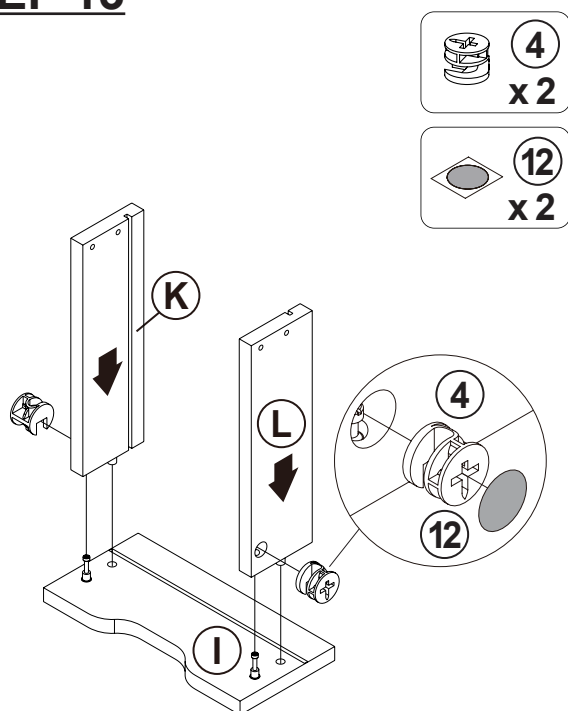


Apply glue on all wooden dowels to ensure integrity of the structure.


STEP 14

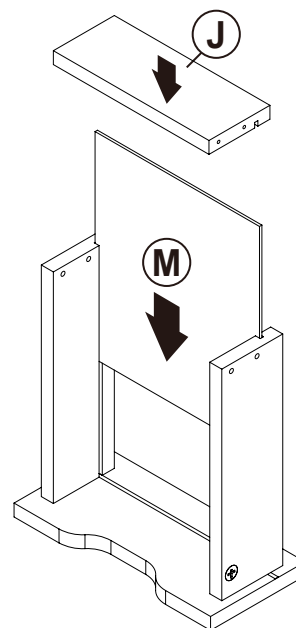


STEP 15

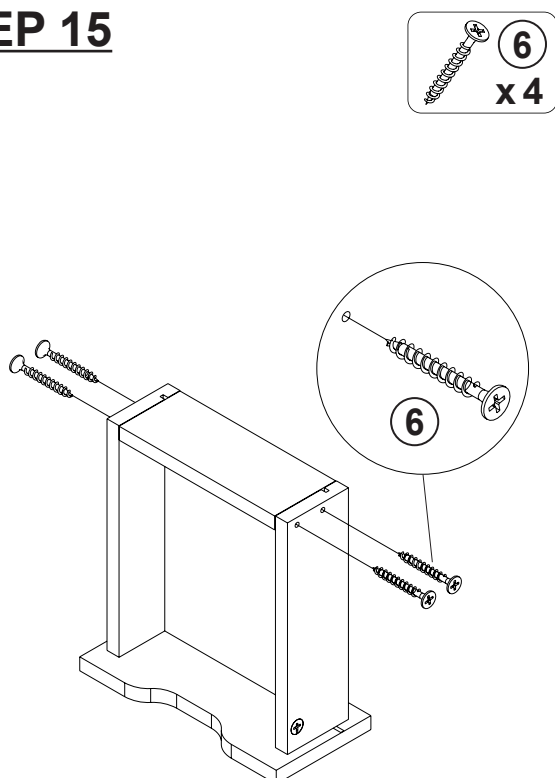

STEP 16


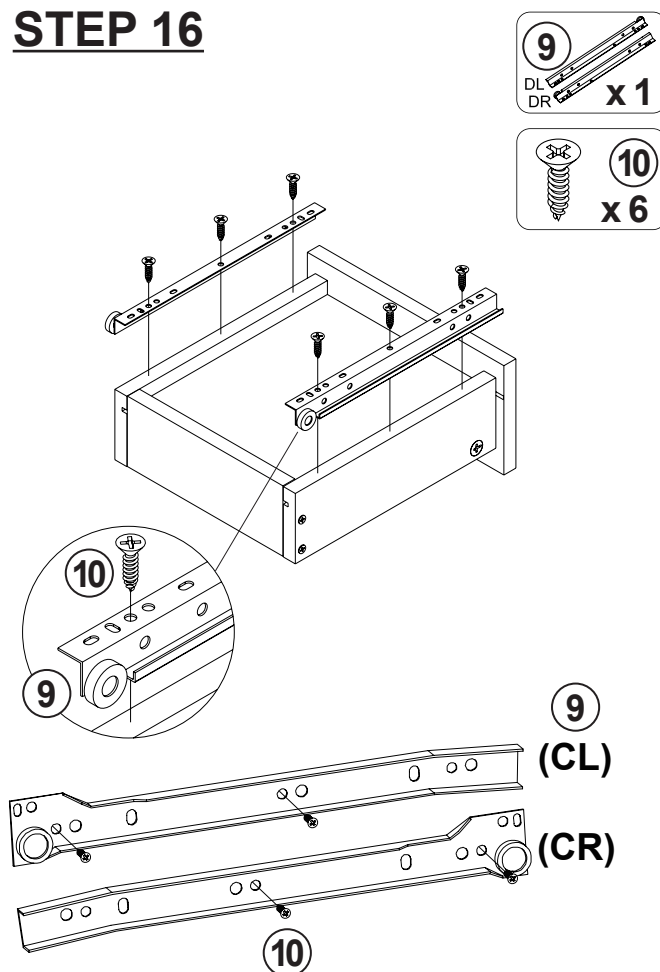




STEP 17

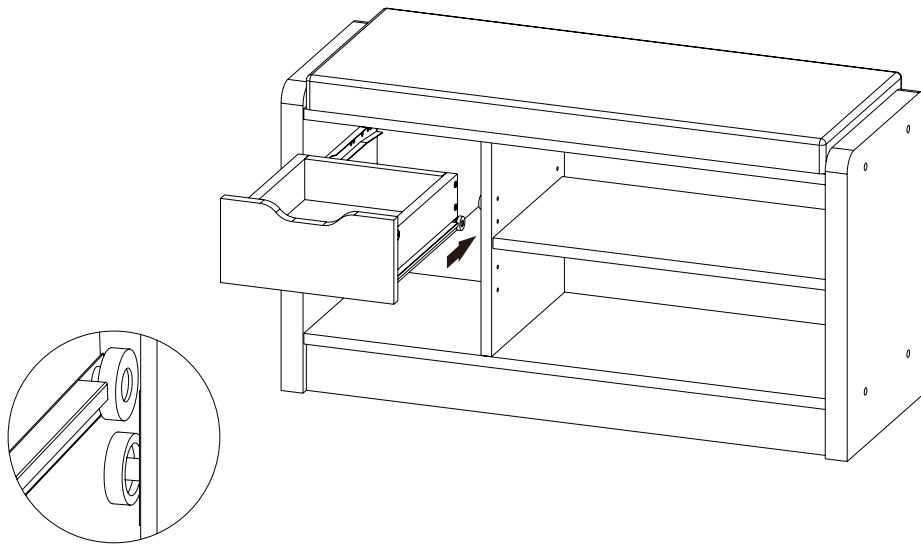

STEP 18

COMPLETE

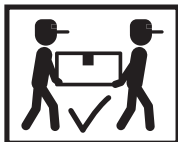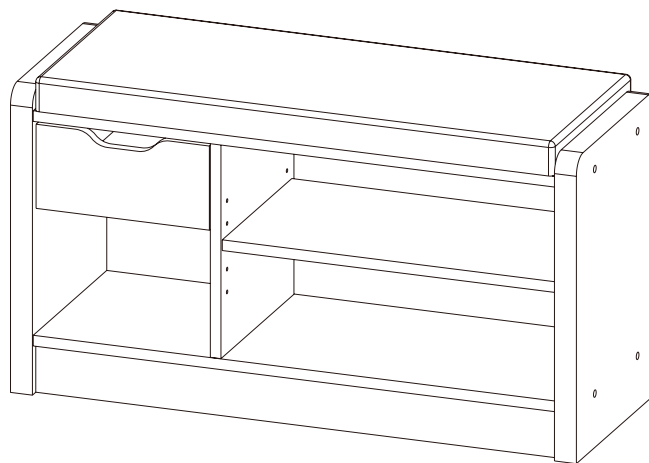

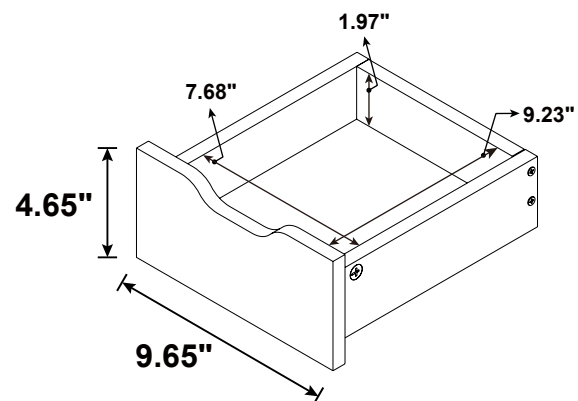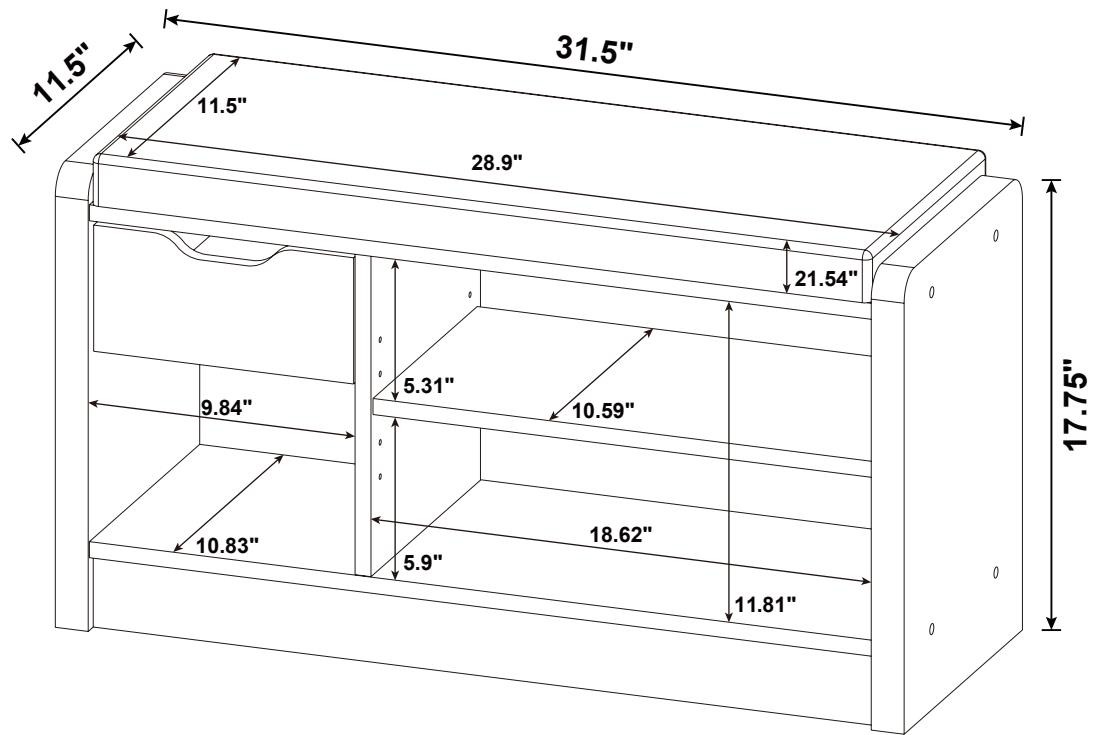

Note : Dimension tolerance $\pm 5\%$