


Cube Bookcase

ASSEMBLY INSTRUCTION

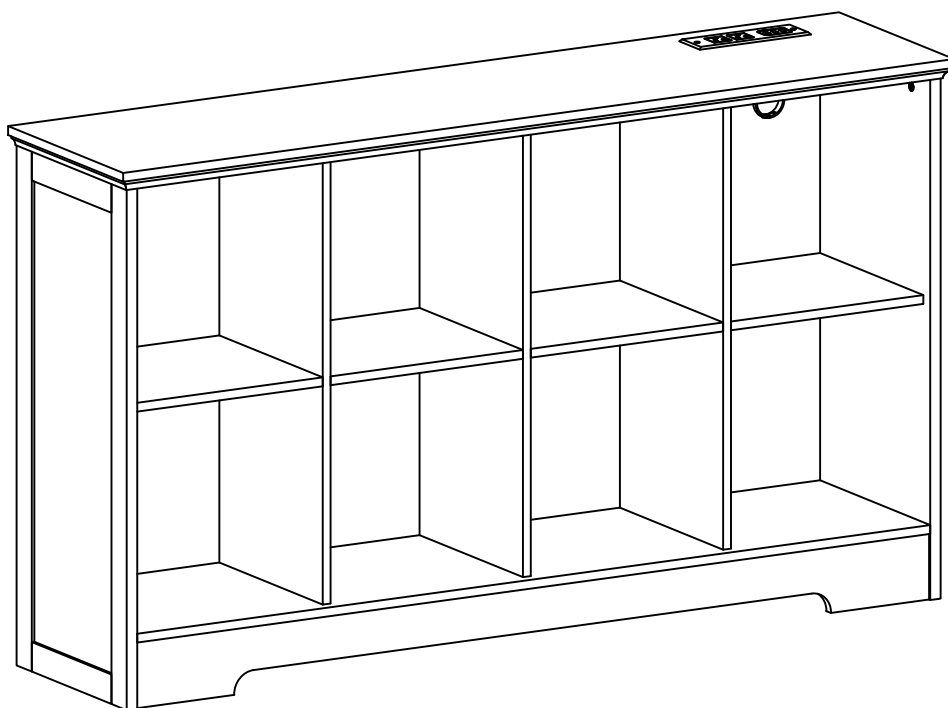

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

✉ toptohome@hotmail.com

Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time, We will provide you with a 100% satisfactory solution.

Thanks again for your order. And please feel free to contact us from our store or [**toptohome@hotmail.com**](mailto:toptohome@hotmail.com) in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.

Please call for replacement parts or assistance: 1-878-888-6665.
Mon-Fri 9am-5pm (PST)


TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install, which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

1 DO NOT OVER TIGHTEN

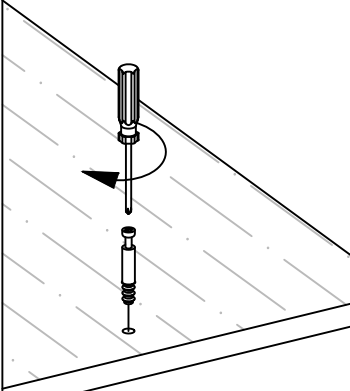

Put the male camlock into the entry hole.


2

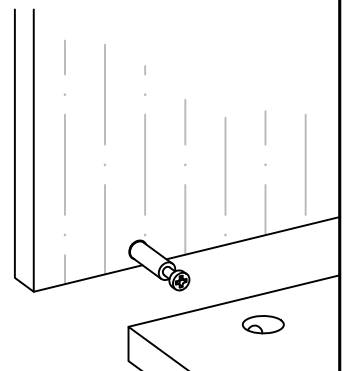

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

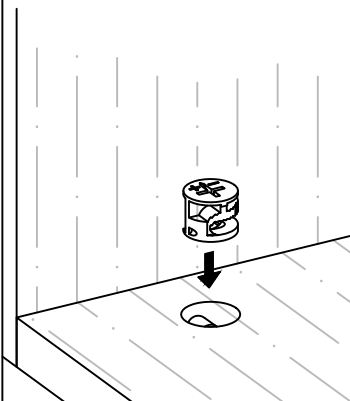



Screw the female camlock clockwise with a screwdriver.











You will feel a click when the camlock is locked in place.










The camlock is now completed.

4


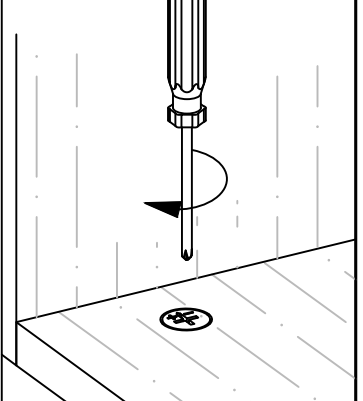


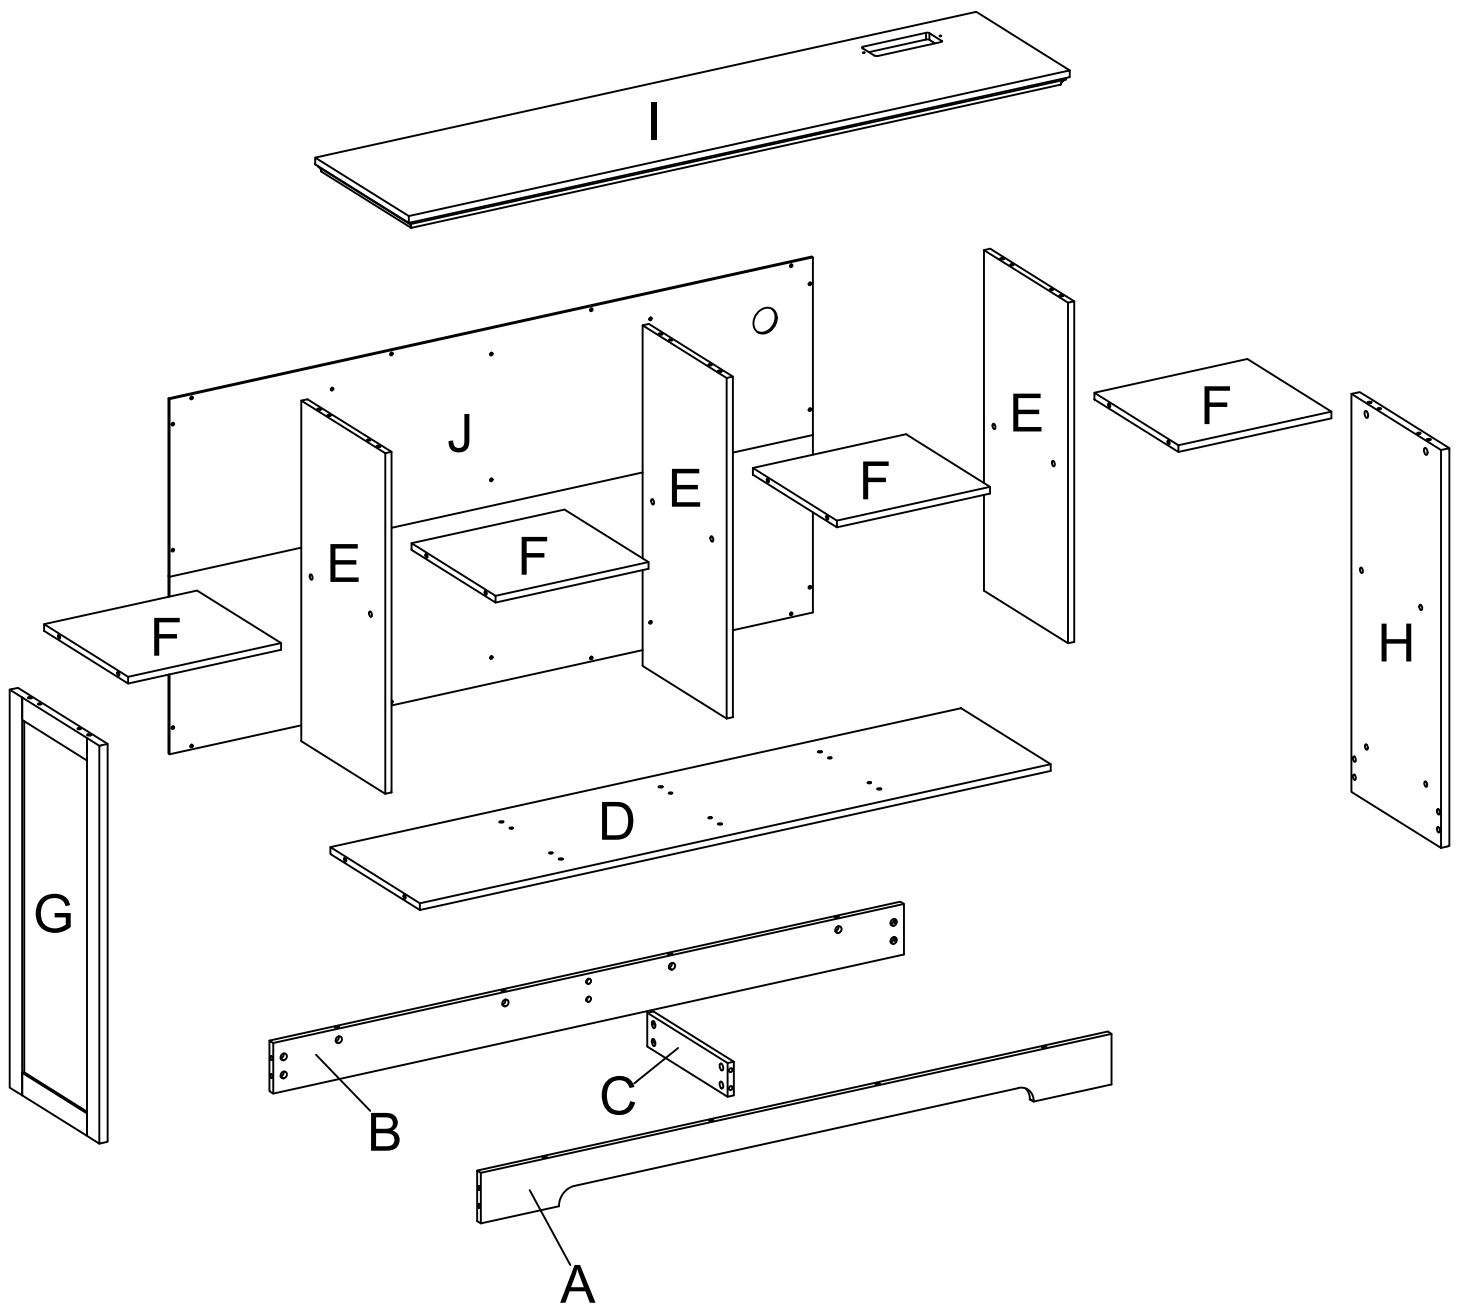

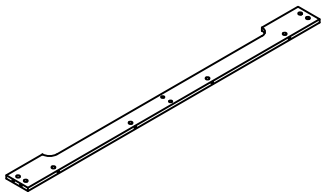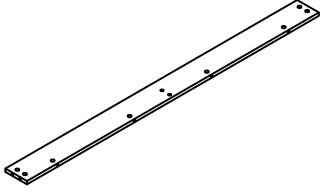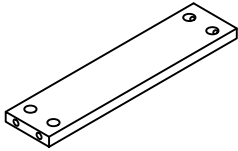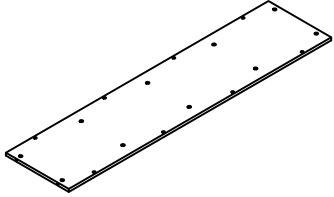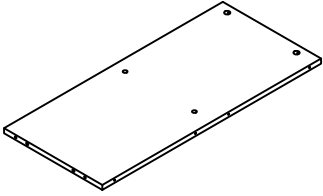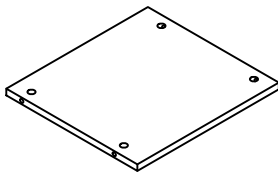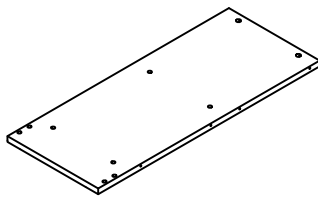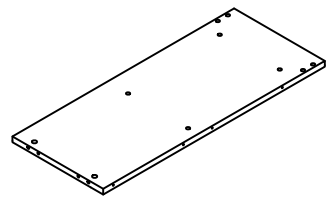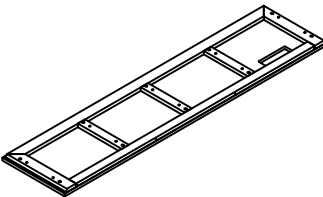
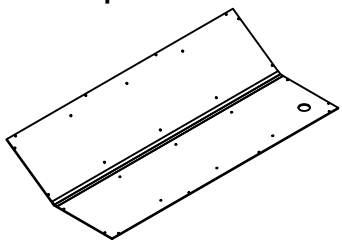
PART LIST			
A x 1pc 	B x 1pc 	C x 1pc 	D x 1pc 
E x 3pc 	F x 4pc 	G x 1pc 	H x 1pc 
I x 1pc 	J x 1pc 		

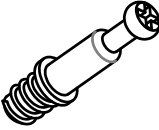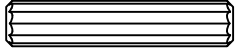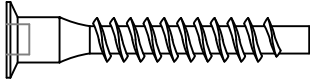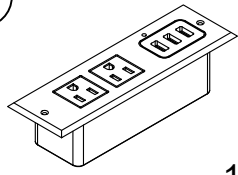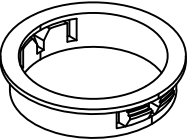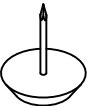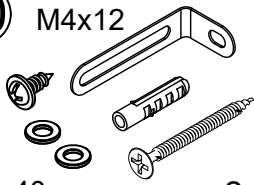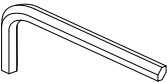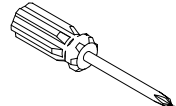HARDWARE LIST			
1  M6x28 50 pcs	2  Φ12 50 pcs	3  Φ6x30 16 pcs	4  M3x16 28 pcs
5  M6x40 6 pcs	6  M3x12 2 pcs	7  1 pcs	8  Ø45mm 1 pcs
9  8 pcs	10 M4x12  M4x40 2 pcs	11  M4 1 pc	12  1 pc



STEP 1

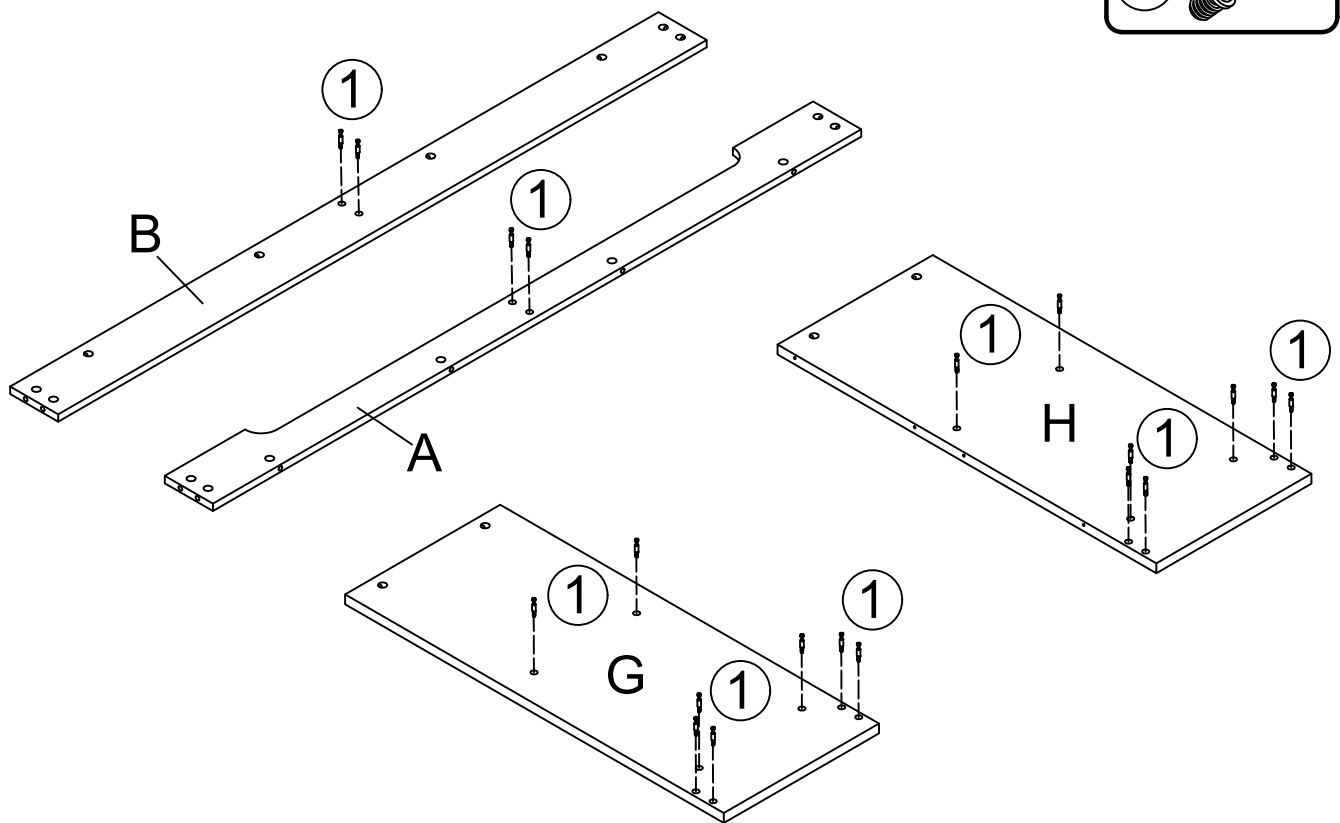

STEP 2

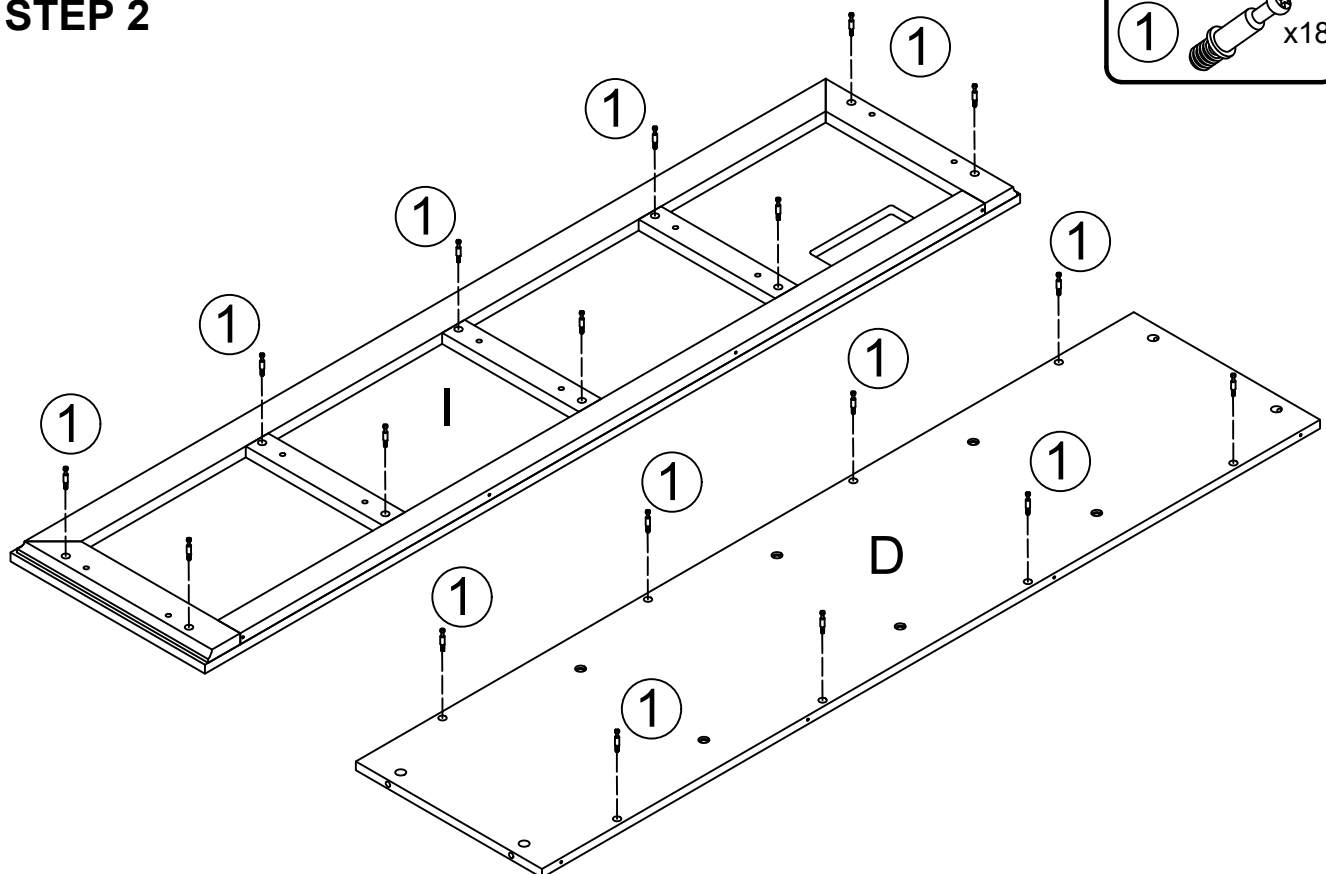



STEP 3

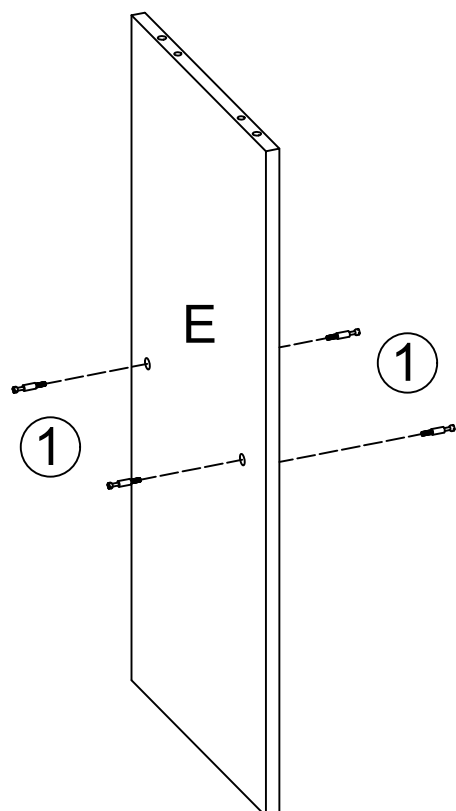


X 3

STEP 4

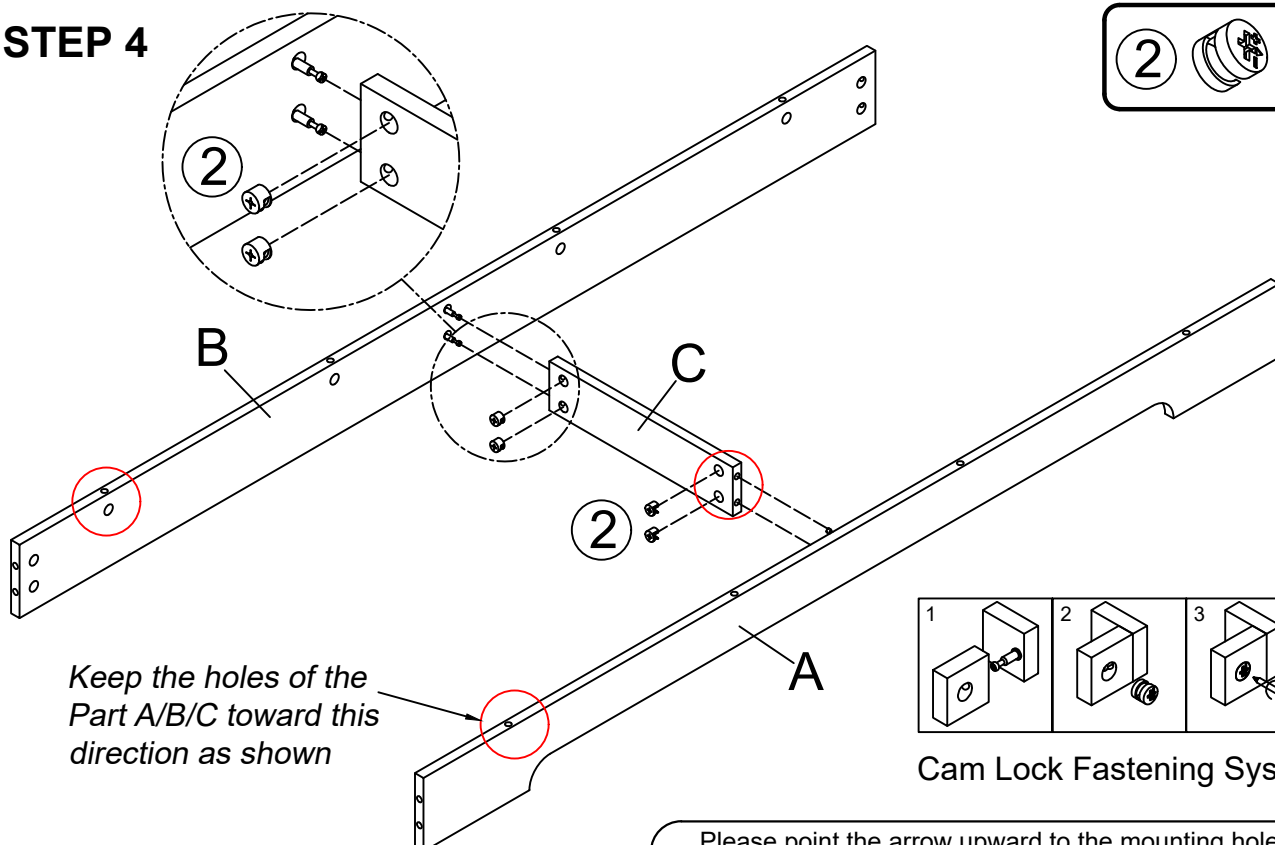



Keep the holes of the Part A/B/C toward this direction as shown

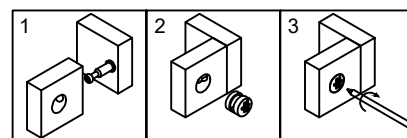




Cam Lock Fastening System

Please point the arrow upward to the mounting hole when installing Part (2), then use screwdriver to tighten it in the "+" direction.



STEP 5

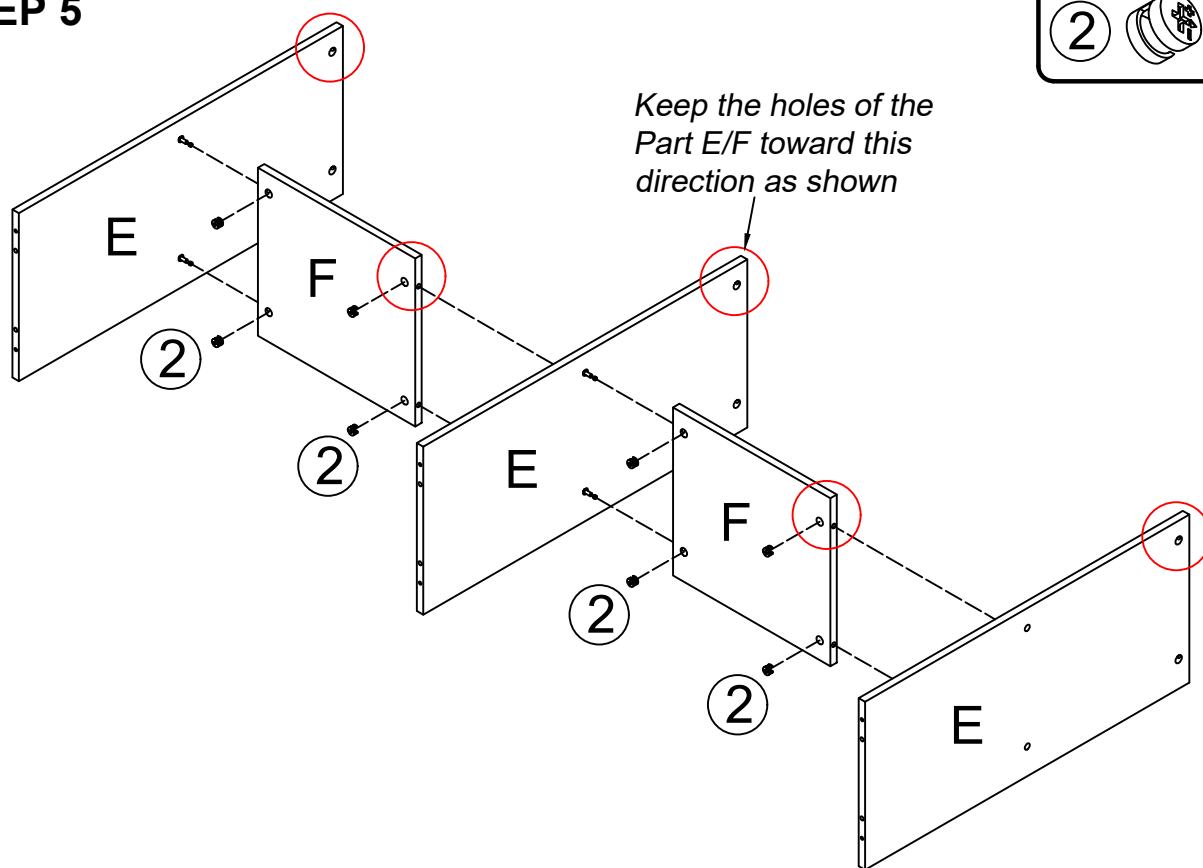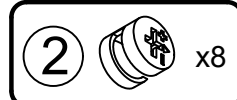



STEP 6

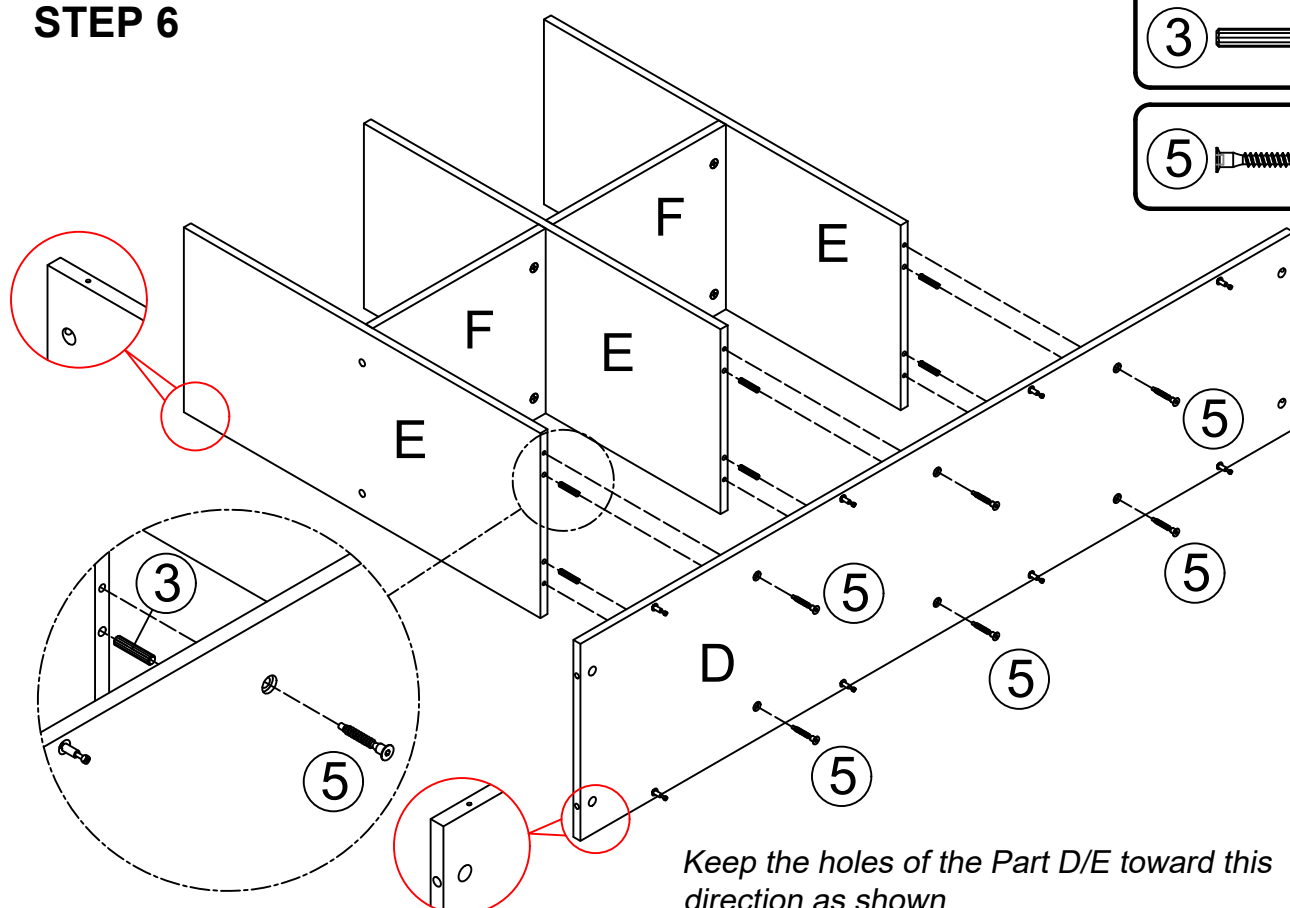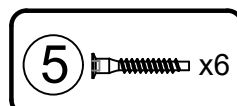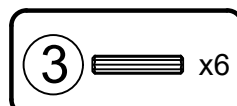



STEP 7

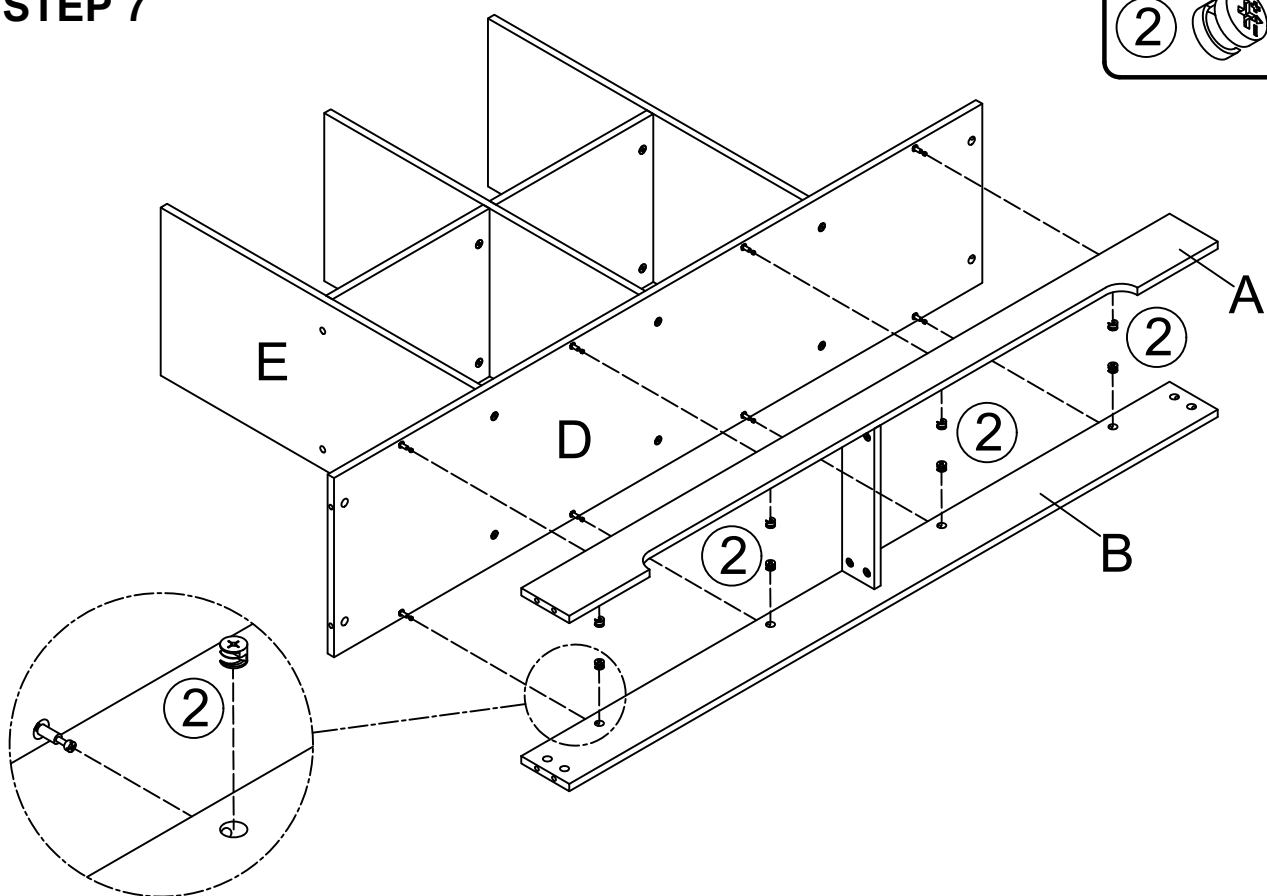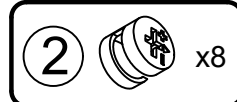

STEP 8


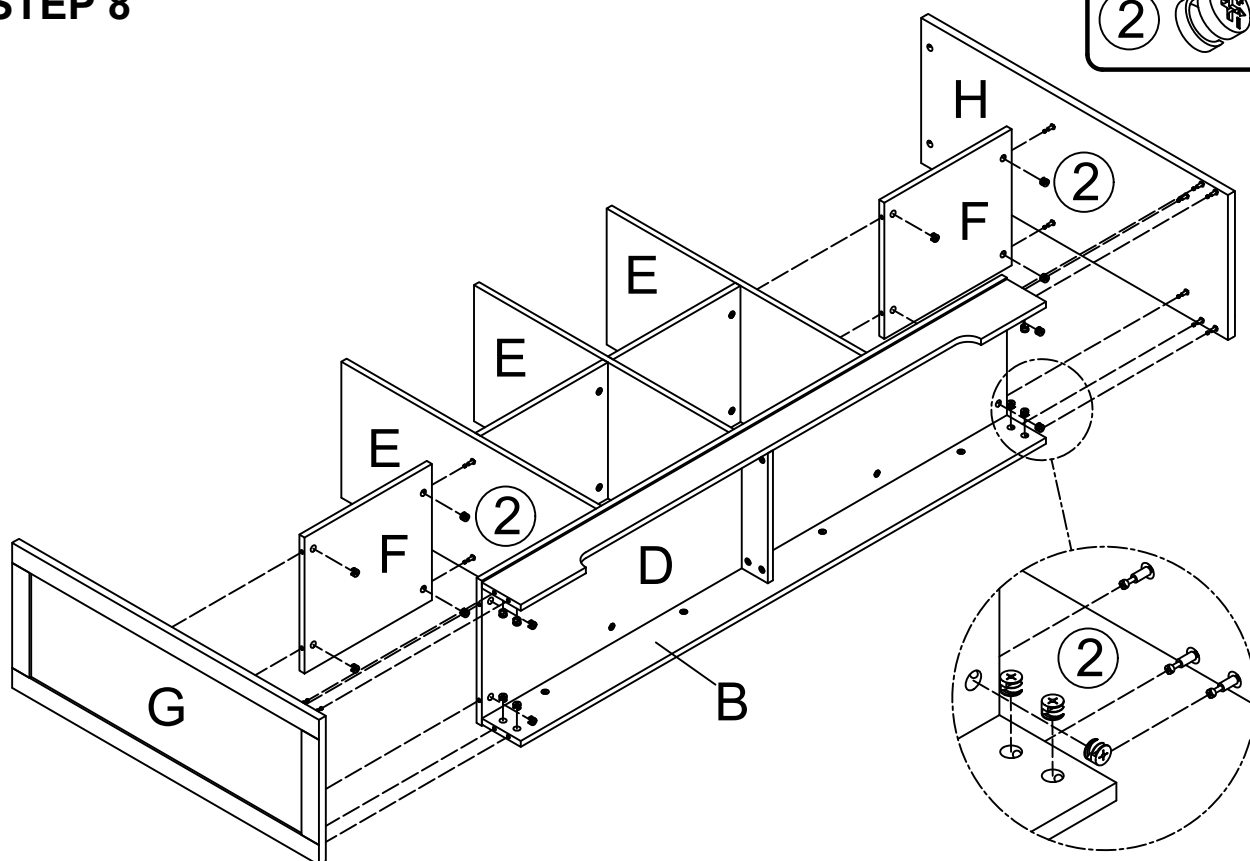



STEP 9

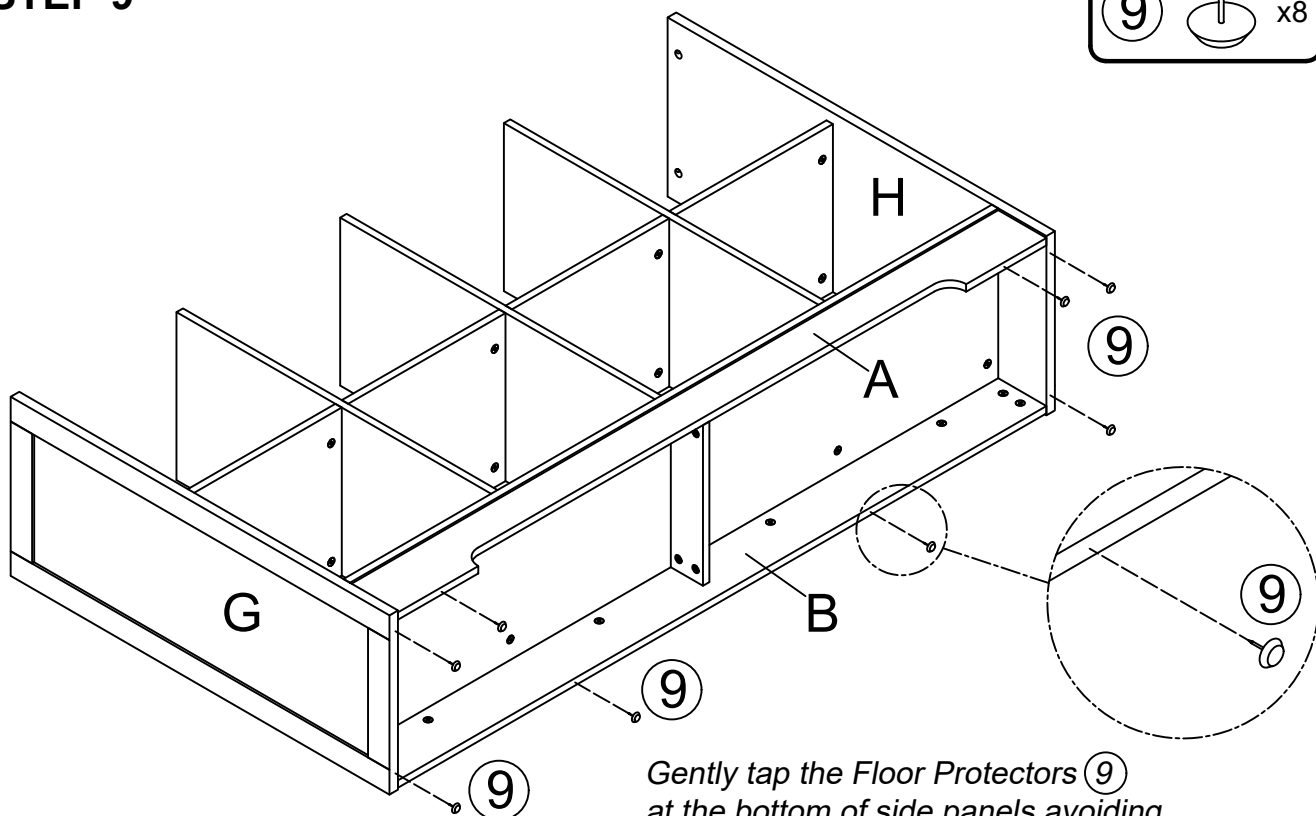



Gently tap the Floor Protectors (9) at the bottom of side panels avoiding crack or damage of side panels.





STEP 10

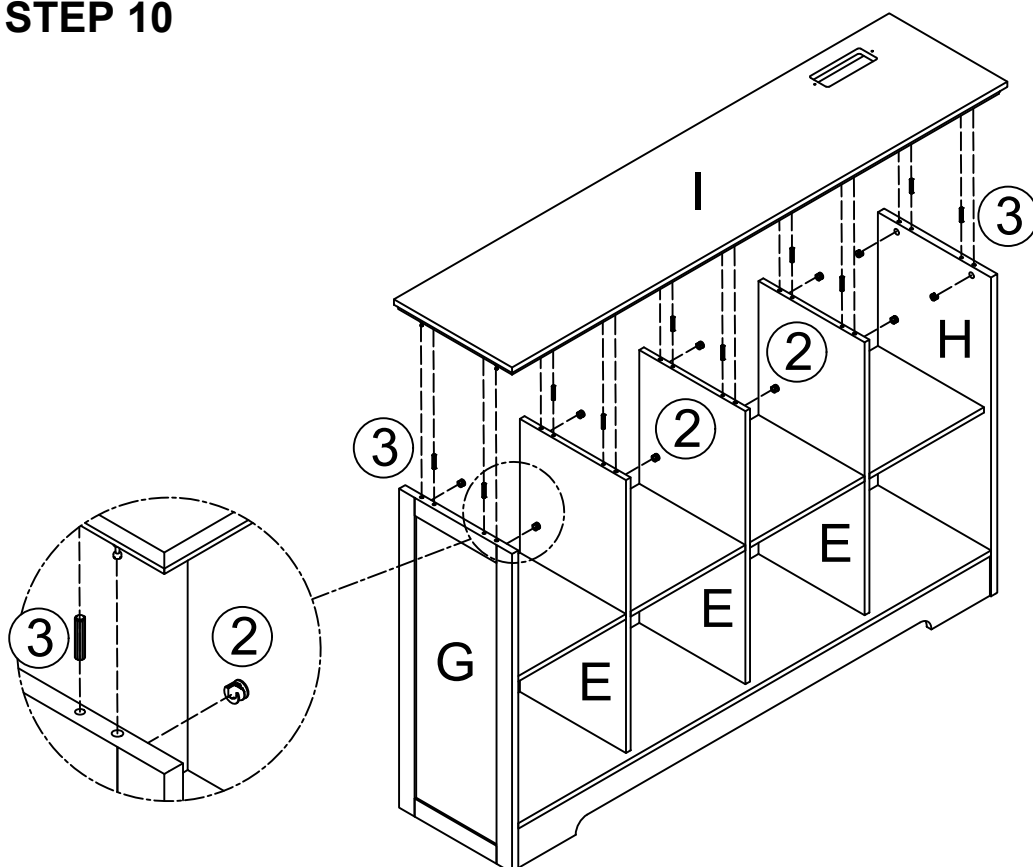


STEP 11

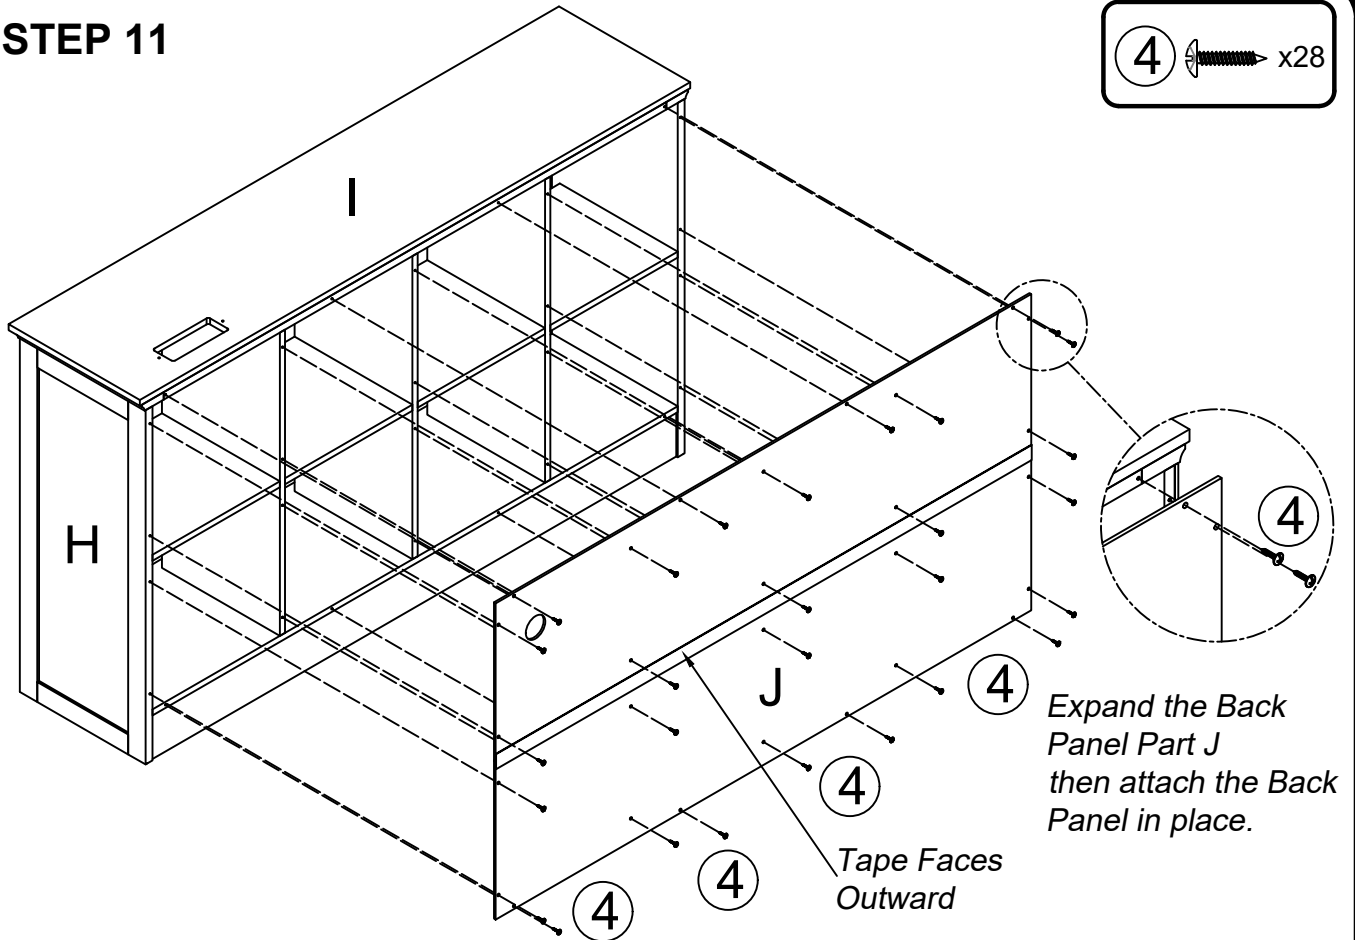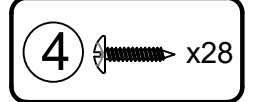

STEP 12

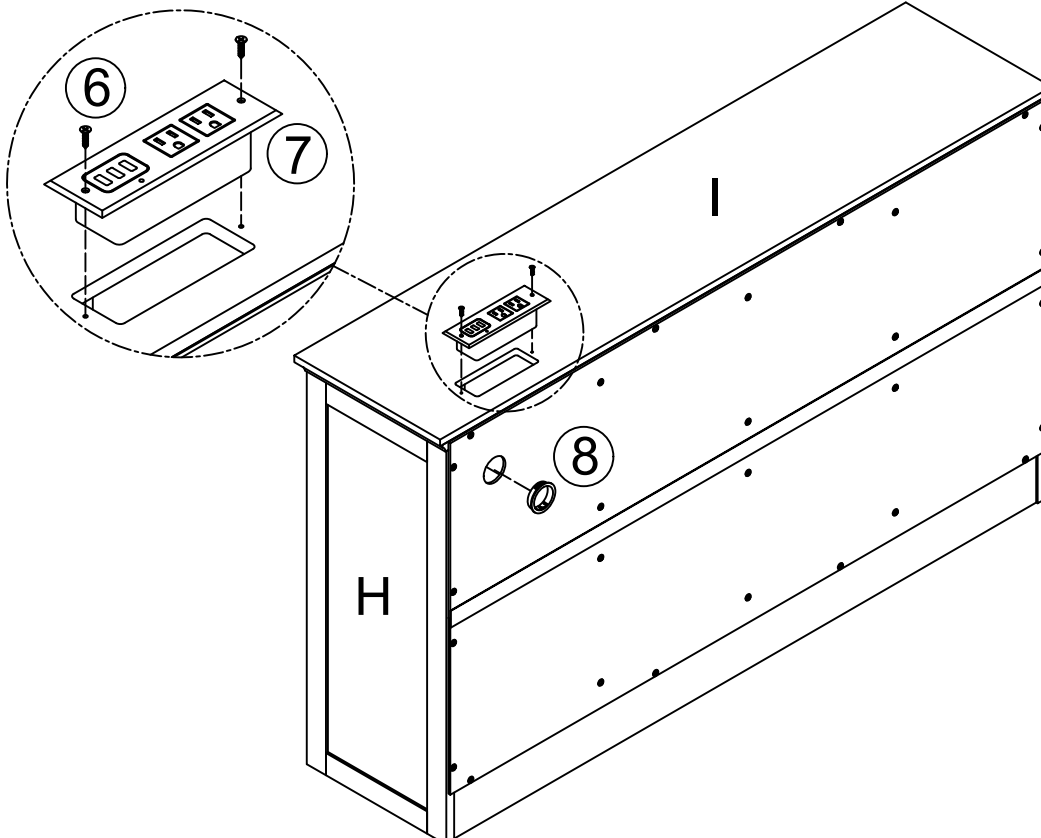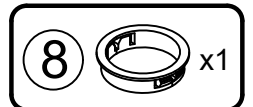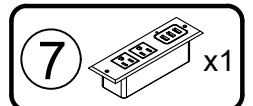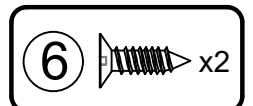



STEP 13



TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

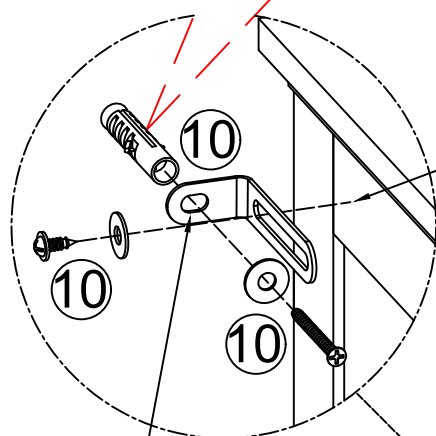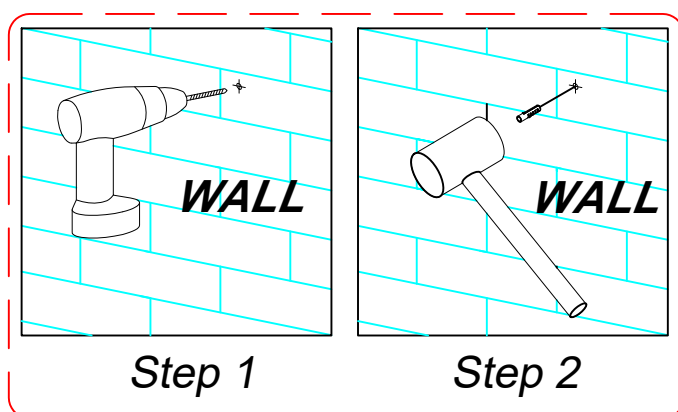

Tipping Restraint Hardware

*There are no reserved holes for screws on the side panel, please use tools to screw directly.
Note: You can use the Tipping Restraint Hardware or not as you need.*

