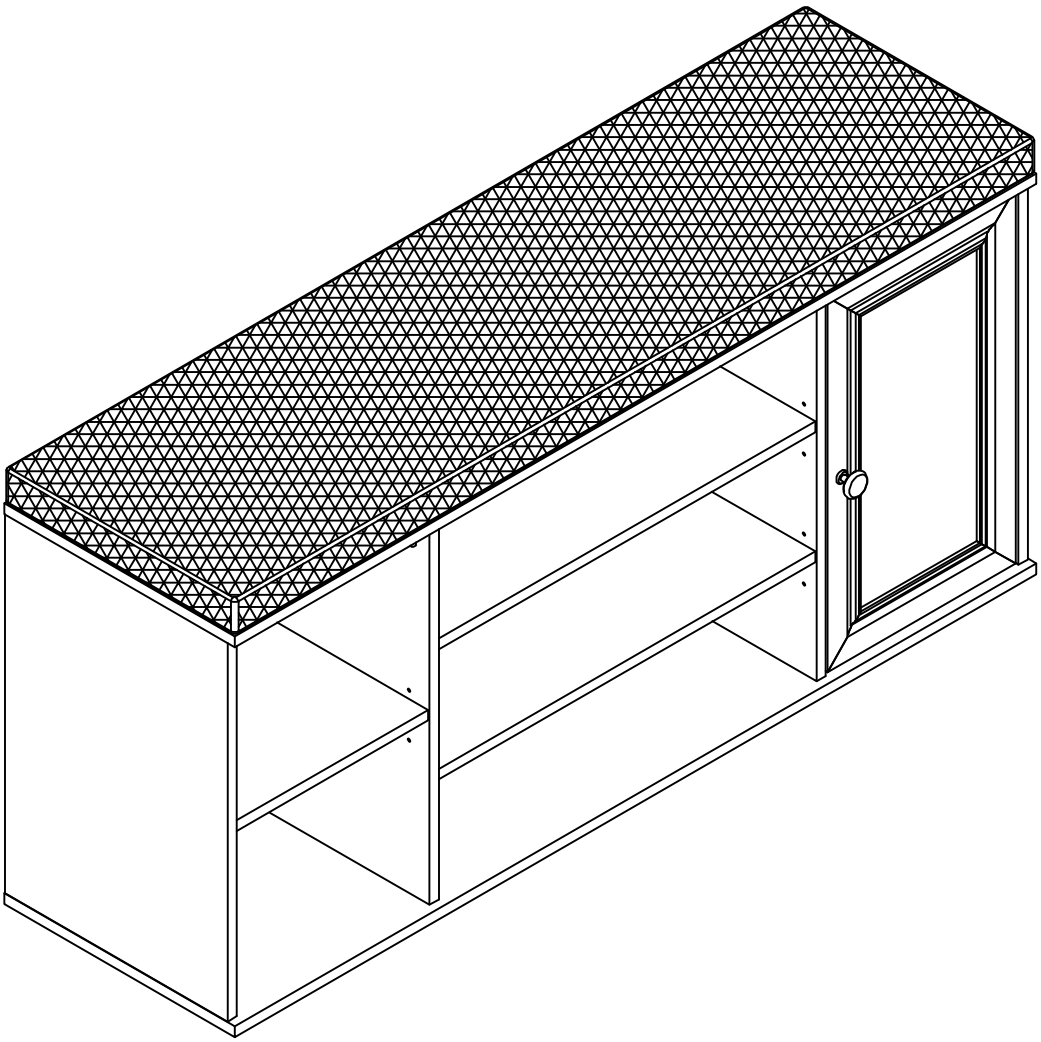
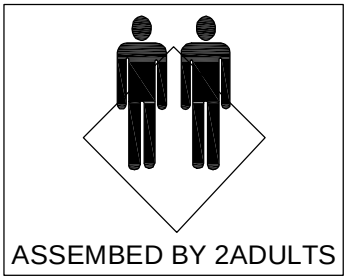
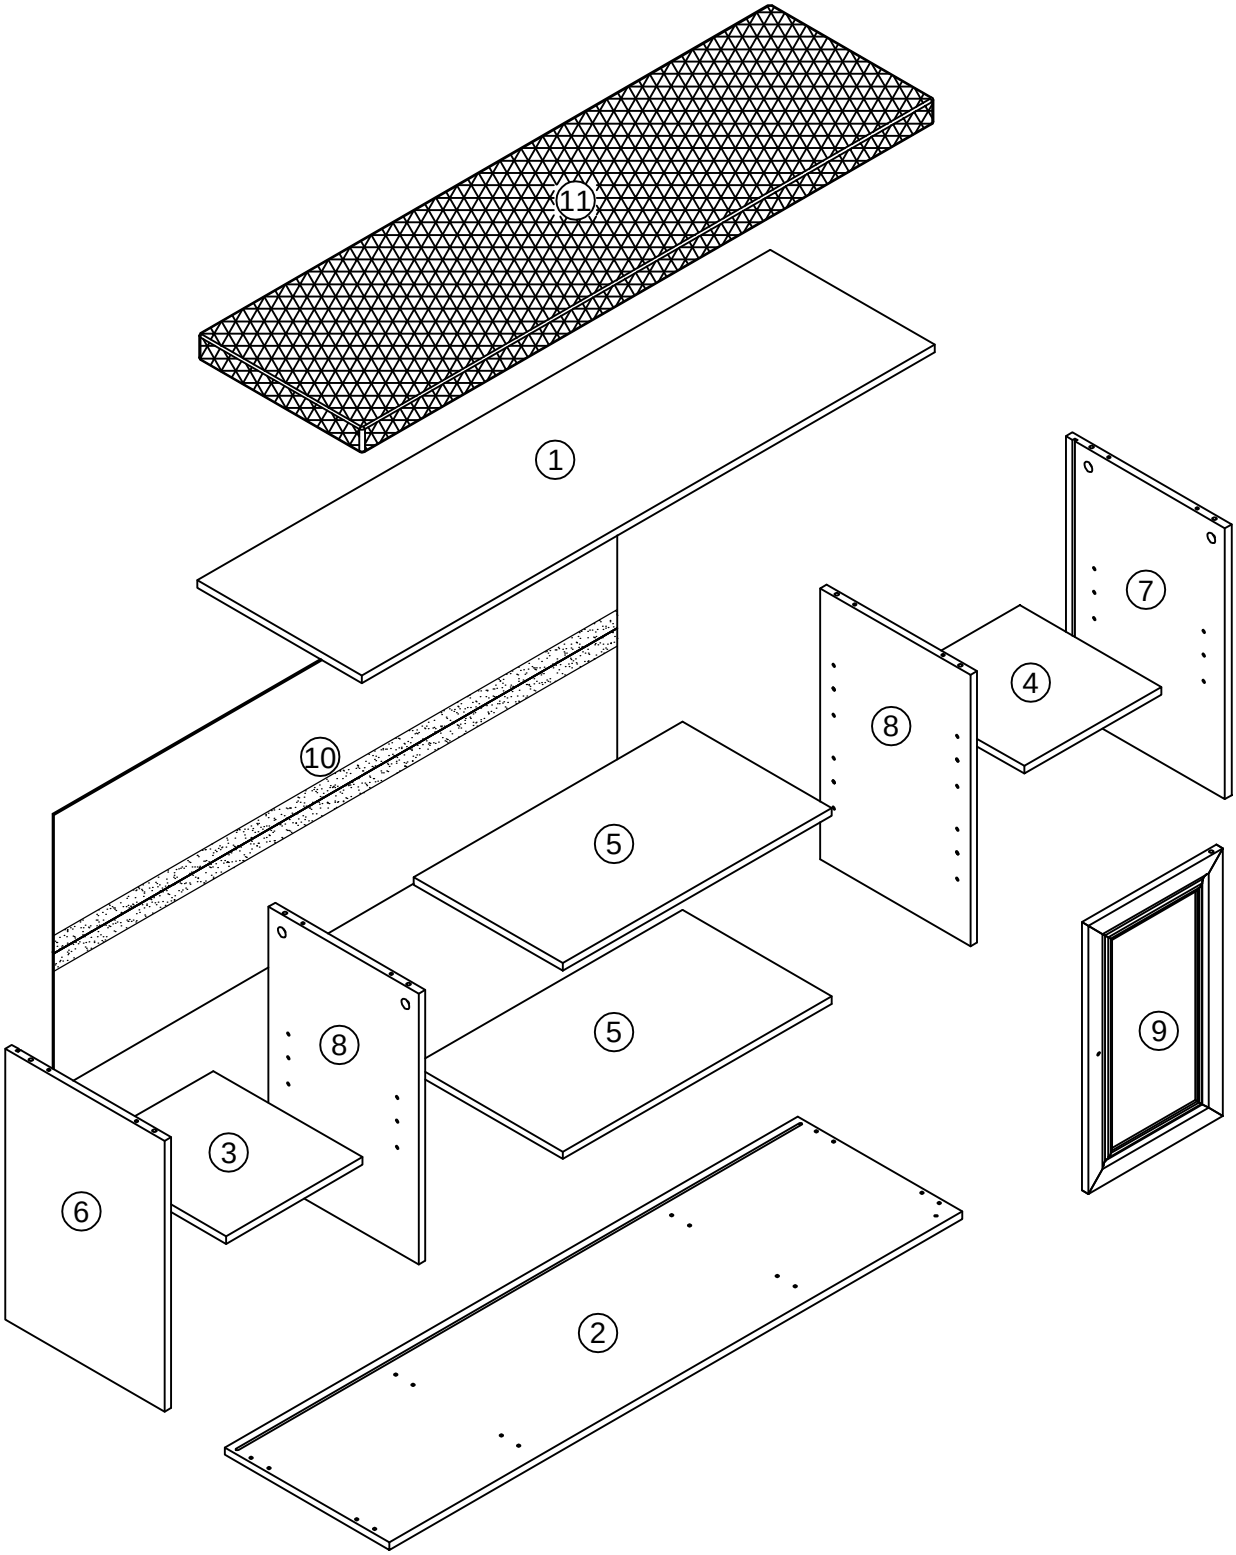
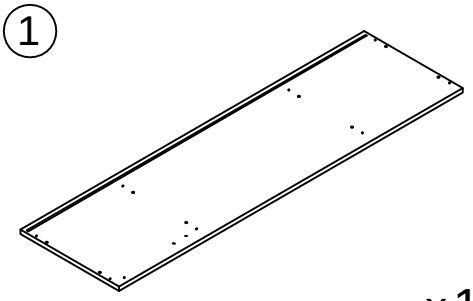
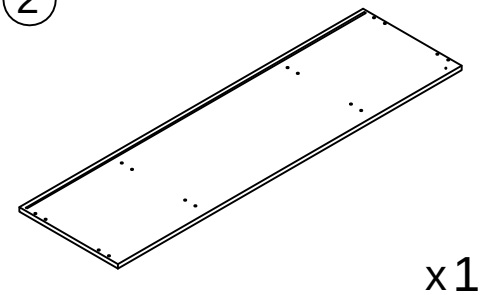
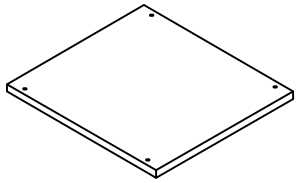
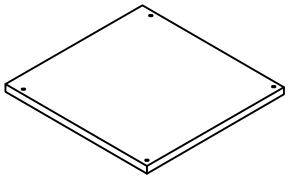
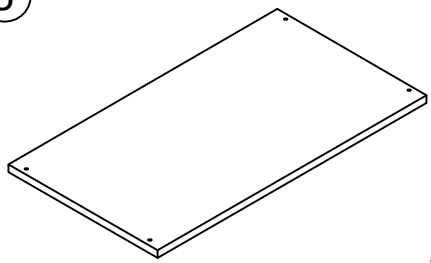
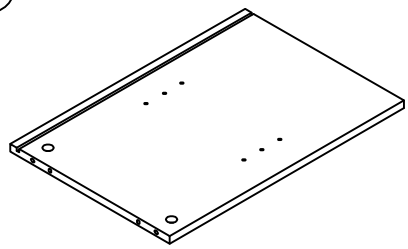
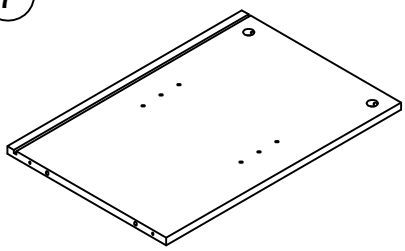
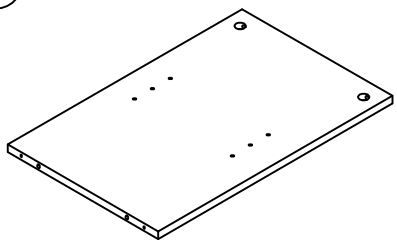
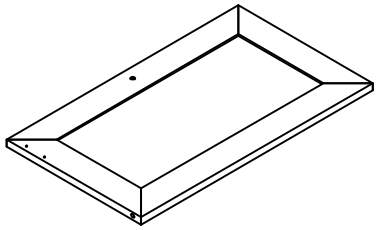
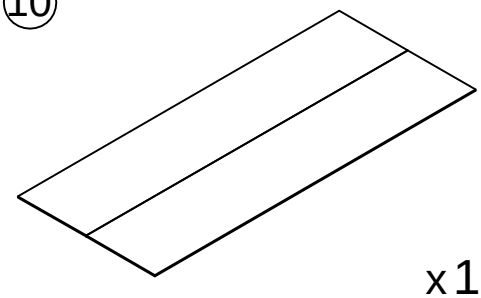
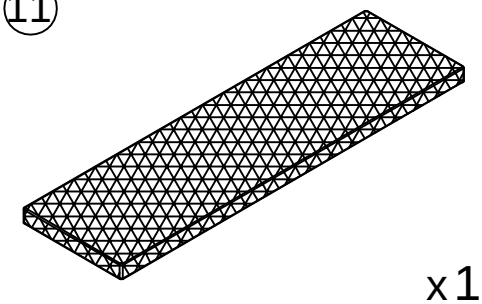







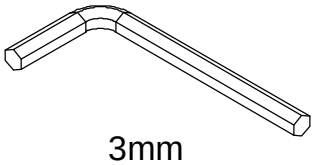

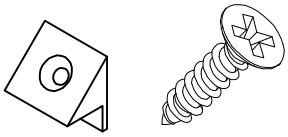
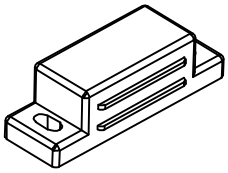
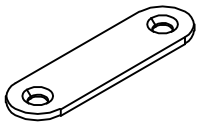



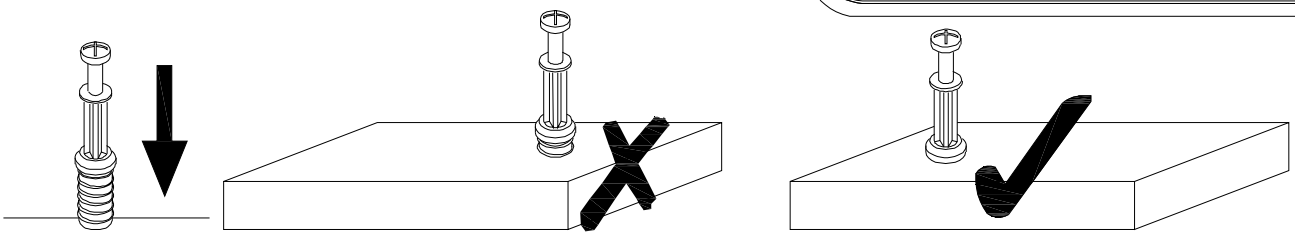


version: 1.0



11
1
7
4
8
10
5
8
5
9
3
6
2

1  x 1	2  x 1	3  x 1
4  x 1	5  x 2	6  x 1
7  x 1	8  x 2	9  x 1
10  x 1	11  x 1	


A x8+1  Ø6x35mm	B x8+1  Ø15x10mm	C x16+1  Ø6x30mm	D x2+1  Ø3x14mm
E x2+1  Ø3.0x12mm	F x8+1  Ø5x38mm	G x2 	H x16+1  22x18*10mm
I x1  3mm	J x1 	K x1  M4x12mm	L x10+1  Ø6xØ3x16mm
M x1 	N x1 		




EN_QUICKFIT:Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.
FR_RACCORD RAPIDE:Faites serrer le raccord rapide jusqu'a ce que l'epaulement soit parfaitement encstre dans le panneau.Il ne faut ni trop serrer ni insuffisamment serrer.
ES_QUICKFIT:Apriete quickfit hasta que el hombre se descargue con el panel.NO lo sobreapriete ni lo apriete poco.
DE_QUICKFIT:Ziehen Sie den quickfit fest,bis die Schulter mit der Platte bundig ist. Bitte nicht zu fest oder zu schwach anziehen.
IT_MONTAGGIO RAPIDO:Stringere il montaggio rapido fino aquando la spalla e a filo con il pannello,non stringere troppo o troppo poco.

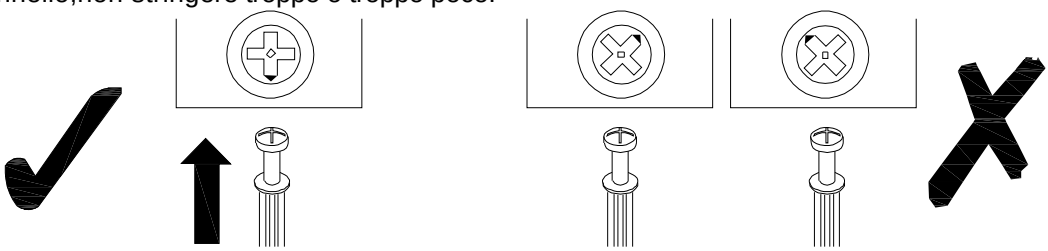

EN_CAM LOCK:When fitting cam lock,ensure starting position is correct before you insert connecting quickfit.
FR_SERRURE BATTEUSE:Avant d'inserer la serrure batteuse,veillez a la bonne orientation avant d'inserer le raccord rapide,
ES_CIERRE DE LA CAMARA:Cuando instale el cierre de la camara,asegurese de que la posicion de inicio es correcta antes de que inserte el quickfit conector,
De_CAM-LOCK:Achten Sie bei der Montage des Cam-locks auf die richtige Ausgangsposition,bevor Sie den Quickfit einsetzen.
IT_BLOCCAGGIO A CAMMA:Quando si monta il bloccaggio a camma,assicurarsi che la possizione iniziale sia corretta prima di inserire il montaggio rapido di collegamento.

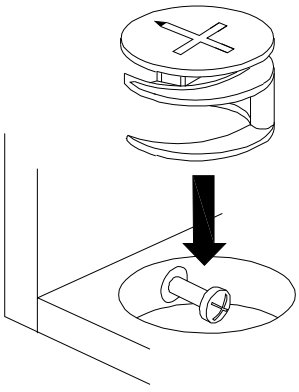


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.
FR_Lorsque les deux panneaux sont assembles,la tete du raccord rapide doit reposer au centre de la serrure batteuse.
Il faut inserer la serrure batteuse avant le raccord rapide.
ES_EL cabezal del quickfit debe estar en el centro del cierre de la camara cuando se unan los dos paneles.
Se debe insertar el cierre de la camara antes que el quickfit.
DE_Der Quickfit-Kopf sollte sich in der Mitte des Cam-locks befinden,wenn die beiden Platten zusammengefugt sind.
Der Cam-lock sollte vor dem Quickfit eingesetzt werden.
IT_La testa del montaggio rapido deve trova rsi al centro del bloccaggio a camma quando i due pannelli sono uniti.
Il Bloccaggio a Camma deve essere inserito prima del montaggio rapido.

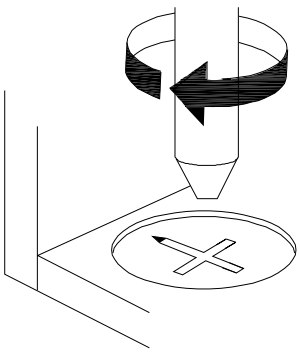

EN_Turn cam lock clockwise to tighten.
FR_Faites tourner la serrure batteuse dans le sens des aiguilles d'une montre pour la resserrer.
ES_Gire el cierre de la camara en sentido horario para apretarlo.
DE_Drehen Sie den Cam-Lock im Uhrzeigersinn,um ihn festzuziehen.
IT_Rutotare il bloccaggio a camma in senso oragio per stringere.


INSTALLATION INSTRUCTION

STEP 01

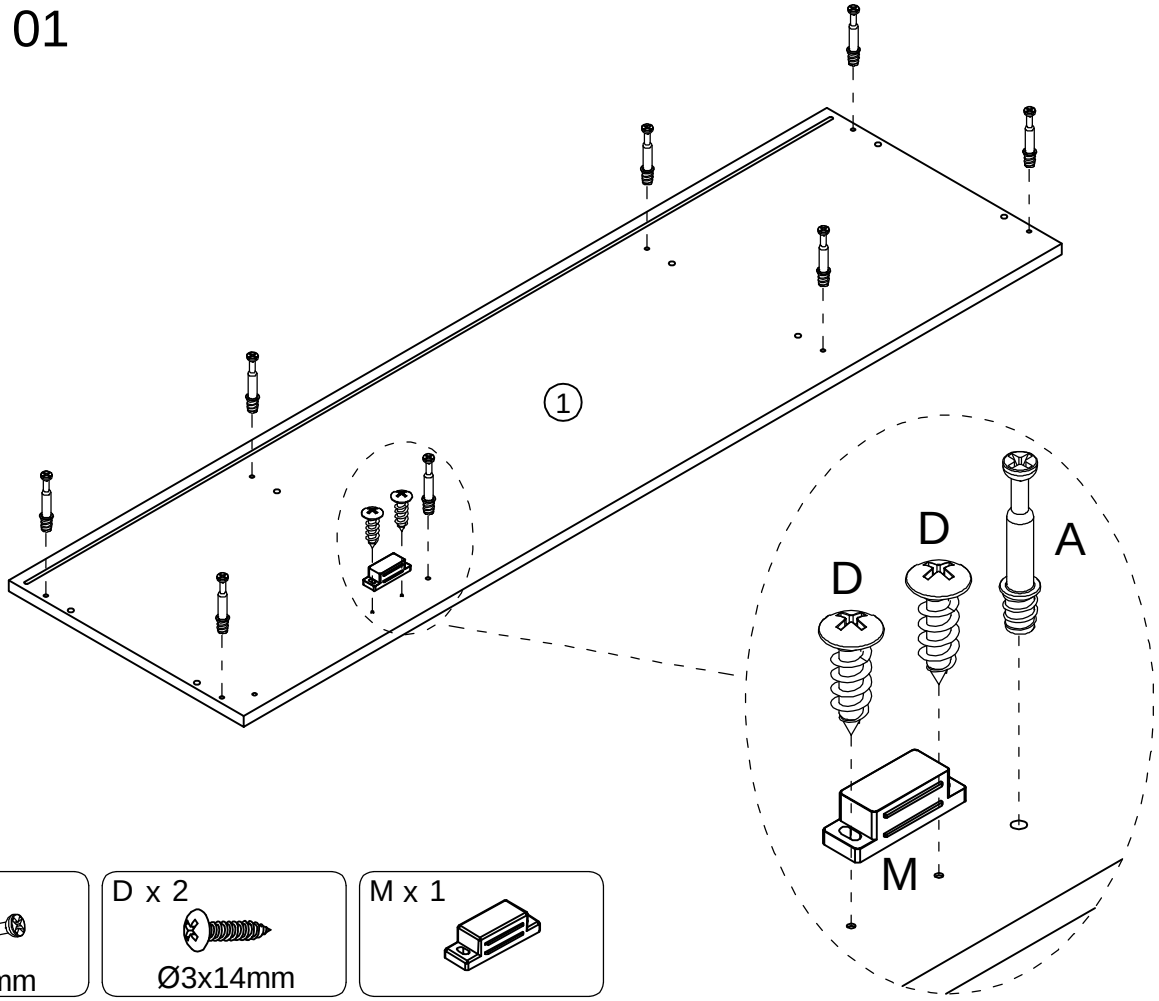


A x 8	D x 2	M x 1
Ø6x35mm	Ø3x14mm	

STEP 02

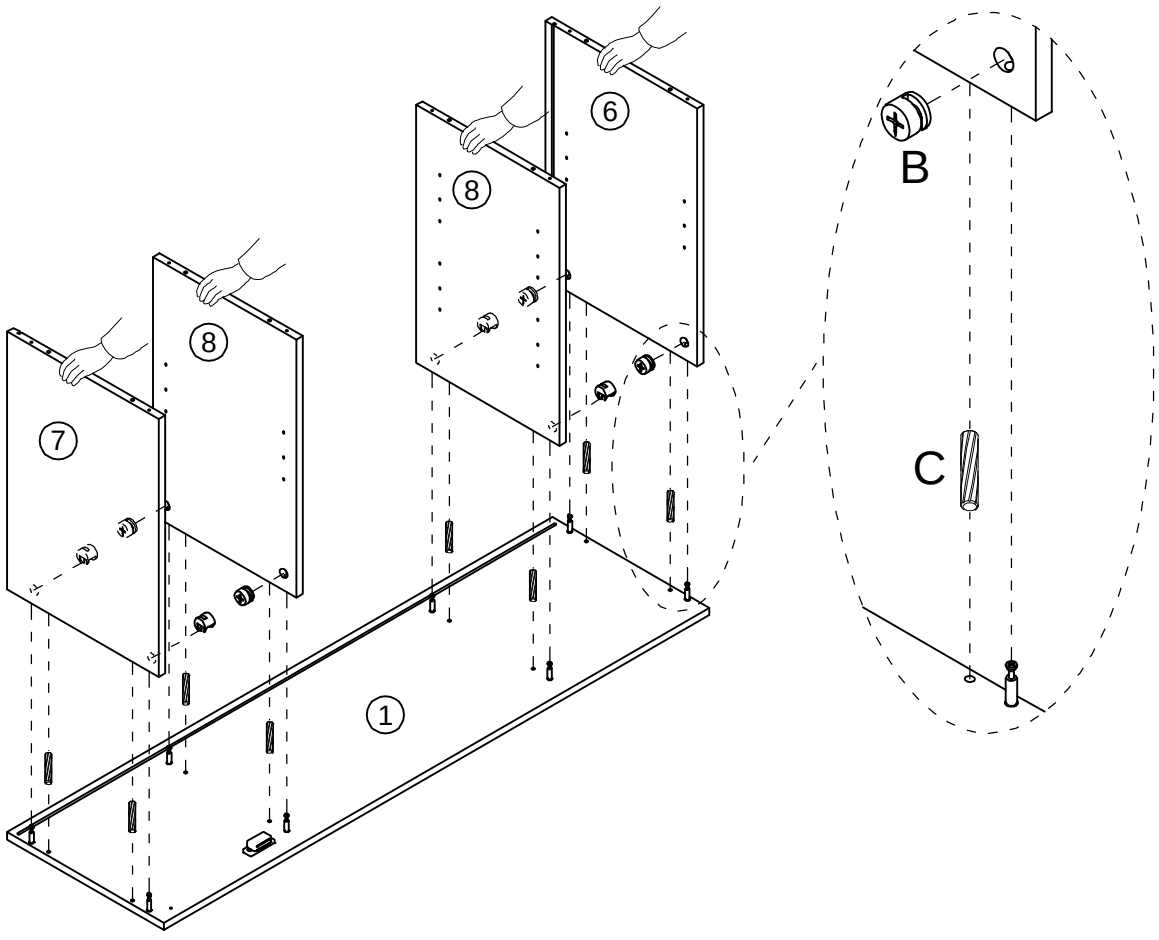


B x 8	C x 8
Ø15x10mm	Ø6x30mm


STEP 03

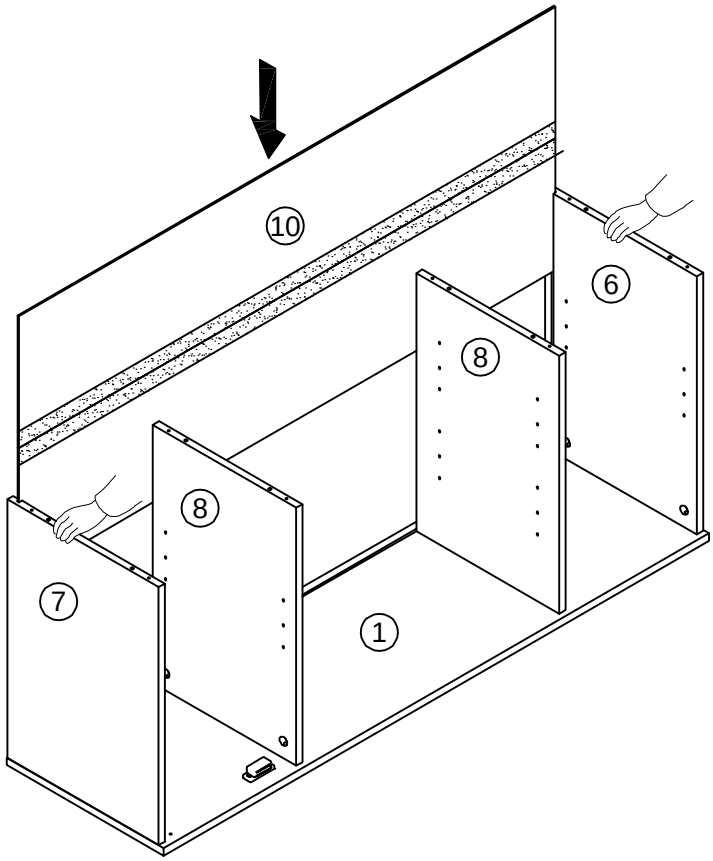

STEP 04

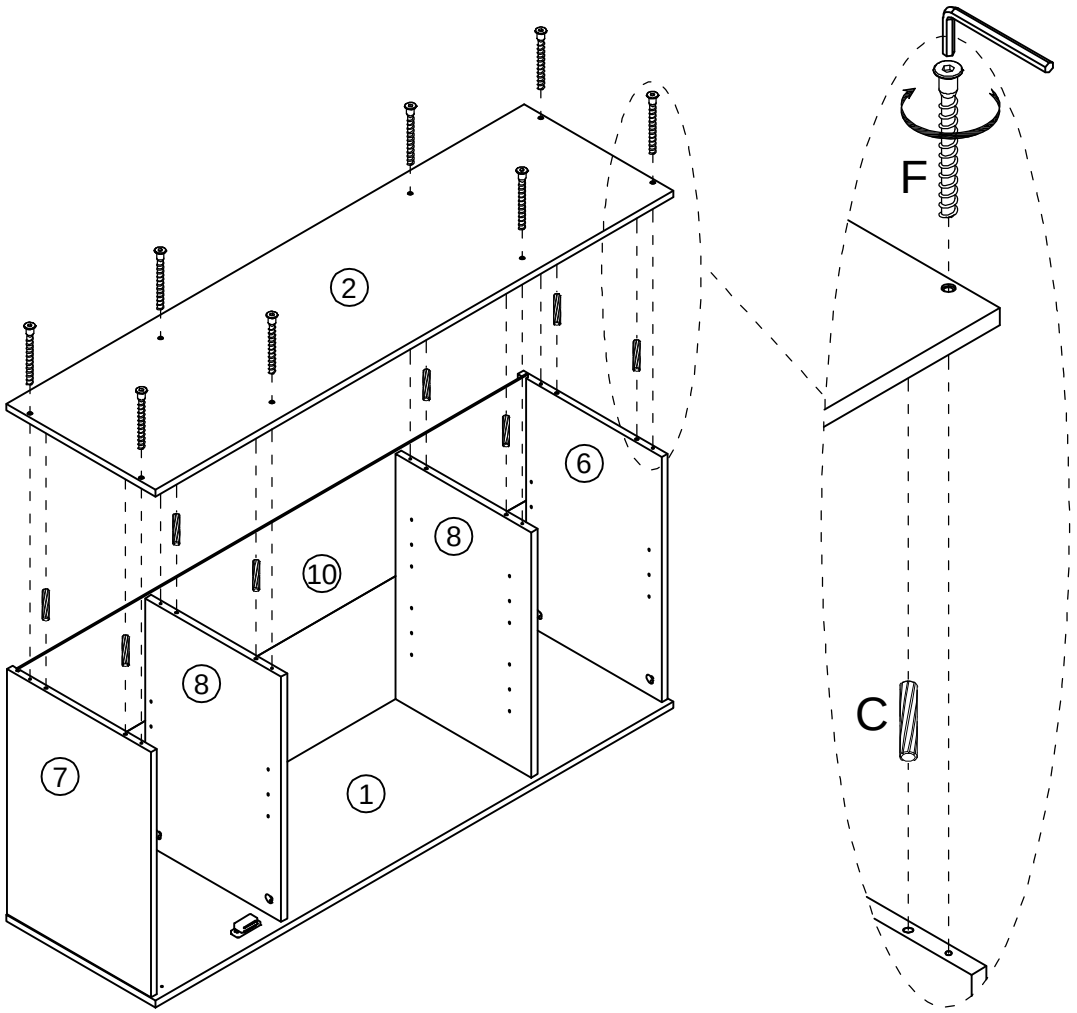


C x 8




Ø6x30mm

F x 8




Ø5x38mm


I x 1




3mm

STEP 05

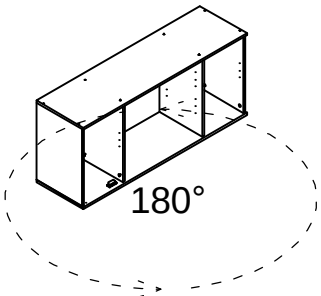


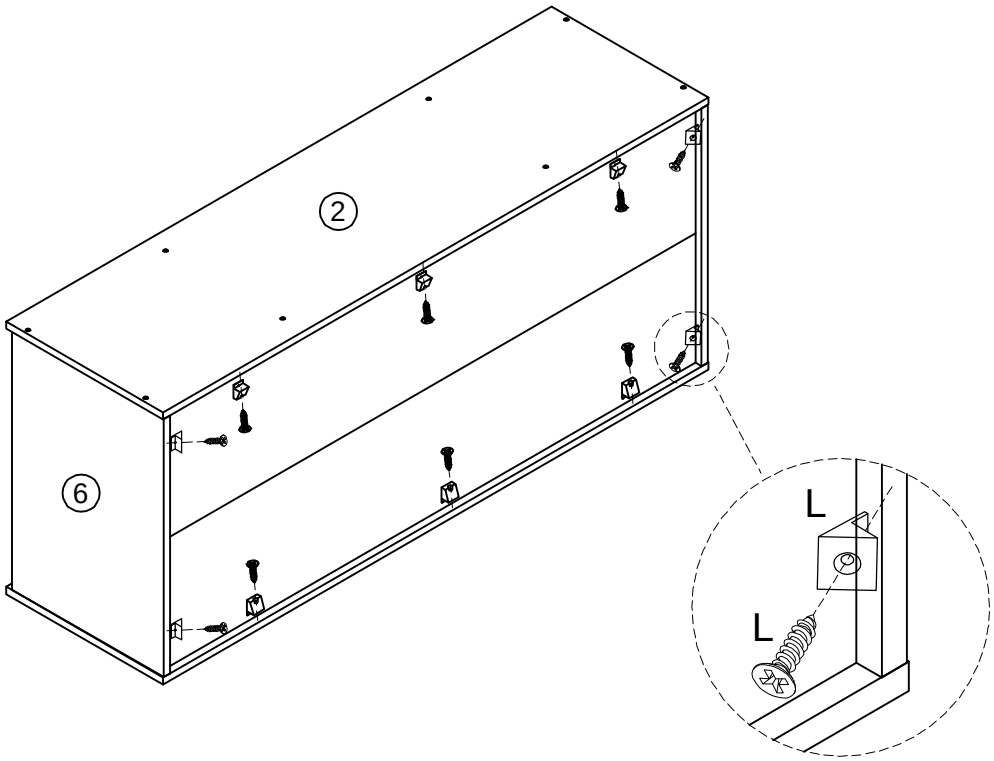


L x 10



STEP 06

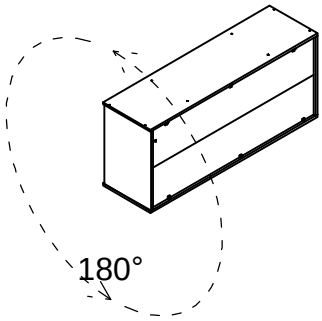

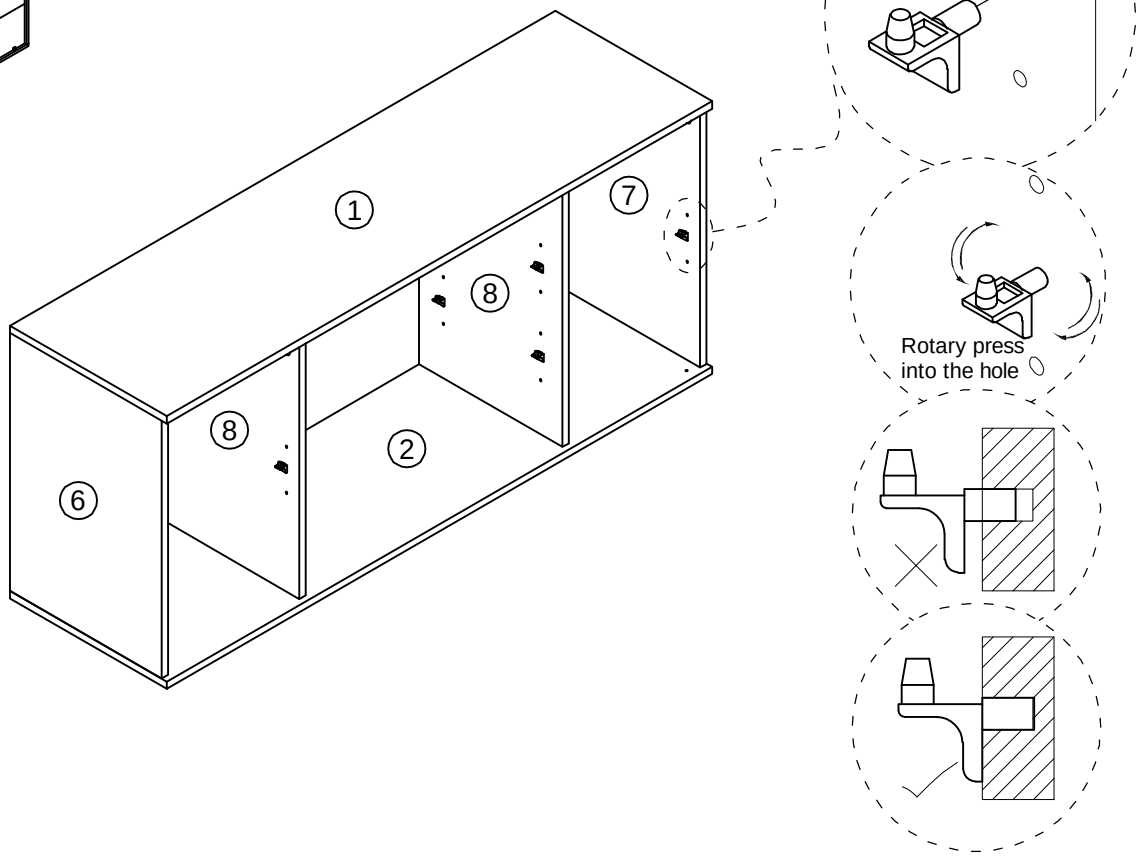


H x 16




22x18*10mm

STEP 07

Place the boards 3#, 4#, and 5# completely inside the cabinet, align the four holes on the bottom of the laminate boards with the laminate nails, and then press down on the boards 3#, 4#, and 5#.。

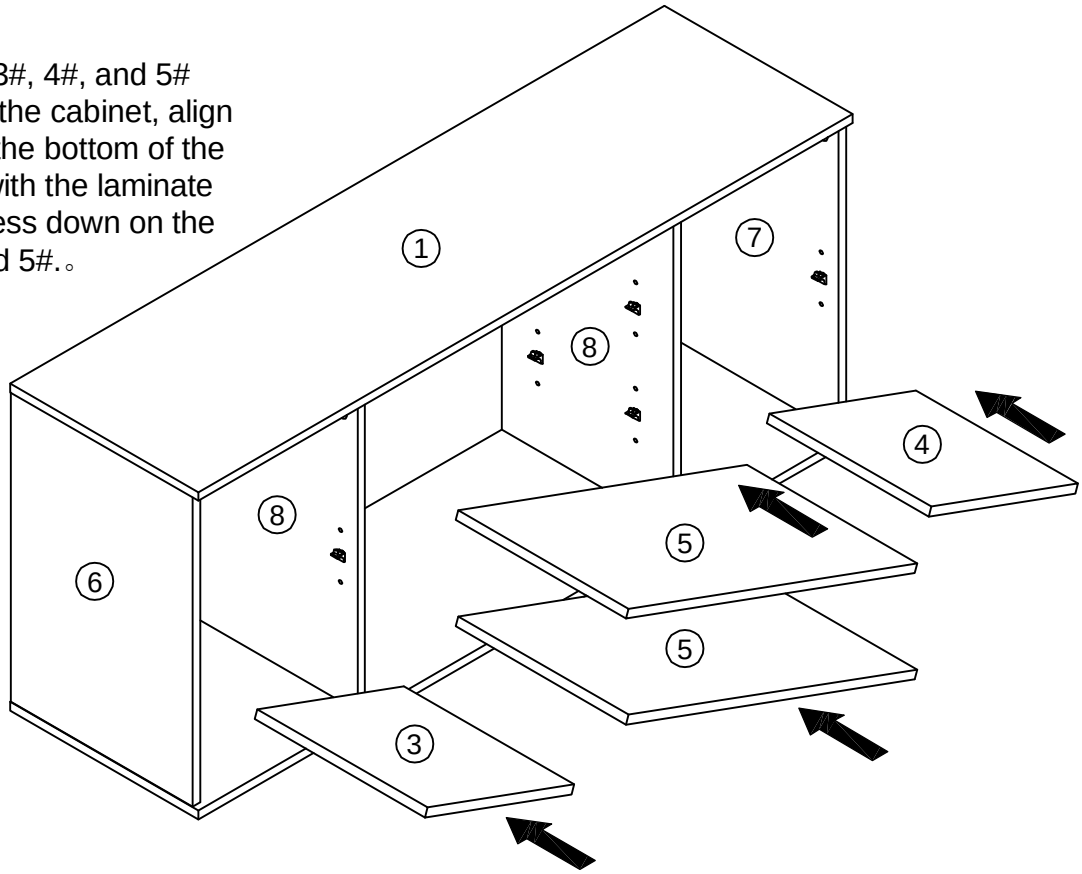

STEP 08

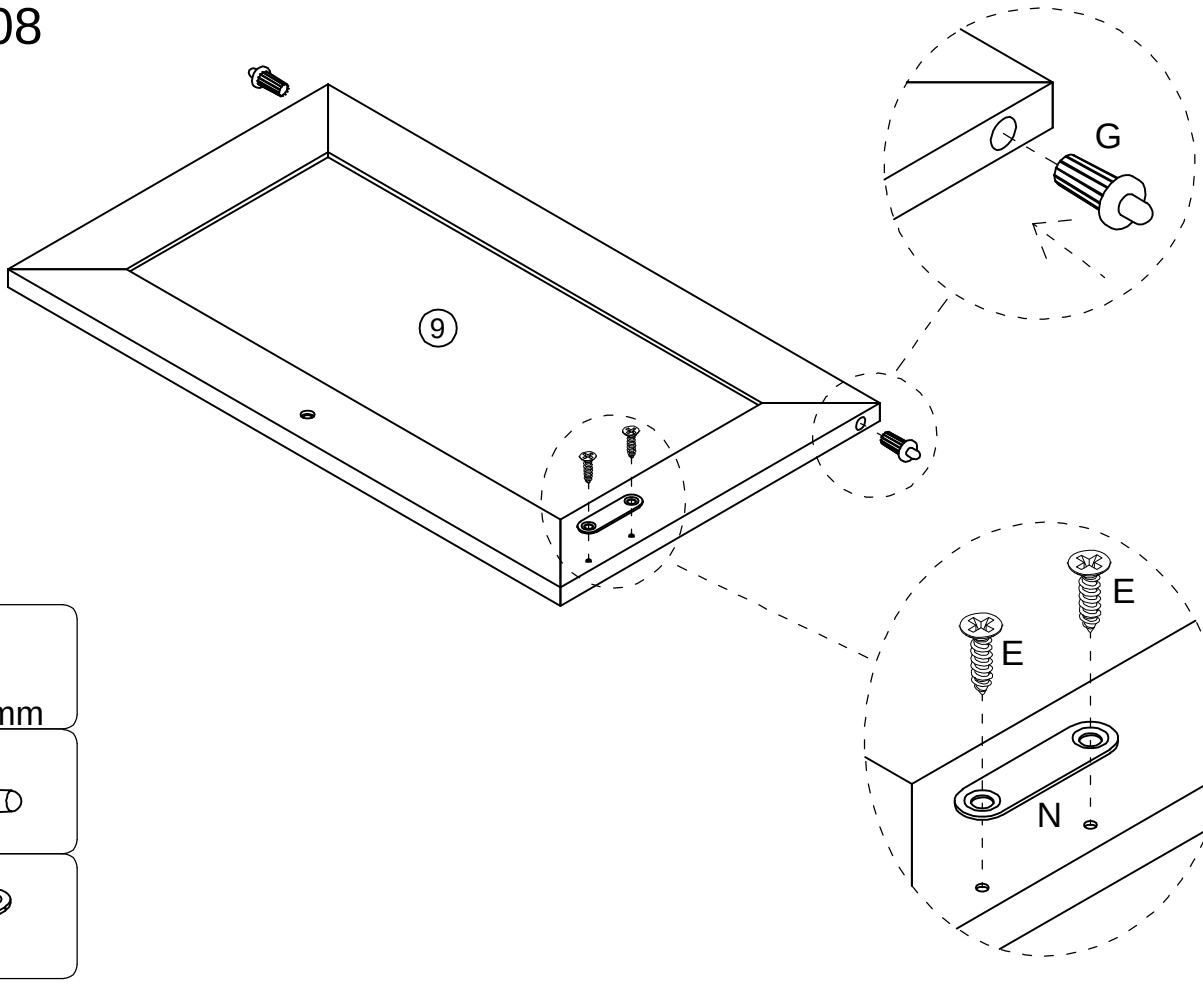


E x 2


Ø3.0x12mm

G x 2

N x 1

STEP 09

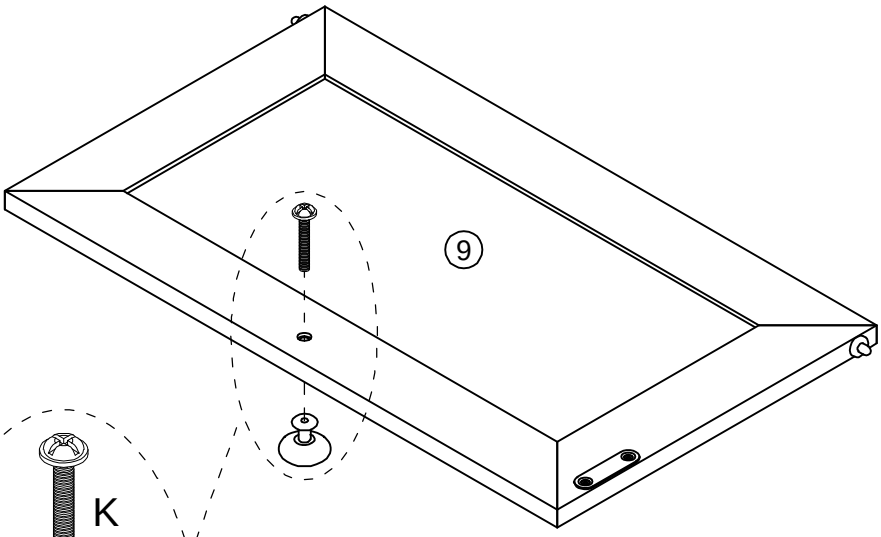


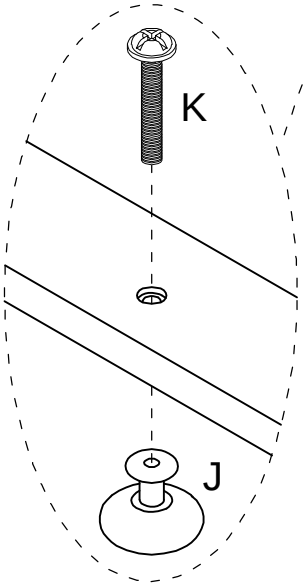

J x 1




K x 1




M4x12mm

STEP 10

Pressdownthepin(G)forassembly

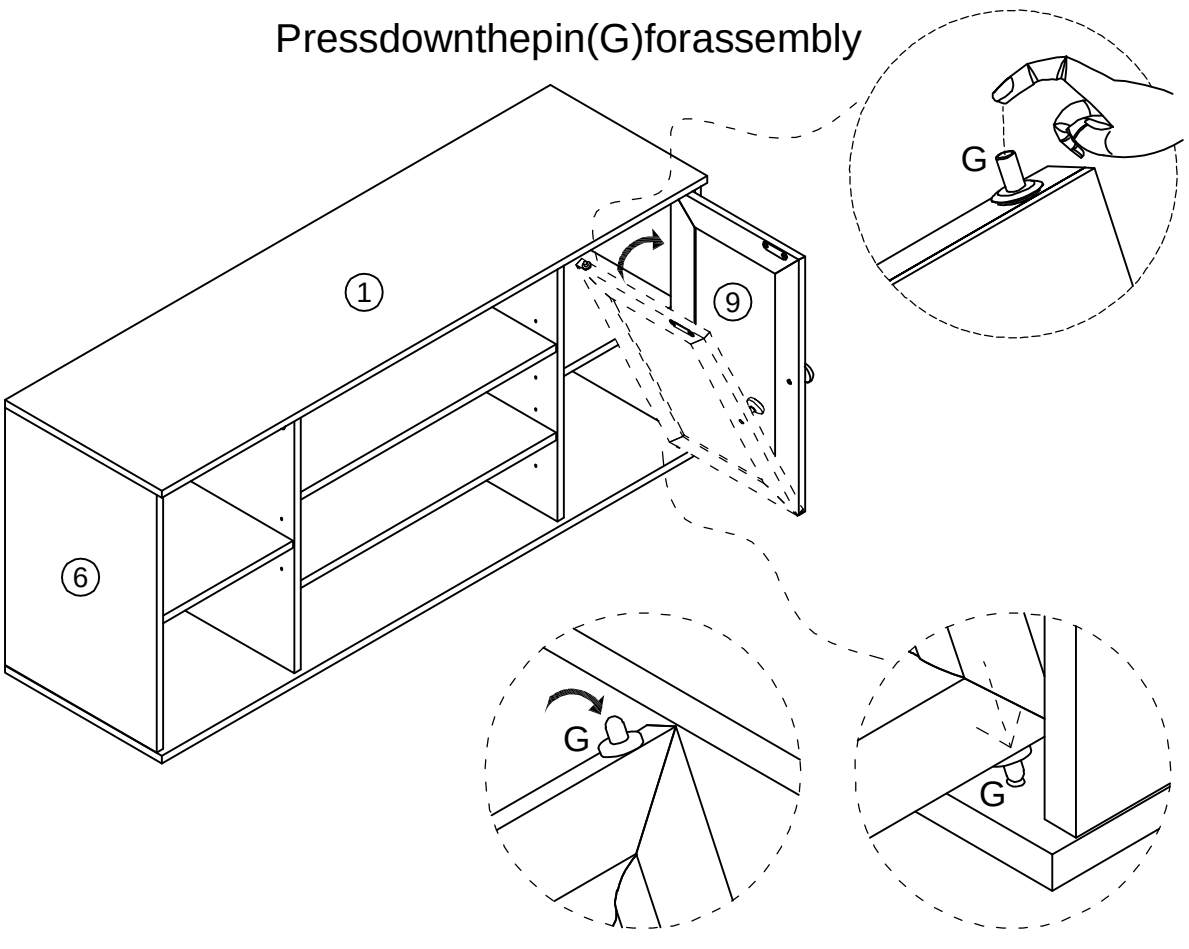

STEP 11

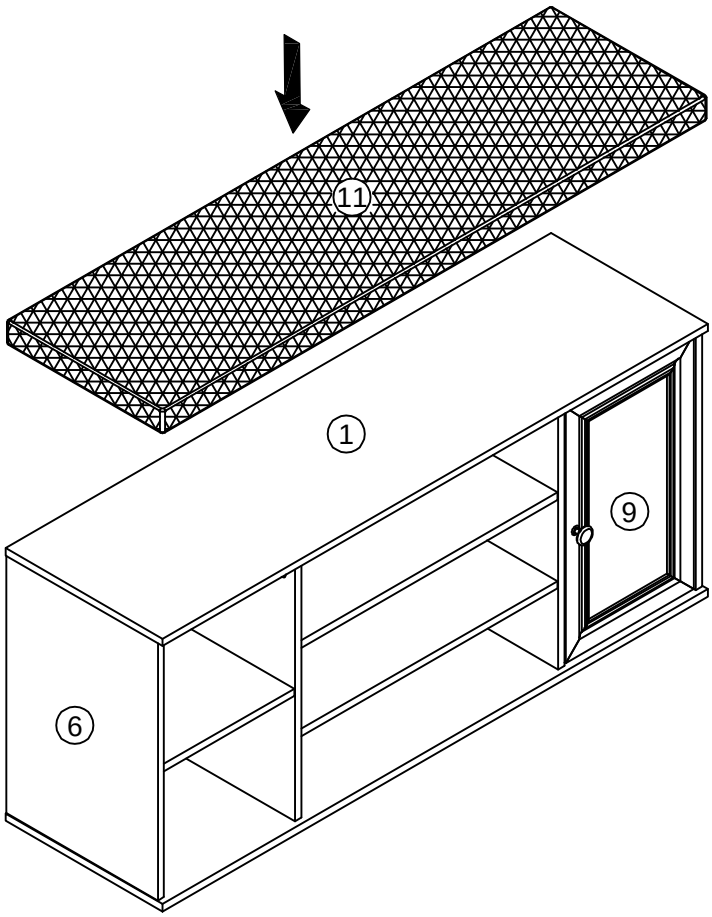

STEP 12

