ASSEMBLY INSTRUCTIONS

Console Table




NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Part List

A. Quant of 1	B.	Quantity C		Quantity of 1	D.	Quantity of 1
Top Panel	Side Panel(Lef	t) Si	ide Panel(Righ	t)	Bottom Panel	
E. Quan	F.	Quantity G of 1	· .	Quantity of 6	Н.	Quantity of 1
Divider(Left)	Divider(Right)		eg		Door(left)	
I. Quant of 1	J.	Quantity K	ζ.	Quantity of 4	L.	Quantity of 2
	>		A			
Door(center)	Back Panel	s	Shelf		Shelf(center)	
M. Quan of	tity 1					
	>					
Door(right)						

Hardware List

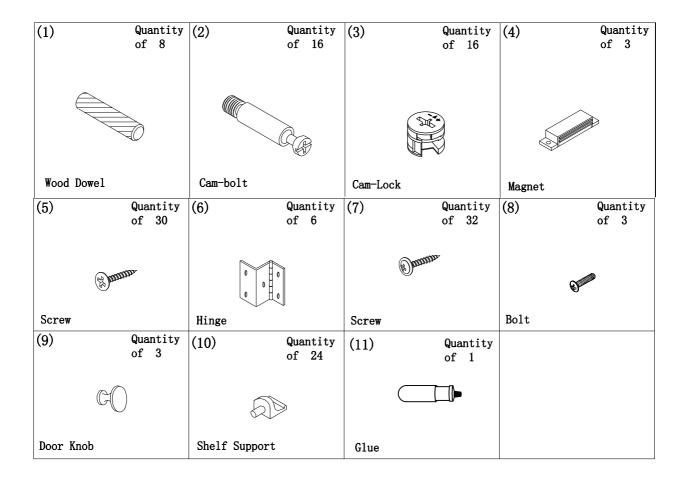


Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


To use Dowels:

- 1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
- 2. Insert the Dowel(s) and join boards.
- 3. Wipe excess glue with a damp paper towel.

To use Cam Locks:

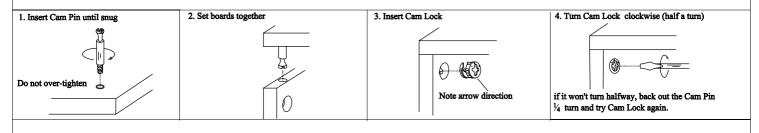


STEP 1

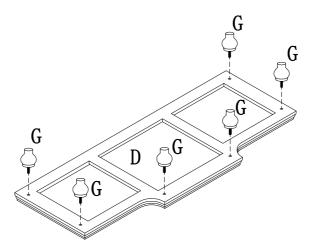


Assemble Legs (G) to the bottom of Bottom Panel (D).



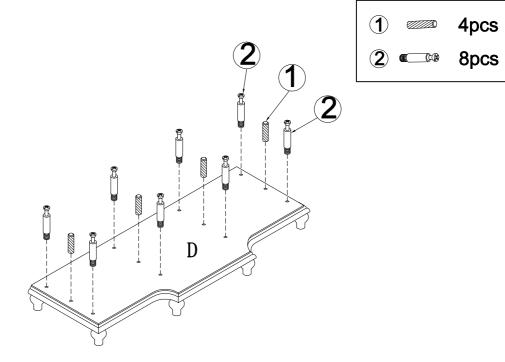


Insert Wood Dowels (1) and Cam-bolts (2) into the holes on Bottom Panel (D), then tighten Cam-bolts (2).

STEP 3

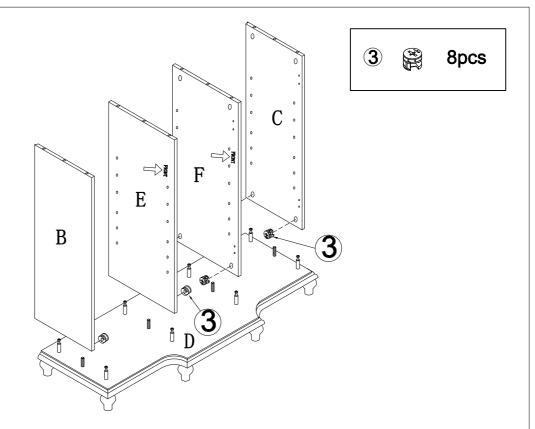


Attach Side Panels (B&C) and Dividers (E&F) to Bottom Panel (D), then using Cam-locks (3) to catch inserted Cam-bolts (2) on Bottom Panel (D).

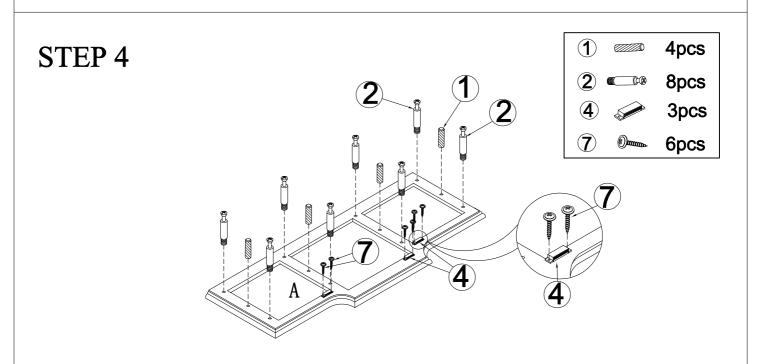


Attach Magnets (4) to bottom of Top Panel (A) using Screws (7). Insert Wood Dowels (1) and Cam-bolts (2) into the holes on Top Panel (A), then tighten Cam-bolts (2).



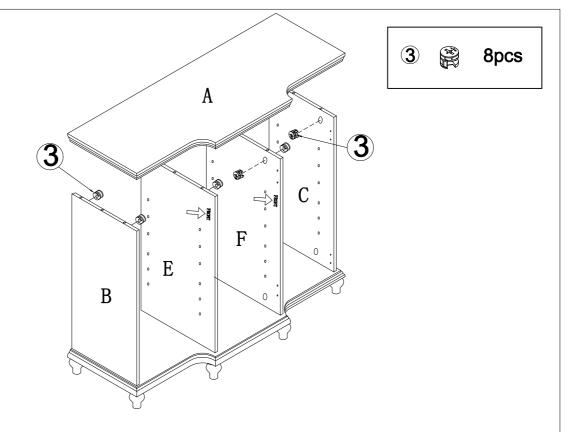

Attach Top Panel (A) to Side Panels (B&C) and Dividers (E&F), then using Cam-locks (3) to catch inserted Cam-bolts (2) on Top Panel (A).



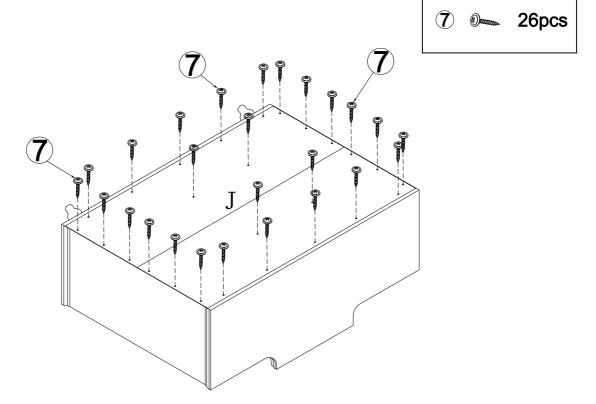


Attach Back Panel (J) to the back of this unit using Screws (7).


Page 6 of 8



- 5 gmm 18pcs
- 6 **(f)** 6pcs

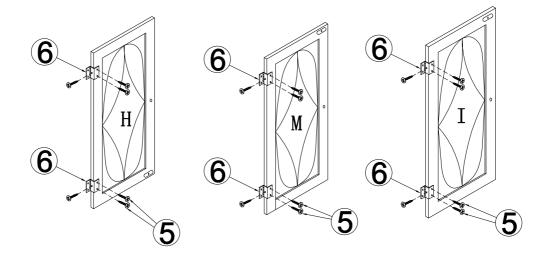


Attach Hinges (6) to Doors (H&I&M) using Screws (5) as above drawing shown.

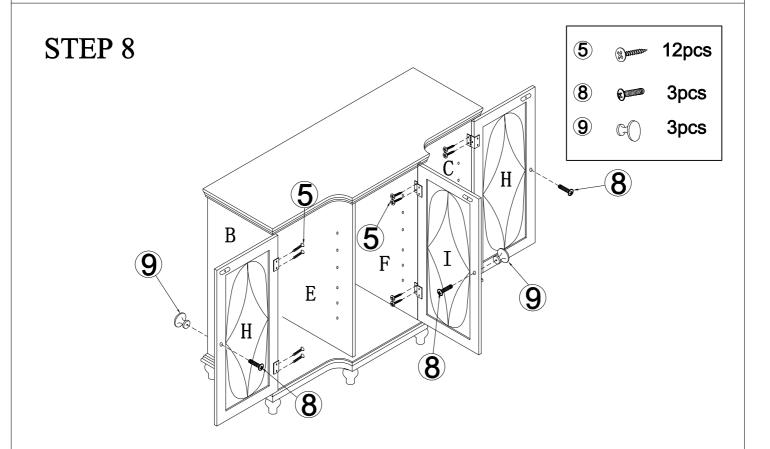


Attach Hinges (6) to Side Panels (B&C) and Divider (F) using Screws (5) as shown. Attach Door Knobs (9) to Doors (H&I&M) using Bolts (8).



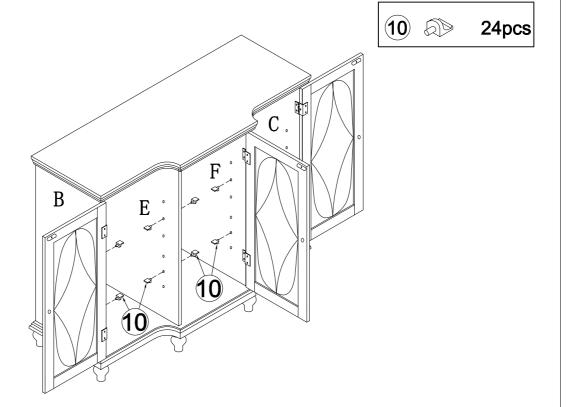

Insert Shelf Supports (10) into the holes on Side Panels (B&C) and Dividers (E&F).

STEP 10

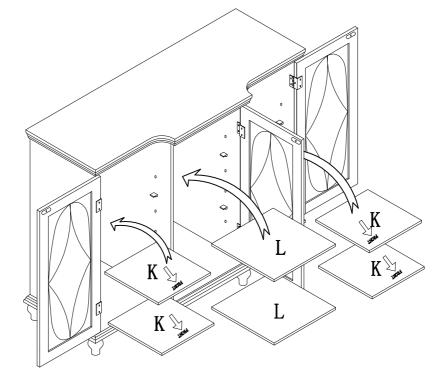

Place Shelves (K&L) on top of Shelf Supports (10).