

3 PCS SADDLE SET

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :



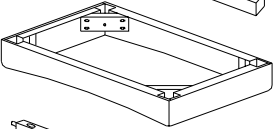



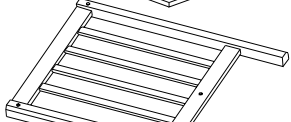

1. Remove hardware from plastic bag and sort by size.
2. Please check to see that all hardware and part are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.












Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:

A		LEFT CHAIR LEG (MARK WITH '1')	4PCS
B		RIGHT CHAIR LEG (MARK WITH '2')	4PCS
C		CUSHION SEAT WITH FRAME	2PCS
D		LONG STRETCHER	4PCS
E		SHORT STRETCHER	4PCS
F		TABLE TOP	1PC
G		LEG FRAME	2PCS
H		TRESTLE BAR	1PC


HARDWARE IDENTIFICATION:

1		ALLEN WRENCH	1PC
2		LONG BOLT	6PCS
3		BARREL NUT	6PCS
4		LOCK WASHER	8PCS
5		FLAT WASHER	8PCS
6		WOOD PLUG	6PCS
7		PAN HEAD SCREW	16PCS
8		DOWEL	12PCS
9		SHORT BOLT	8PCS

ASSEMBLY INSTRUCTIONS


STEP 1

Place cushion seat upside down on soft surface. Hand tighten left leg to the seat frame using short bolt, lock washer and flat washer.

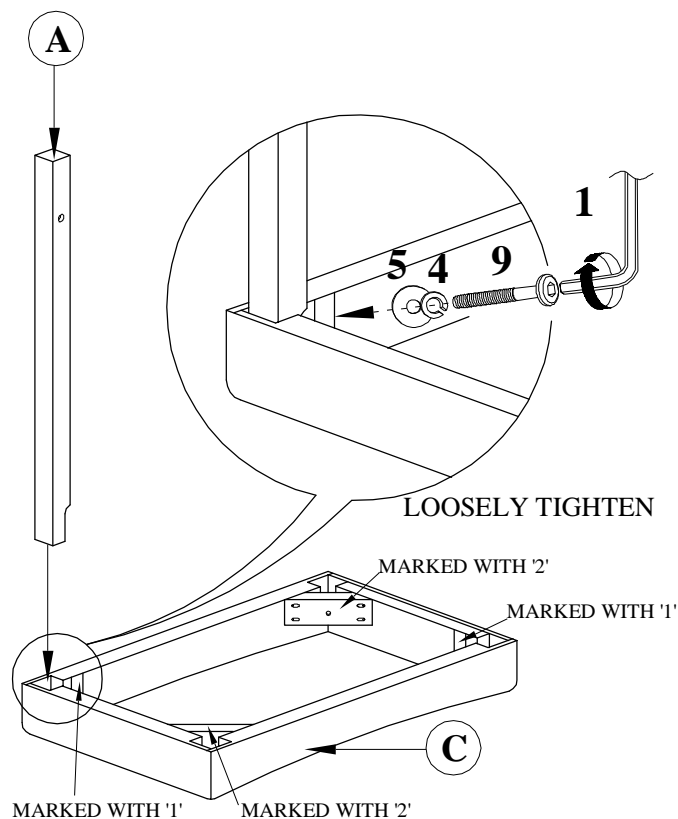


STEP 2

Hand tighten right leg to the seat frame using short bolt, lock washer and flat washer. Insert short stretcher into the two legs.

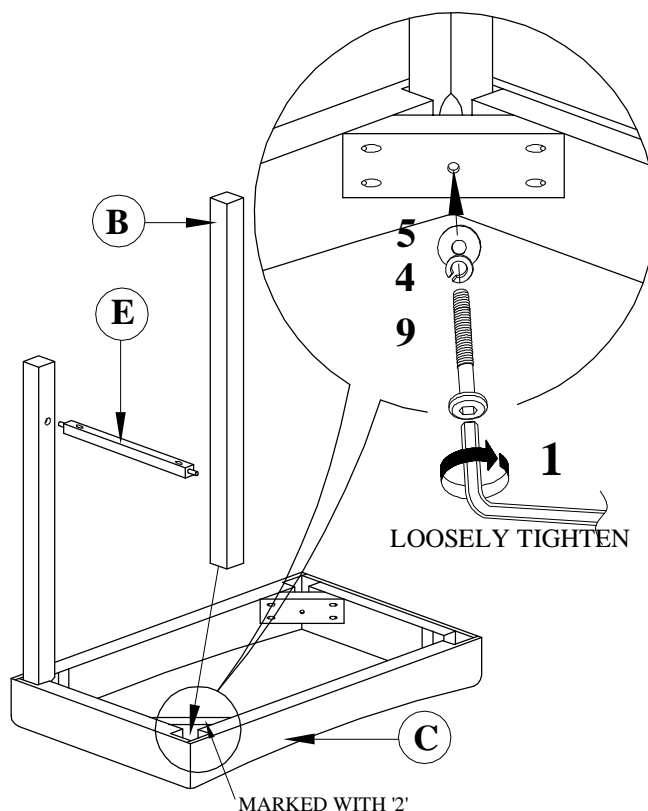


STEP 3

Hand tighten another left leg to the seat frame using short bolt, lock washer and flat washer. Insert long stretcher into the two left legs.

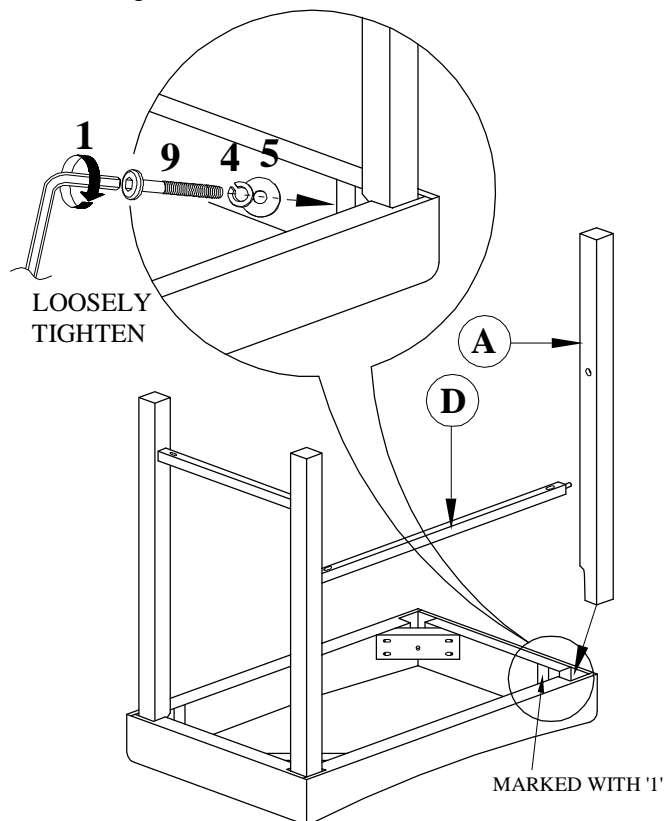

STEP 4


Hand tighten another right leg to the seat frame using short bolt, lock washer and flat washer. Insert long stretcher and short stretcher into the legs.

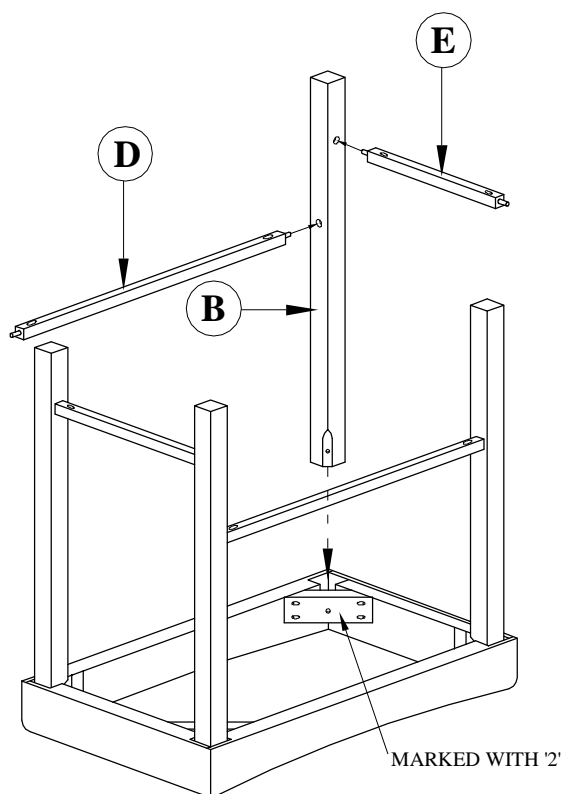

ASSEMBLY INSTRUCTIONS


STEP 5

Tighten all short bolts (from step 1 to 4) with Allen wrench.

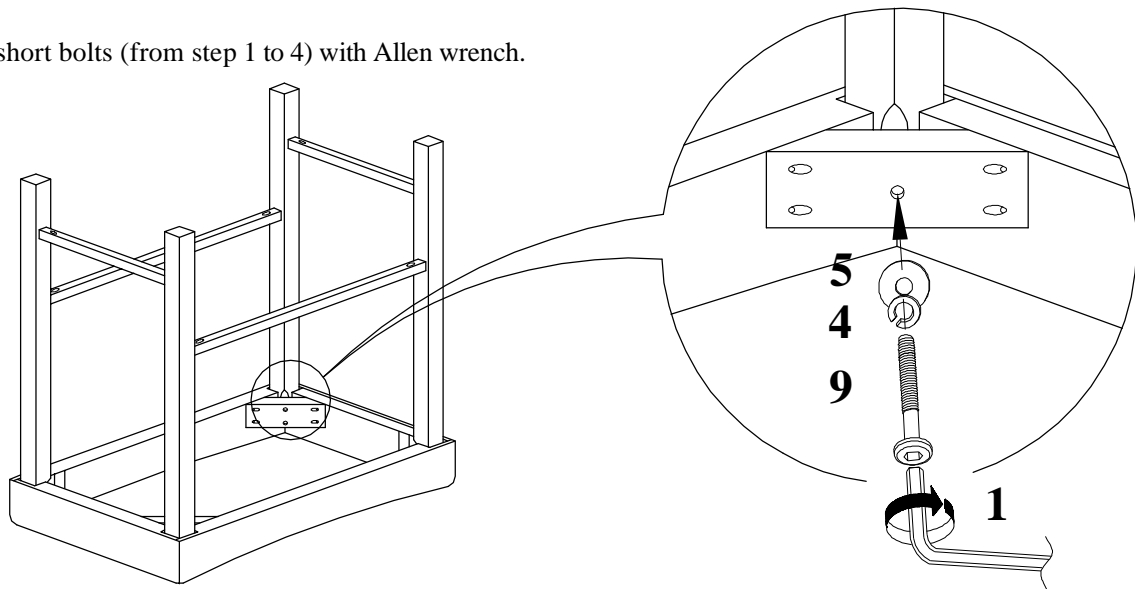


STEP 6

Insert screw into the bottom of stretchers and tighten with screw driver (Not provided).

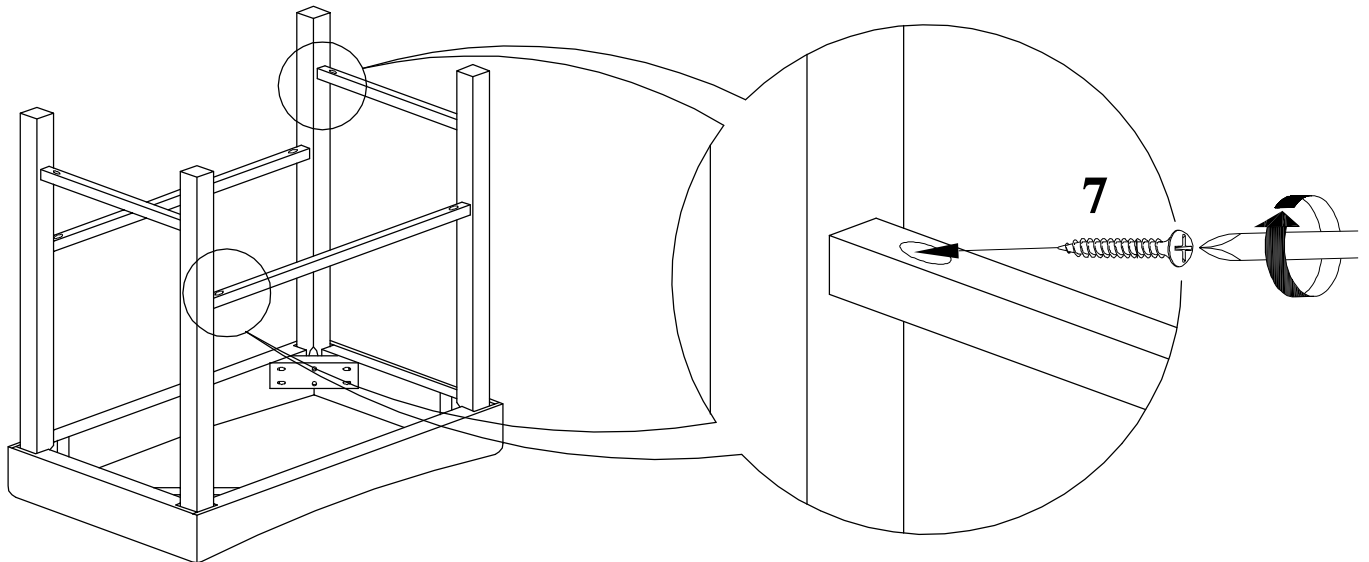

STEP 7


Complete.

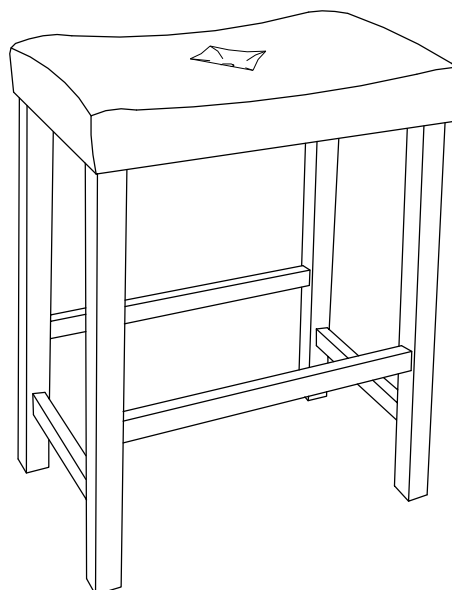

ASSEMBLY INSTRUCTIONS


STEP 8

Place table top upside down on soft surface, then insert dowels into table aprons. Align and fasten left leg frame to table top using long bolt and barrel nut and tighten with Allen wrench.

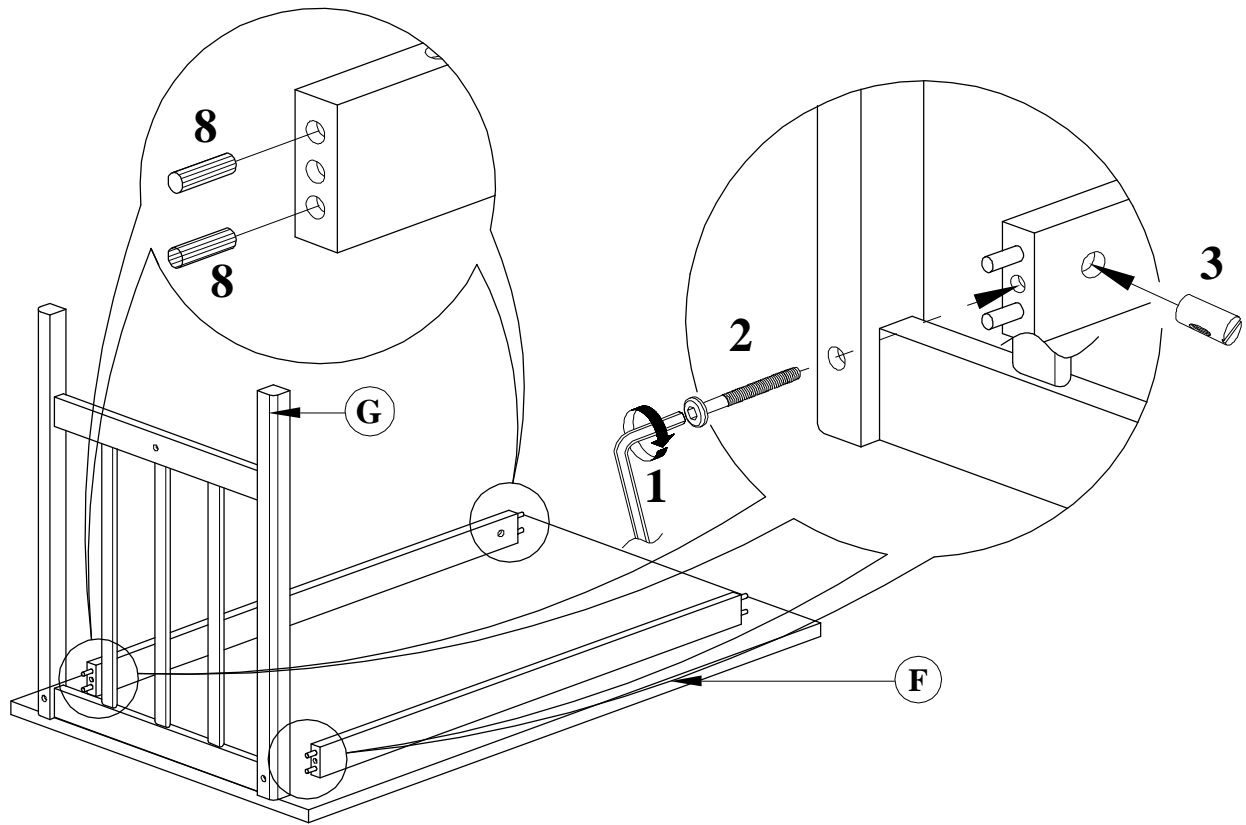

STEP 9


Insert dowels into trestle bar. Align and fasten trestle bar to leg frame using long bolt and barrel nut and tighten with Allen wrench.

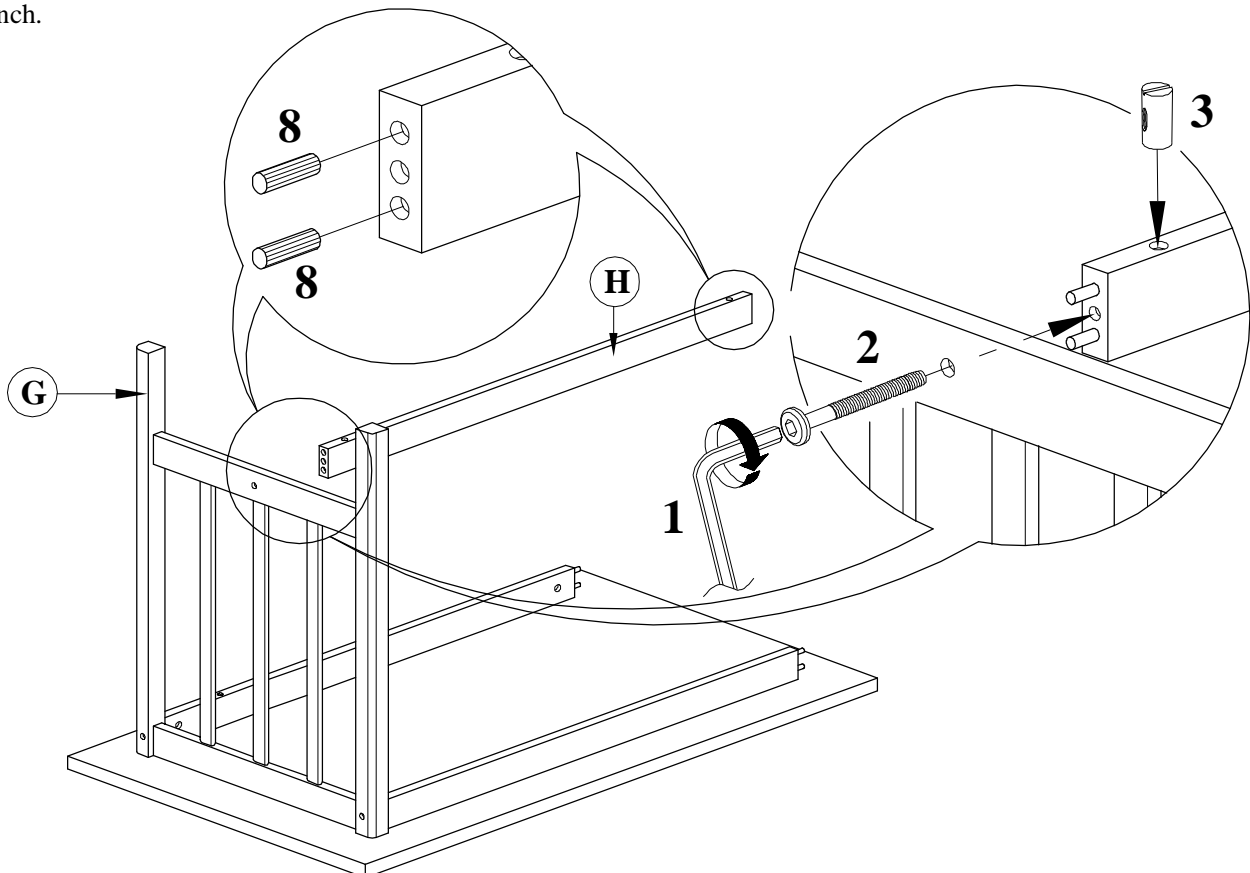

ASSEMBLY INSTRUCTIONS

STEP 10

Align and fasten right leg frame to table top and trestle bar using long bolt and barrel nut and tighten with Allen wrench.

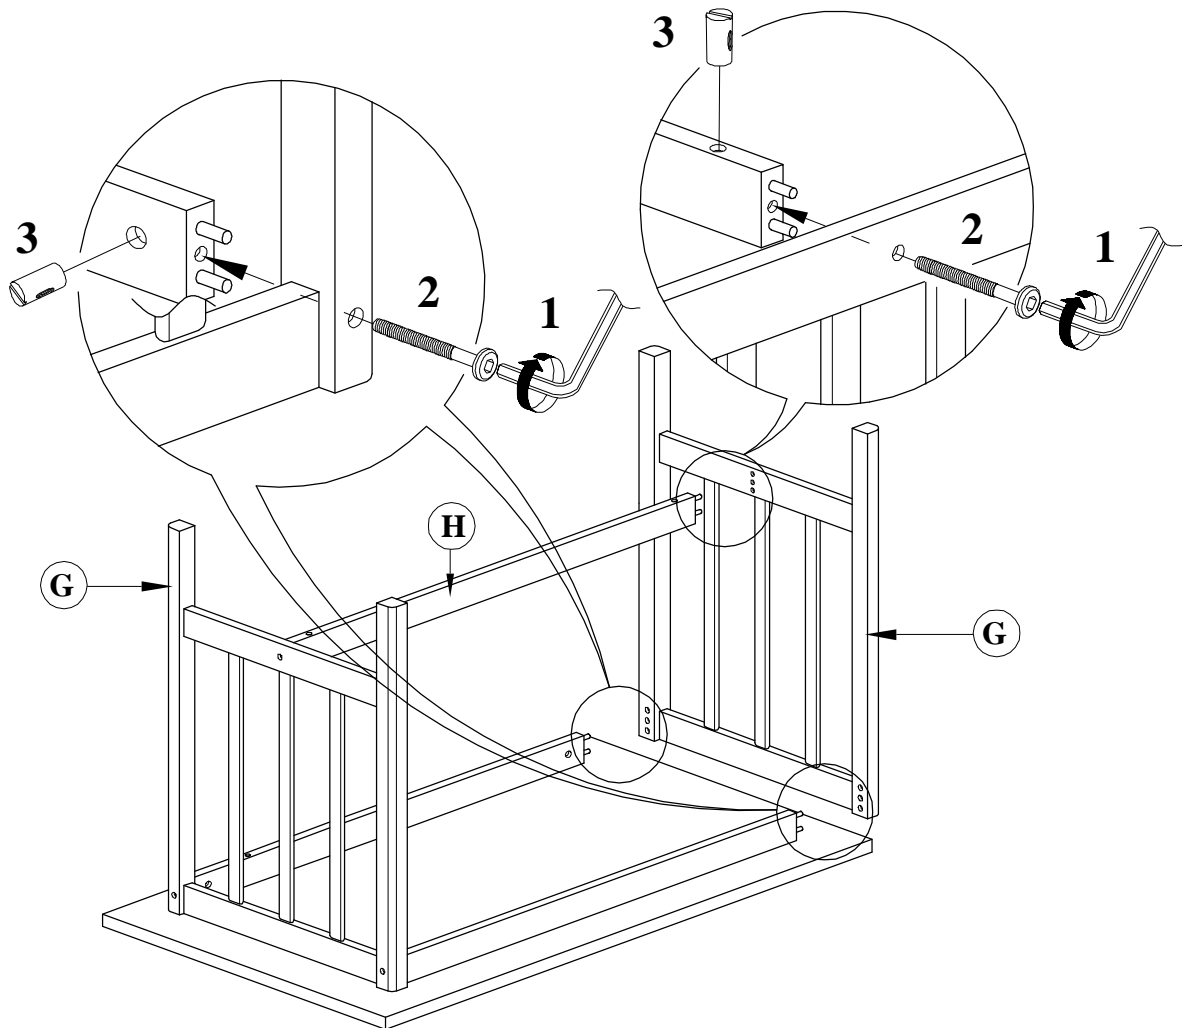

STEP 11

Insert wood plug into leg frames.

