



furnishing better
lives together[®]

WWW.JOFRAN.COM

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2601-400KD SLATER WORKS LADDER BACK CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.



KEY COMPONENTS			
No.	Code	Q'ty	Description
1	NOT AVAILABLE AS A PART	1 Pc	Chair back
2	2601-400KDP41	1 Pc	Complete seat
3	2601-400KDP42	1 Pc	Right facing front leg
4	2601-400KDP43	1 Pc	Left facing front leg
5	2601-400KDP44	1 Pc	Right facing side stretcher
6	2601-400KDP45	1 Pc	Left facing side stretcher
7	2601P01F	4 Pcs	Floor glide

HARDWARE KIT 2601-400KDP01				
No.	Description			Q'ty
A		Long bolt	Ø6x80	4 Pcs
B		Short bolt	Ø6x35	3 Pcs
C		Hex nut	Ø8	4 Pcs
D		Lock washer	M8	11 Pcs
E		Flat washer	M8x18	11 Pcs
F		Allen key	K4	1 Pc
G		Key wrench	12	1 Pc
H		Screw	M4x40	4 Pcs

DO NOT use power tools to assembly.


STEP 1:

- Carefully lay Chair Back flat on a smooth flat surface to prevent scratches.
- Attach Complete Seat to Chair Back by inserting a Flat Washer, Lock Washer and Short bolt into each of the hole on the back of the seat. Tighten screws with provided Allen Key by turning clockwise until secure. (See Detail A).
- Insert a Flat Washer, Lock Washer and Long bolt into each of 2 holes in the Complete Seat corners. Tighten screws with provided Key Wrench. (See Detail B).

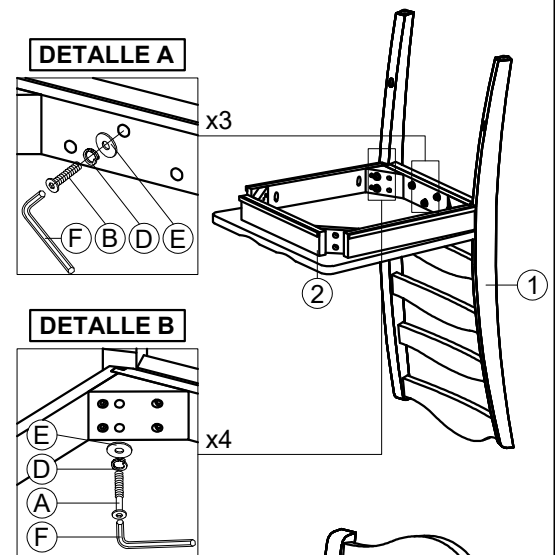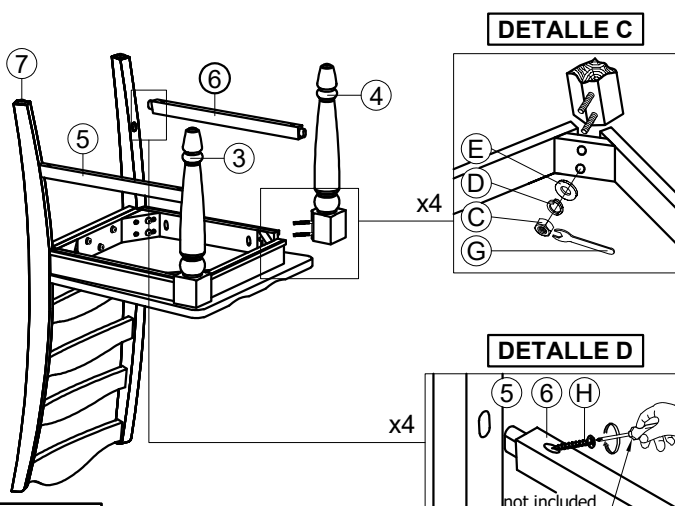

STEP 2:

- Carefully turn chair upside down and attach each Leg to the front corners of the Complete Seat. Place Flat Washer, Lock Washer and Nut on each leg bolt, tightening the Nut on each Leg using provided Key Wrench. (See Detail C).
 - Be sure to level the chair prior to tightening all the nuts/screws.
 - Insert 2 Side Stretchers between the Front Legs, fasten by hand with Wood Screw (F) using a phillip-head screwdriver. (not provided). (See Detail D).
- Once in place, tighten all the leg bolts.

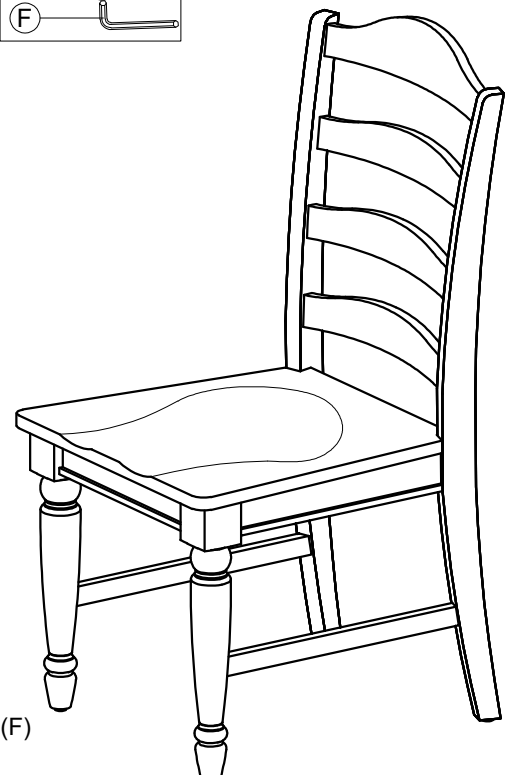

MADE IN VIETNAM