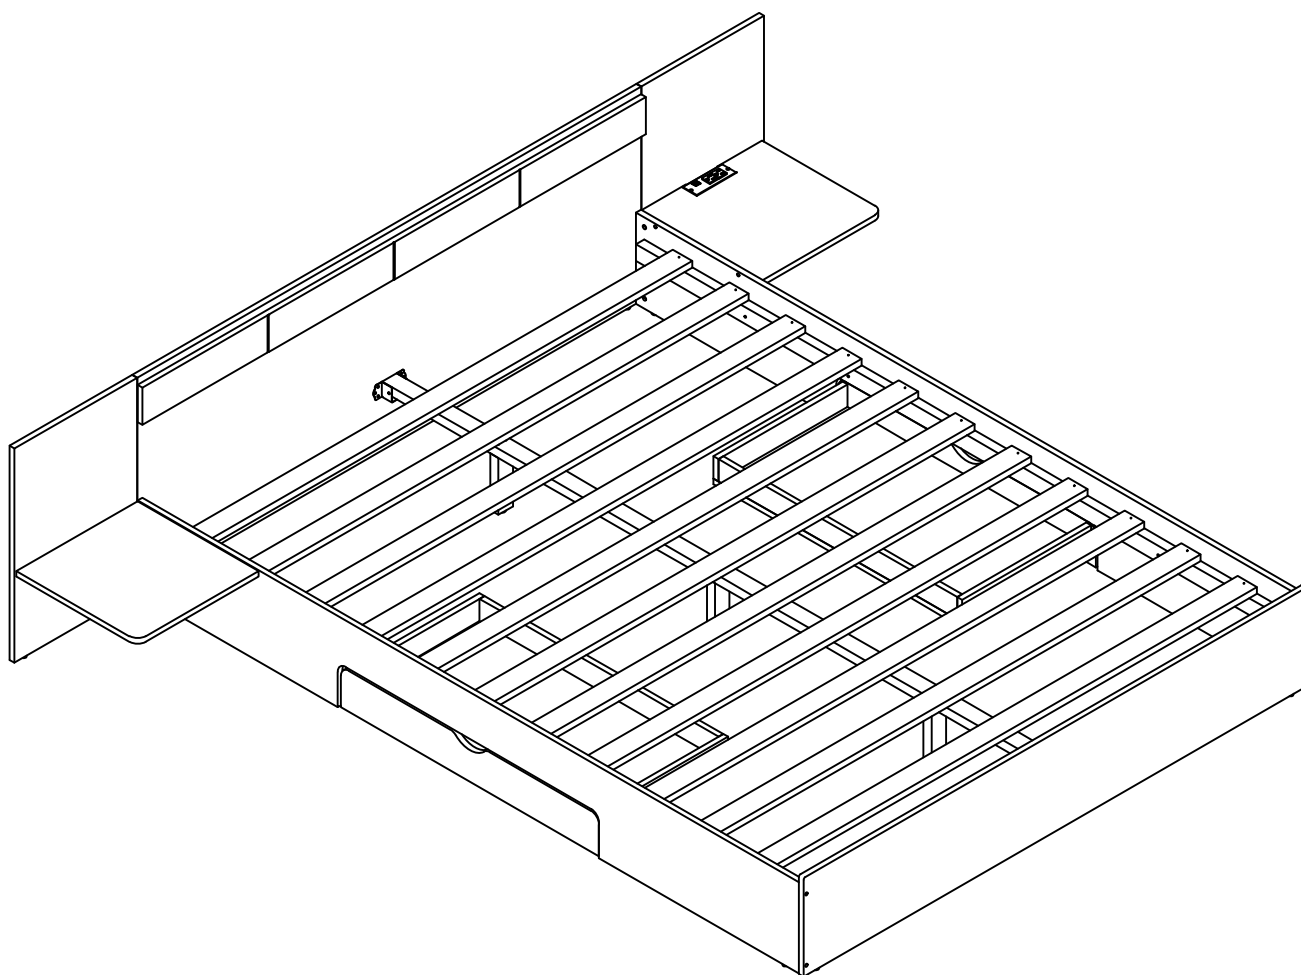
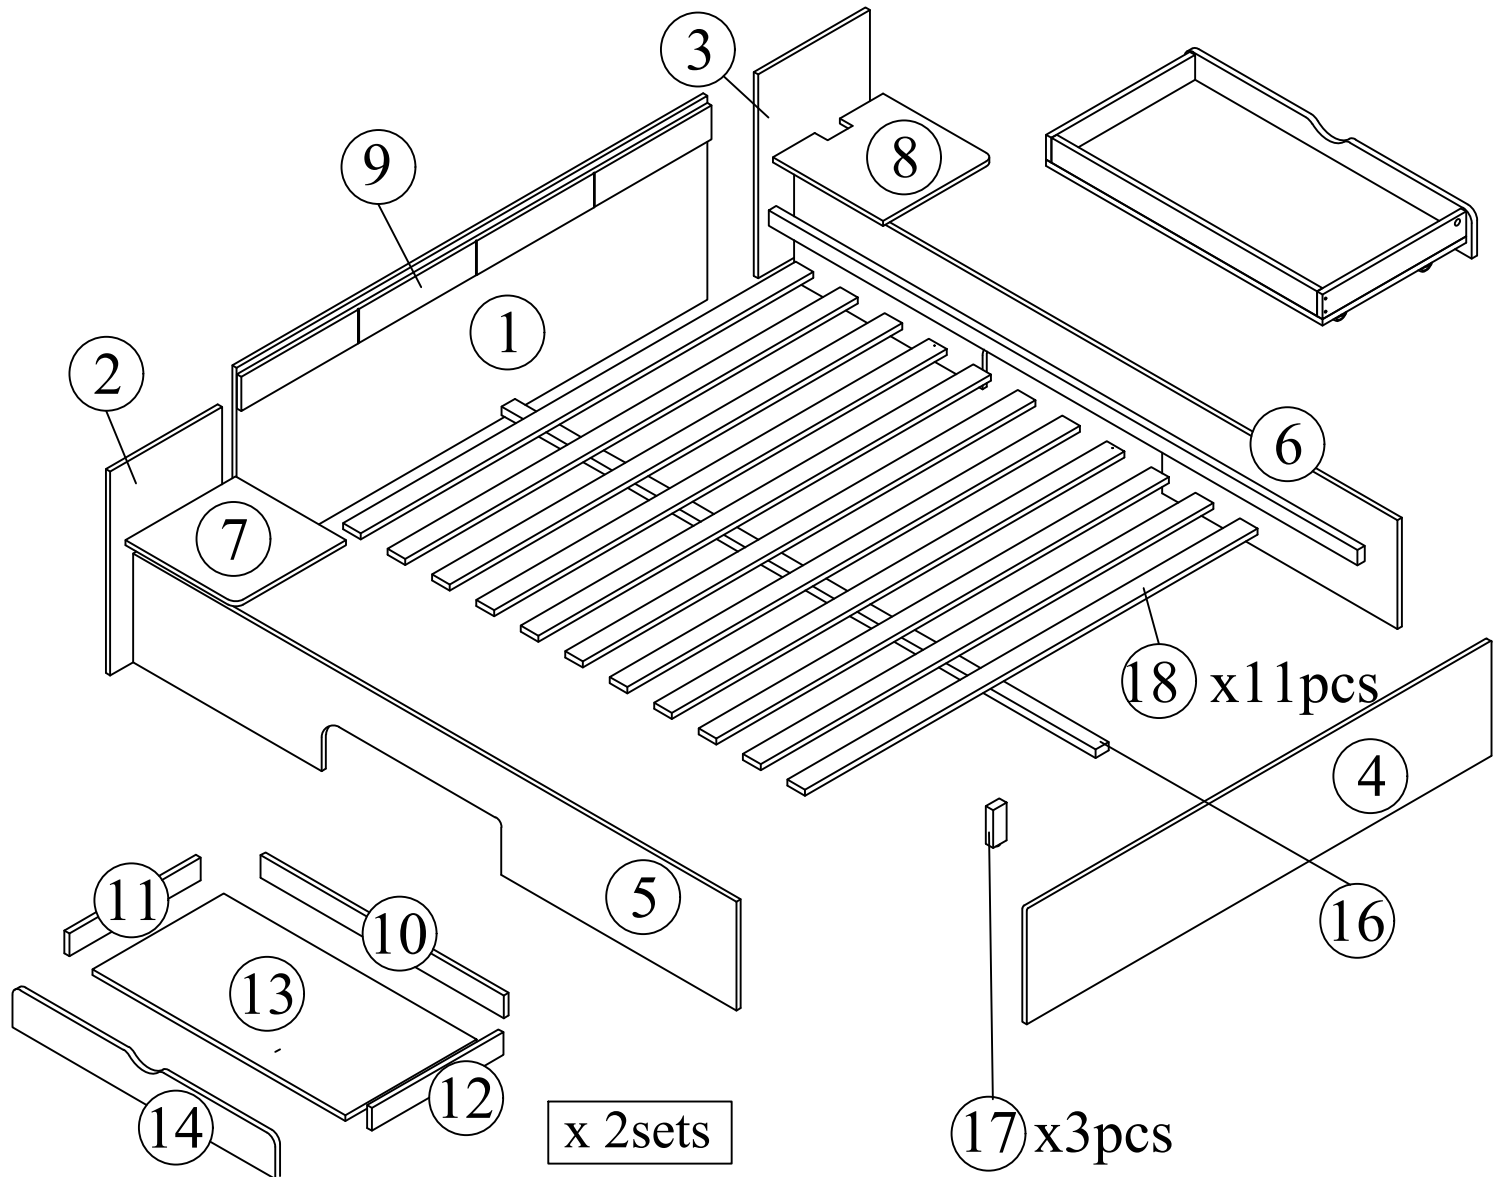


ASSEMBLY INSTRUCTIONS



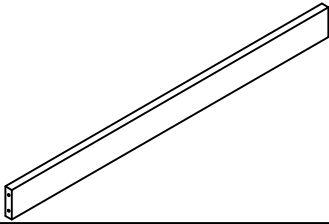
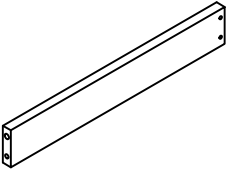
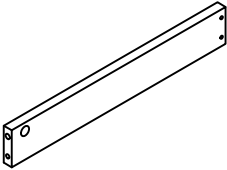
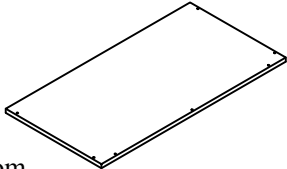
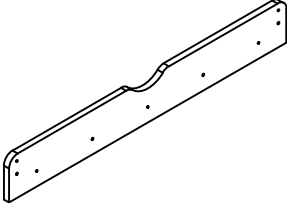
WF303443/WF303546/WF303547

ASSEMBLY INSTRUCTIONS





WF303443/WF303546/WF303547

Part List - WF303443


10		11		12	
Drawer Back Panel = 2pcs		Drawer Left Side Panel = 2pcs		Drawer Right Side Panel = 2pcs	
13		14			
Drawer Bottom Panel = 2pcs		Drawer Front Panel = 2pcs			

Hardware List - WF303443

C		E		J		K		Q		R	
WOOD DOWEL M6 x 25mm 8pcs		CAM NUT 15mm 10pcs		CSK SCREW M4 x 38mm 22pcs		CSK SCREW M3.5 x 16mm 16pcs		Cam Bolt 10pcs		Nylon Castor 40-Stop 8pcs	




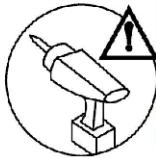


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)











PLEASE BE CAREFULL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

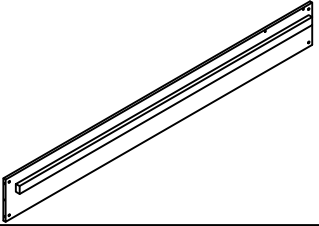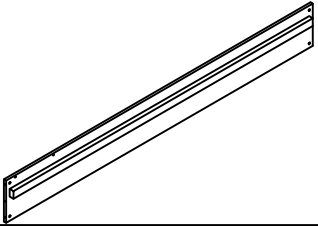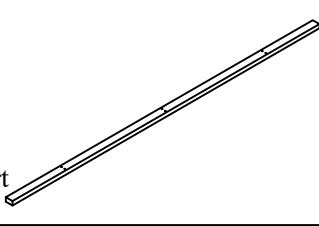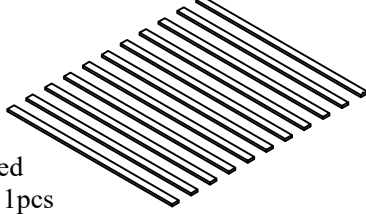Part List - WF303546


5  Left Side Panel = 1pc	6  Right Side Panel = 1pc	16  Center Support LVL = 1pc
17  Support Leg LVL = 3pcs	18  LVL Bed Slat = 11pcs	

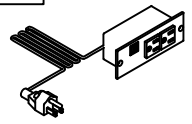Hardware List - WF303546

A  Steel Nut M6 x 10mm 16pcs	B  JCBC SCREW M6 x 50mm 16pcs	C  WOOD DOWEL M6 x 25mm 12pcs	D  WOOD DOWEL M8 x 50mm 4pcs	E  CAM NUT 15mm 12pcs	F  DOUBLE END BOLT 6pcs
G  PVC NAIL 5/8" 16pcs	H  WIRE CAP 35mm 1pc	I  CSK SCREW M4 x 65mm 6pcs	J  CSK SCREW M4 x 38mm 22pcs	K  CSK SCREW M3.5 x 16mm 18pcs	L  ALLEN KEY 1pc
M  SLAT BRACKET HC 021 2pcs	N  M6 x 20mm Glider 3pcs	O  USA SOCKET 1pc	P  JCBC SCREW M6 x 25mm 4pcs		







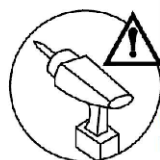


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFULL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

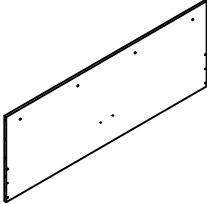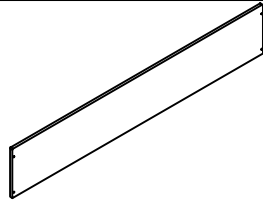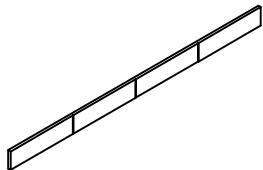
Part List - WF303547

1  Headboard Panel = 1pc	2  Headboard Left Side Panel = 1pc	3  Headboard Right Side Panel = 1pc
4  Footboard Panel = 1pc	7  Left Bed Side Table Panel = 1pc	8  Right Bed Side Table Panel = 1pc
9  Decoration Panel = 1pc		

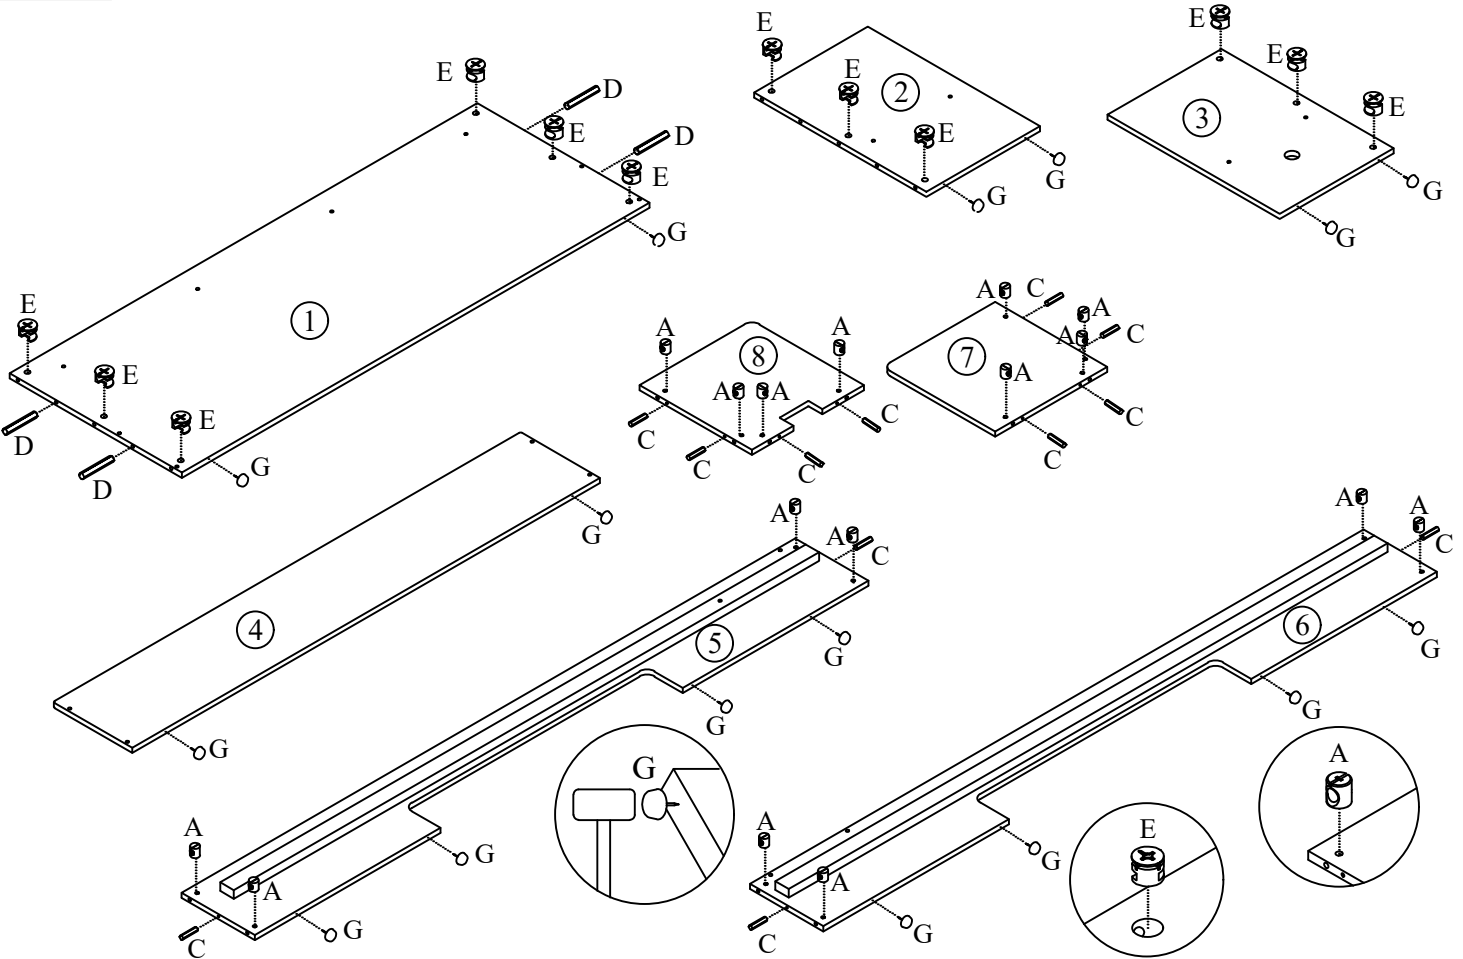
STEP 1



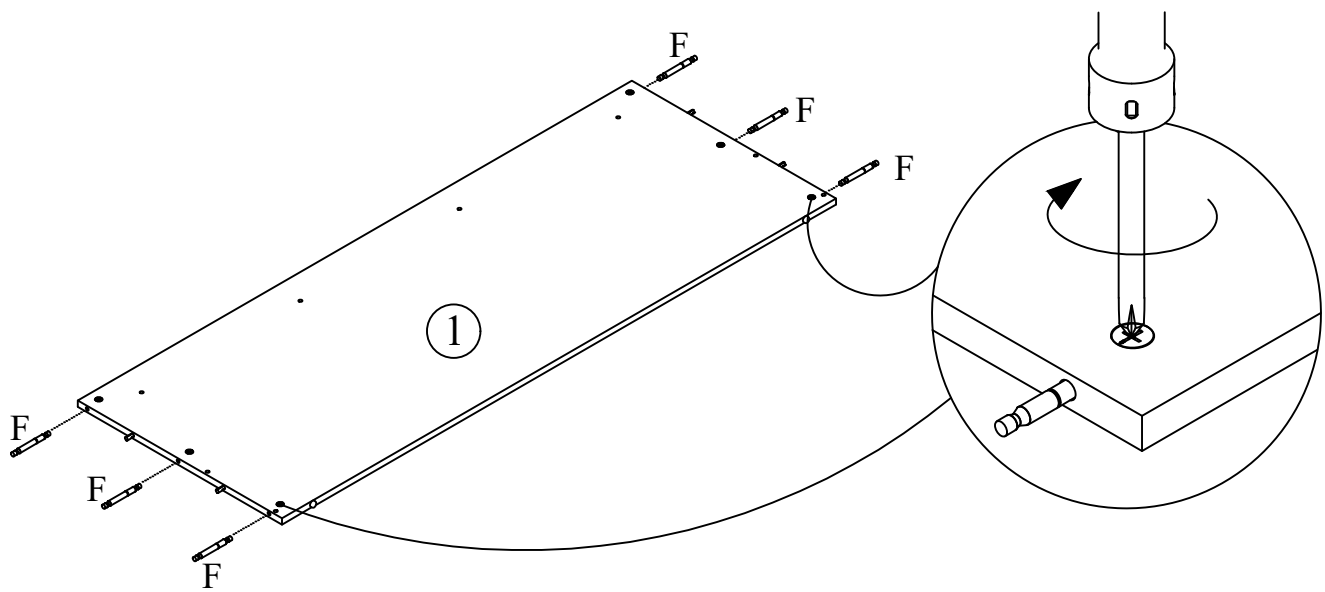
STEP 2



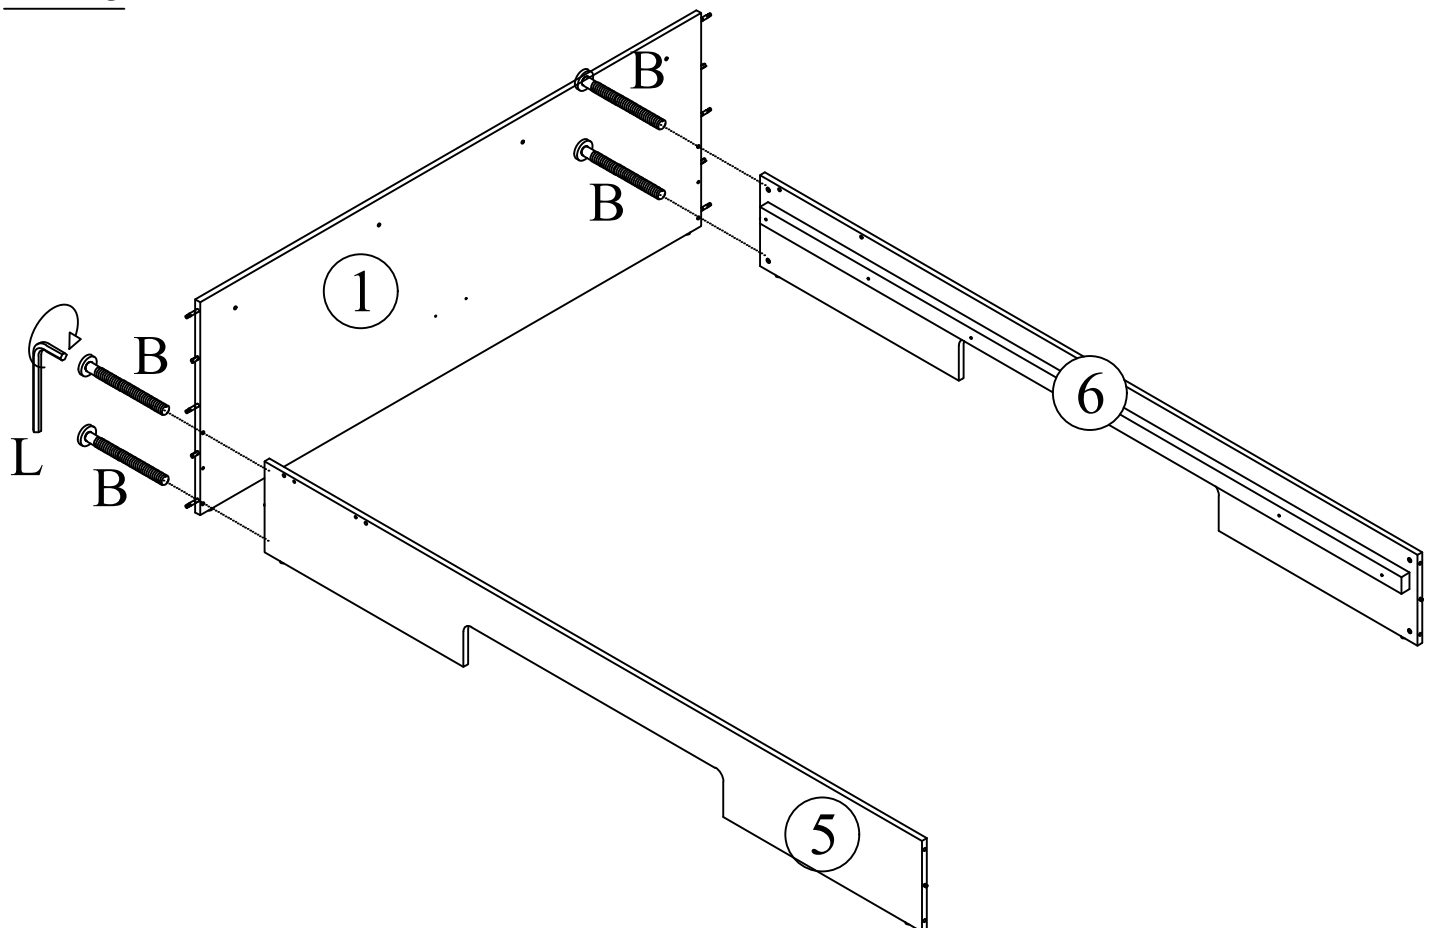
STEP 3



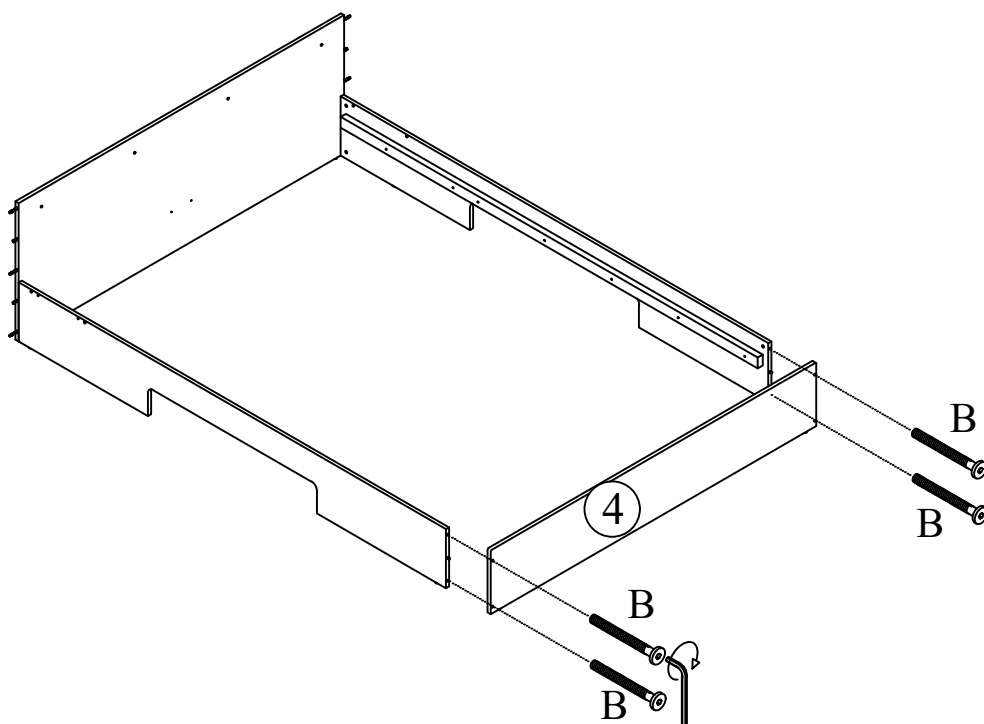STEP 4




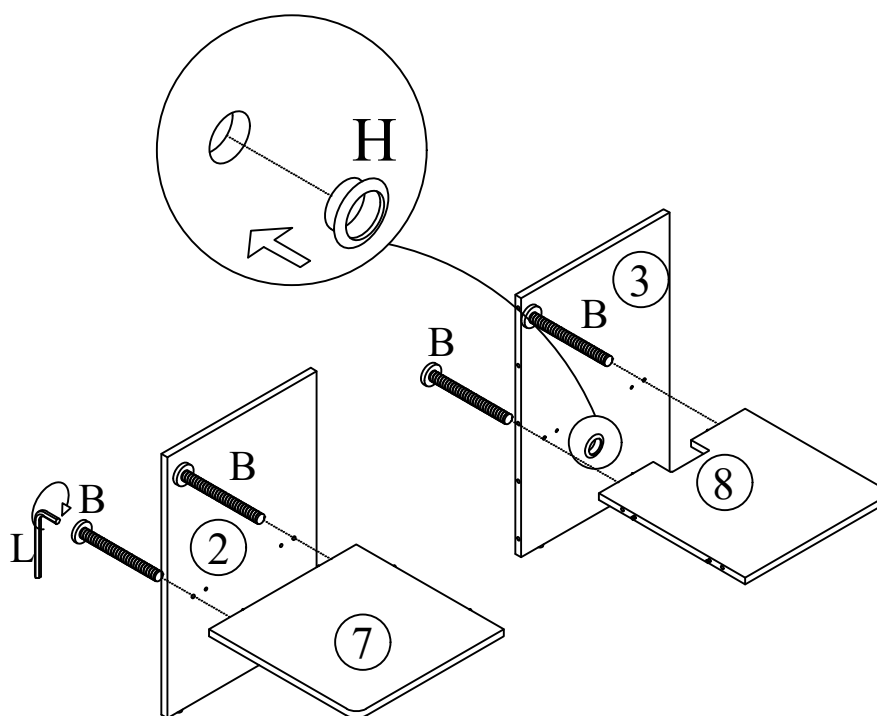STEP 5







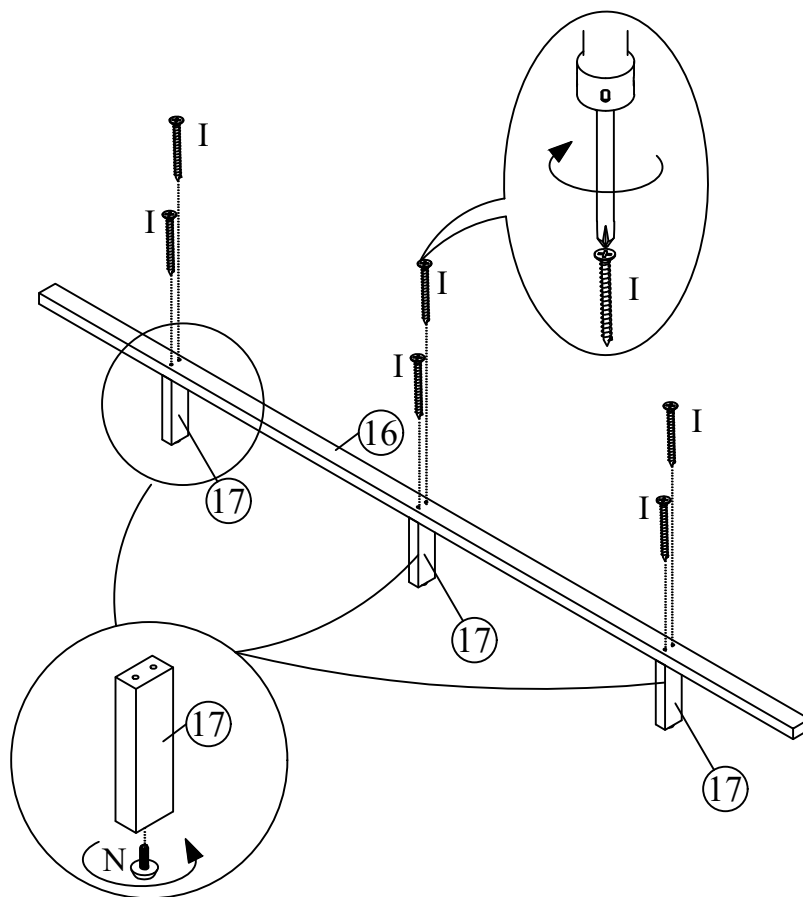
STEP 8



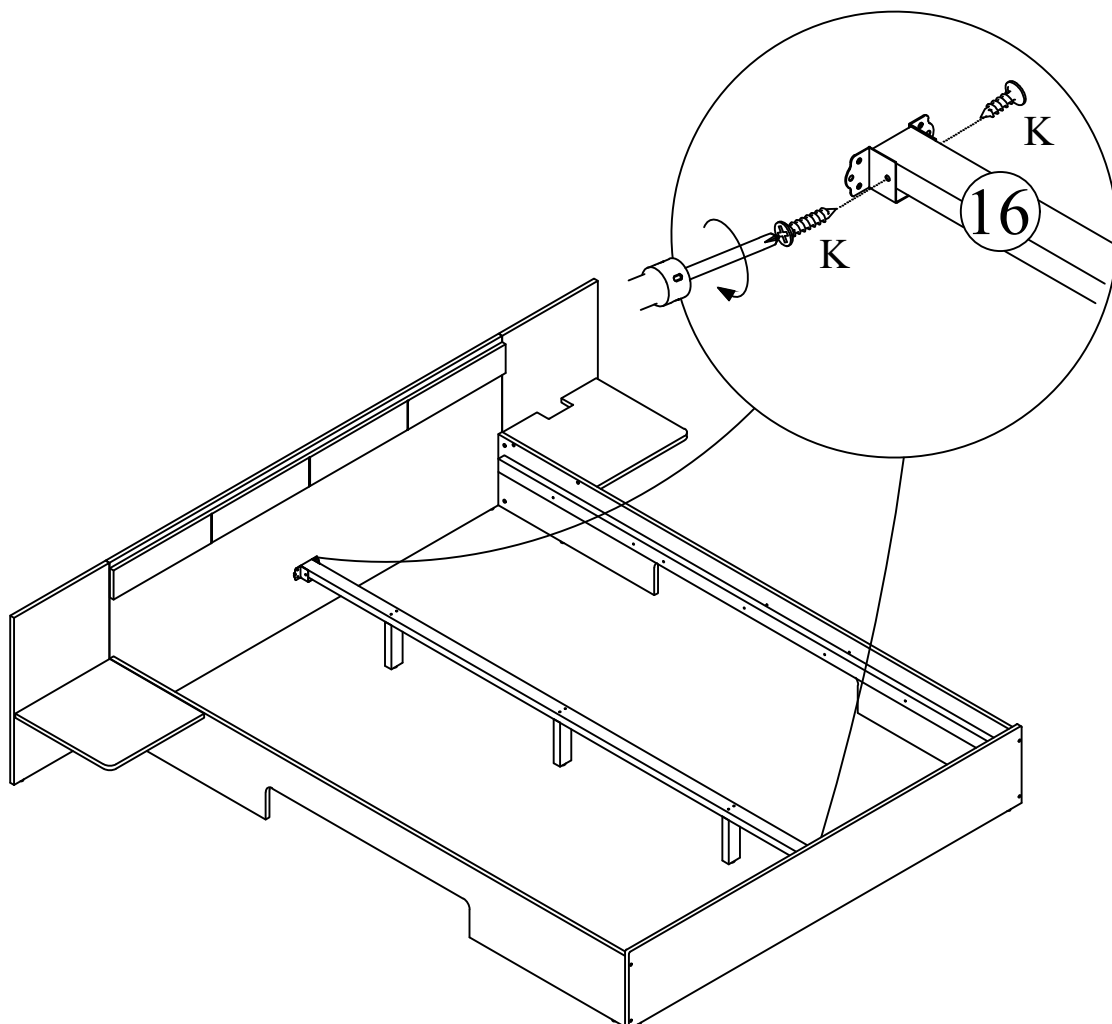STEP 9




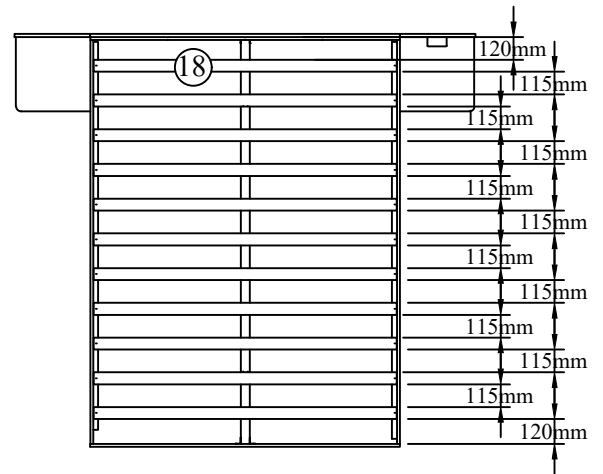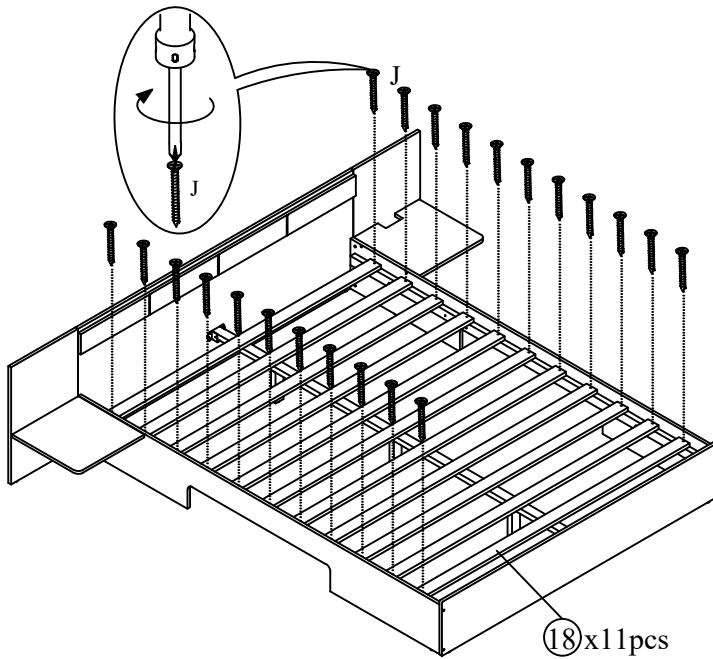STEP 10




Please follow the above diagram for fixing slat base.

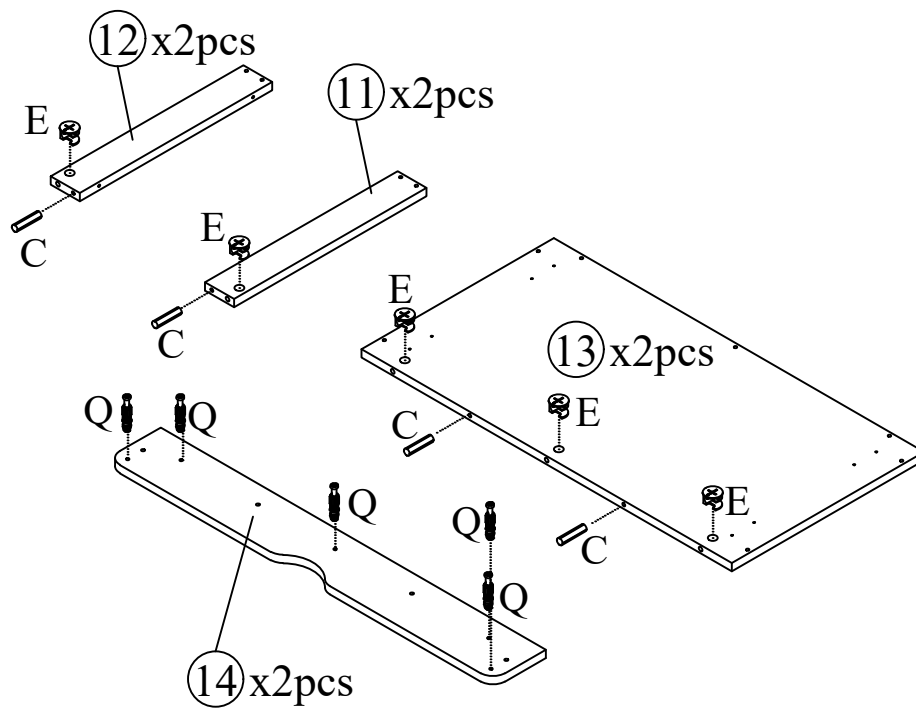
STEP 11



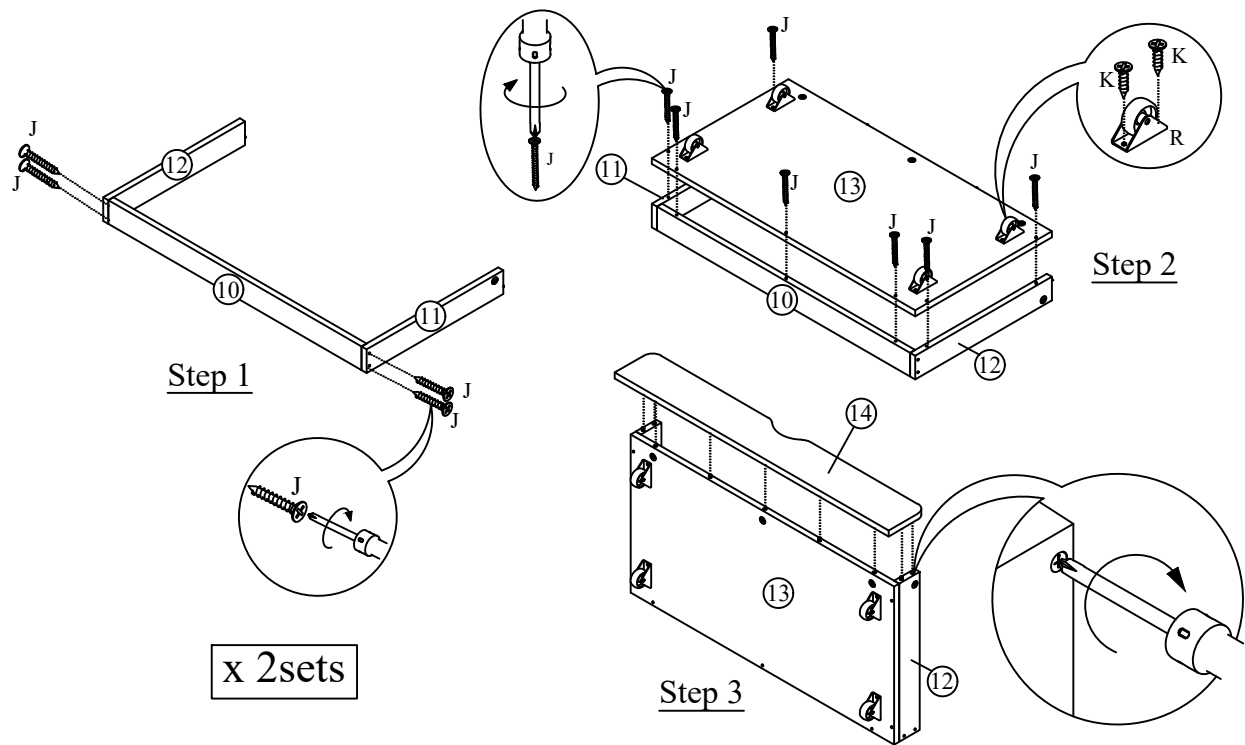STEP 12



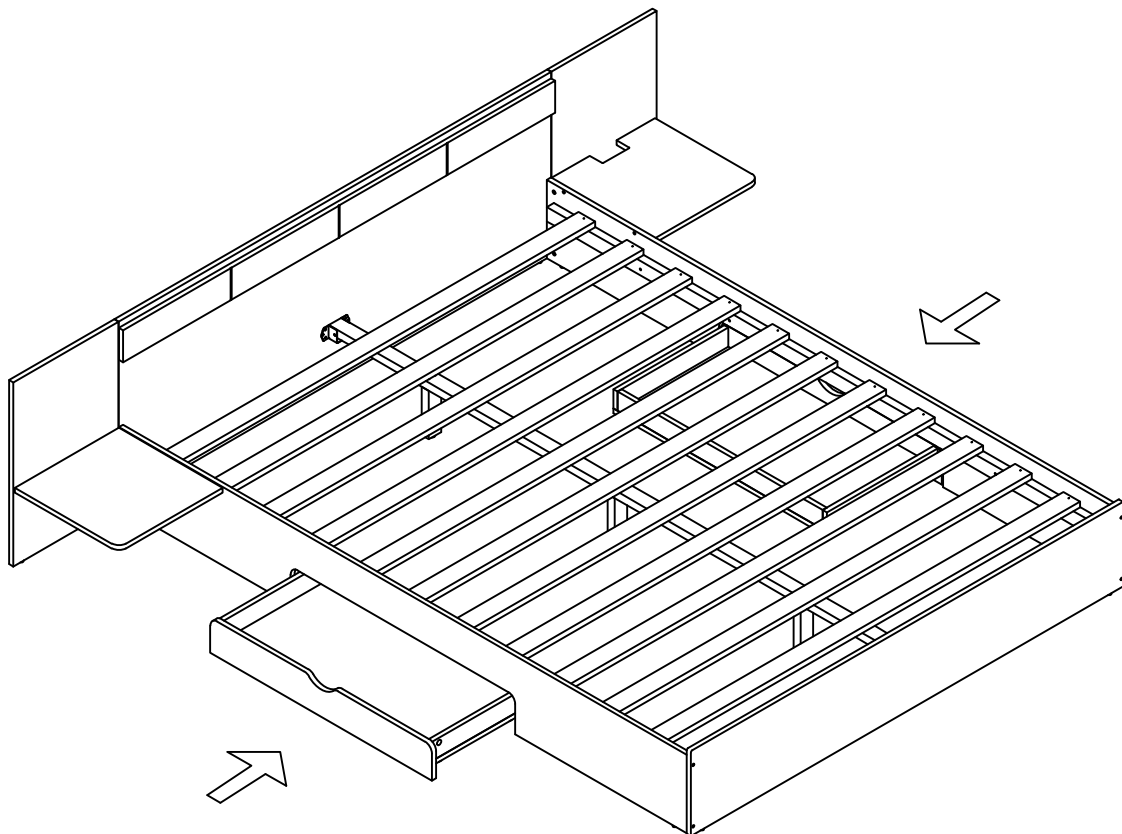STEP 13



STEP 14

