


THANK YOU SO MUCH FOR PURCHASING OUR PRODUCT. IF YOU HAVE ANY TROUBLE PUTTING YOUR KIT TOGETHER OR MISSING PIECES PLEASE CONTACT US.

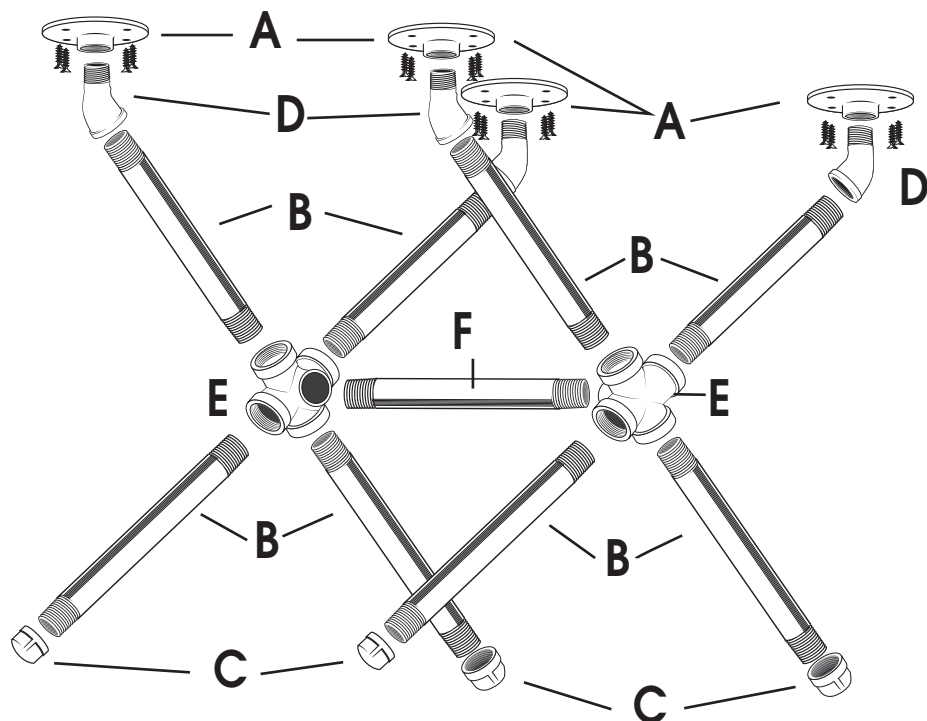

## Parts List:


- A - 1/2" FLANGES (3" OD)(4 PCS)
- B - 1/2" X 12" PIPE (8 PCS)
- C - 1/2" CAPS (4 PCS)
- D - 1/2" 45 DEGREE STREET ELBOW (4 PCS)
- E - 1/2" FIVE WAY (2 PCS)
- F - 1/2" X 10" PIPE (1 PCS)
- G - SCREWS (16 PCS)

This is industrial grade authentic pipe. It comes covered in anti-rust oil. They are dirty to the touch but can be cleaned and sealed to prevent rust and be clean to the touch. See Clean and Seal sheet for ways to clean and seal the pipe.

1. Connect Caps (C) and Elbows (D) to the 12" pipe (B).
2. Connect Flanges (A) to the Elbows(D)
2. Connect 12" pipe (B) legs to the 5-way (E).
3. Connect each finished side with the 10" pipe (F) into each 5-way (E)
4. Tighten each leg by hand. Tighten part F Elbows until they are facing up.
5. Flip legs over and lay flat on your table top (not included) and use screws to fasten.
6. You can unscrew Caps (D) to help level table.

Caps may scratch a hardwood floor and pads are recommended.

## RECOMMENDED TOOLS

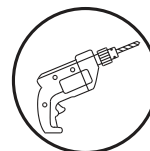

RECOMMENDED  
DRILL WITH 1/4" BIT  
FOR WALL ANCHOR

## PREPPING THE PIPE

VERY IMPORTANT: These are all authentic malleable iron and require necessary cleaning and prepping; do not skip this step.

1. Clean and dry all the parts with gentle soap.
2. Use a lint-free rag to apply metal polish to the parts.
3. Use metal polish or clear coat paint to seal the dry pipe.