




INSTALLATION MANUAL

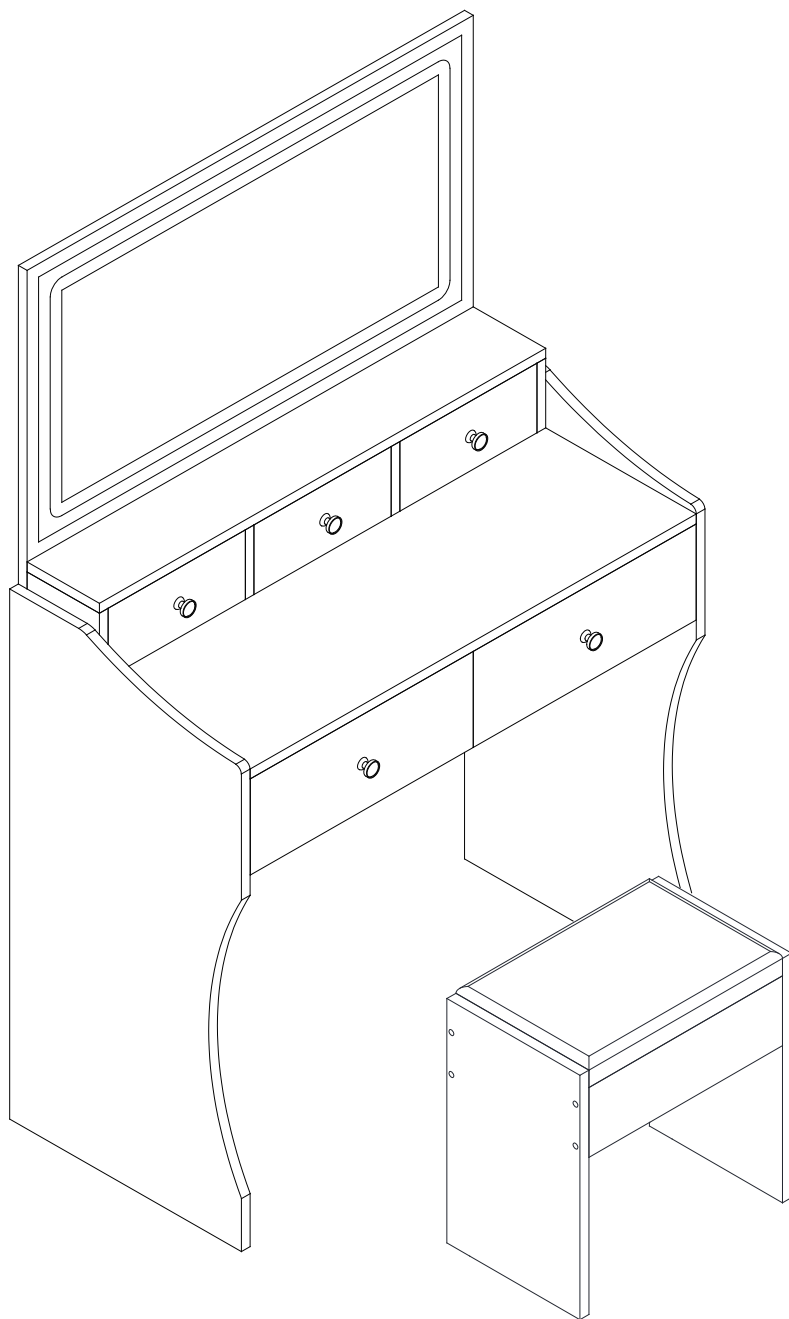

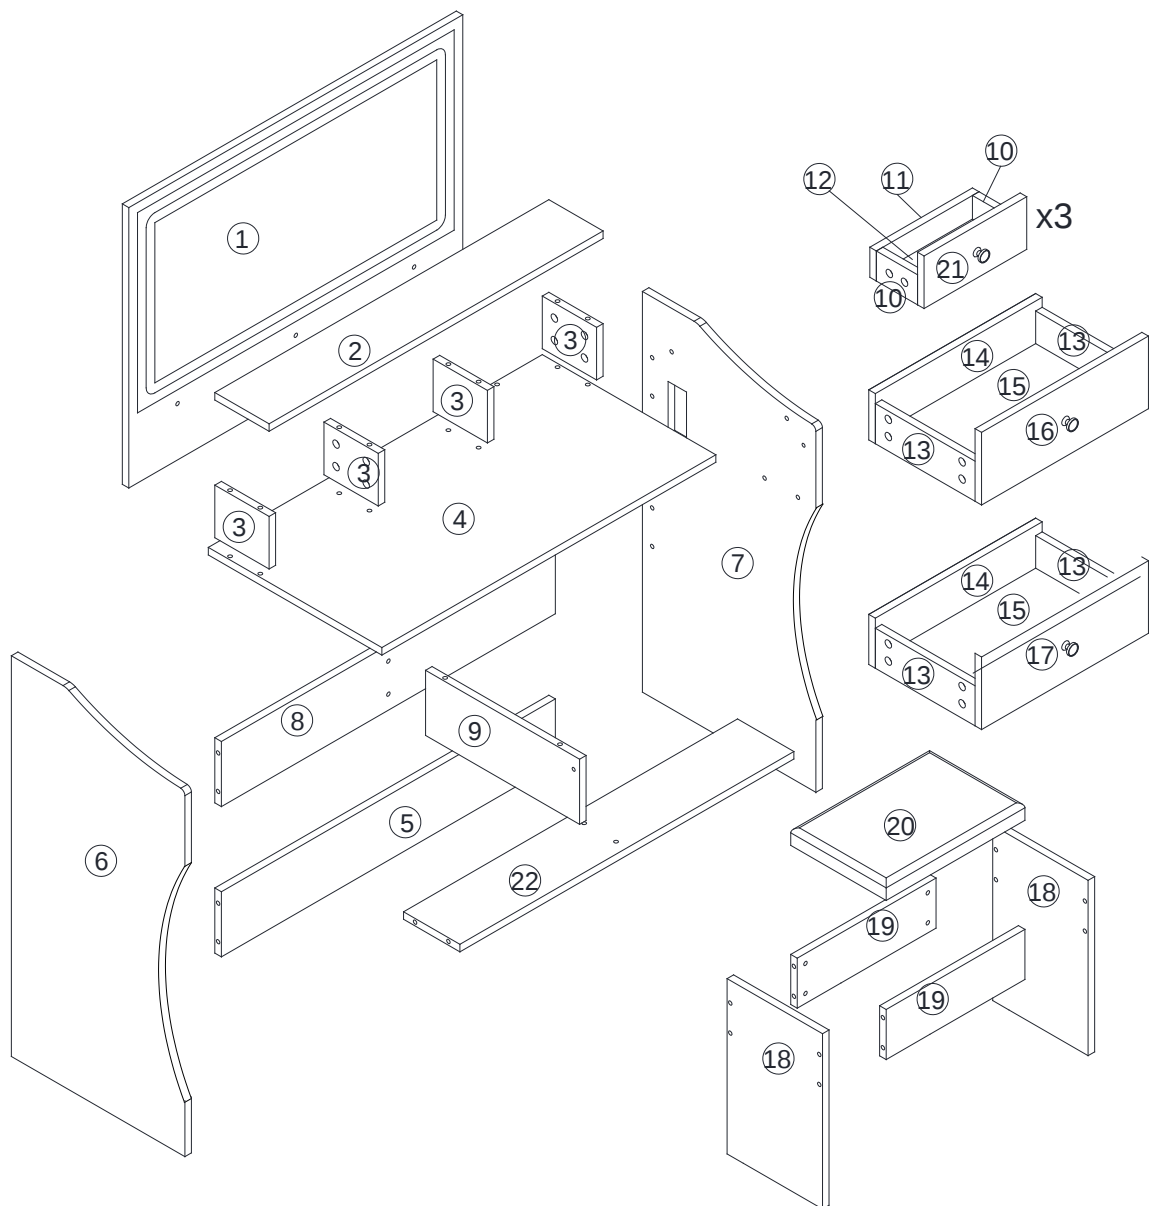

1 - x1	8 - x1	15 - x2	22 - x1
2 - x1	9 - x1	16 - x1	
3 - x4	10 - x6	17 - x1	
4 - x1	11 - x3	18 - x2	
5 - x1	12 - x3	19 - x2	
6 - x1	13 - x4	20 - x1	
7 - x1	14 - x2	21 - x3	

HARDWARE



A	SCREW & PLASTIC LOCK	x65
---	-------------------------	-----



B	SCREW & METAL LOCK	x65
---	-----------------------	-----



C	SCREW	x12
---	-------	-----




D	HAND IN HAND	x5
---	--------------	----




E	HANDLE	x5
---	--------	----




F	SOCKET	x1
---	--------	----



G	SCREW	x4
---	-------	----



H		x2
---	--	----



J	SCREW	x15
---	-------	-----




K	SCREW	x15
---	-------	-----



L		x1
---	--	----


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

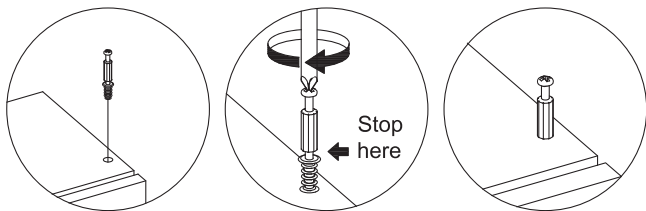


2. Check the Nut direction



This direction of the marked nut is consistent with the direction in which the screw is inserted

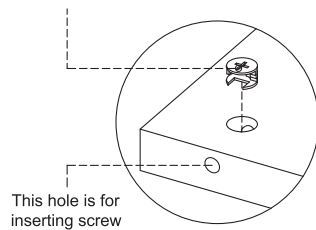


3. Installation on the board with fixing screws

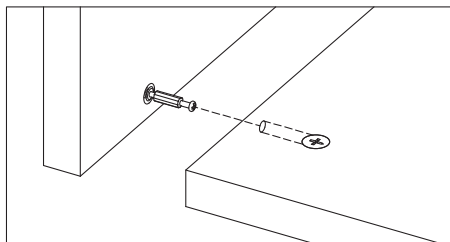


3. Rotate slowly until it stops

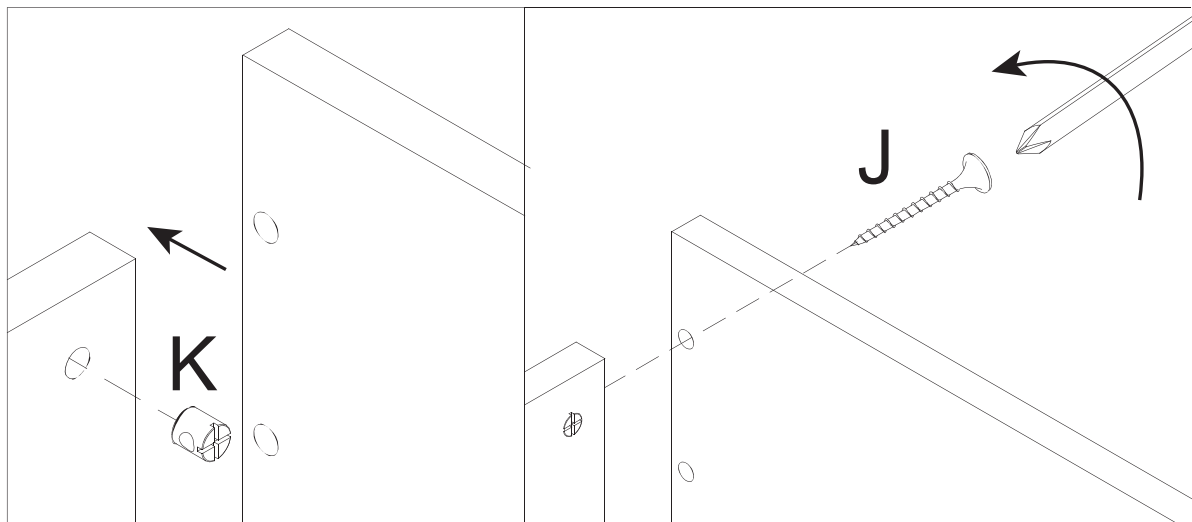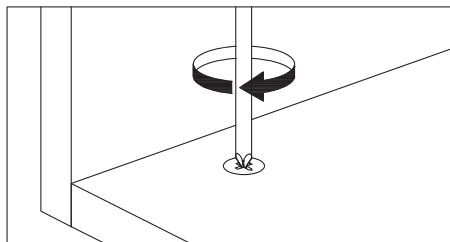


Step 01

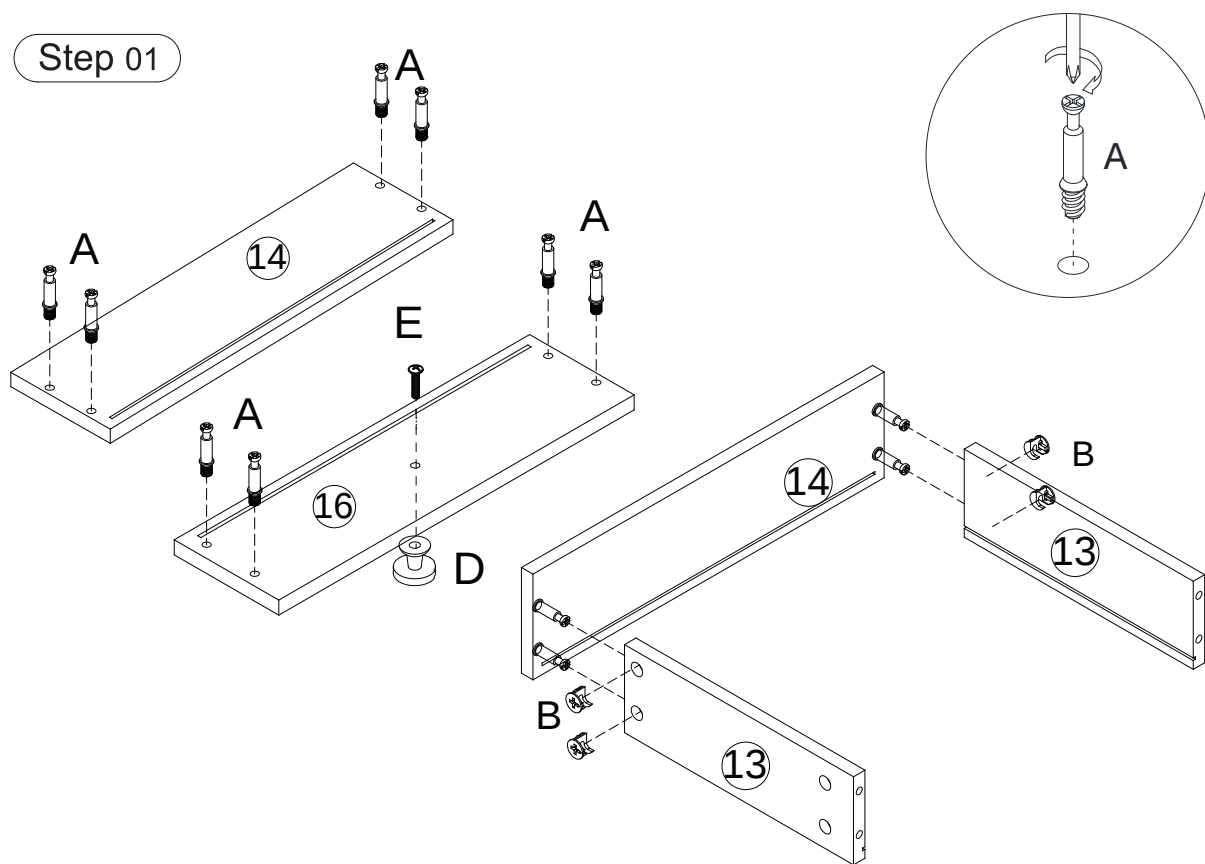

Step 02

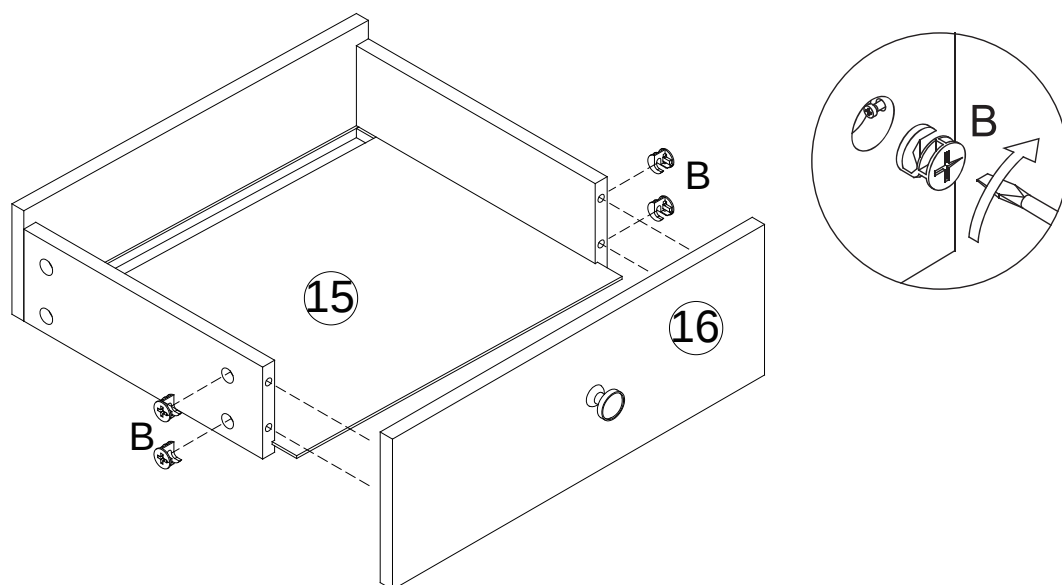


Step 03

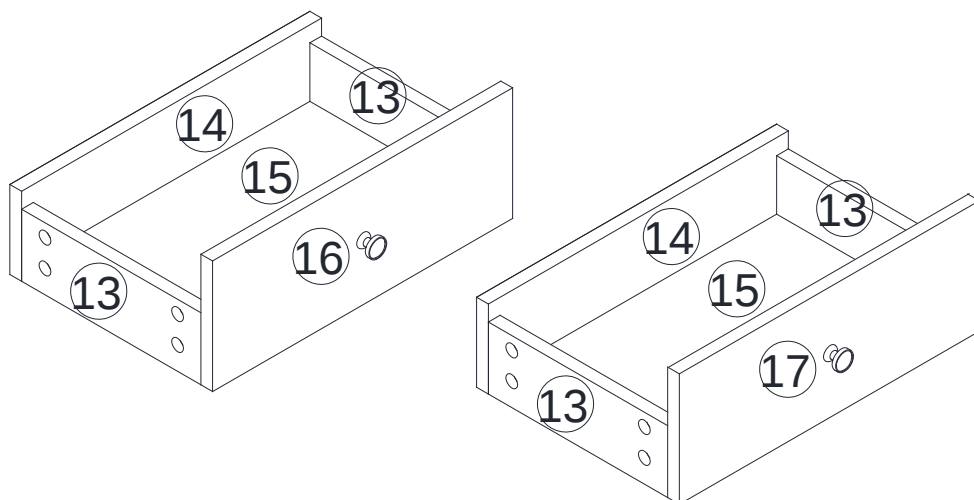


The two drawers are installed the same way


Step 04

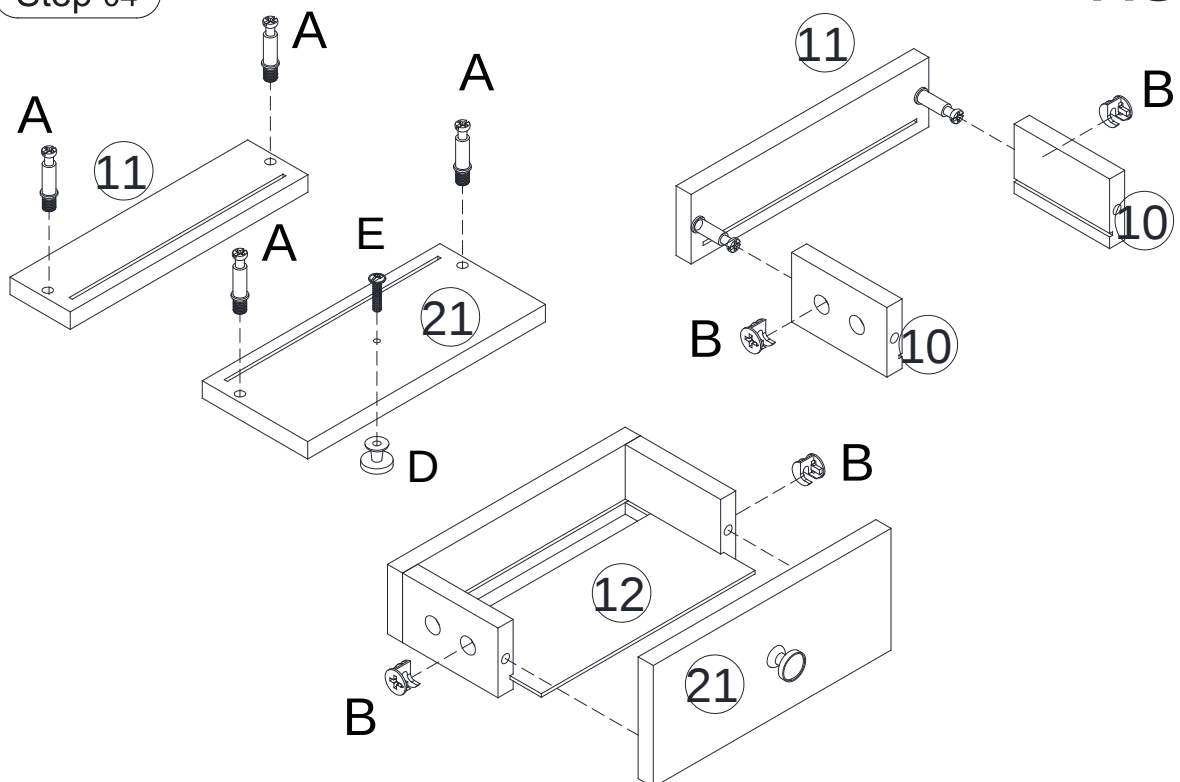


Step 05

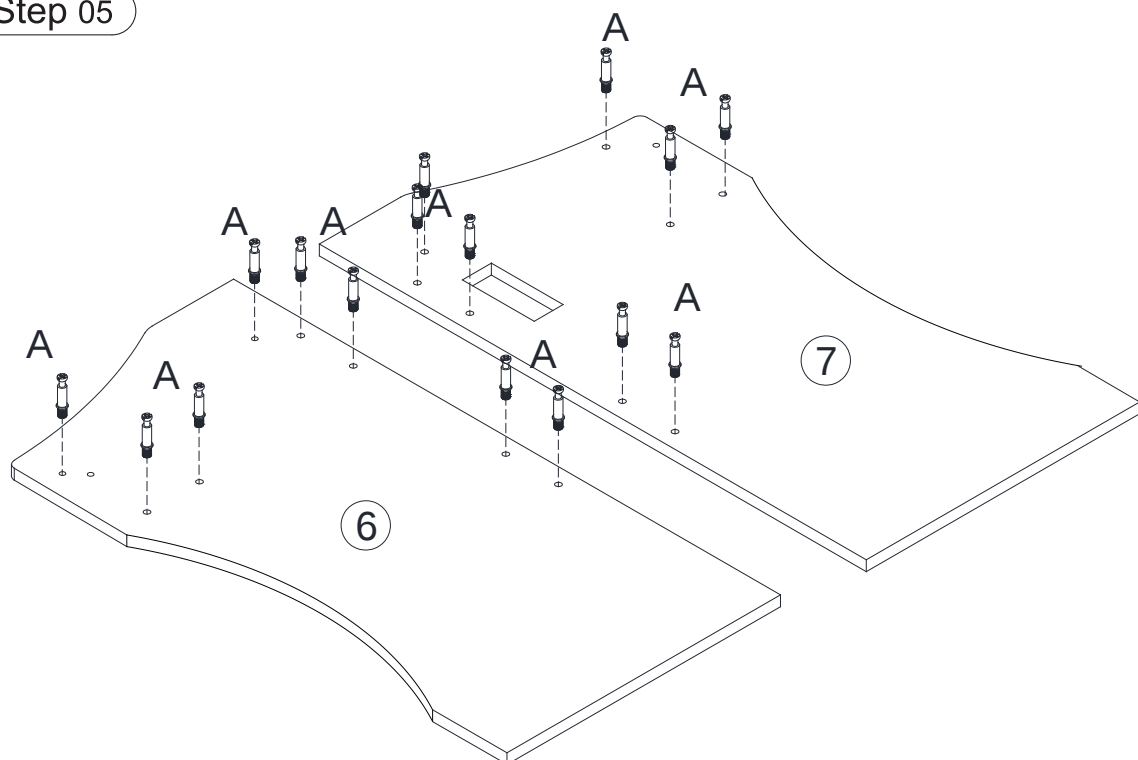


Step 06

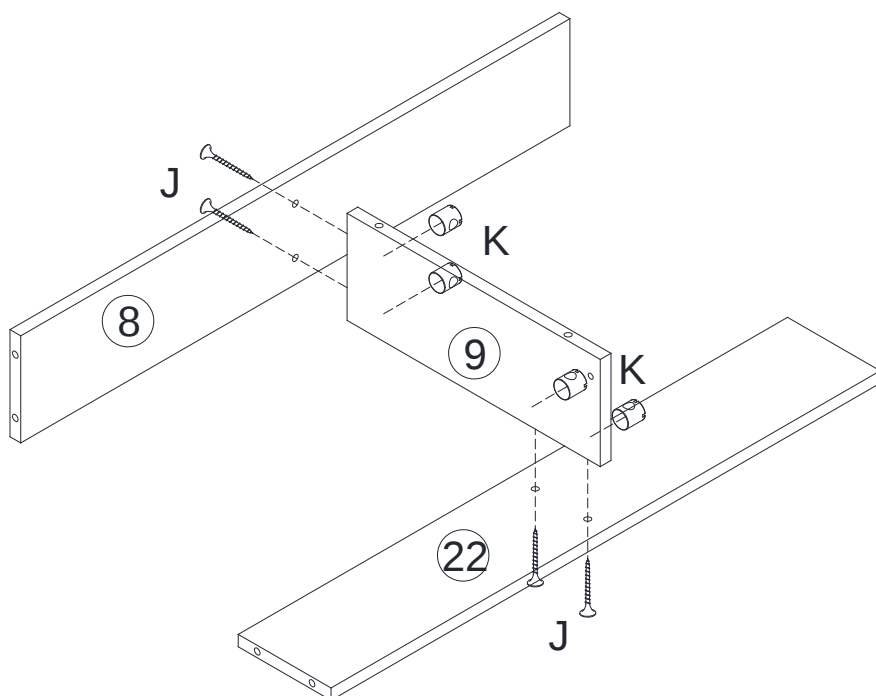


Step 07

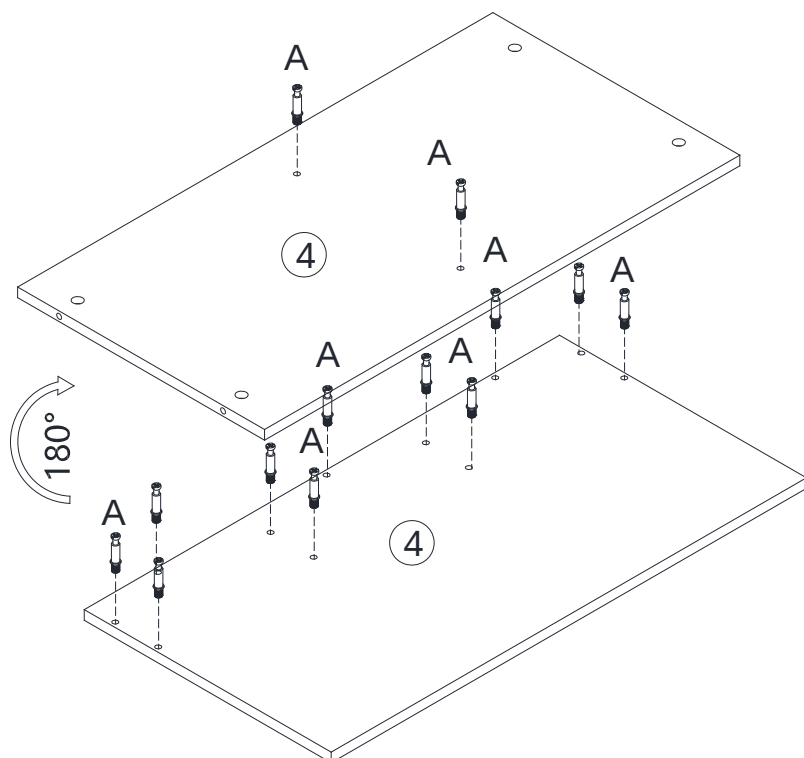


Step 08

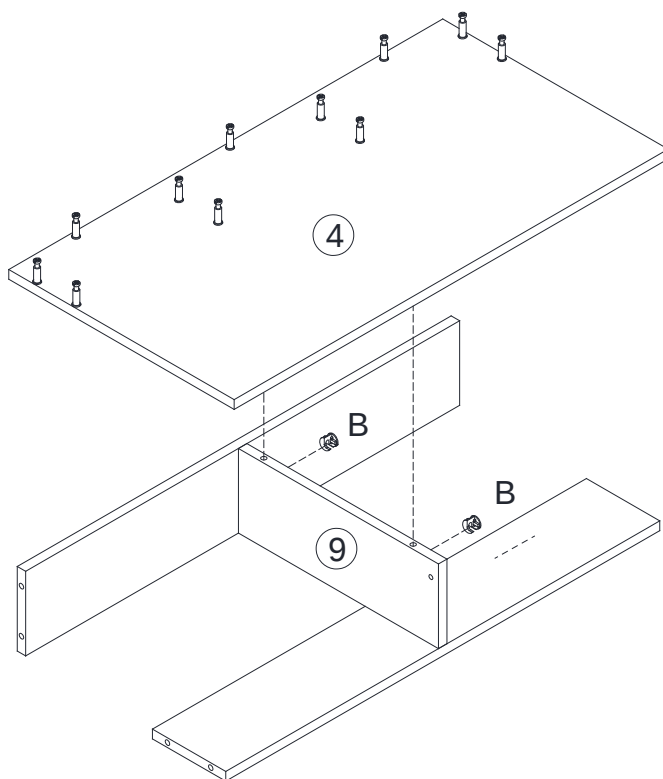


Step 09

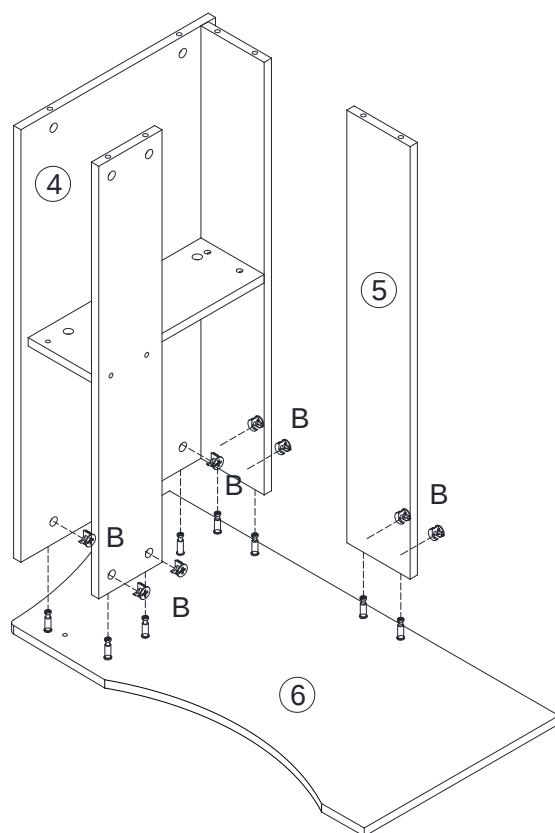


Step 10

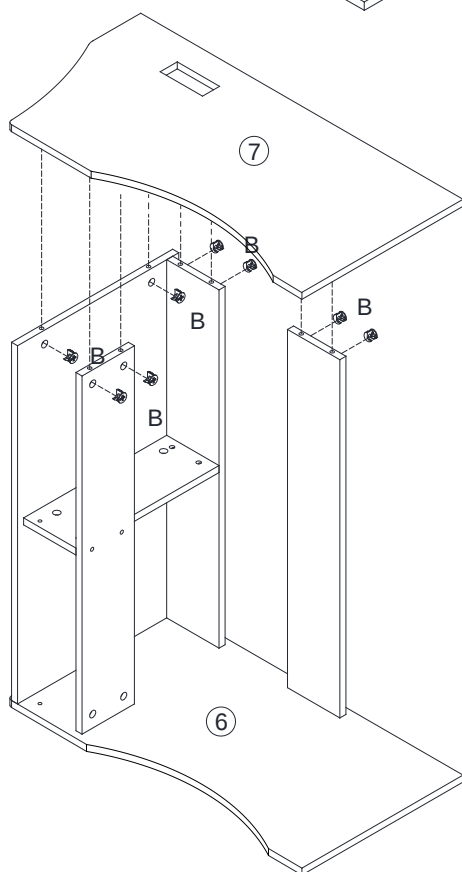


Step 11

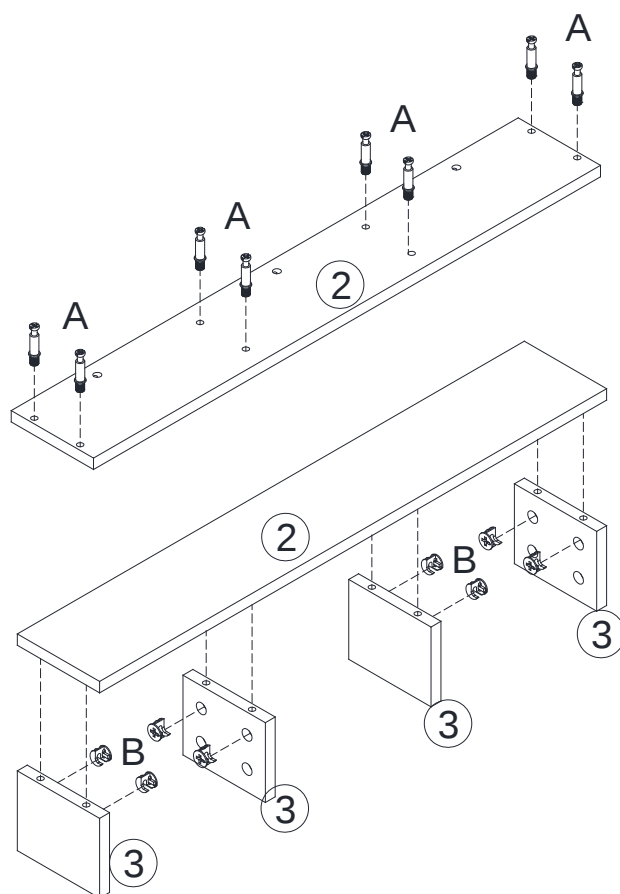


Step 12

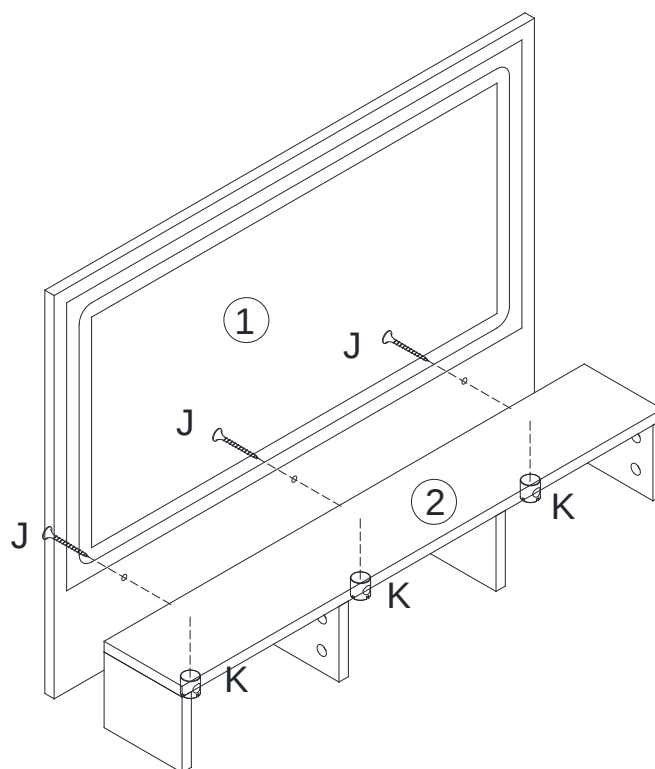


Step 13

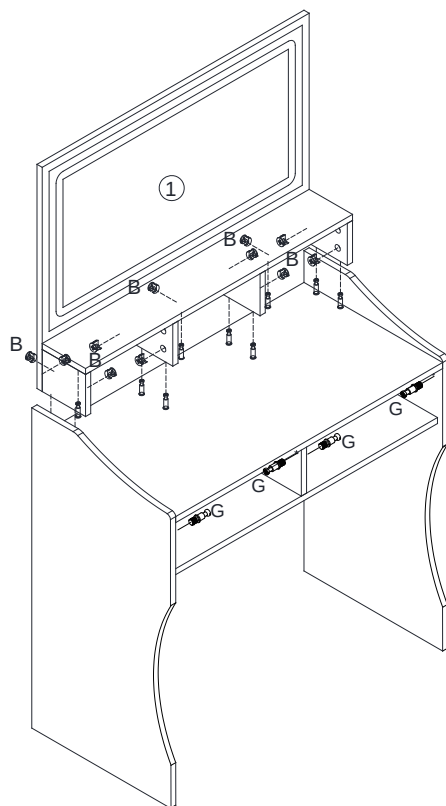

Step 14

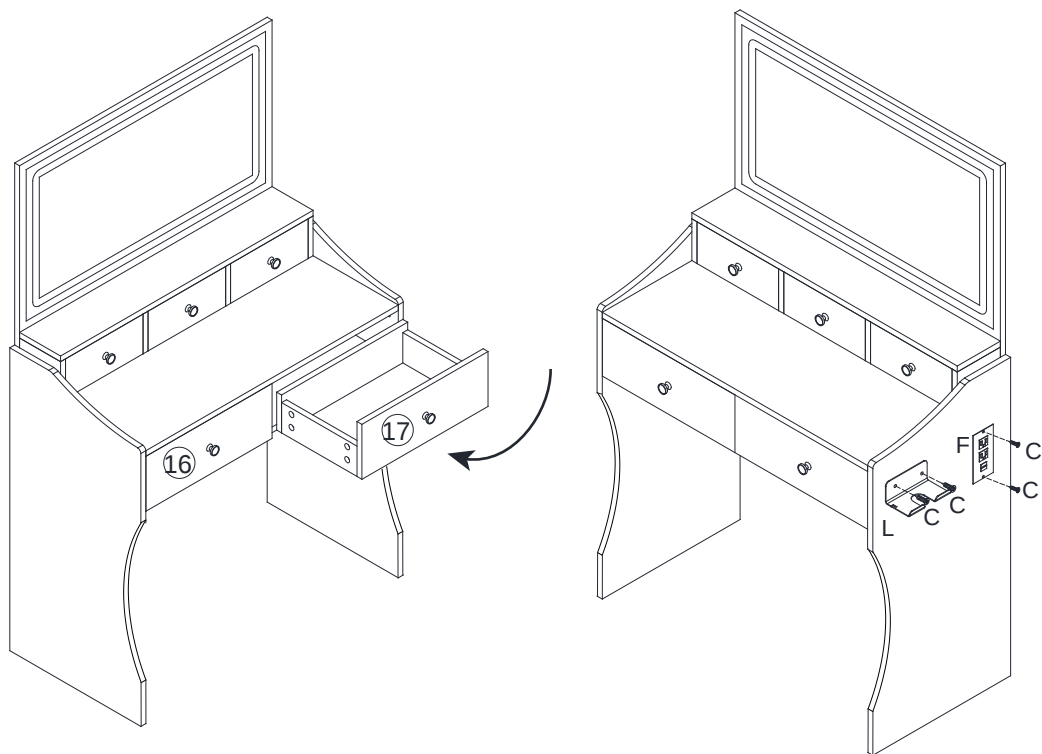

Step 15

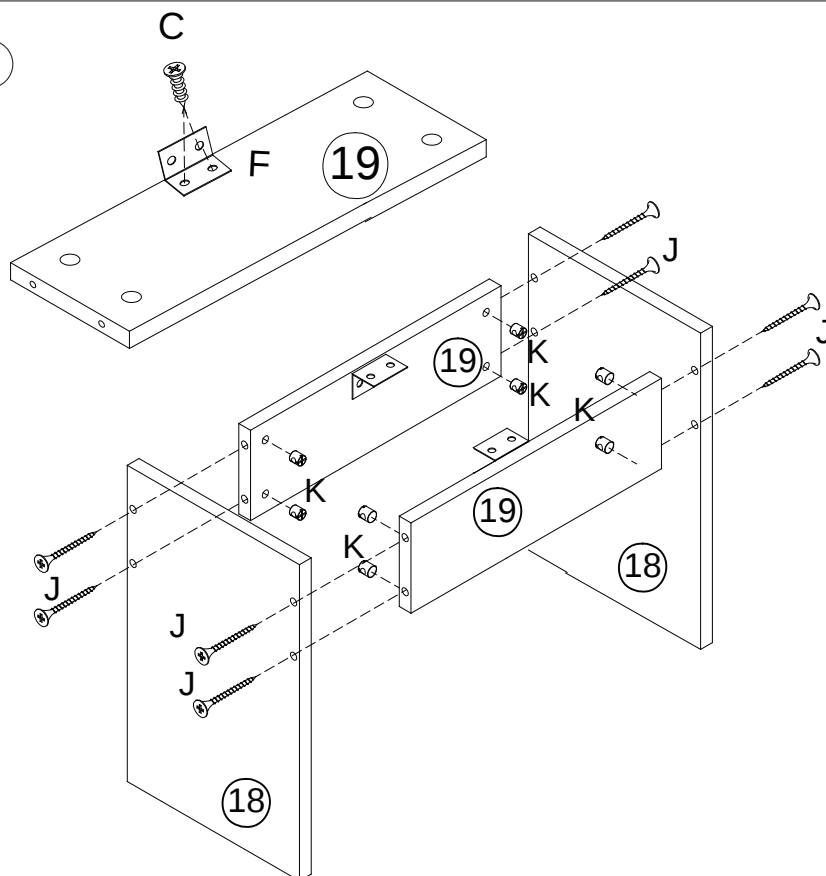

Step 16

