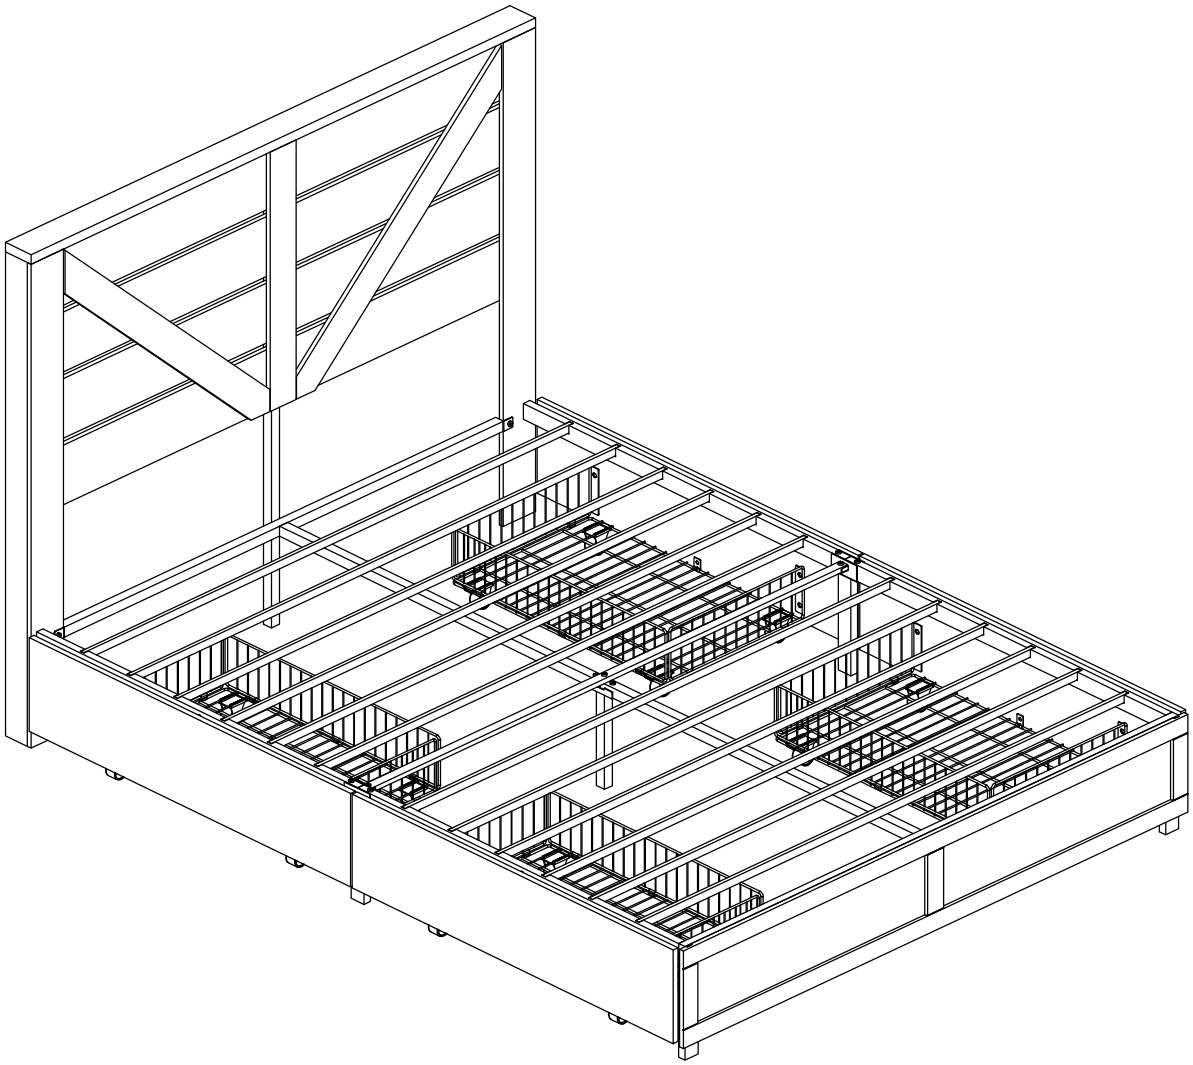
ASSEMBLY INSTRUCTIONS

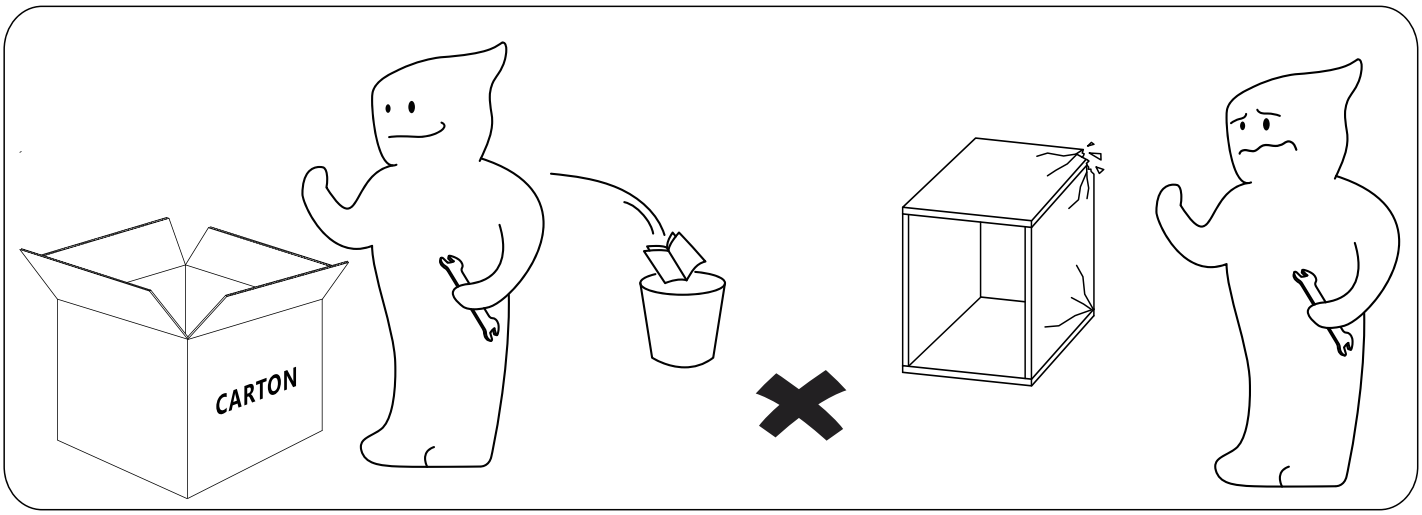


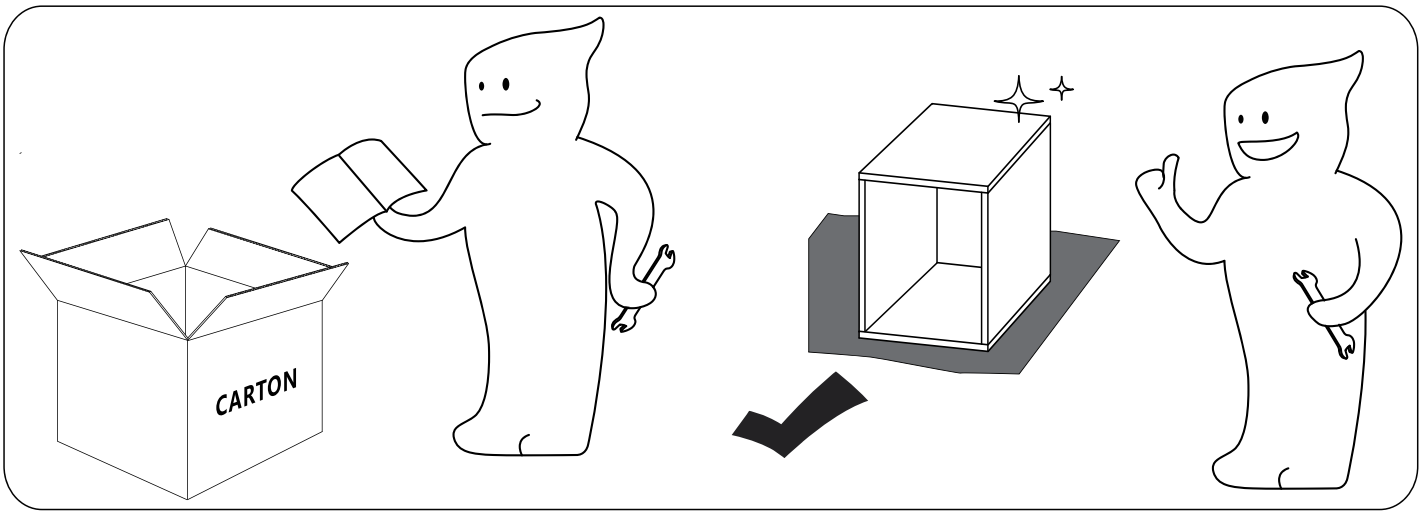
Dear Customers,
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.
MADE INCHINA

ASSEMBLY INSTRUCTIONS

IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.





























Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

For easier and better assembly, **2** or more adults are required.
















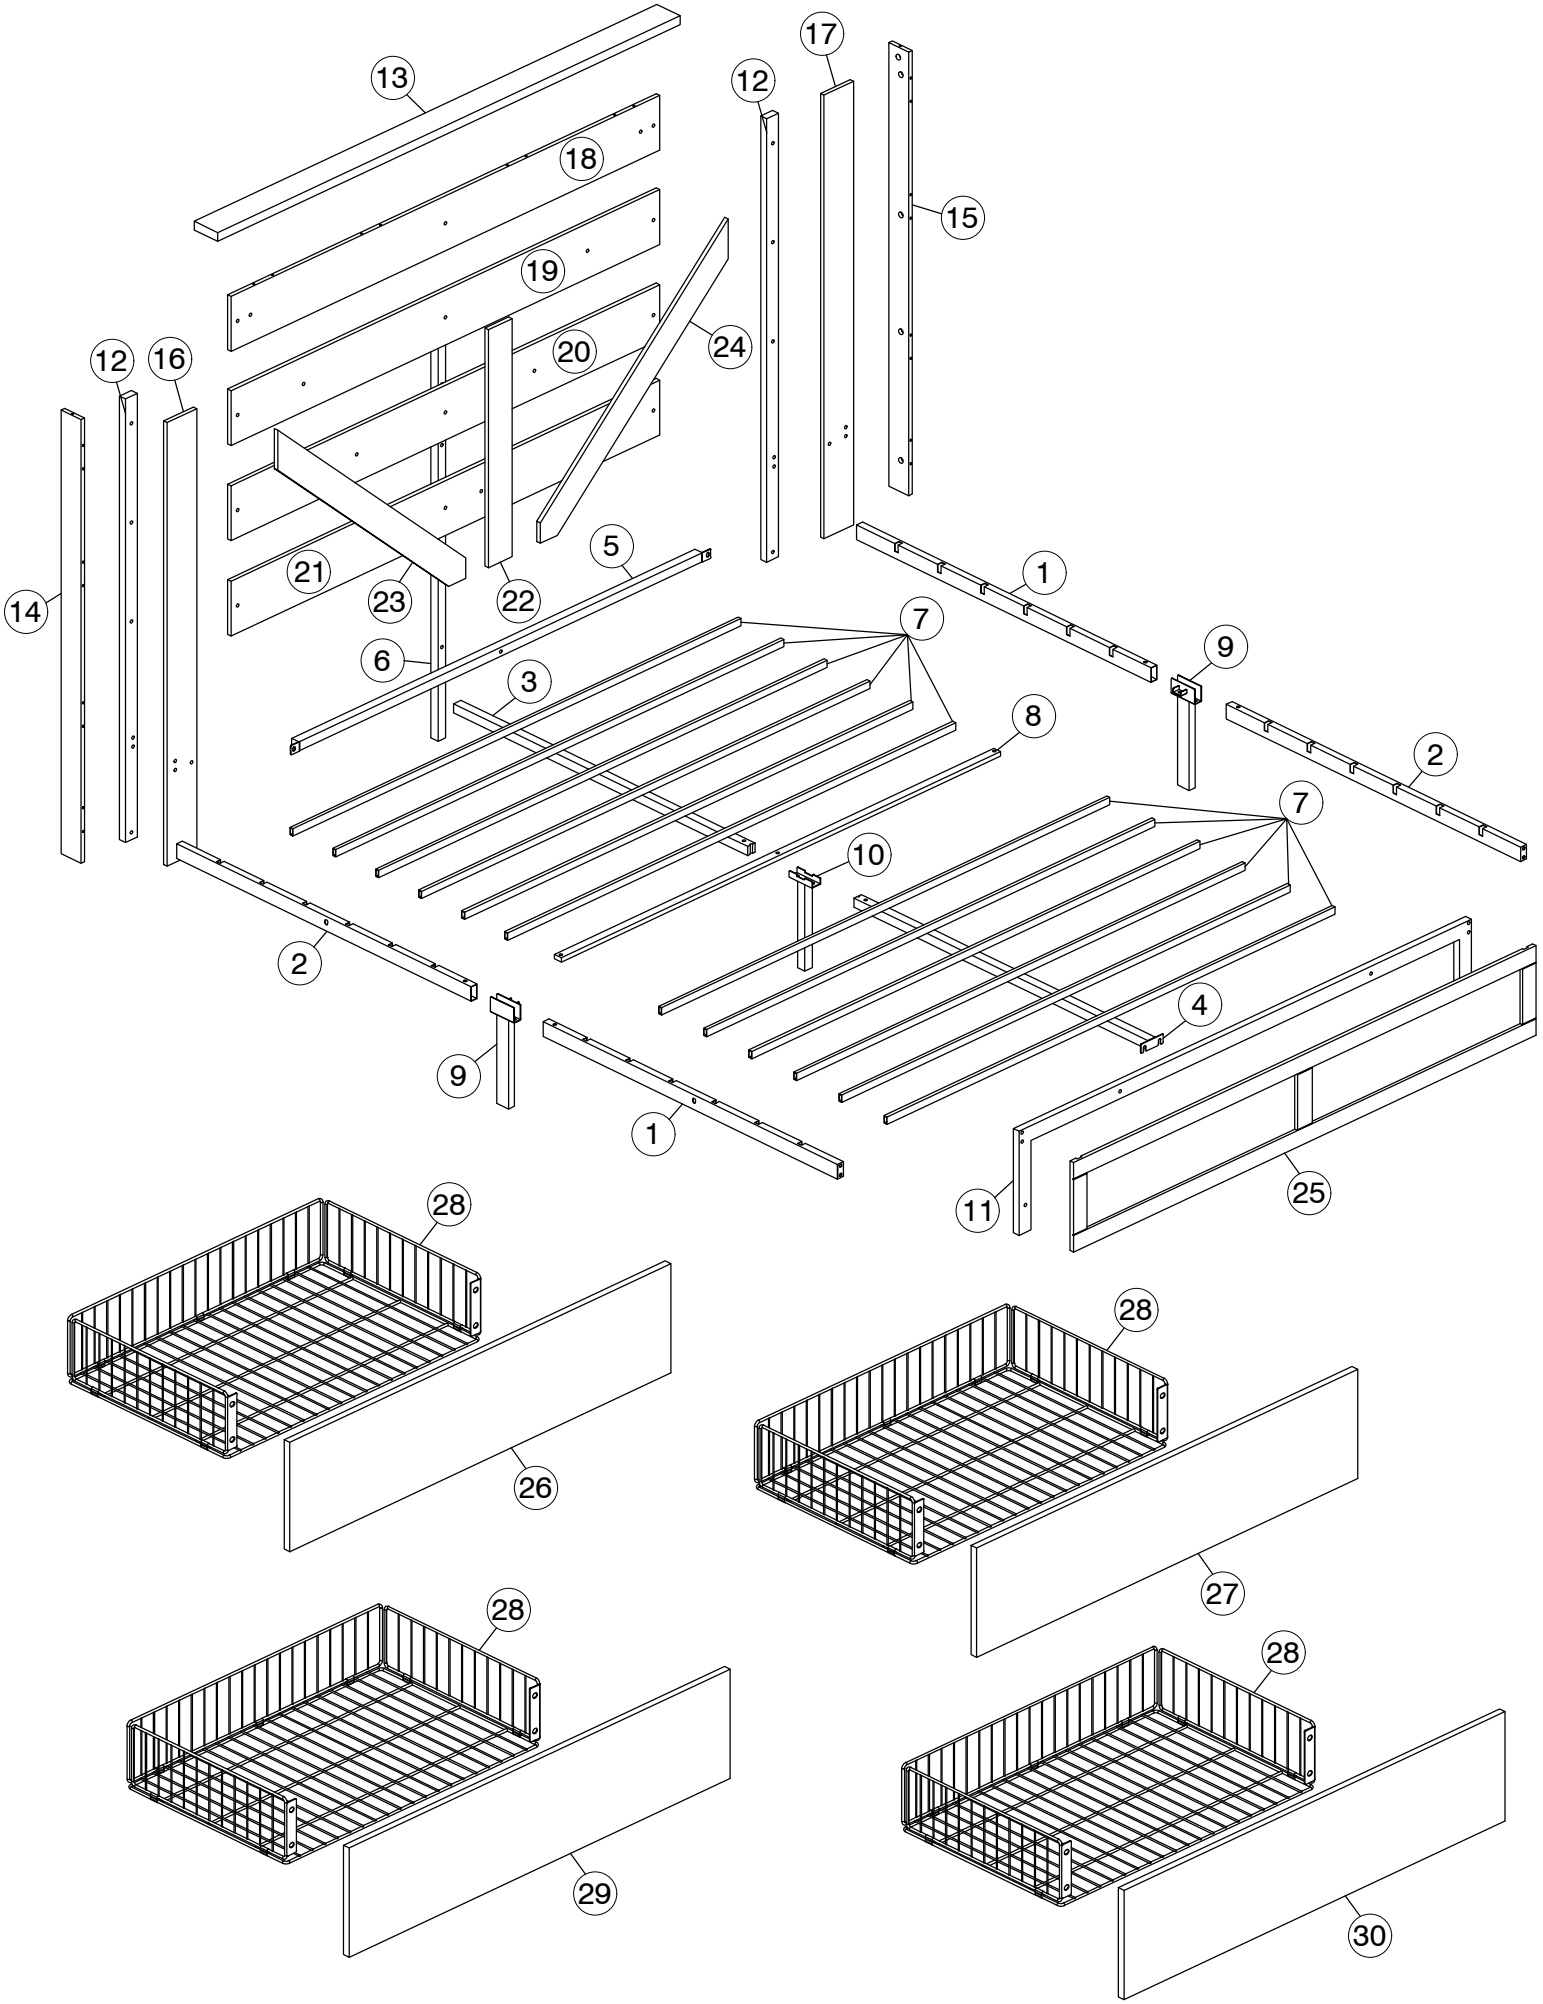
ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

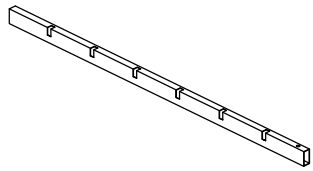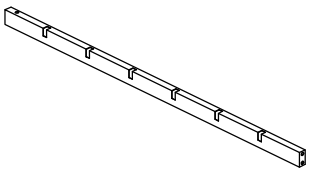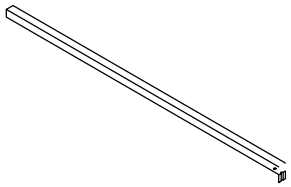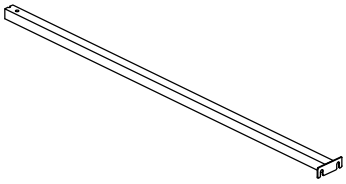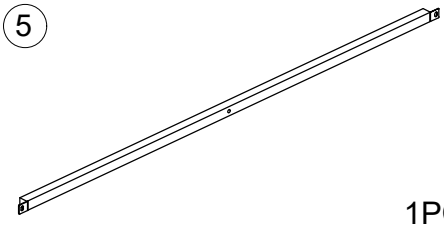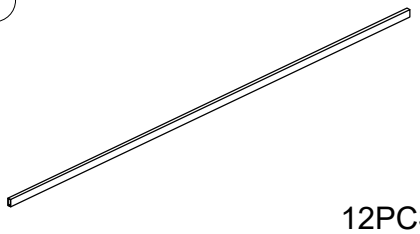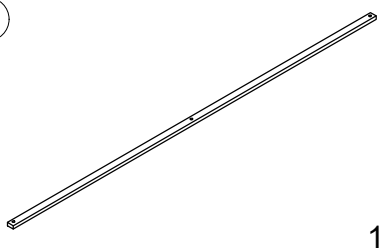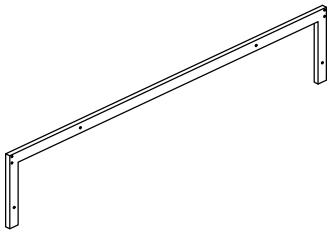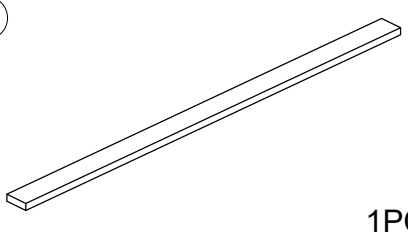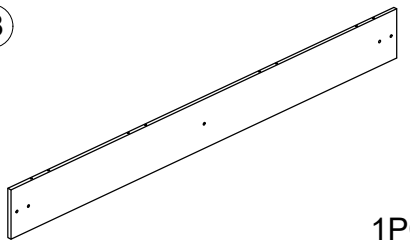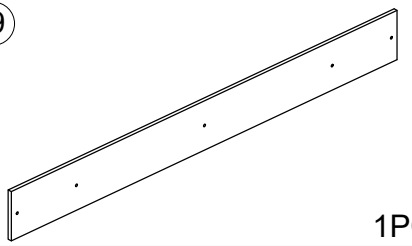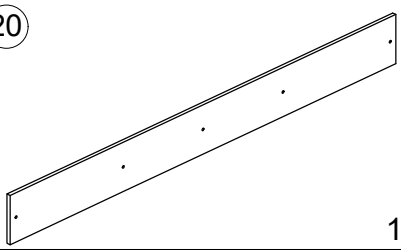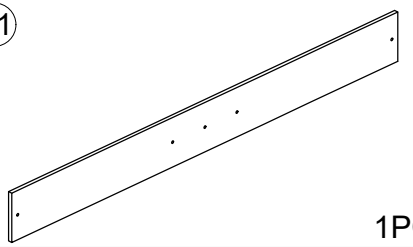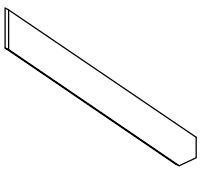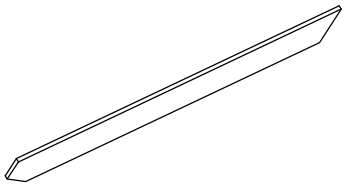
1  2PCS	2  2PCS	3  1PC
4  1PC	5  1PC	6  1PC
7  12PCS	8  1PC	9  2PCS
10  1PC	11  1PC	12  2PCS
13  1PC	14  1PC	15  1PC
16  1PC	17  1PC	18  1PC
19  1PC	20  1PC	21  1PC
22  1PC	23  1PC	24  1PC

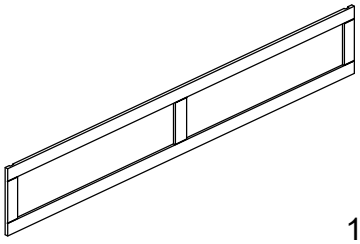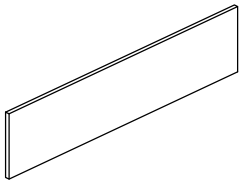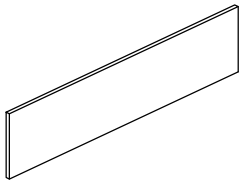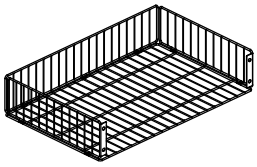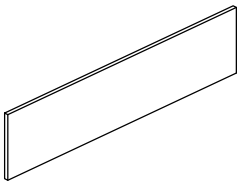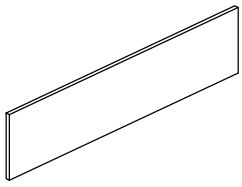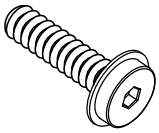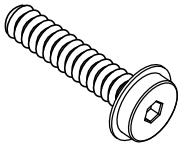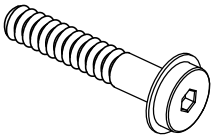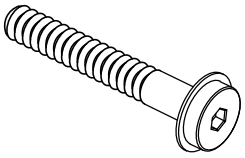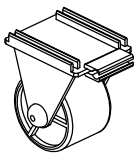
ASSEMBLY INSTRUCTIONS

25  1PC	26  1PC	27  1PC
28  4PCS	29  1PC	30  1PC
A  14PCS	B  14PCS	C  M8*12mm 28PCS+1PC
D  M8*20mm 18PCS+1PC	E  M8*30mm 12PCS+1PC	F  M8*45mm 12PCS+1PC
G  M8*50mm 4PCS	H  M8*65mm 5PCS	I  Ø6*30mm 12PCS
J  8PCS	K  16PCS	L  4PCS
M  M5 1PC		

ASSEMBLY INSTRUCTIONS

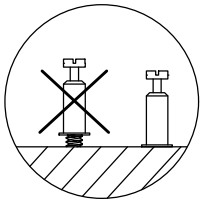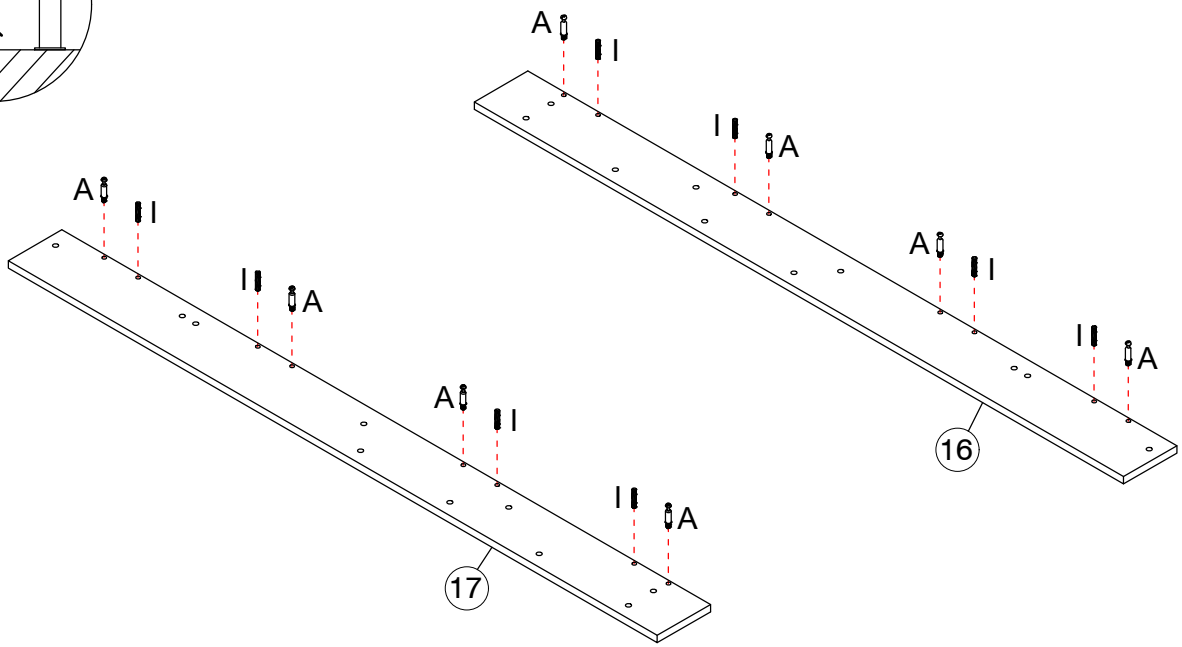
1





A		8PCS
I	Ø6*30mm	8PCS

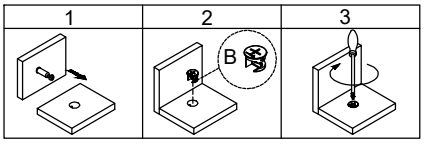
2



Please note the direction of the marked holes as shown in the figure.


B		8PCS

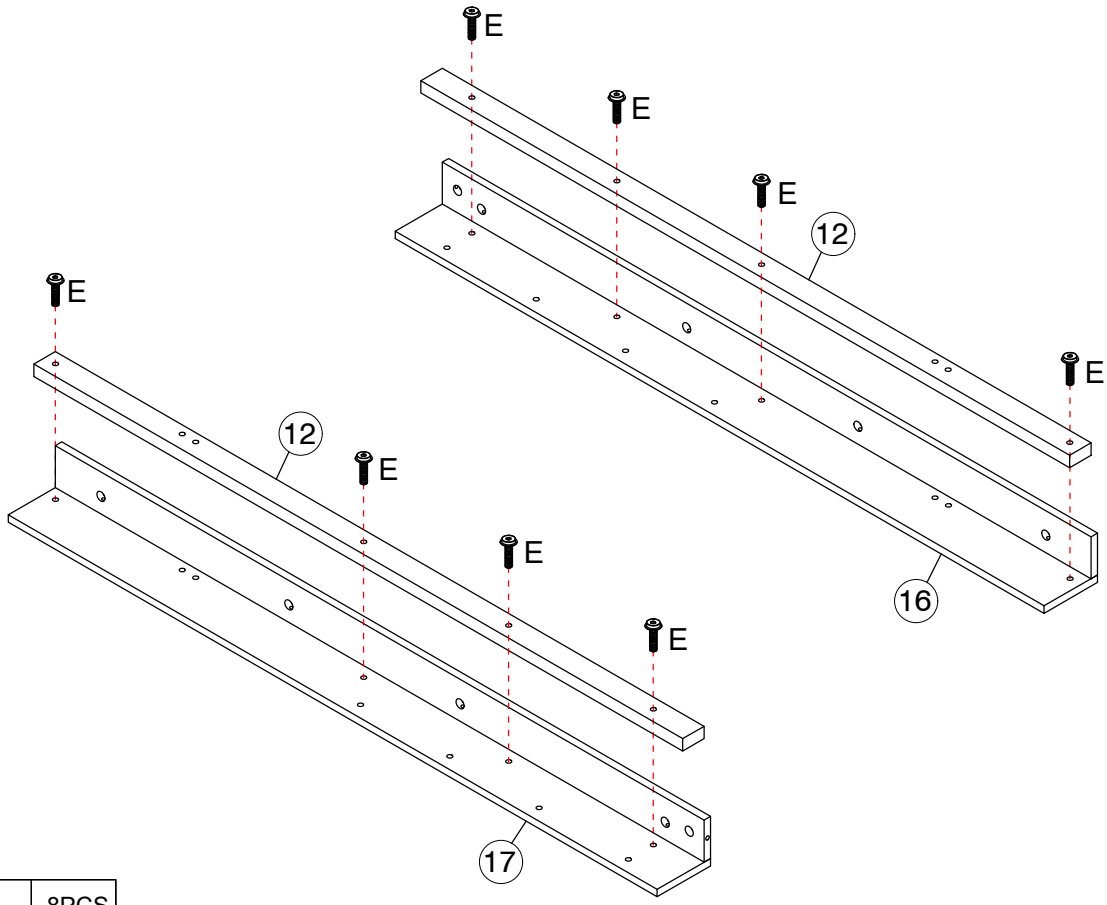3



E	M8*30mm	8PCS

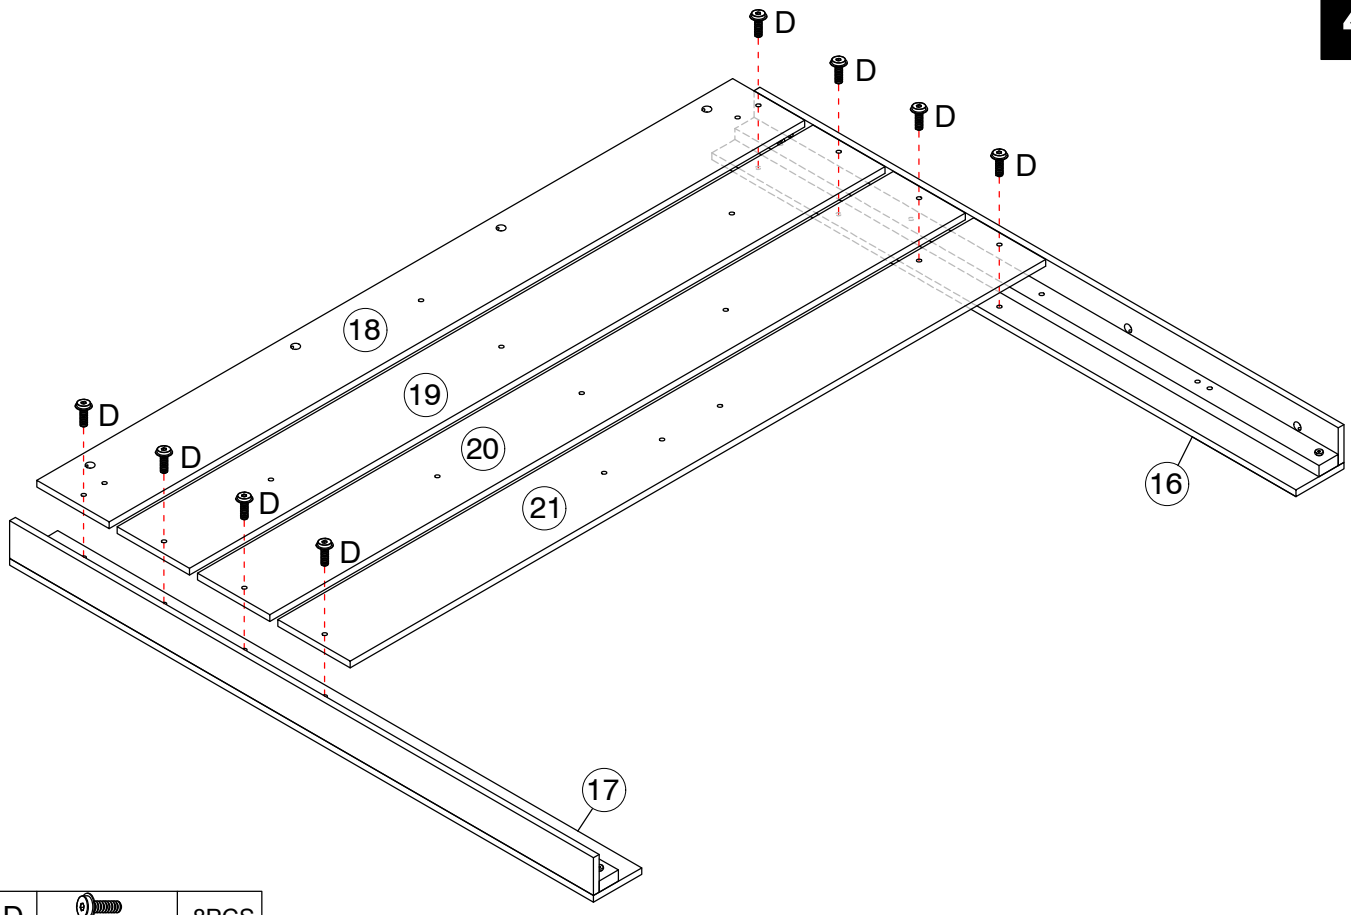
4




D	M8*20mm	8PCS

ASSEMBLY INSTRUCTIONS

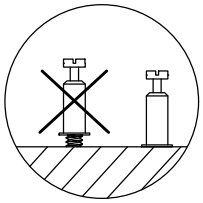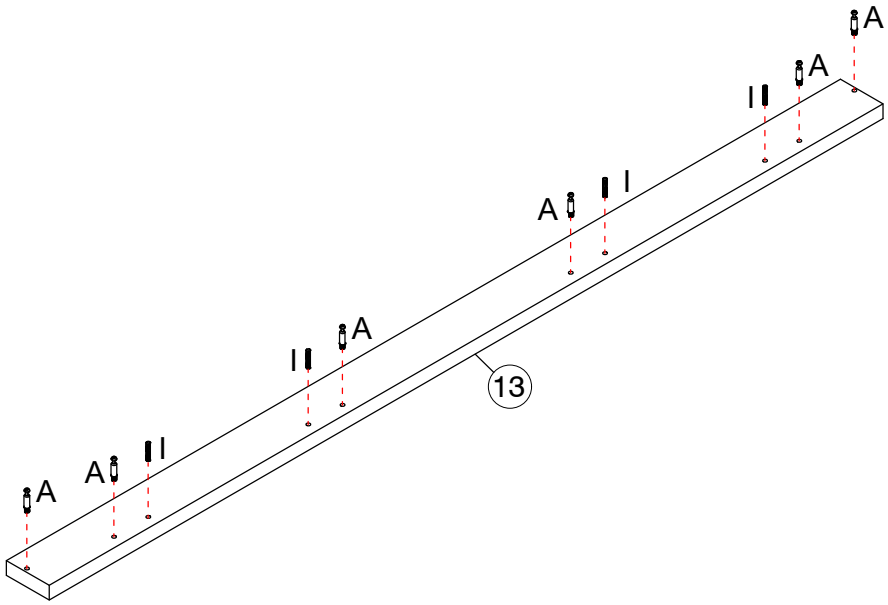
5






A		6PCS
I	Ø6*30mm	4PCS

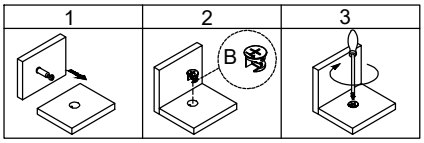6




B		6PCS

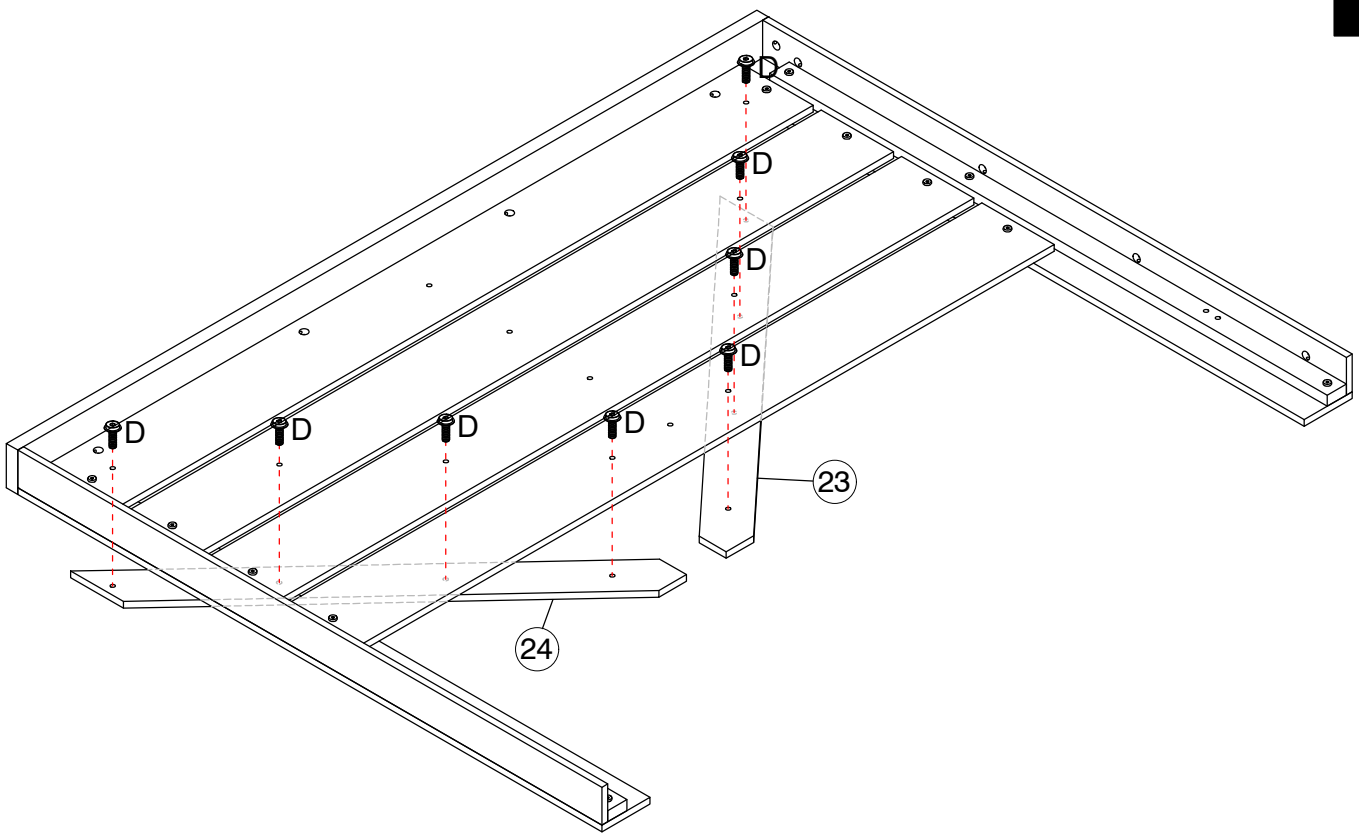7




D	M8*20mm	8PCS

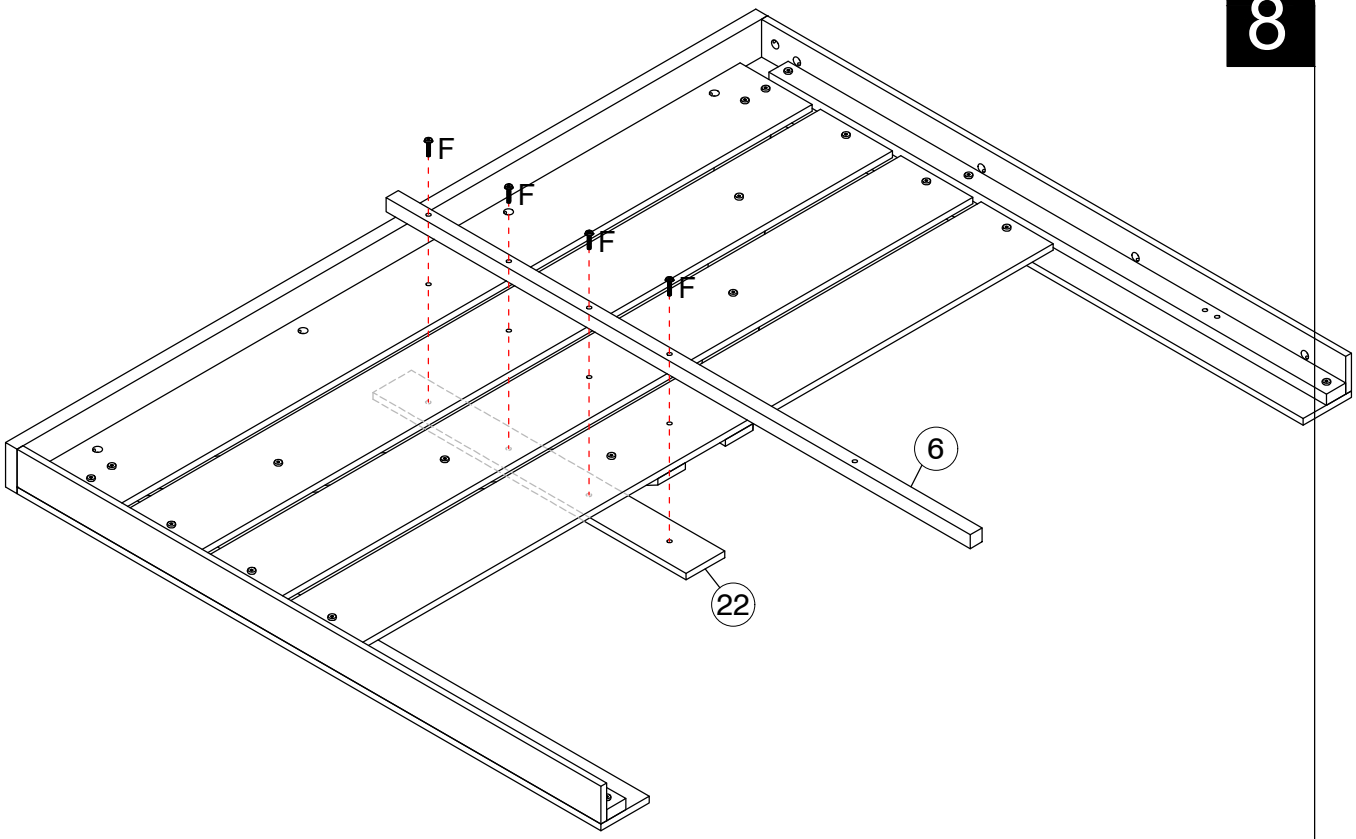8




F	M8*45mm	4PCS

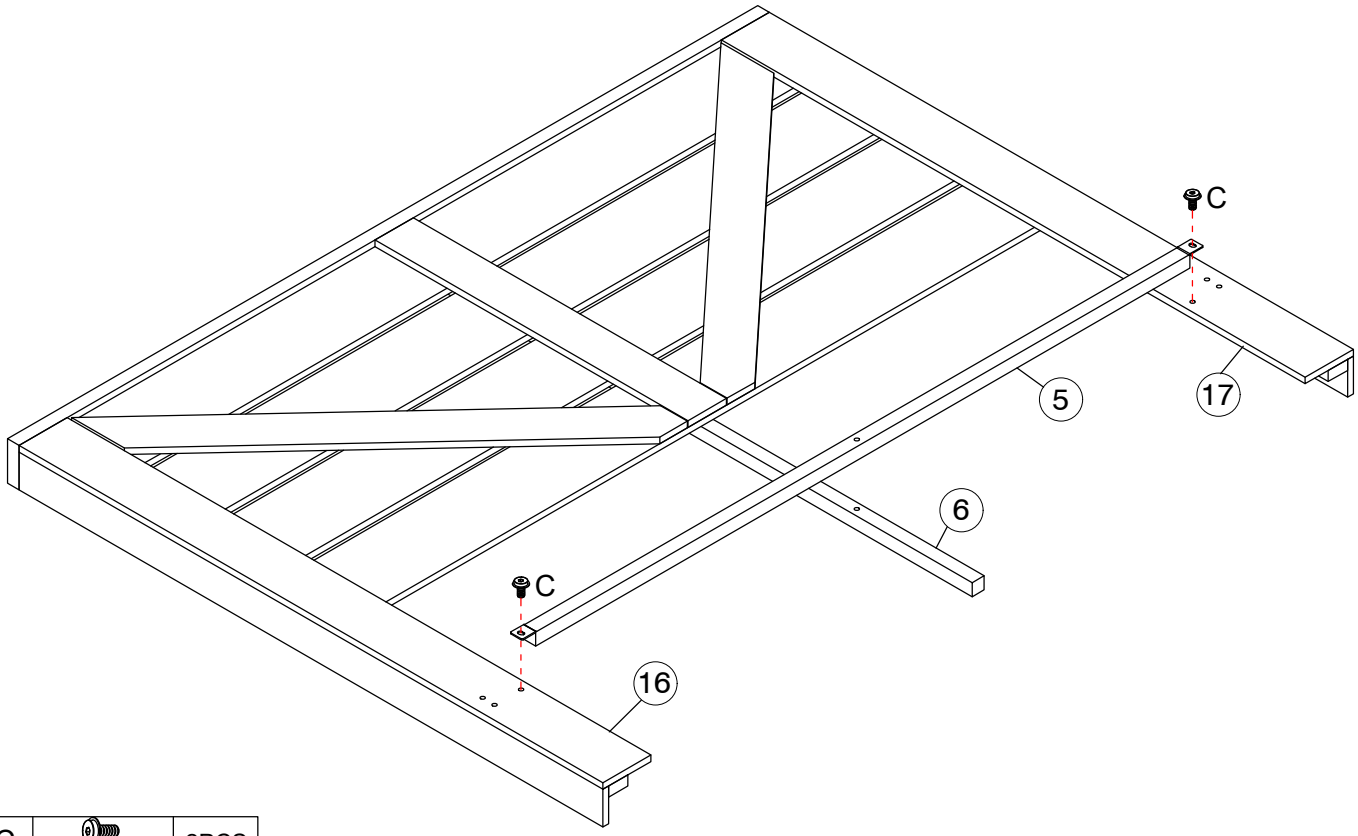9



C	M8*12mm	2PCS

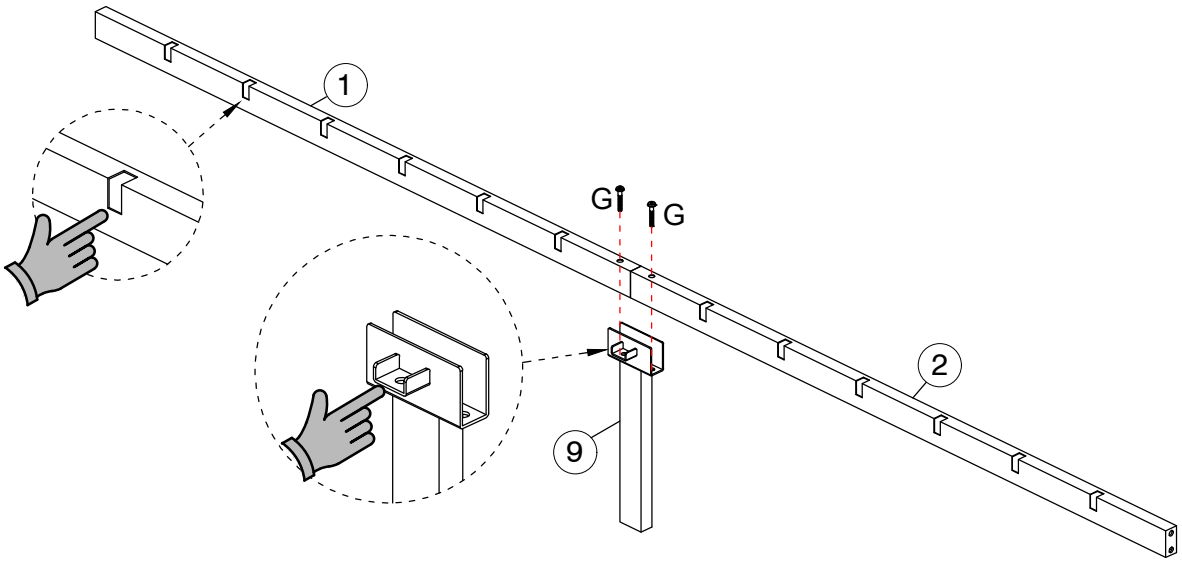10




G	M8*50mm	4PCS

Please note that the grooves on parts 1, 2, and 9 are facing the same direction.


x2

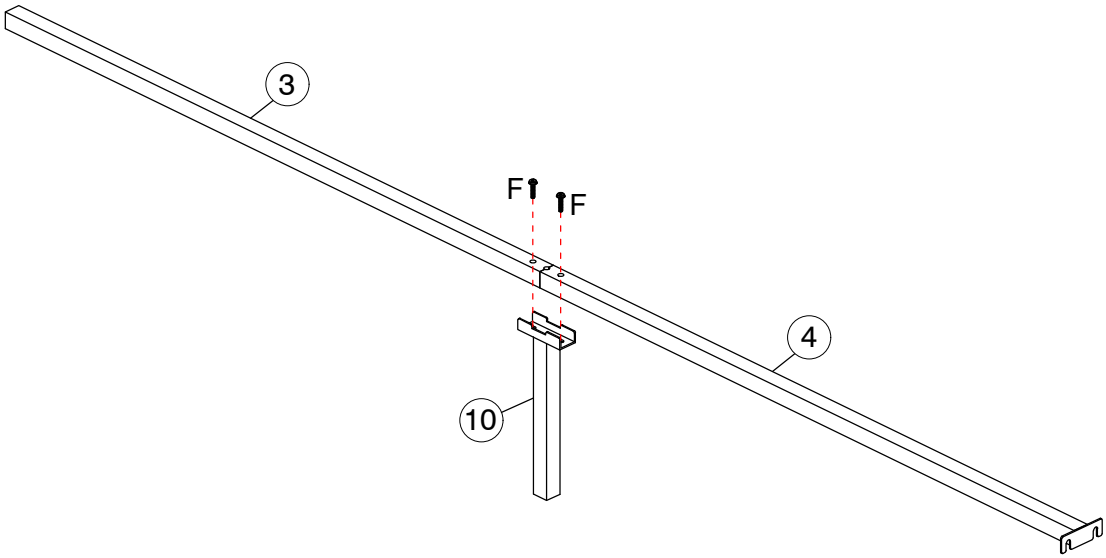11



F	M8*45mm	2PCS

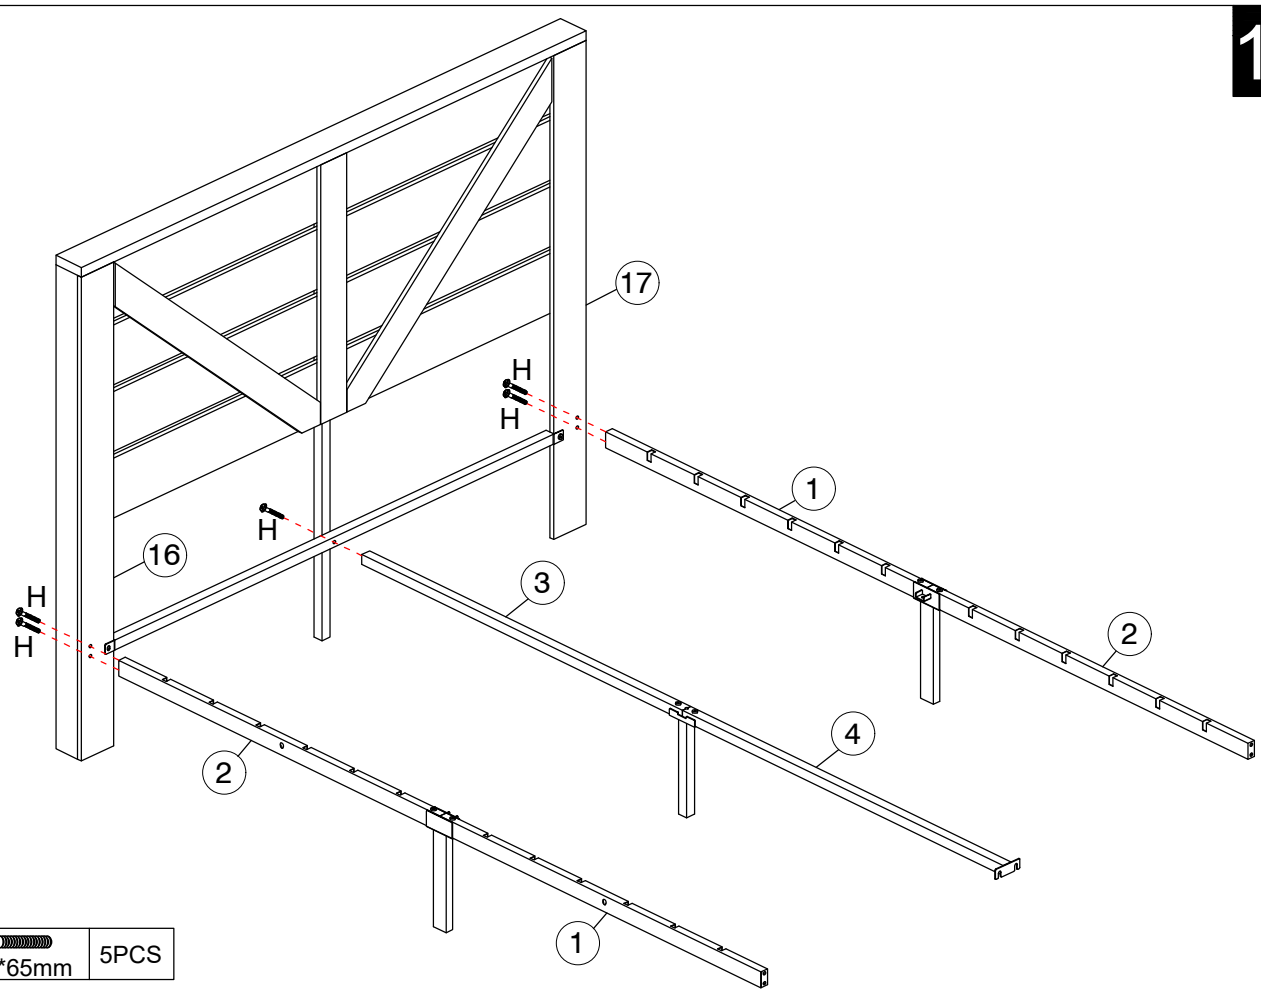
12



H	M8*65mm	5PCS


ASSEMBLY INSTRUCTIONS

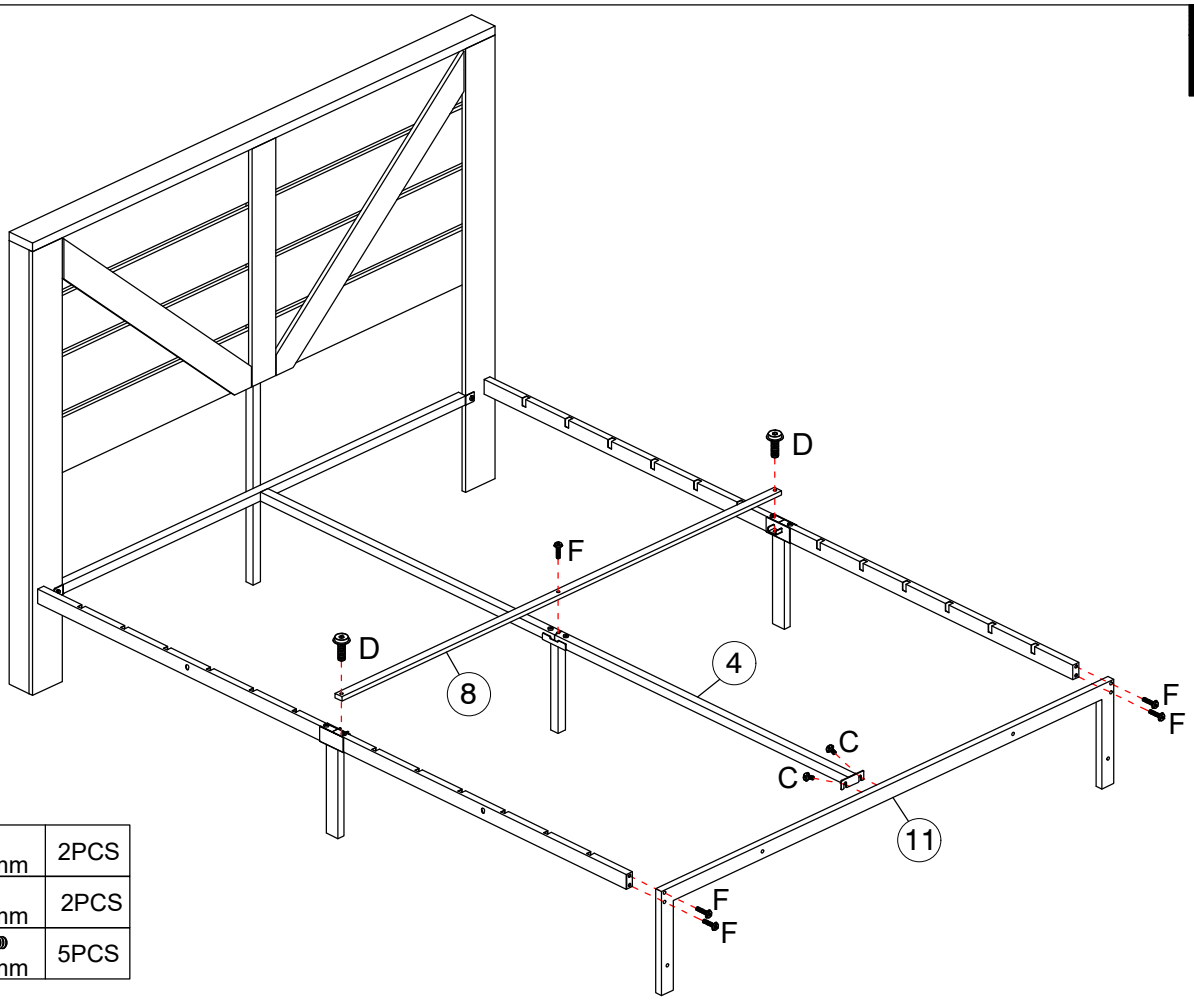13




C	M8*12mm	2PCS
D	M8*20mm	2PCS
F	M8*45mm	5PCS

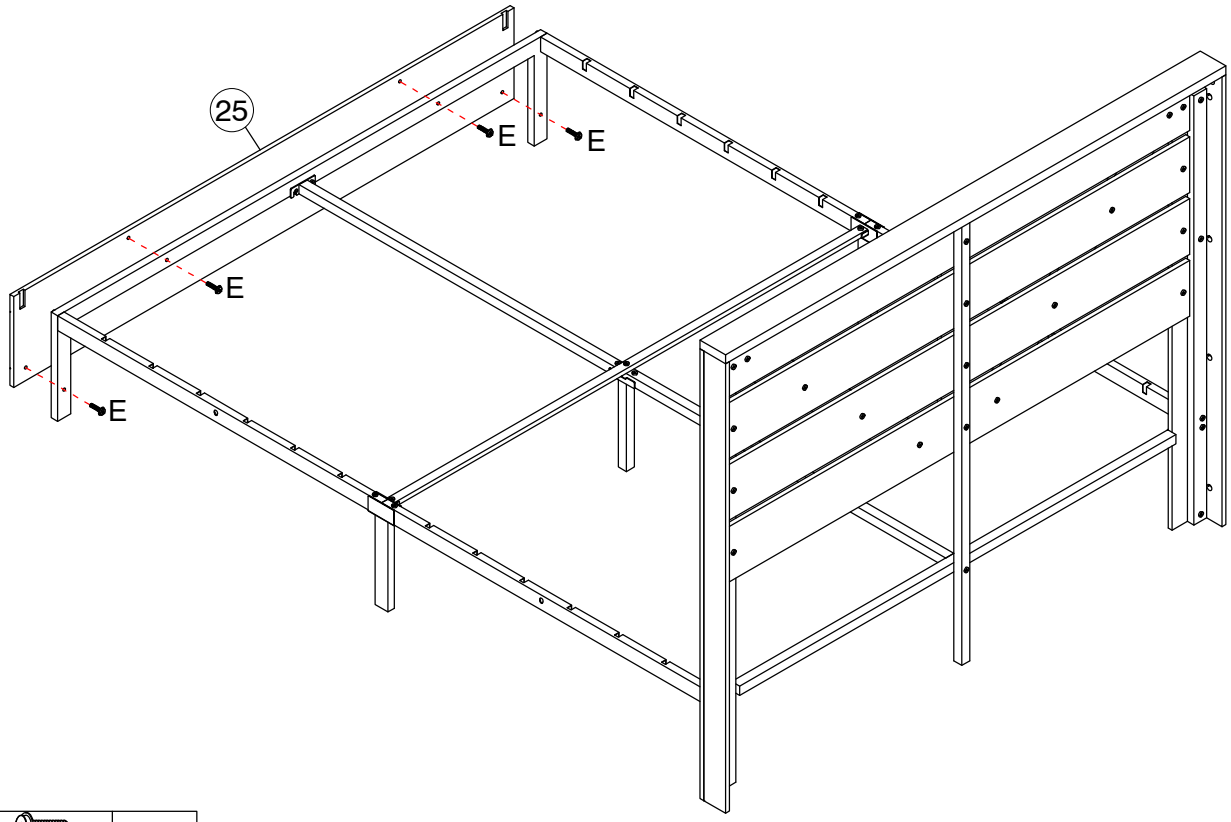14




E	M8*30mm	4PCS

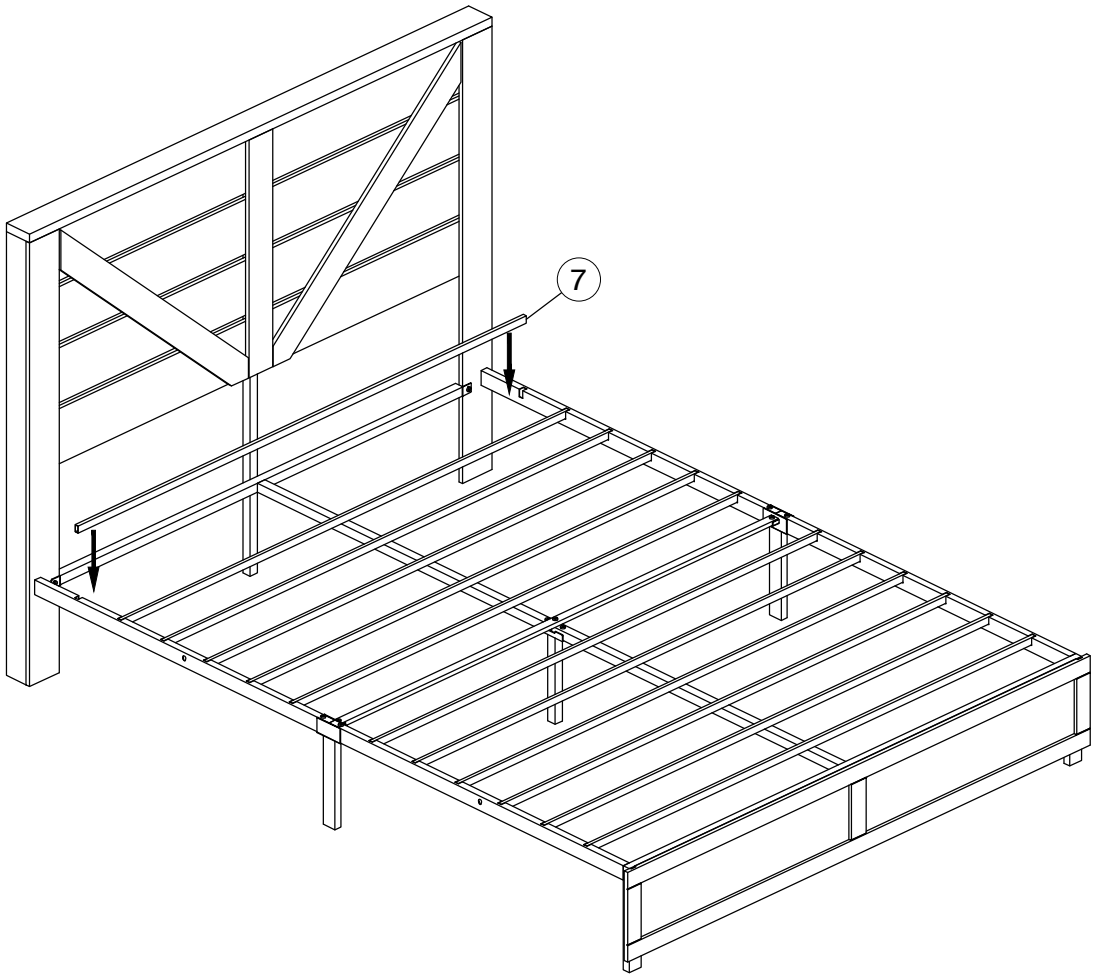
15




16

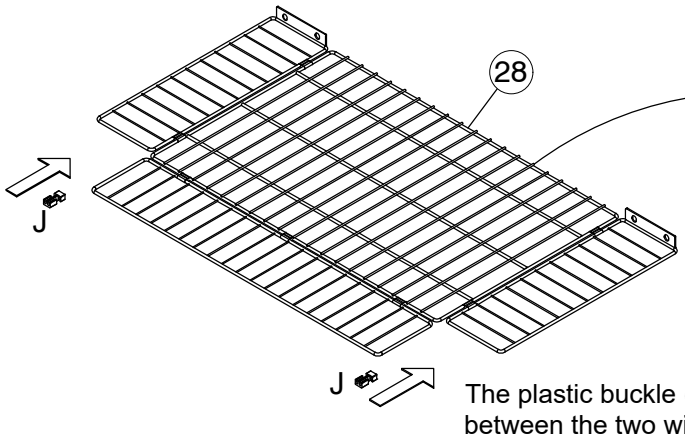

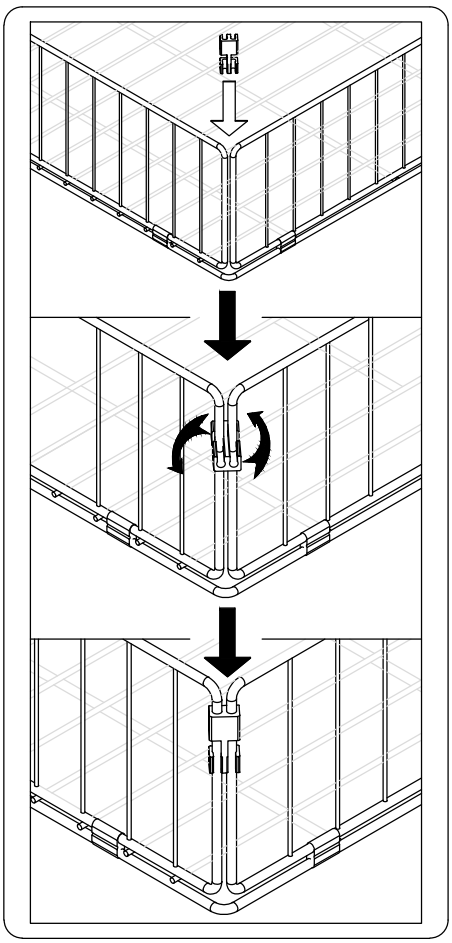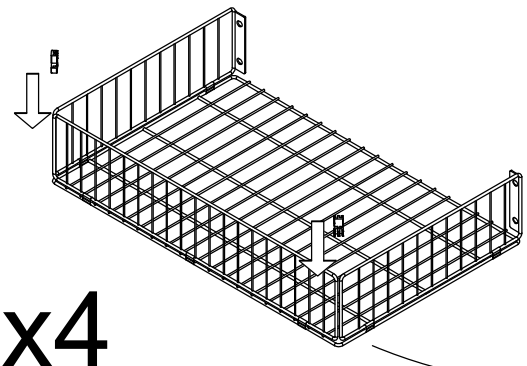The plastic buckle (J) is placed between the two wires as shown.







The plastic buckle rotates into wires.

x4

J		8PCS

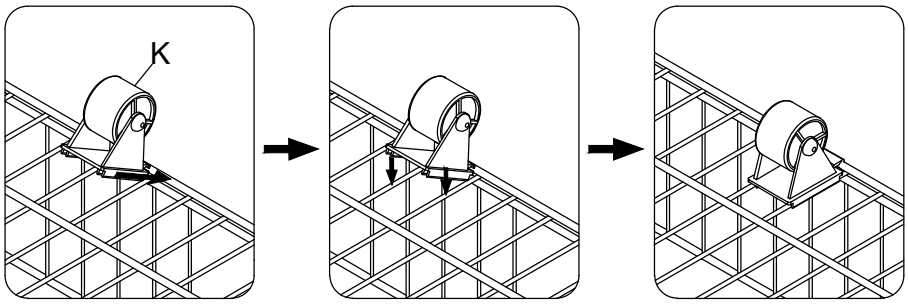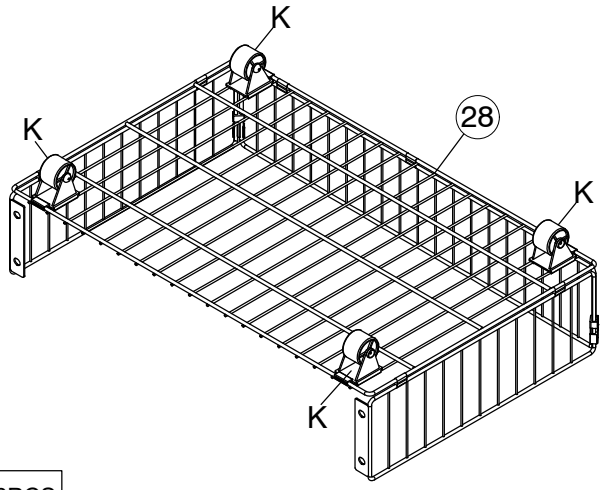17






K		16PCS

x4

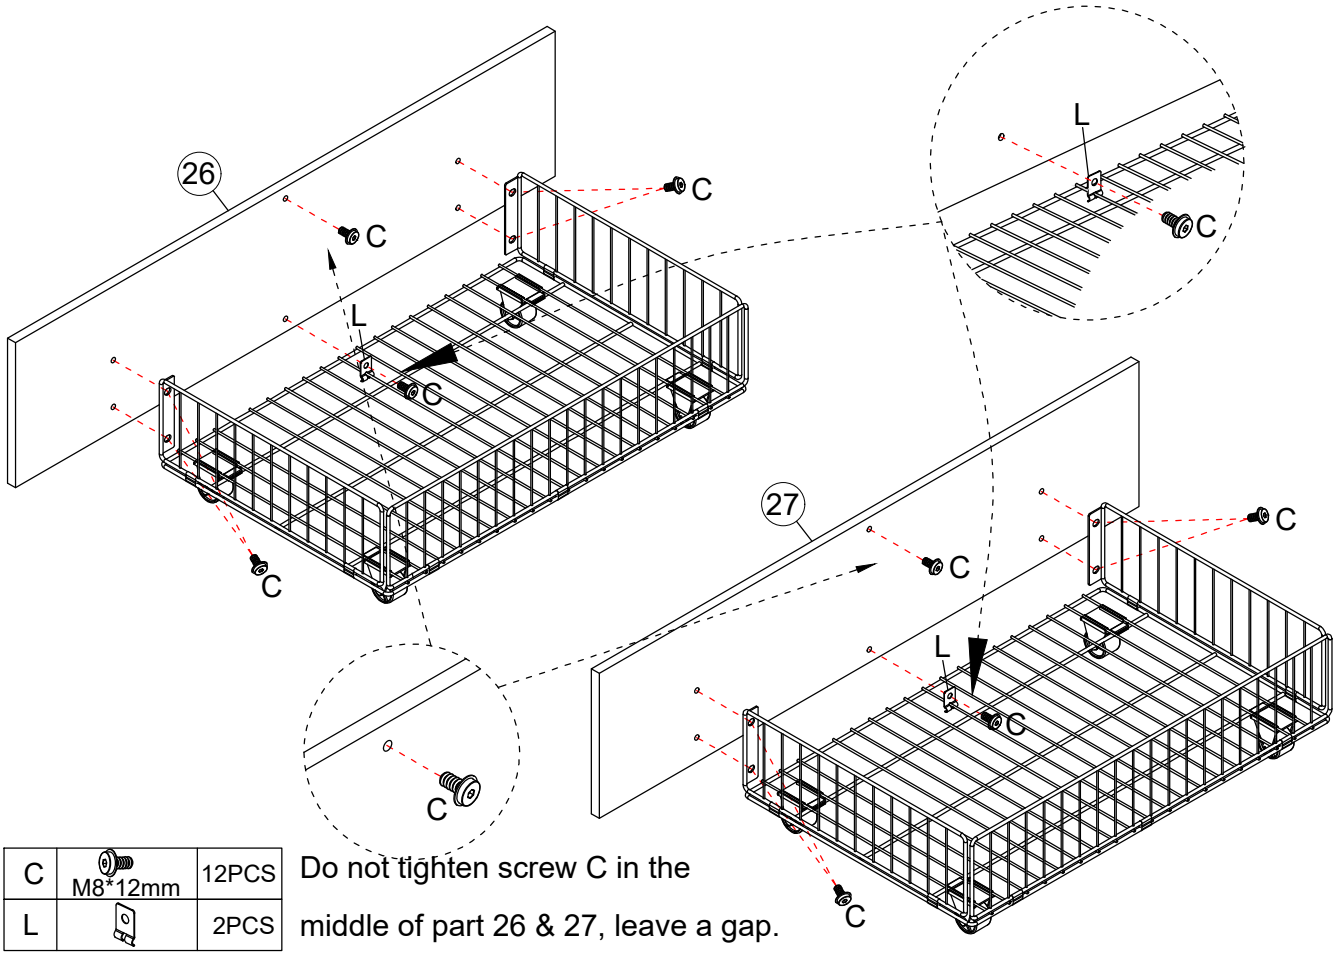
18



C	M8*12mm	12PCS
L		2PCS

Do not tighten screw C in the middle of part 26 & 27, leave a gap.

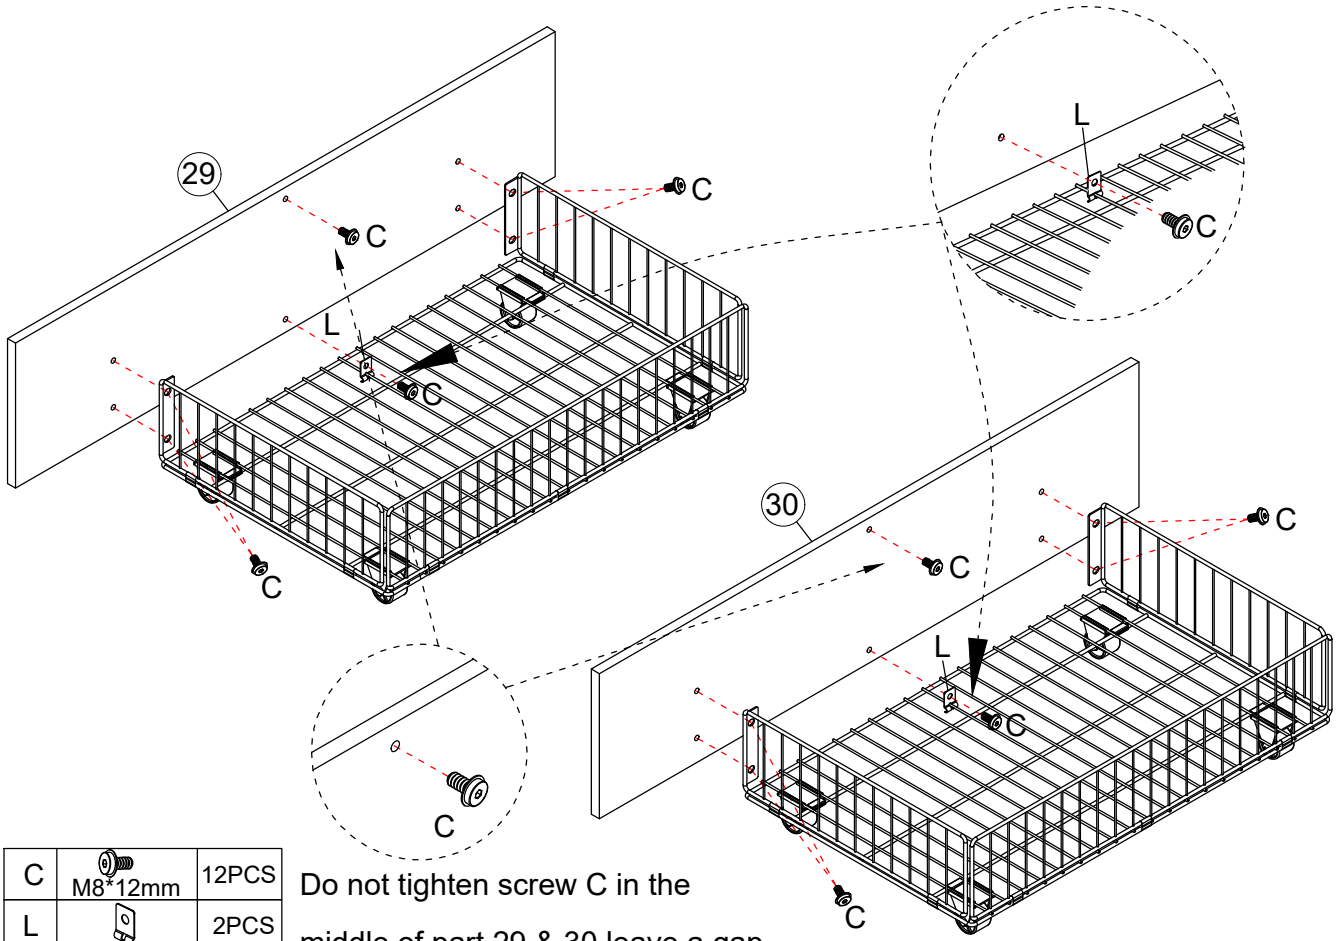
19



C	M8*12mm	12PCS
L		2PCS


Do not tighten screw C in the middle of part 29 & 30,leave a gap.

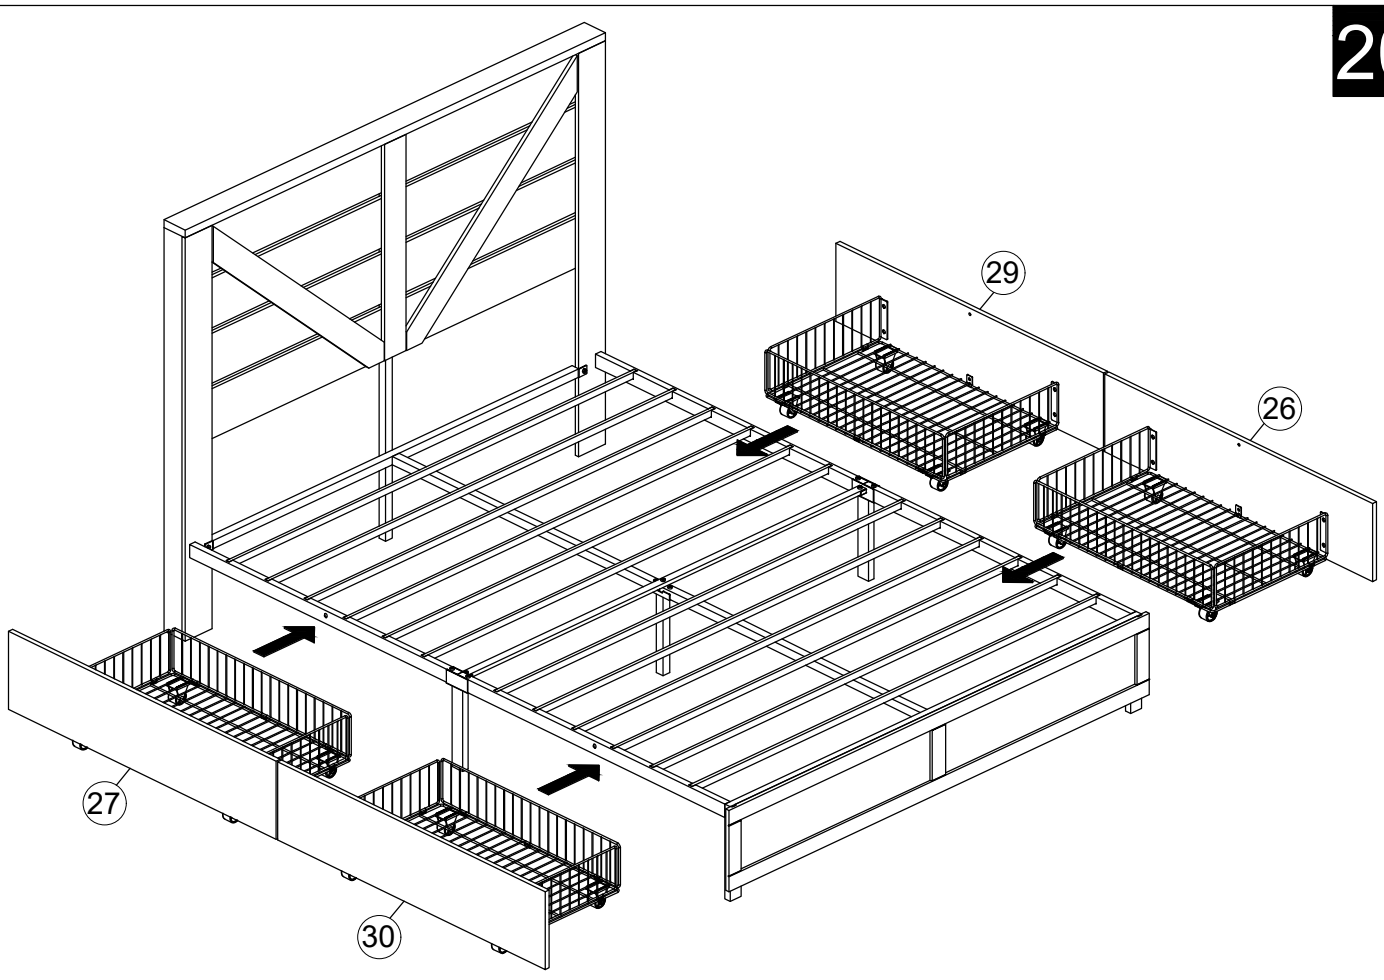20



21

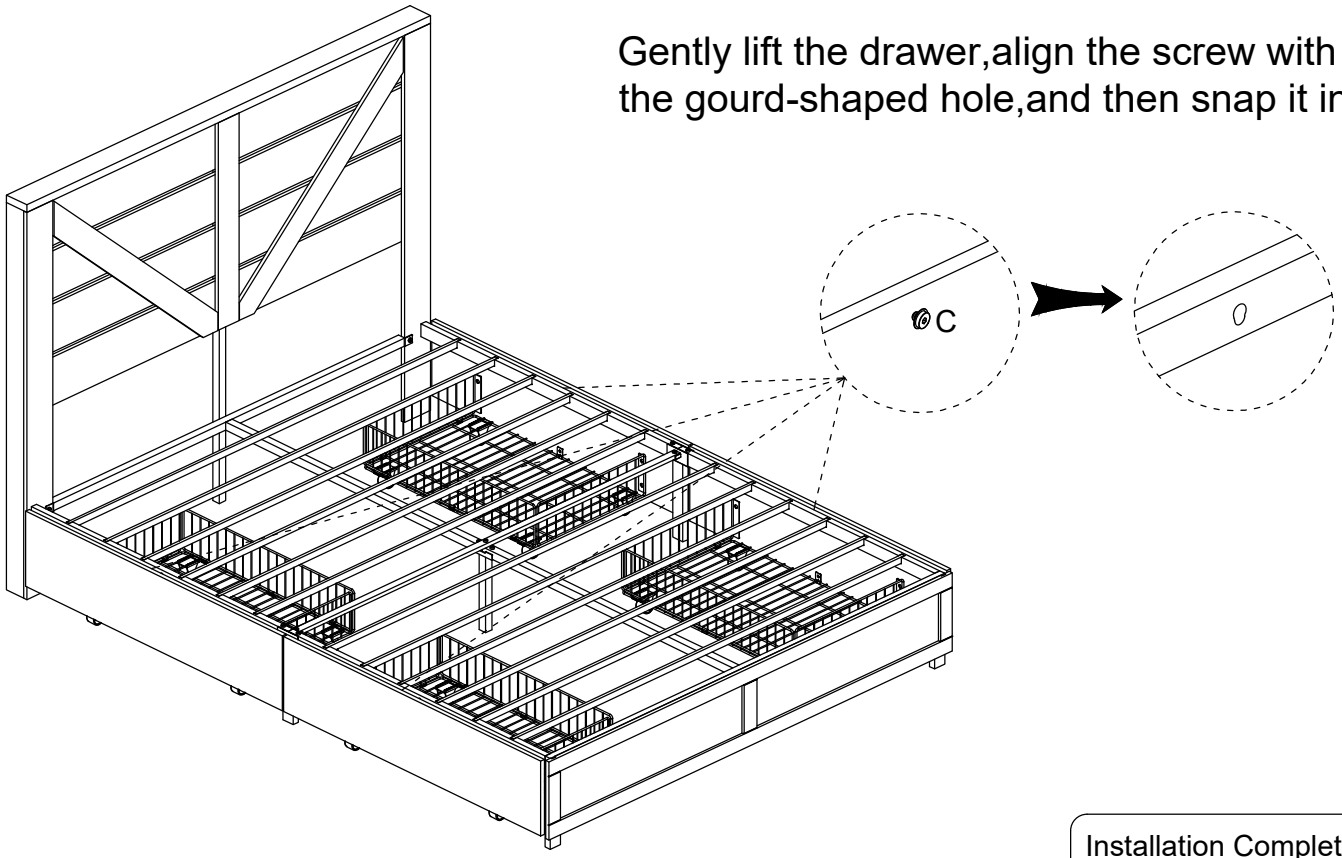Gently lift the drawer,align the screw with the gourd-shaped hole,and then snap it in.



Installation Complete