


Quilter's Wonder


Assembly Instructions

Base Assembly

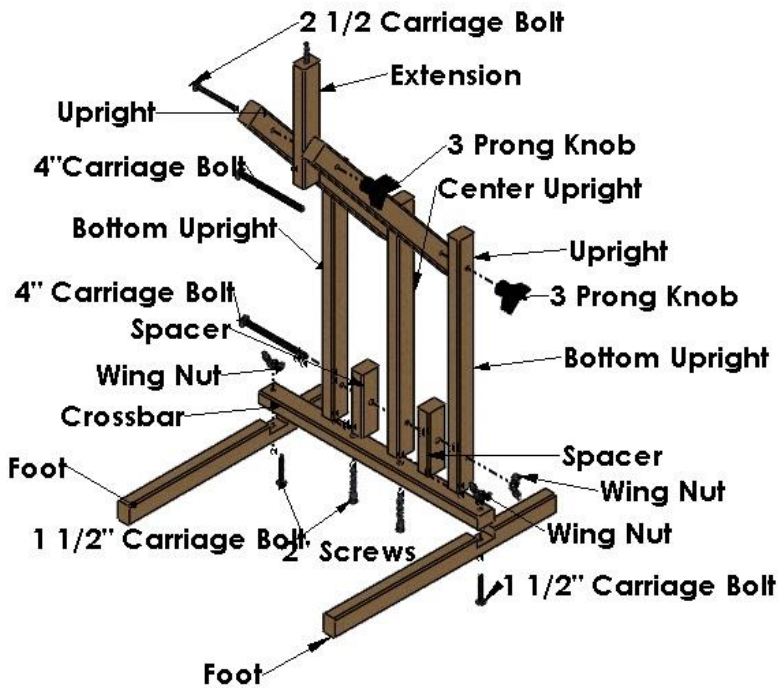



- 1) Position the Crossbar in the notched area of the feet and secure with 1 1/2" Carriage Bolt and Wing Nuts on both ends.
- 2) Insert 2" Screws through the Crossbar and into the ends of the Bottom Uprights. The Bottom Uprights have holes in the bottom.
- 3) Position two Spacers and one Center Upright between the Bottom Uprights which were attached to the Crossbar in Step 2.
- 4) Insert 4" Carriage bolt through all the Uprights and Spacers. Secure with a Wing Nuts.
- 5) Position the remaining two Uprights between the three Uprights now Attached. Insert 4" Carriage Bolt and secure with a 3 Prong Knob.
- 6) Place the Extension between the Uprights bolt side up. Secure with 2 1/2" Carriage Bolt and a 3 Prong Knob.

Yoke Assembly

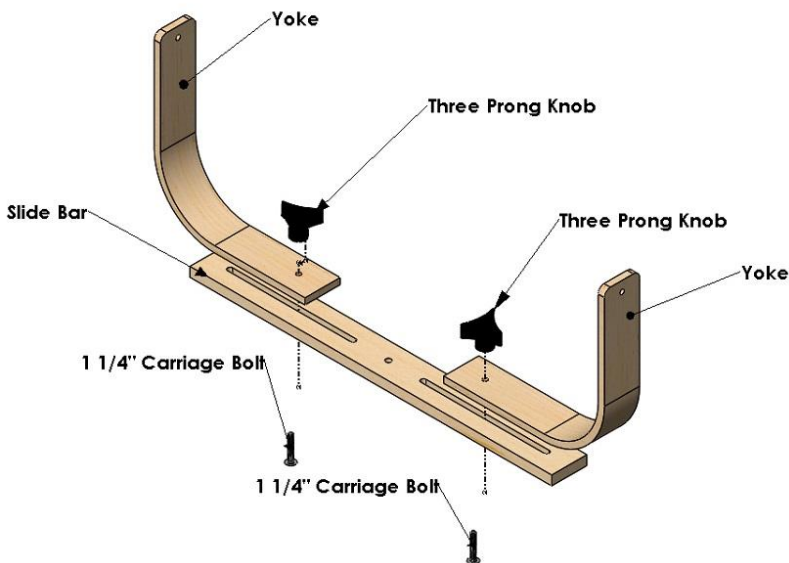

Yoke Assembly

- 1) Position one Yoke onto the Slide Bar with the square corners down and secure with a 1 1/4" Carriage Bolt and 3 Prong Knob. Do not tighten.
- 2) Repeat on opposite side.

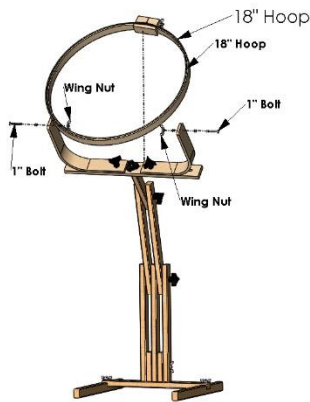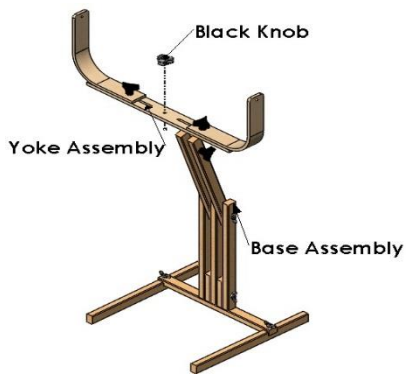

Wood Parts List



Final Assembly

- 1) Attach the Yoke Assembly to the Base Assembly by inserting the bolt in the Extension through the center hole in the Slide Bar.
- 2) Secure with the Large Knob
- 3) Attach the Hoop Assembly to the Yoke Assembly by inserting two 3/4" Carriage Bolts through the holes in the Inner Hoop and secure with Wing Nut.



Hardware Parts List

