

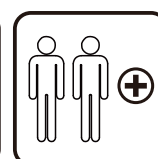
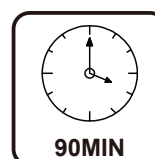
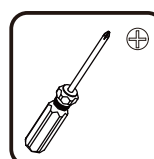
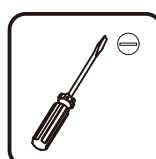


Installation & Assembly


Version: 1.0

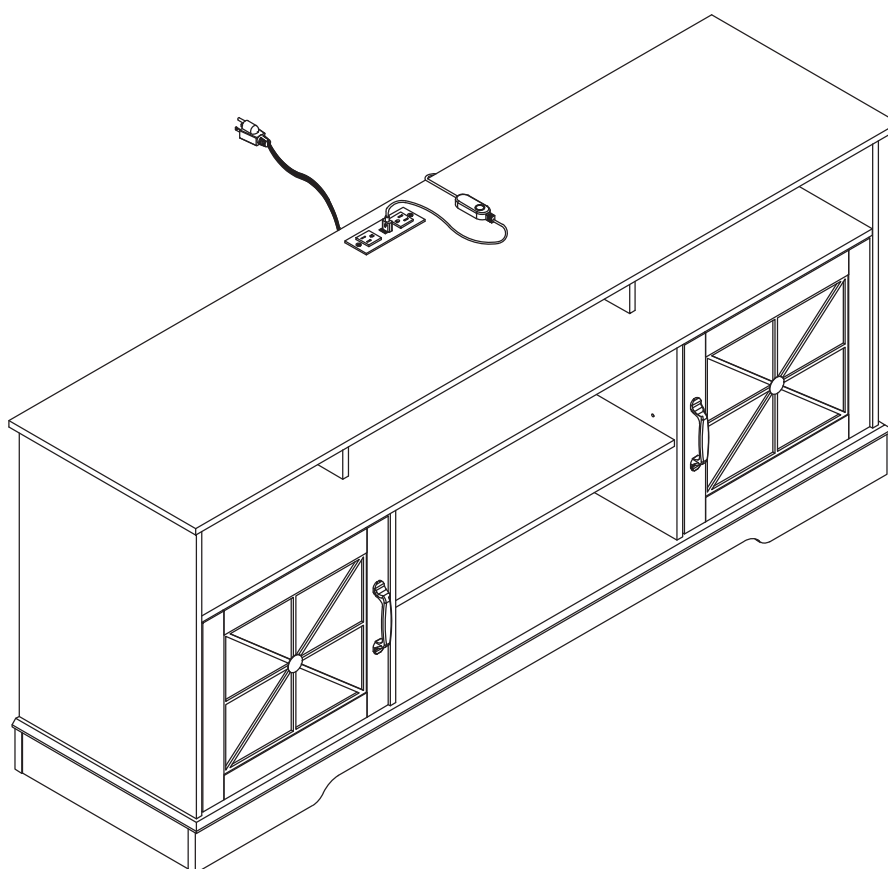


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

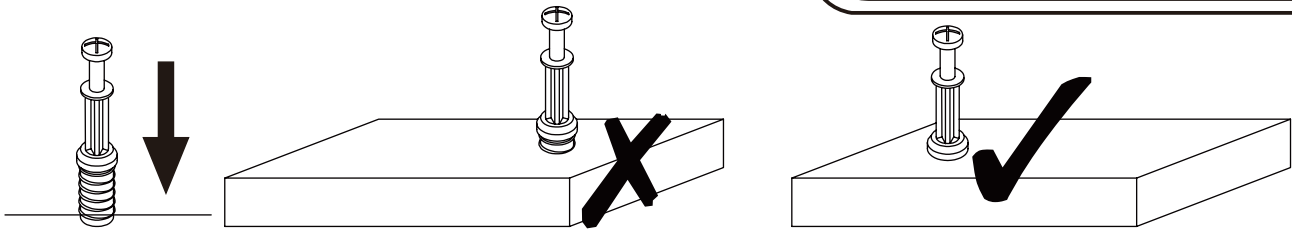


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

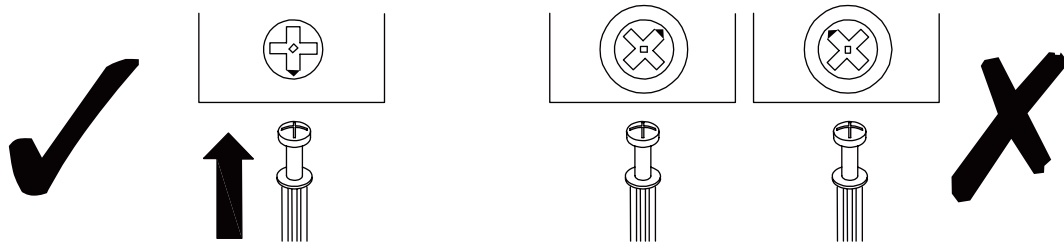











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






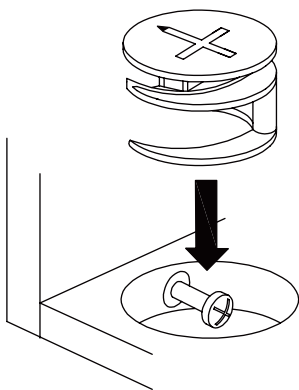



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.




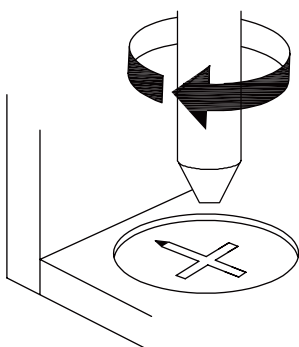



EN_Turn cam lock clockwise to tighten.

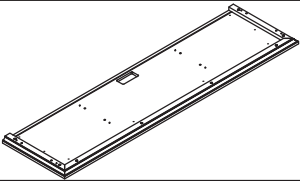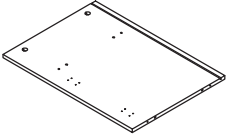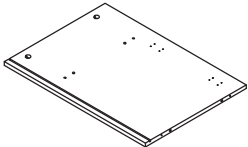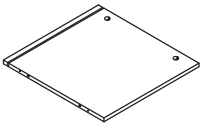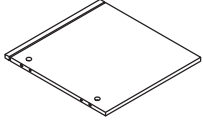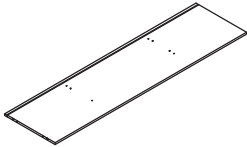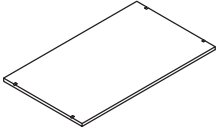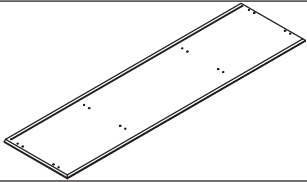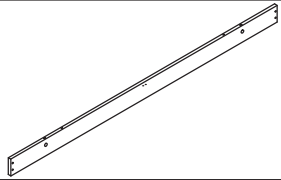NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x1	

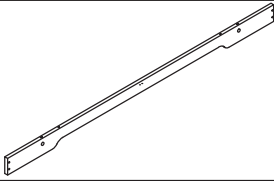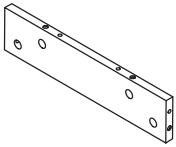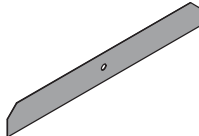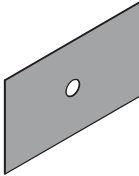NO.	PARTS	QTY	SPARE
11		x1	
12		x2	
13		x1	
14		x2	
15		x1	
16		x2	
	 Hardware Kit		

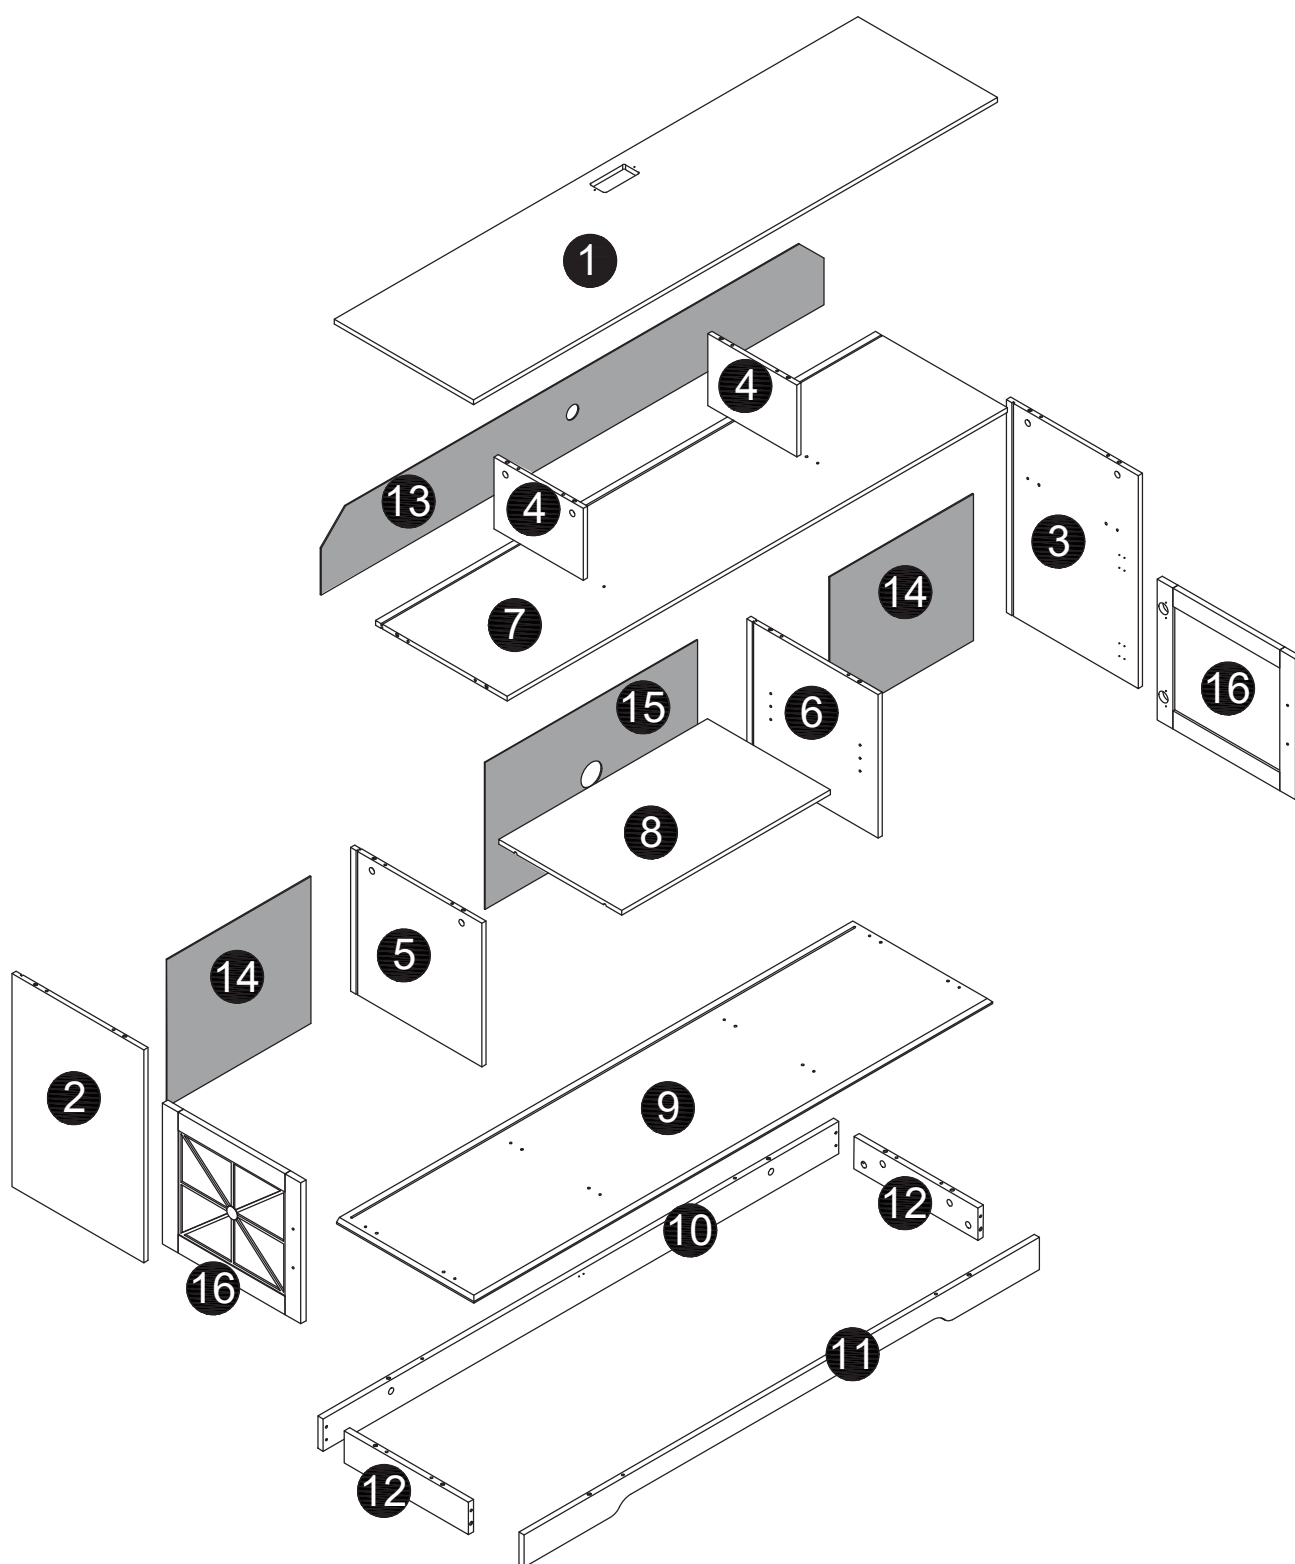

 A x28 Ø6x35mm +2(spare)	 B x28 Ø15x10mm +2(spare)	 C x40 Ø6x30mm +3(spare)	 D x14 Ø4x35mm +1(spare)	 E x32 Ø3.5x12mm +3(spare)	 F x2
 G1  G2 G x22 Ø3x16mm +2(spare)	 H x4	 I x8 Ø20mm	 J x2 Ø4x14mm	 K x2	 L x2 Ø6x30mm
 M x4 Ø26mm	 N x2	 O x2	 P x1	 Q x2 Ø3.5x12mm	 R x1
 S x6 Ø3x12mm					

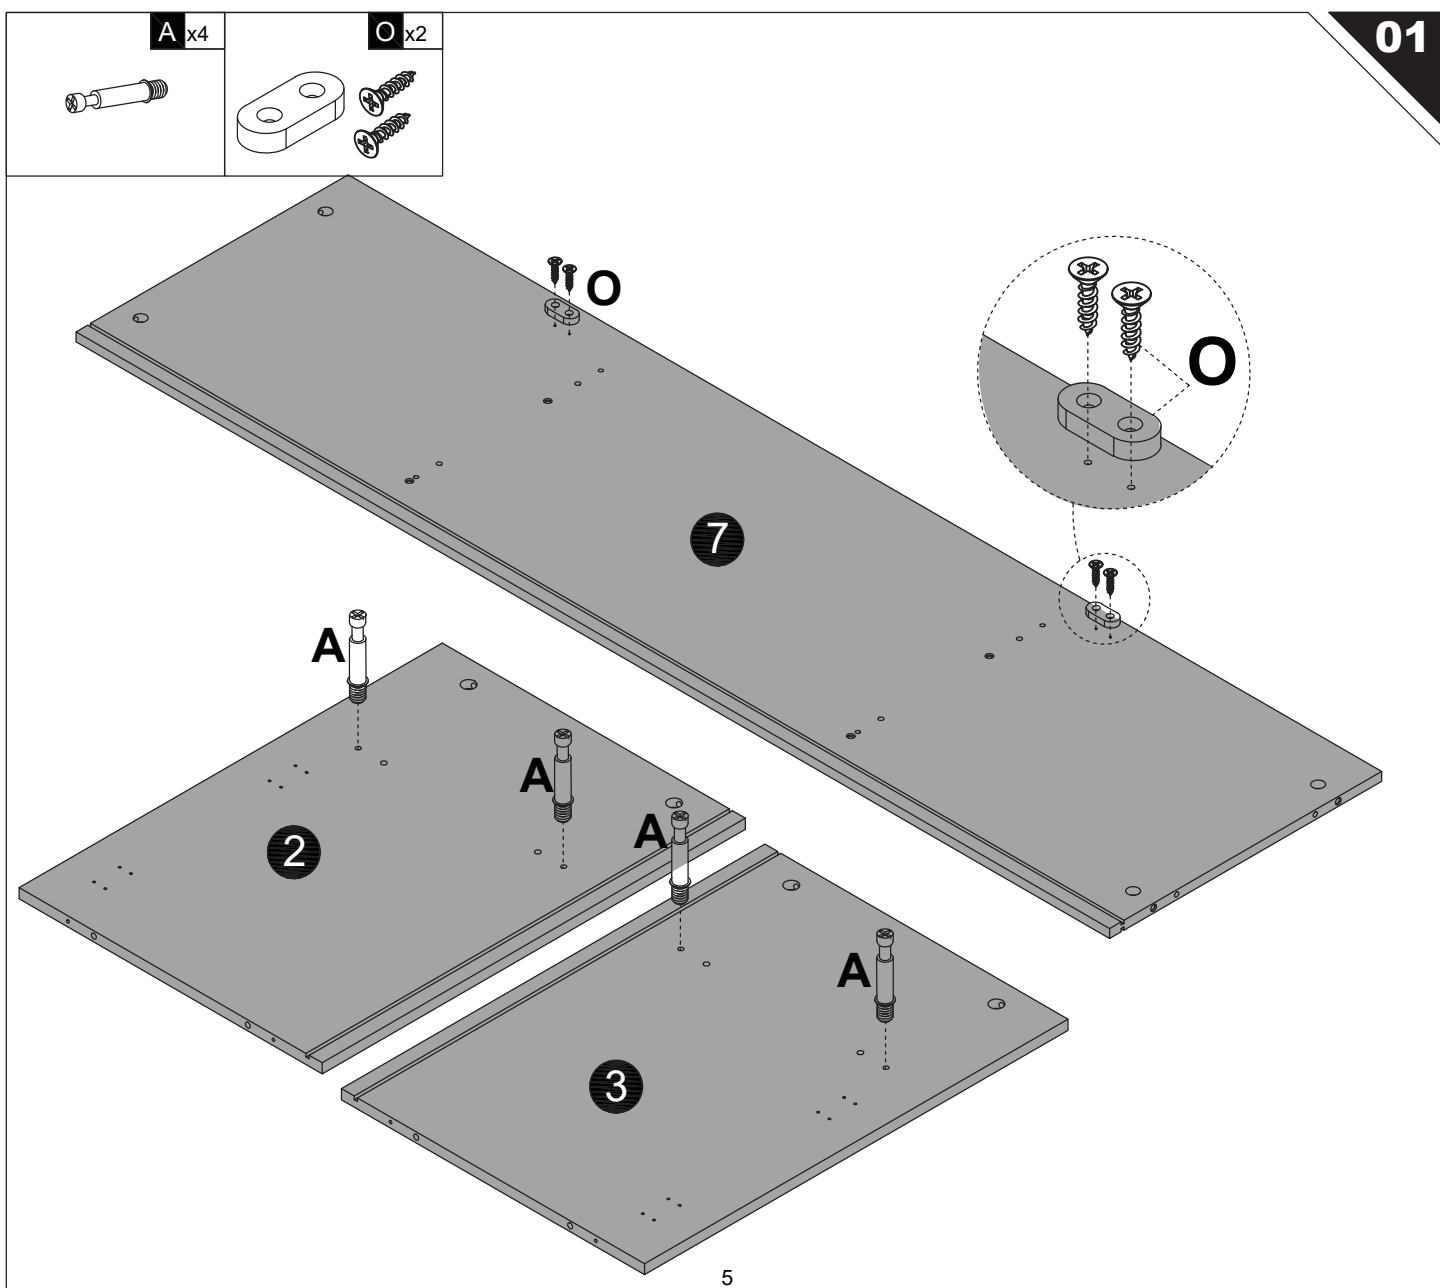

02

C x4




D x4





Notice



Notice

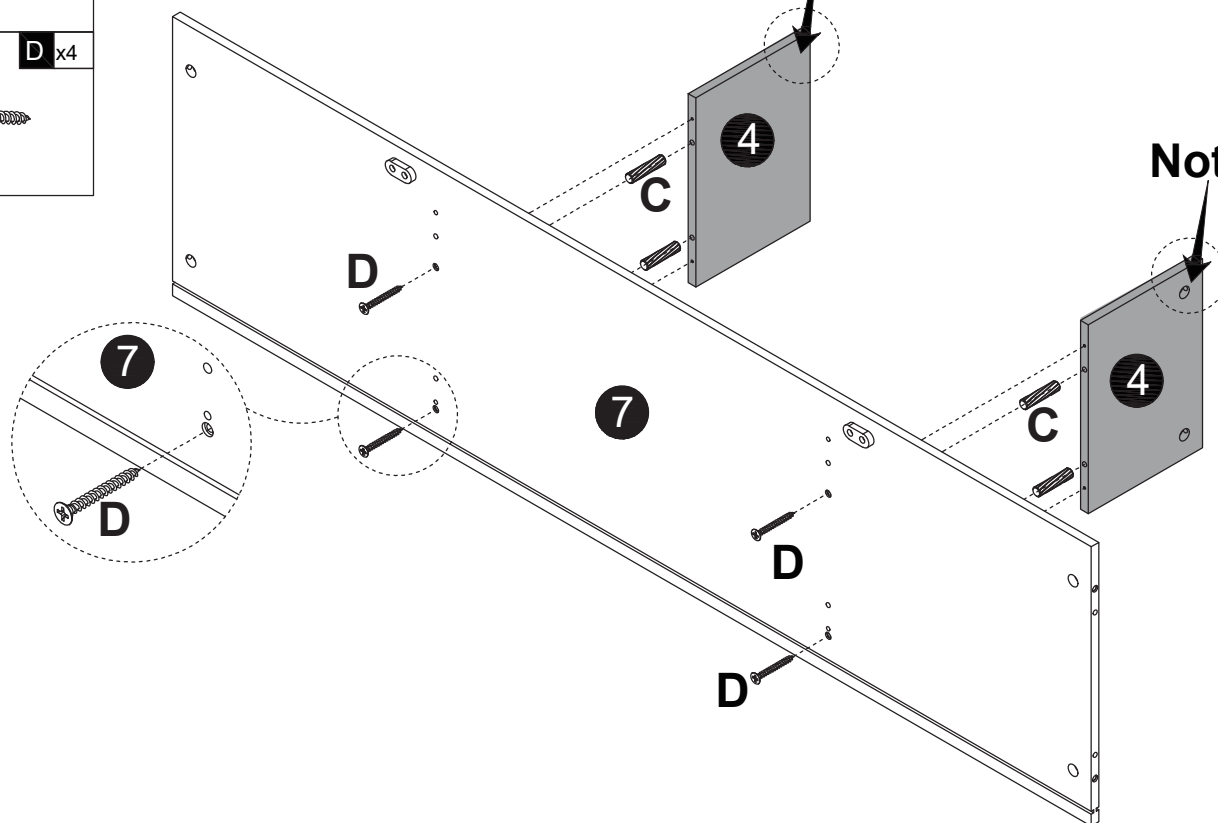

03


A x4

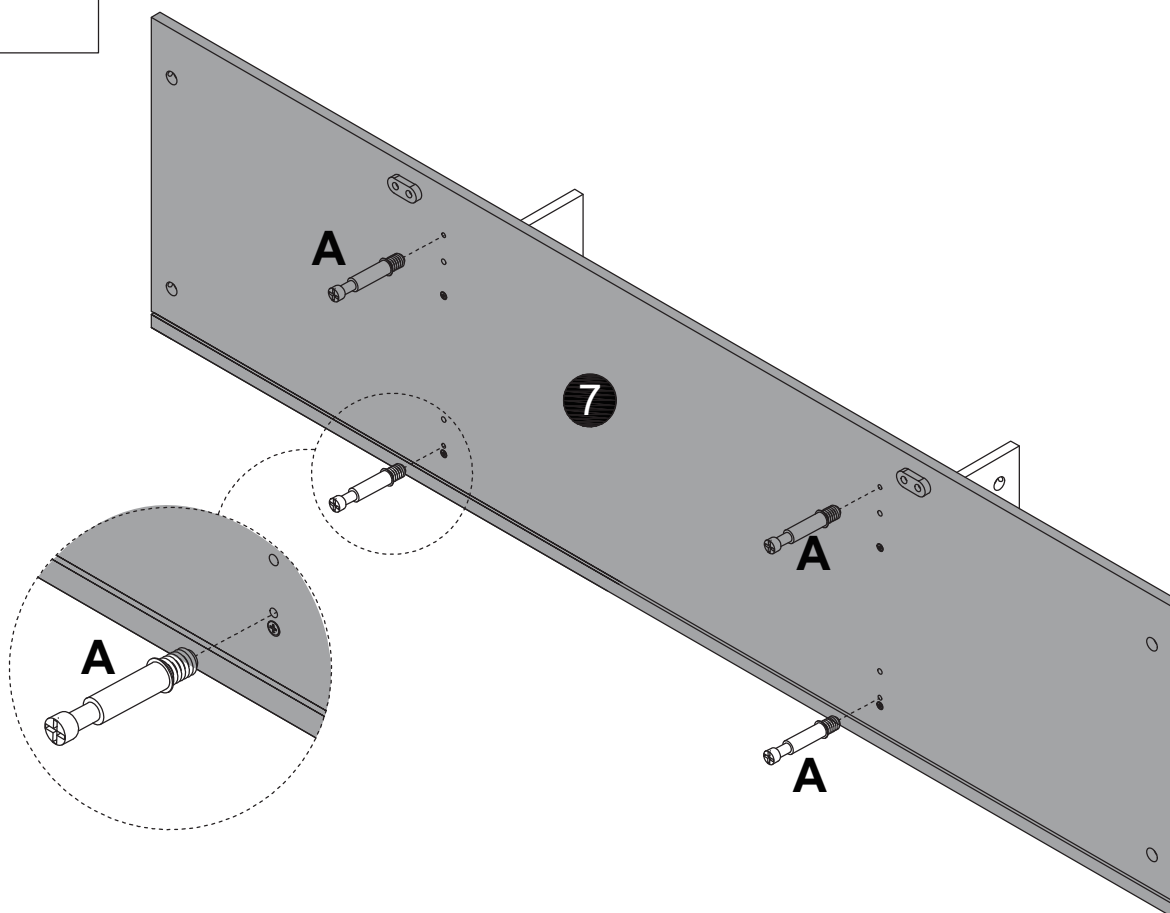


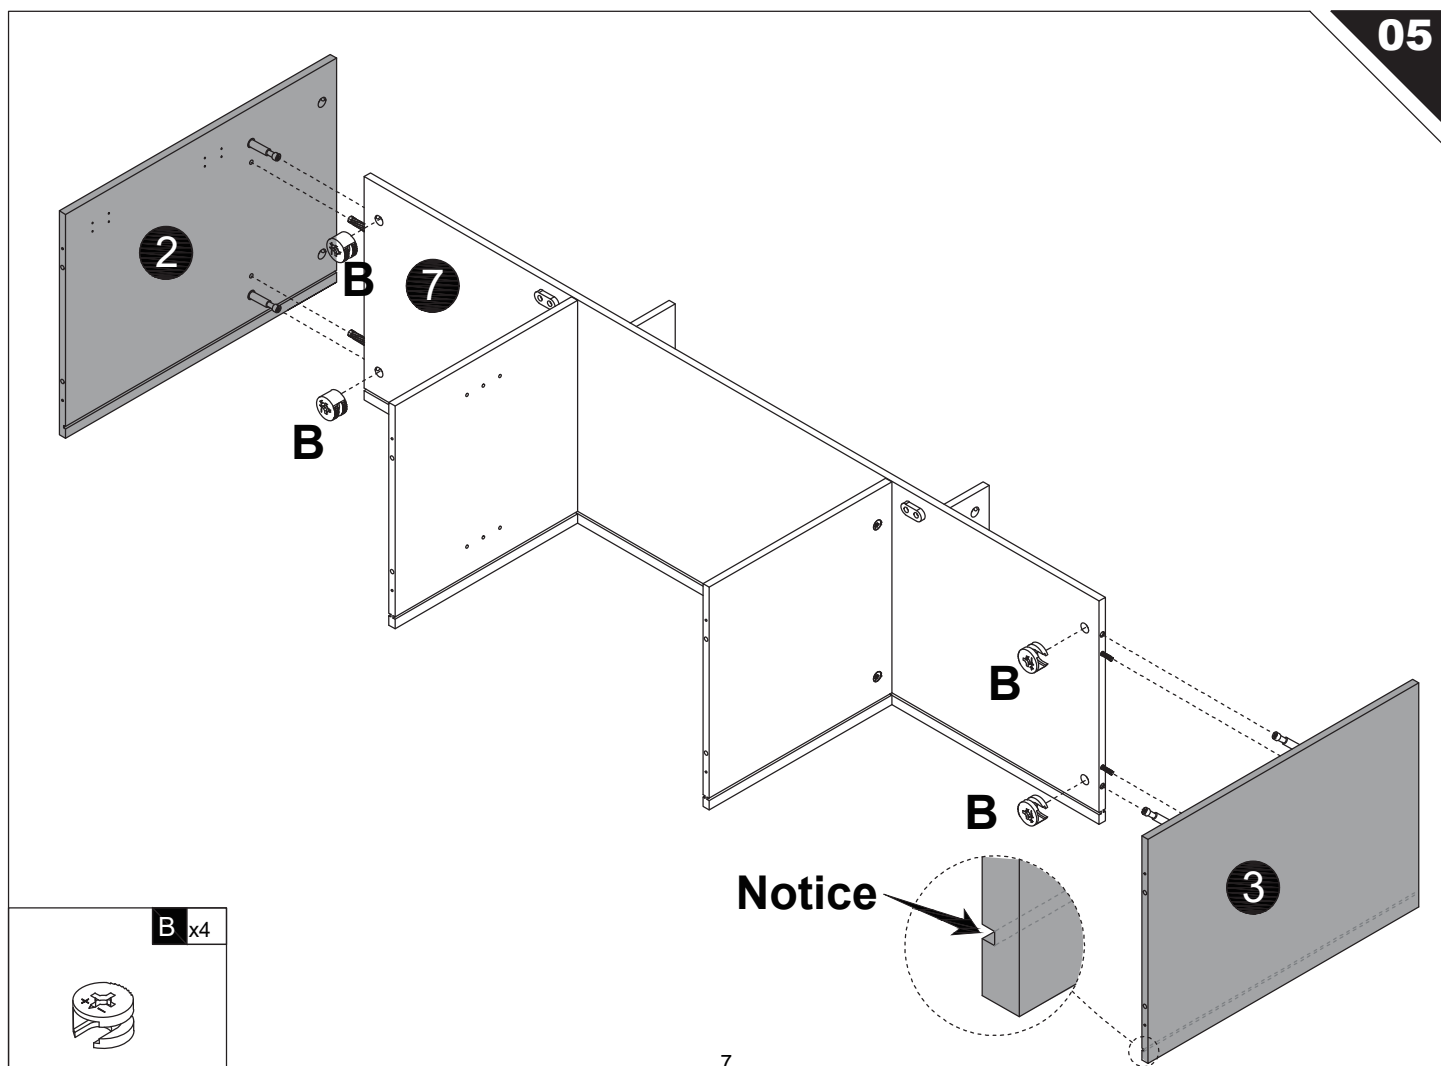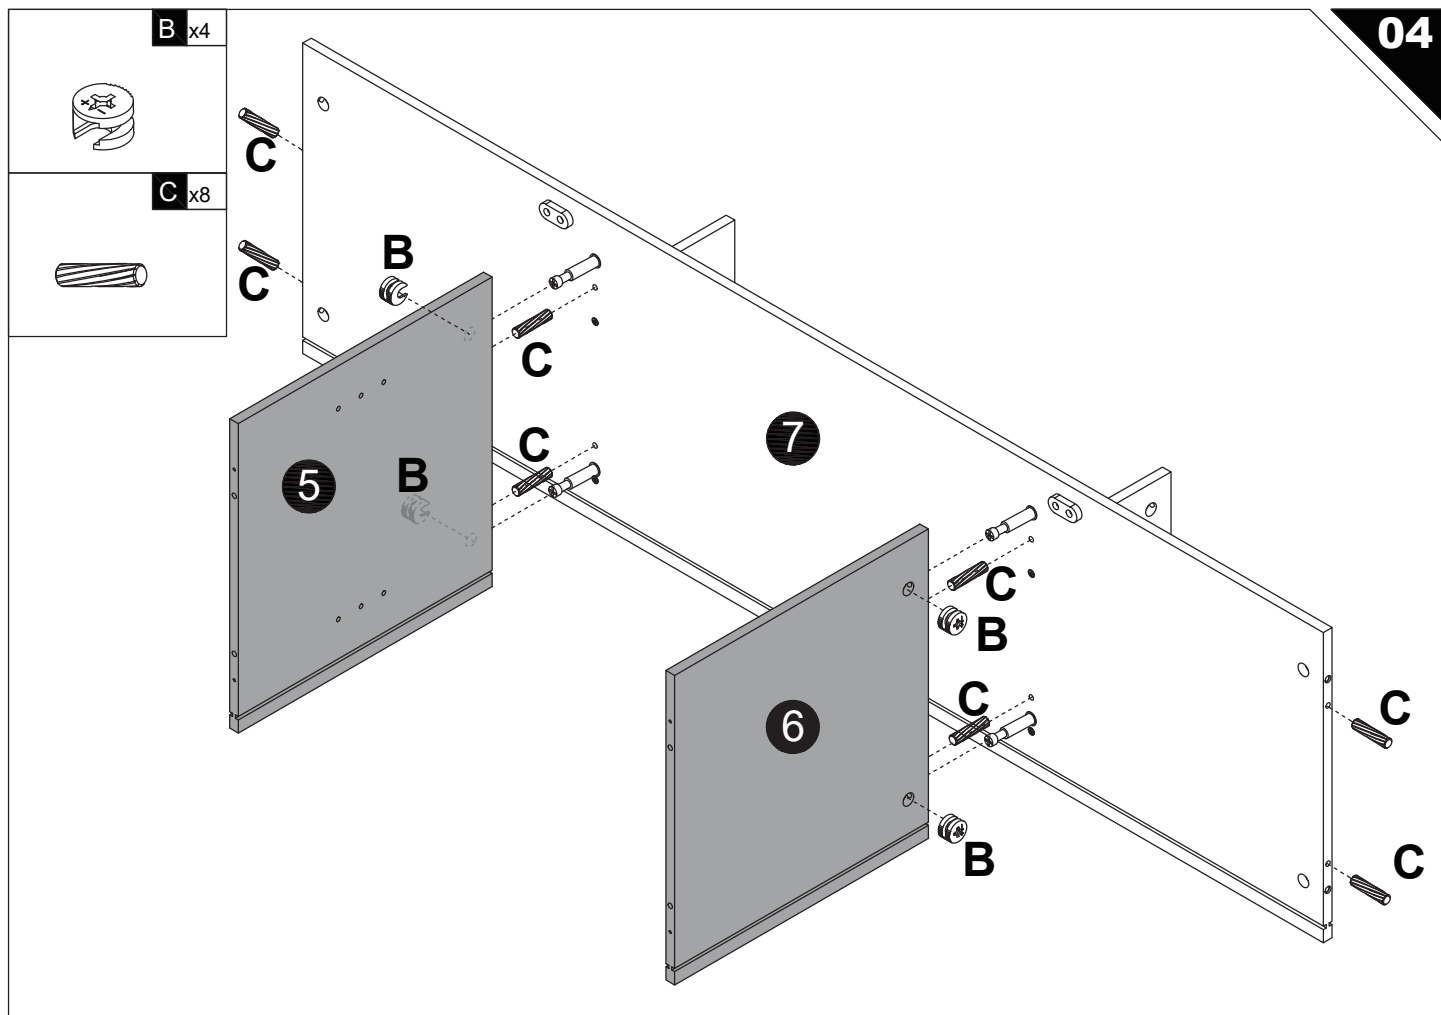




Attention: This step requires at least two people to stand up the 2nd and 3rd boards of the cabinet.

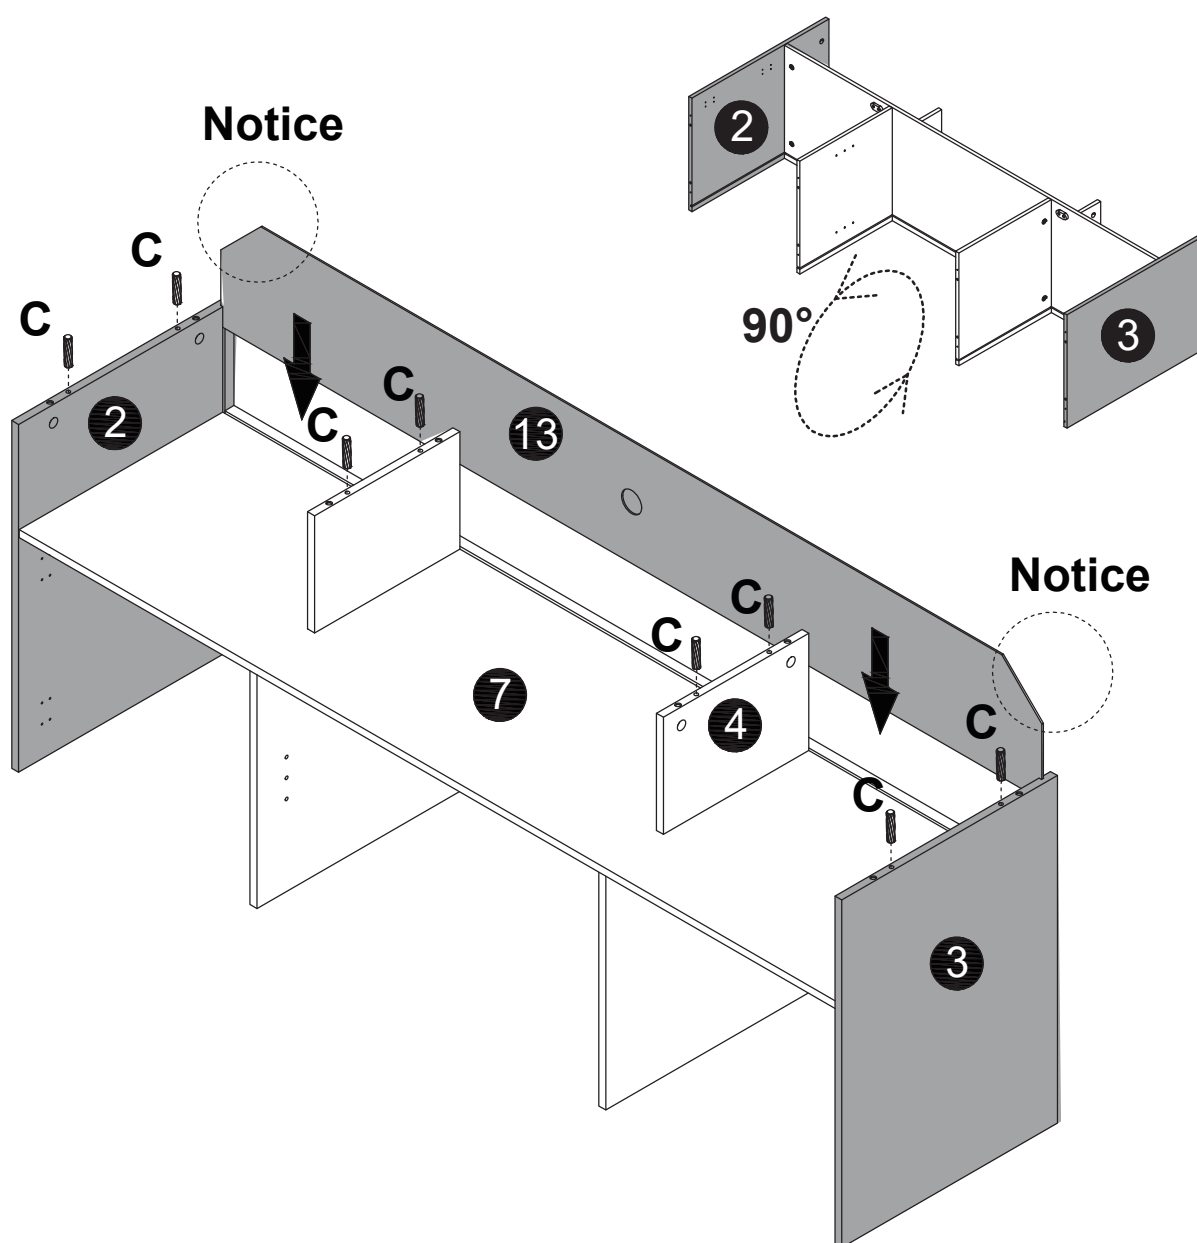


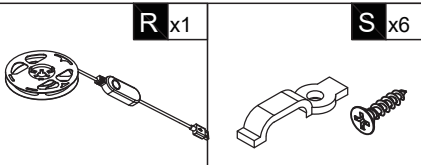




(1) Firstly, peel off a small portion of the adhesive surface on the right end "f" of the light strip "R".

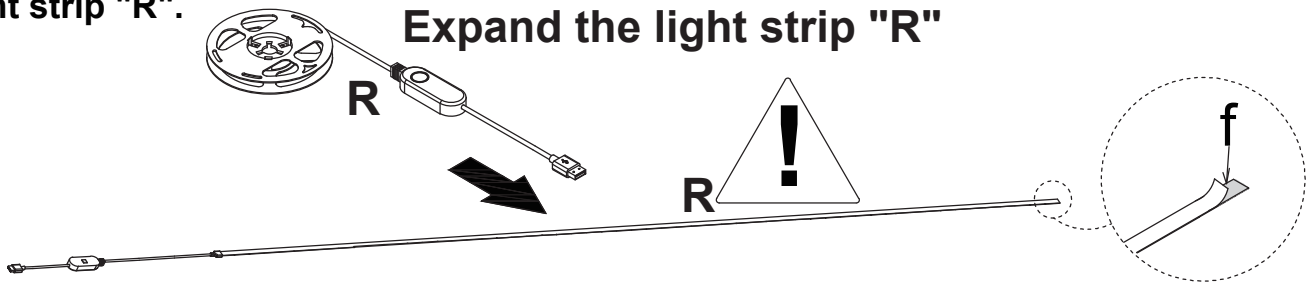

(2) Then, paste the line "R" along the edge of the hole shown in the diagram on board 1 in the direction shown in the diagram, onto board 1.

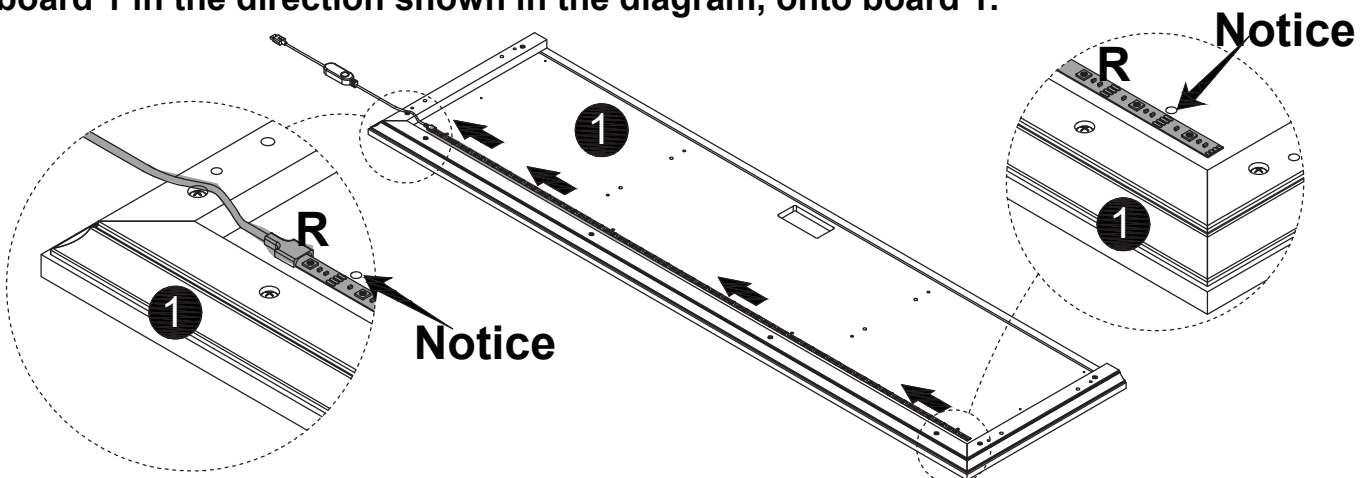


(3) Finally, use screw "S" to thread through the transparent wire buckle and fix the line "R" onto board 1.

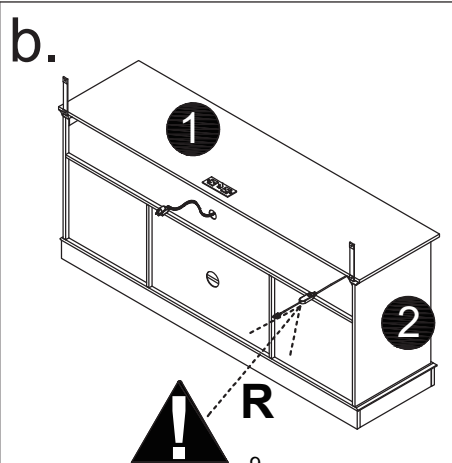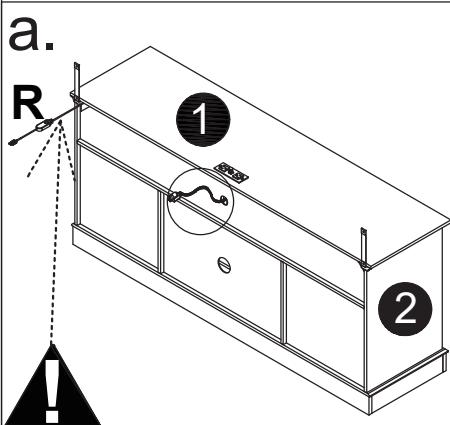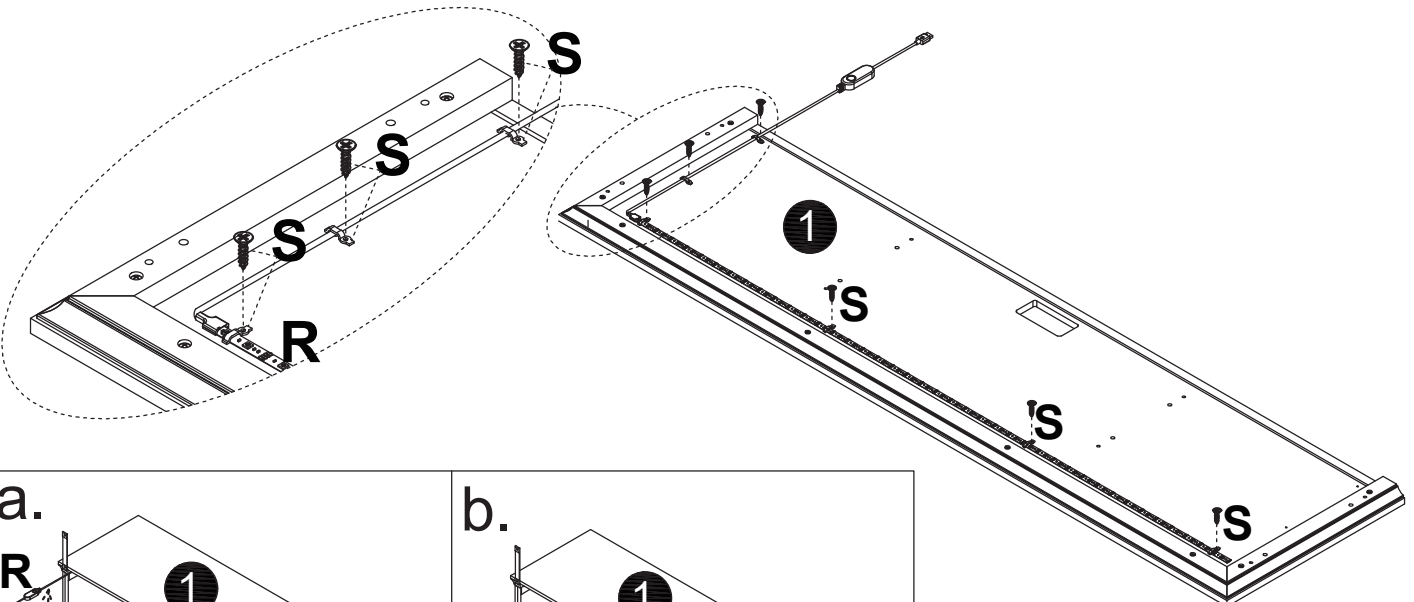

Attention: The "R" outlet of the light bar can be left or right according to the user's needs. The installation method shown as "a" in the picture.



A x8



B x8



Note: At least two people are required for this step.


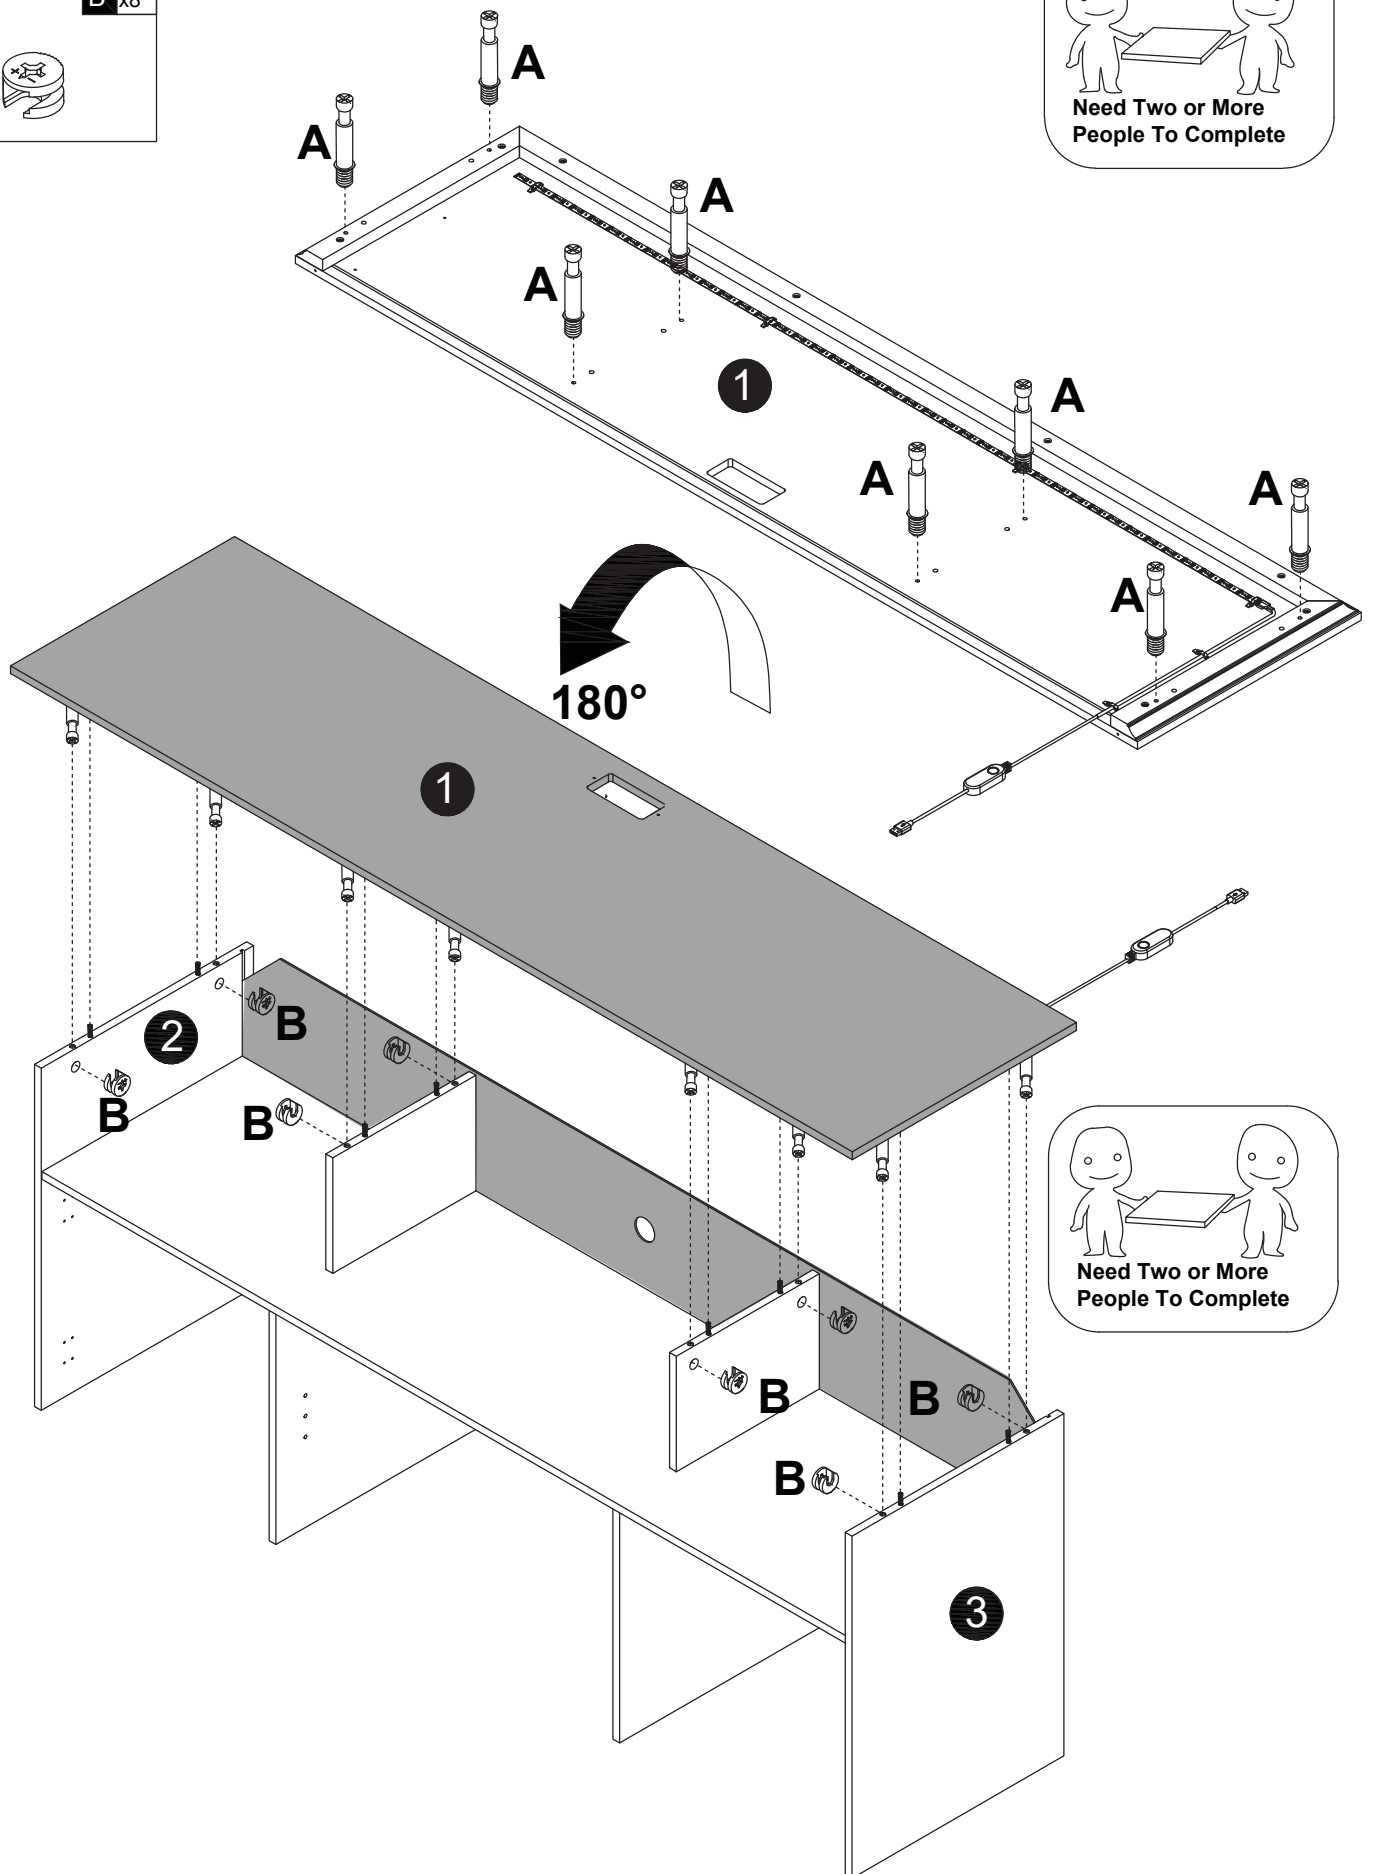
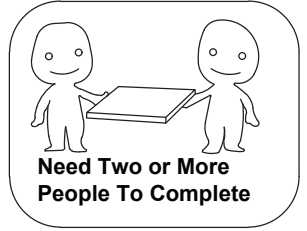


C x8



Attention: This step requires at least two people to rotate the cabinet according to the diagram.

09

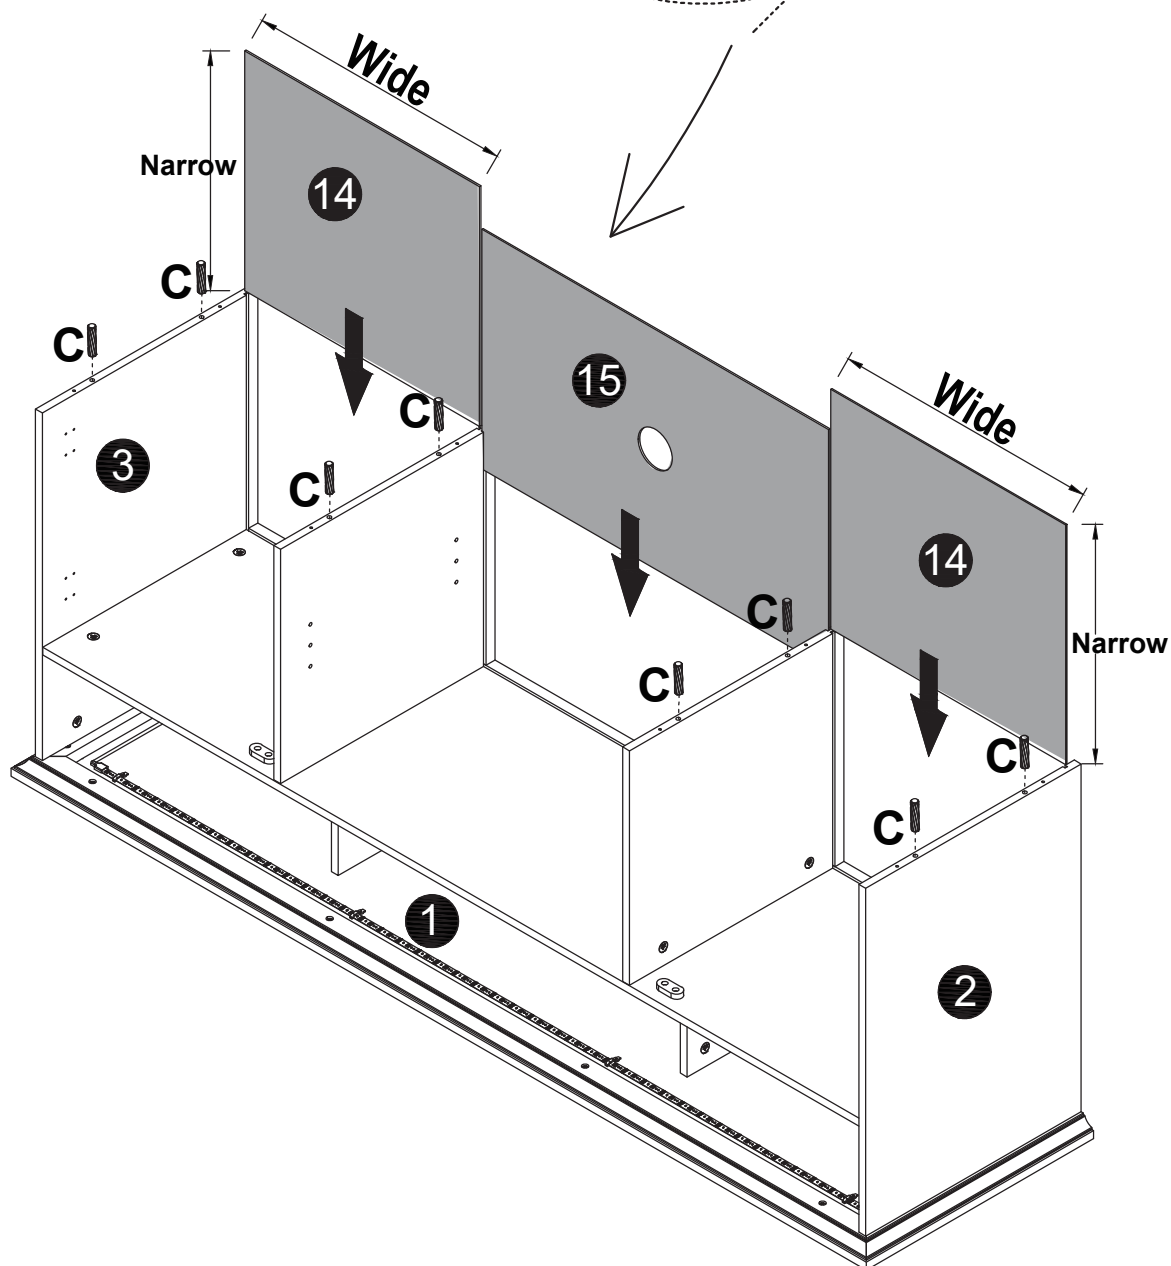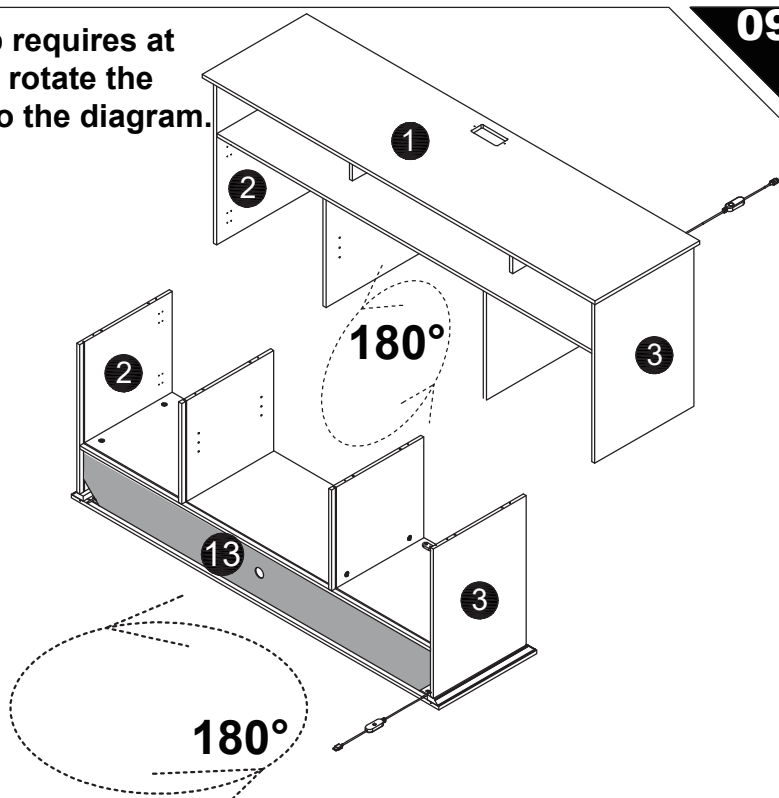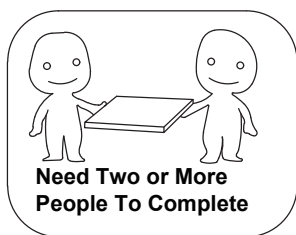


A x12



E x4




N x2

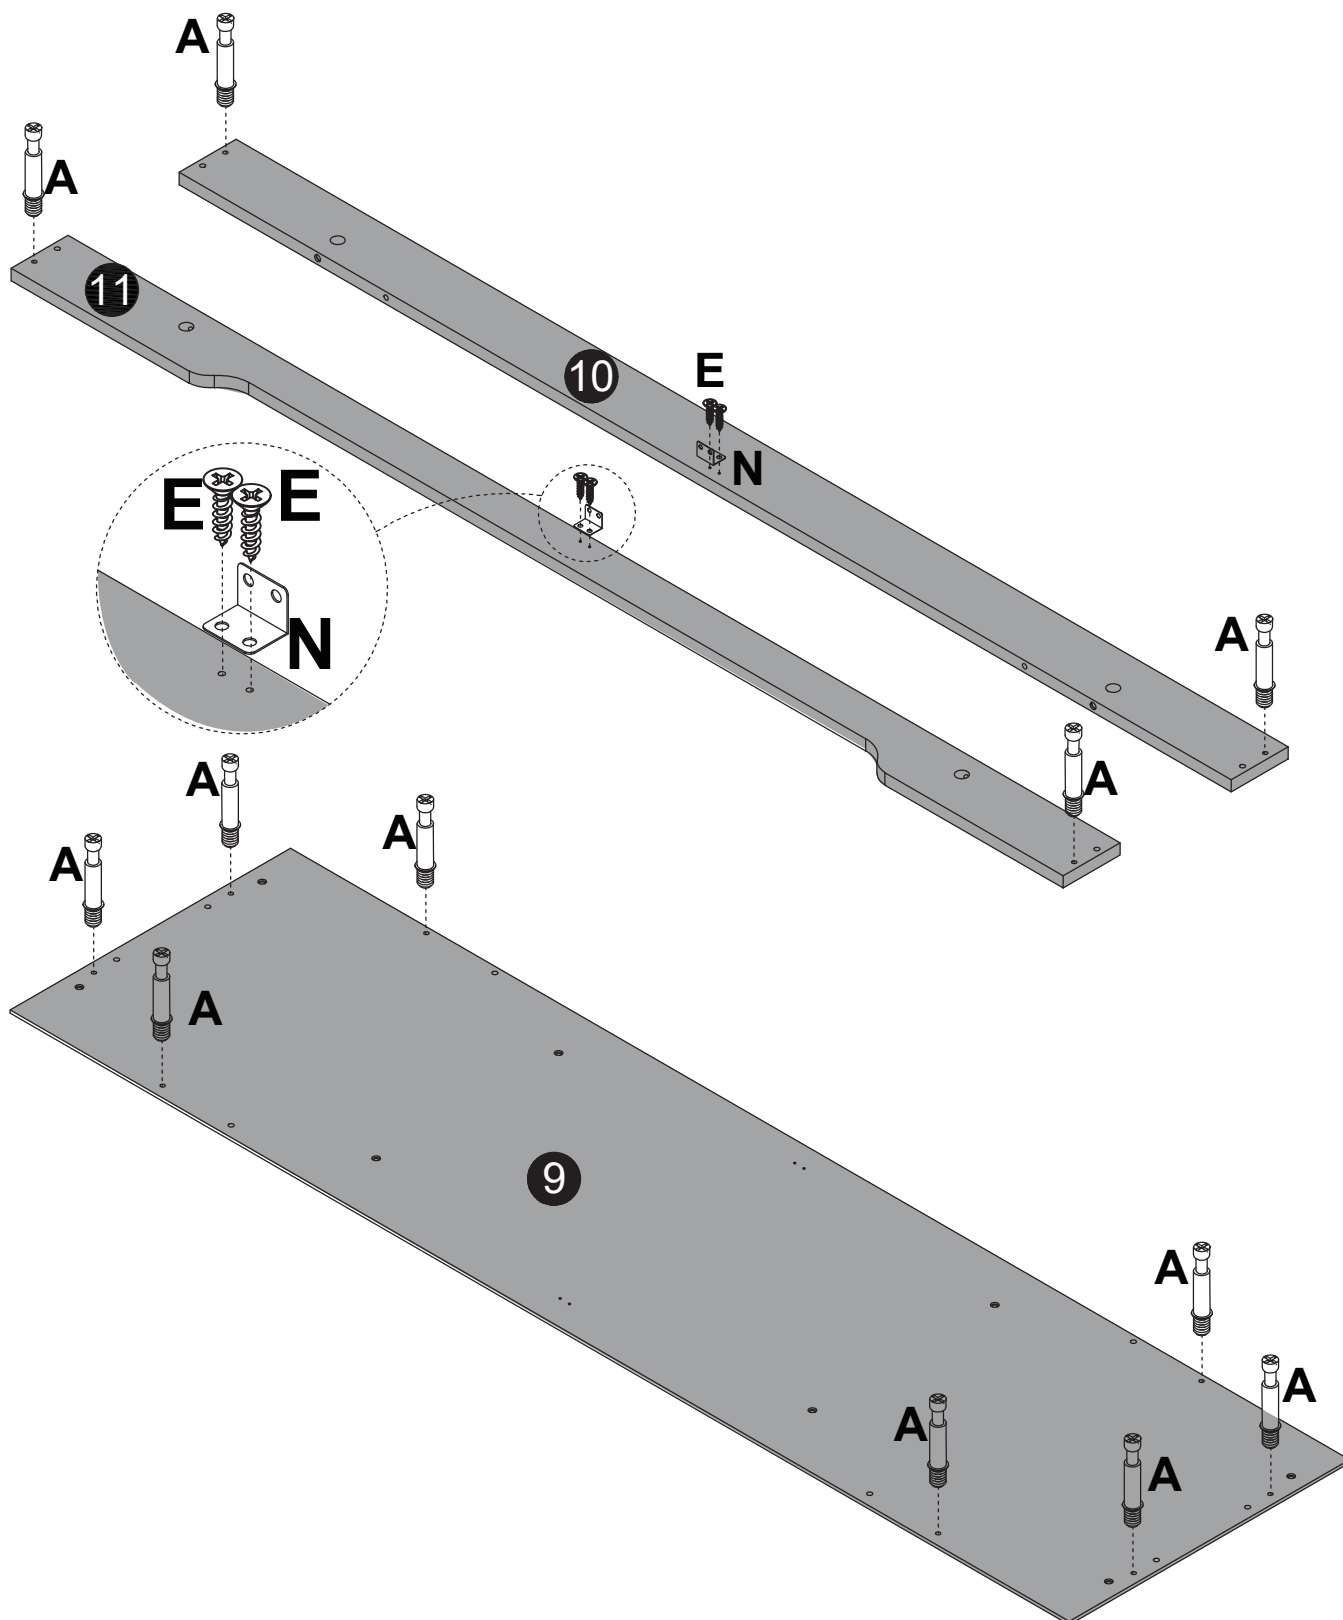

D x8



11

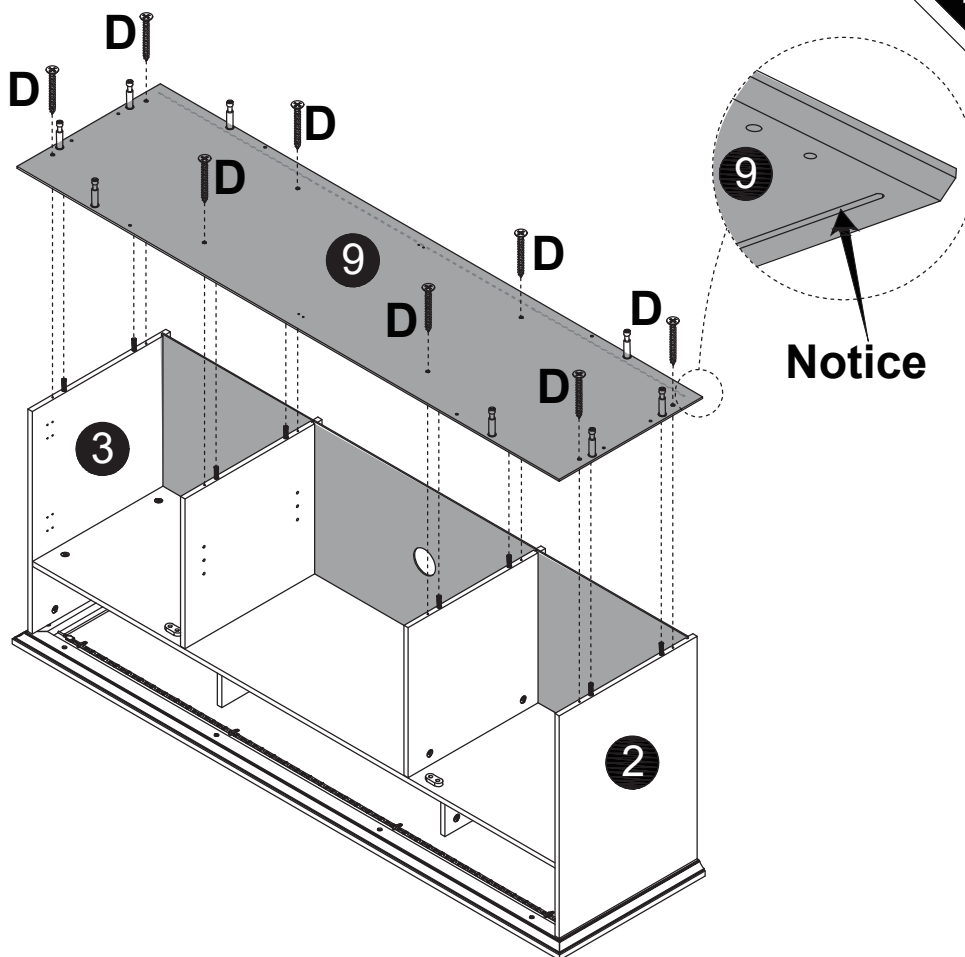




Notice

C x8




12


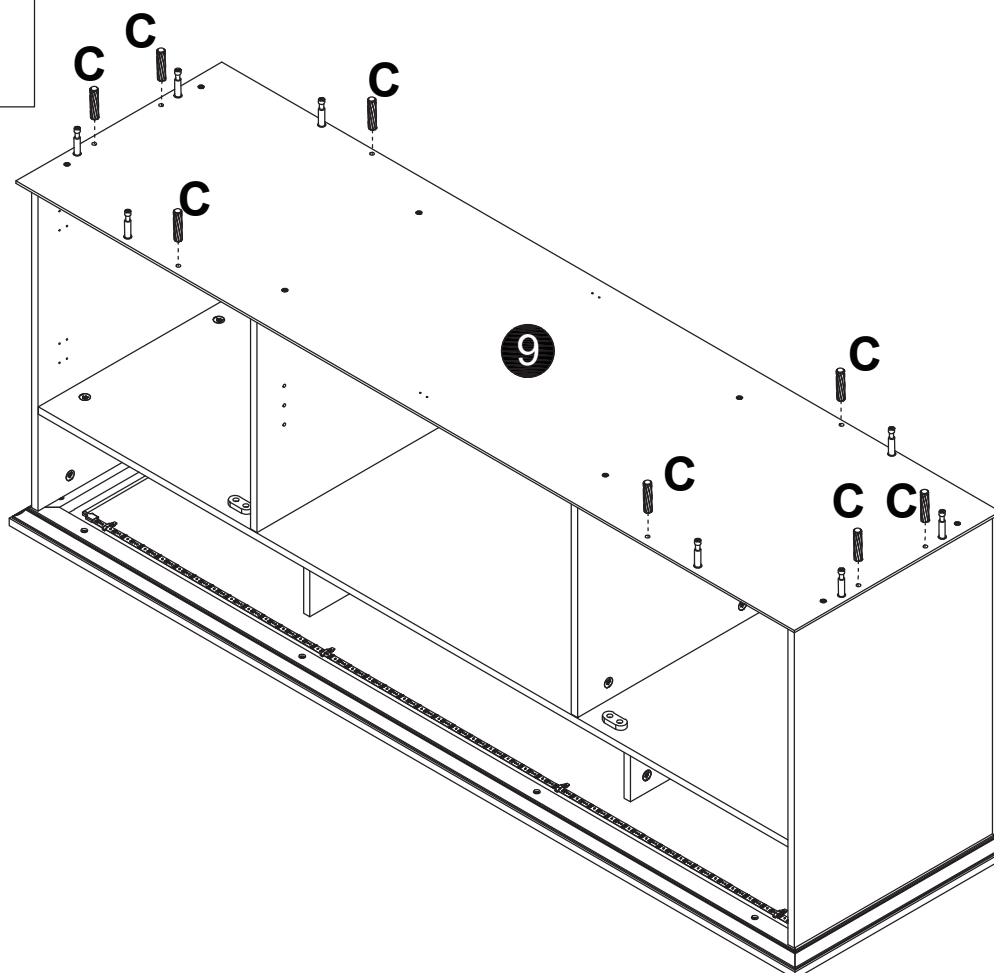


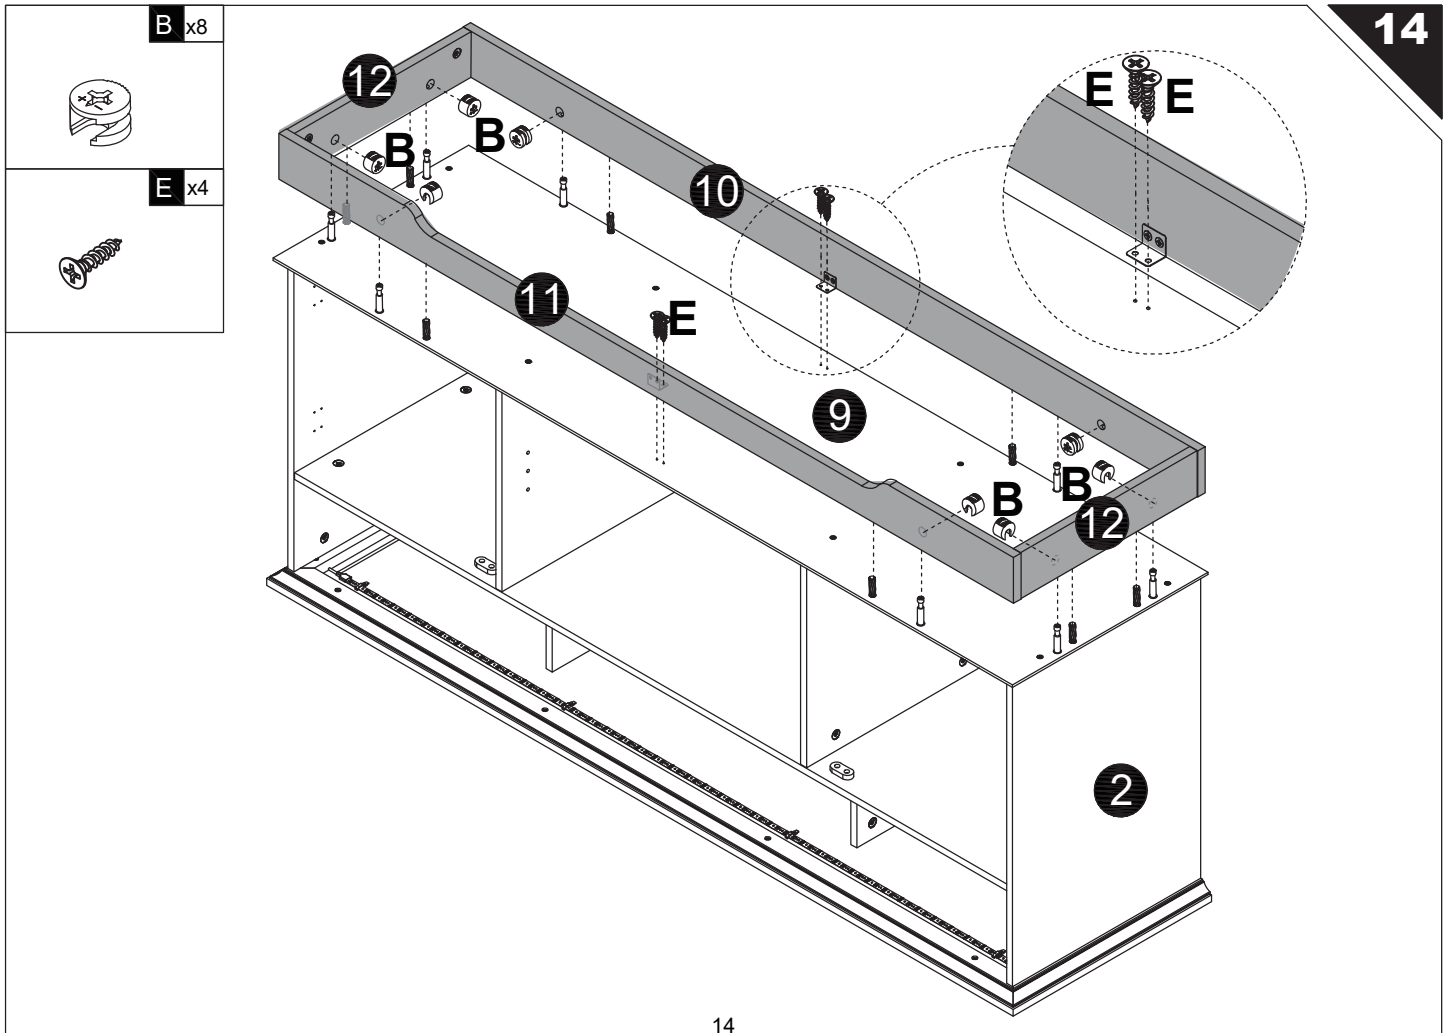
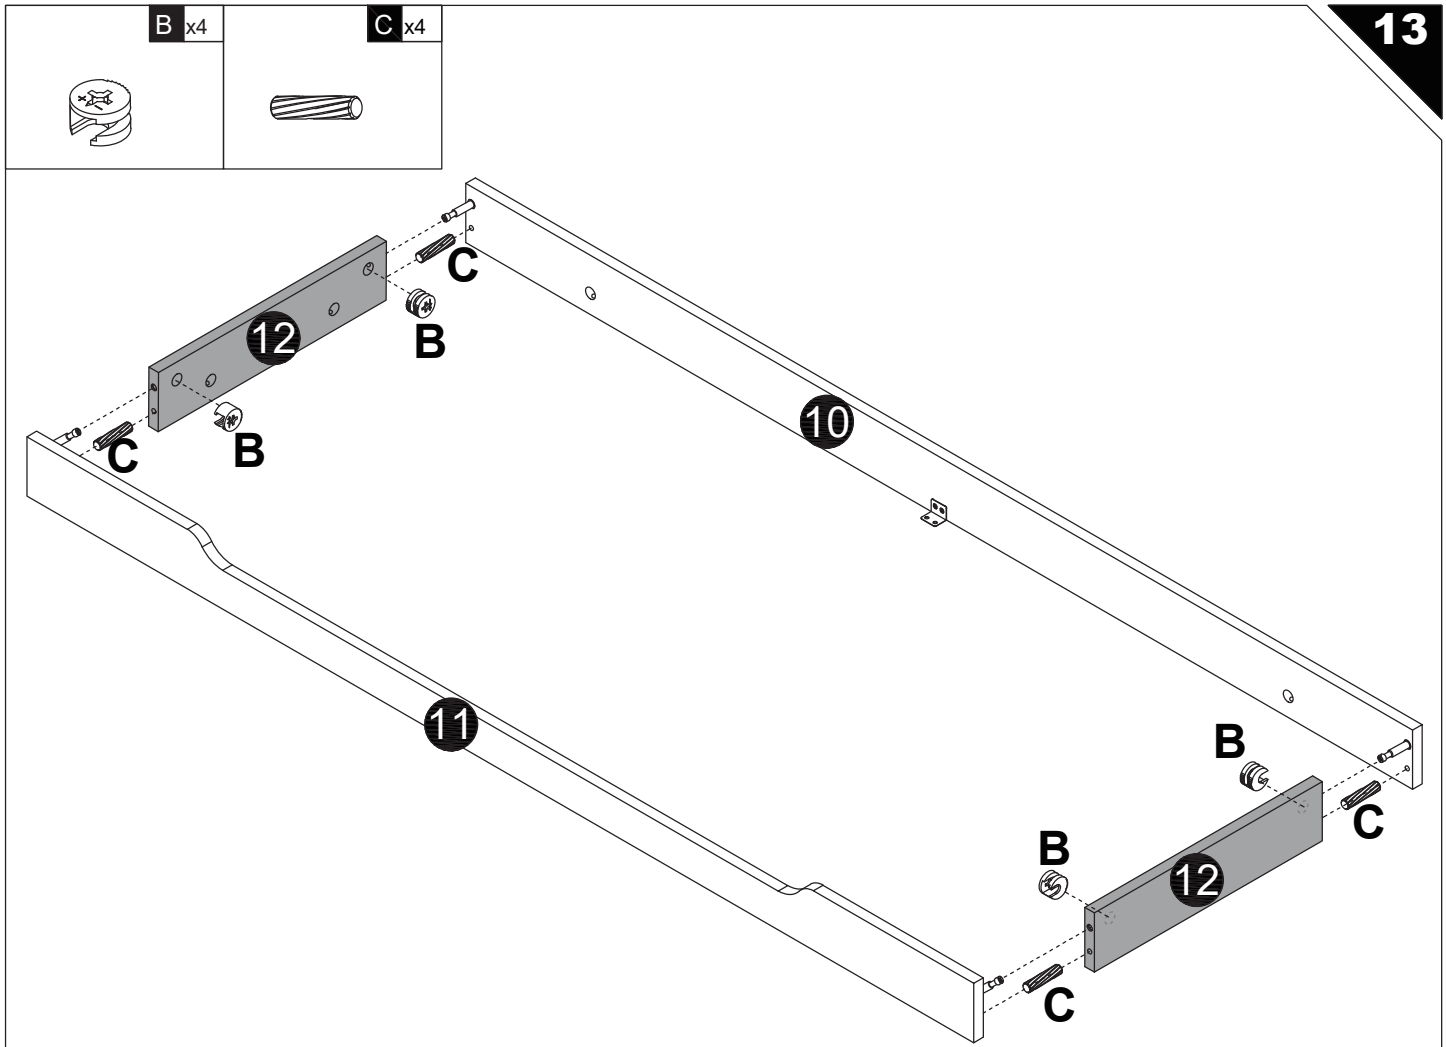








G x22



Note: At least two people are required for this step.

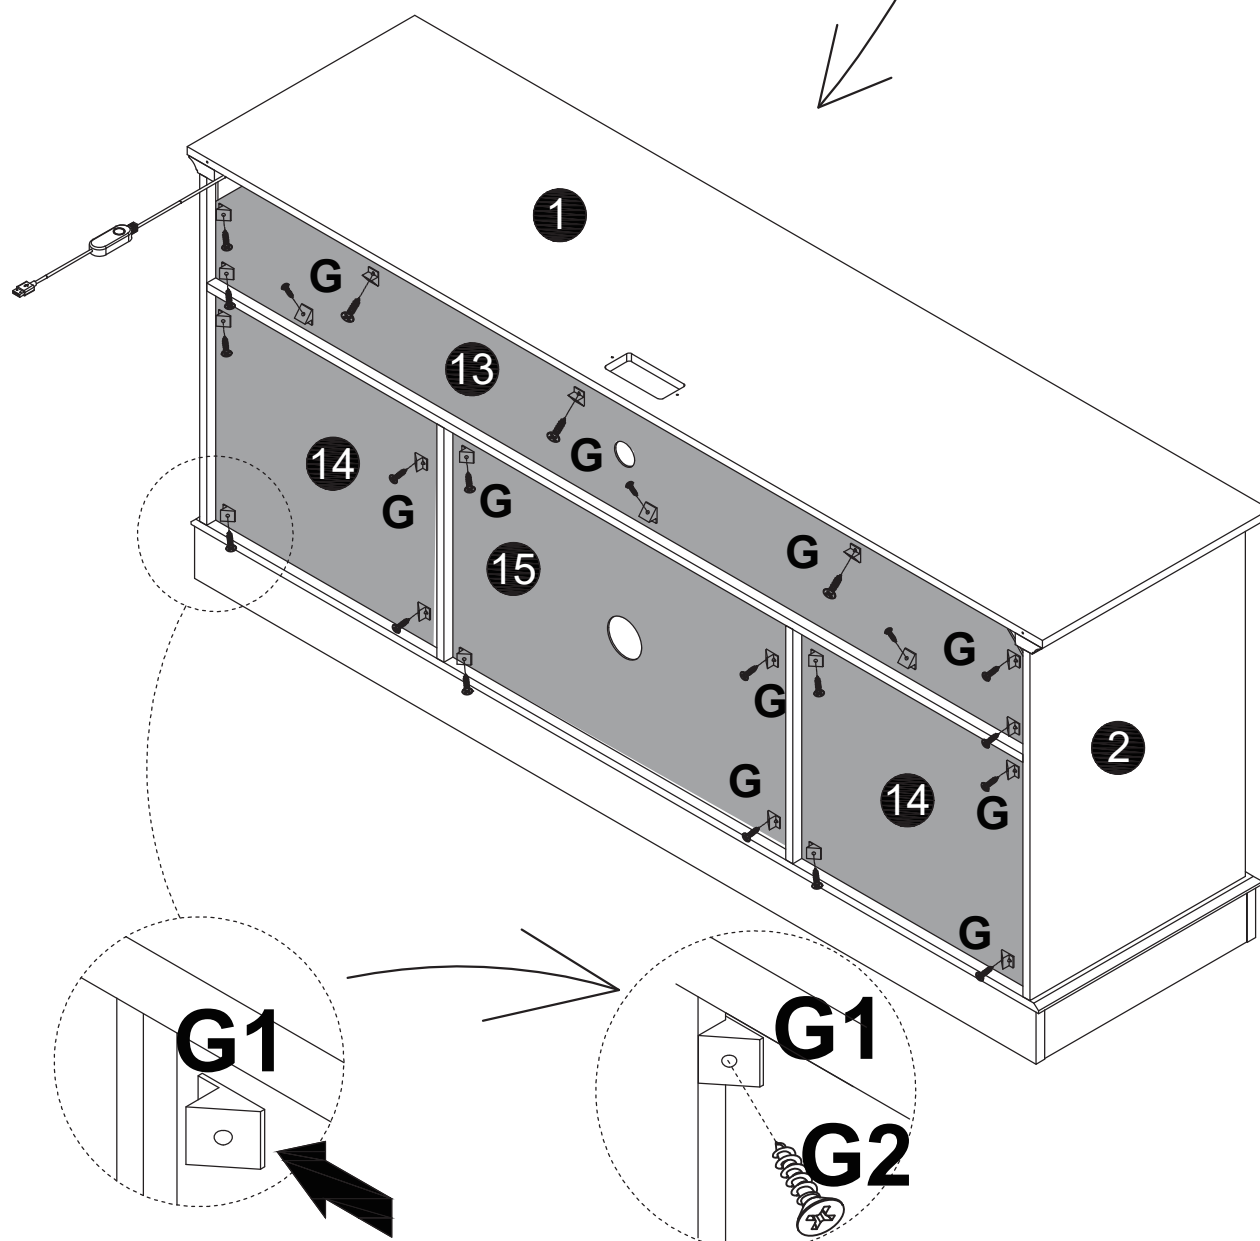
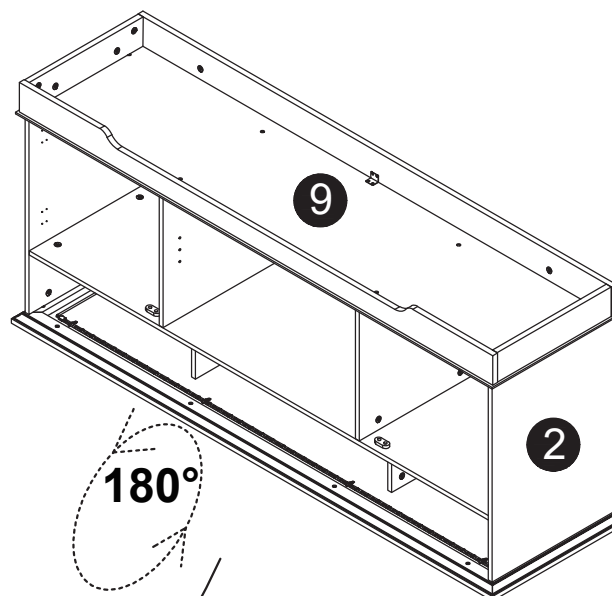


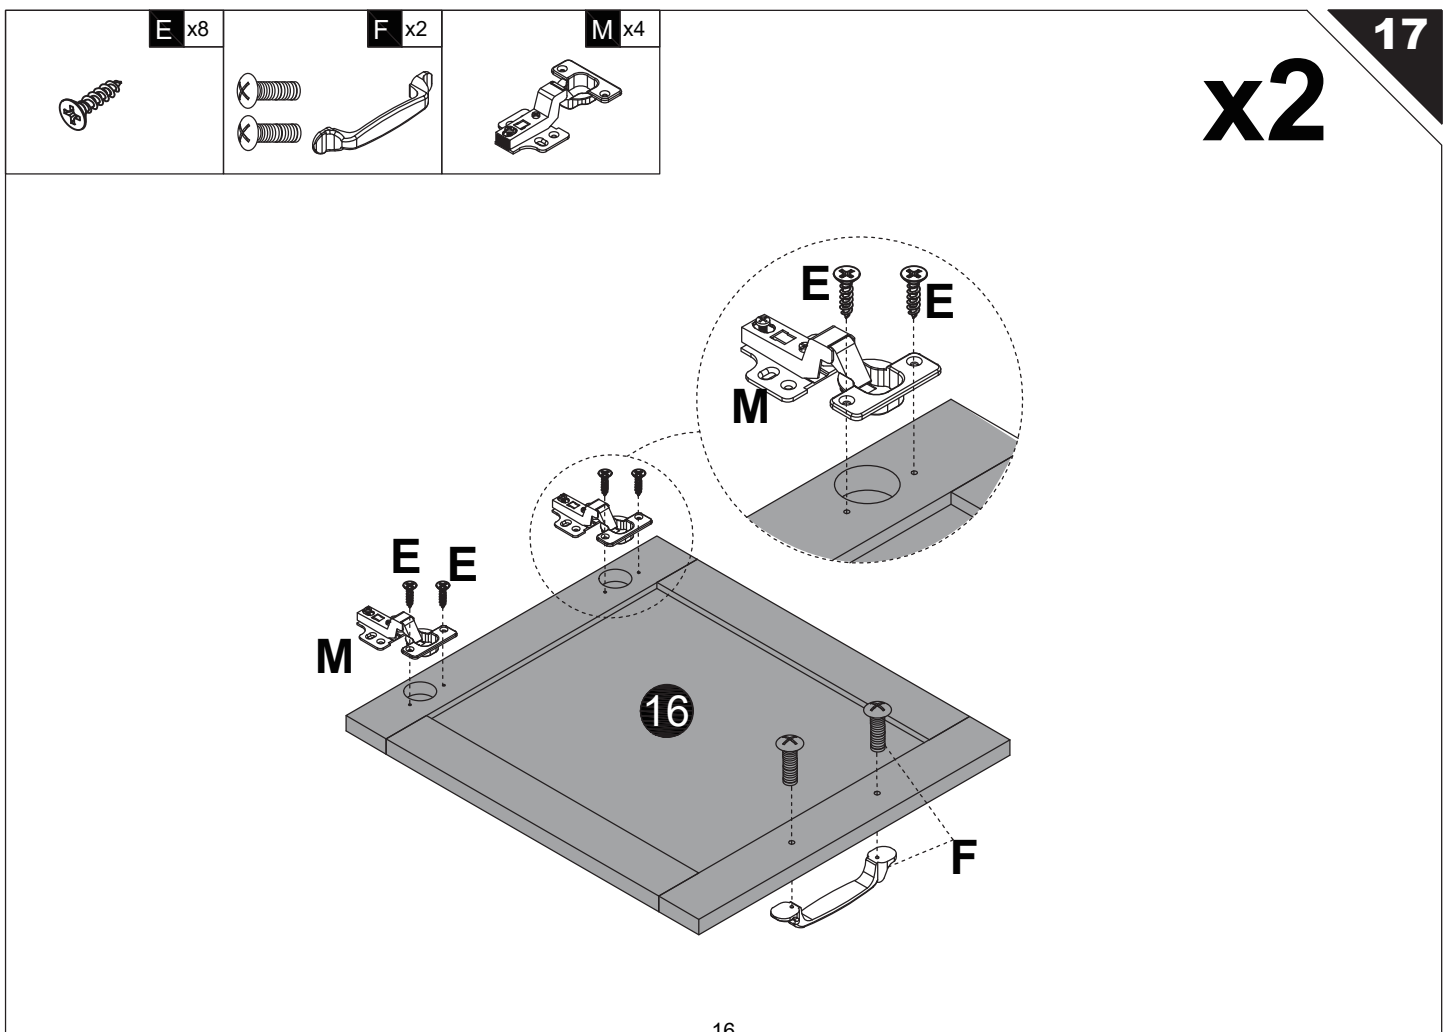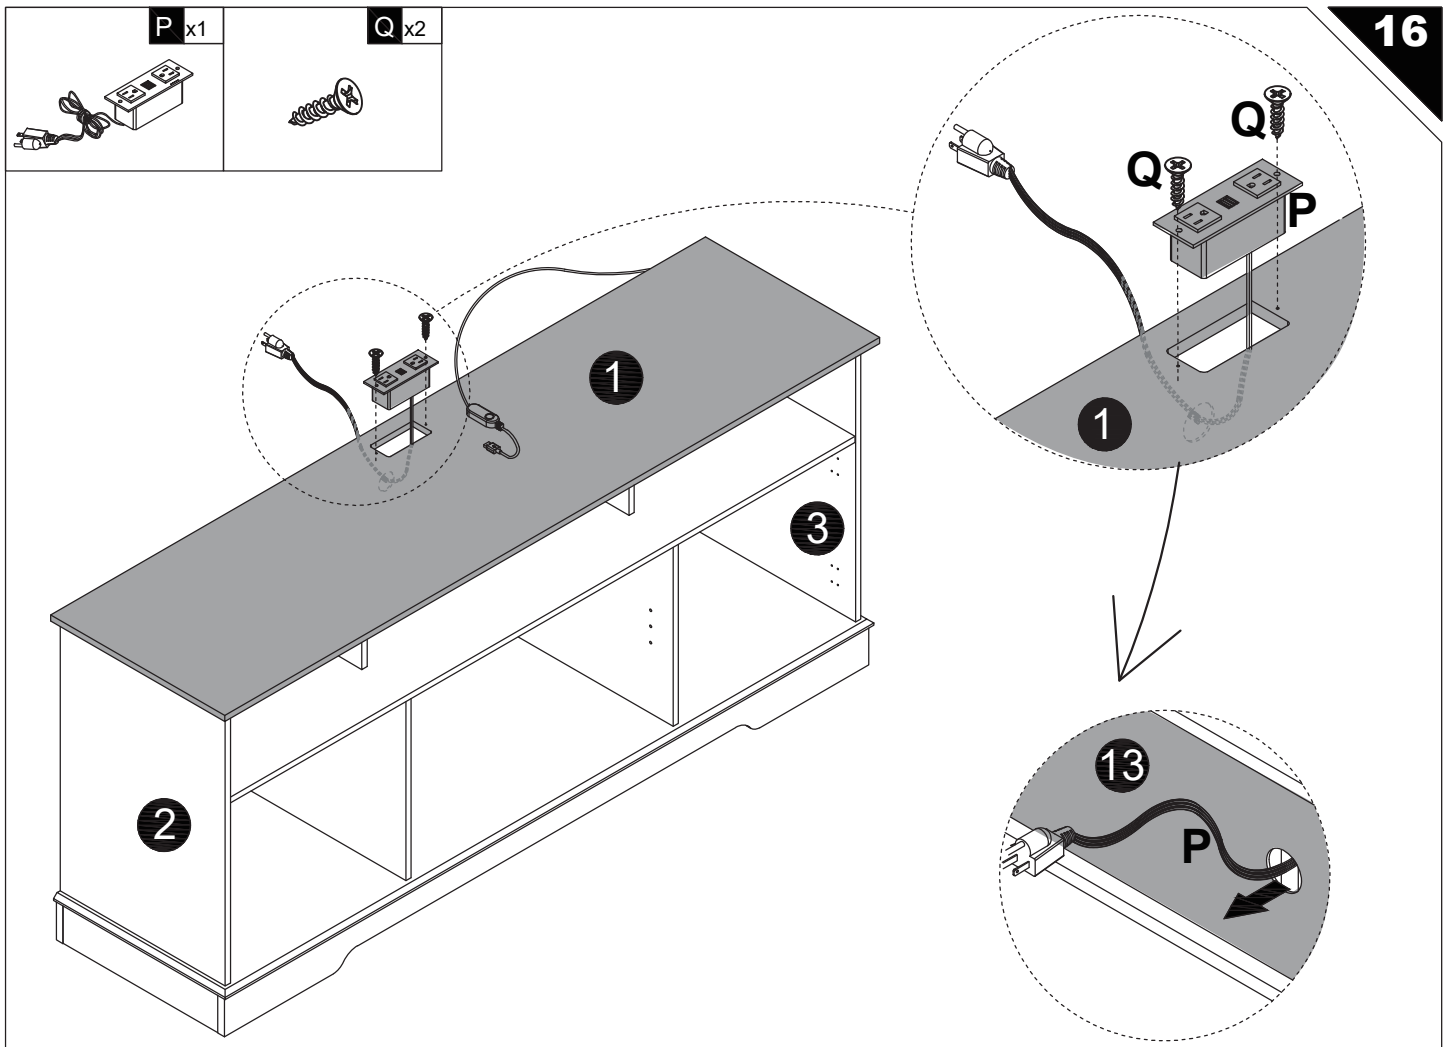

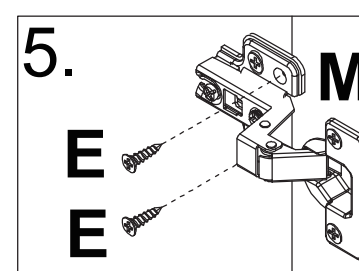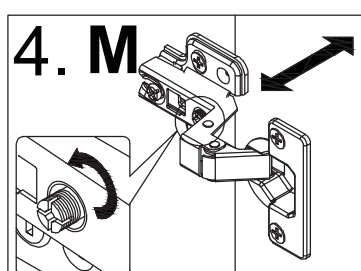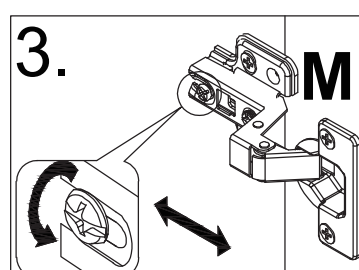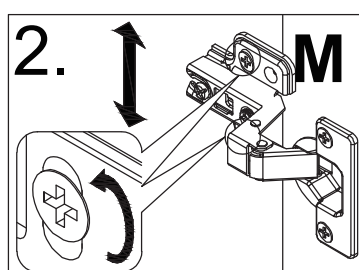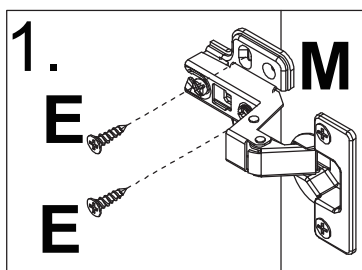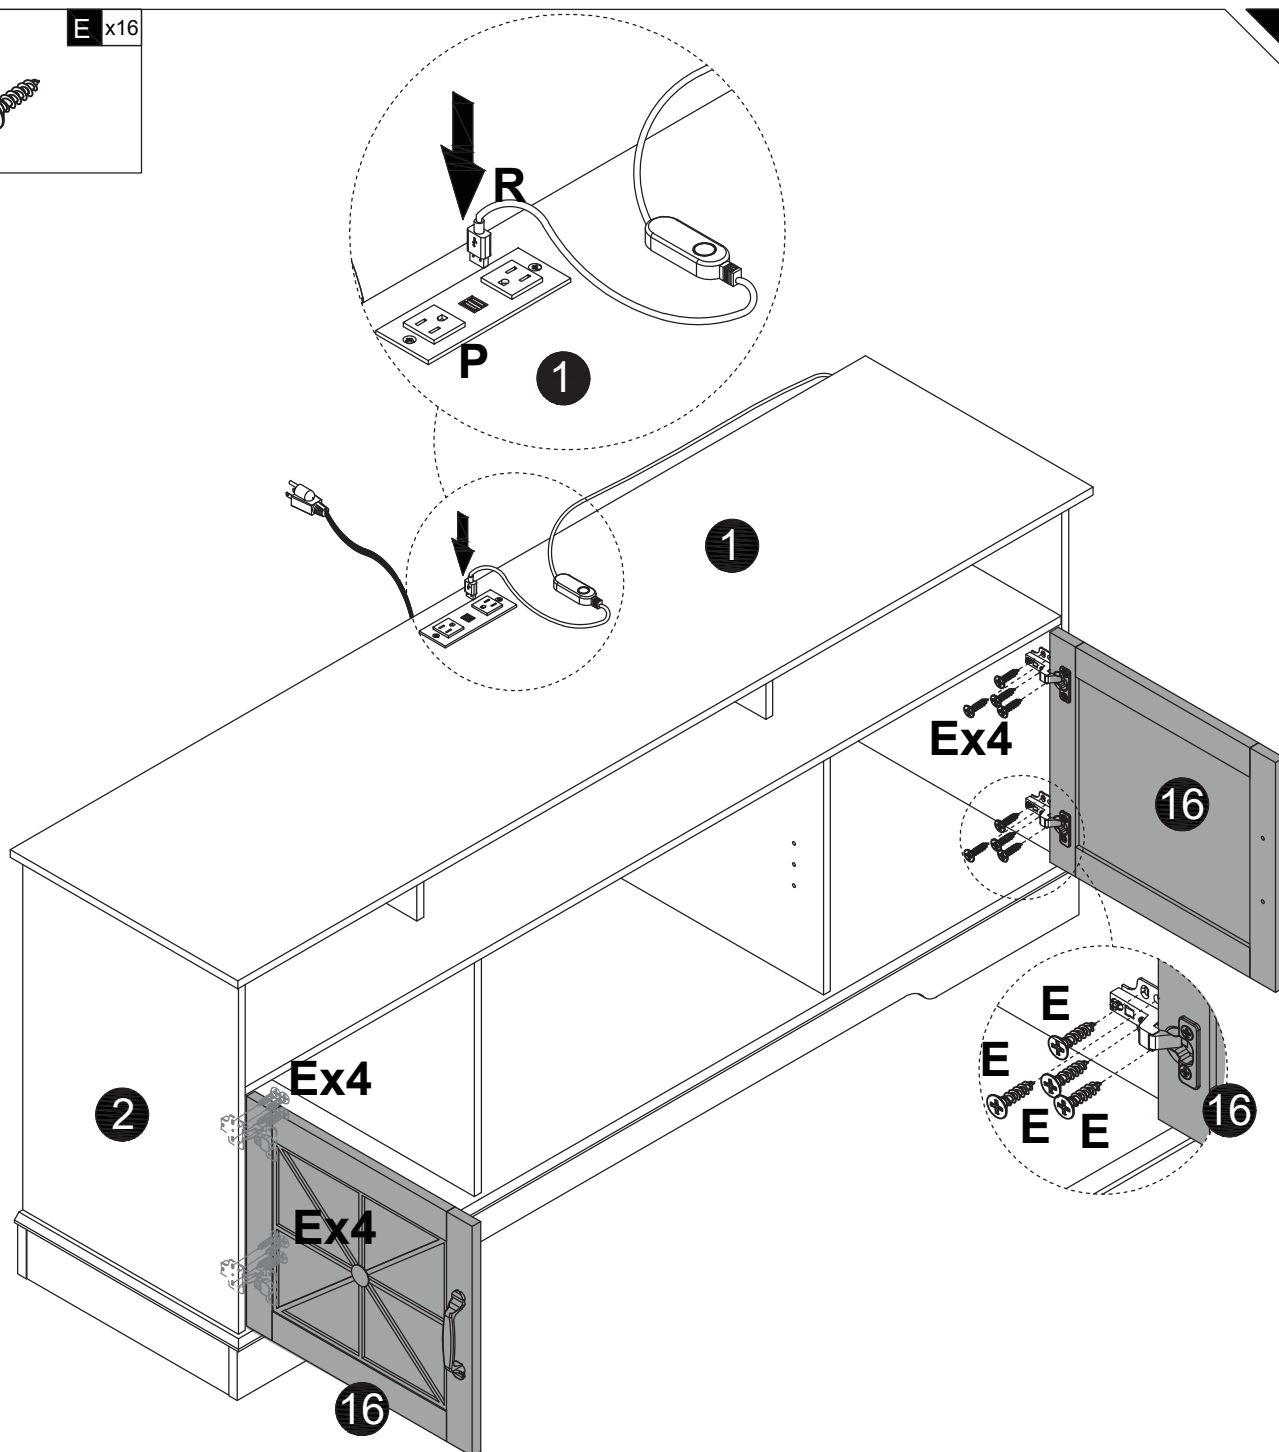

H x4


I x8

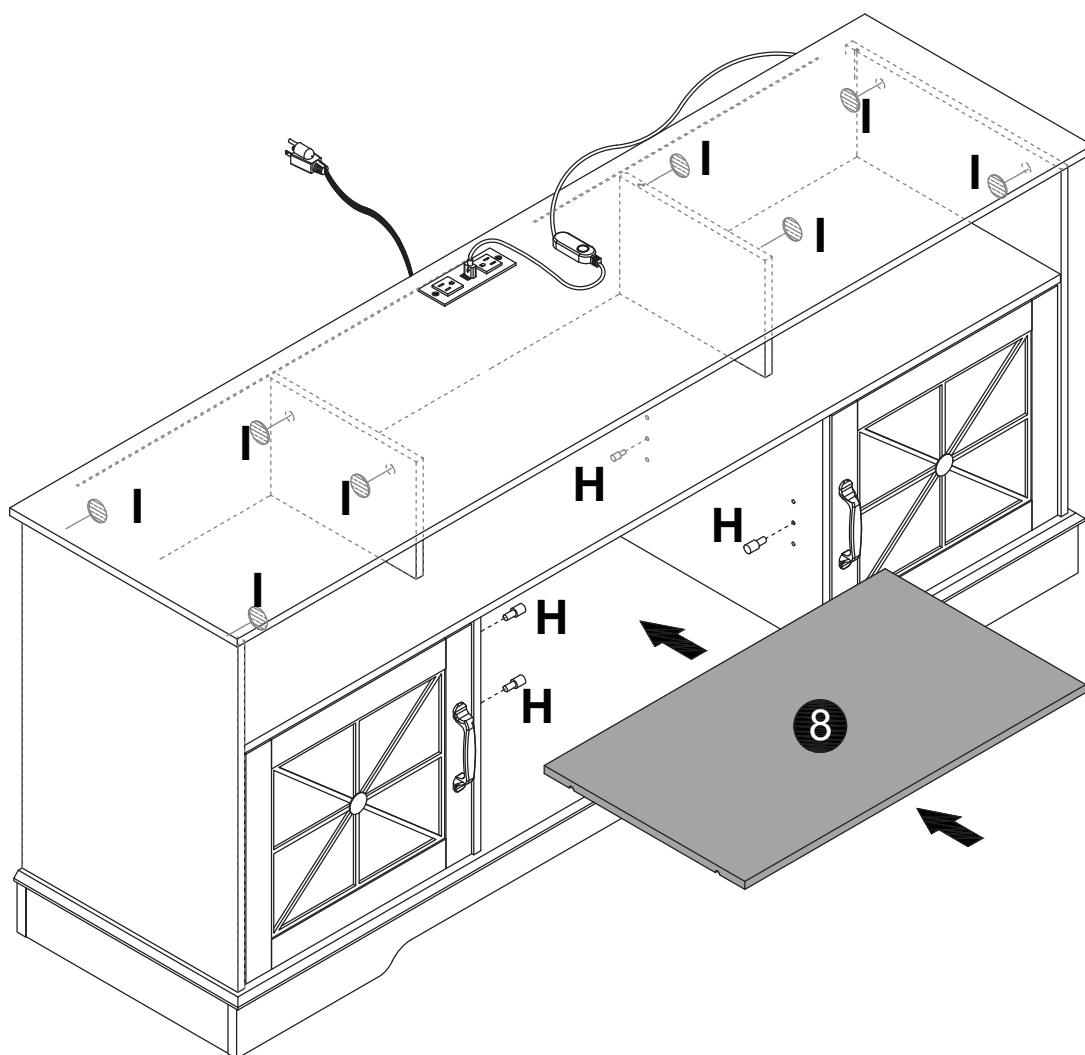

J x2



K x2

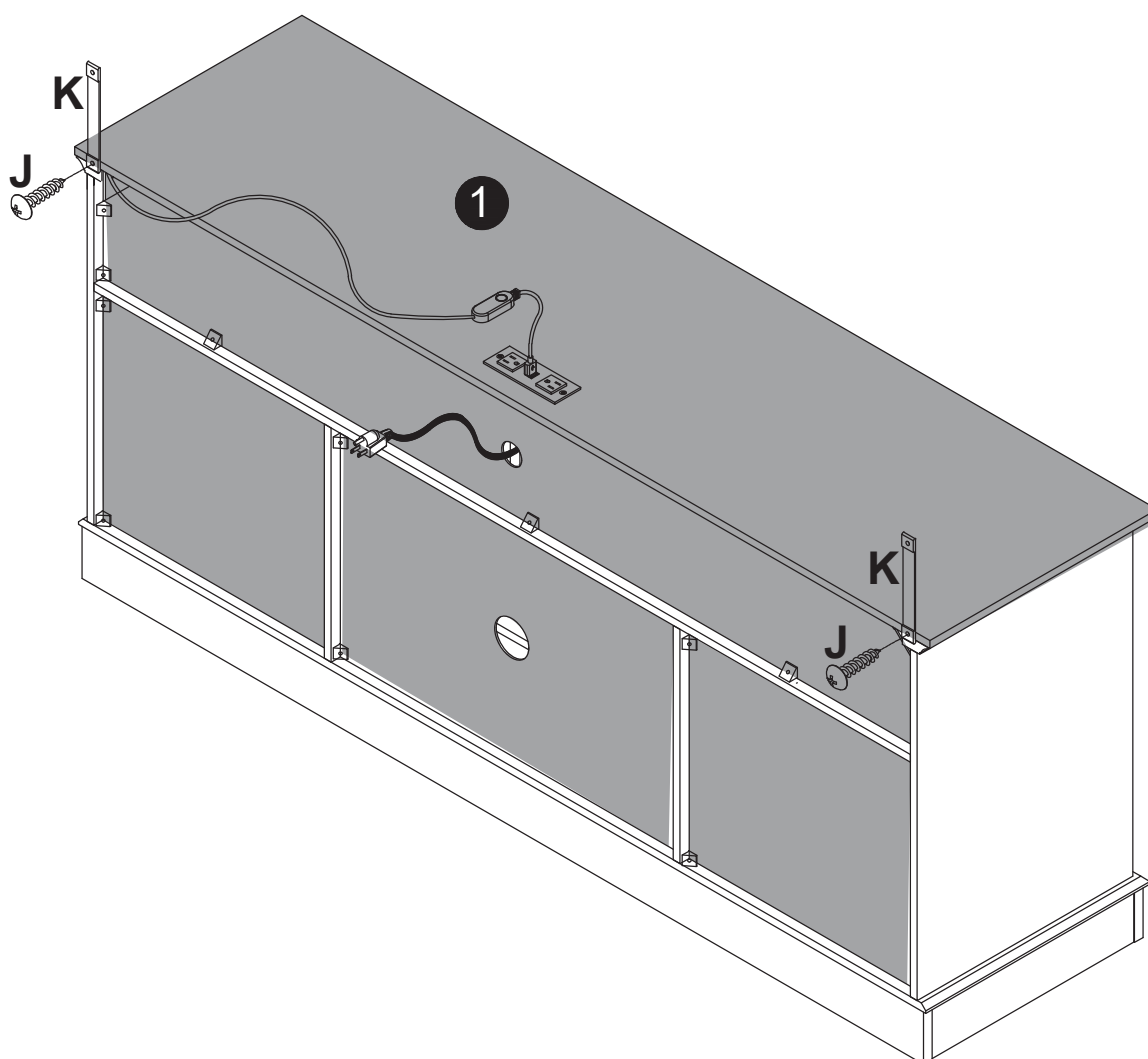


D x2


L x2




Done

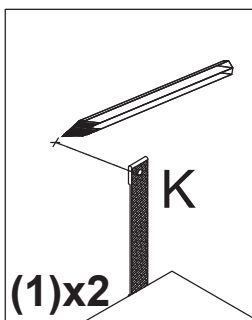


First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

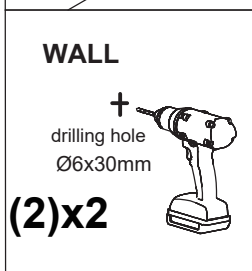


Then use a tape drill to make holes in the wall that are suitable for the product screws.

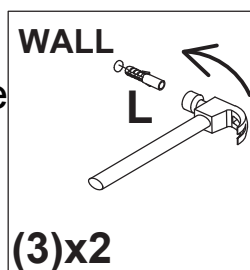


Then, put the expansion bolt into the hole

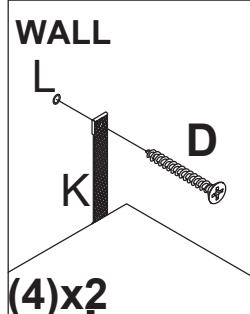

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

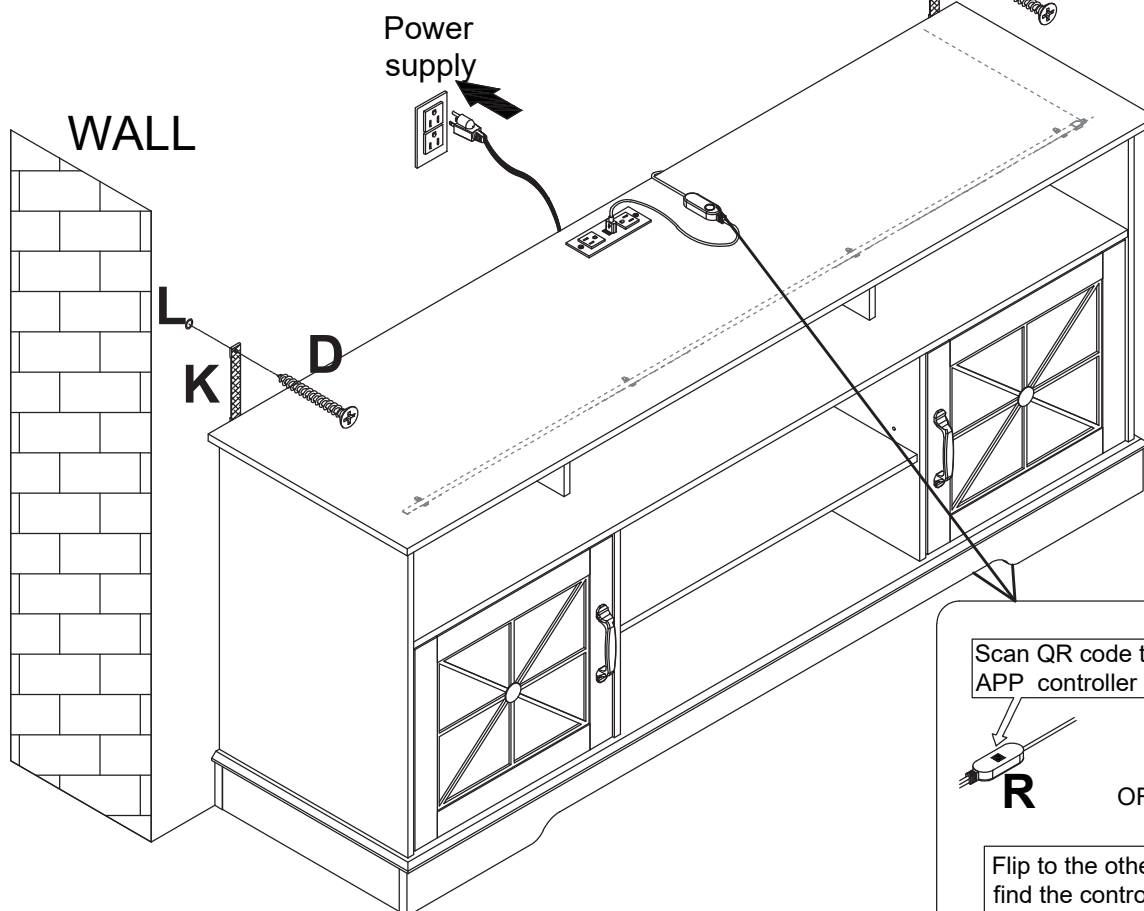

Scan QR code to download APP controller



OR

Flip to the other side to find the control button

