


ASSEMBLY INSTRUCTIONS

24INCH BATH VANITY (COMBO)

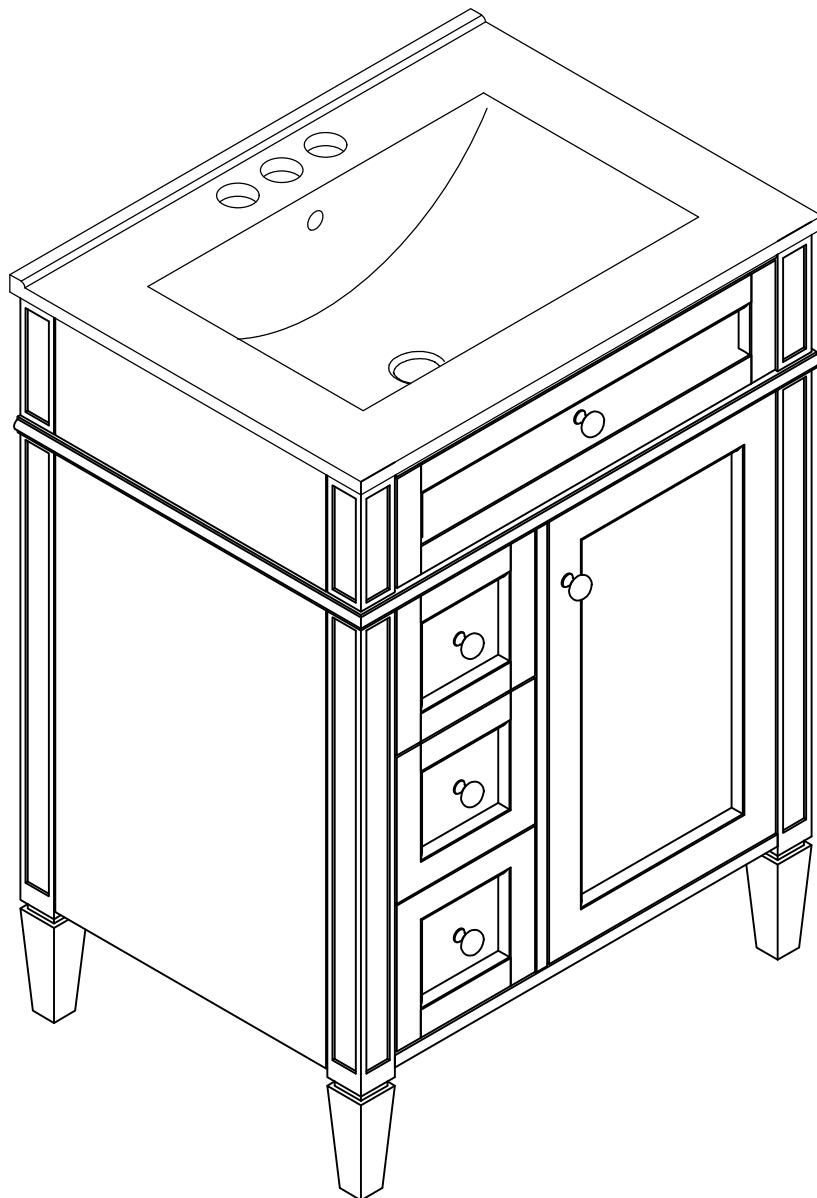

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.



Tools Required




(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

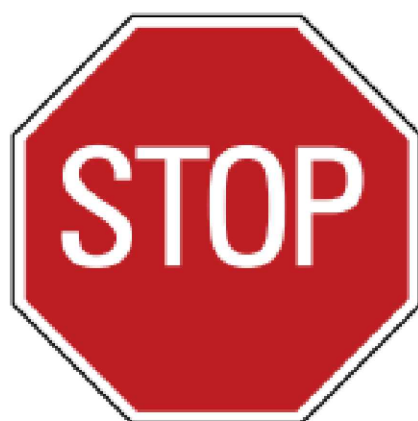

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

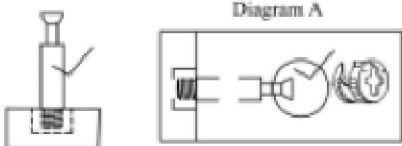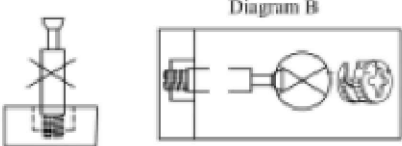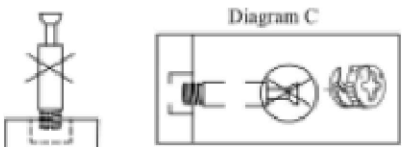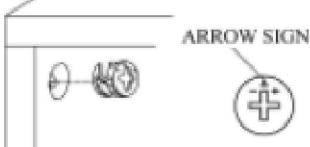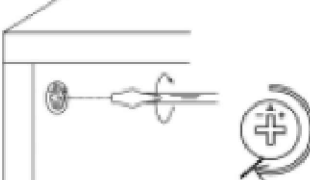	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>


Detail View - VANITY

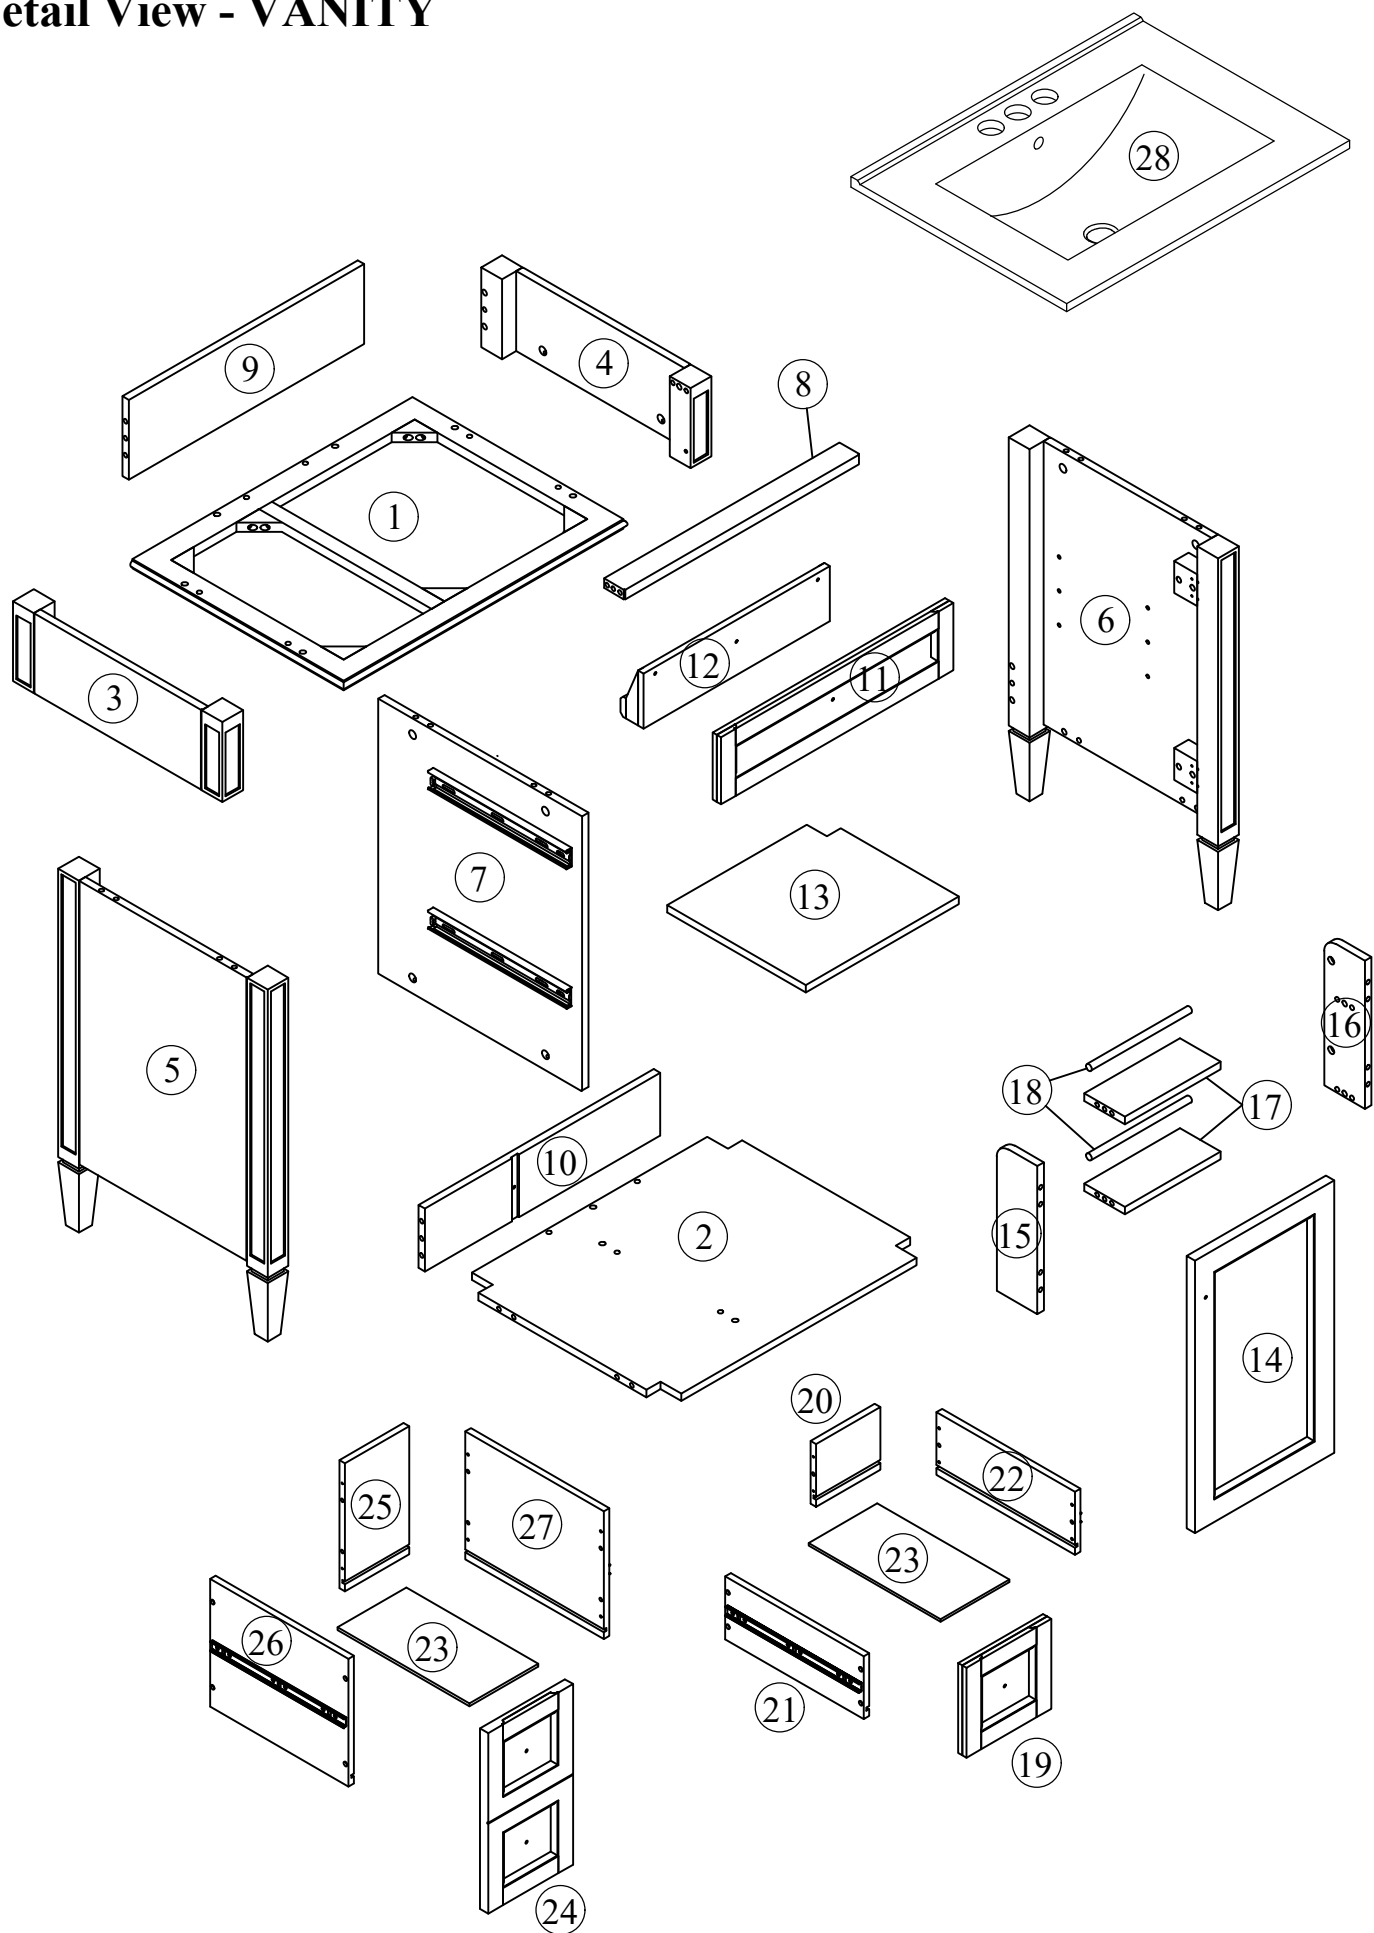

Identifying the Hardware -Identify the hardware using the illustrations below.


Part List

1

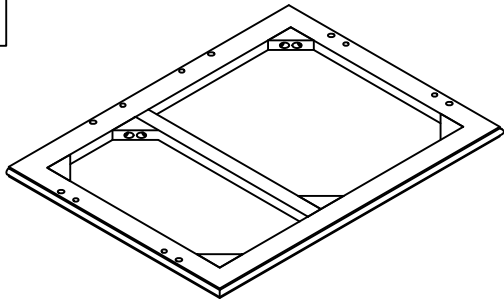


Top Frame - 1pc

2

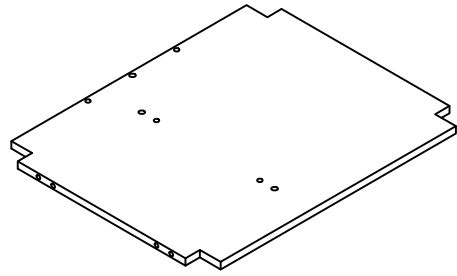


Bottom Panel - 1pc

3

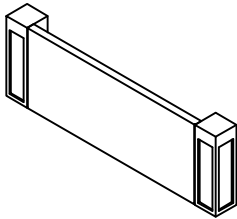


Top Side Panel (L) - 1pc

4

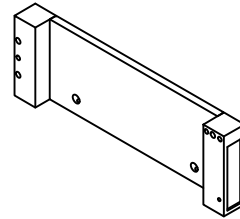


Top Side Panel (R) - 1pc

5

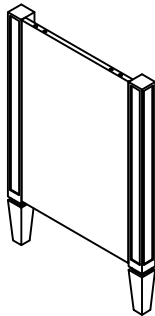


Bottom Side Panel (L) - 1pc

6

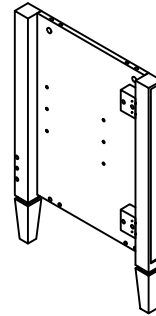


Bottom Side Panel (R) - 1pc

7

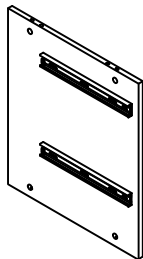


Mid Panel - 1pc

8

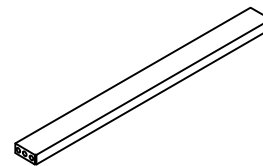


Top Bar Front - 1pc

9

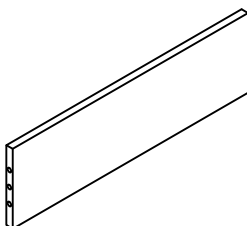

Top Rear Panel - 1pc


10

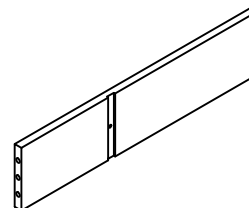

Bottom Rear Panel - 1pc


Part List

11

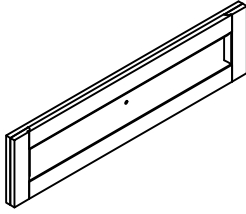


Flip Drawer Face - 1pc

12

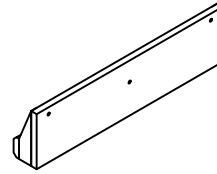


Flip Drawer - 1pc

13

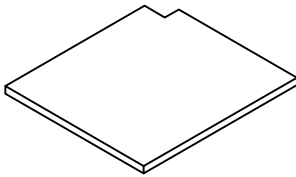

Adjustable Shelf - 1pc

14

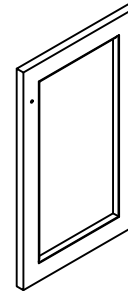


Door - 1pc

15




Door Side Panel (L) - 1pc

16




Door Side Panel (R) - 1pc

17

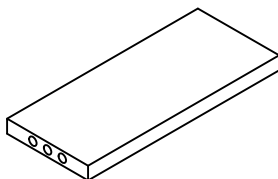


Door Mid Panel - 2pcs

18




Round Bar - 2pcs

19

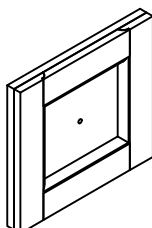

Top Drawer Face - 1pc


20

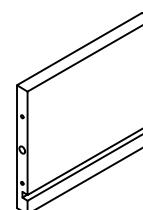

Top Back Drawer - 1pc


Part List

21

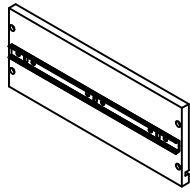


Top Side Drawer (L) - 1pc

22

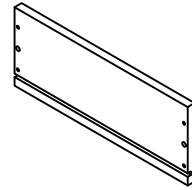


Top Side Drawer (R) - 1pc

23

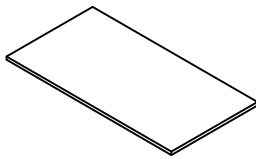


Bottom Drawer - 2pcs

24




Bottom Drawer Face - 1pc

25




Bottom Back Drawer - 1pc

26

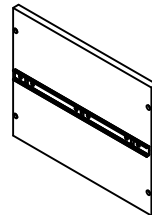


Bottom Side Drawer (L) - 1pc

27

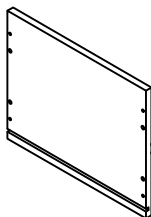









Bottom Side Drawer (R) - 1pc

28

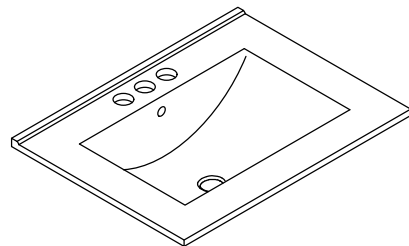


Sink - 1pc

Hardware List




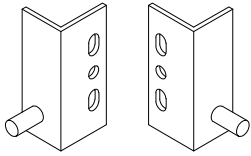



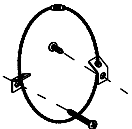
A  $\varnothing 6 \times 35 \text{mm}$	B  $\varnothing 14.5 \times 12 \text{mm}$	C  Handle - 5pcs
D  $\varnothing 5/32" \times 25 \text{mm}$	E  Duo Forte (1pc)	F  Rotary Hinge(2pcs)
G  $\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$	H  Damping hinge - 2pcs	I  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$
J  Laminate pad (4pcs)	K  $\varnothing 8 \times \varnothing 4 \times 19 \text{mm}$	L  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$
M  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$	N  $\varnothing 6 \times 30 \text{mm}$	O  $\varnothing 8 \times 30 \text{mm}$
Round head screw - 16pcs	Wood dowel - 12pcs	Wood dowel - 40pcs
P  Anti fall hardware (2sets)		

STEP: 1


A




29PCS

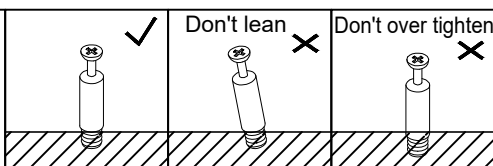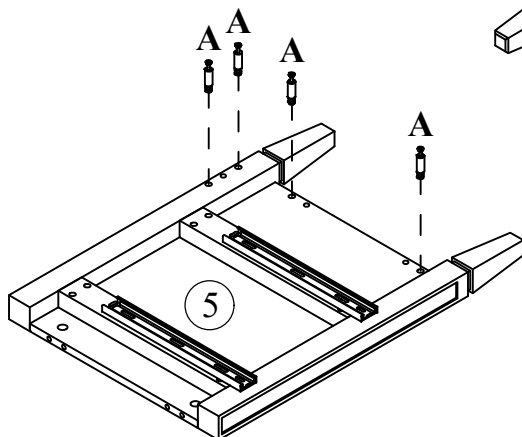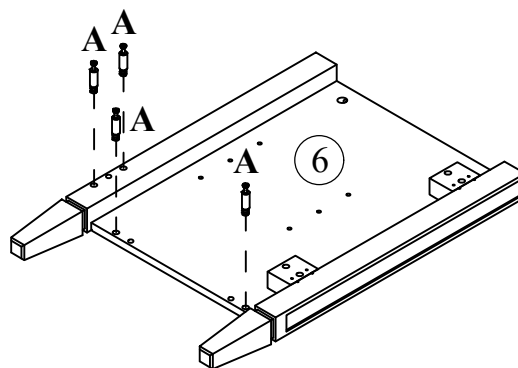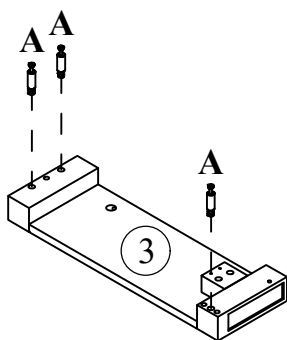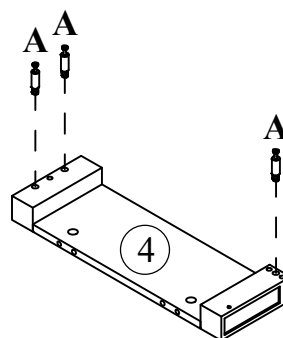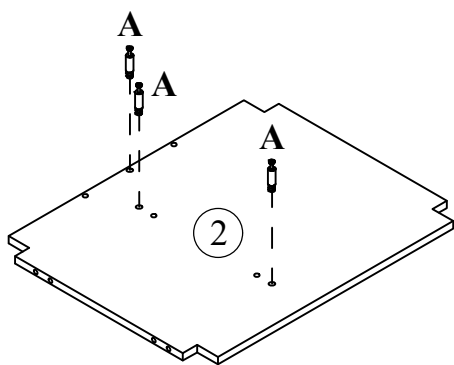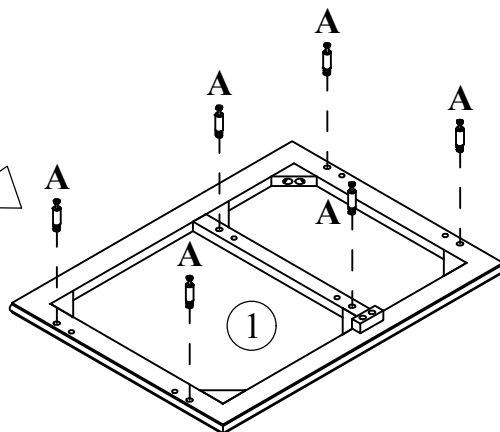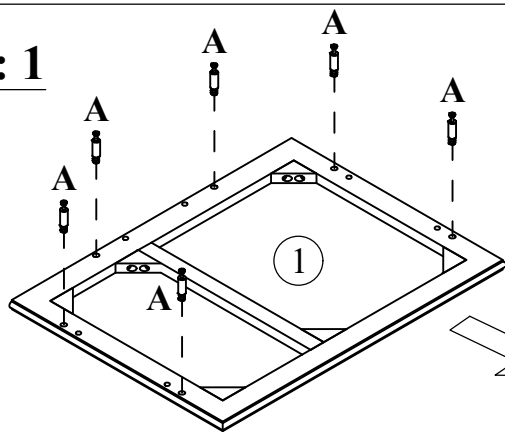

STEP: 2

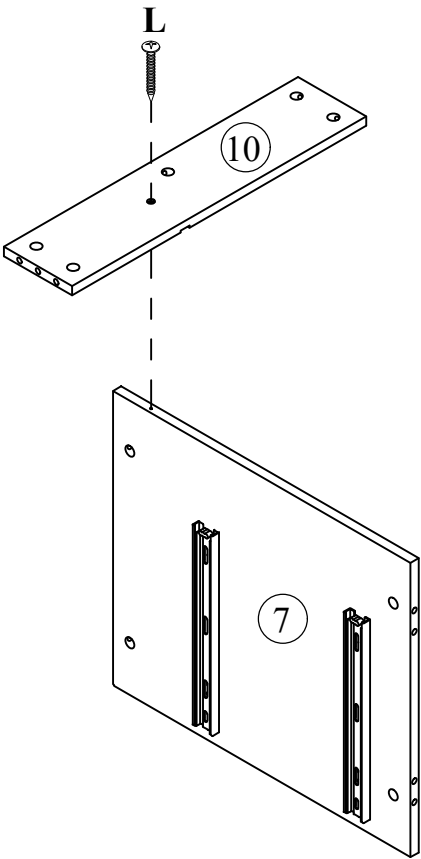


L



1PC

STEP: 3

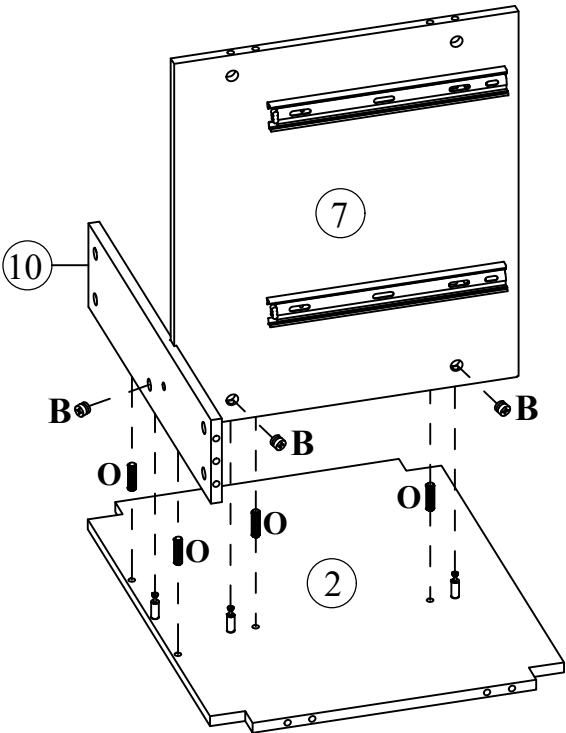


B




3PCS


O




4PCS

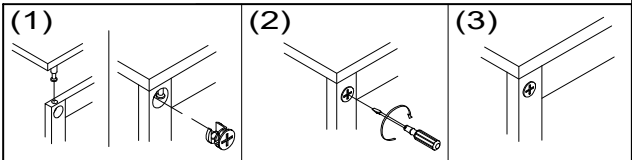



STEP: 4

B	O
	
4PCS	3PCS




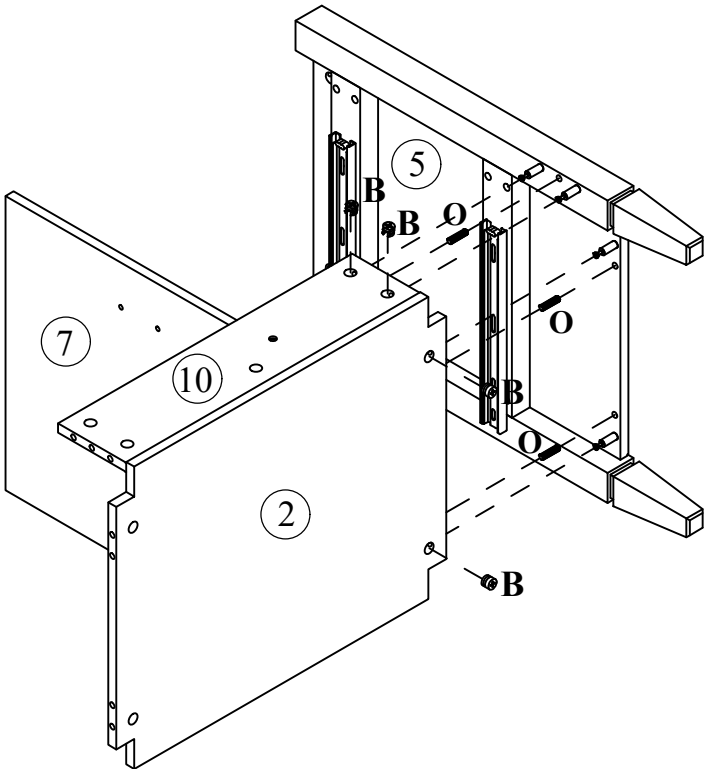


STEP: 5

B	O
	
4PCS	3PCS

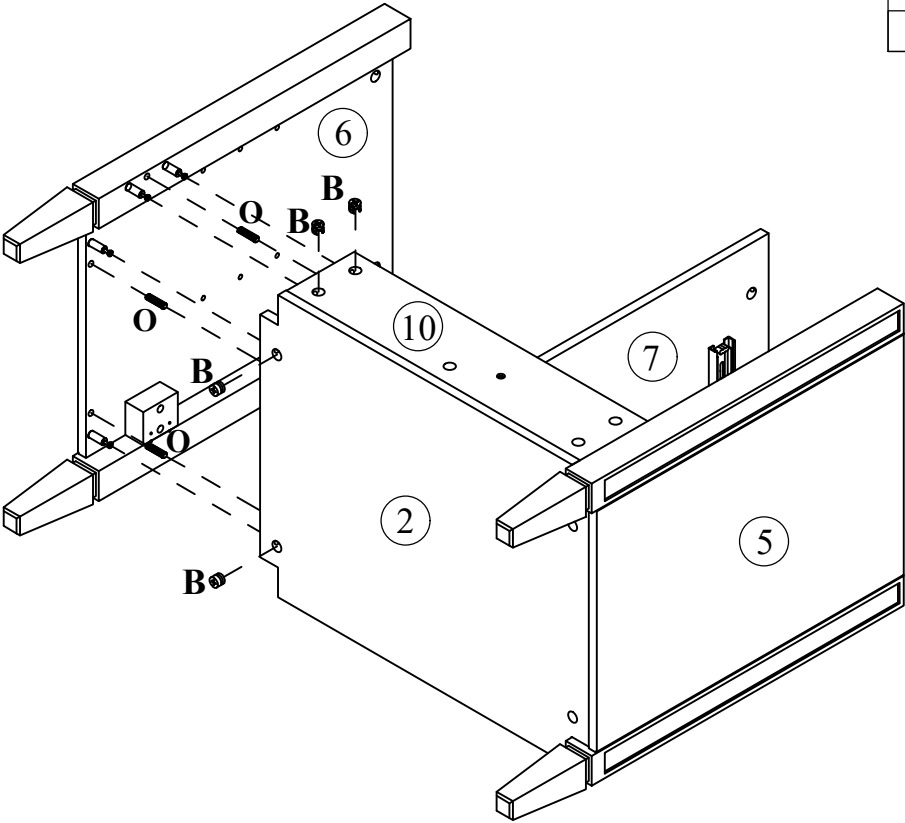

STEP: 6

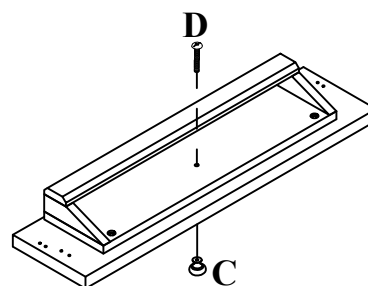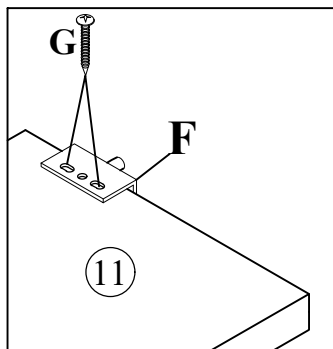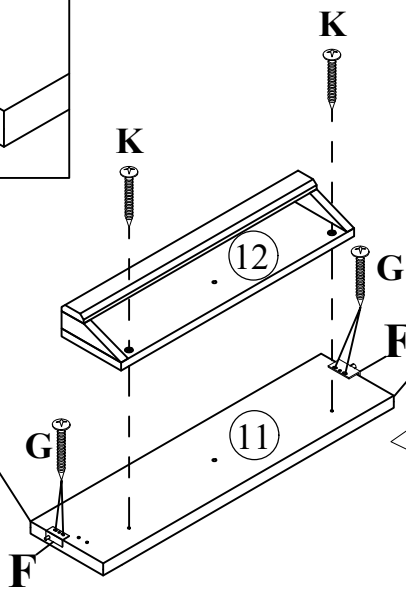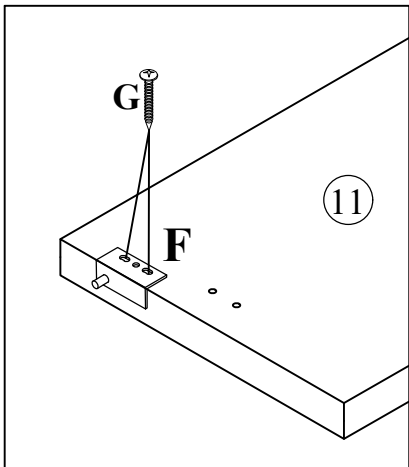


G	C	D	K
			
4PCS	1PC	1PC	2PCS



G

F




F

2PCS

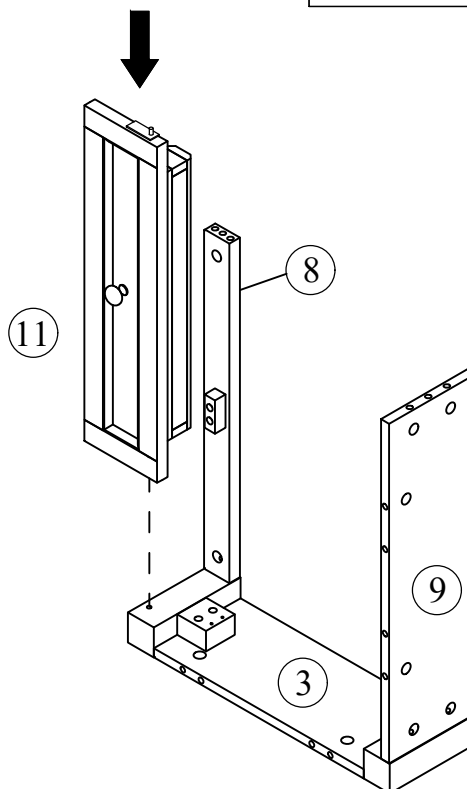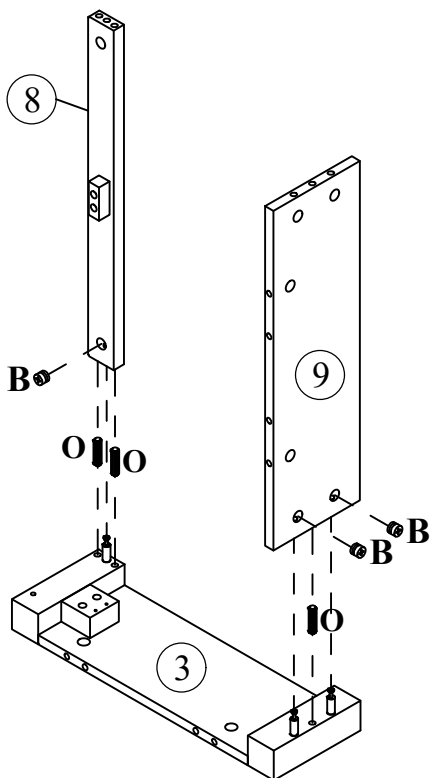STEP: 7




B	O
	
3PCS	3PCS

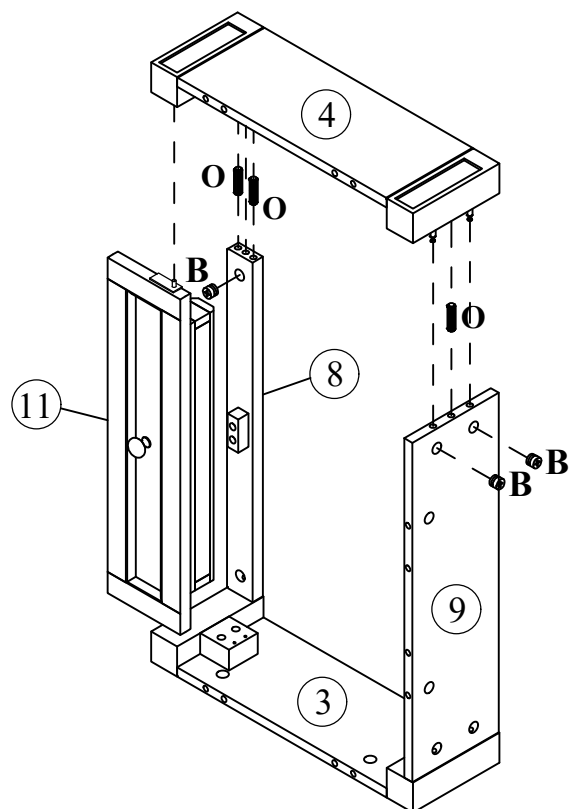
STEP: 8




B	O
	
3PCS	3PCS


STEP: 9

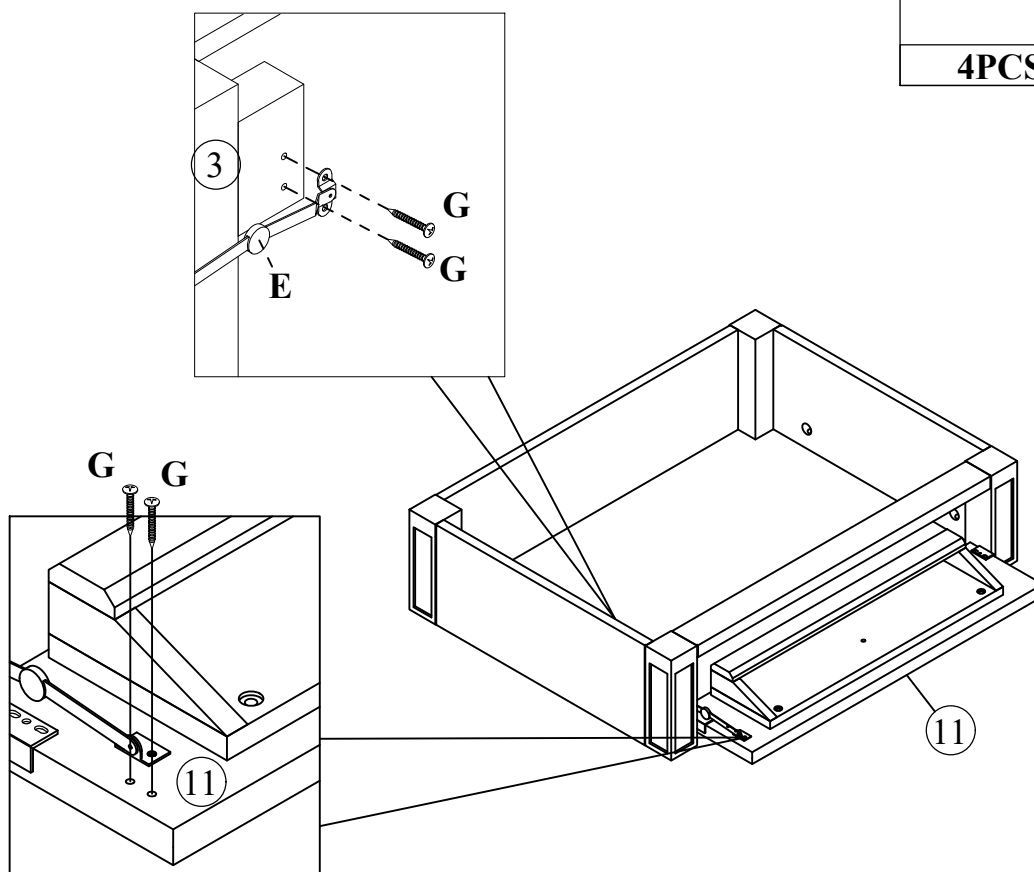


G	E
	
4PCS	1PC


STEP: 10

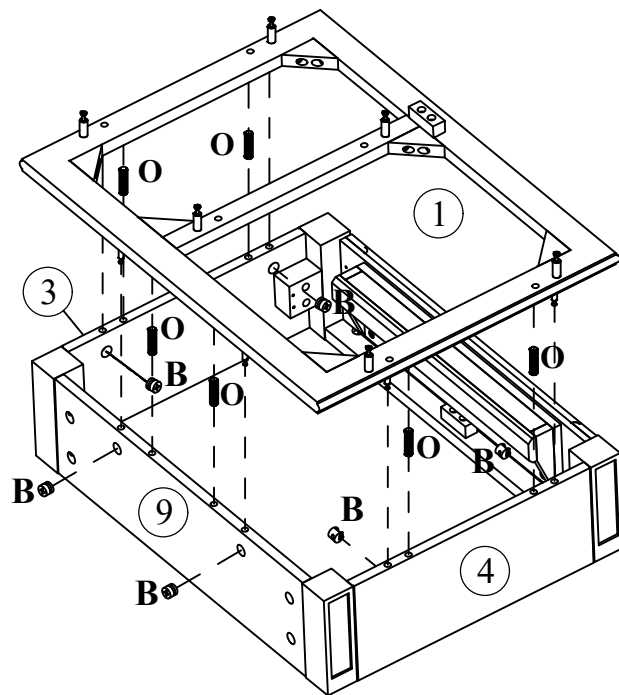



B	O
	
6PCS	6PCS

STEP: 11


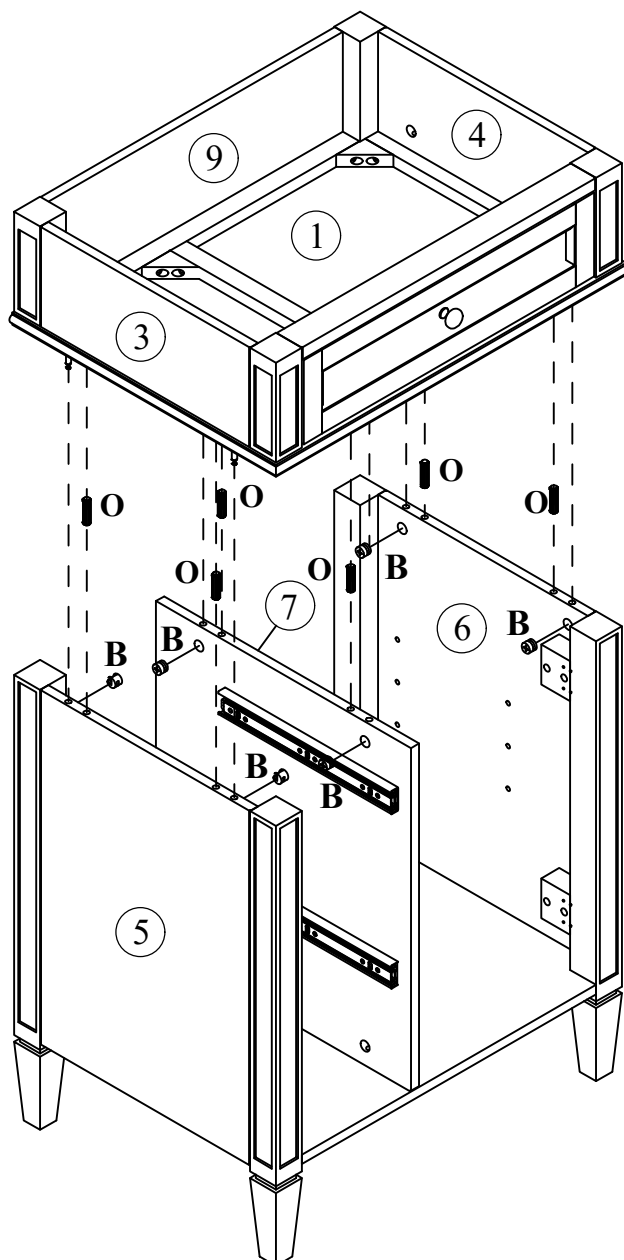


B	O
	
6PCS	6PCS


STEP: 12


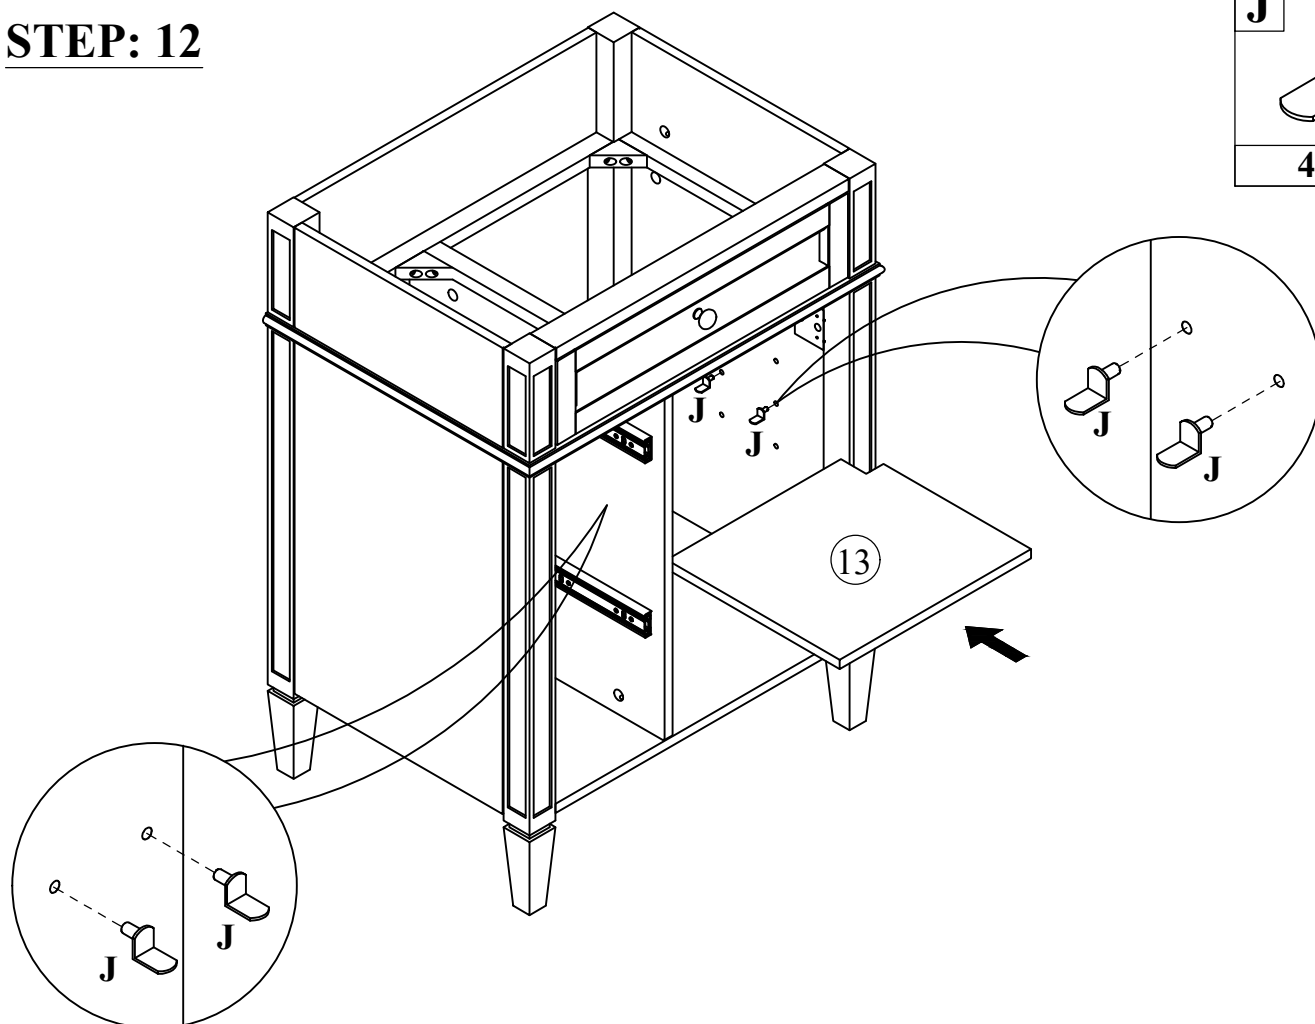
J**4PCS**

STEP: 13

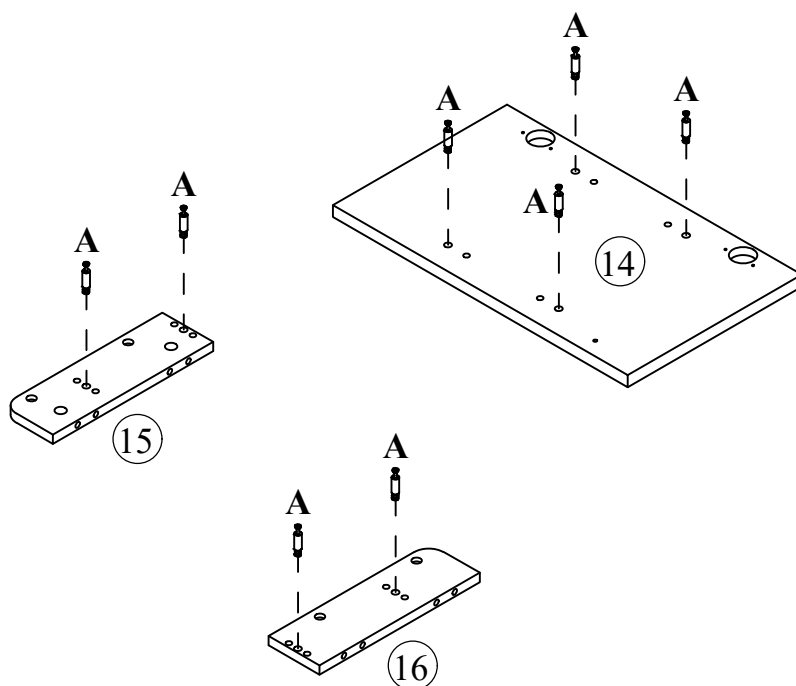
A**8PCS**

STEP: 14

B	O
	
8PCS	12PCS

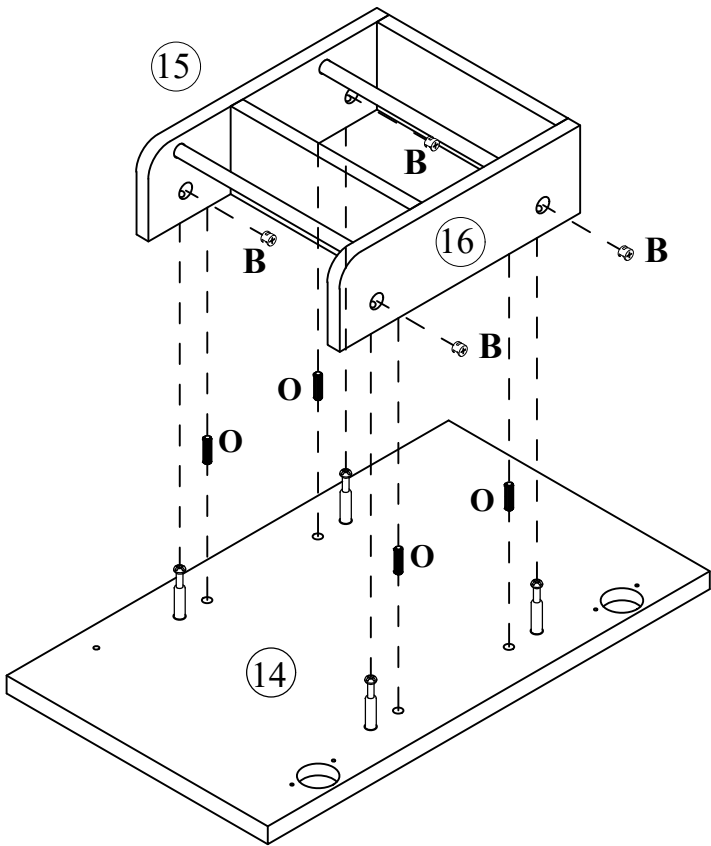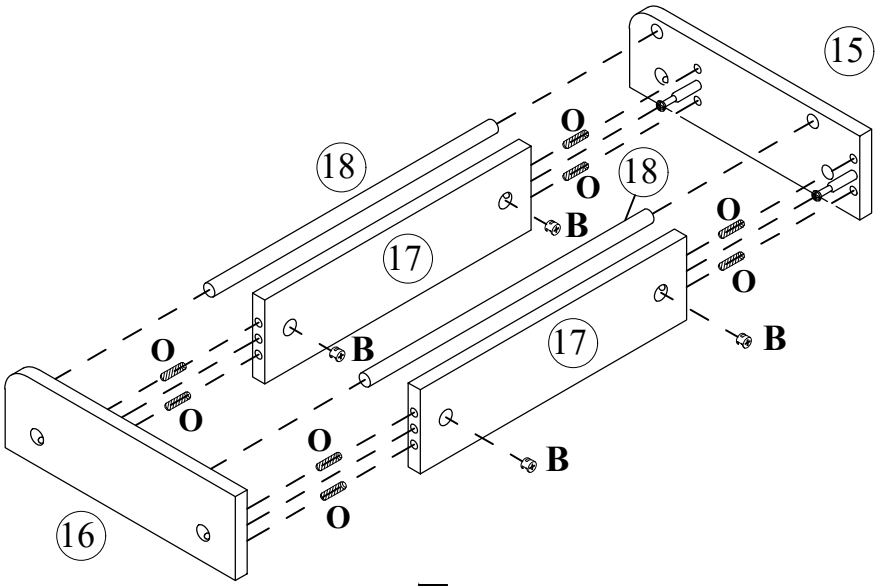




STEP: 15

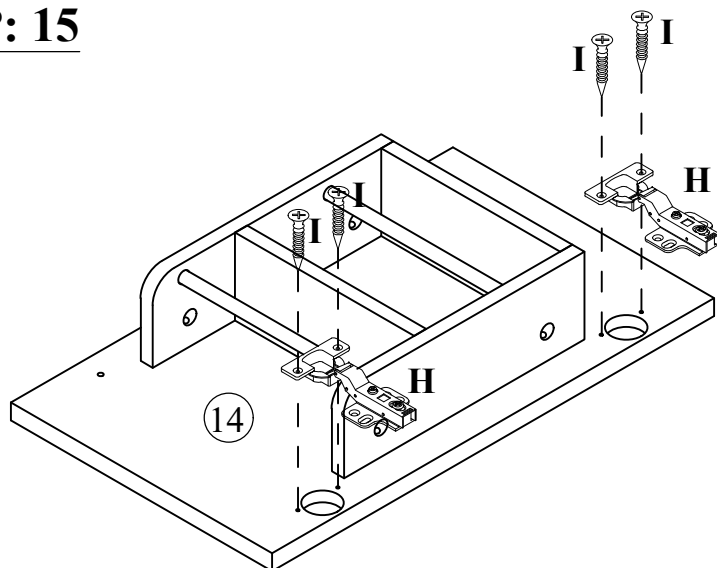


H	I
	
2PCS	4PCS



STEP: 16

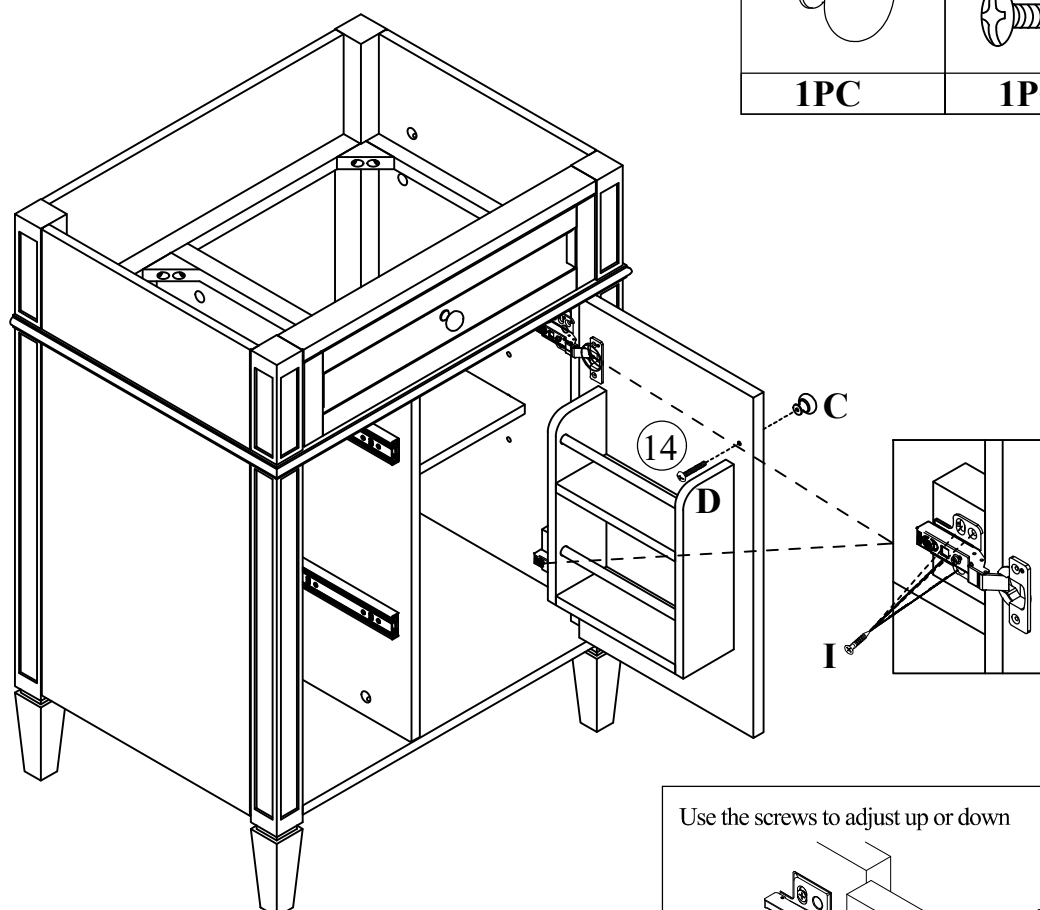


C	D	I
		
1PC	1PC	8PCS



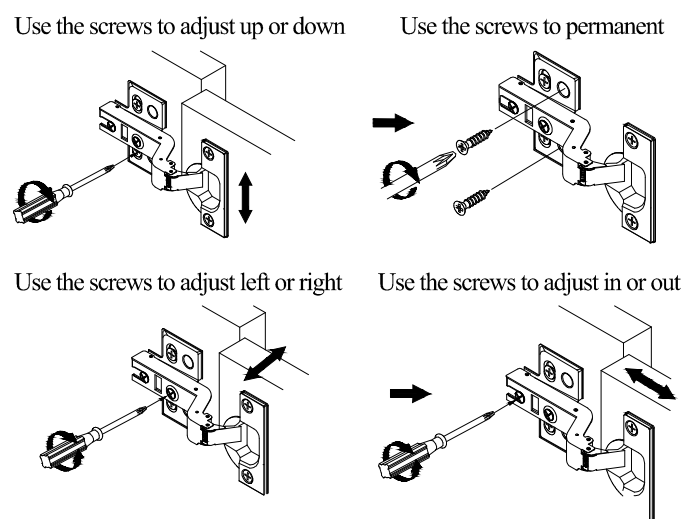



STEP: 17

M	C	D	N
			
8PCS	1PC	1PC	4PCS

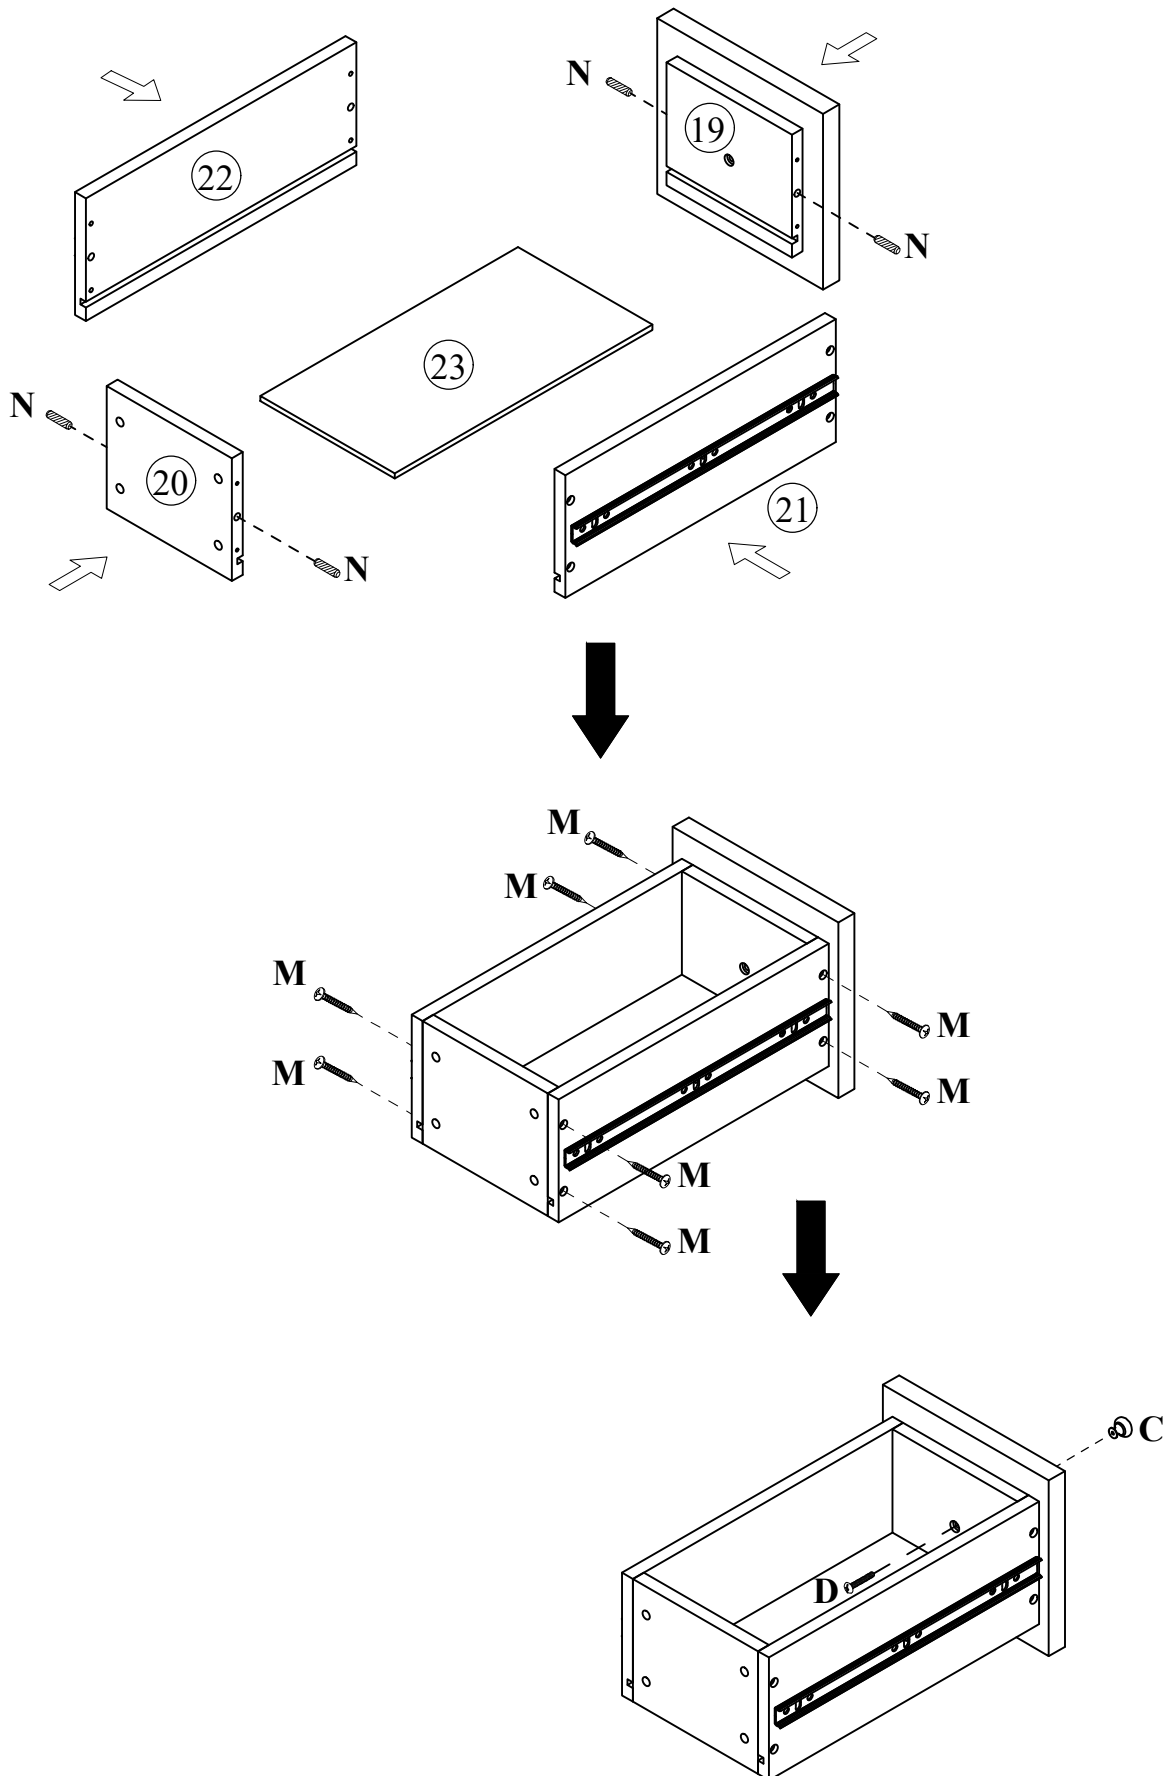


STEP: 18


M	C	D	N
			
8PCS	2PCS	2PCS	8PCS

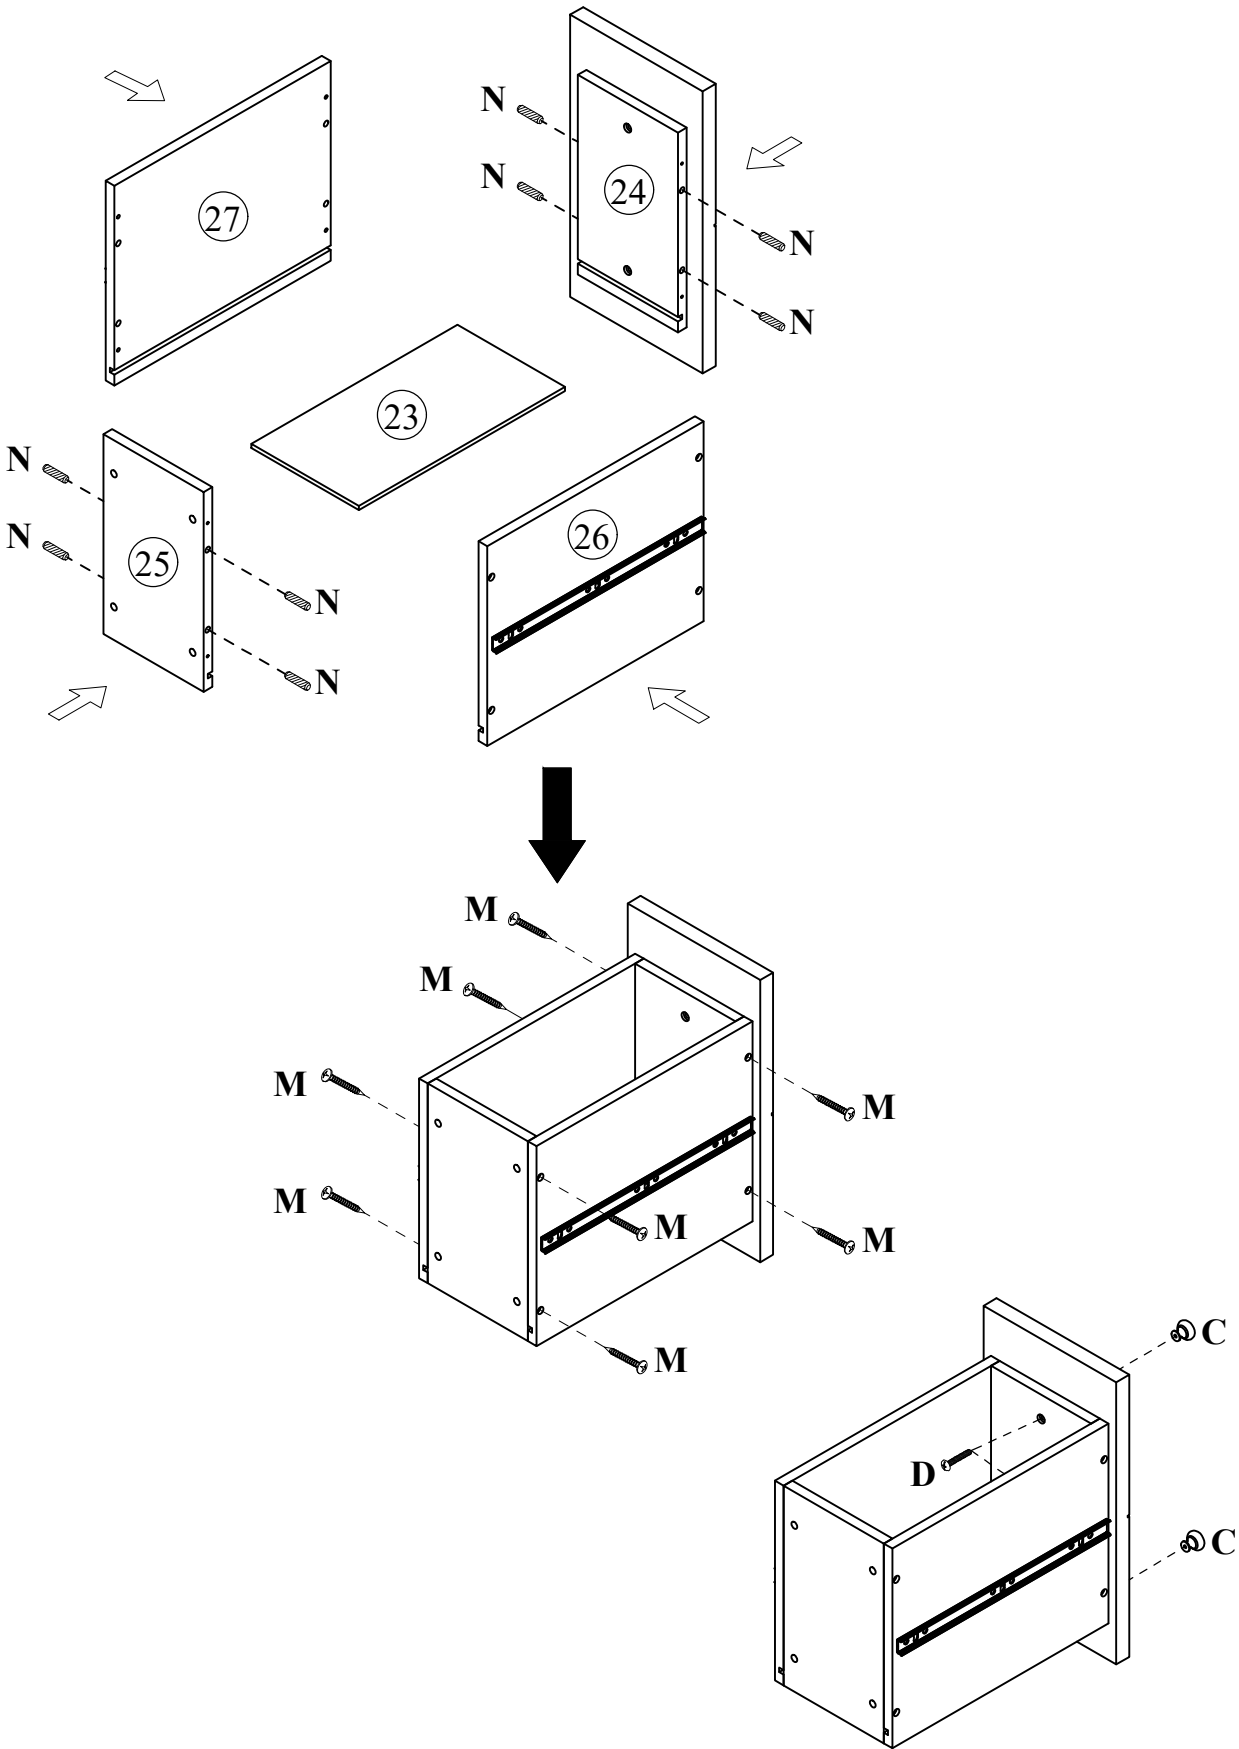



STEP: 19

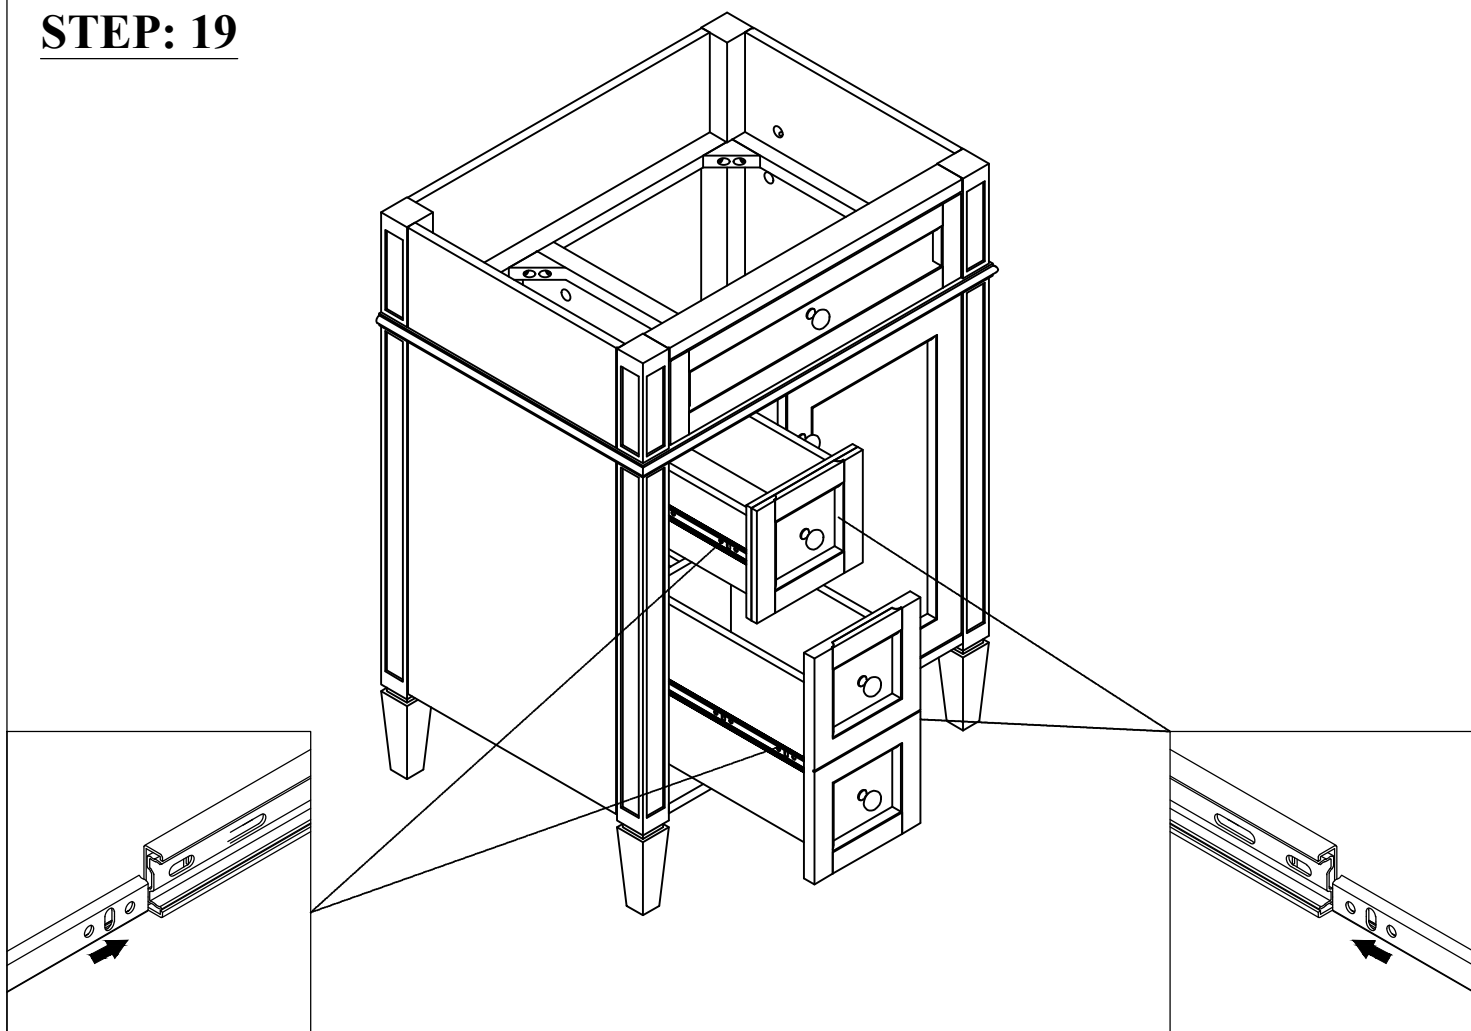


STEP: 20

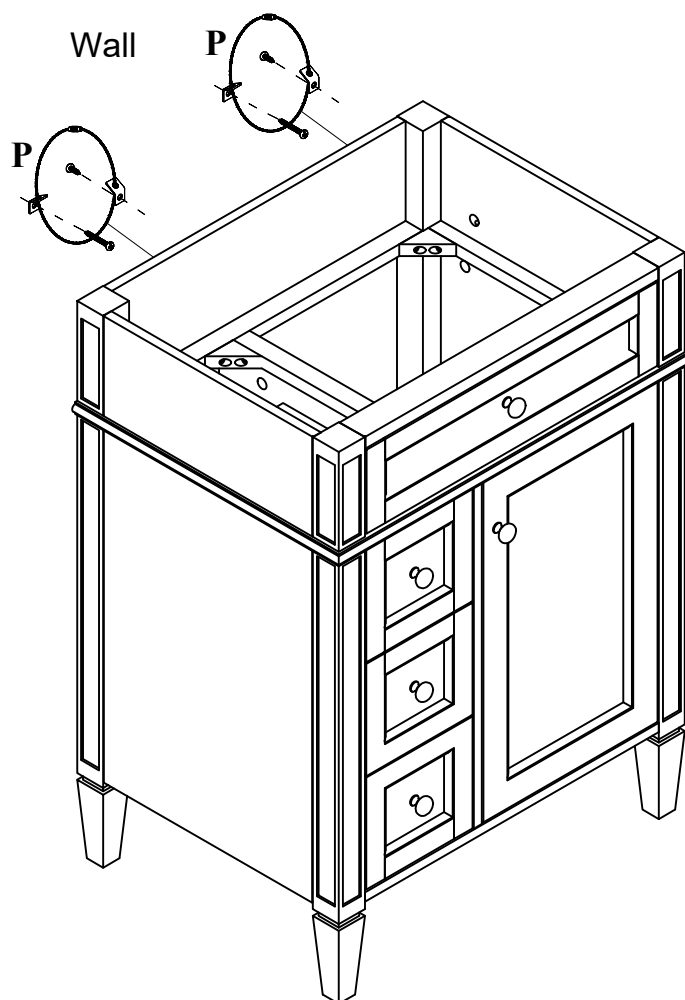

Wall

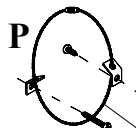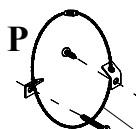


P

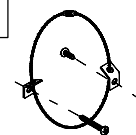

2SETS

STEP: 21

Install the sink on the cabinet with glue.
Let stand for 24 hours

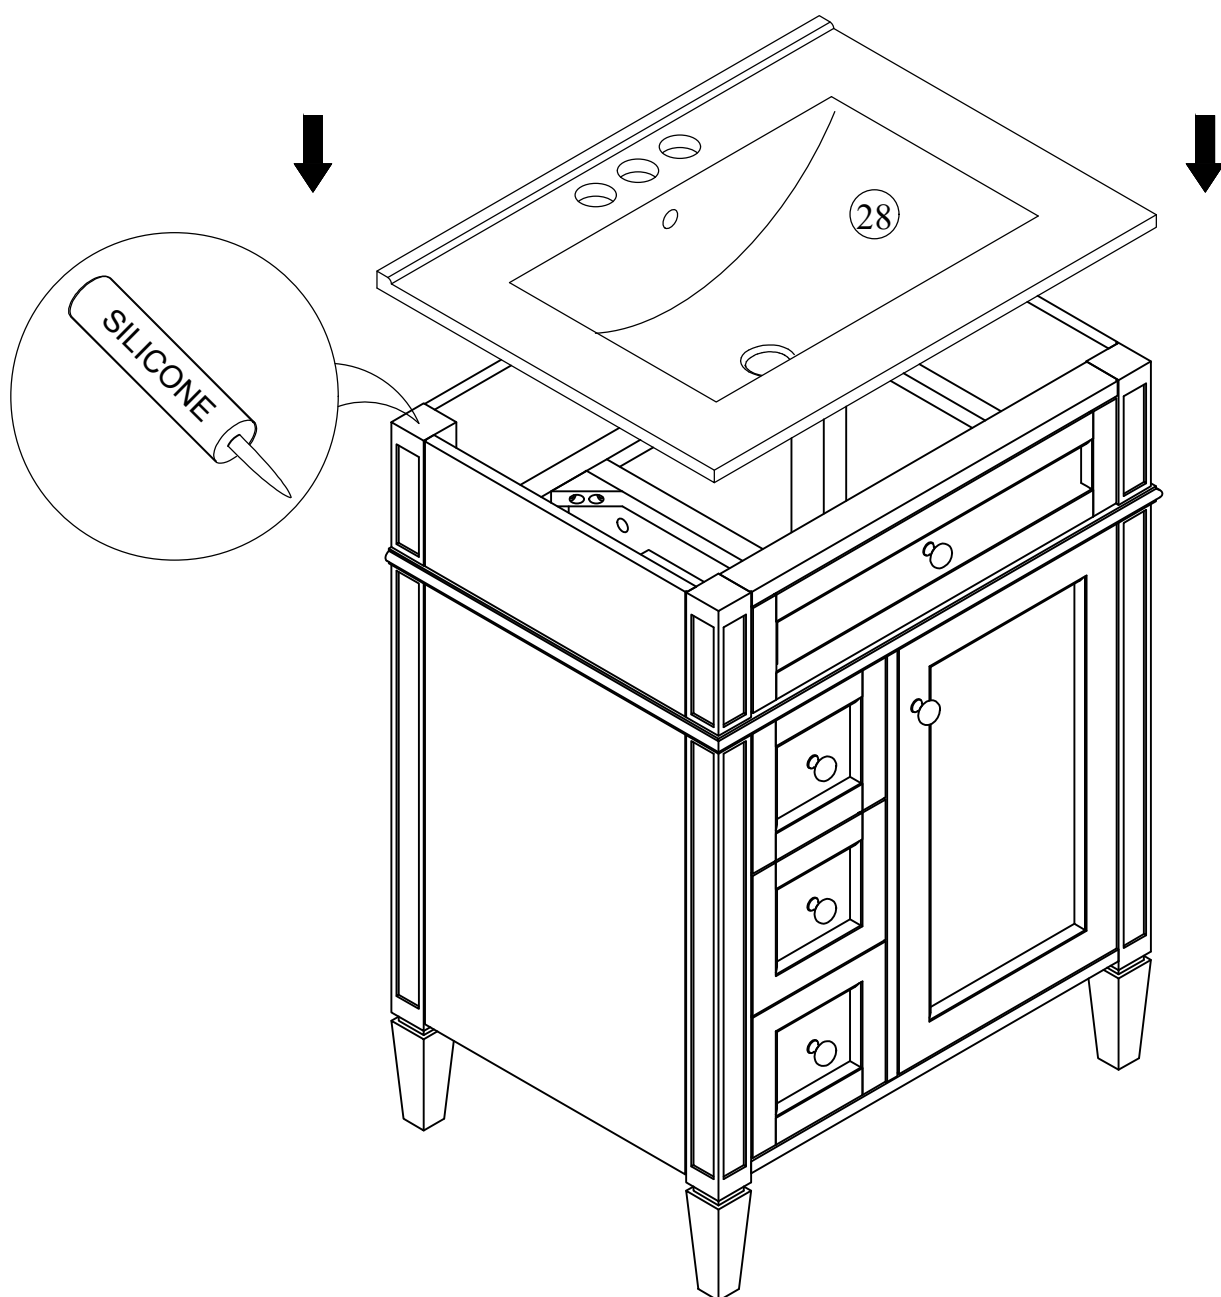

*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 22

