






ASSEMBLY INSTRUCTION FOR

SOFA - 87"

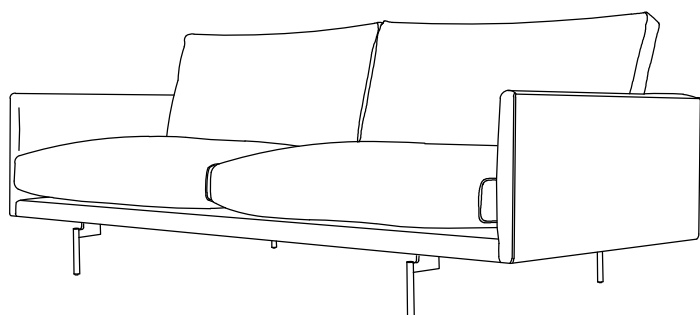


Hardware List


A		Bolt	M8x40mm	16
B		Allen Key	5mm	1

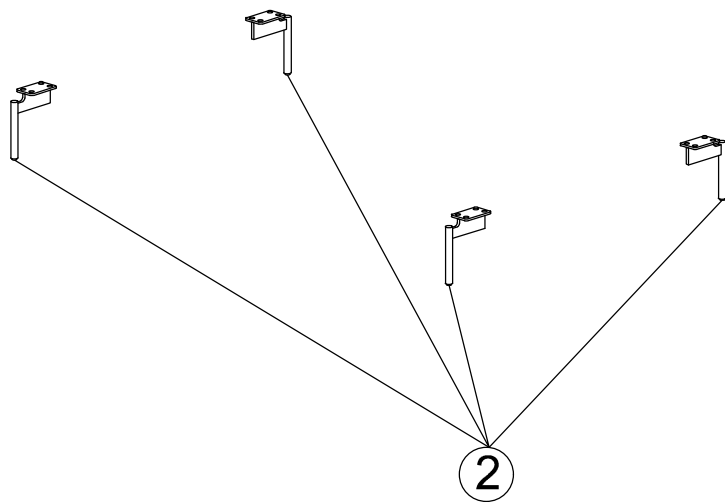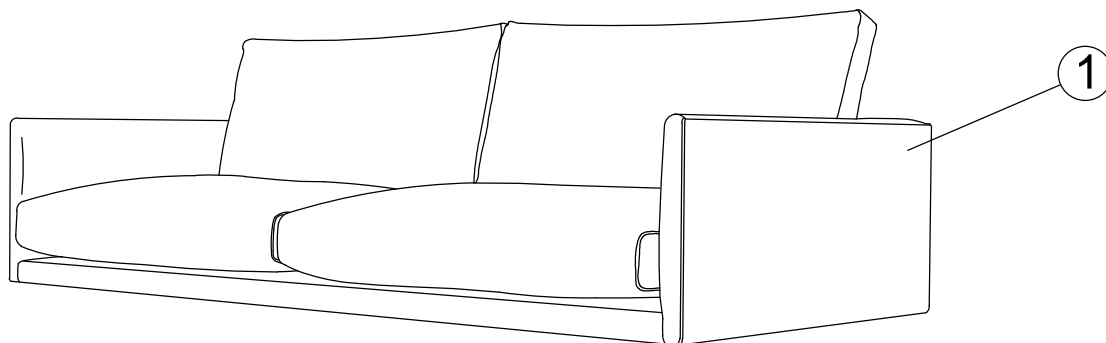

Step 1

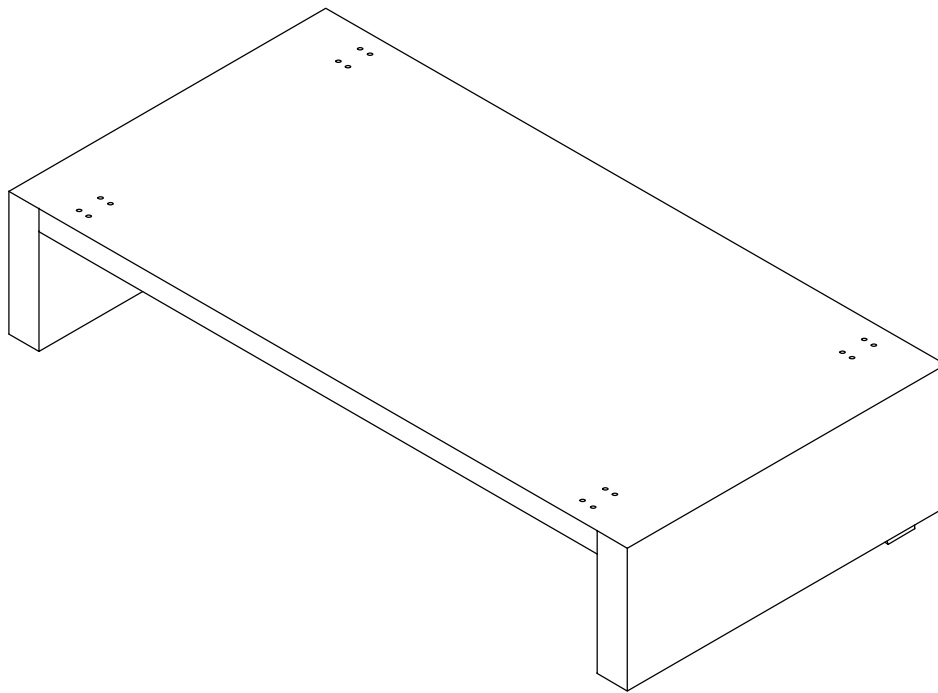

Step 2

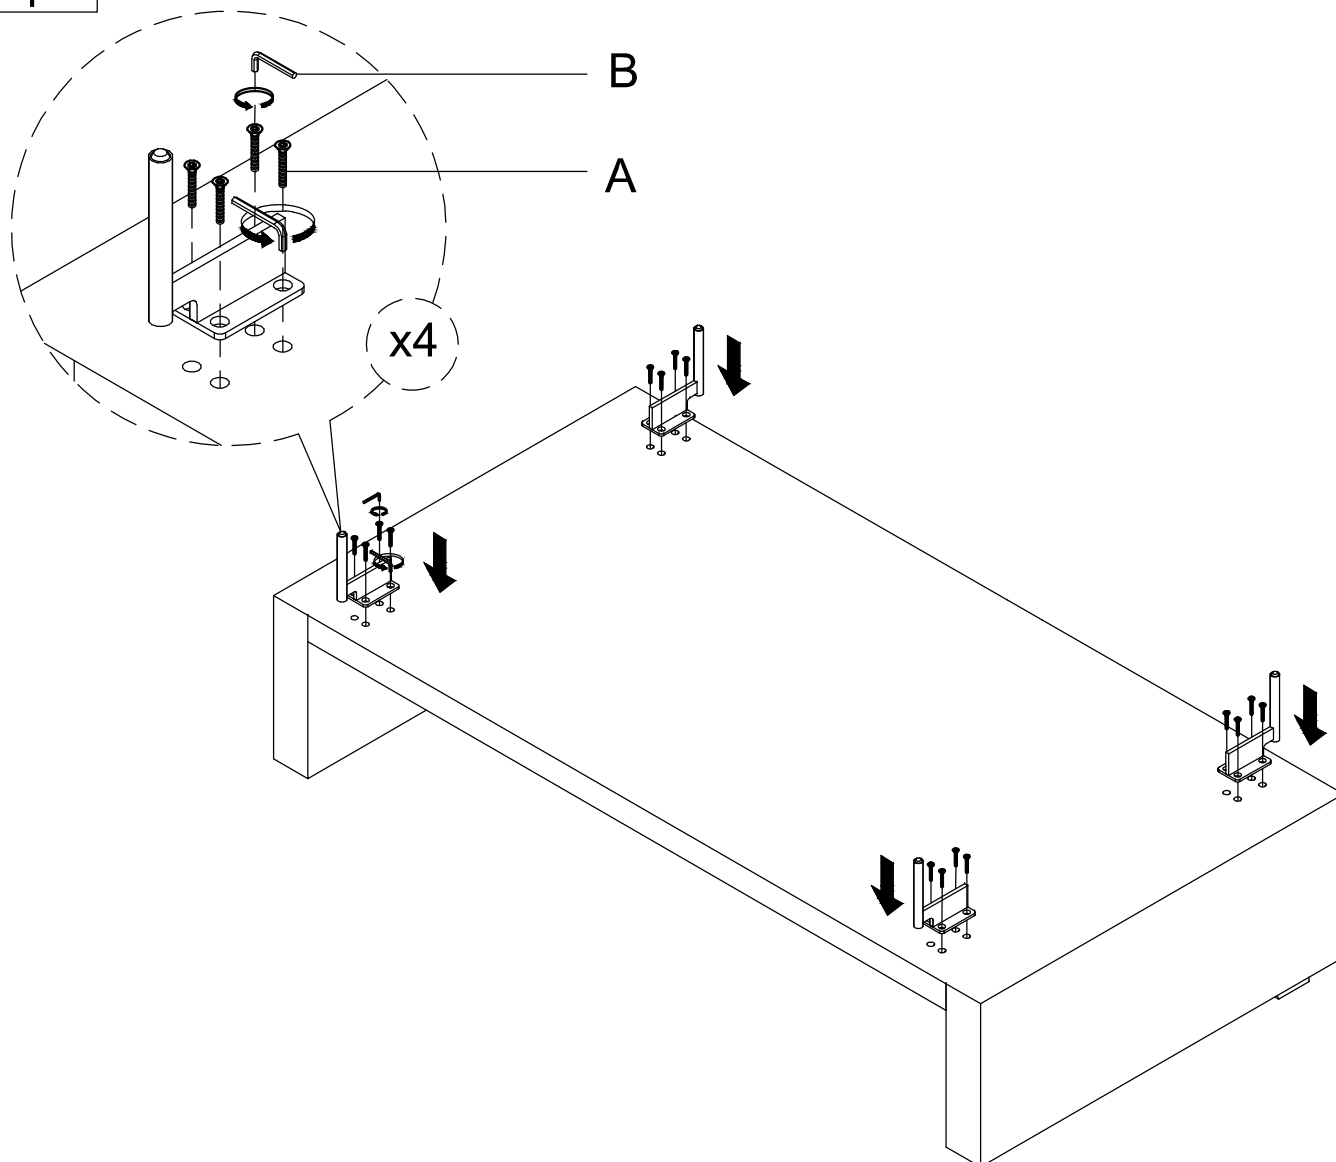

Step 3

