


ORIGINAL INSTRUCTION MANUAL

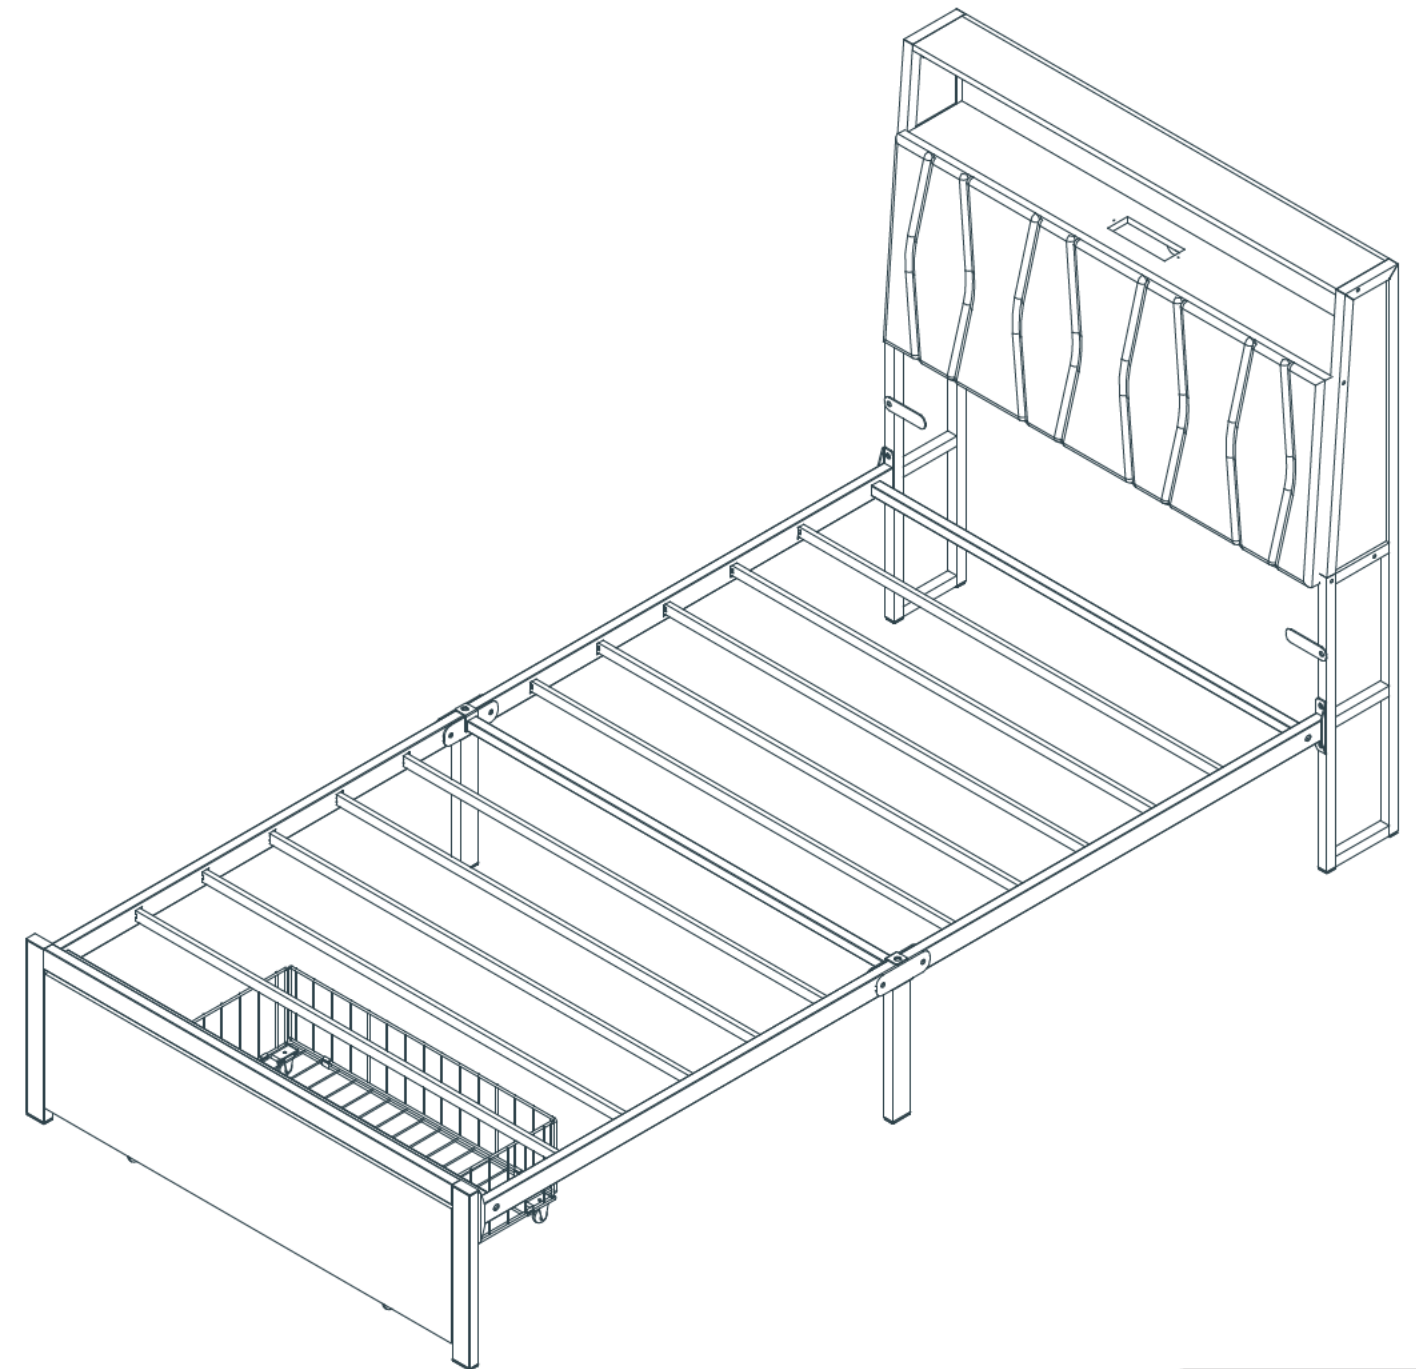


Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Assembly Instruction


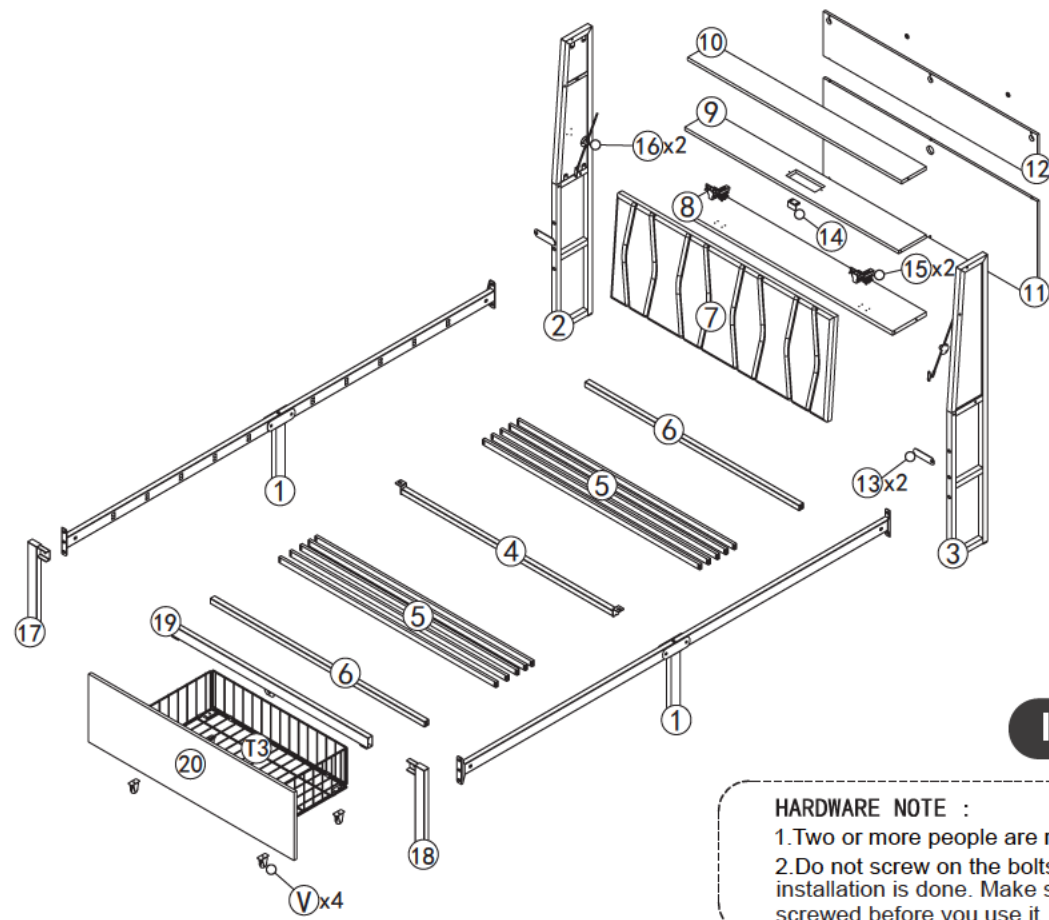


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.



Components

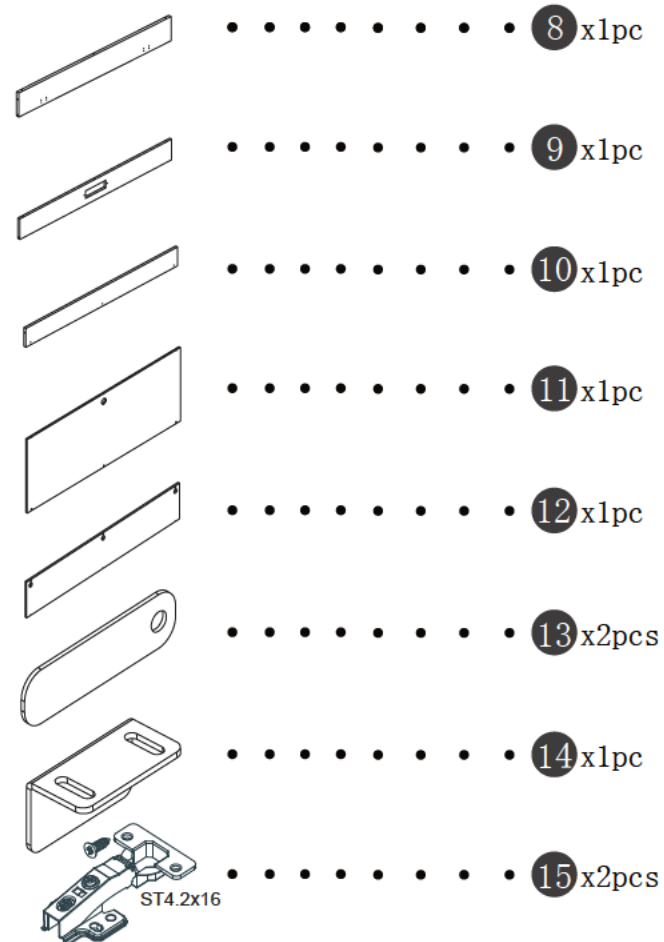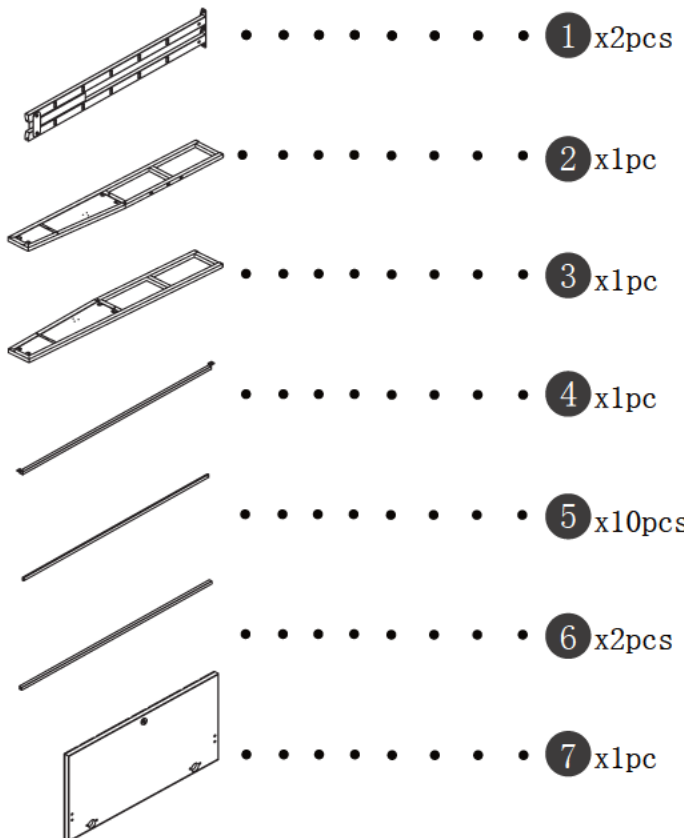




21

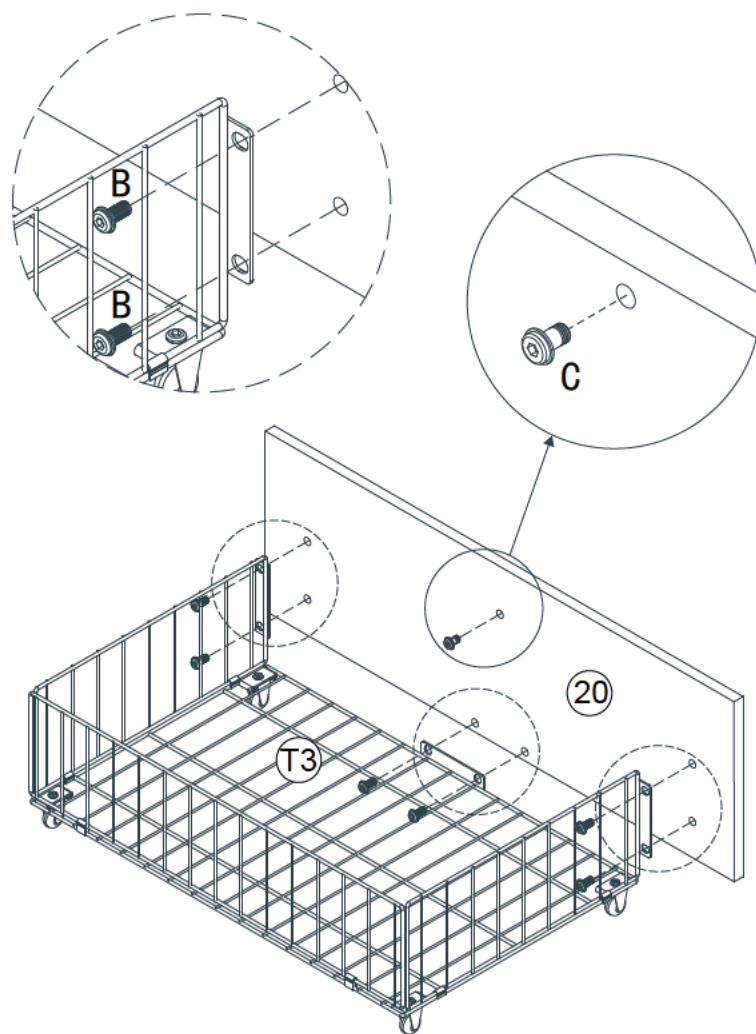


| | | | |
|---|--|---------------------|------|
| B | | M8x12 white zinc | 6pcs |
| C | | M8x14 | 1pc |

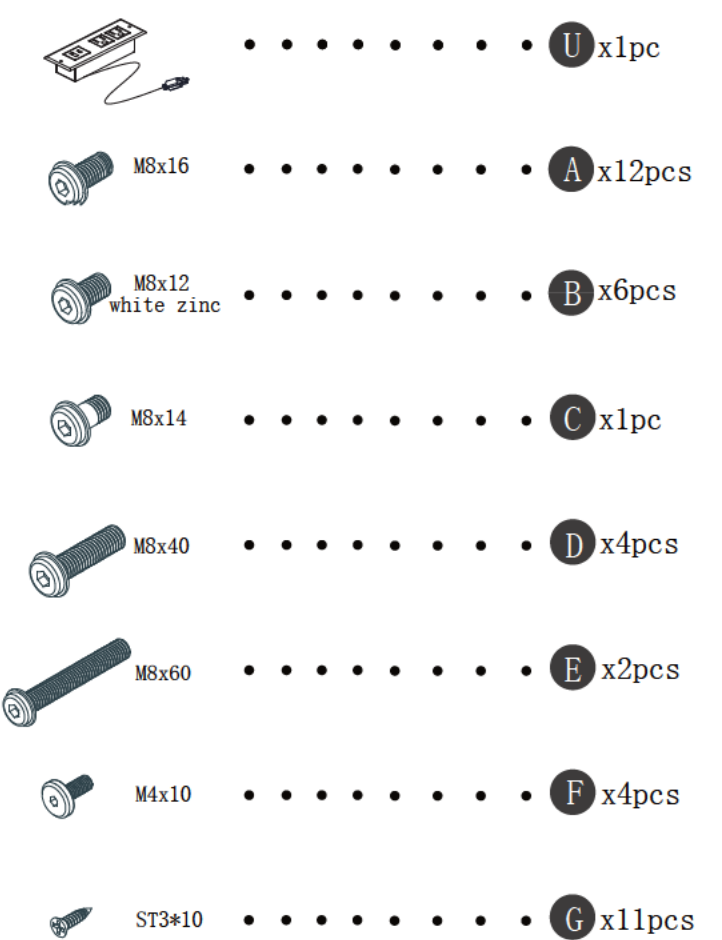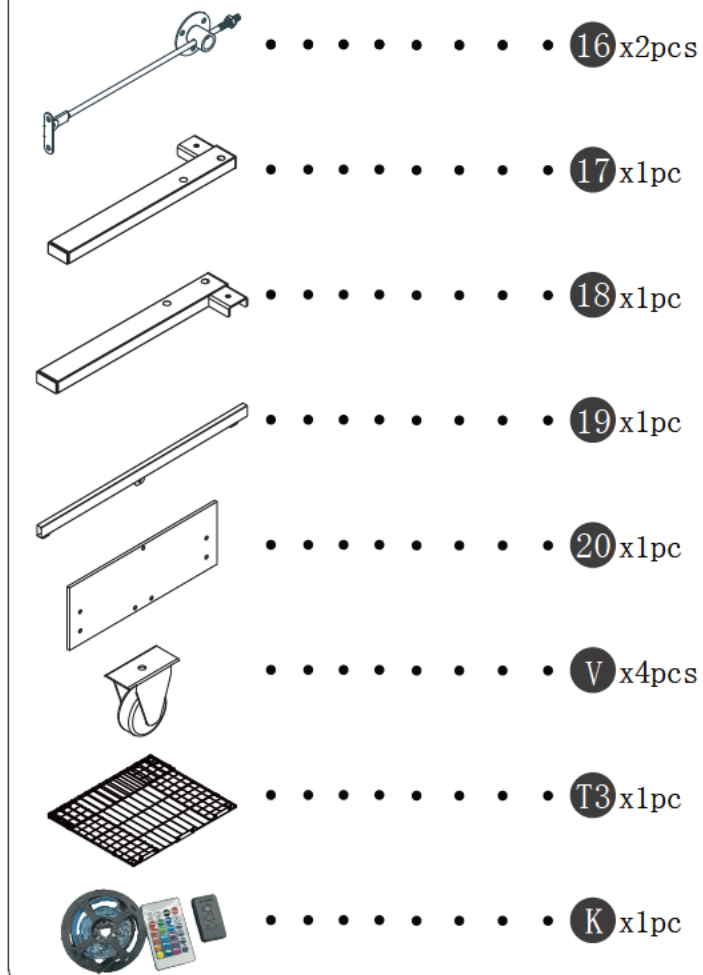

22

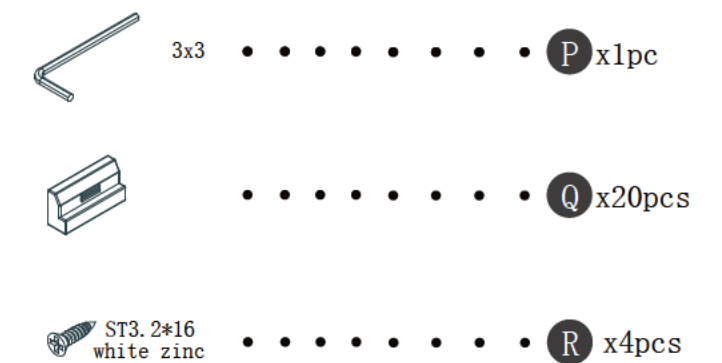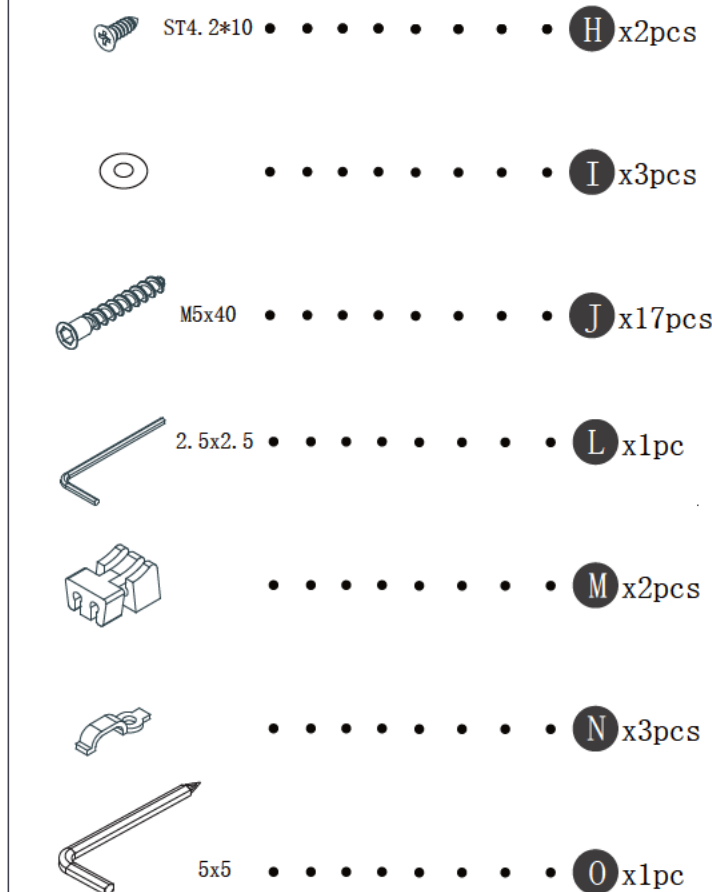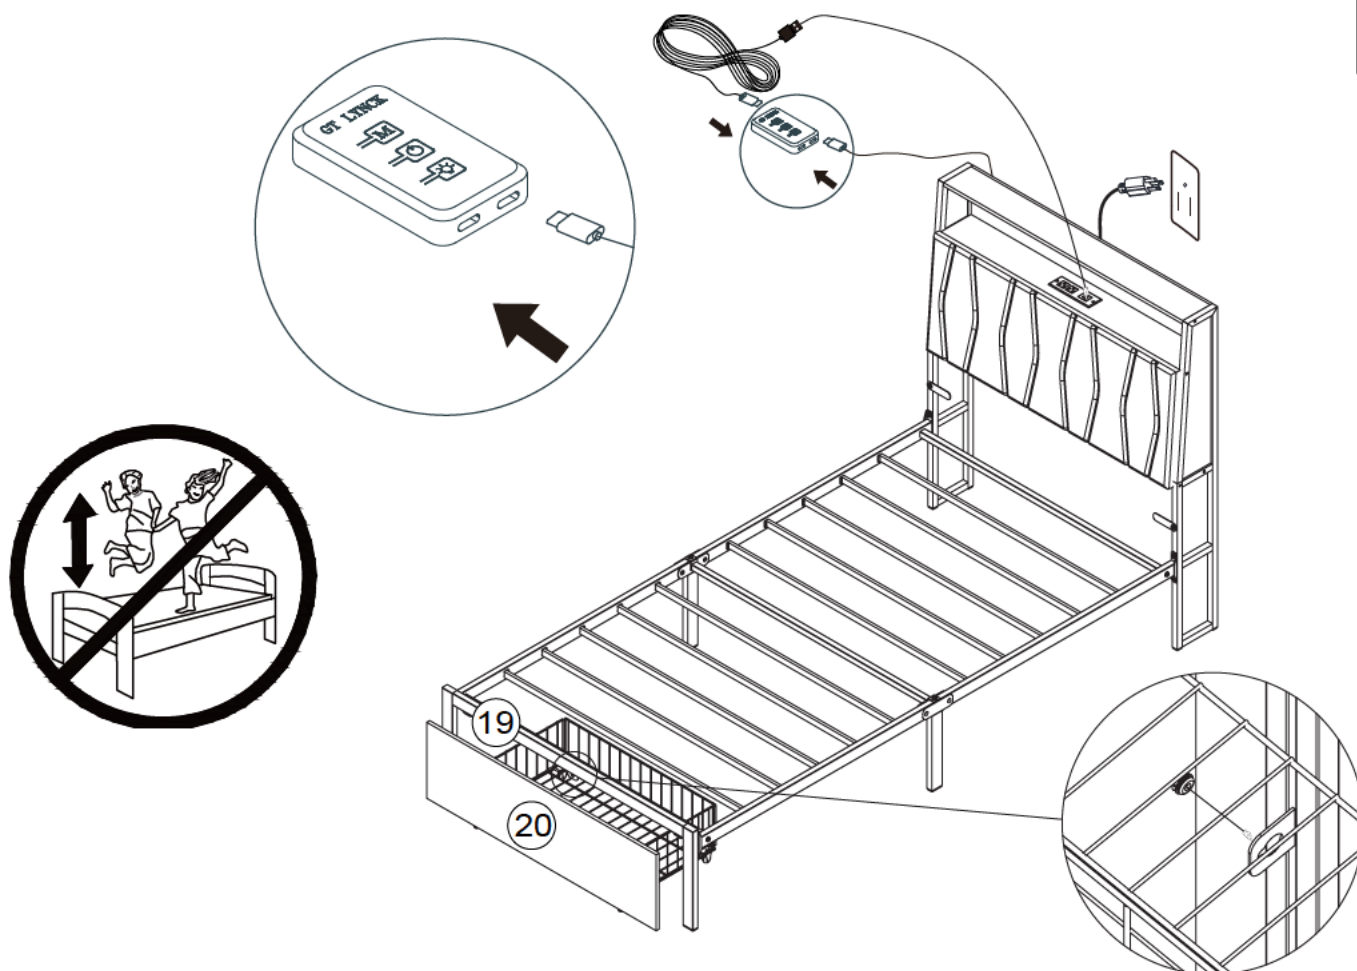


1

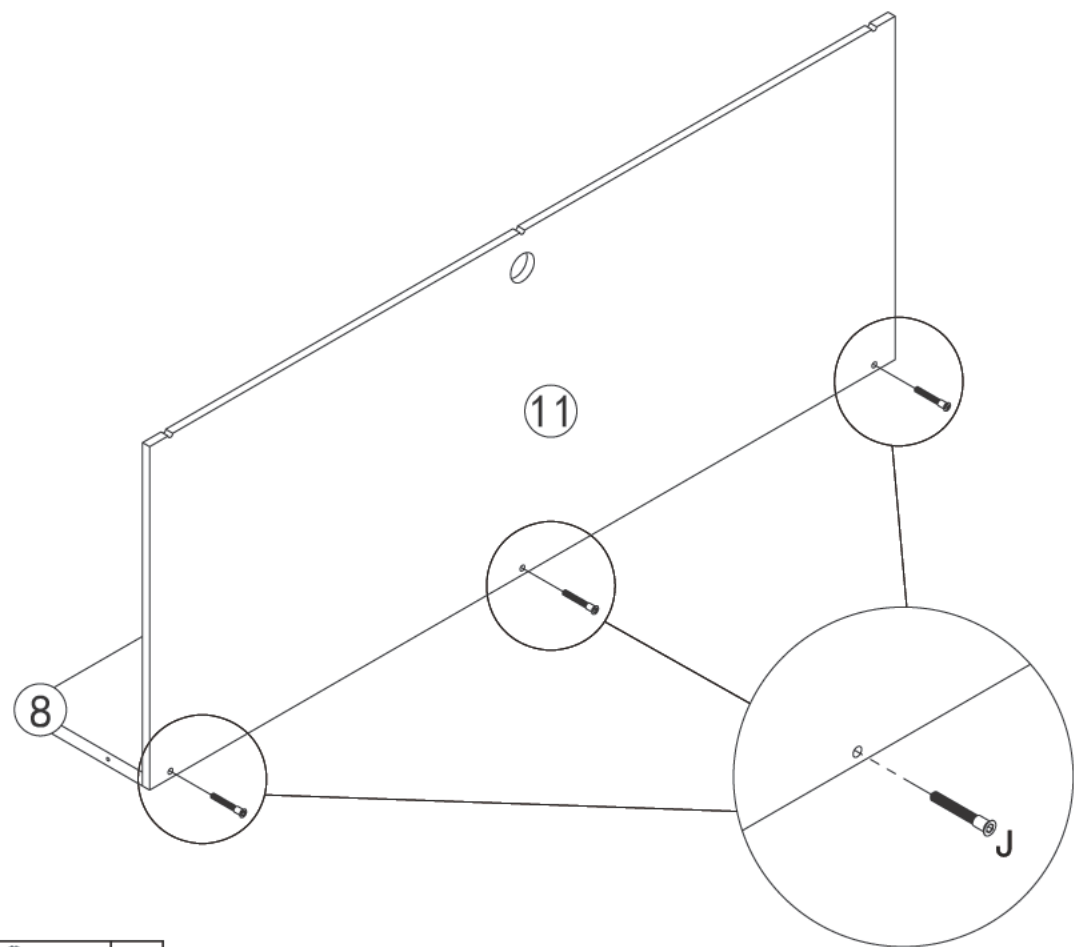

| | | | |
|---|---|-------|------|
| J |  | M5x40 | 3pcs |
|---|---|-------|------|

19


Open the metal frame

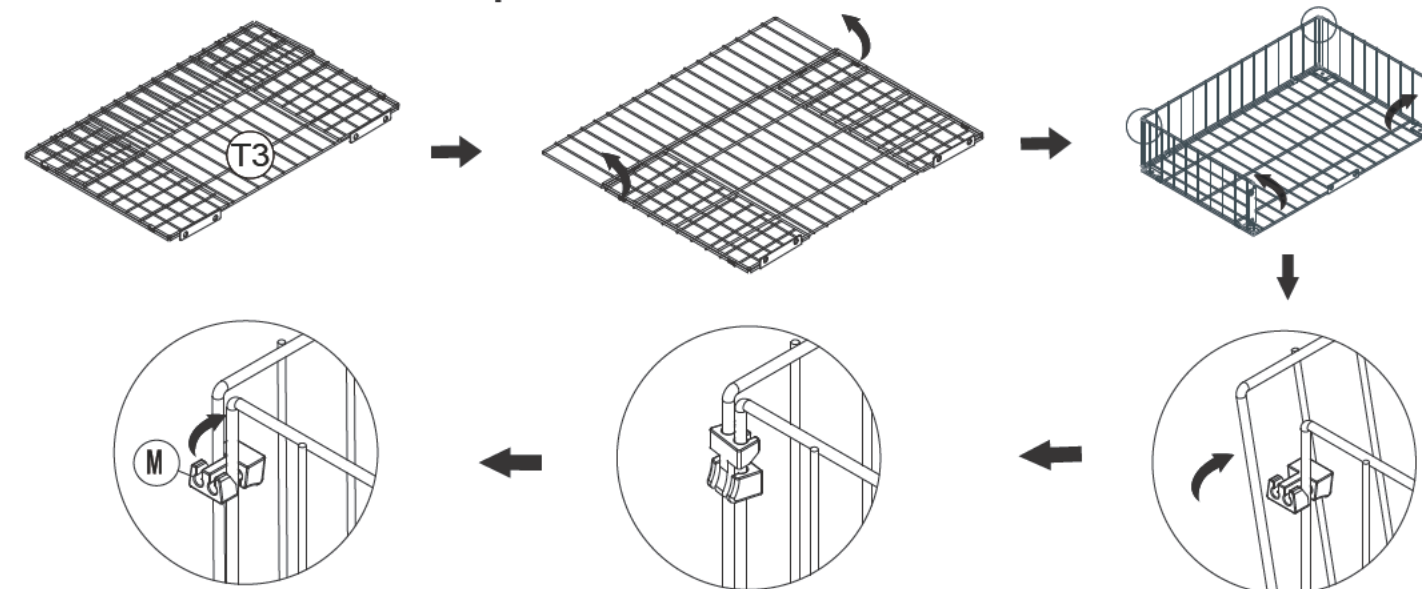

rotates 90 degrees and gets stuck
metal frame as showed


| | | | |
|---|---|--|------|
| M |  | | 2pcs |
|---|---|--|------|

2




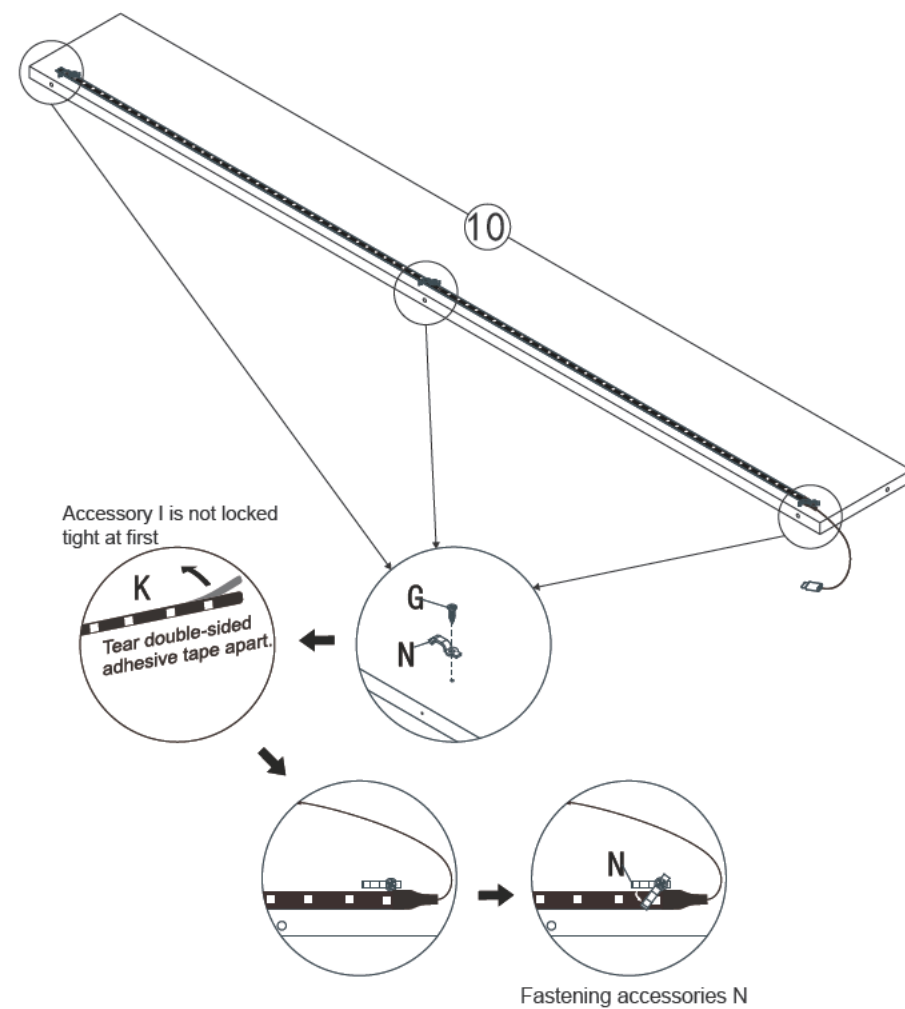


| | | | |
|---|---|--------|------|
| N |  | | 3pcs |
| G |  | ST3*10 | 3pcs |


20

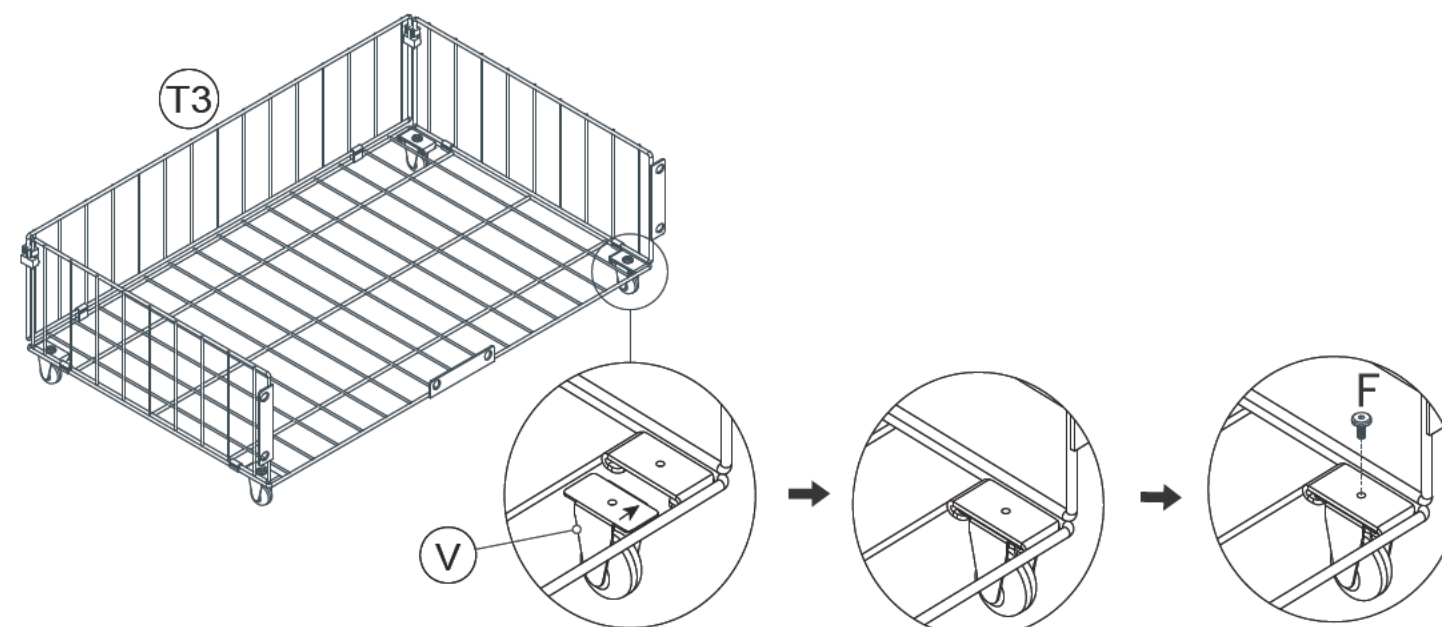

| | | | |
|---|---|-------|------|
| F |  | M4x10 | 4pcs |
|---|---|-------|------|

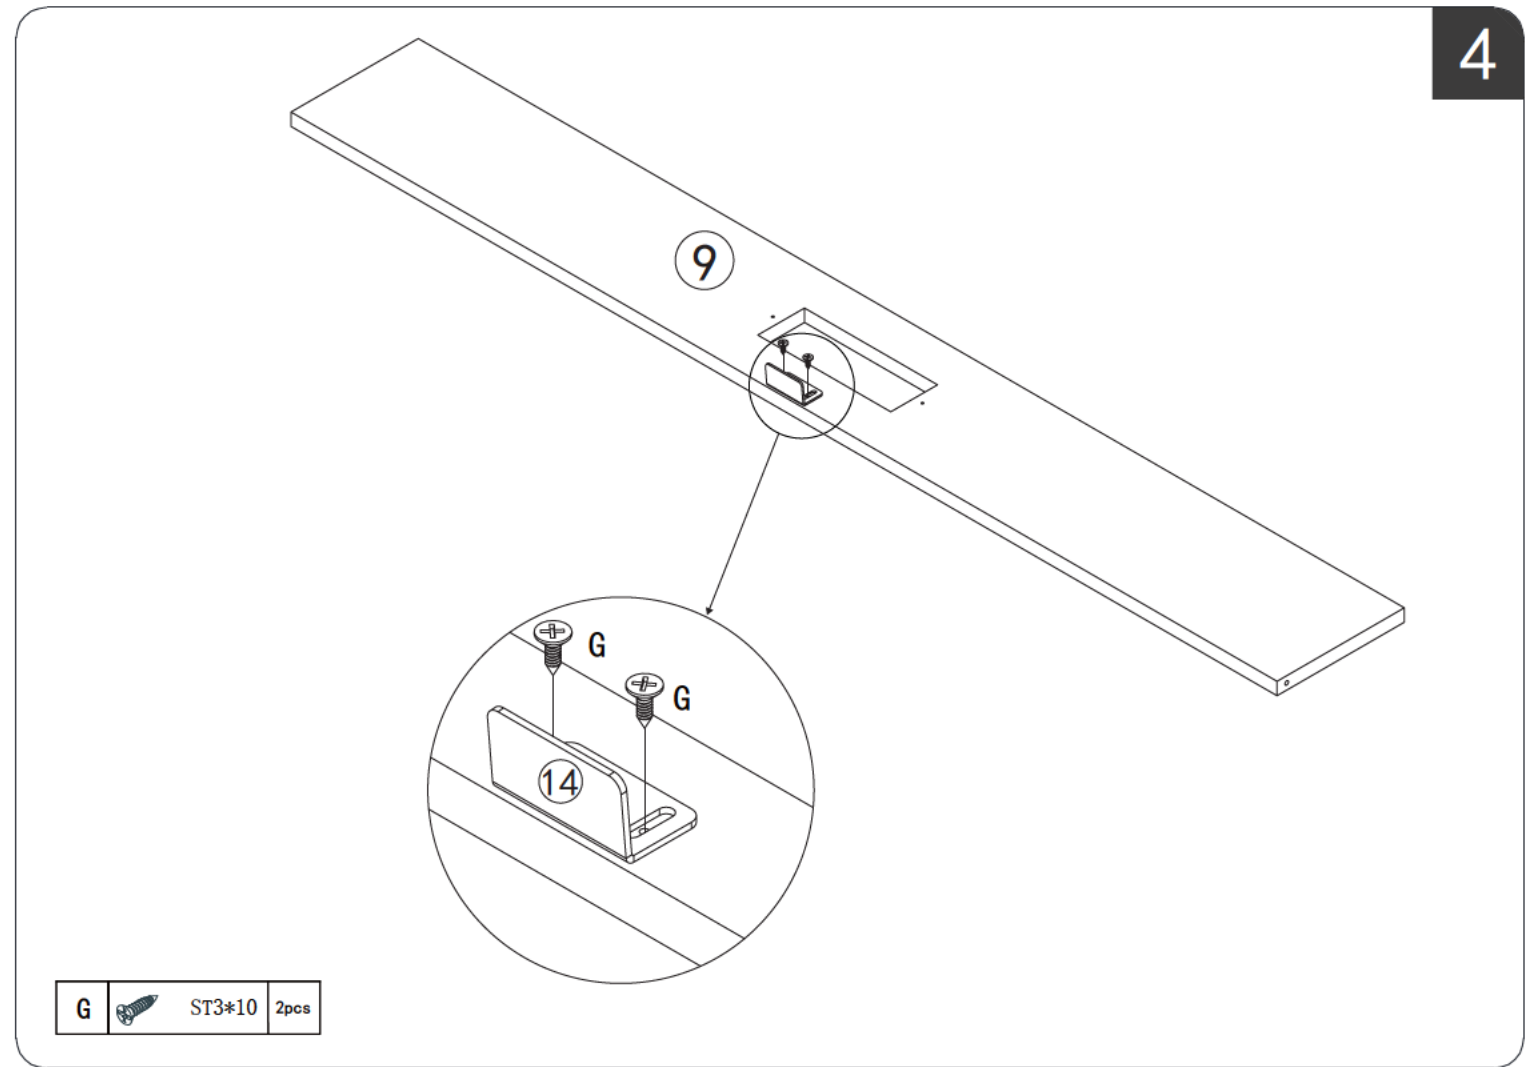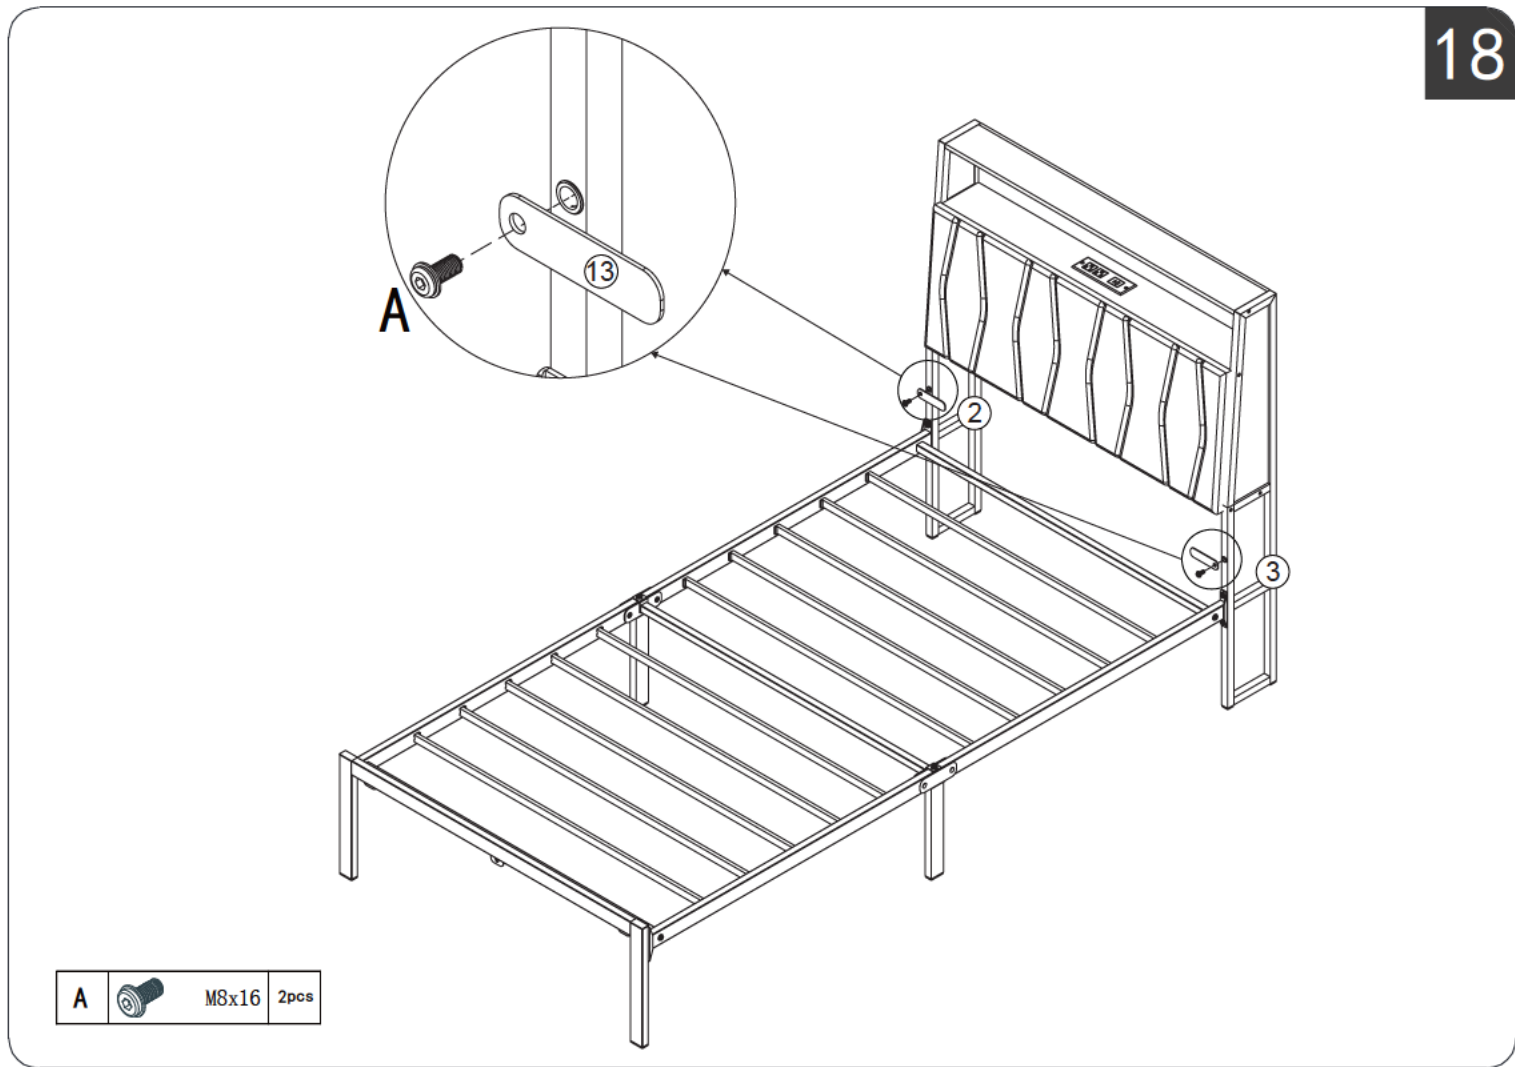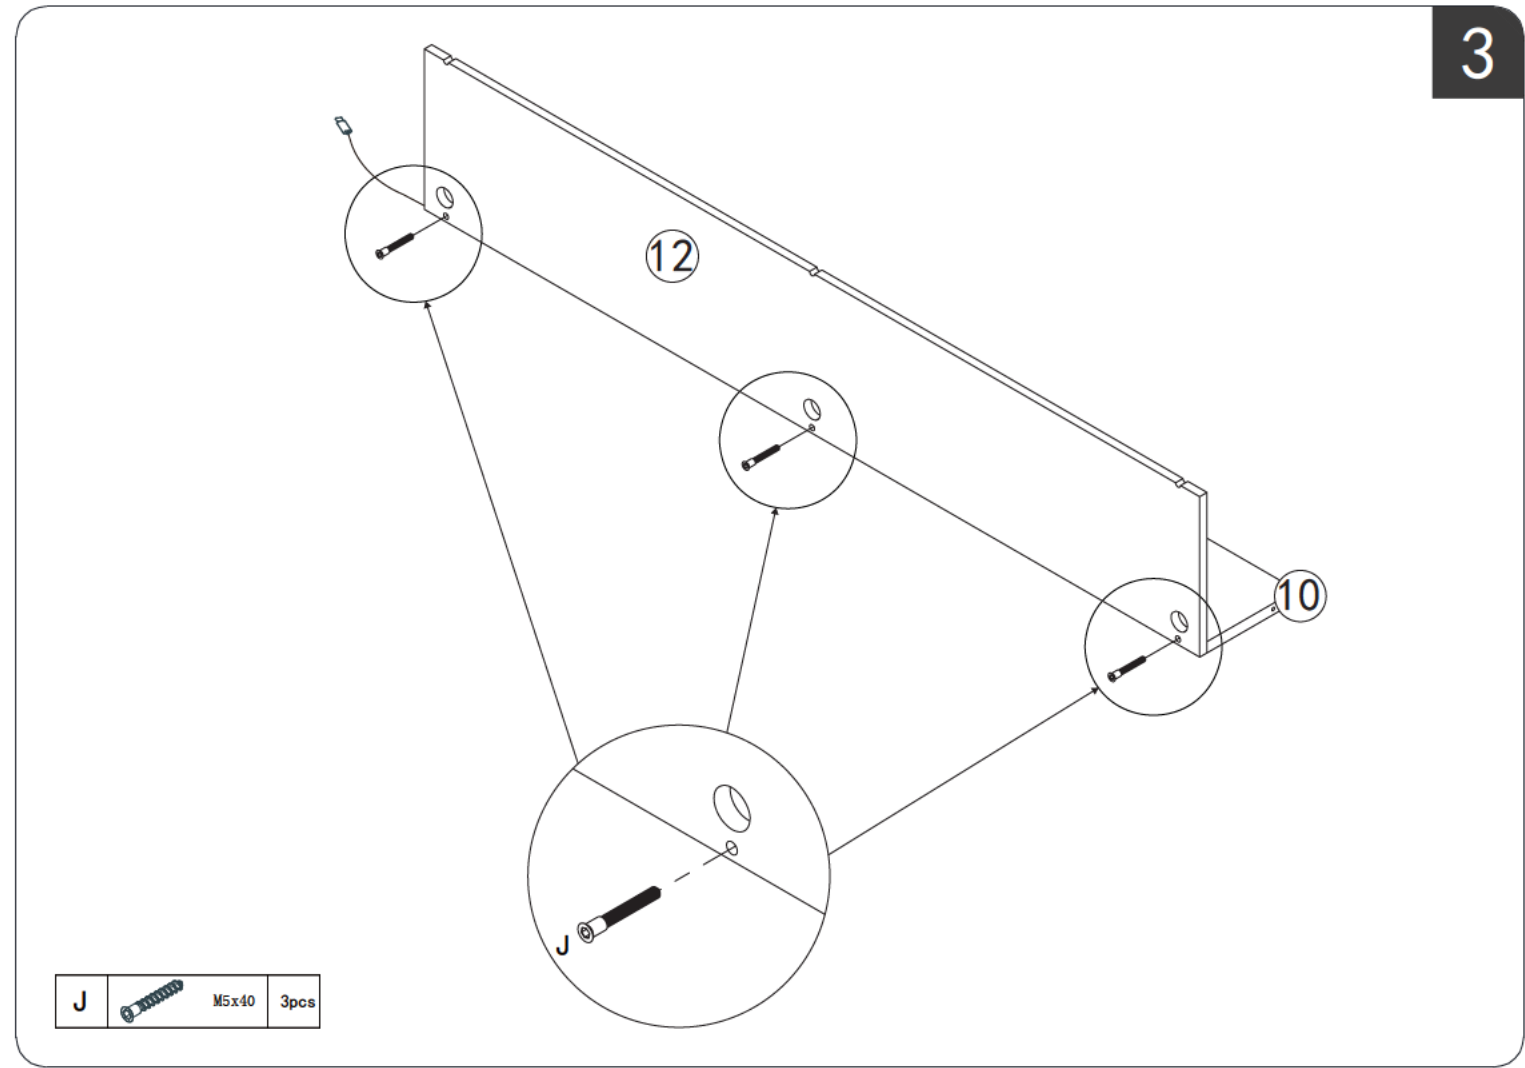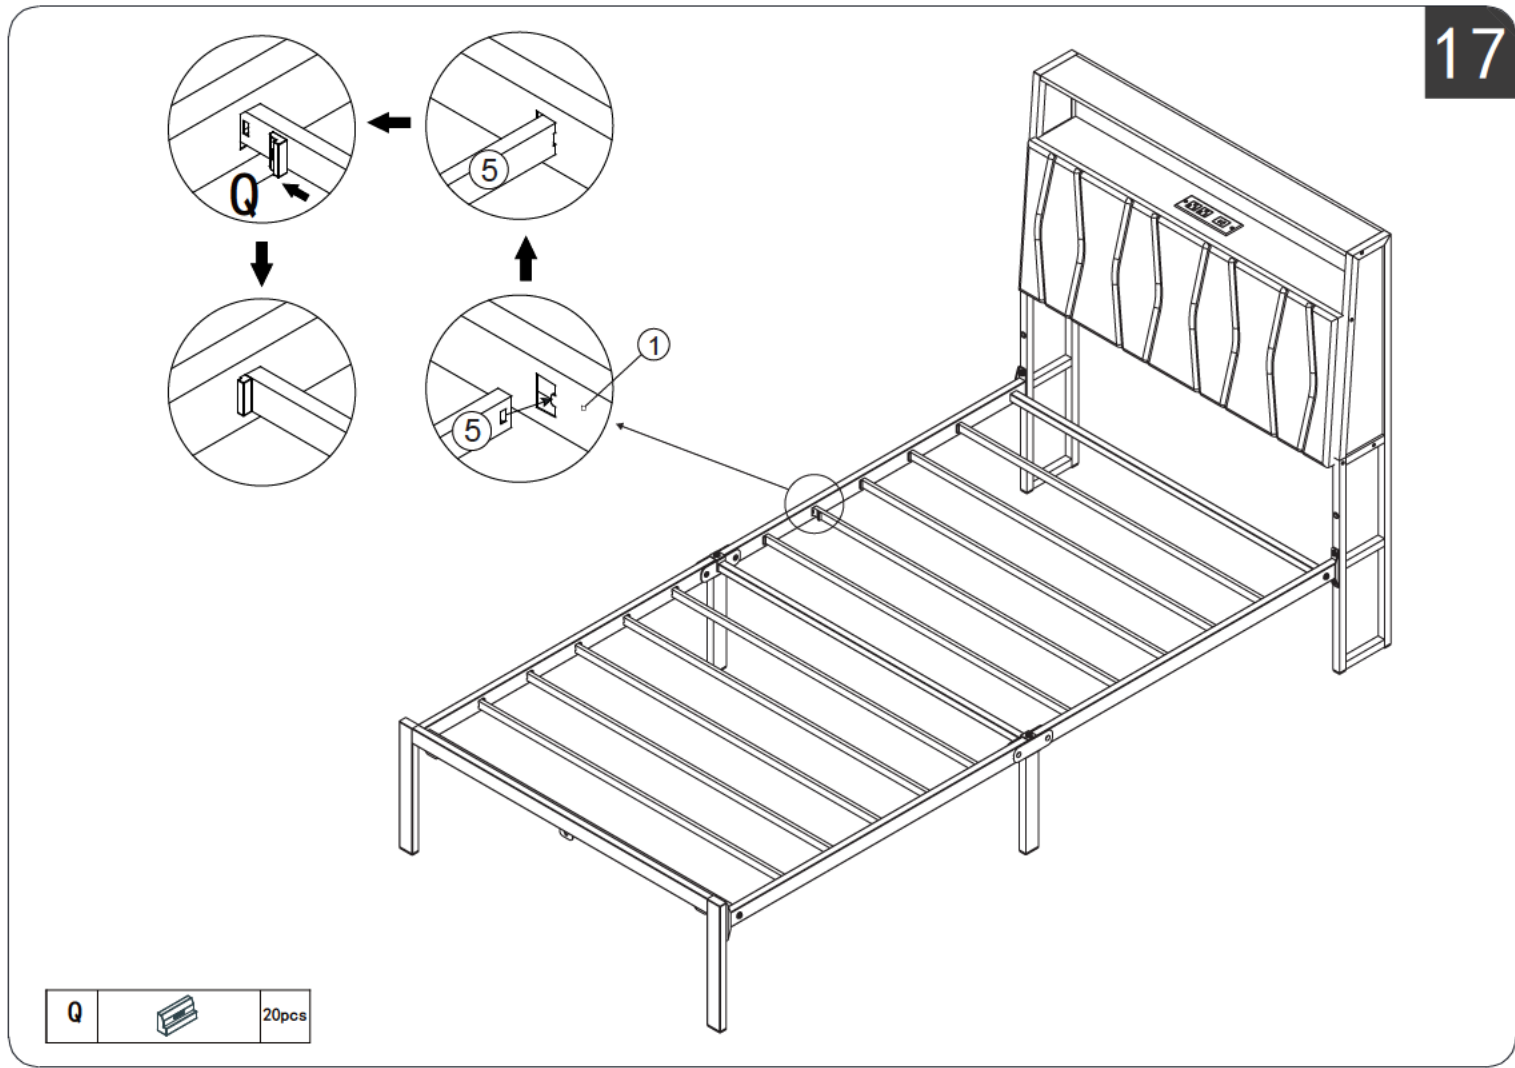


5

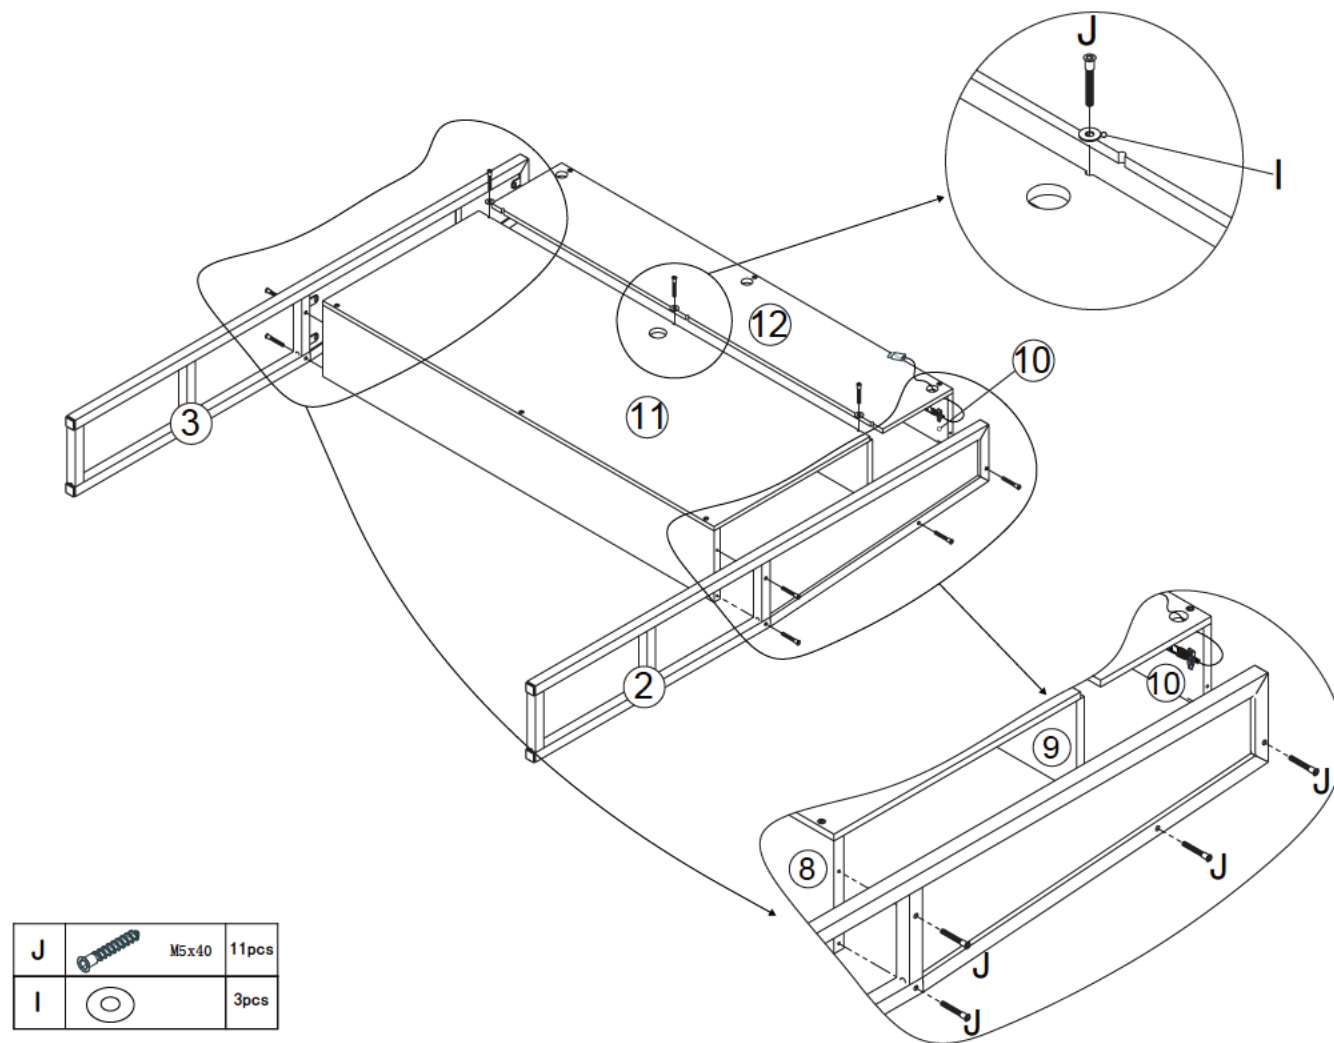

15


Adjust the position of accessory 14 so that the door panel is tight

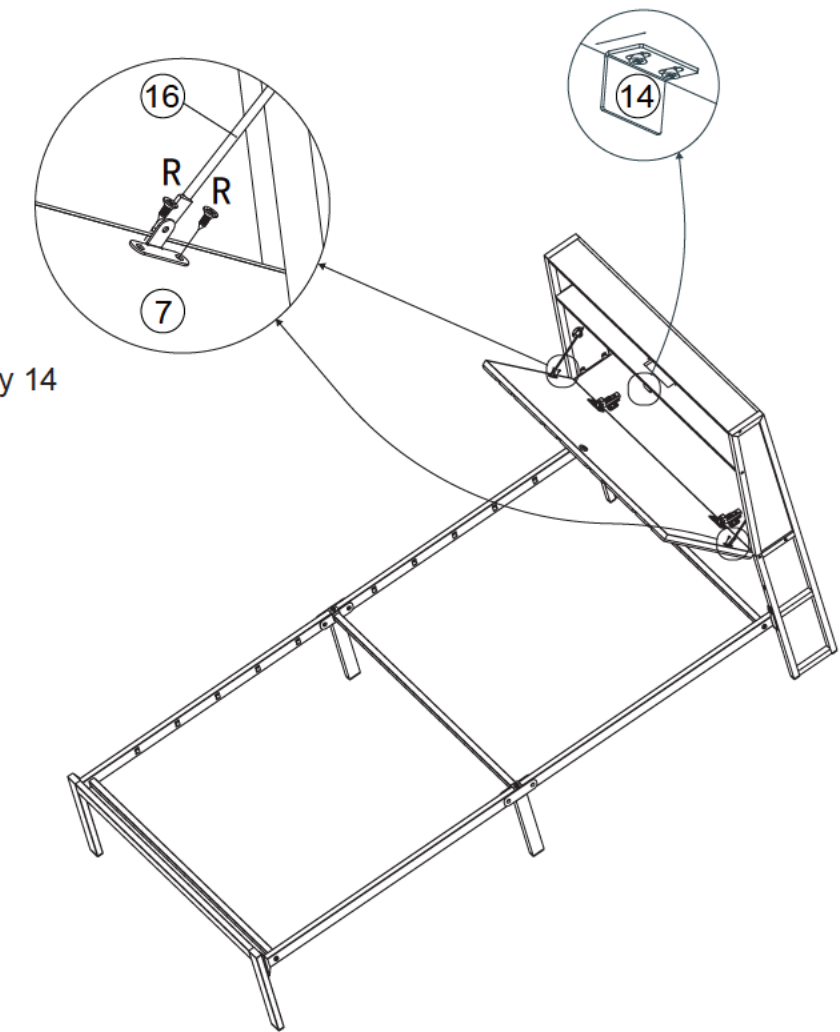


Open and expand it as showed

x2


6

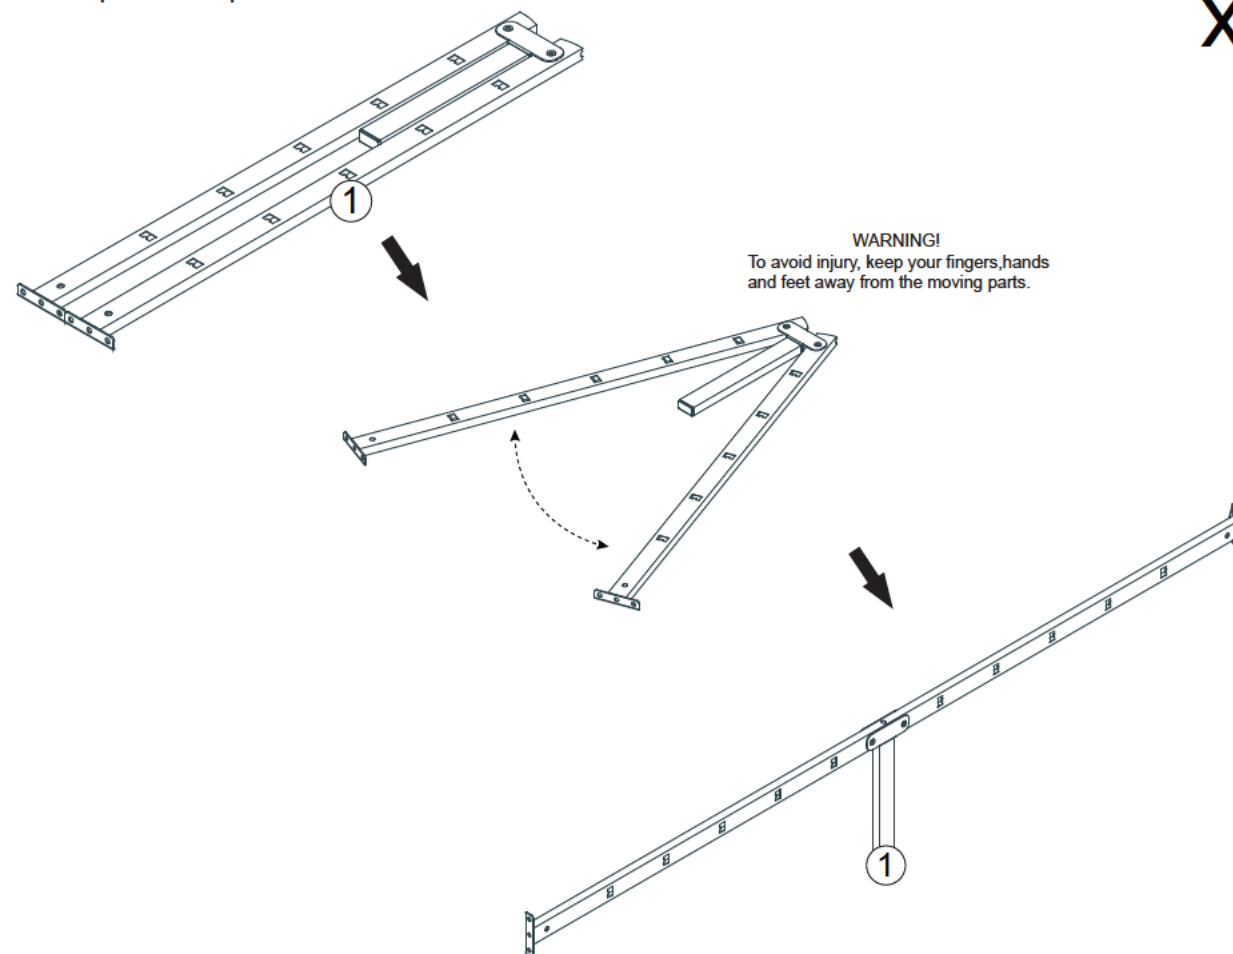

16

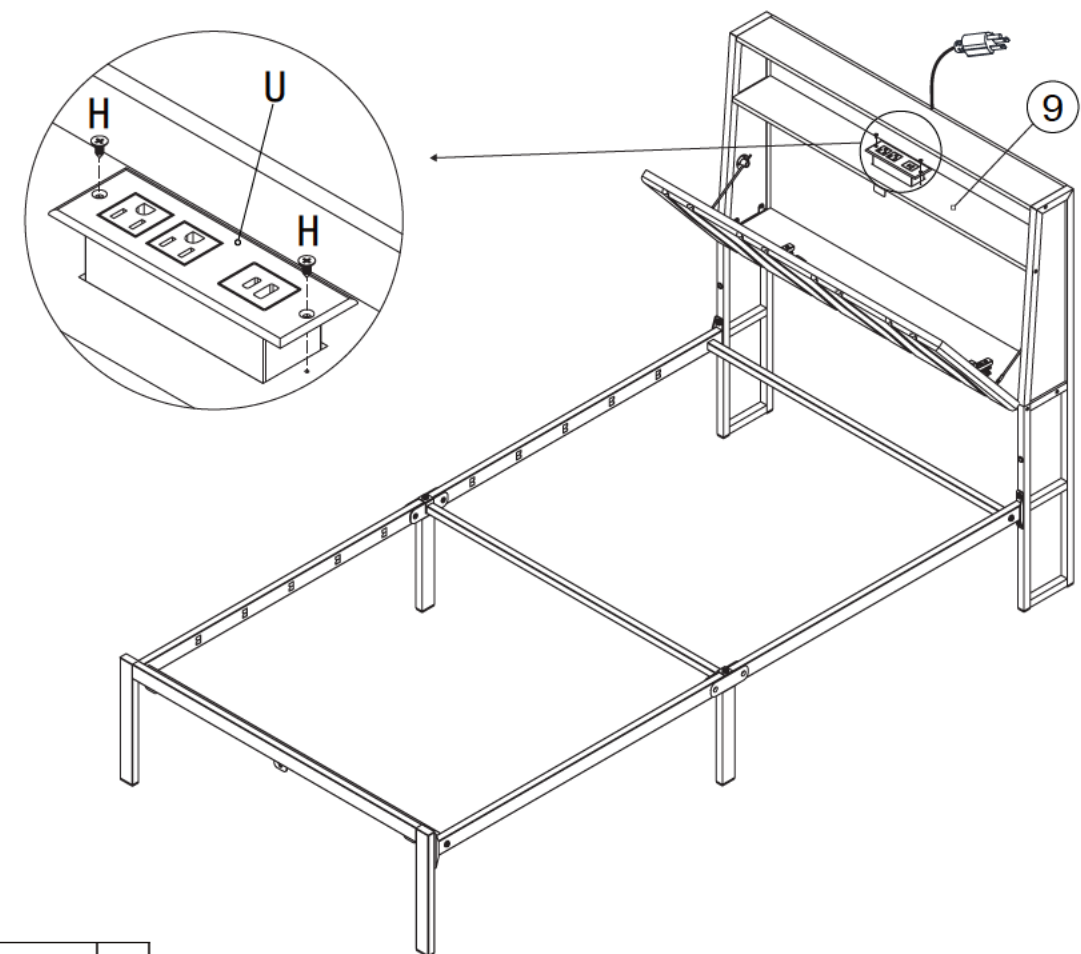


13

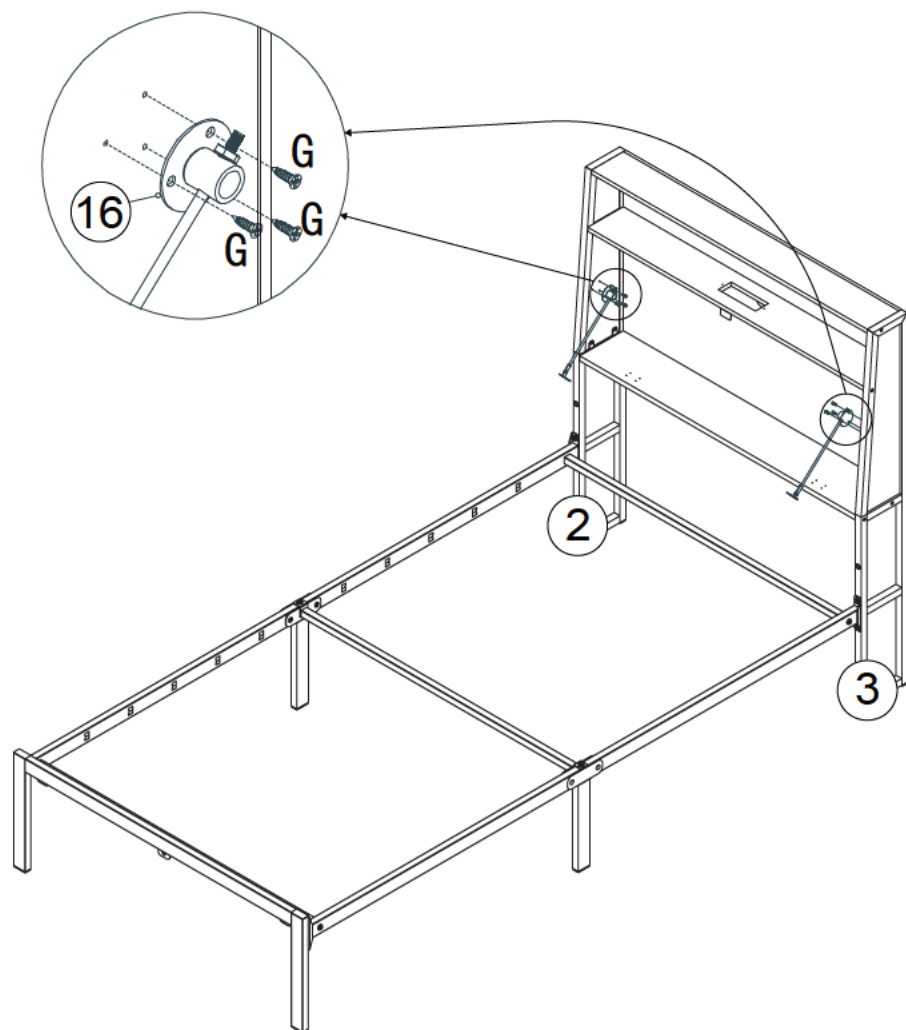

| | | |
|----|--|--------------|
| 16 | | 2 pcs |
| G | | ST3*10 6 pcs |


7

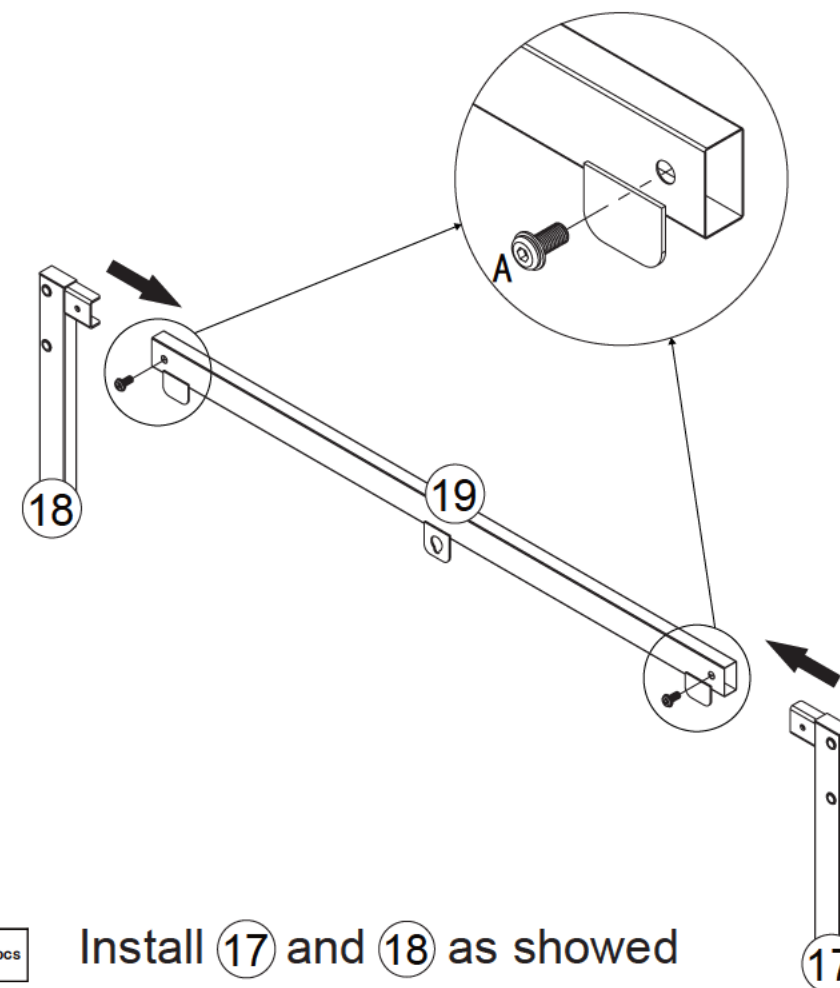

| | | |
|---|--|-------------|
| A | | M8x16 2 pcs |
|---|--|-------------|


Install 17 and 18 as showed

14

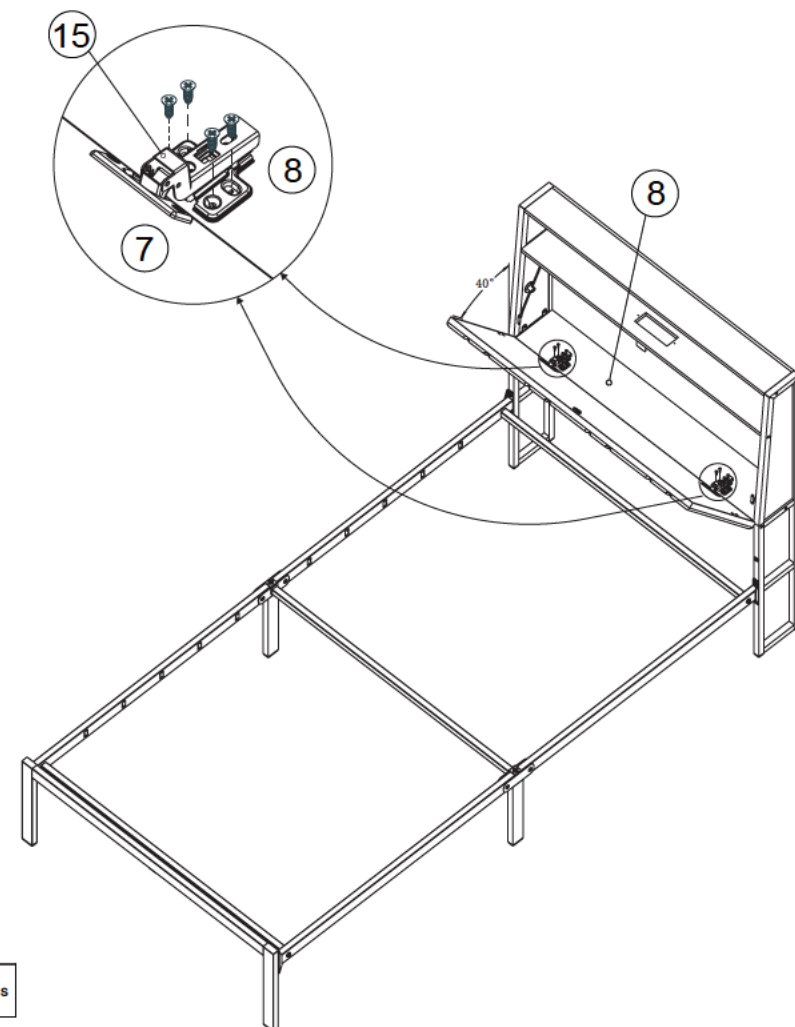


| | | |
|----|--|----------------|
| 15 | | ST4.2x16 2 pcs |
|----|--|----------------|

If component 7 does not close properly after it is installed, adjust it according to the following view.

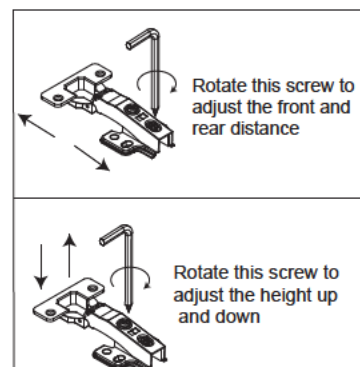


8

Fix ① with screws on two sides of footboard

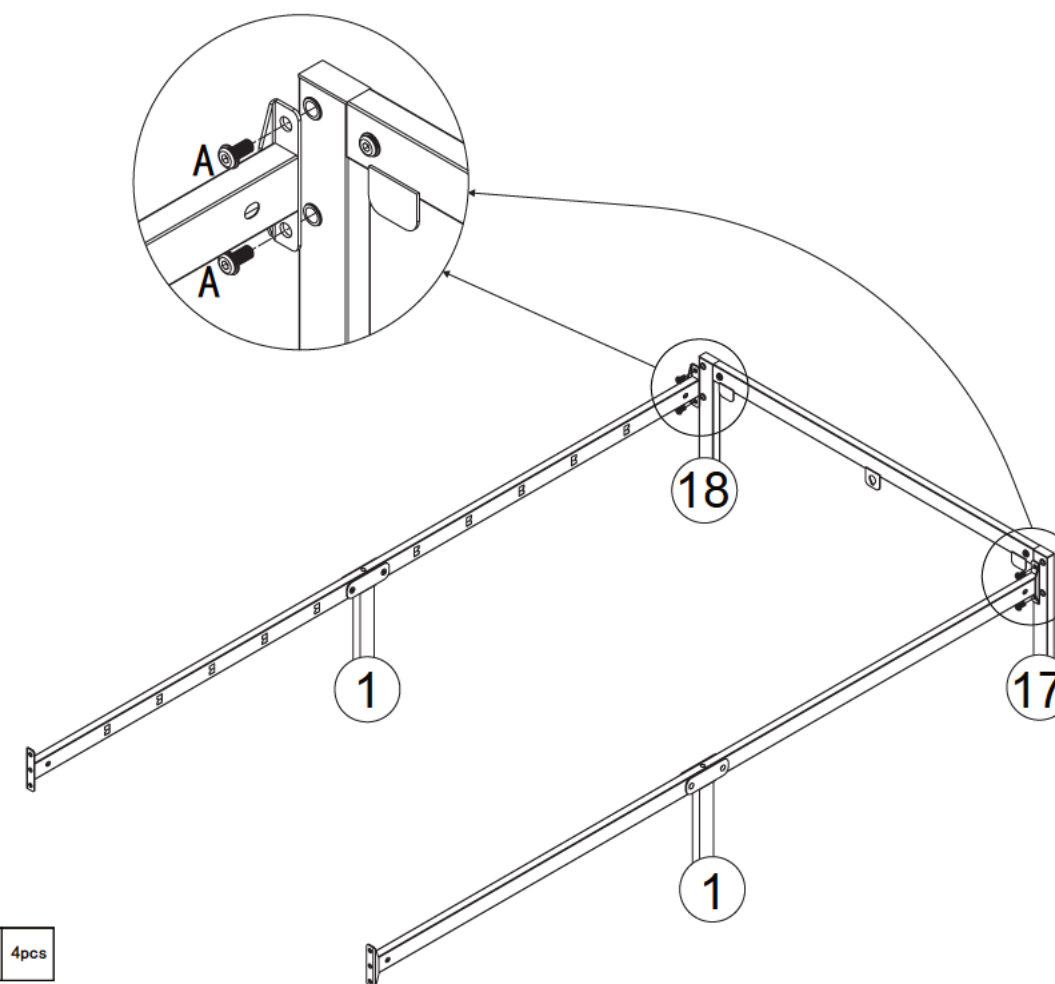

| | | |
|---|--|-------------|
| A | | M8x16 4 pcs |
|---|--|-------------|


9

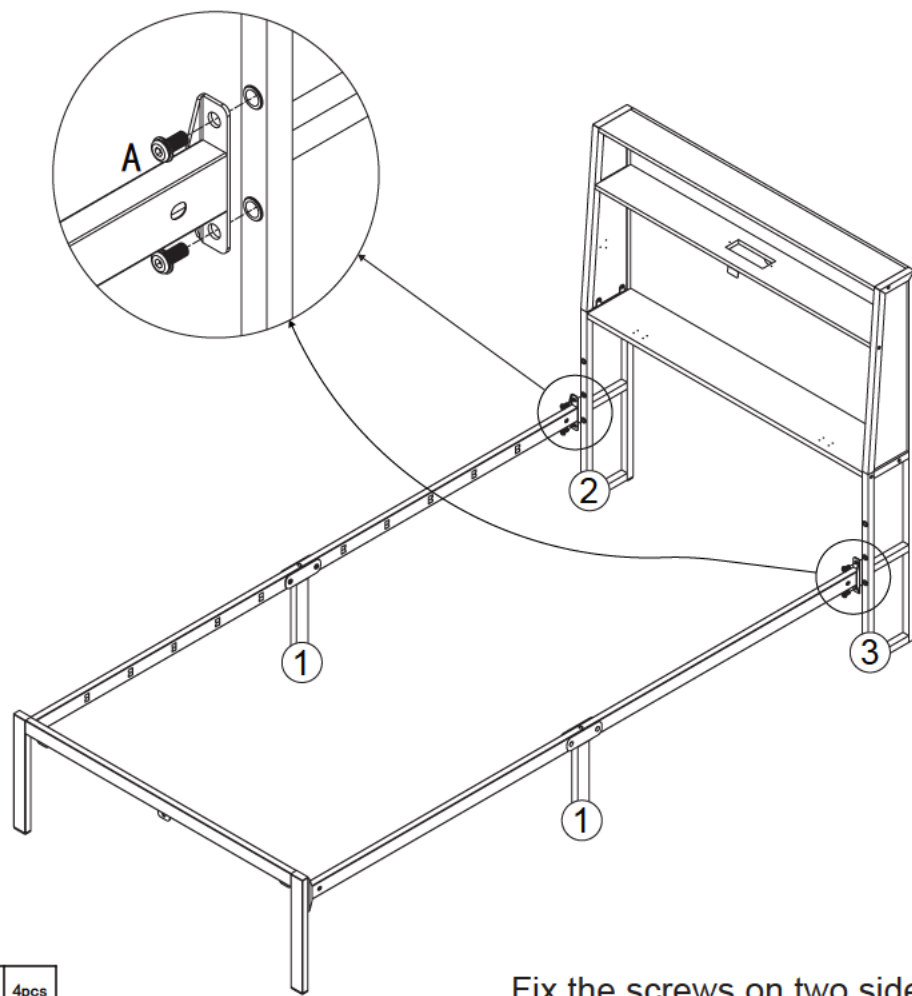

A M8x16 4pcs


Fix the screws on two sides under headboard

11

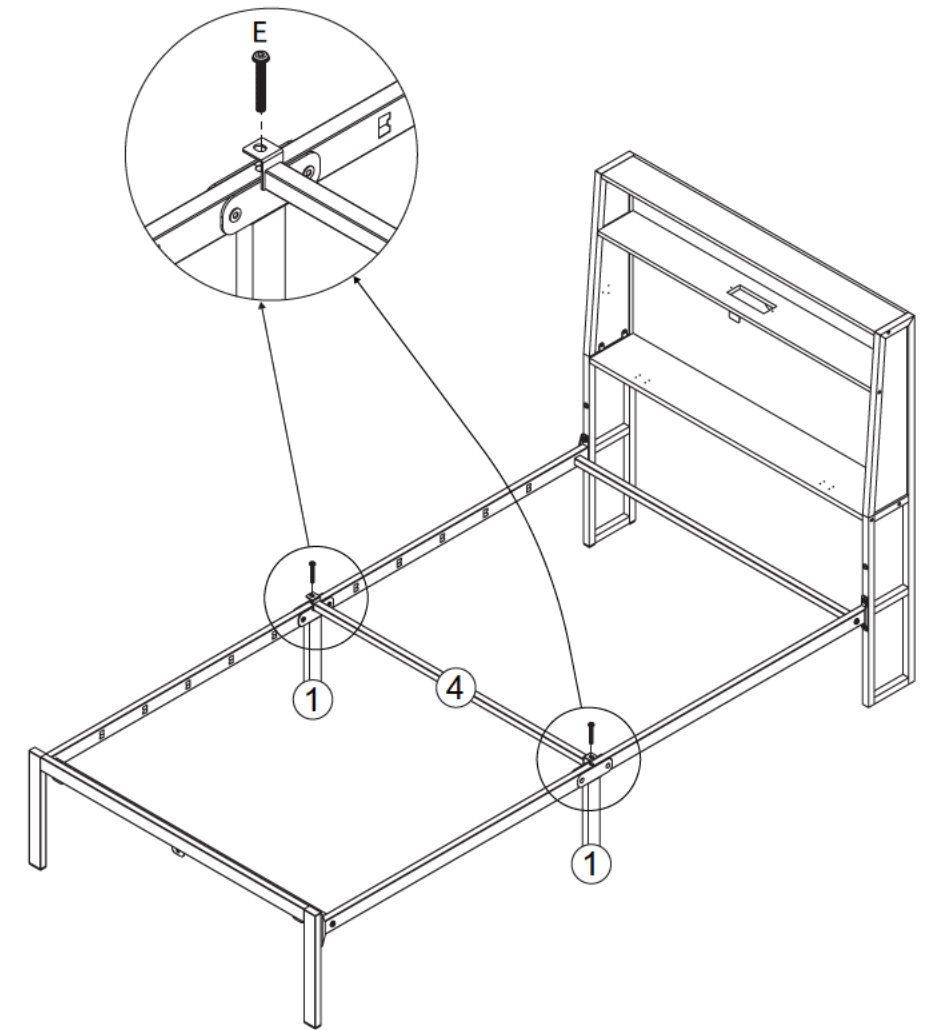

E M8x60 2pcs


10

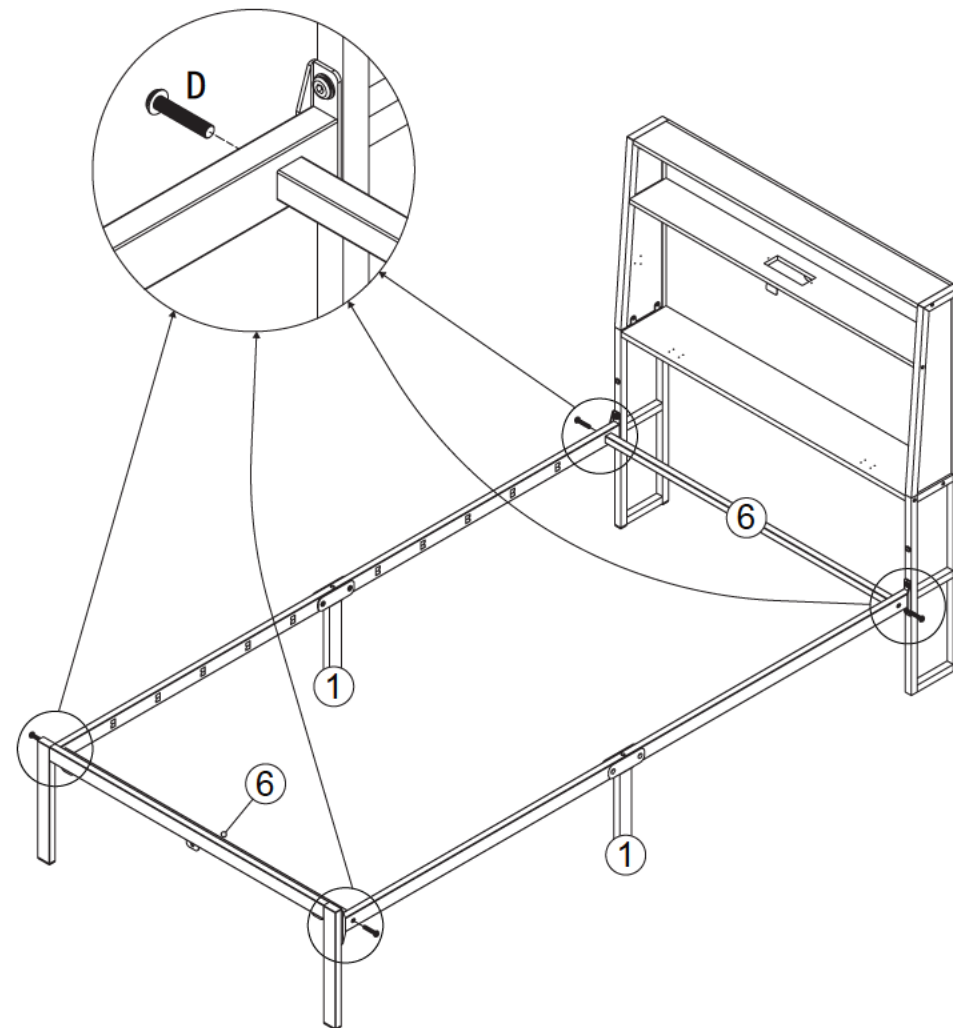

D M8x40 4pcs

8/15

12

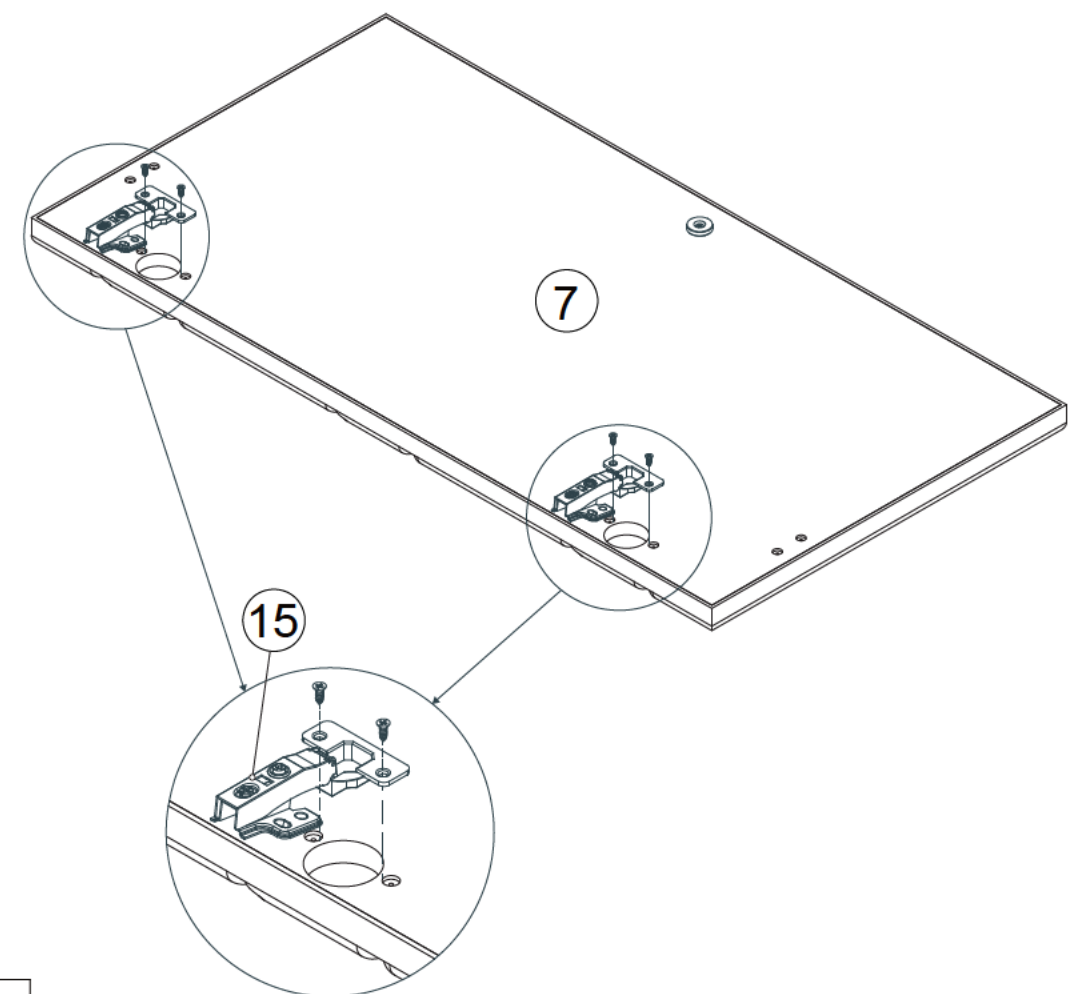

15 ST4.2x16 2pcs

9/15