


















A SSEMBLY INSTRUCTION

No	Part list (for 2 Chair)	Qty
A	Hoop 	2pcs
B	Seat 	2pcs
C	Leg frame  With sticker left (FL) and Sticker Right (FR)	4pcs
D	Long Spindle 	4pcs
E	Medium Spindle 	4pcs
F	Short Spindle 	4pcs
G	Crossbar 	2pcs


No	HARDWARE LIST (For 2chair)	Qty
H	 M6 x 60 JCBC Screw	8 pcs
I	 1/4 x 1.2 Flat Washer	16 pcs
J	 M6 Spring Washer	16 pcs
K	 M6 x 13 JRN Nut	8 pcs
L	 M4 x 58 Allen key	1 pcs
M	 Wood Button	8 pcs
N	 M4 x 30 JCBC Screw	12 pcs
O	 M6 x 35 JCBC Screw	12 pcs

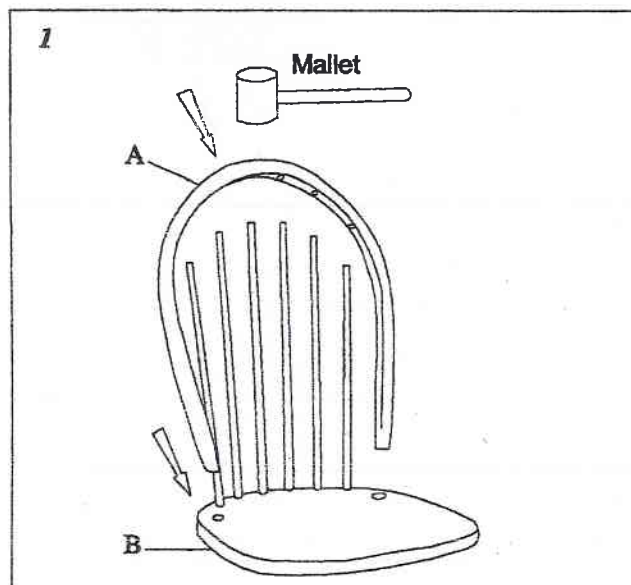


Fix the Spindles (D),(E) & (F) to the Hoop (A) & seat (B) , use a mallet to knock the spindles fit in the holes

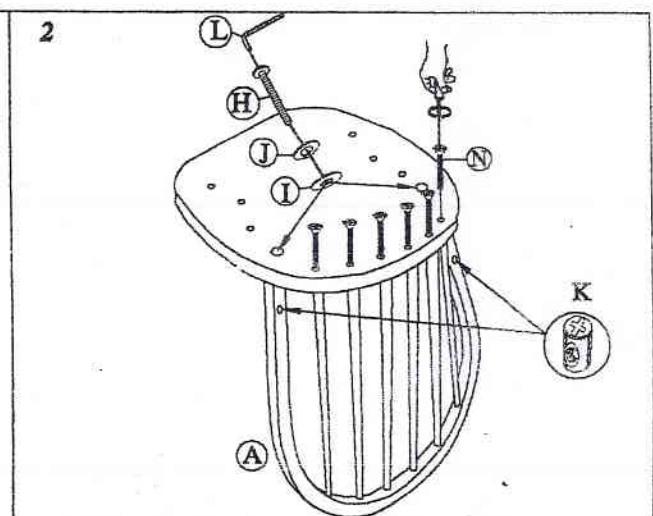

Place the assembled chair seat on a soft and fiat surface to prevent scratches. Insert JRN Nut (K) into holes on hoop (A) and assemble hoop (A) using JCBC Screw (H) , Spring Washer (J) and Flat Washer (I) in line with JRN Nut (K). Please tighten JCBC Screw (H) With Allen key (L),then assemble spindles (D),(E) ,(F) with chair seat by JCBC screw(N)

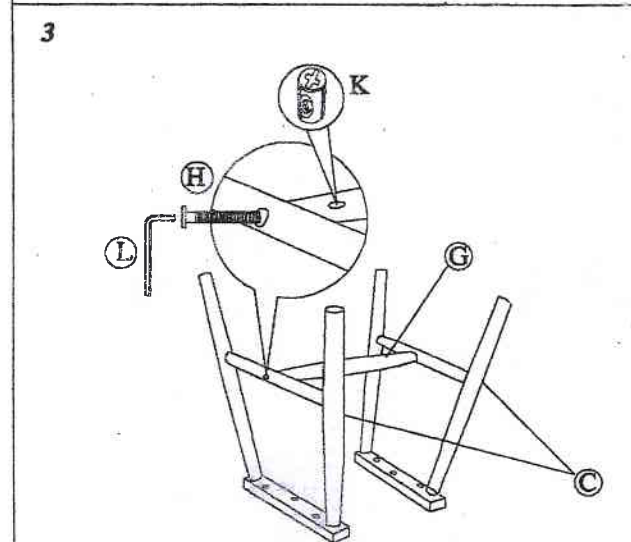

Assemble leg frame (C) and Crossbar (G) together by insert the JRN Nut (K) in the Crossbar (G) , Secure using JCBC Screw (H) as shown.

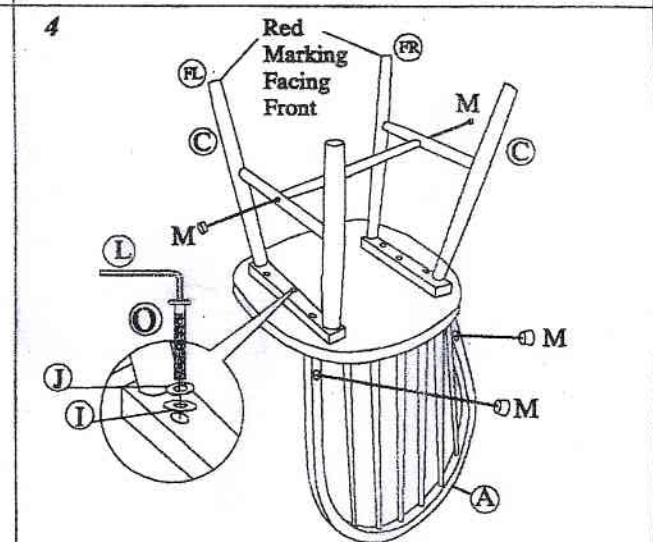

Attach the Leg Frame (C) to the Chair Seat (B). Red Marking on leg frame shoud facing front. Secure it using JCBC (O) Spring washer (J) and Flat washer (I)Tighten it with Allen key (L).Insert the Wood Button (M) to the cover the hole on leg frame (C) & Hoop (A)