

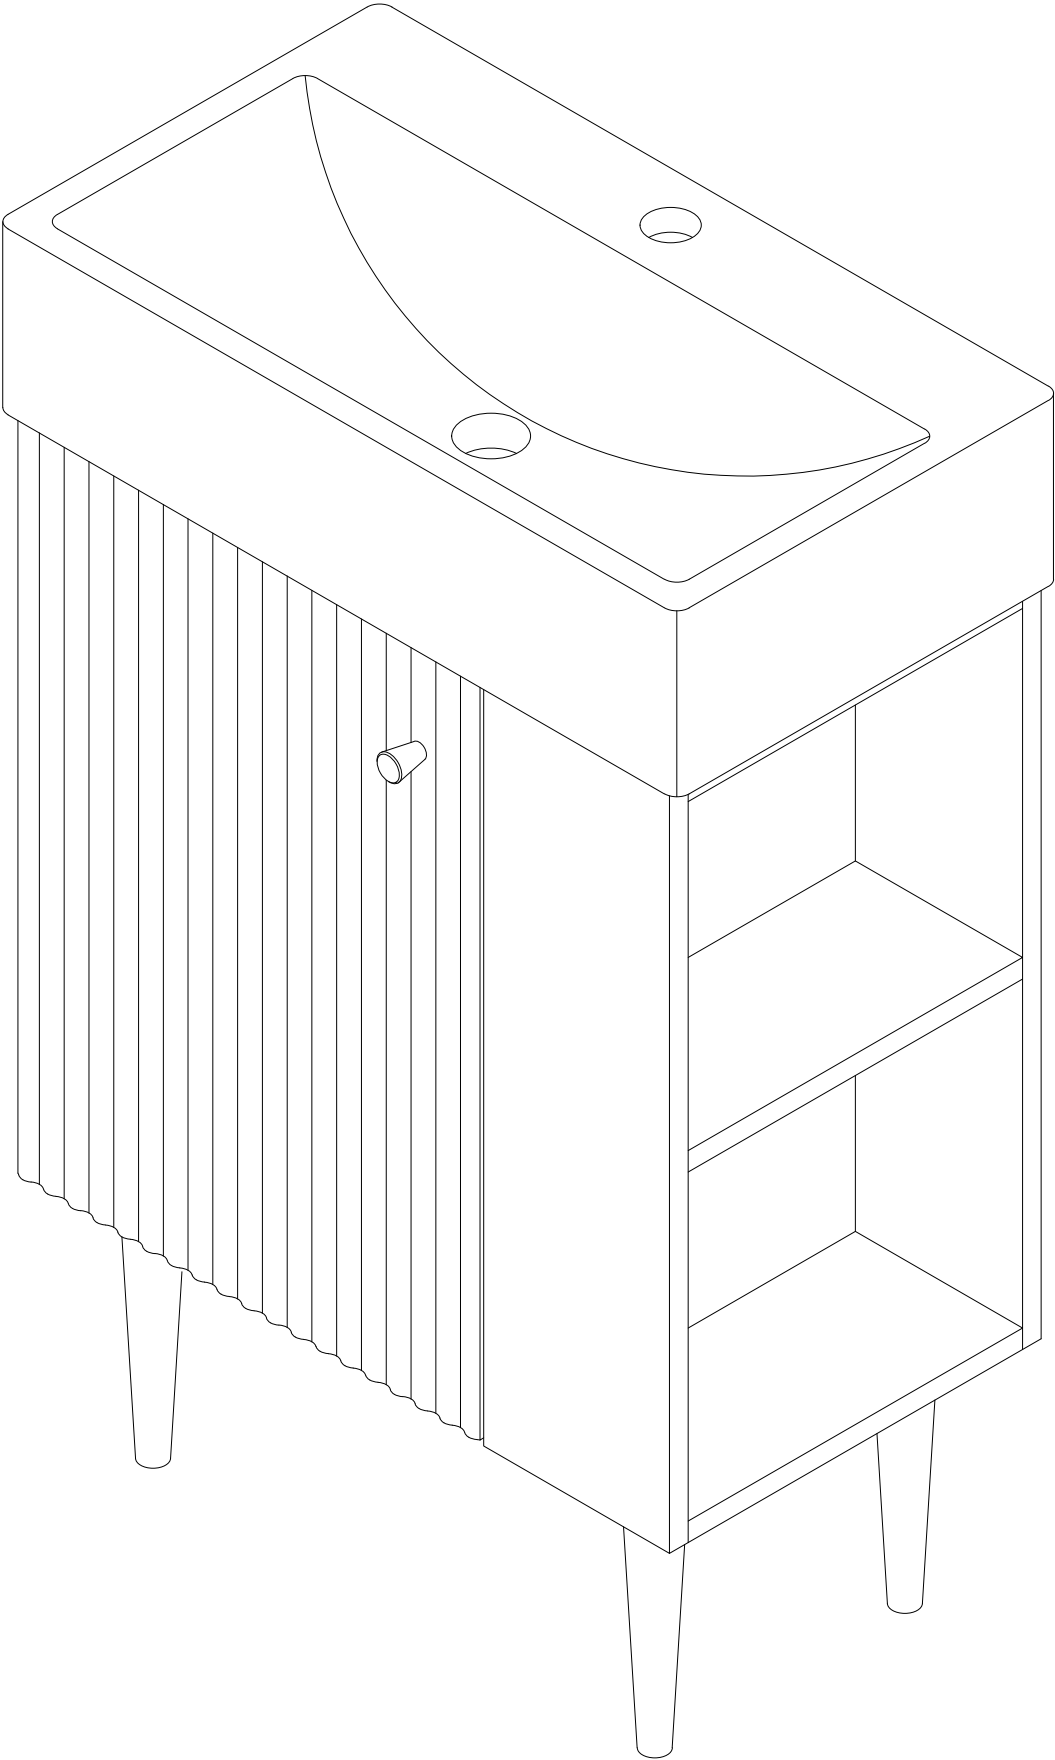
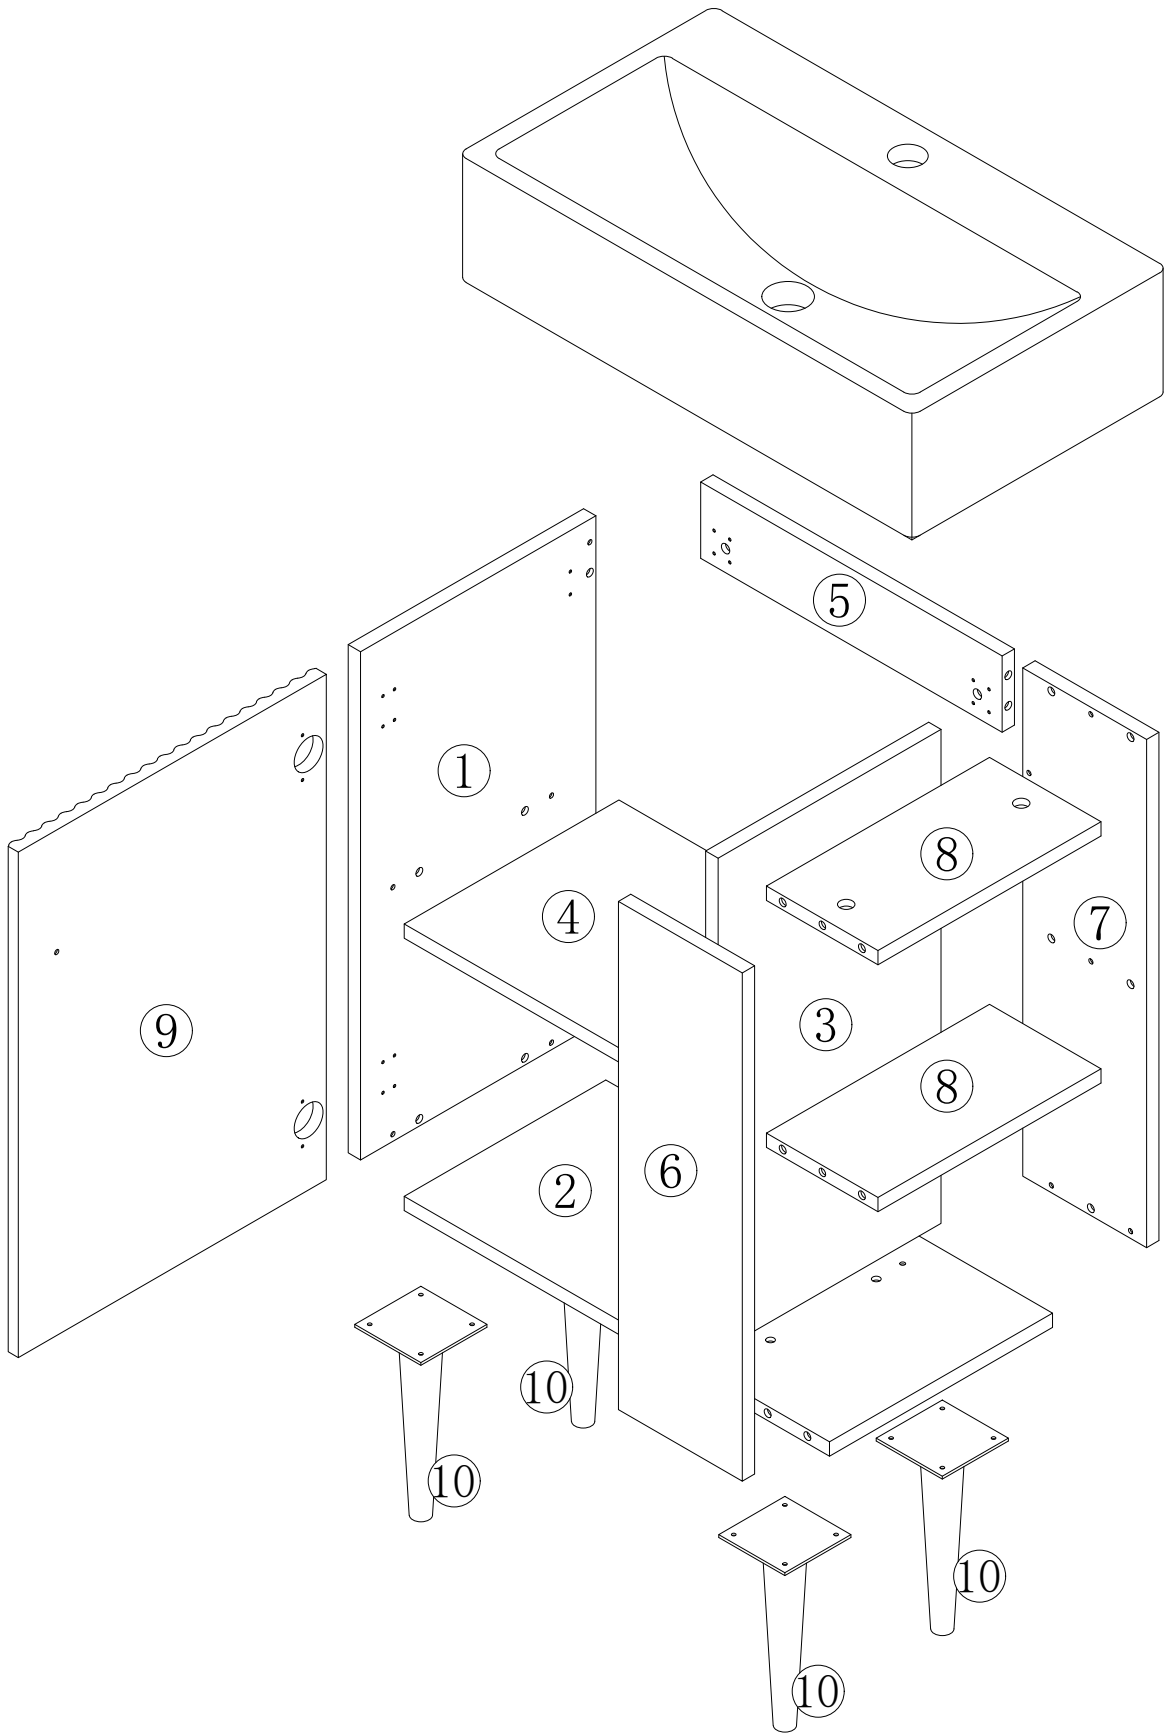
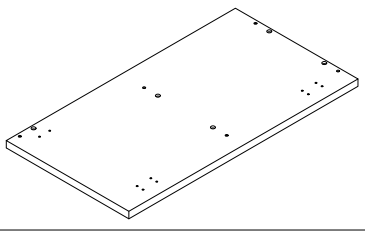
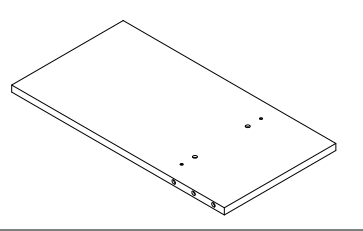
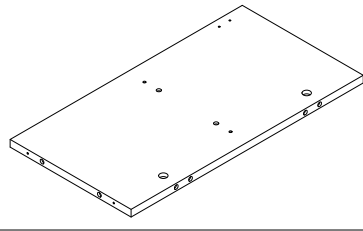
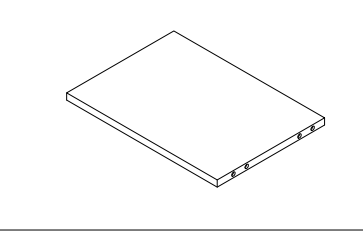
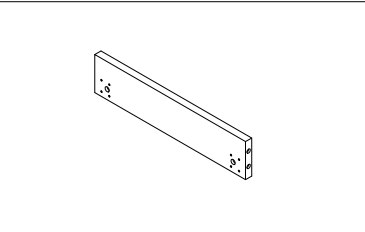
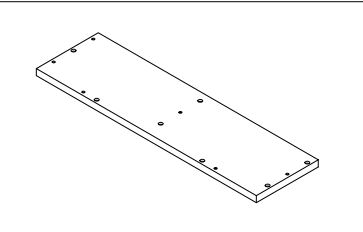
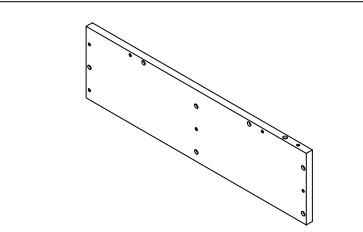
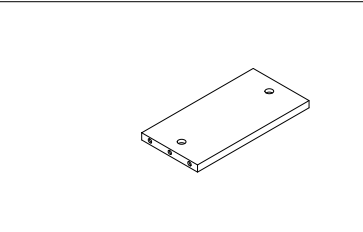


# ASSEMBLY INSTRUCTION


## 23V06-21WHL



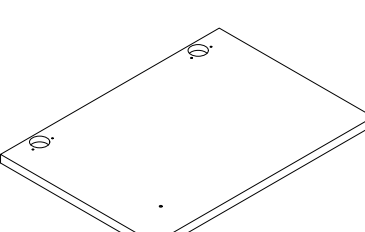


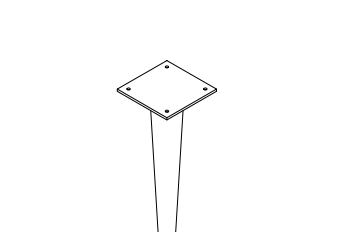






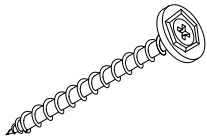




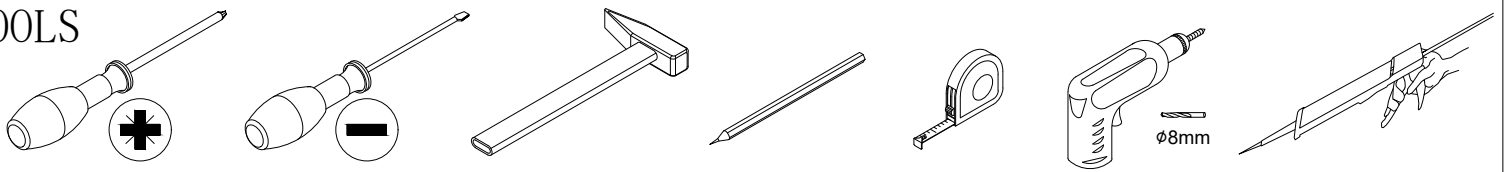


			
① x1	② x1	③ x1	④ x1
			
⑤ x1	⑥ x1	⑦ x1	⑧ x2
			
⑨ x1	⑩ x4		










TOOLS

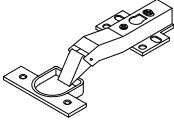



A * 16	B * 16	C * 24	D * 12	E * 28
				
M6 X 35mm	Ø15 x 12mm	Ø8 x 30mm	M4 x 14mm	M4 x 14mm
F * 6	G * 1	H * 1	I * 2	J * 2
				
M5 x 40mm	M4 x 20mm			Ø35
K * 2	L * 2	M * 2		
				
Ø8 x 40mm	Ø20	M6 x 60mm		




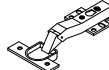
# Step 1

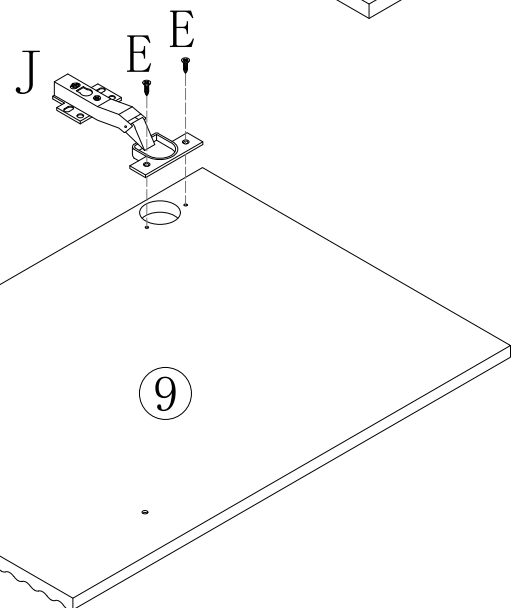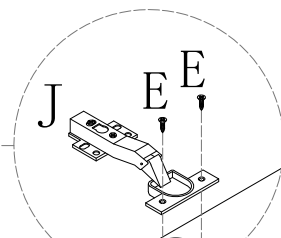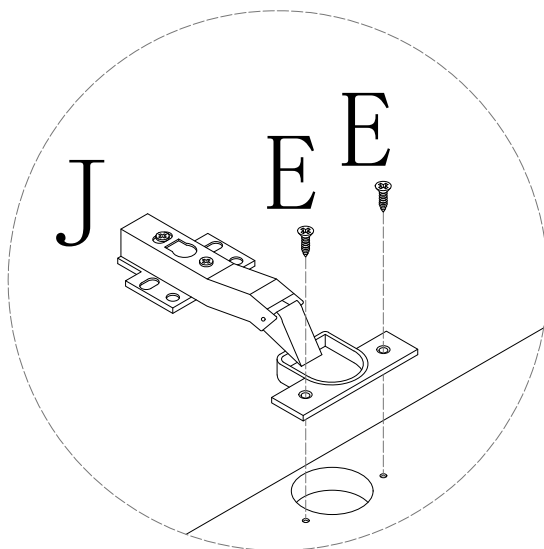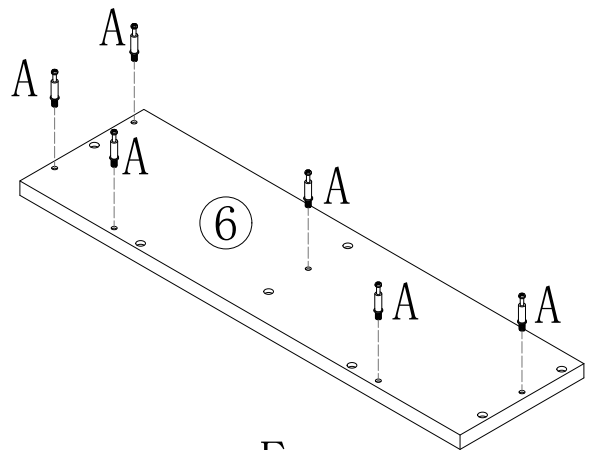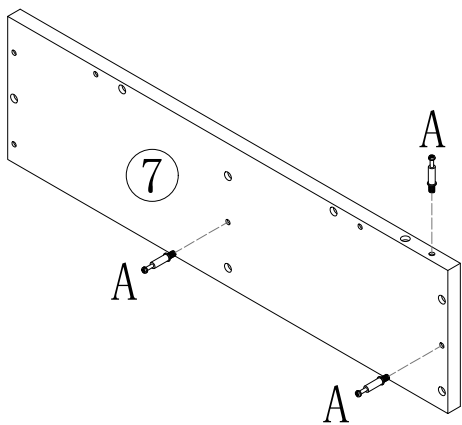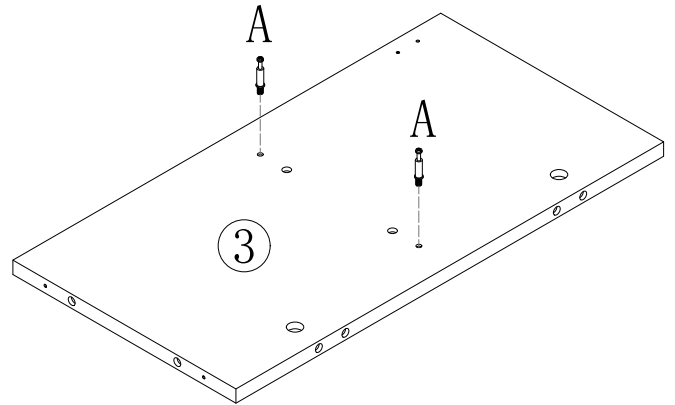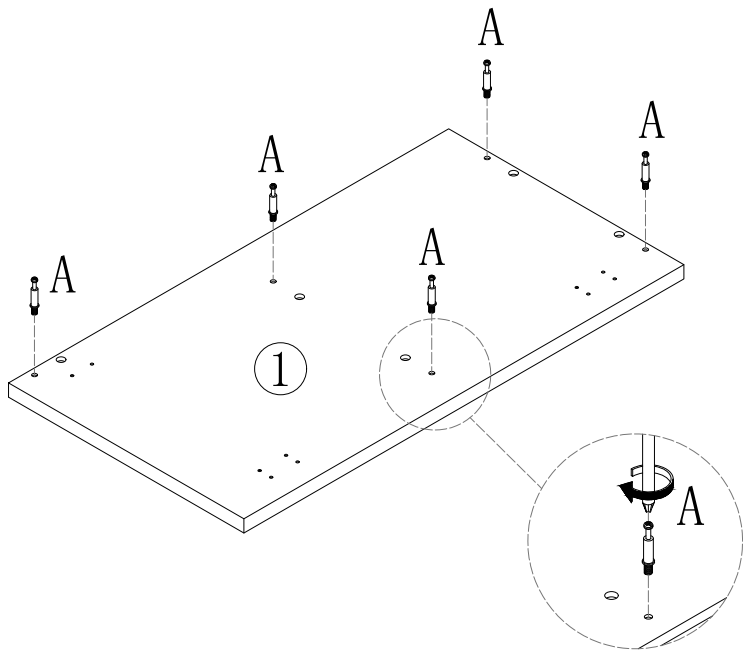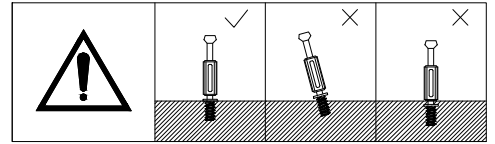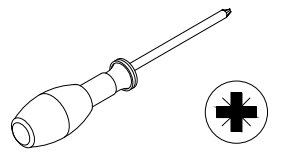A * 16	E * 4	J * 2
		
M6 X 35mm	M4 x 14mm	Ø35









# Step 2

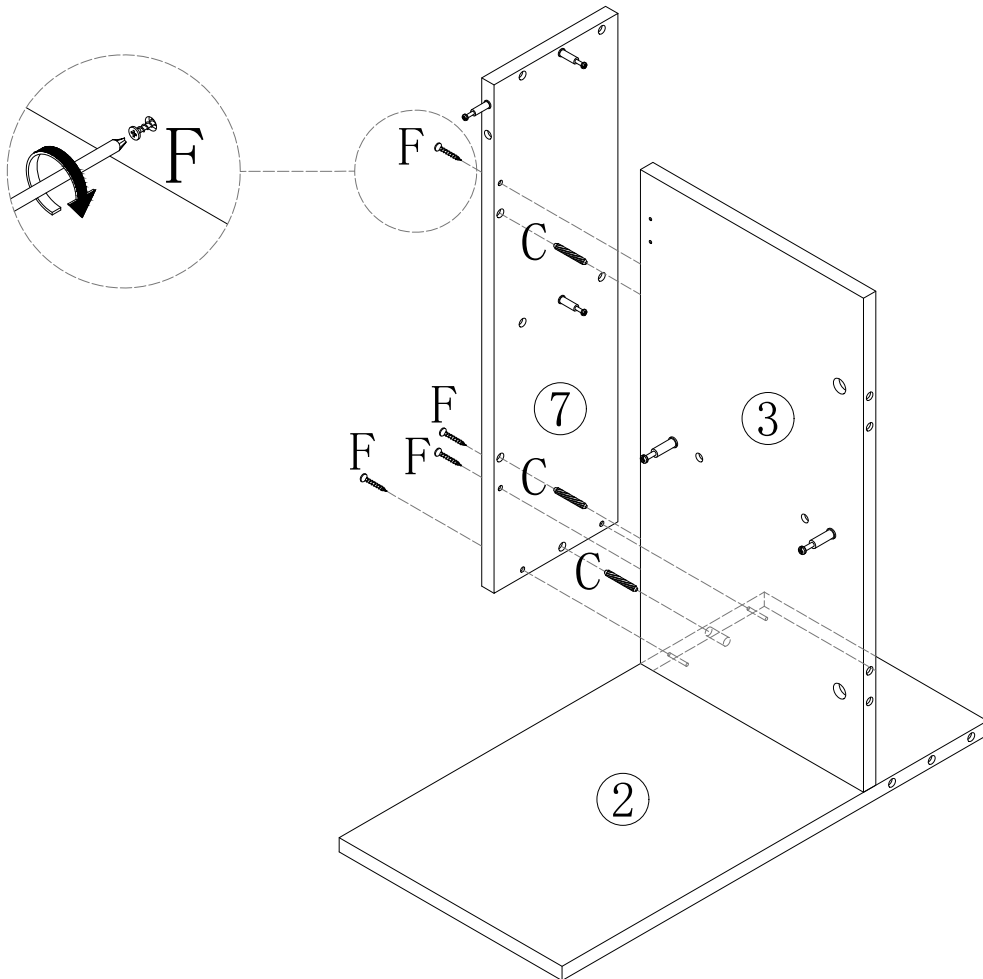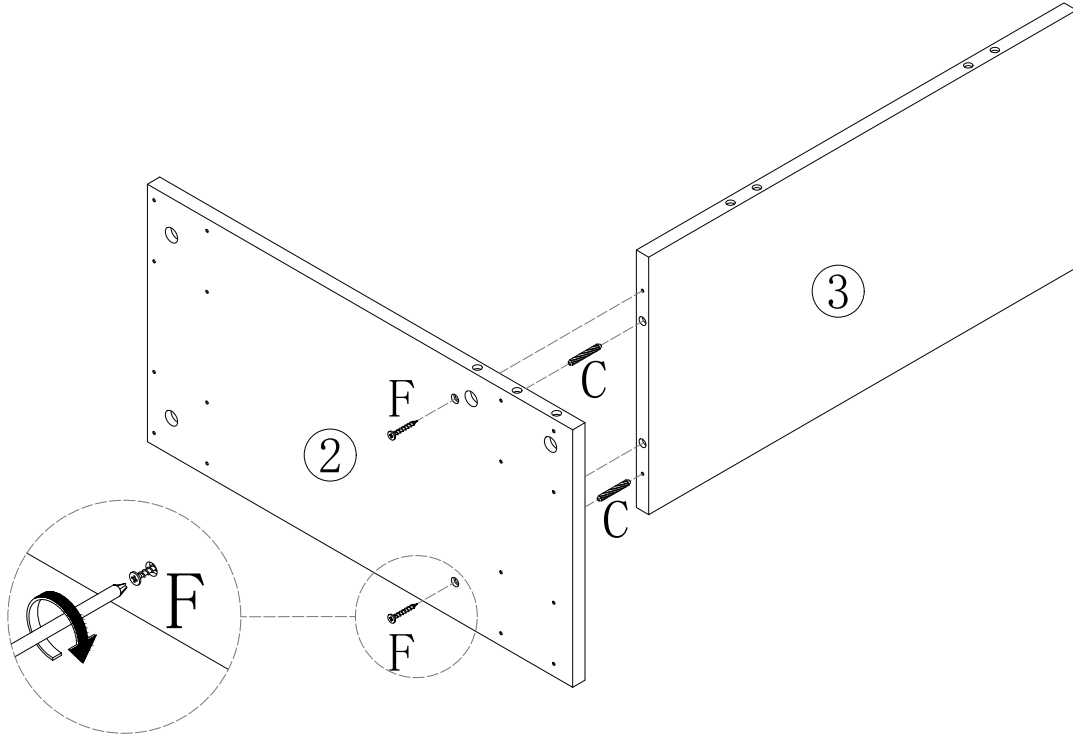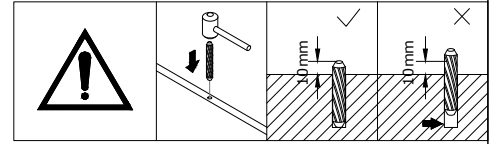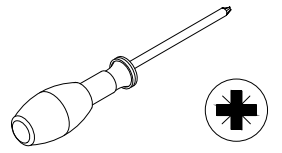C * 5	F * 6
 Ø8 X 30mm	 M5 X 40mm










# Step 3

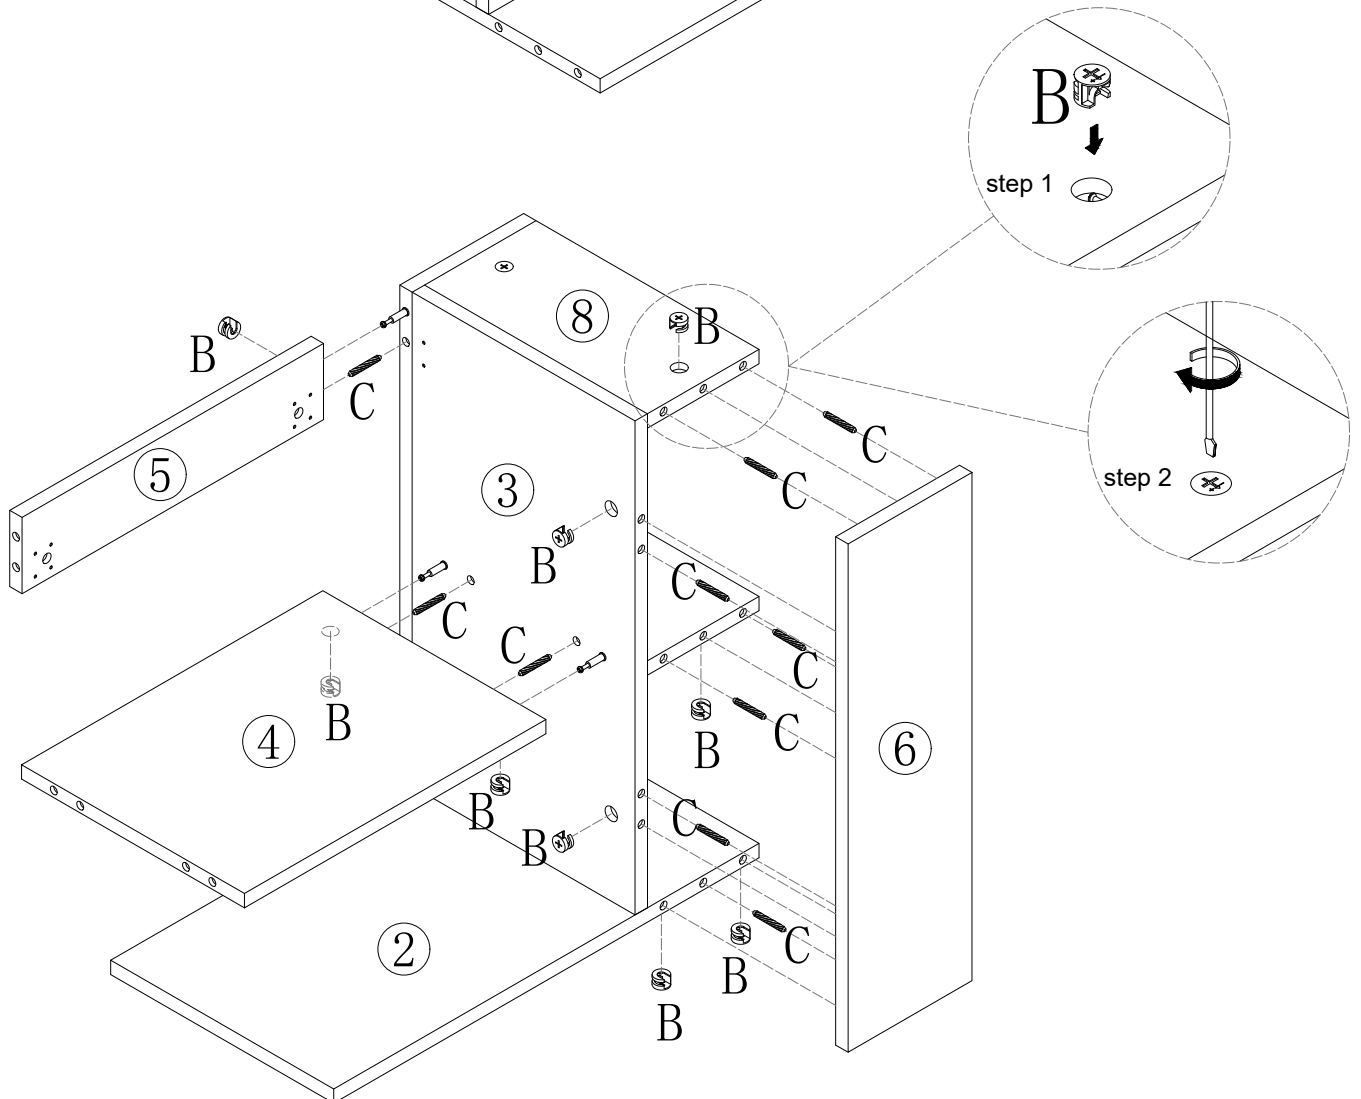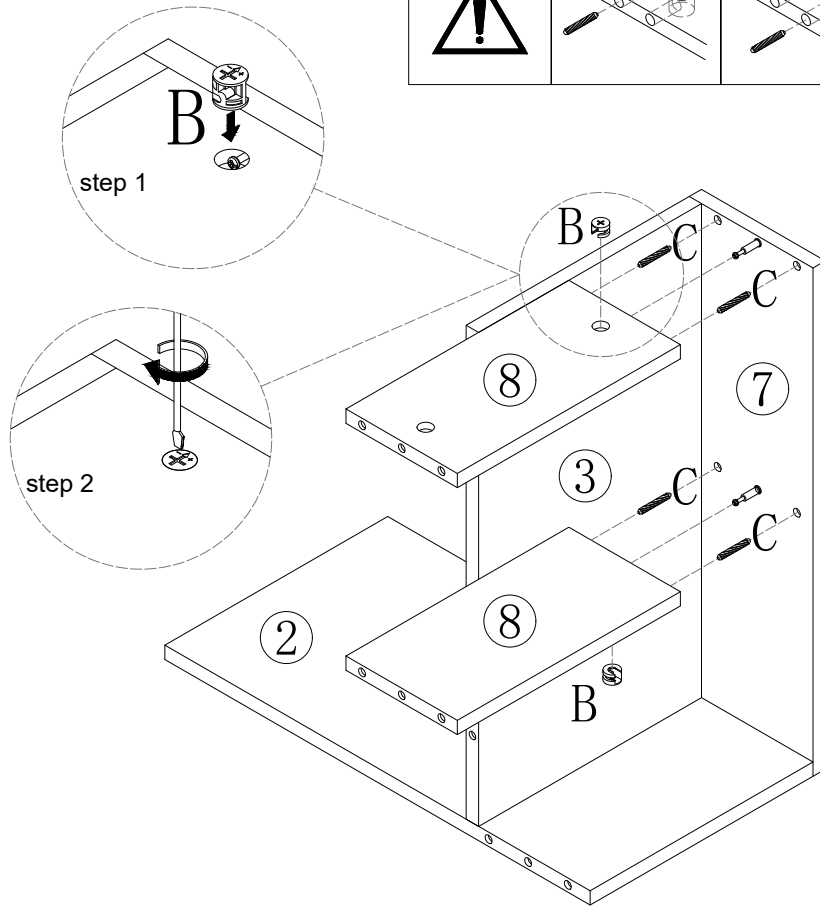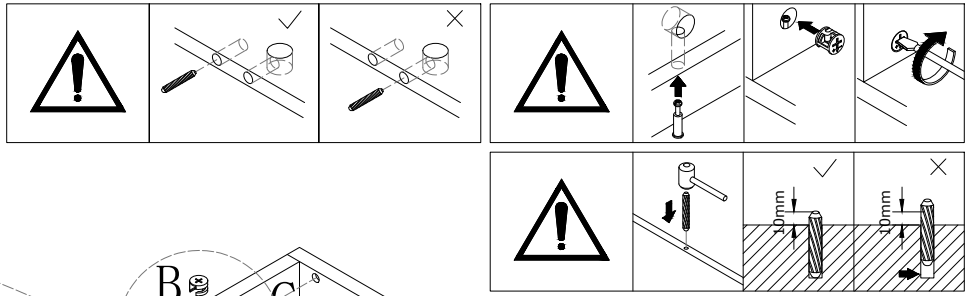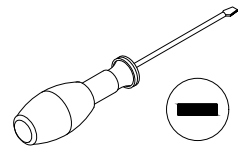B * 11	C * 14
	
Ø15 x 12mm	Ø8 x 30mm



# Step 4

B * 5  Ø15 x 12mm	C * 5  Ø8 x 30mm
--	---

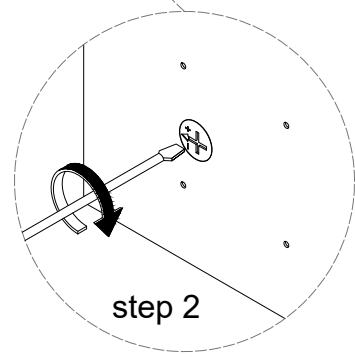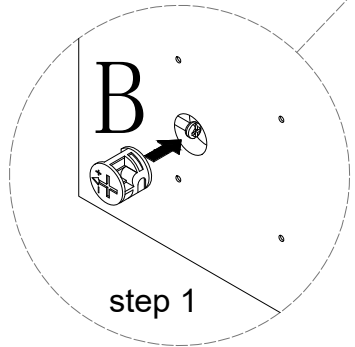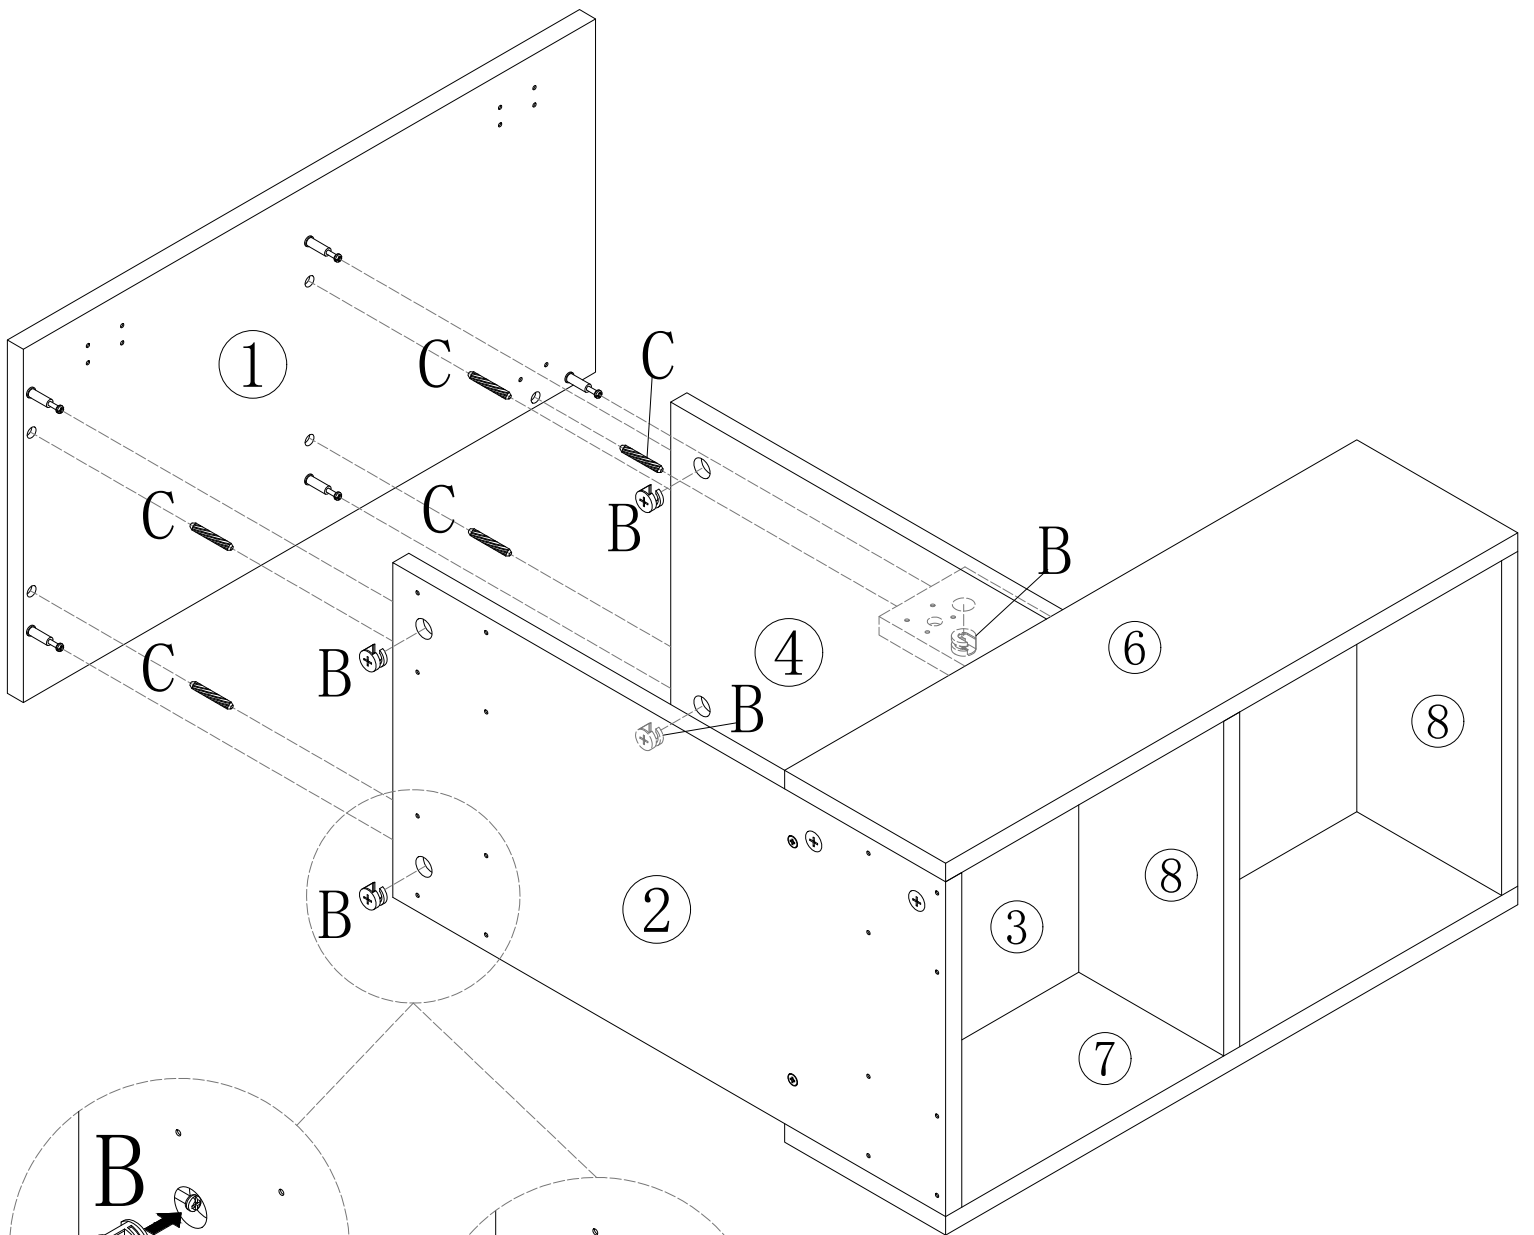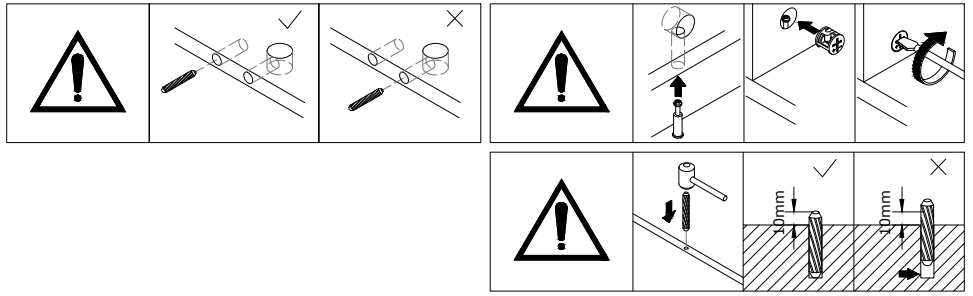
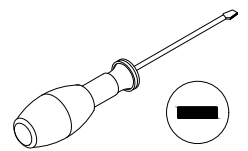


# Step 5



E \* 16





M4 x 14mm

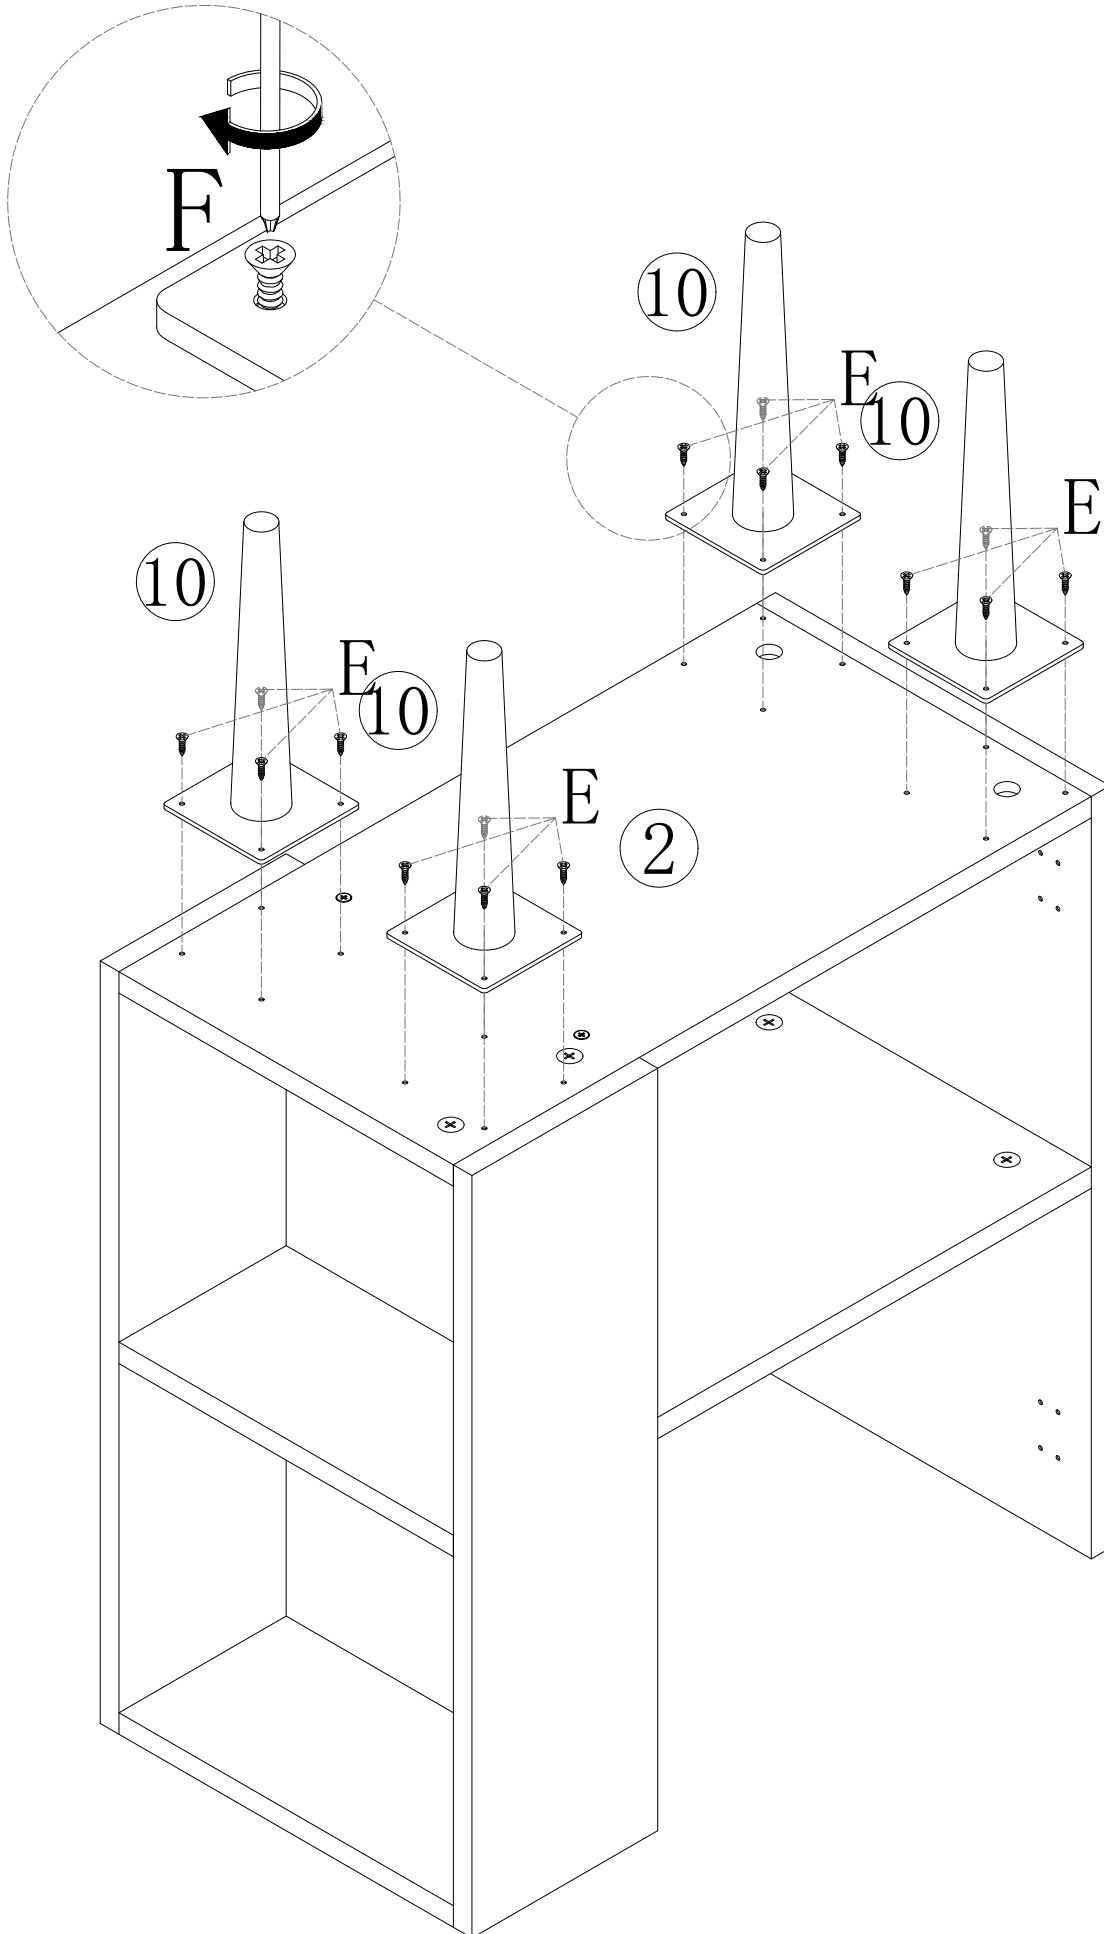
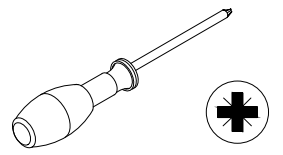


# Step 6


D * 12	I * 2
 M4 x 14mm	

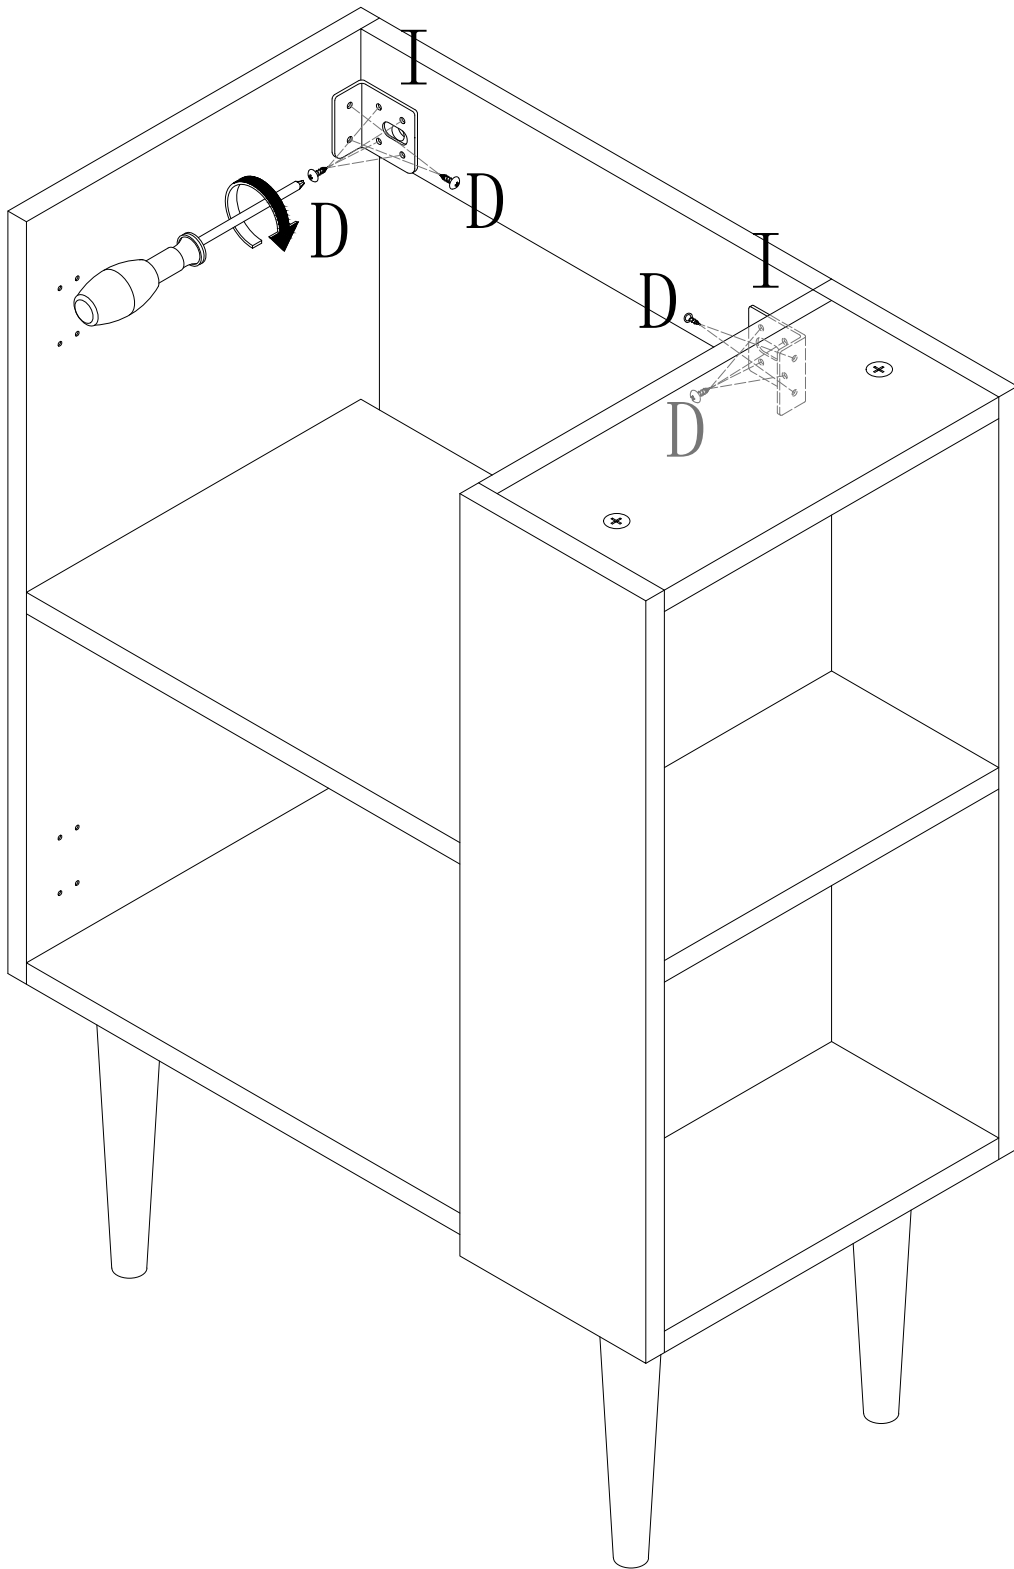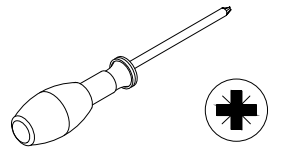

# Step 7




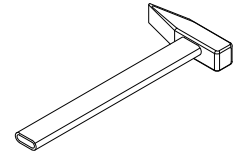
Wall

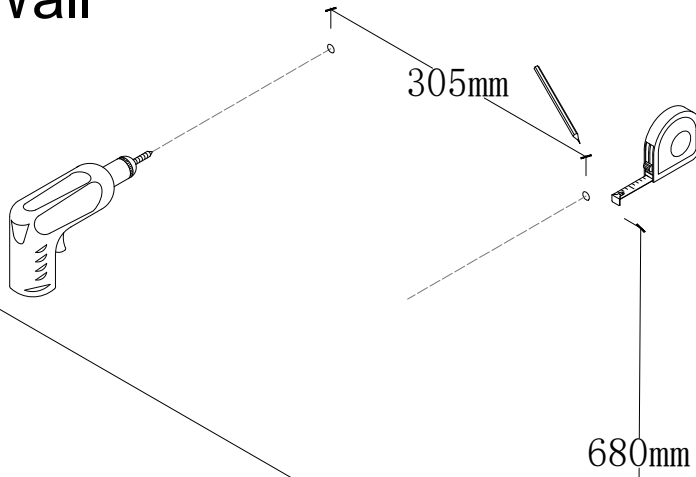


Please mark the location on the wall with a pencil, then punch the hole

# Setp 8



K * 2

Ø8 x 40mm


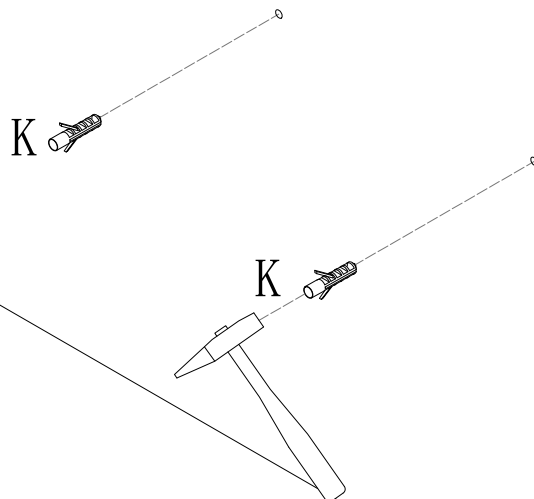


Wall




# Step 9

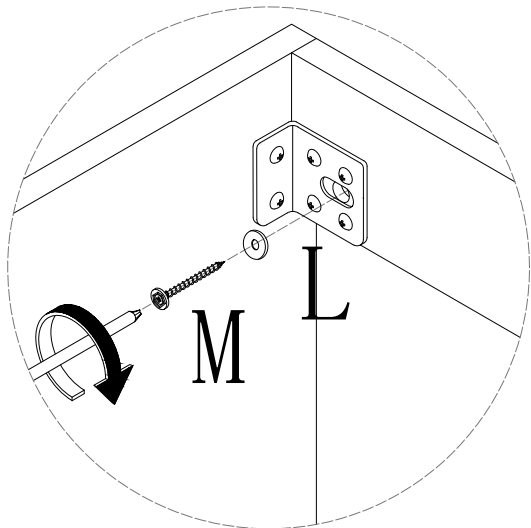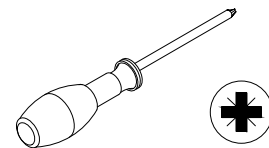


L * 2	M * 2
 Ø16	 M6 x 60mm

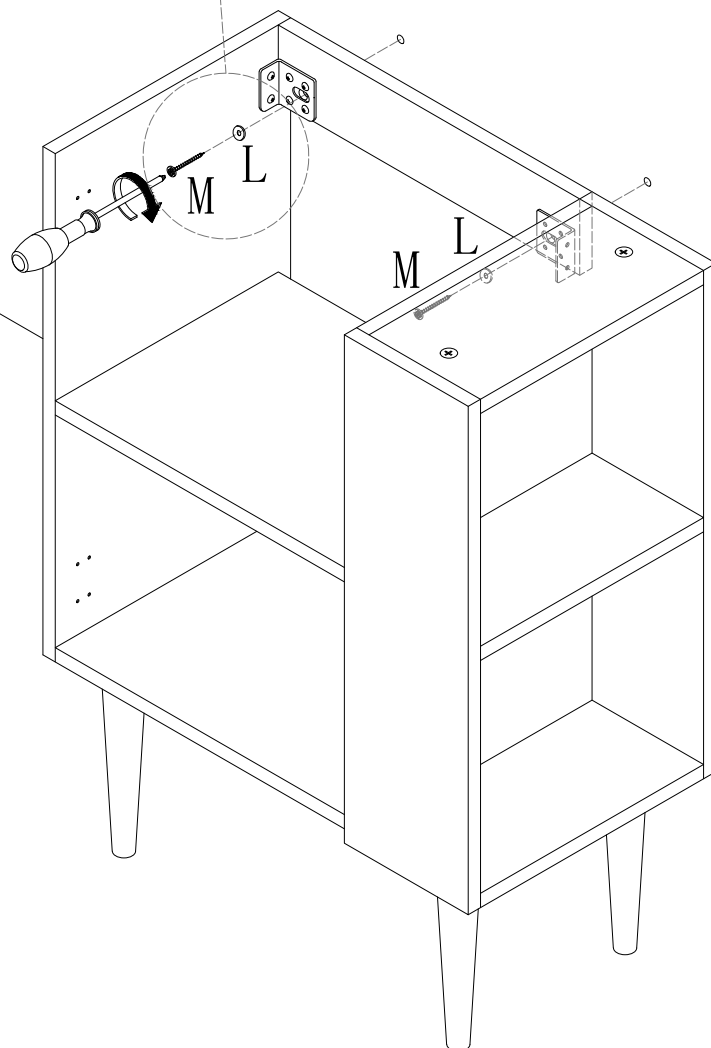


Wall




# Step 10



E * 8	G * 1	H * 1
 M4 x 14mm	 M4 x 20mm	

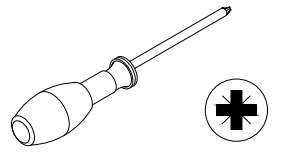

## Wall

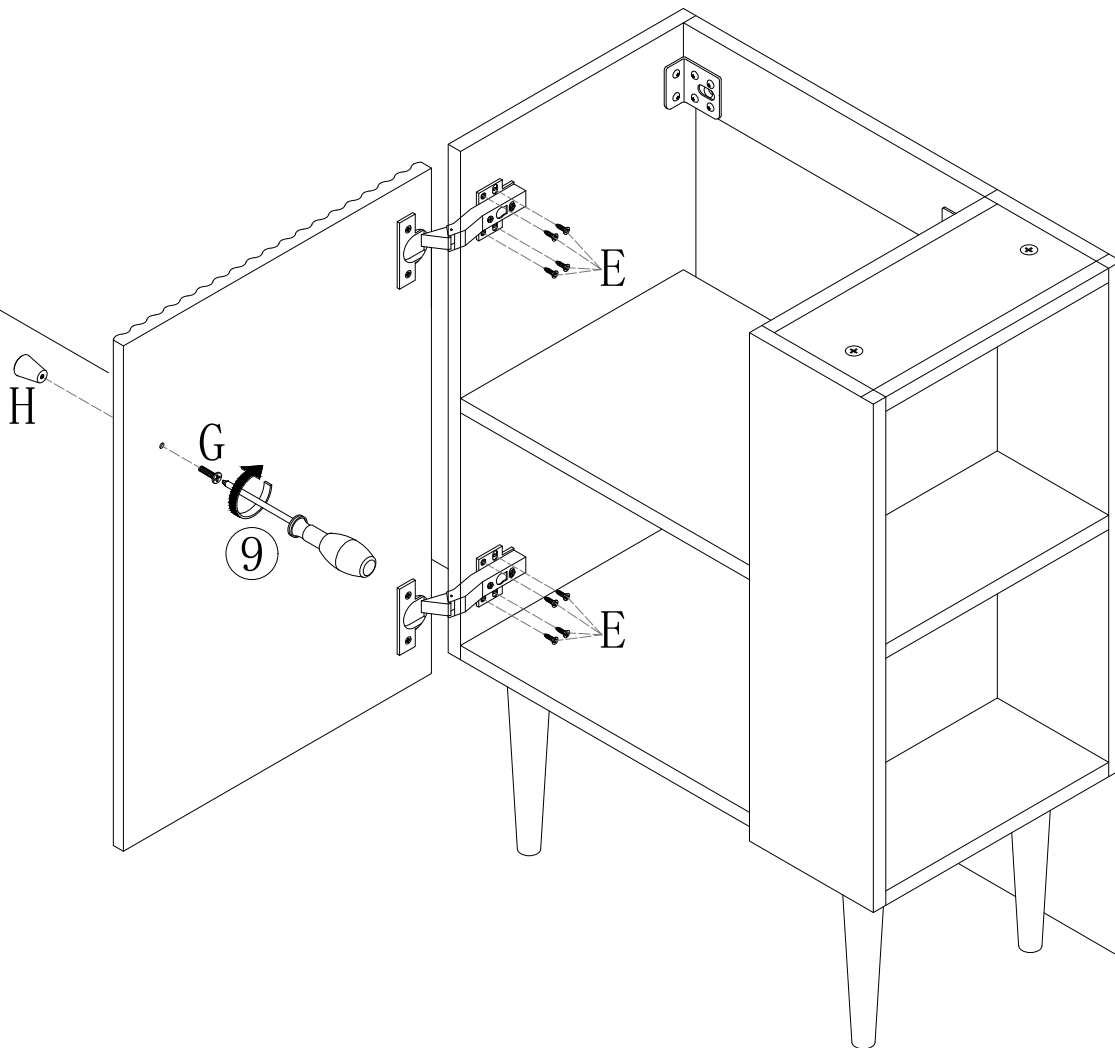


# Step 11

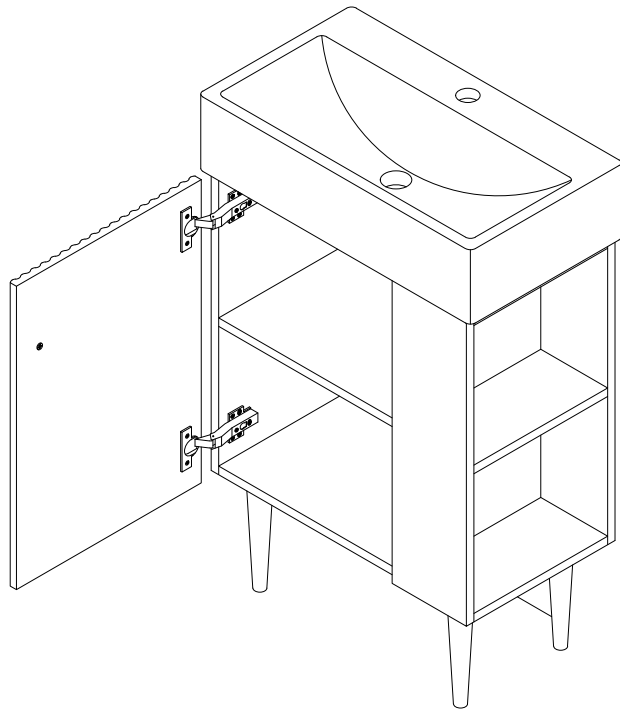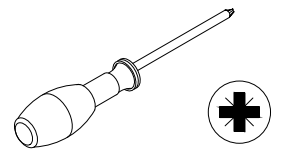


## Adjust door following the direction.


### Adjust the door up and down to match the cabinet.

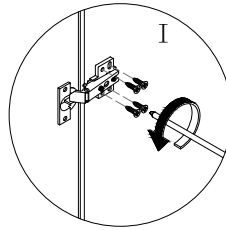

I:loosen the screw.

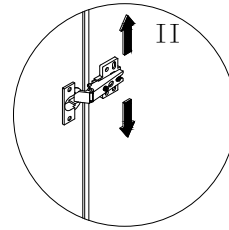

II:Adjust the upper and lower position.

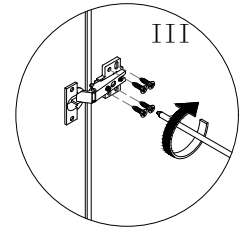


II:tighten the screw.




**When the door position is not standard,please adjust the door according to the right picture.**

### Adjust the door left and right to match the cabinet for suitable crack of the door

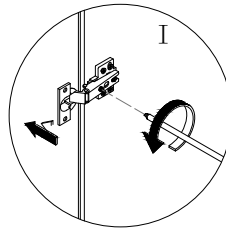

I:loosen the screw to keep hinge apply force toward the direction of arrow.

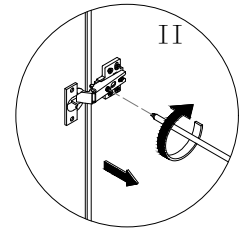


II:tighten the screw to keep hinge apply force toward the direction of arrow.




**Please place the cabinet on the flat floor before adjustment.**

### Adjust the door backwards and forwards to match the cabinet.

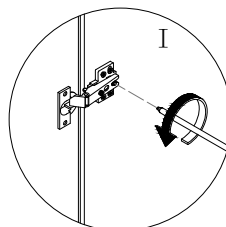


I:loosen the screw.

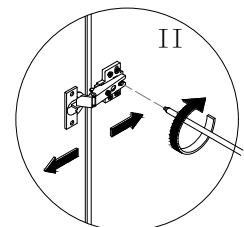


II:Adjust the distance between front and back.


# Step 12

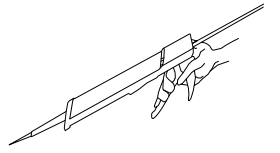



## Wall

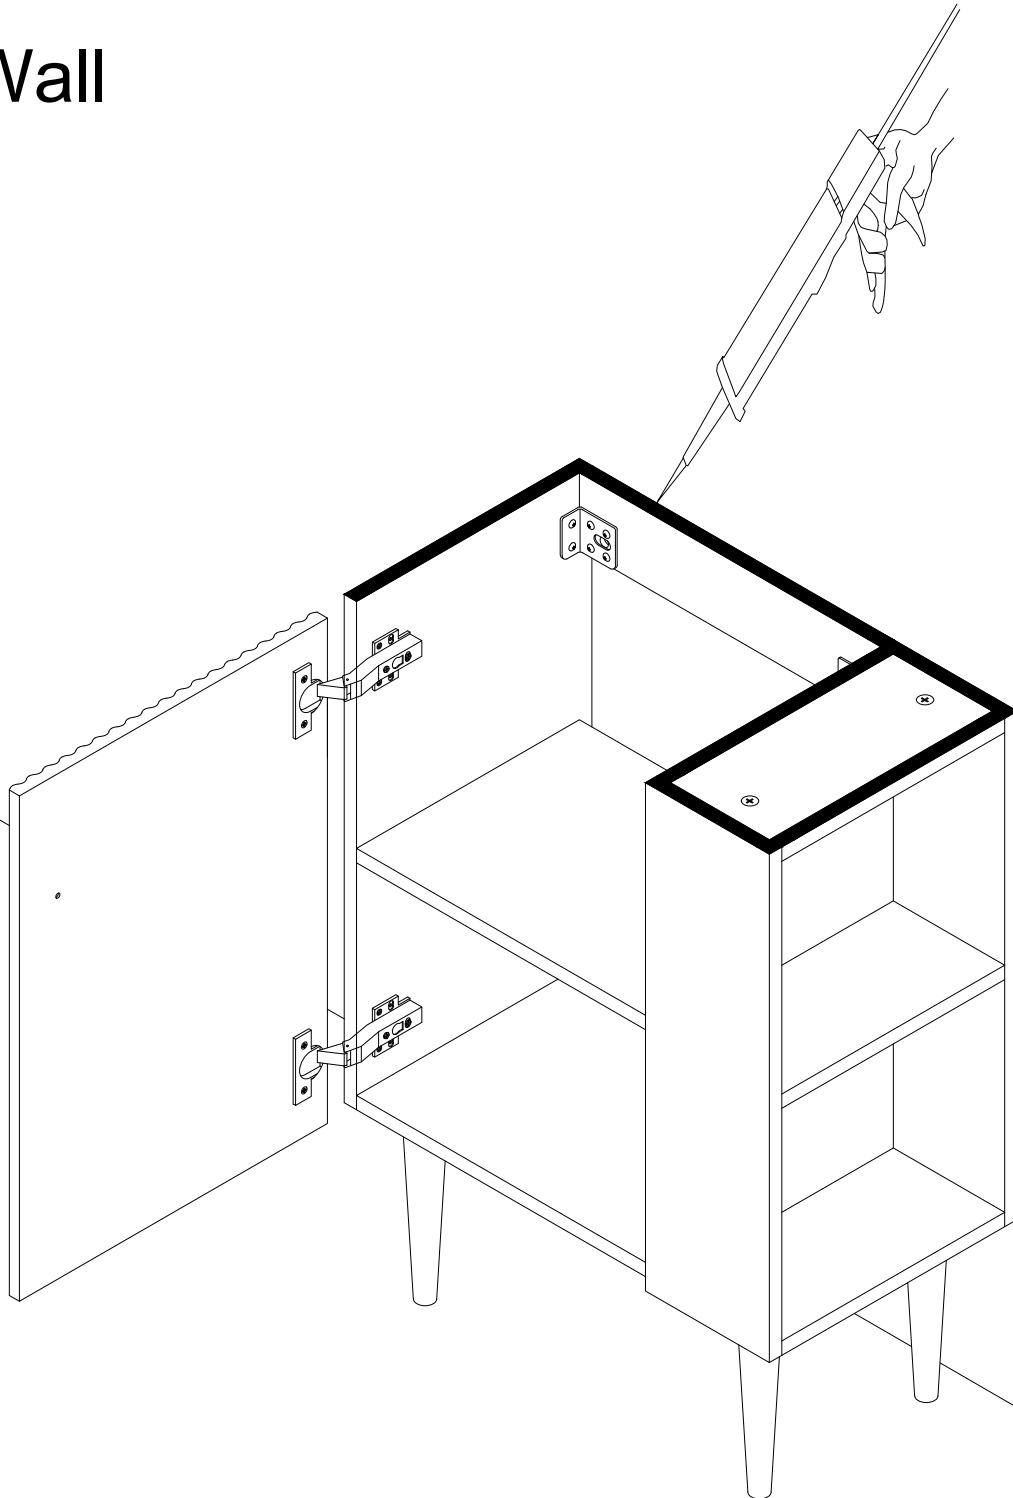

# Step 13

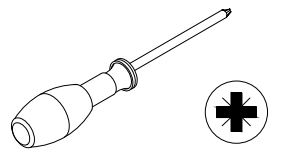

Wall

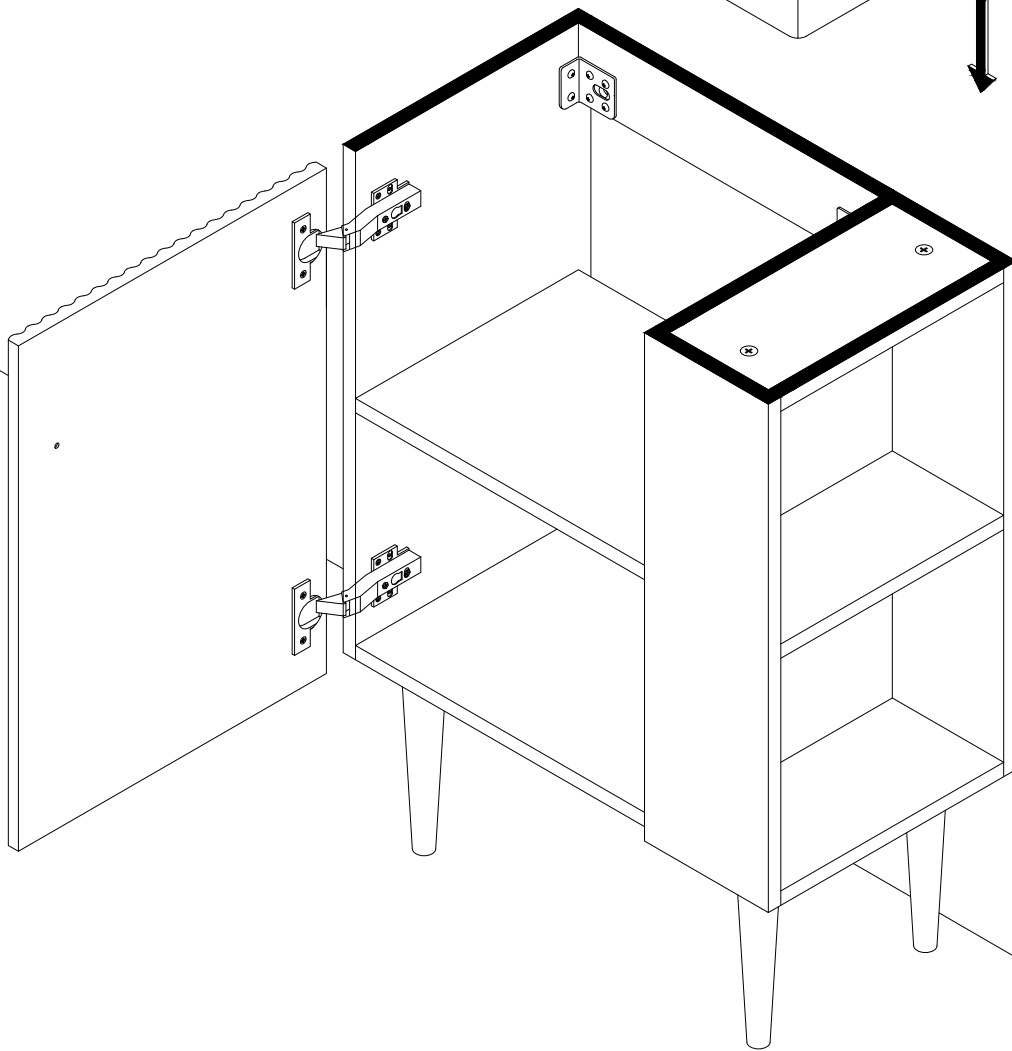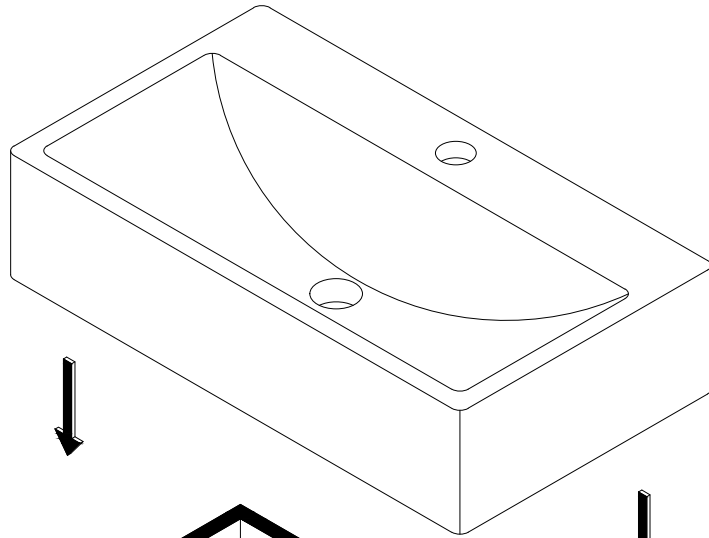

# Step 14

