



# ASSEMBLY INSTRUCTION

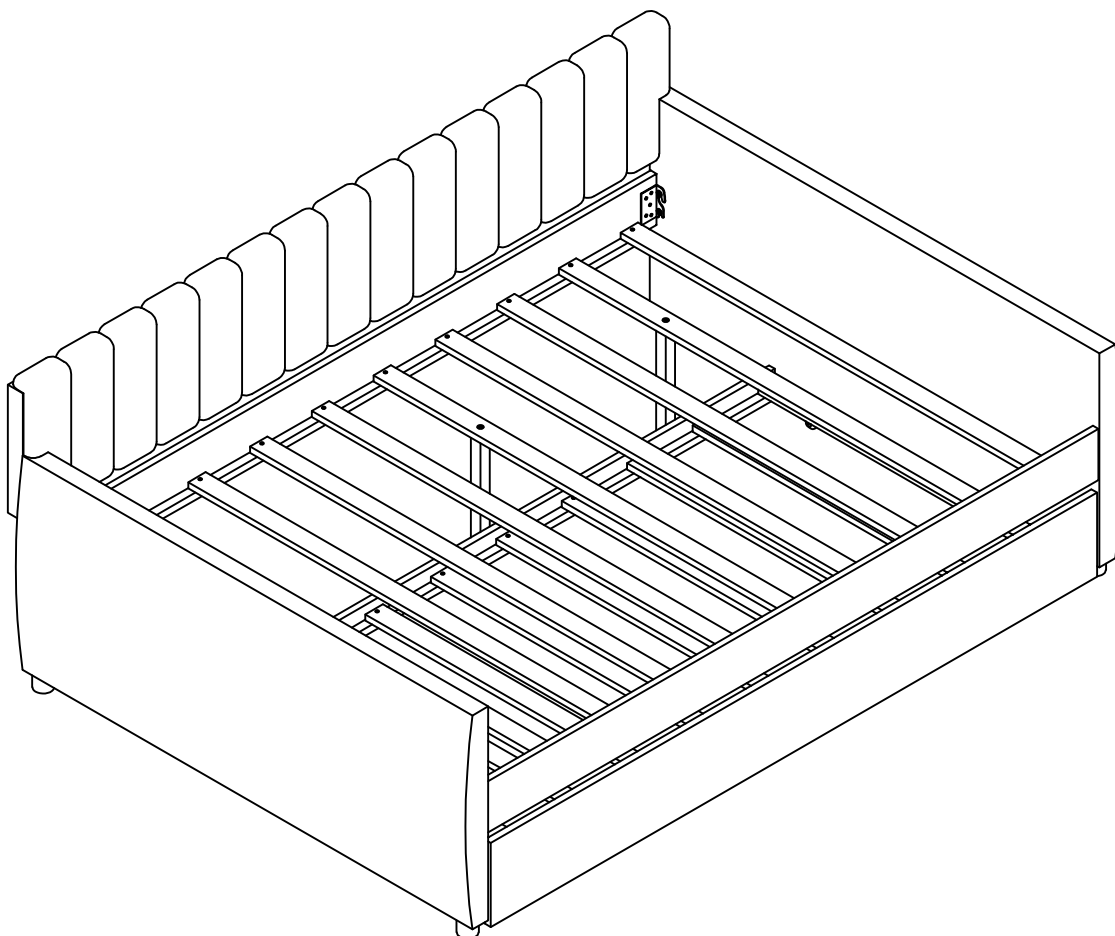

## **! SAFETY WARNINGS !**


1. This bed is designed for use FULL Mattress 74 inch Long and 54 inch Wide
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed
4. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
5. Keep these instructions for future reference

# ASSEMBLY INSTRUCTION

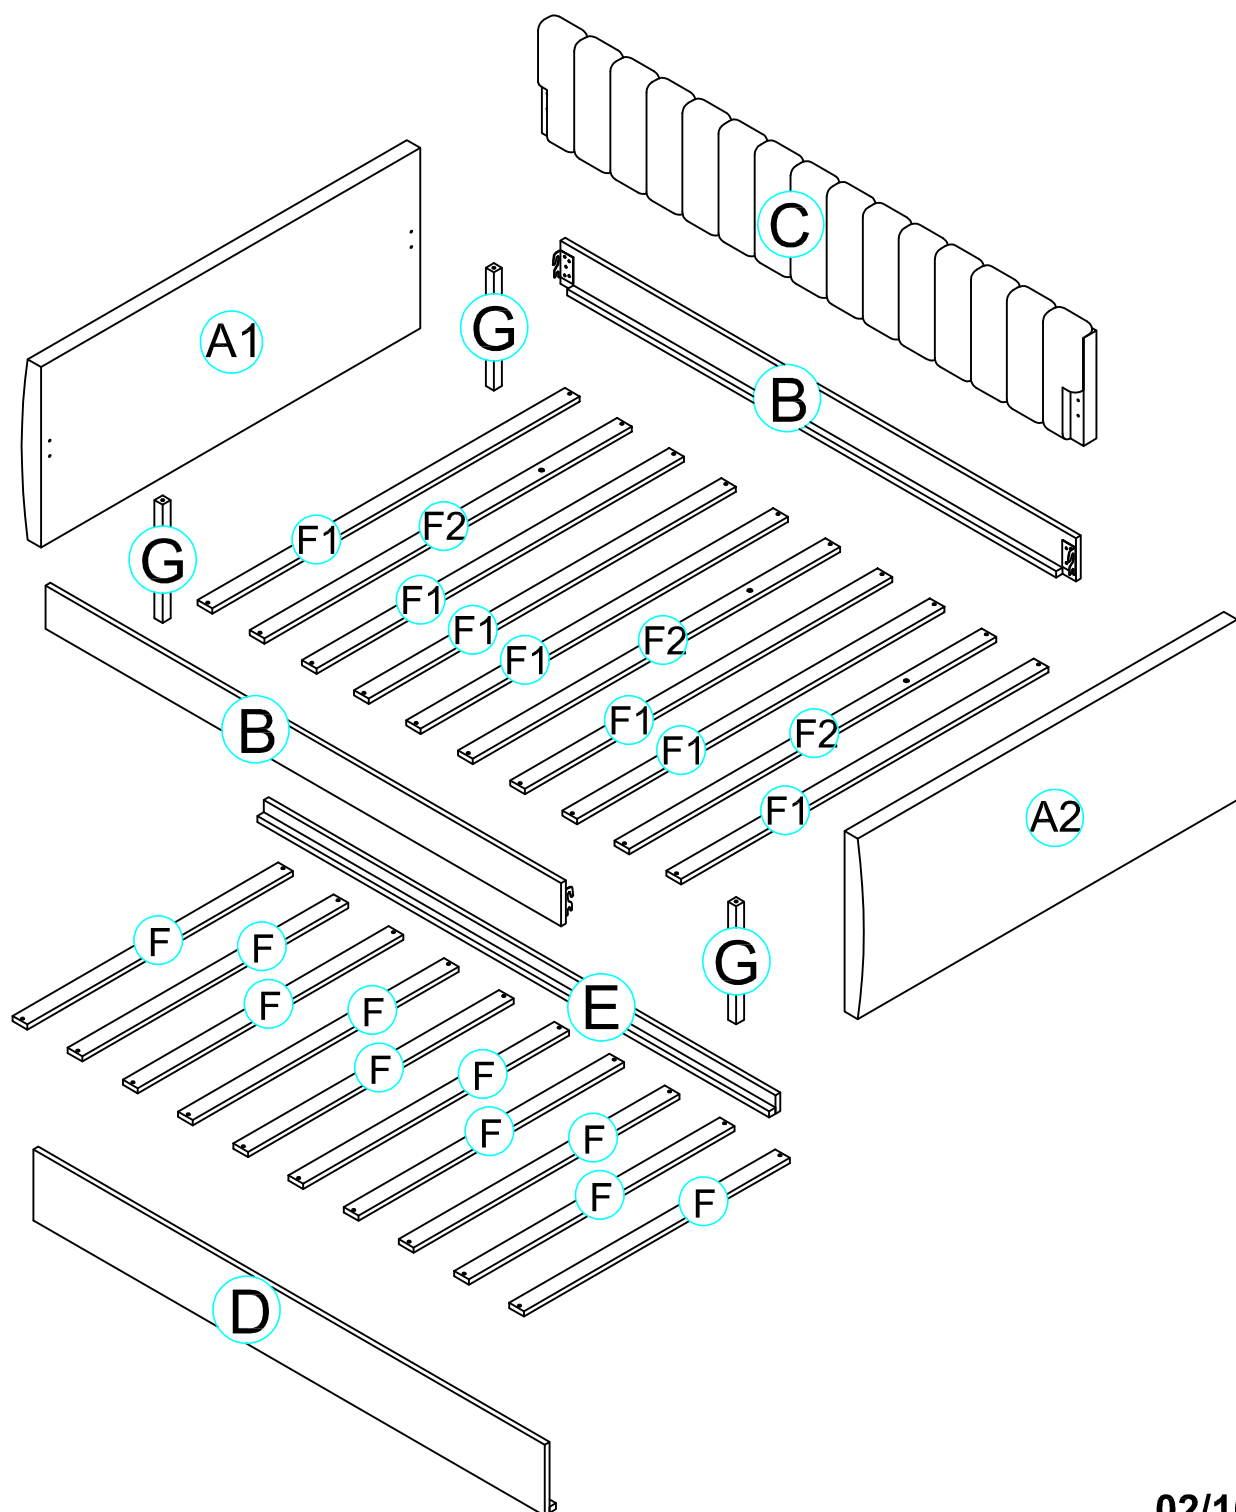


# Part List

A1

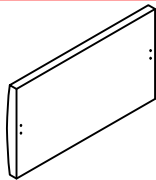


Right Arm-1pcs

A2

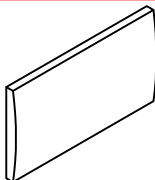


Left Arm-1pcs

F1

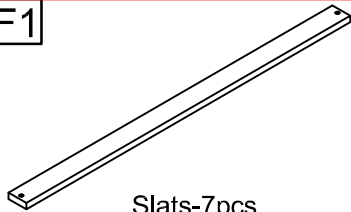







Slats-7pcs

F2

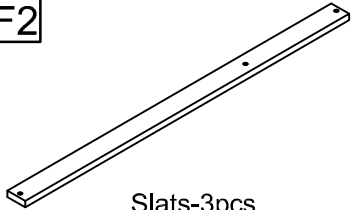
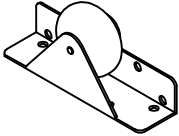






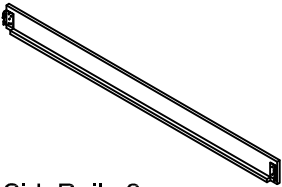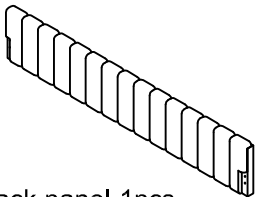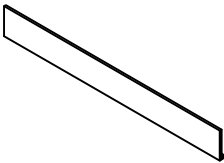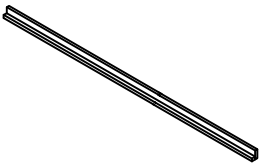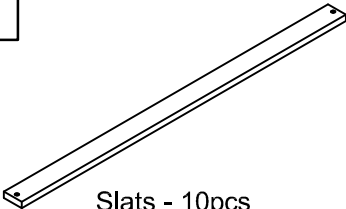



Slats-3pcs

# Part List

<b>B</b>  Side Rails-2pcs	<b>C</b>  Back panel-1pcs	<b>D</b>  Trundle-Front Panel-1pcs
<b>E</b>  Trundle-Back Panel-1pcs	<b>F</b>  Slats - 10pcs	<b>G</b>  Legs Support-3pcs

# Hardware List


<b>1</b>  Plastic Feet(Ø50x40) 4pcs	<b>2</b>  Wheels 4pcs	<b>3</b>  M4 x 15 mm Wood Screws 24pcs
<b>4</b>  M4 x 30 mm Wood Screws 40pcs	<b>5</b>  Ø1/4" x 70mm Hex-Head bolts 4pcs	<b>6</b>  Ø1/4" x 25mm Hex-Head bolts 11pcs
<b>7</b>  Allen Key 1pcs	<b>8</b>  Plastic Drawer Stopper 4 pcs	<b>9</b>  Steel Bracket 3pcs




Assembly Tools Required (Not Included)

**STEP 1-1:** Following below illustration Assembly Plastic Feet(#1) With Headboard and Footboard use HW #2

1




4pcs

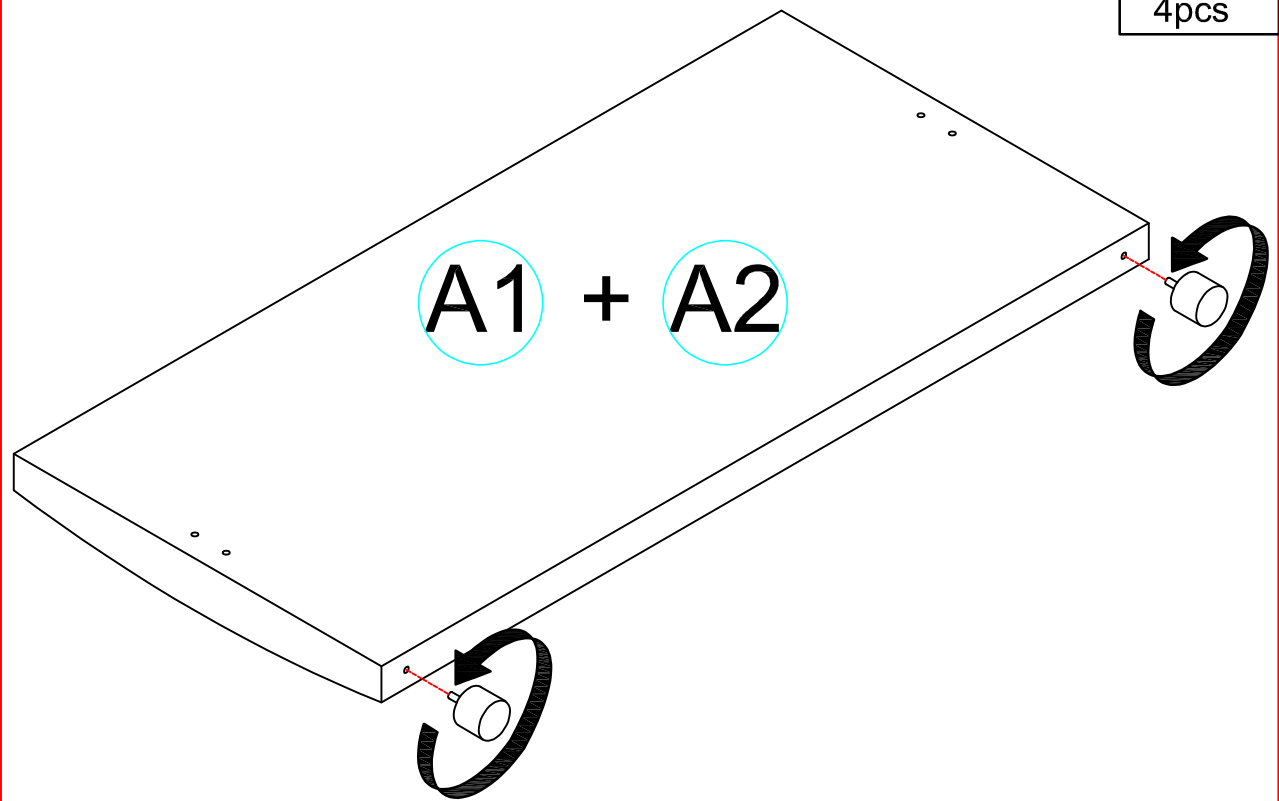


**STEP 1-2:** Following below illustration

6



3pcs

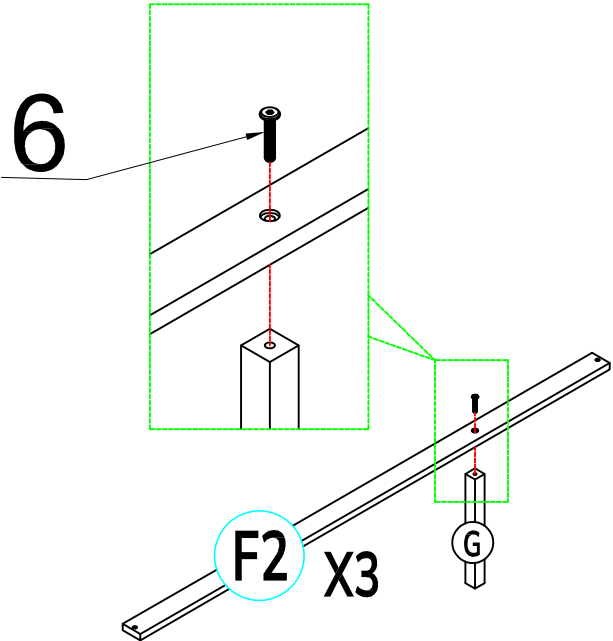


## STEP 2: Following below illustration Using hardware #2 to Assembly

Headboard and Footboard with siderail B(x2). Look at detail view for more detail

6



8pcs

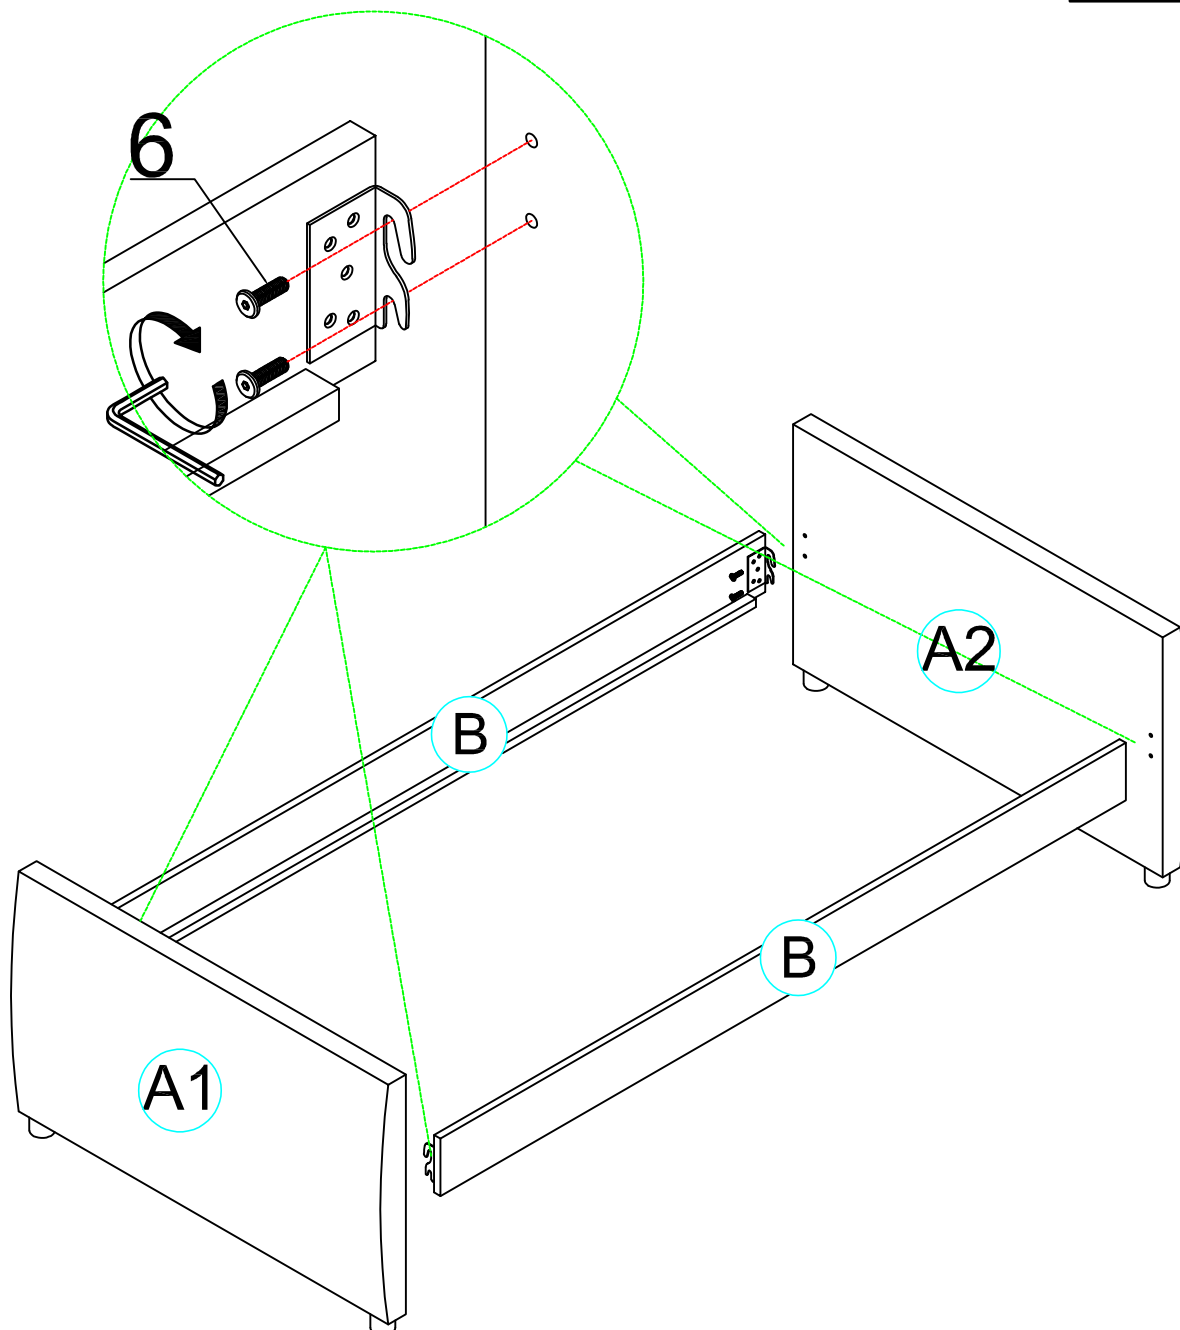



## STEP 3: Following below illustration

-Using hardward #3 to Assembly Frame(completed on step 2) with Bach Frame C

5



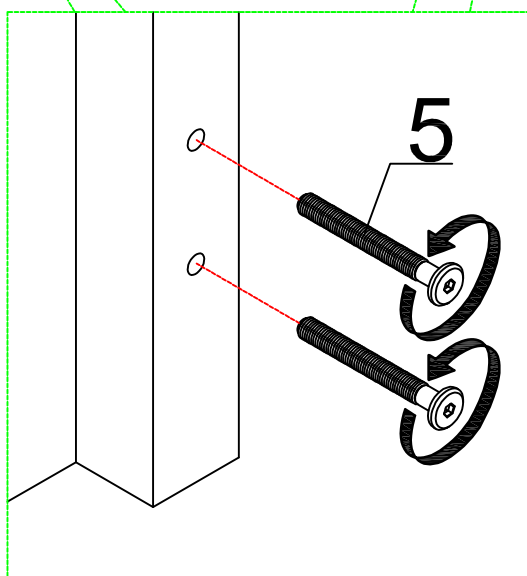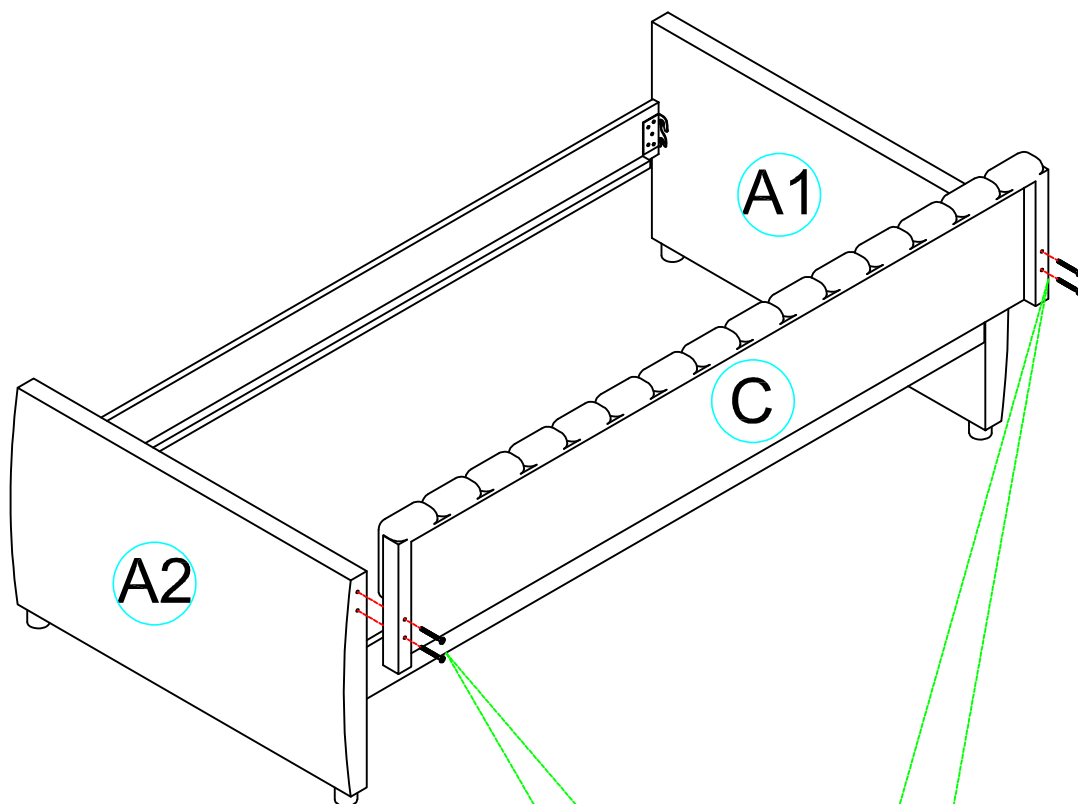


4pcs





## STEP 4: Following below illustration:

-Screw 10 slats F1 & F2 with Side Rail B by using hardware #4.


-Look at detail view for more detail

3		8		4	
4pcs		4pcs		20pcs	

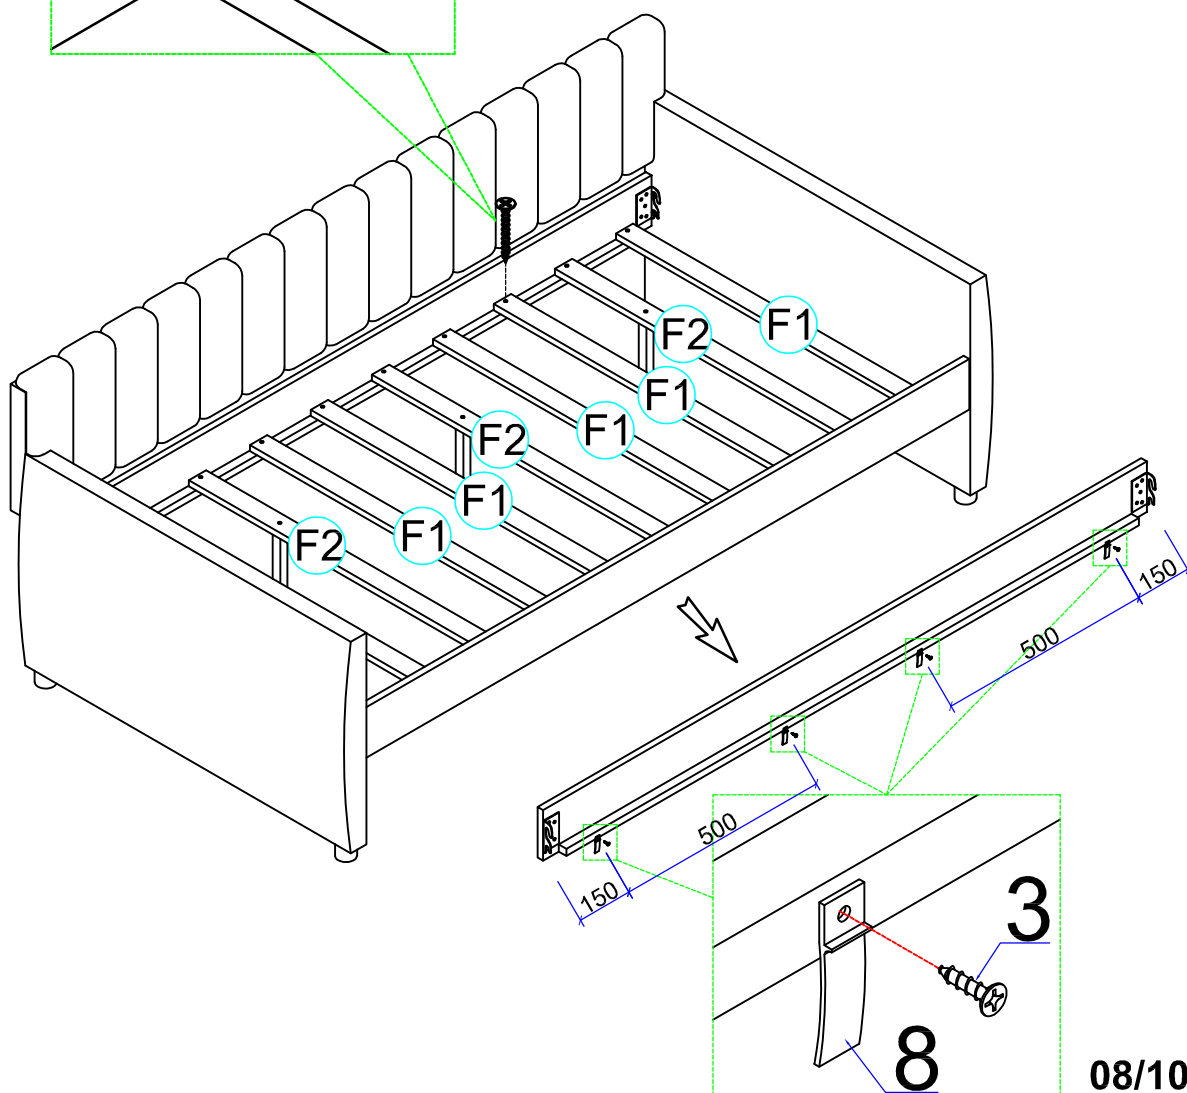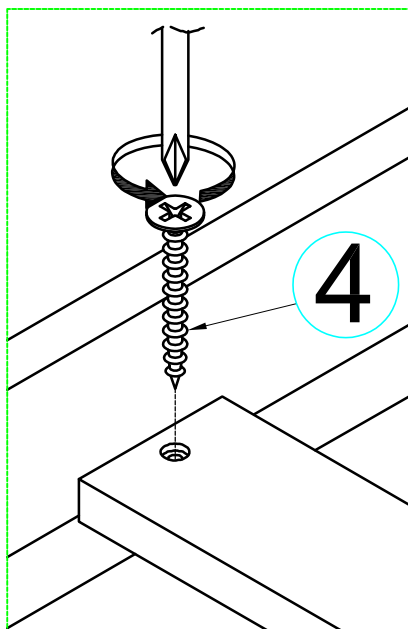




**STEP 5-1:** Following below illustration:

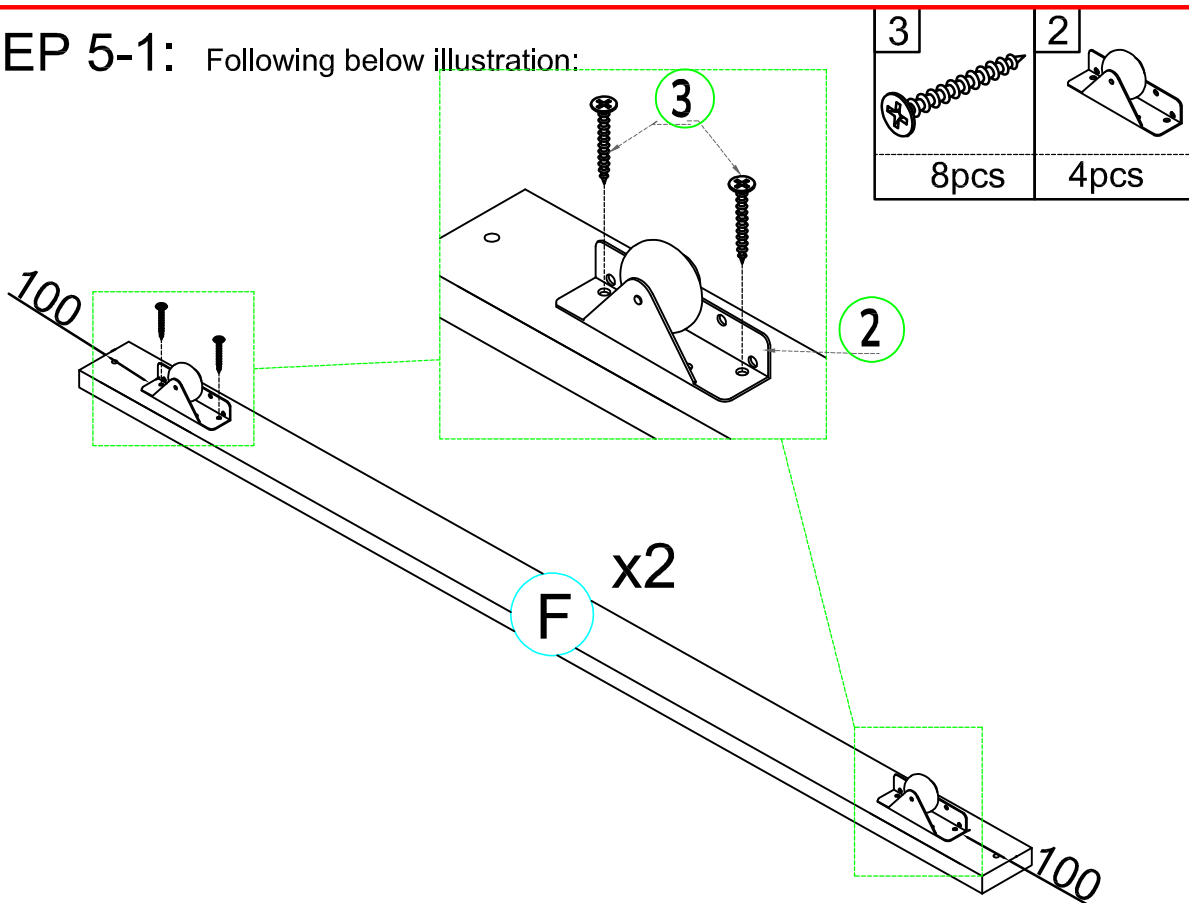

**STEP 5-2:** Following below illustration:

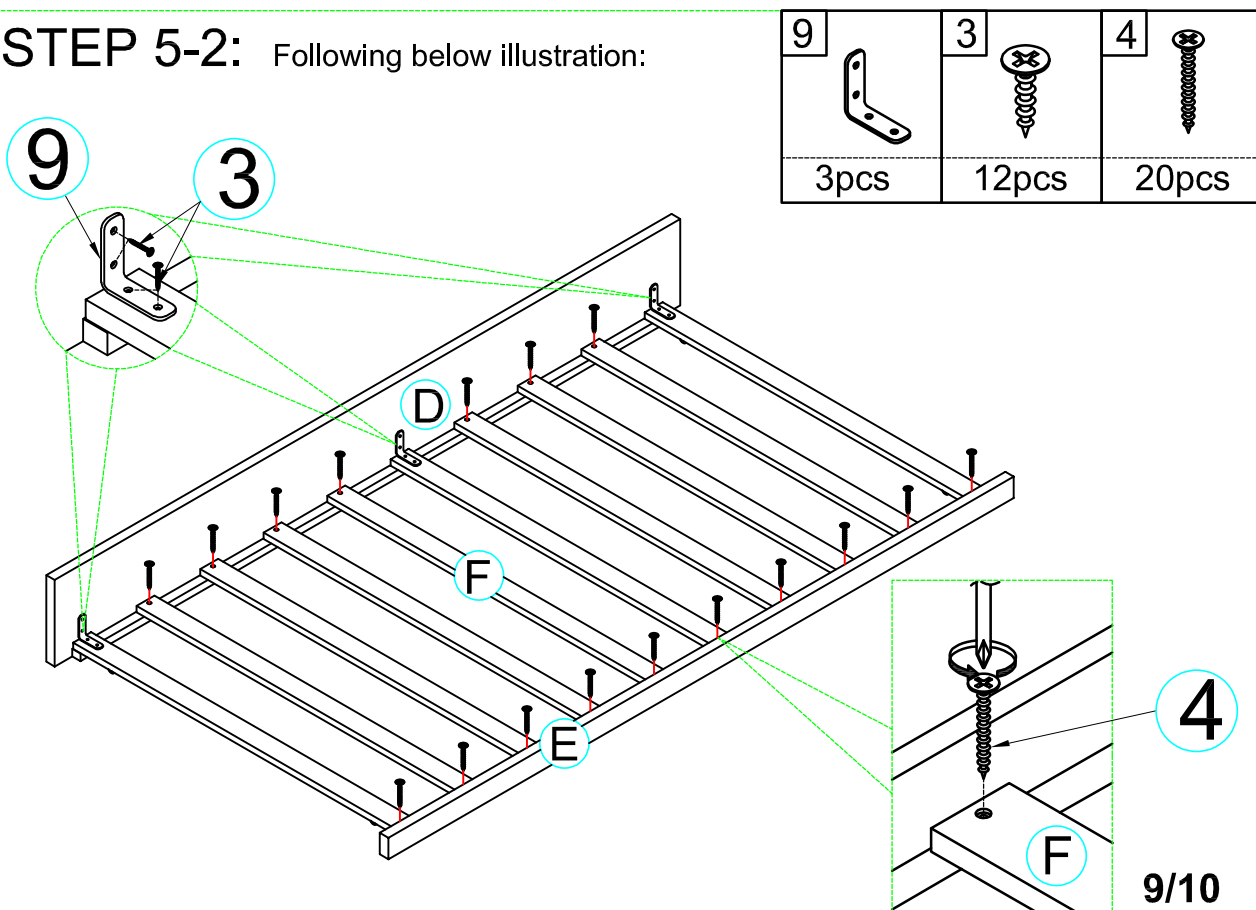

**FINISH**

