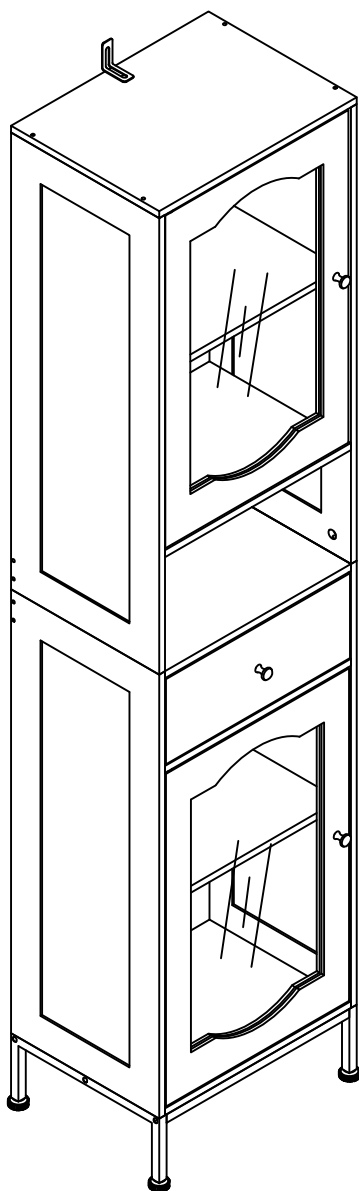
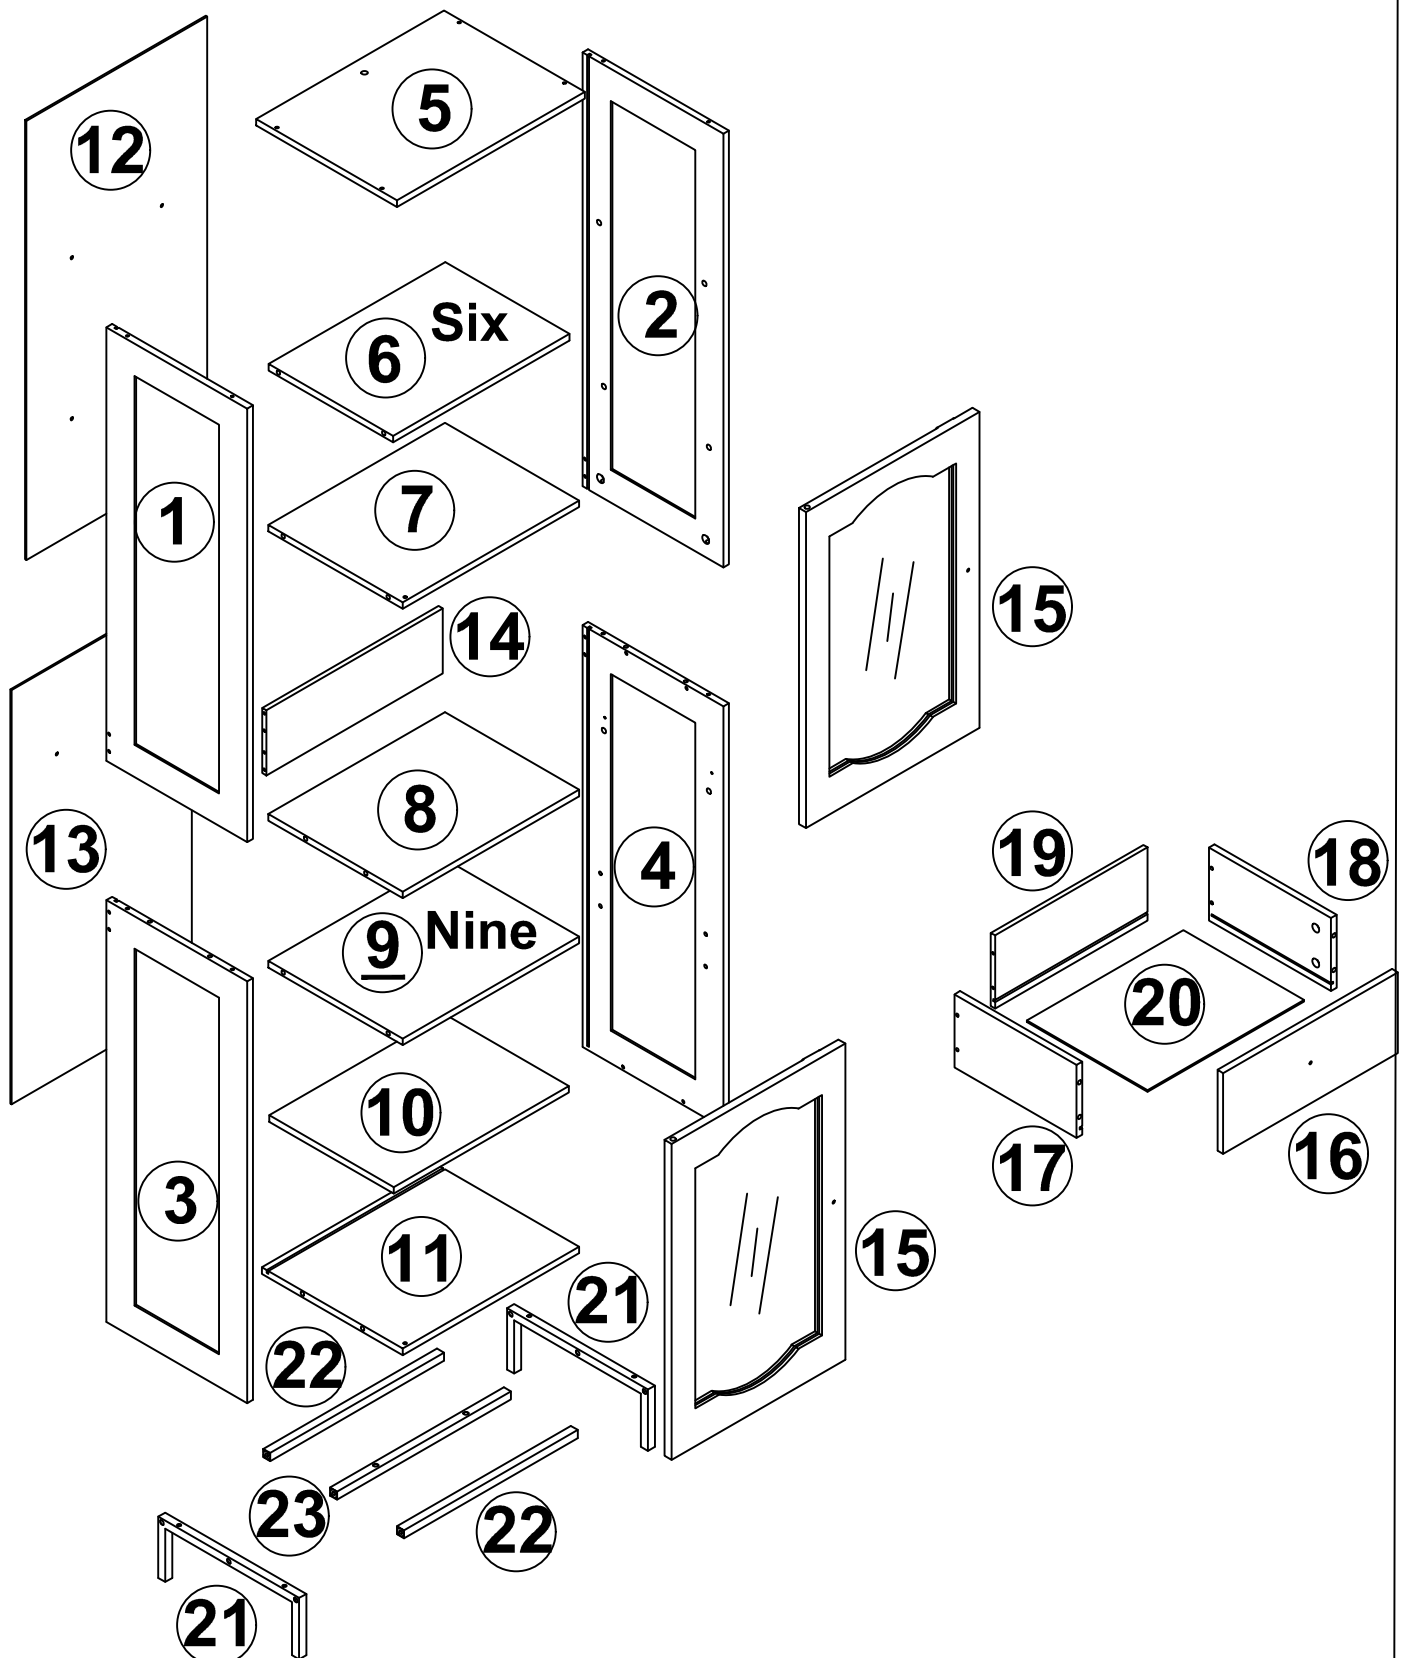


INSTRUCTIONS

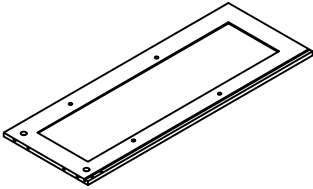
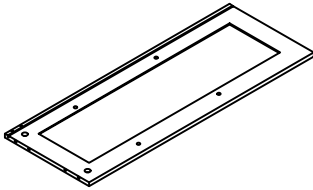
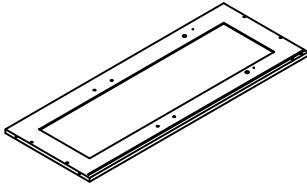
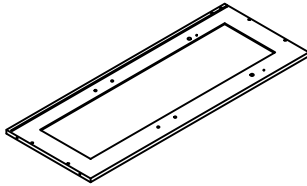
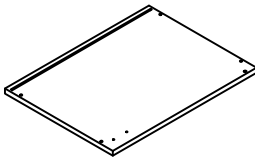
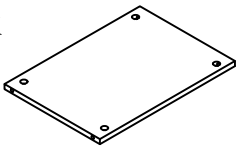
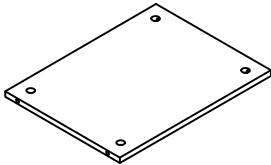
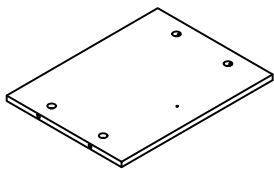


WD-SC002-67

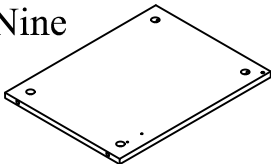
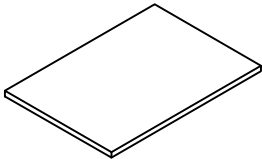
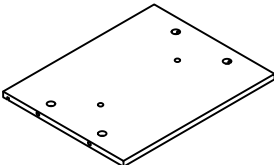
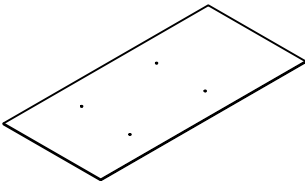
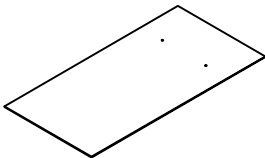
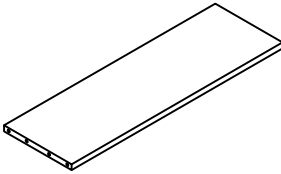
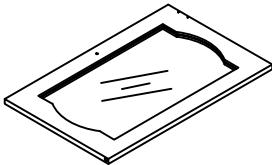
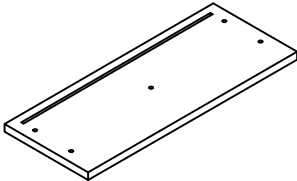
Before starting the installation, let's have an understanding of the main parts of the product.



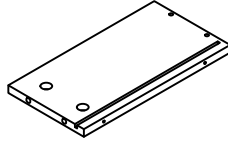
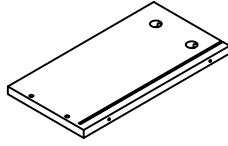
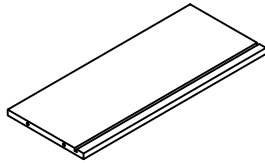
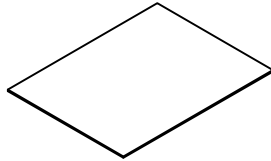
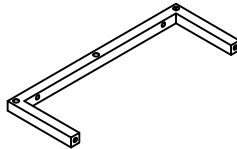
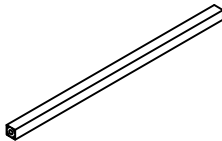
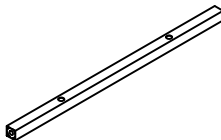
Component

Letter (number)	Part	Design	Quantity
①	Upper Left Side Panel		X1
②	Upper Right Side Panel		X1
③	Lower Left Side Panel		X1
④	Lower Right Side Panel		X1
⑤	Top Panel		X1
⑥	Upper Shelf Panel	Six 	X1
⑦	Shelf Panel		X1
⑧	Middle Shelf Panel		X1




Component

Letter (number)	Part	Design	Quantity
9	Lower Shelf Panel	Nine 	X1
10	Adjustable Lower Shelf Panel		X1
11	Bottom Panel		X1
12	Upper Back Panel		X1
13	Lower Back Panel		X1
14	Back Brace Panel		X1
15	Door Panel		X2
16	Drawer Front Panel		X1





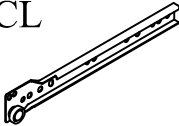
Component

Letter (number)	Part	Design	Quantity
17	Drawer Left Side Panel		X1
18	Drawer Right Side Panel		X1
19	Drawer Back Panel		X1
20	Drawer Bottom Panel		X1
21	Base Frame		X2
22	Connecting Tube		X2
23	Center Connecting Tube		X1

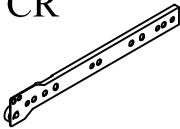
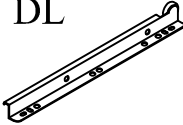
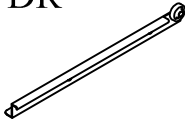


Component

Letter (number)	Part	Design	Quantity
A	Screw M3.5*12mm		X16
B	Screw M6*10mm		X1
C	Screw M6*25mm		X8
D	Screw M5*38mm		X26
E	Wood		X4
F	Cam Screw		X12
G	Cam Screw		X16
H	Hidden Cam		X28

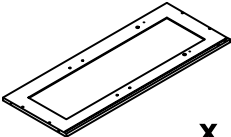
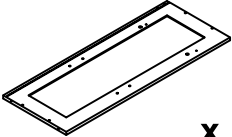

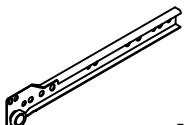
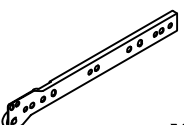

Component

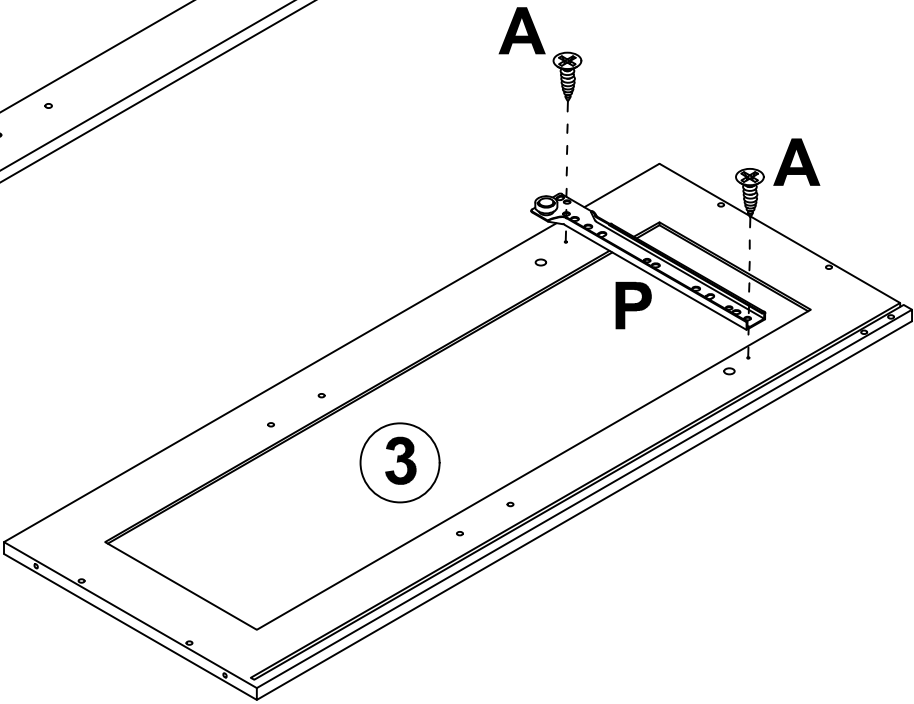
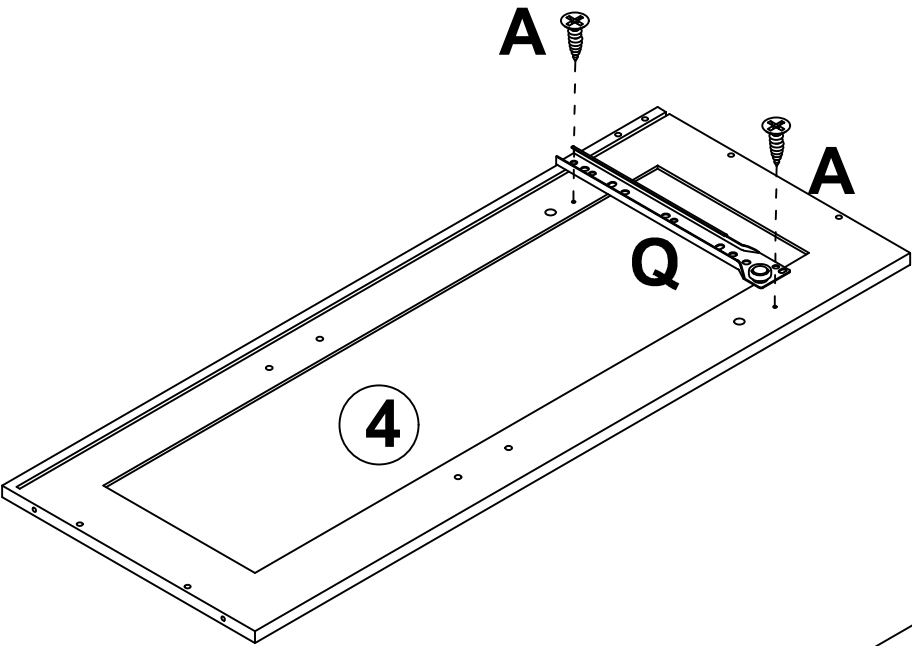
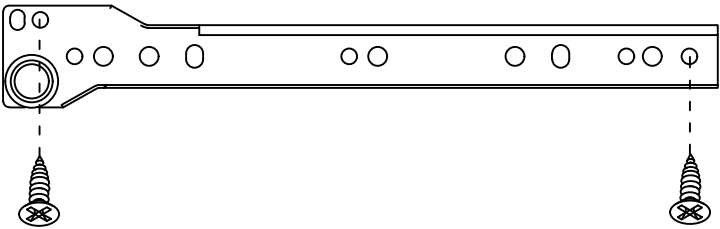
Letter (number)	Part	Design	Quantity
I	Pull		X3
J	Rotating Shaft		X4
K	Anti Detachment Parts		X1
L	Magnet		X2
M	Metal Pin		X4
N	Leveling feet		X4
O	Fixed Components		X1
P	CABINET RAIL-L	CL 	X1

Component

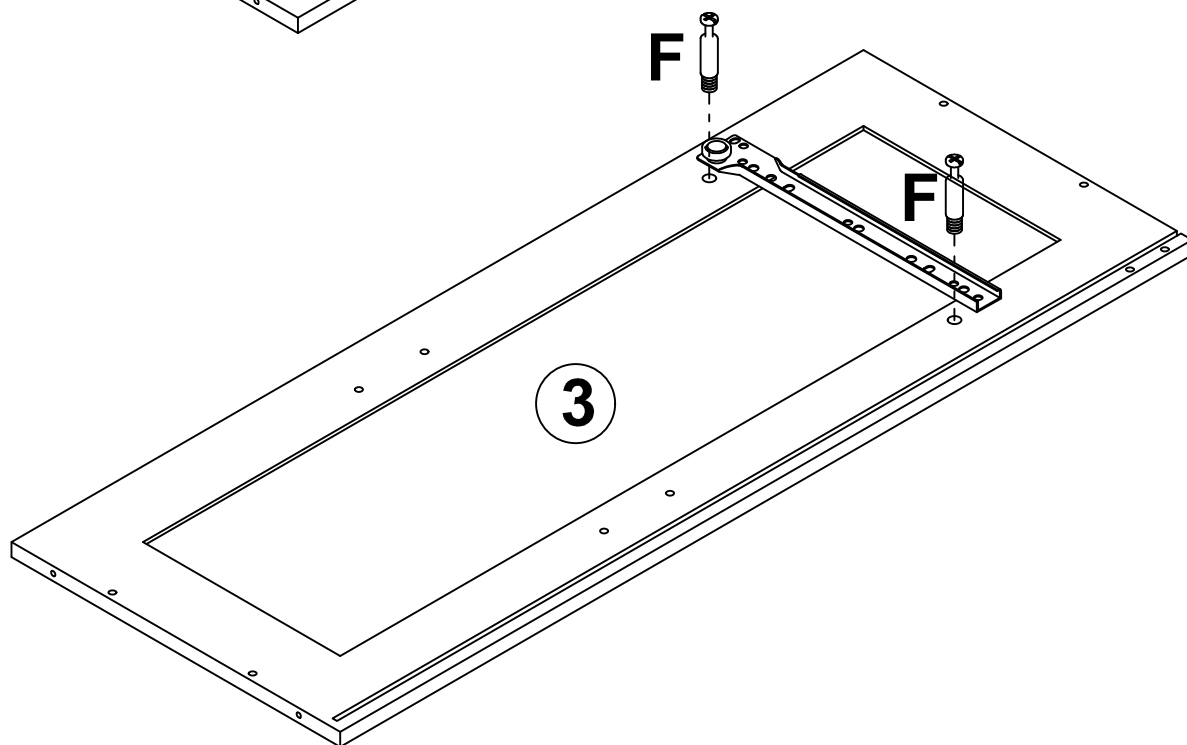
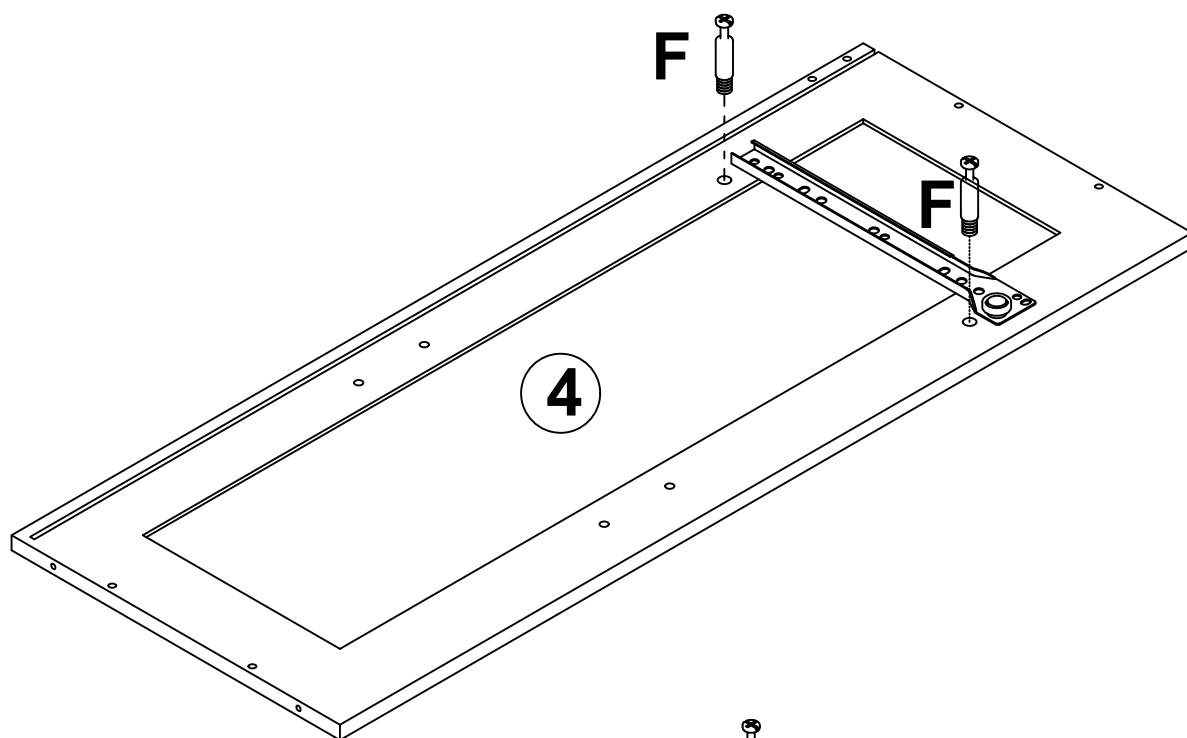
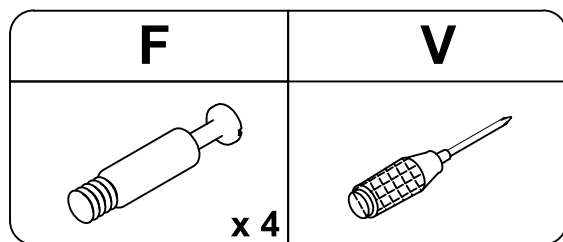
Letter (number)	Part	Design	Quantity
Q	CABINET RAIL-R	CR 	X1
R	DRAWER SLIDE -L	DL 	X1
S	DRAWER SLIDE -R	DR 	X1
T	S4 Allen Wrench (for tightening screws)		X1
U	S3 Allen Wrench (for tightening screws)		X1
V	Bolt Driver		X1
W	Iron Sheet		X2
X	Backboard Buckle		X16

Step 1

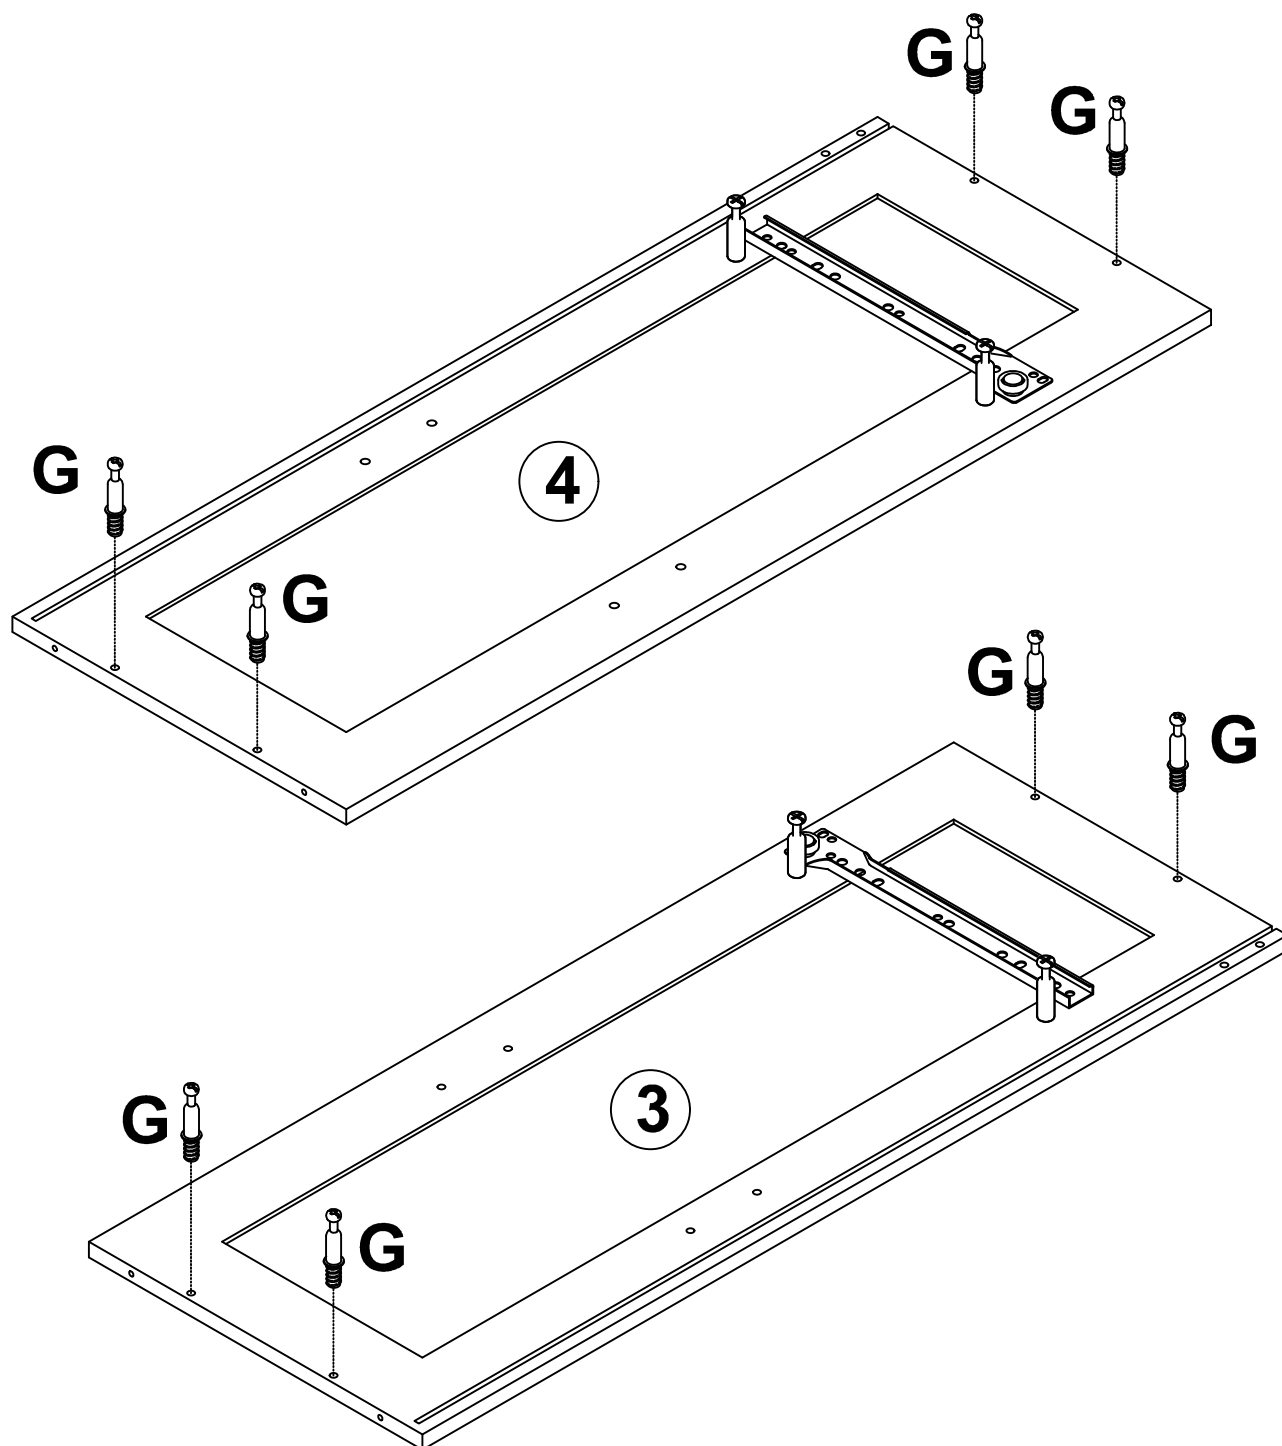
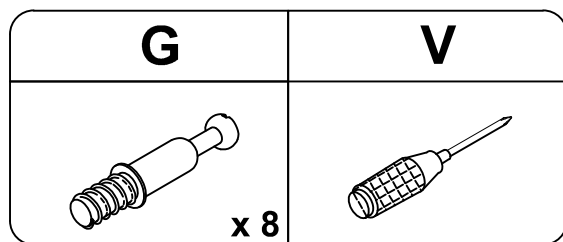
③	④	A	P	Q
 x 1	 x 1	 x 4	 x 1	 x 1
V				
				



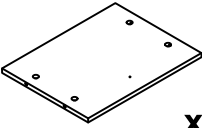

Step 2

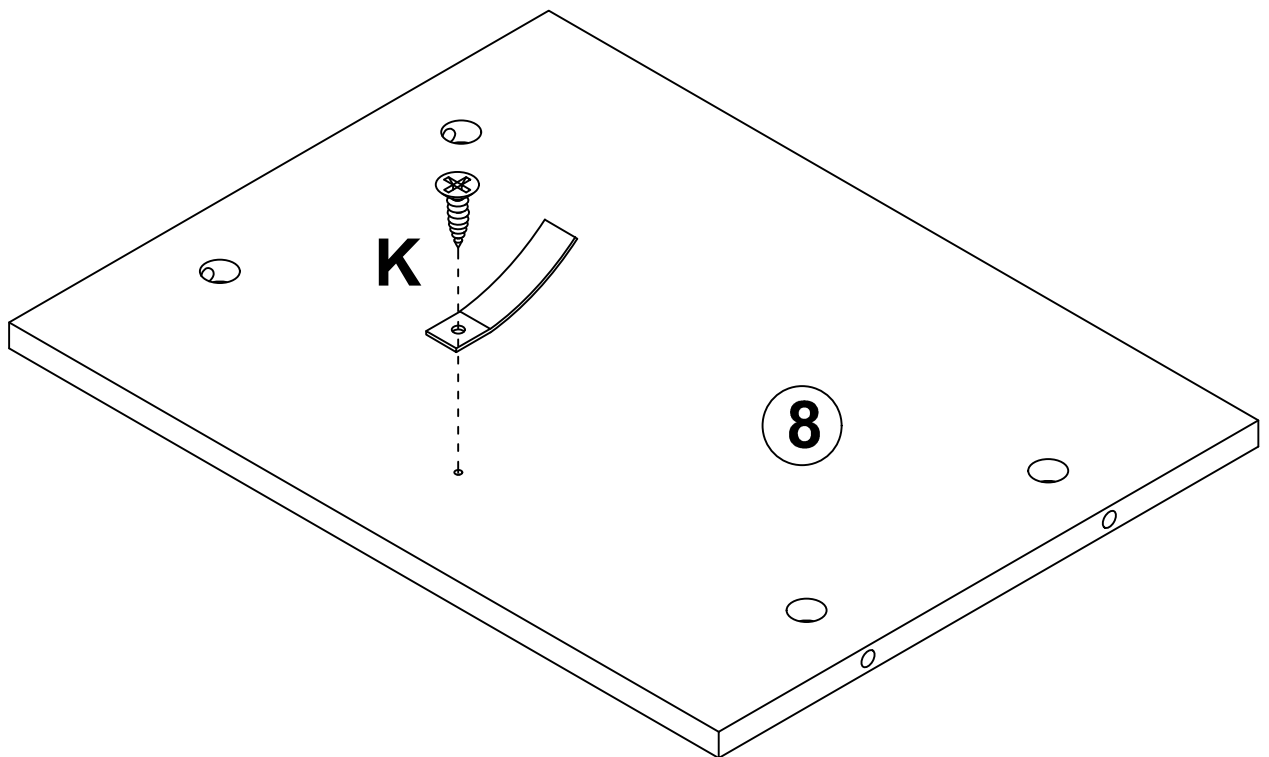


Step 3



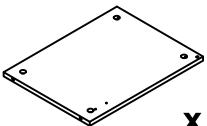

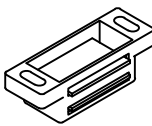

Step 4

⑧	K	V
 x 1	 x 1	

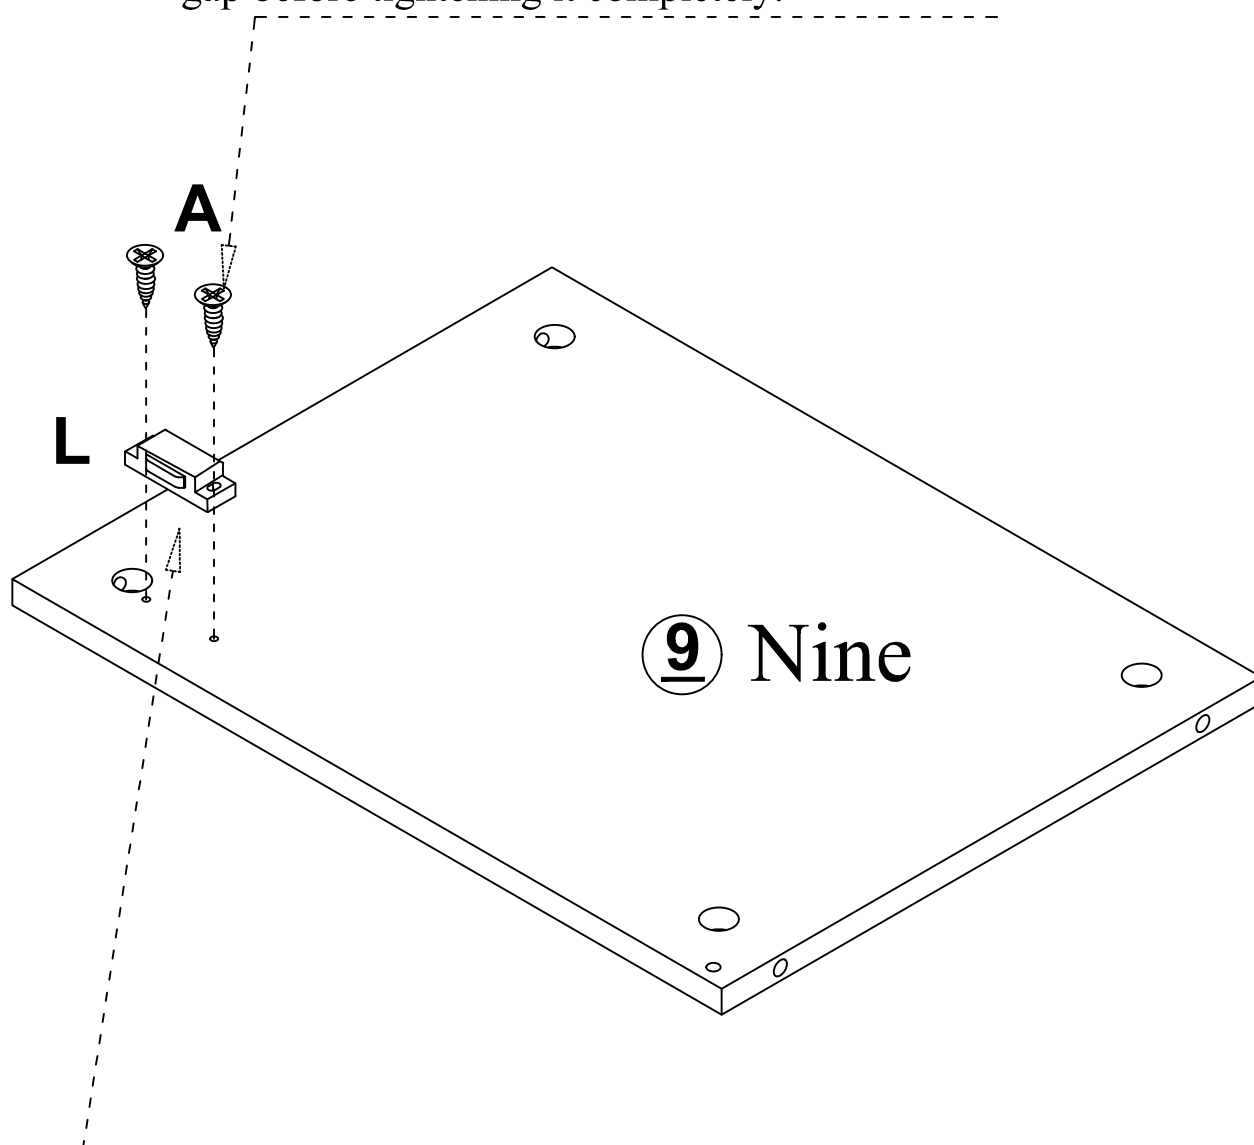


Note: Install accessory ⑧ with the warped edge facing up.

Step 5

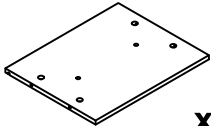
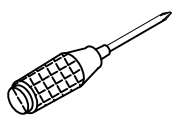
⑨	A	L	V
 x 1	 x 2	 x 1	

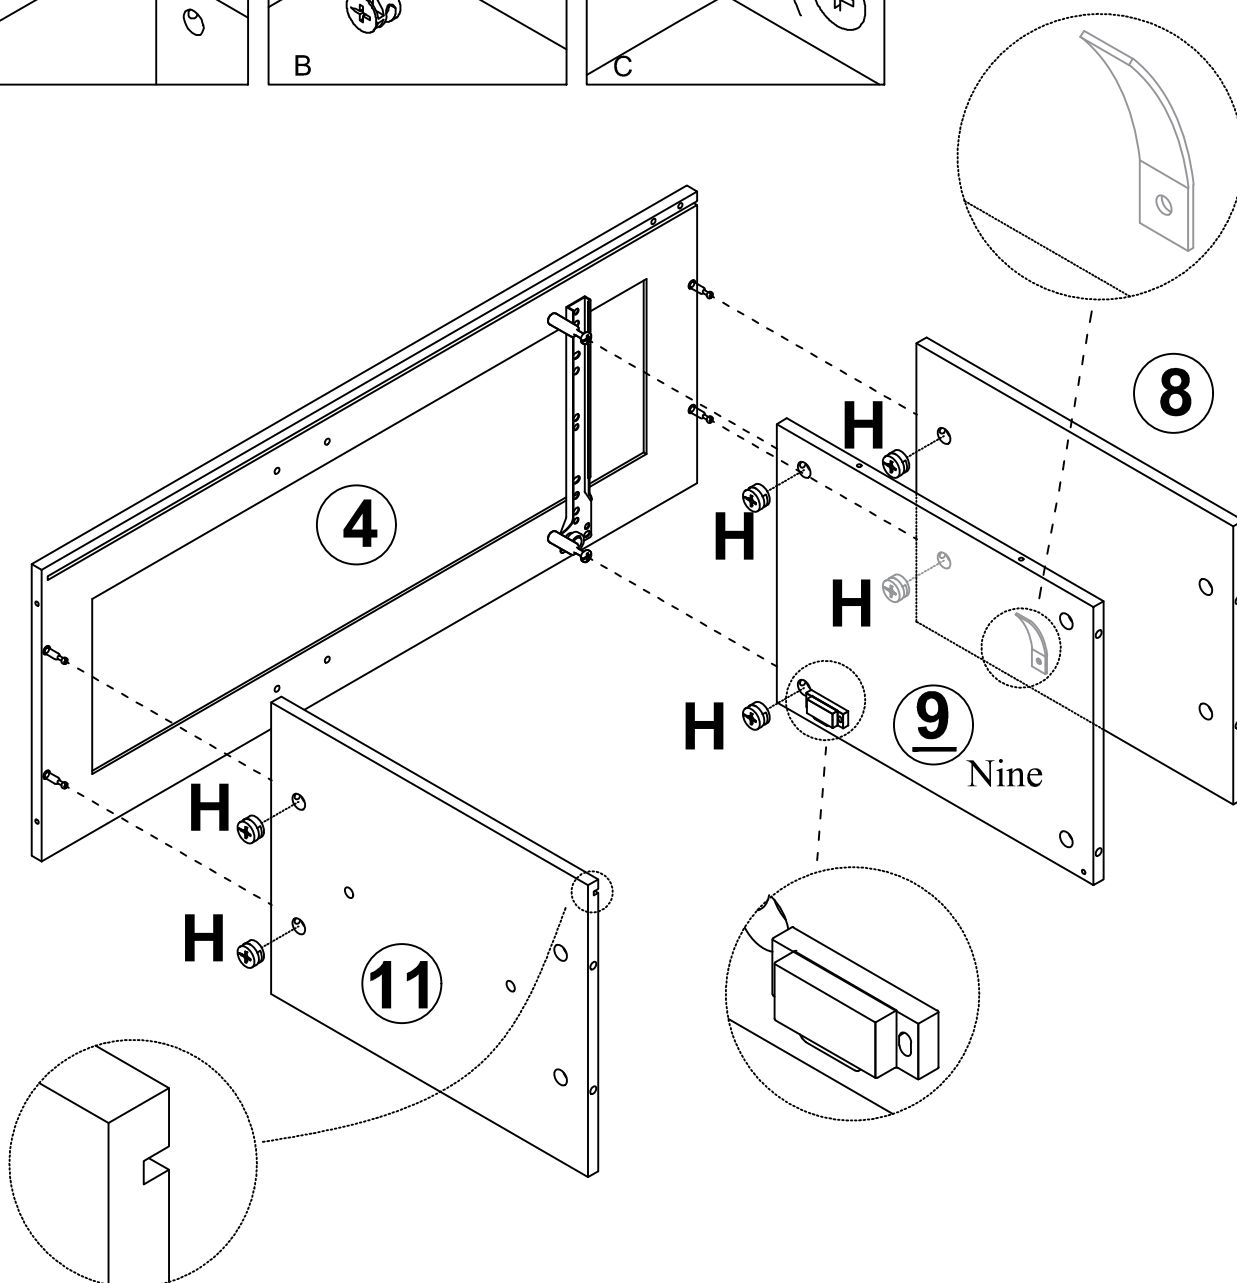
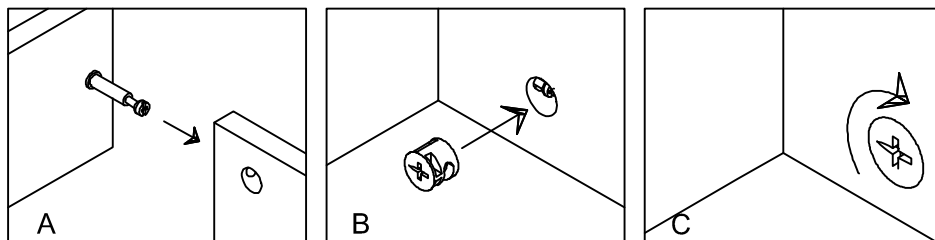
Please note that Screw A should not be fully tightened at this stage. Wait until Step 22 when installing the cabinet door, and adjust the gap before tightening it completely.



Note: The magnetic end of the iron piece should face outward.

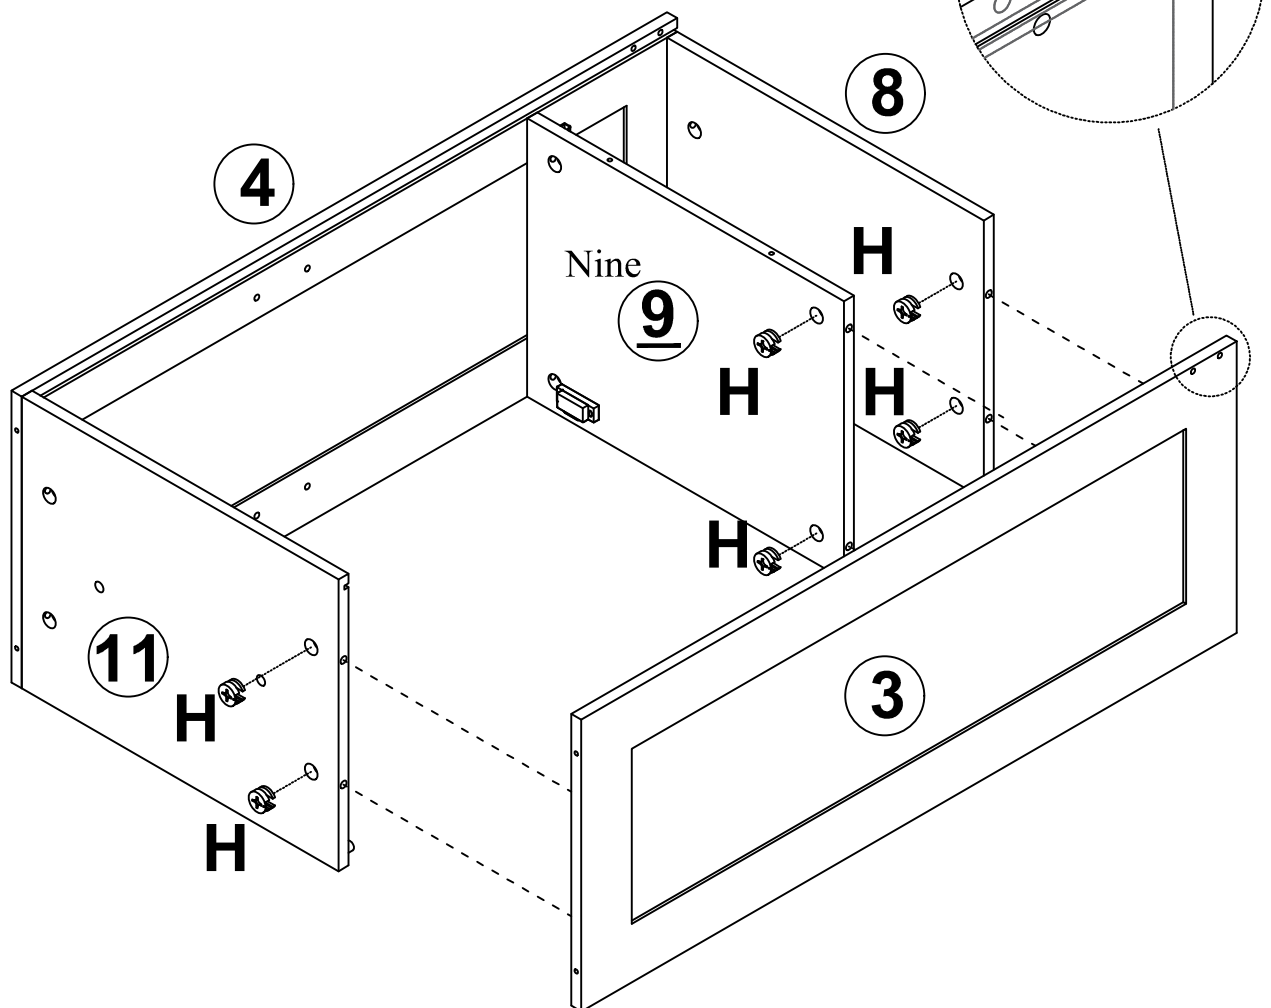
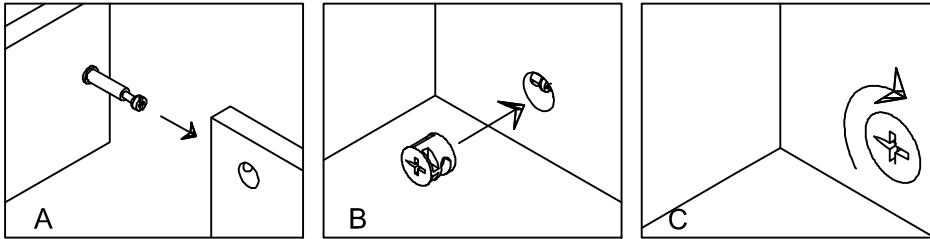
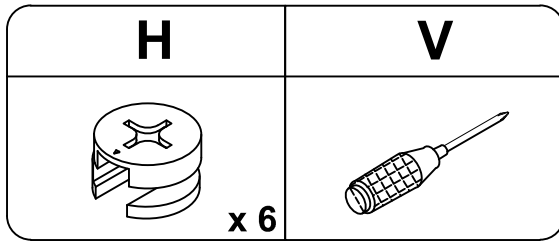
Step 6

11	H	V
 x 1	 x 6	







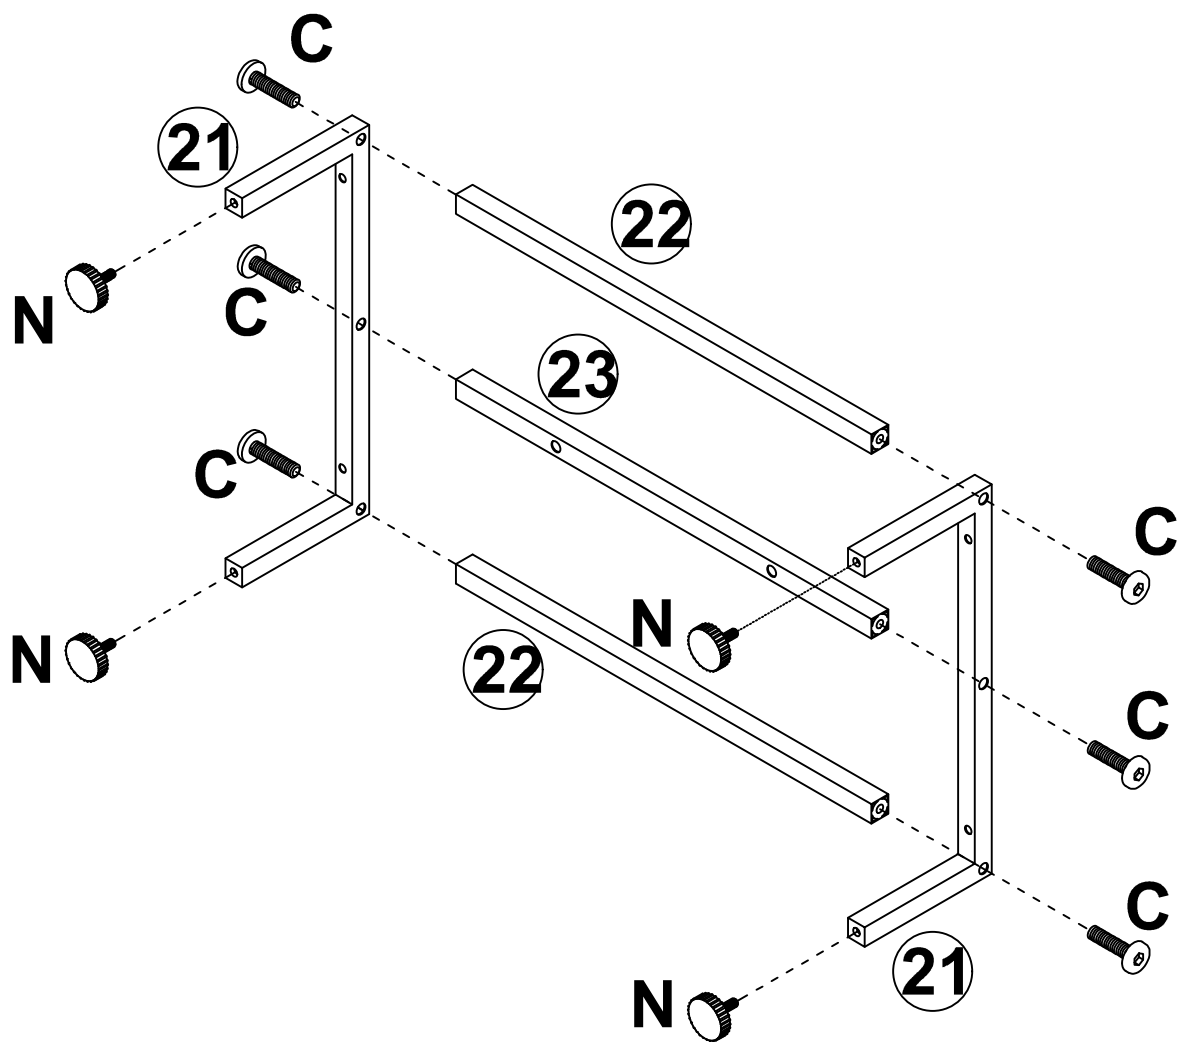
Note: The slot of Panel# 11 should face Panel #⑨.

Step 7





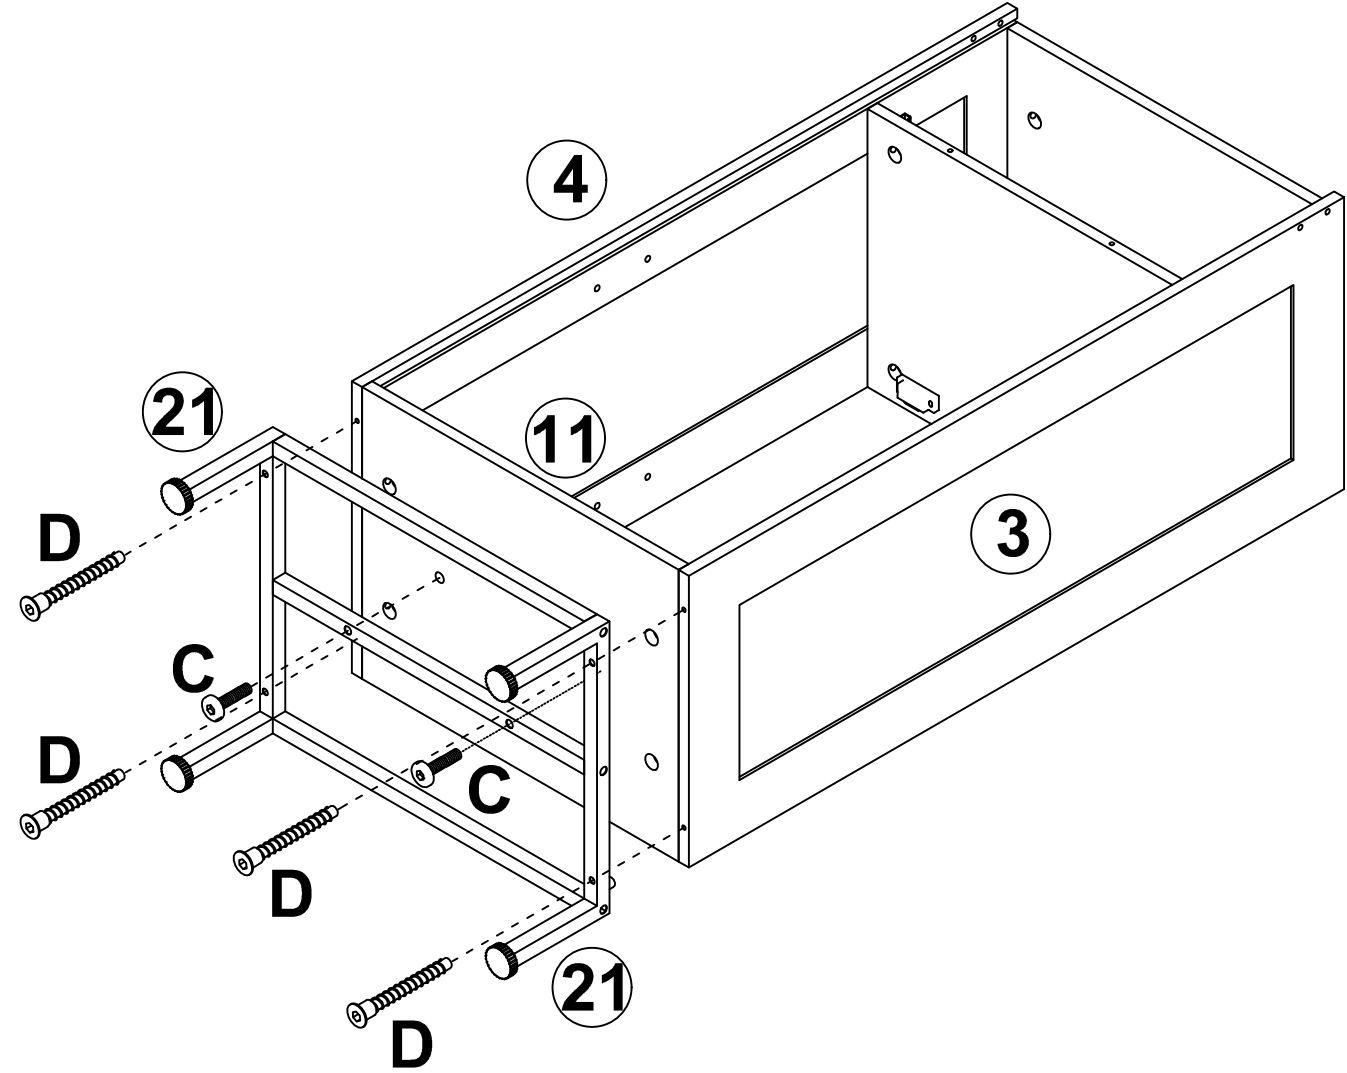
Step 8

21	22	23	C	N
 x 2	 x 2	 x 1	 x 6	 x 4
T				
				

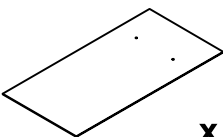



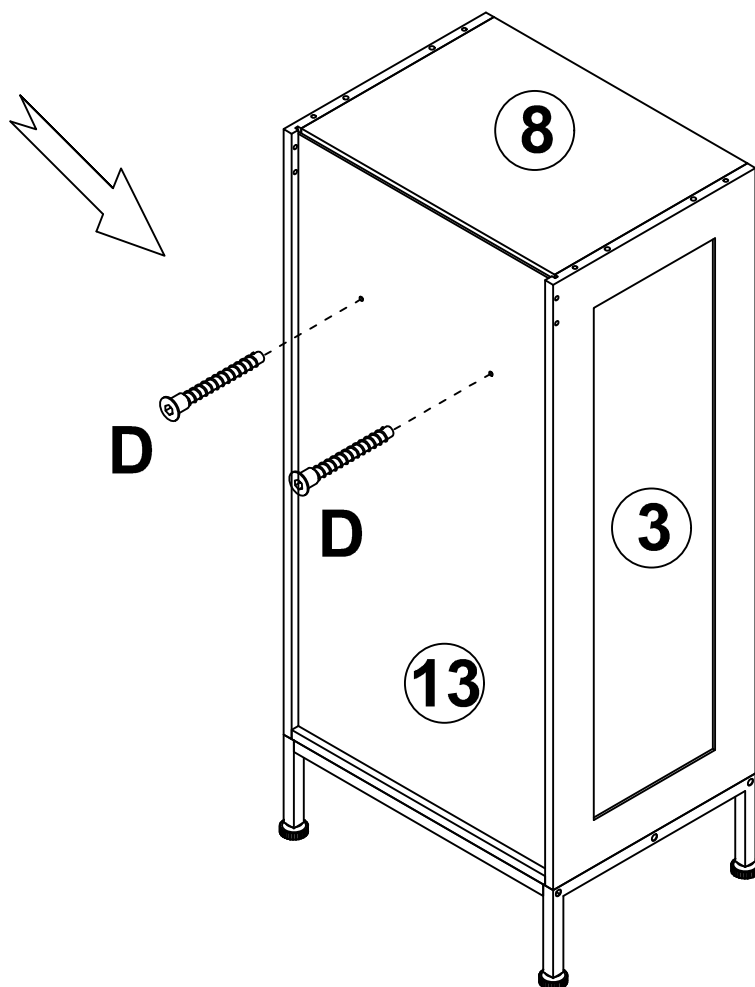
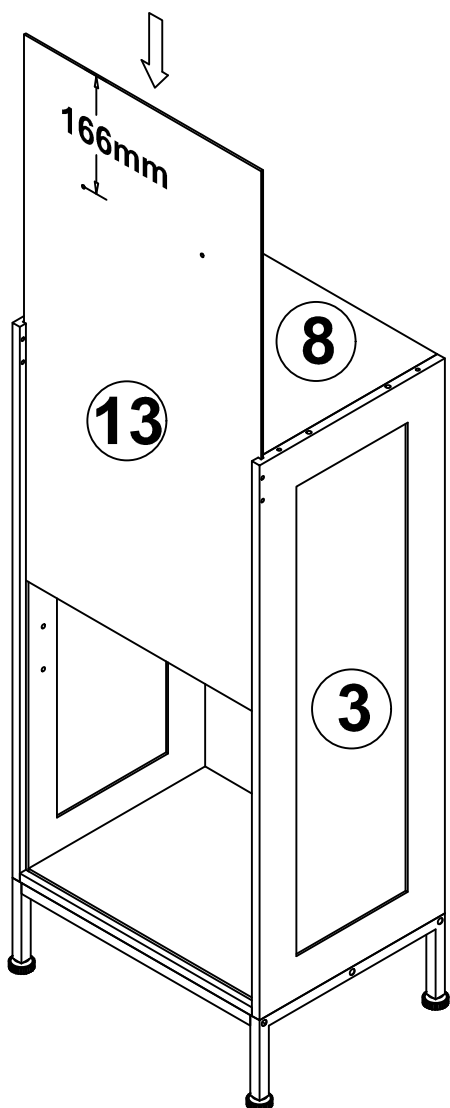
Step 9

C	D	T	U
 x 2	 x 4		

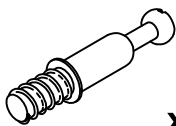



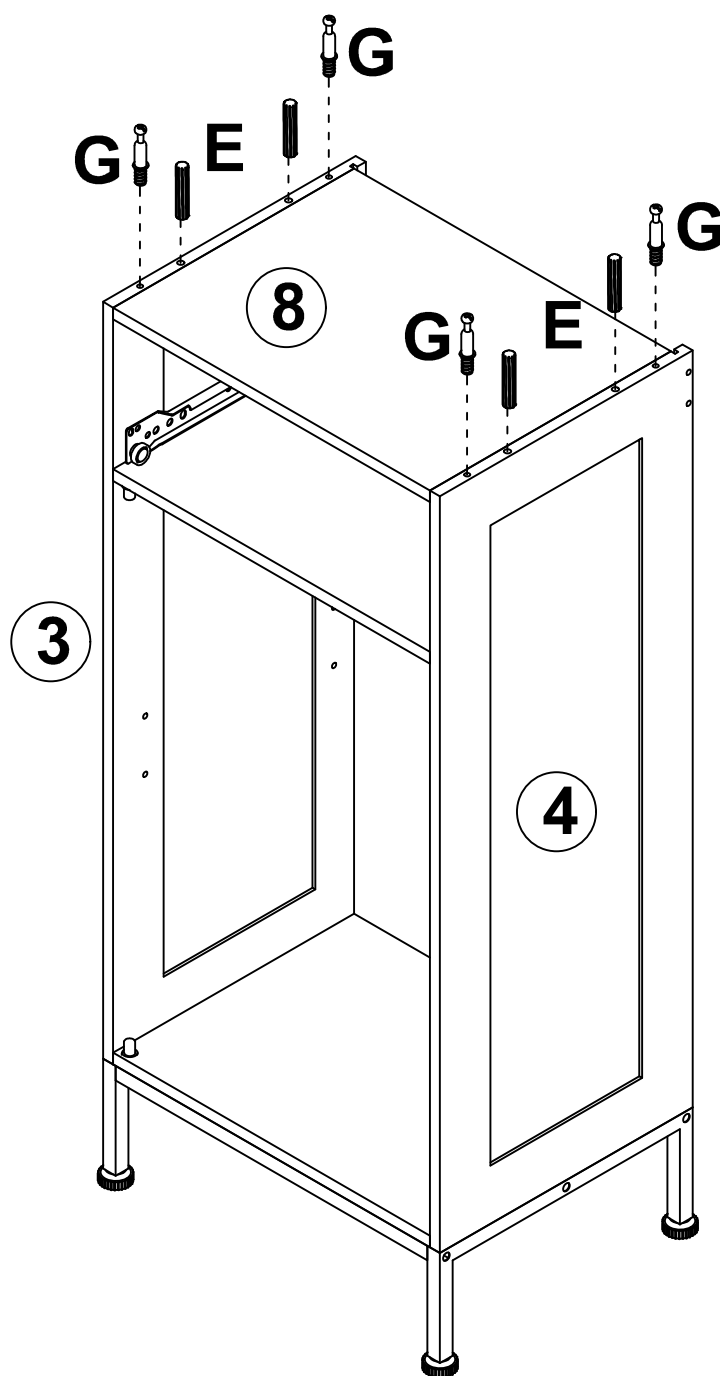
Step 10

13	D	U
 x 1	 x 2	

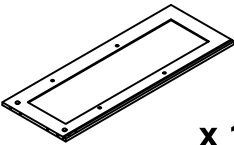
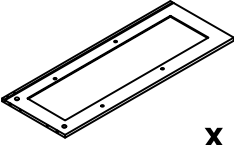
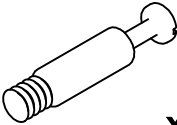



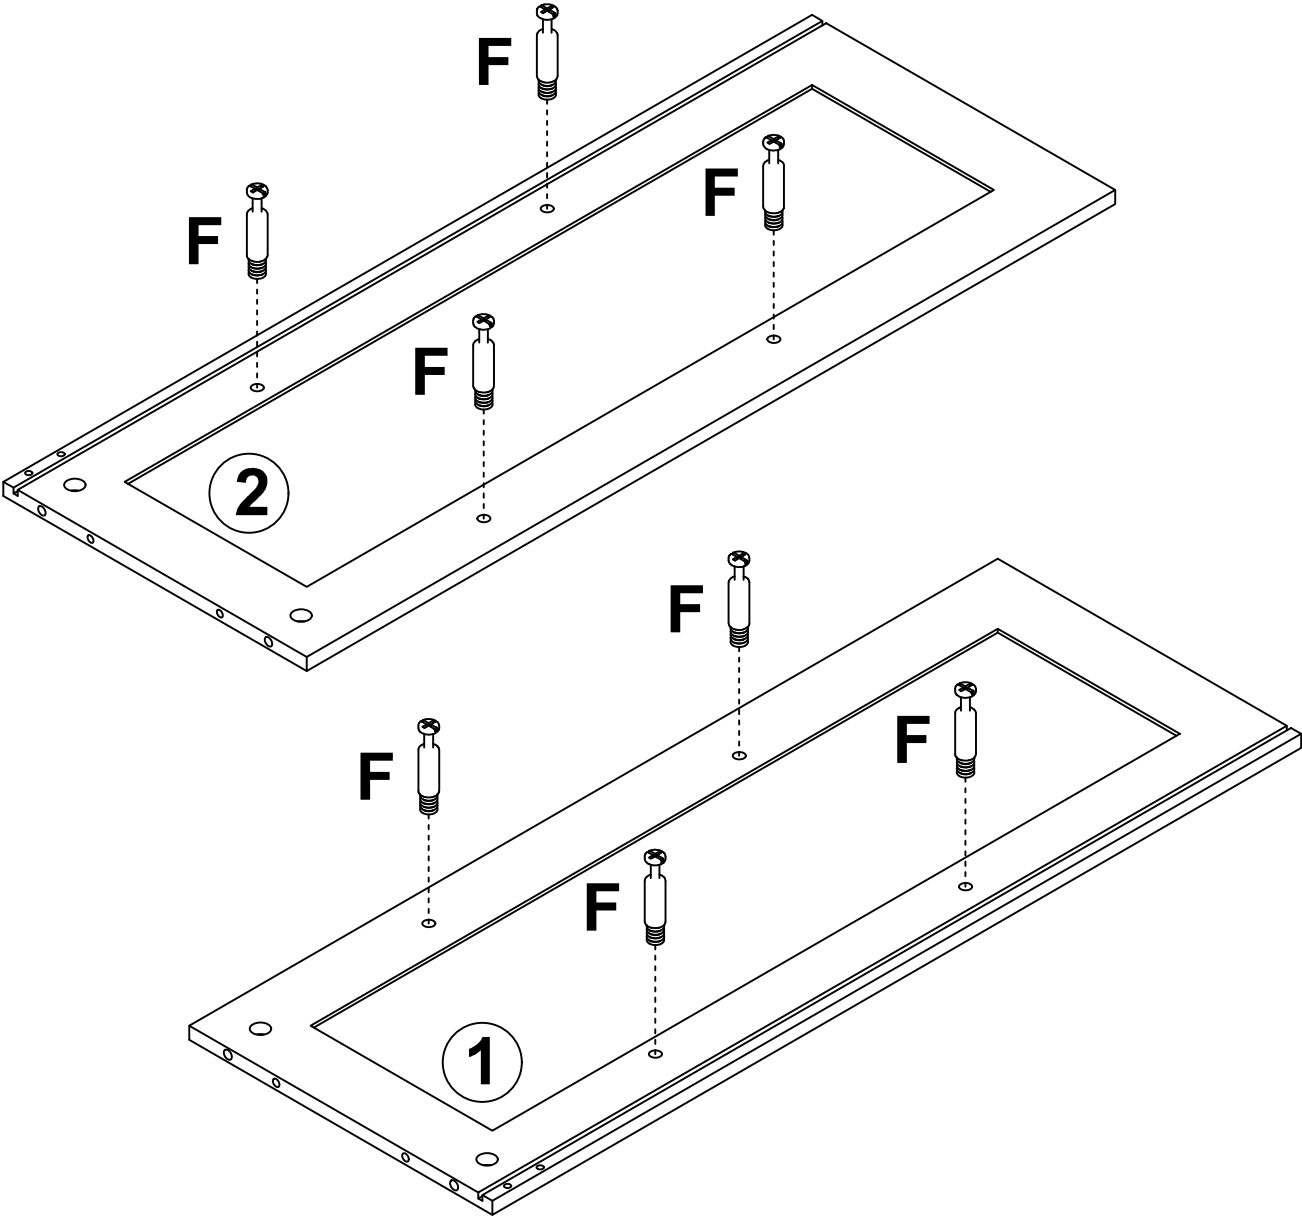
Step 11

G	E	V
 x 4	 x 4	


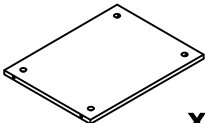



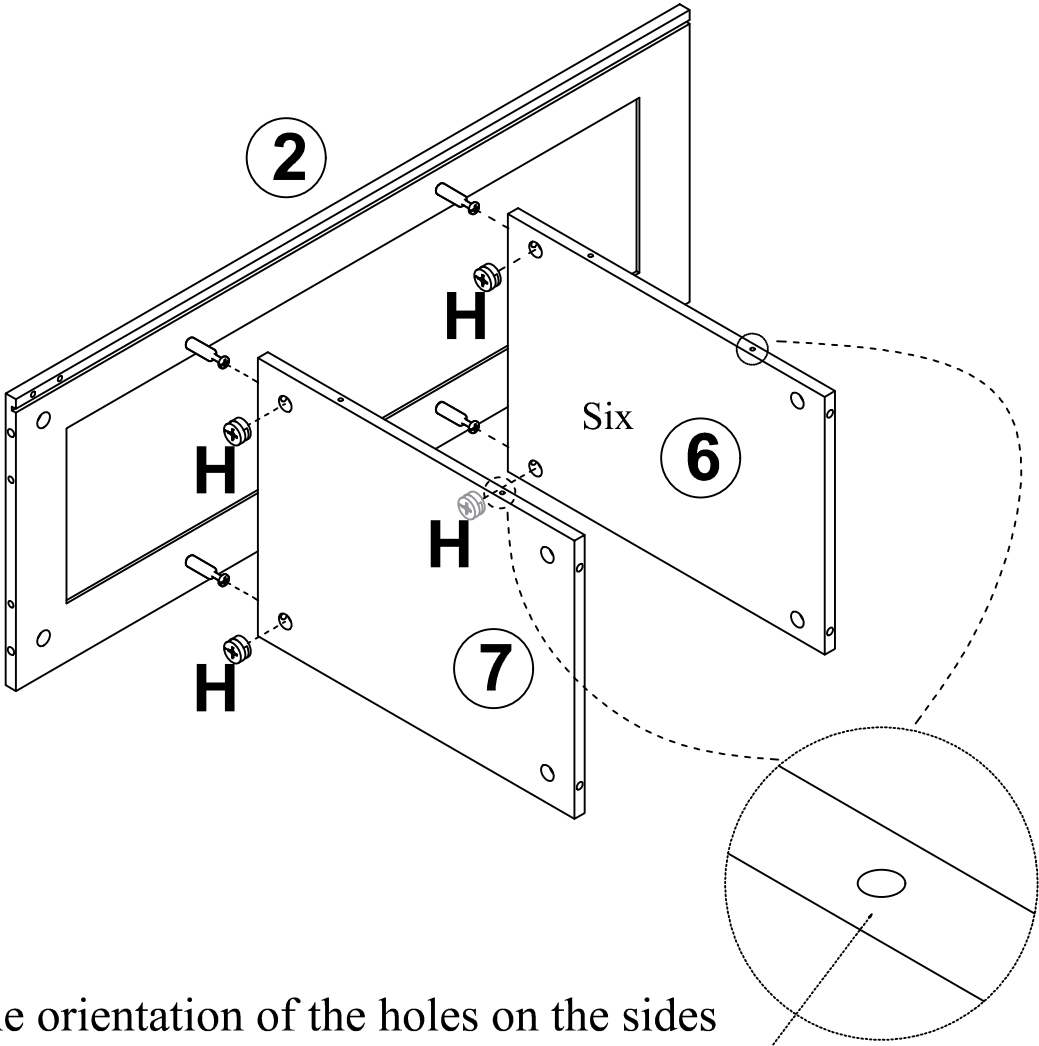
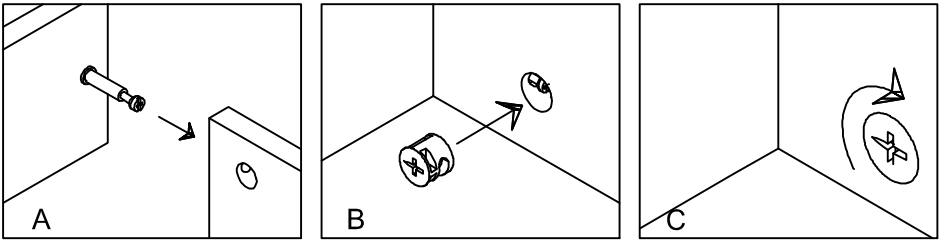
Step 12

①	②	F	V
 x 1	 x 1	 x 8	




Step 13

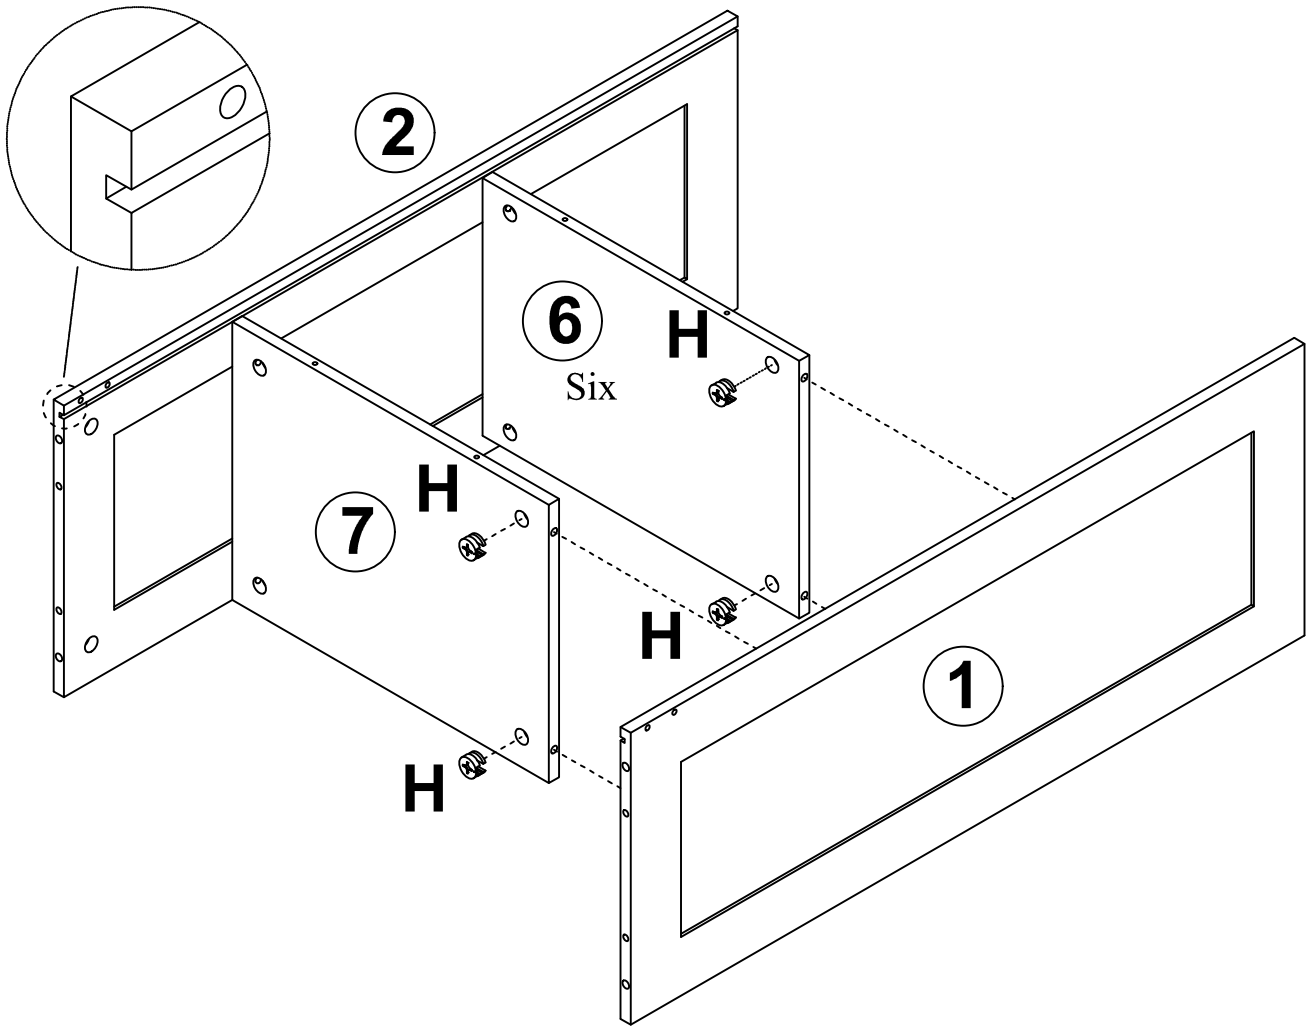
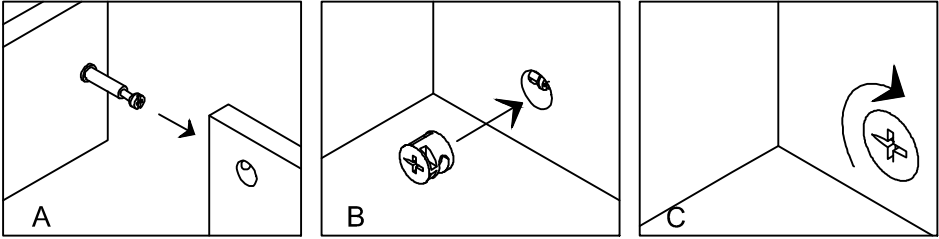
⑥	⑦	H	V
 x 1	 x 1	 x 4	







Please note the orientation of the holes on the sides of Panels #⑥and #⑦to avoid incorrect installation.

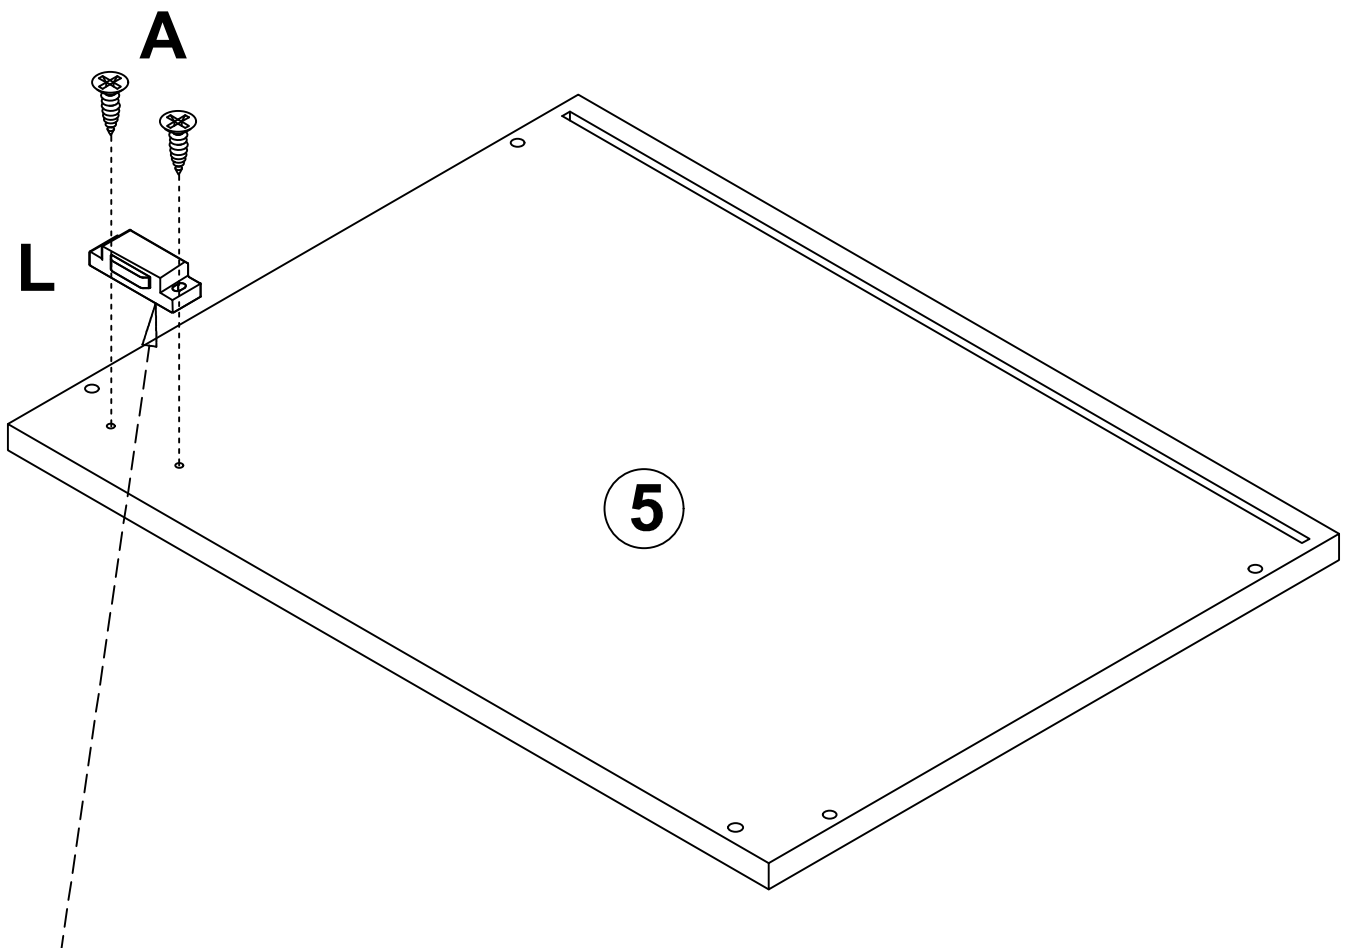
Step 14

H	V
 x 4	




Step 15

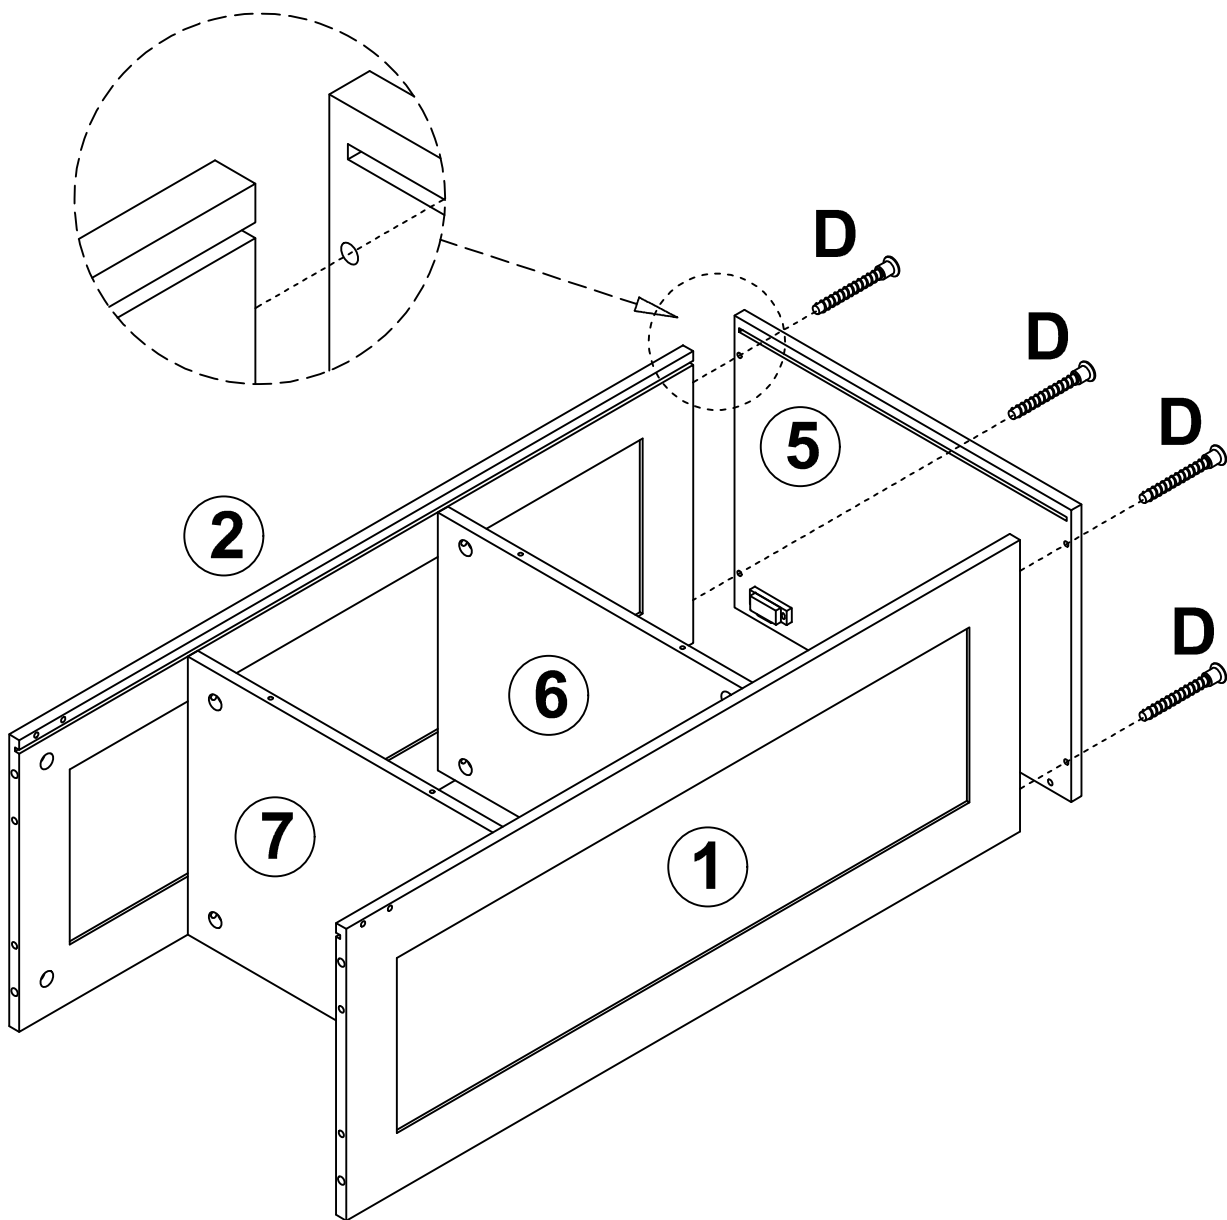
5	A	L	V
 x 1	 x 2	 x 1	



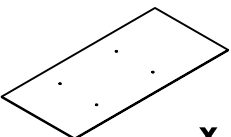
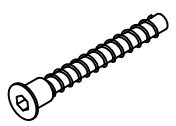
Note: The magnetic end of the iron piece should face outward.

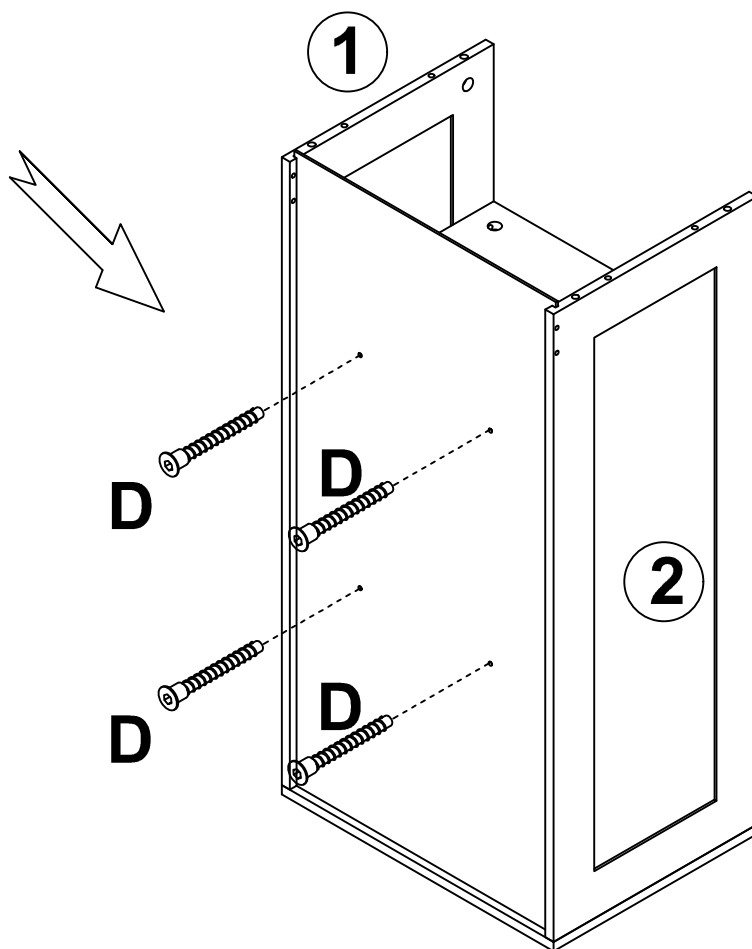
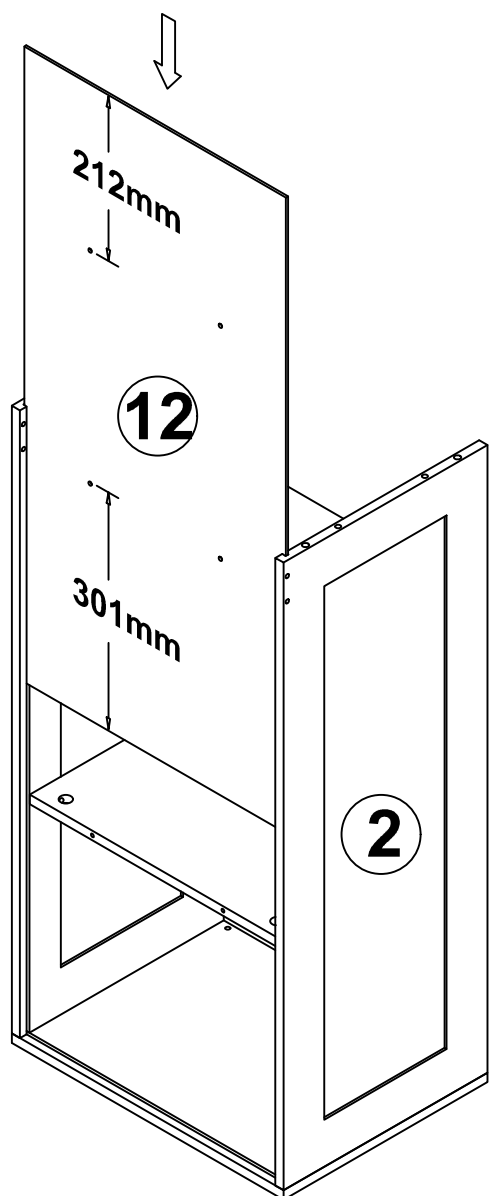
Step 16

D	U
 x 4	

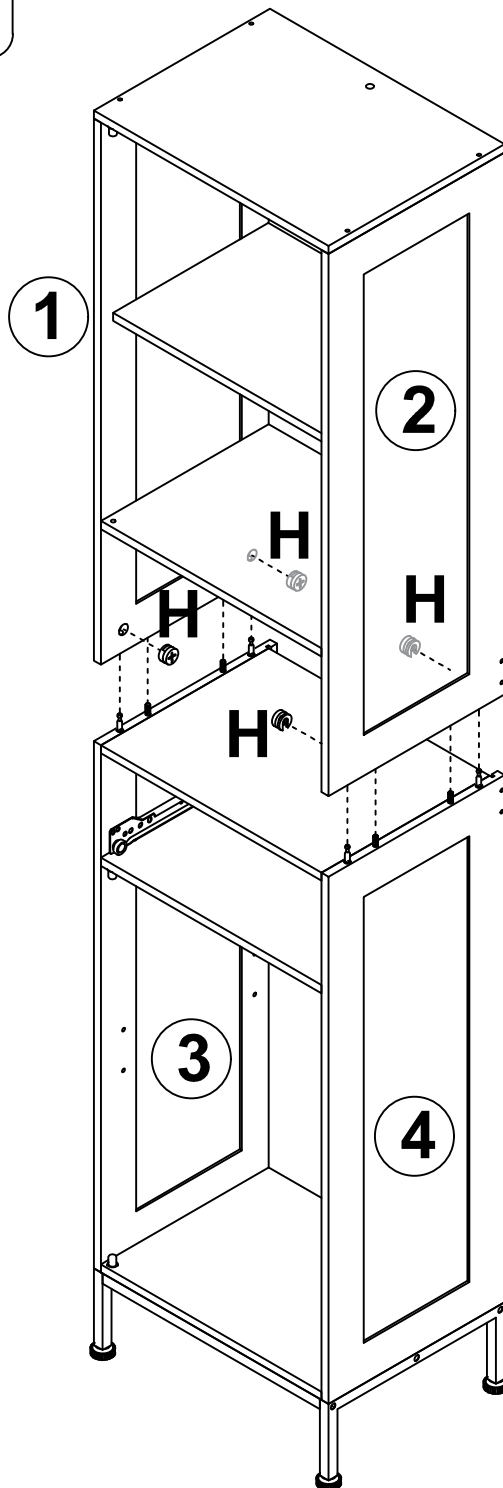
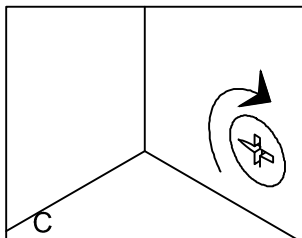
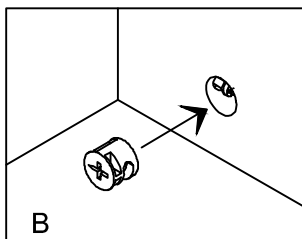
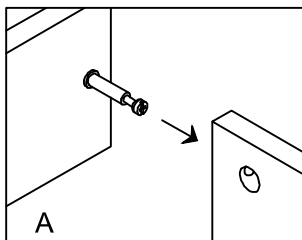
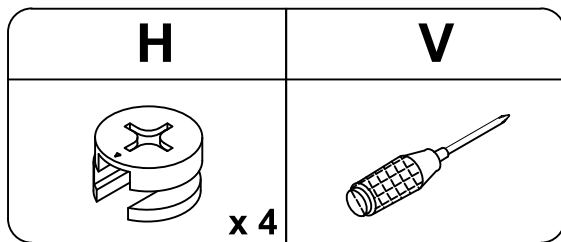


Step 17

12	D	U
 x 1	 x 4	

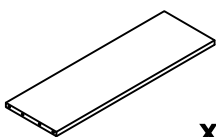





Step 18

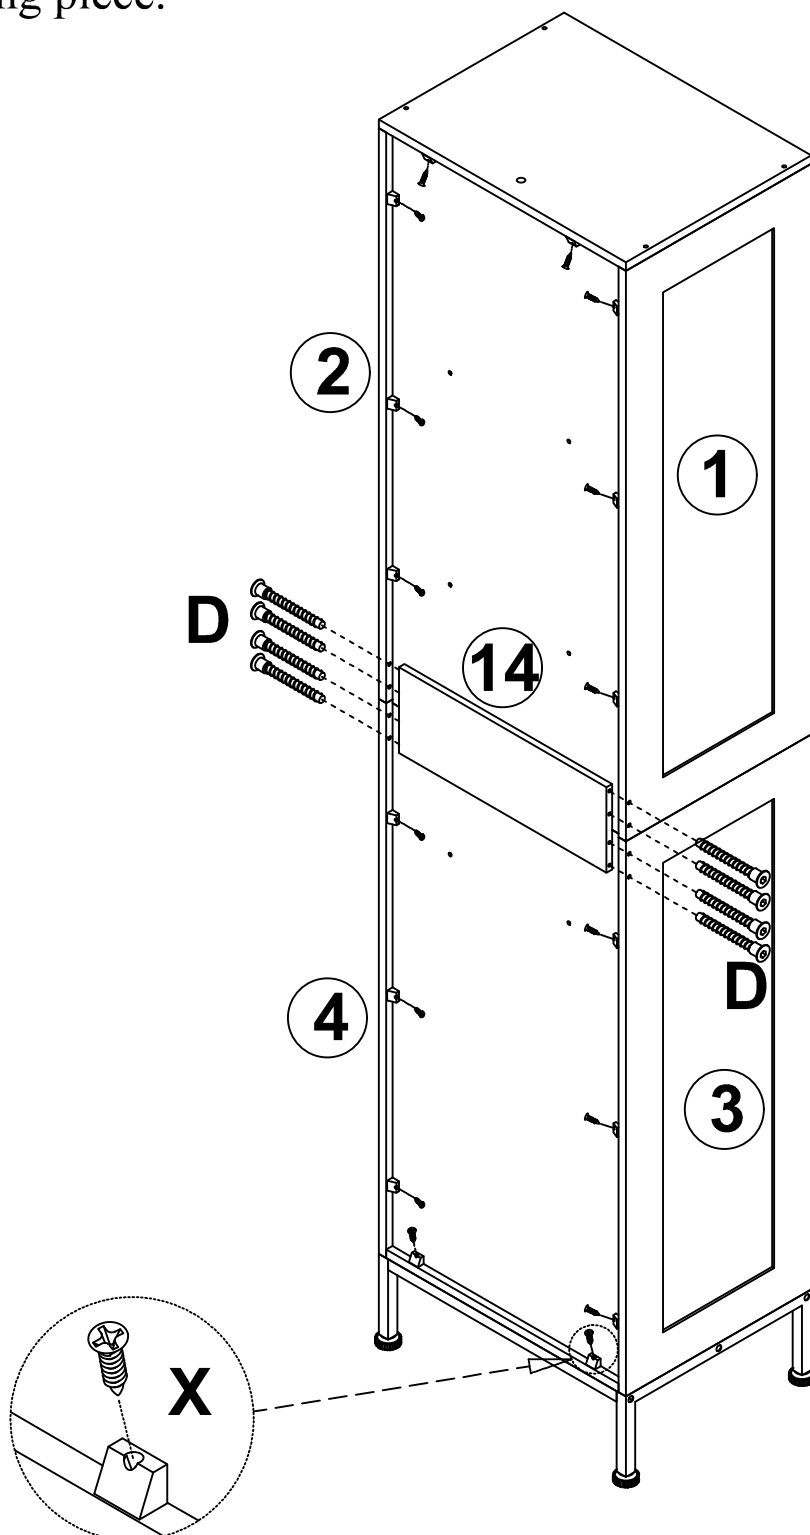


Note: Two persons are required to install the upper and lower cabinet bodies. Avoid over-tightening to prevent damage to the panels.

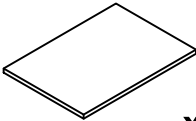

Step 19

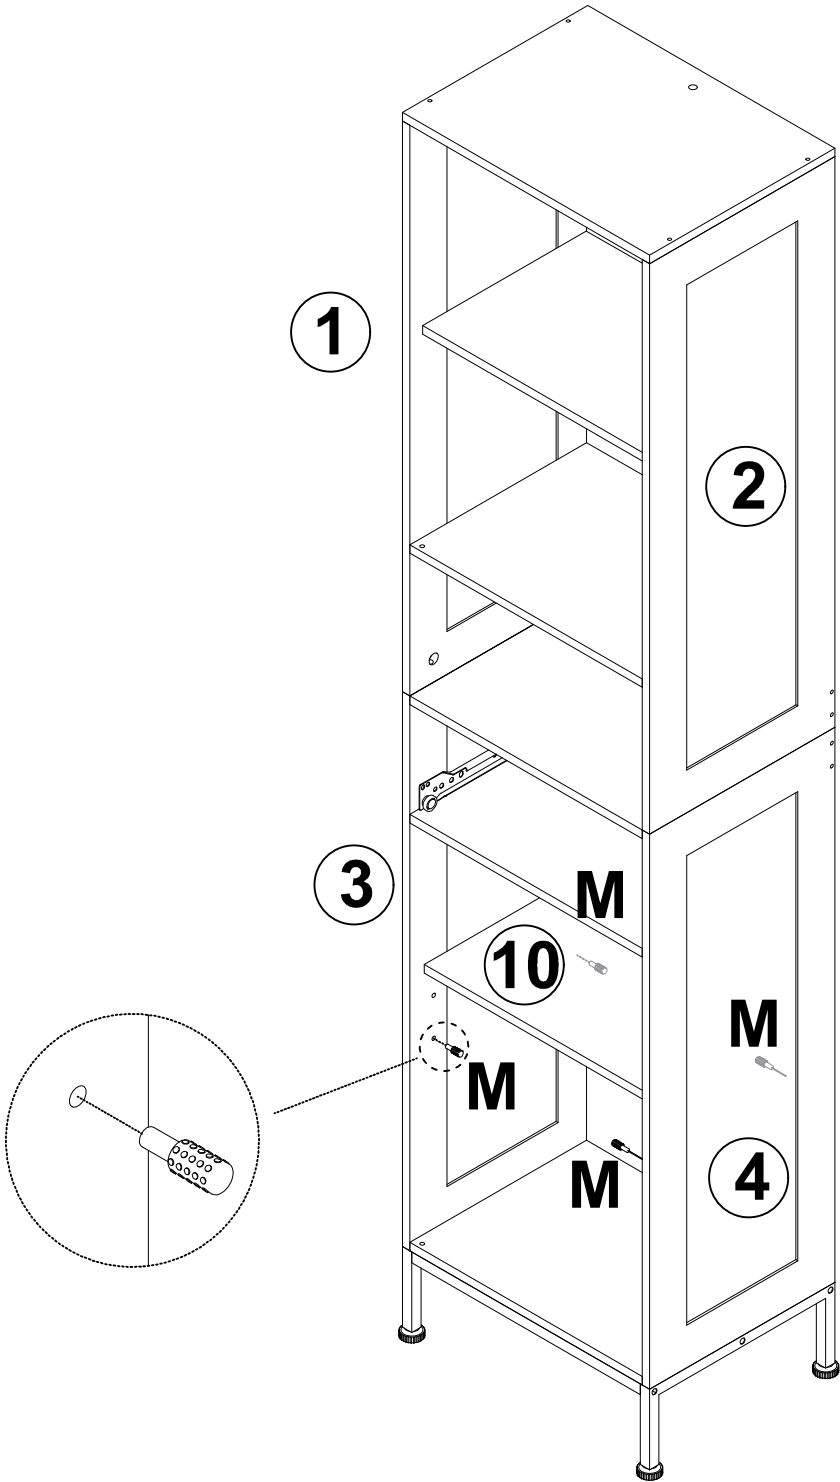
14	D	X	U	V
 x 1	 x 8	 x 16		

Note: Please install the ① screws first, and then install the ② fixing piece.




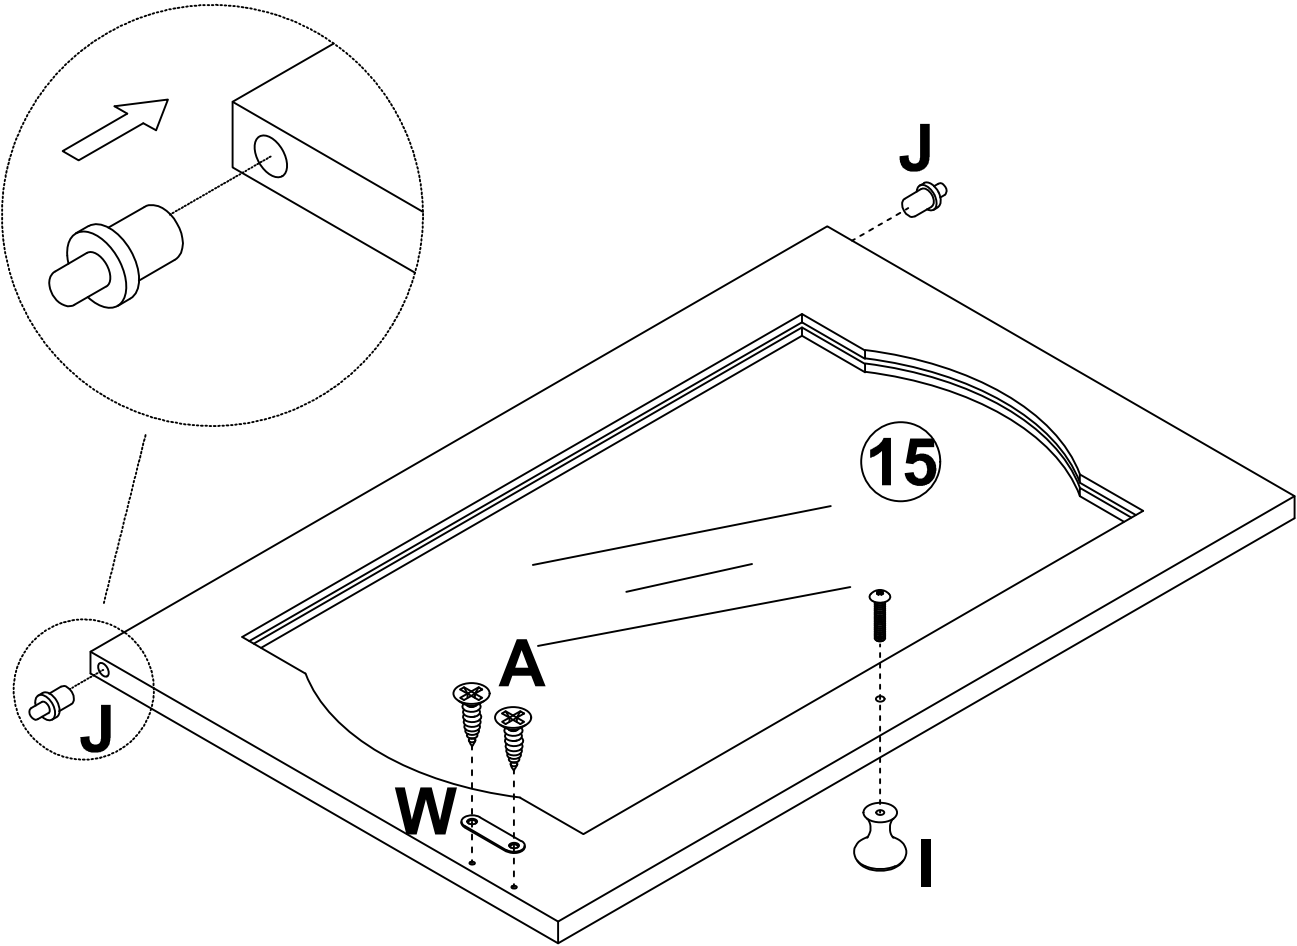
Step 20

10	M
 x 1	 x 4



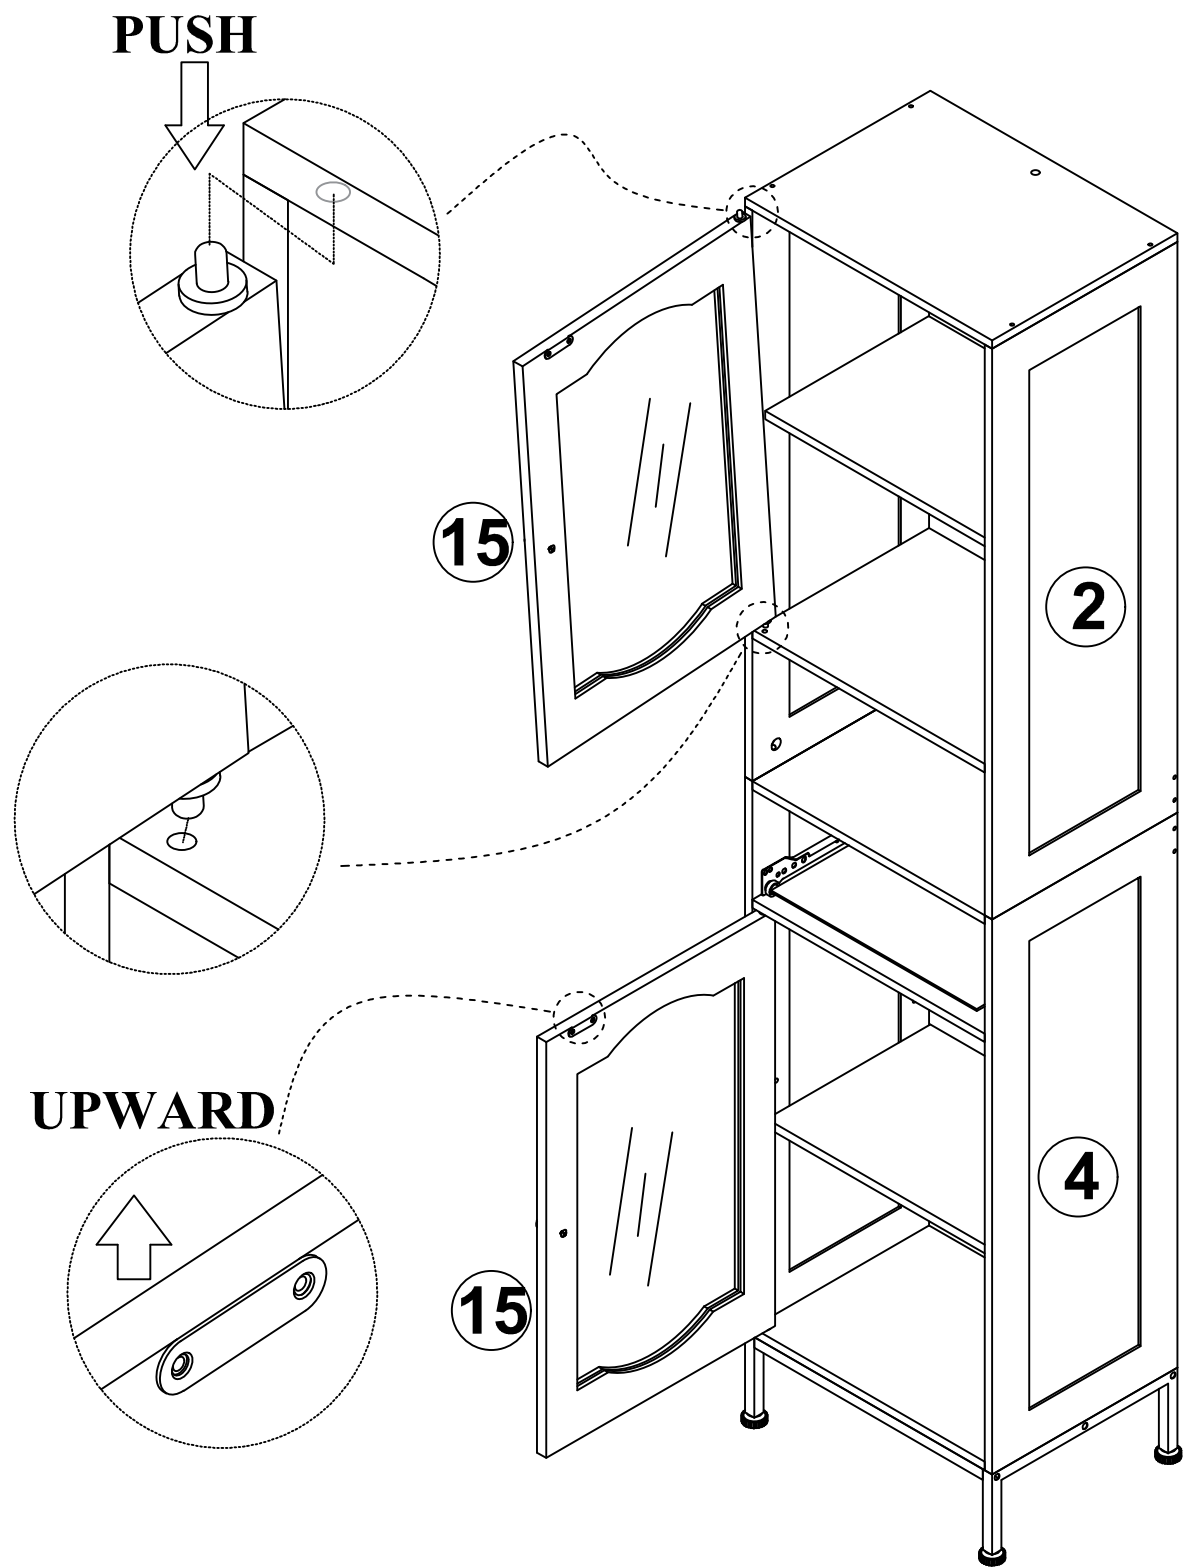
Step 21

15	A	I	W	J
 x 2	 x 4	 x 2	 x 2	 x 4



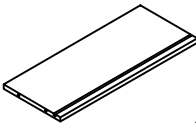



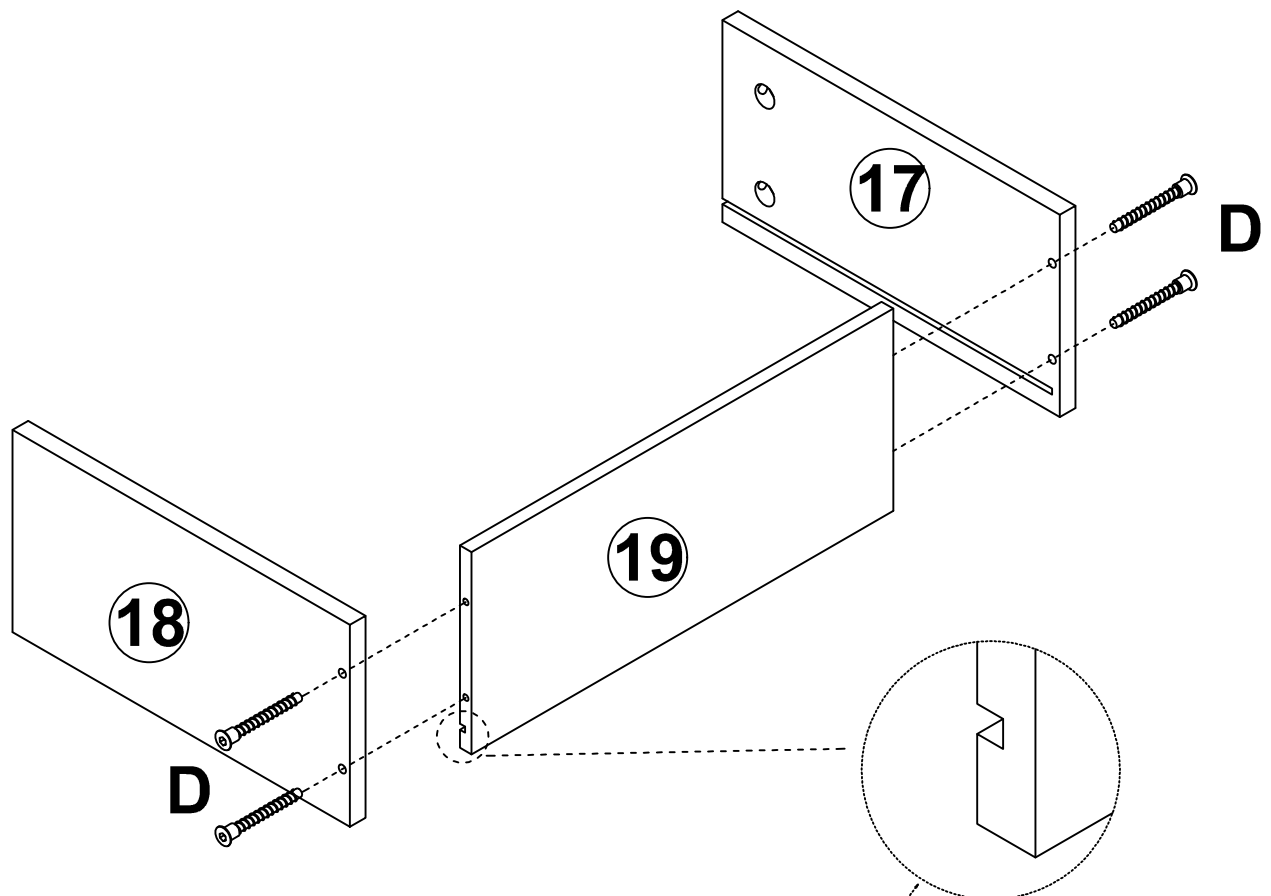
x 2

Step 22



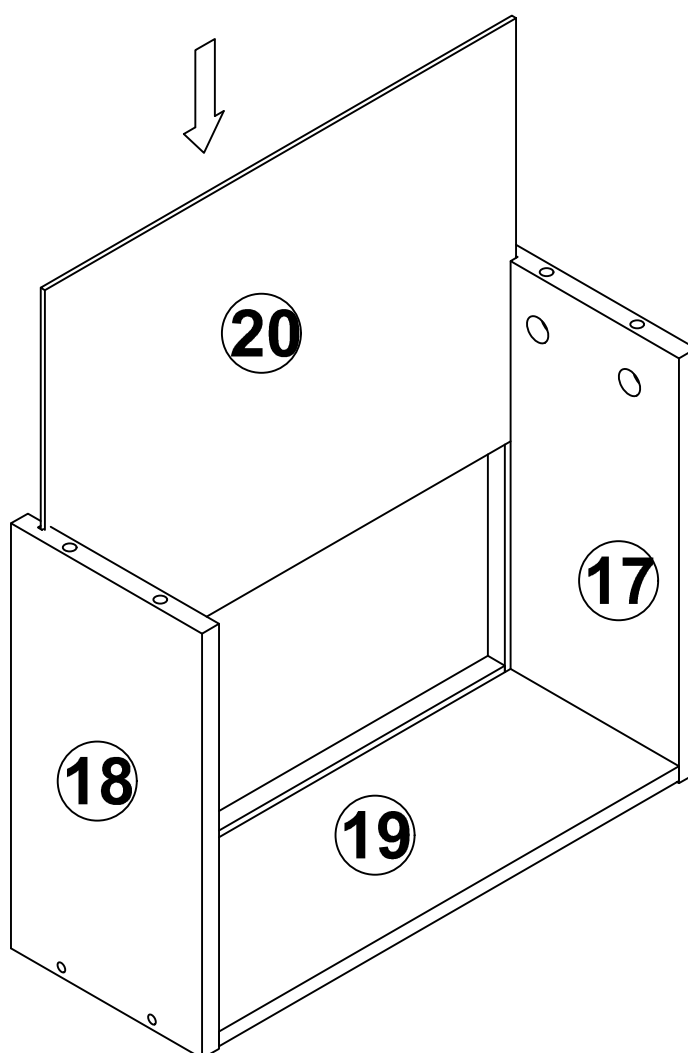
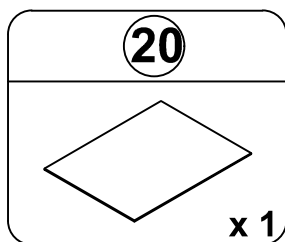
Step 23

17	18	19	D	U
 x 1	 x 1	 x 1	 x 4	

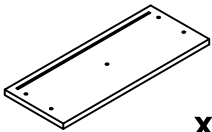
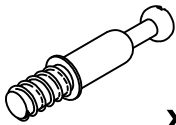



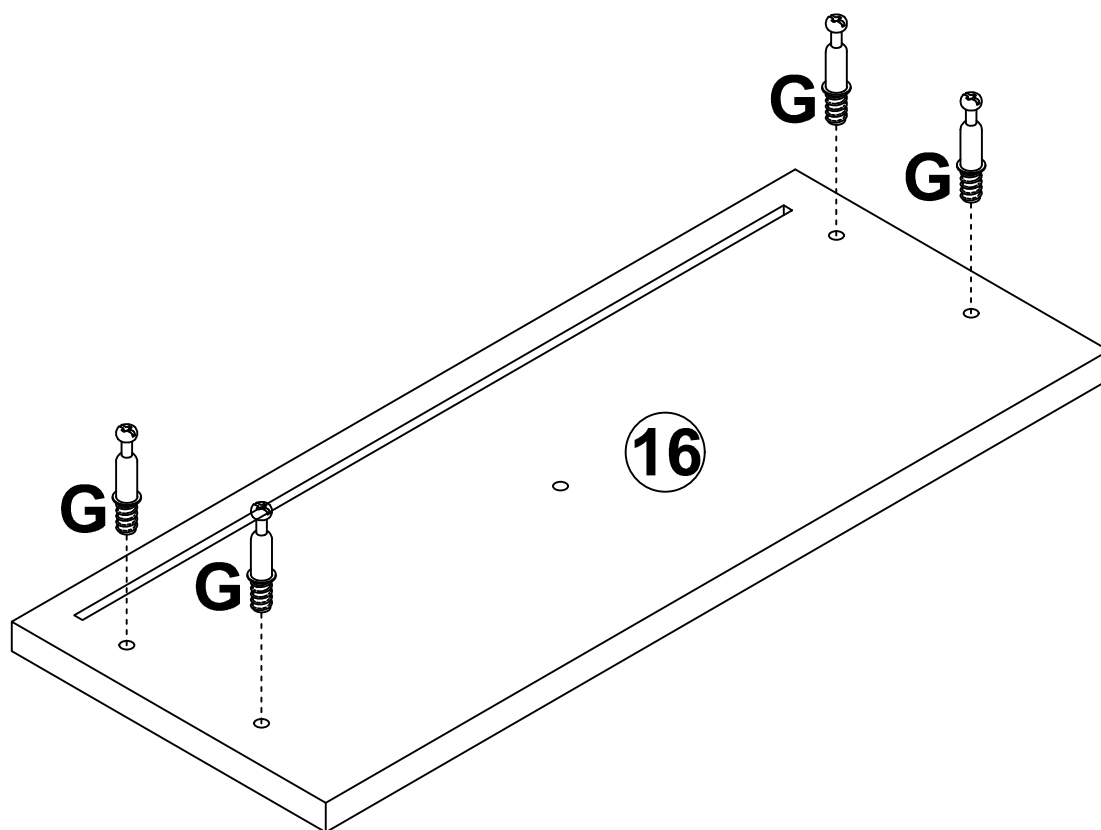
Ensure that the slotted ends of panels 17, 18, and 19 face the same direction.

Step 24

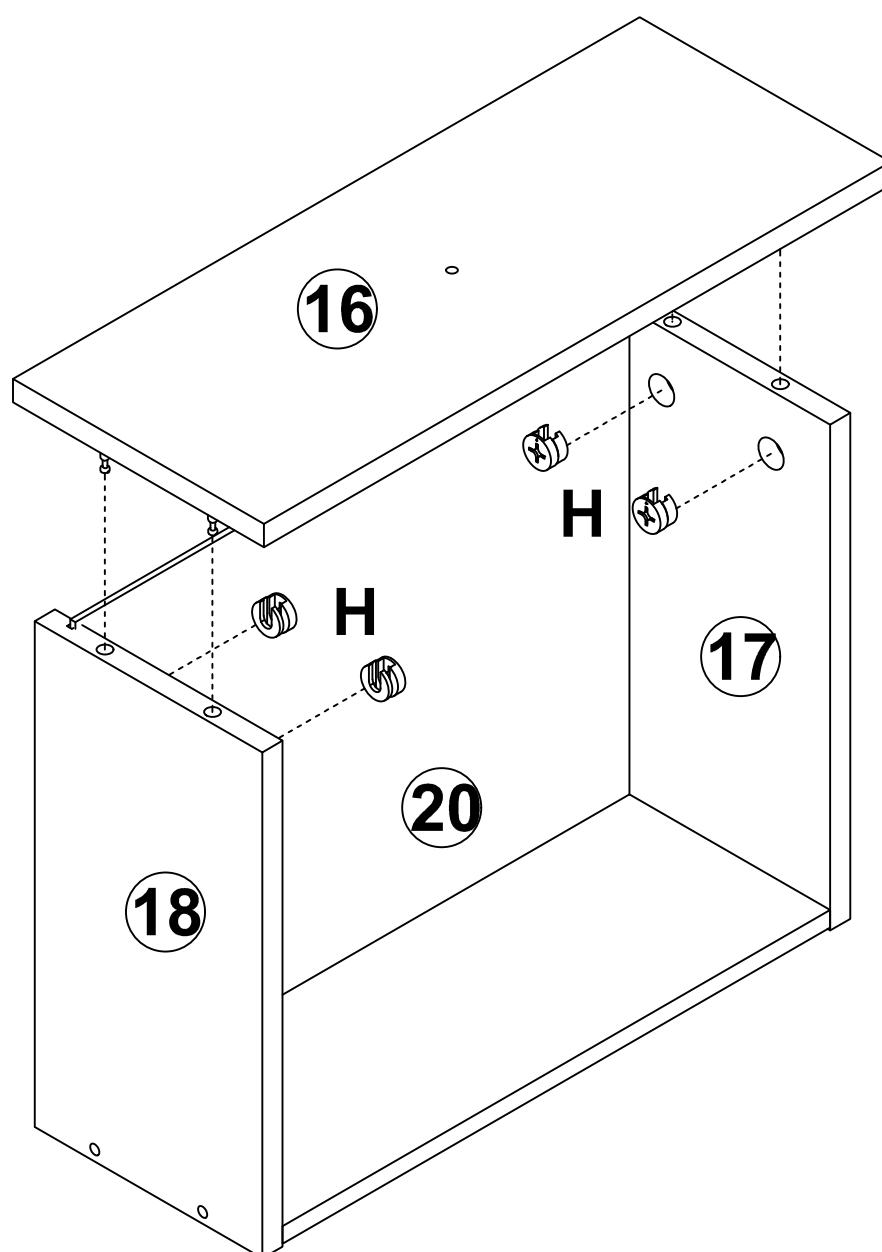
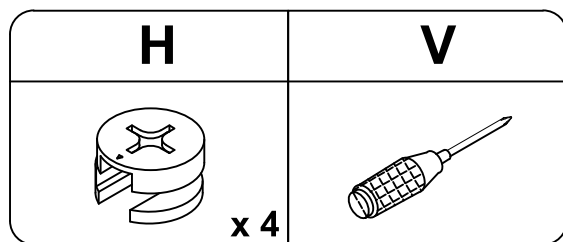


Step 25


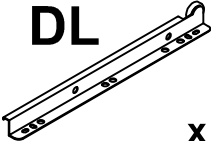

16	G	V
 x 1	 x 4	

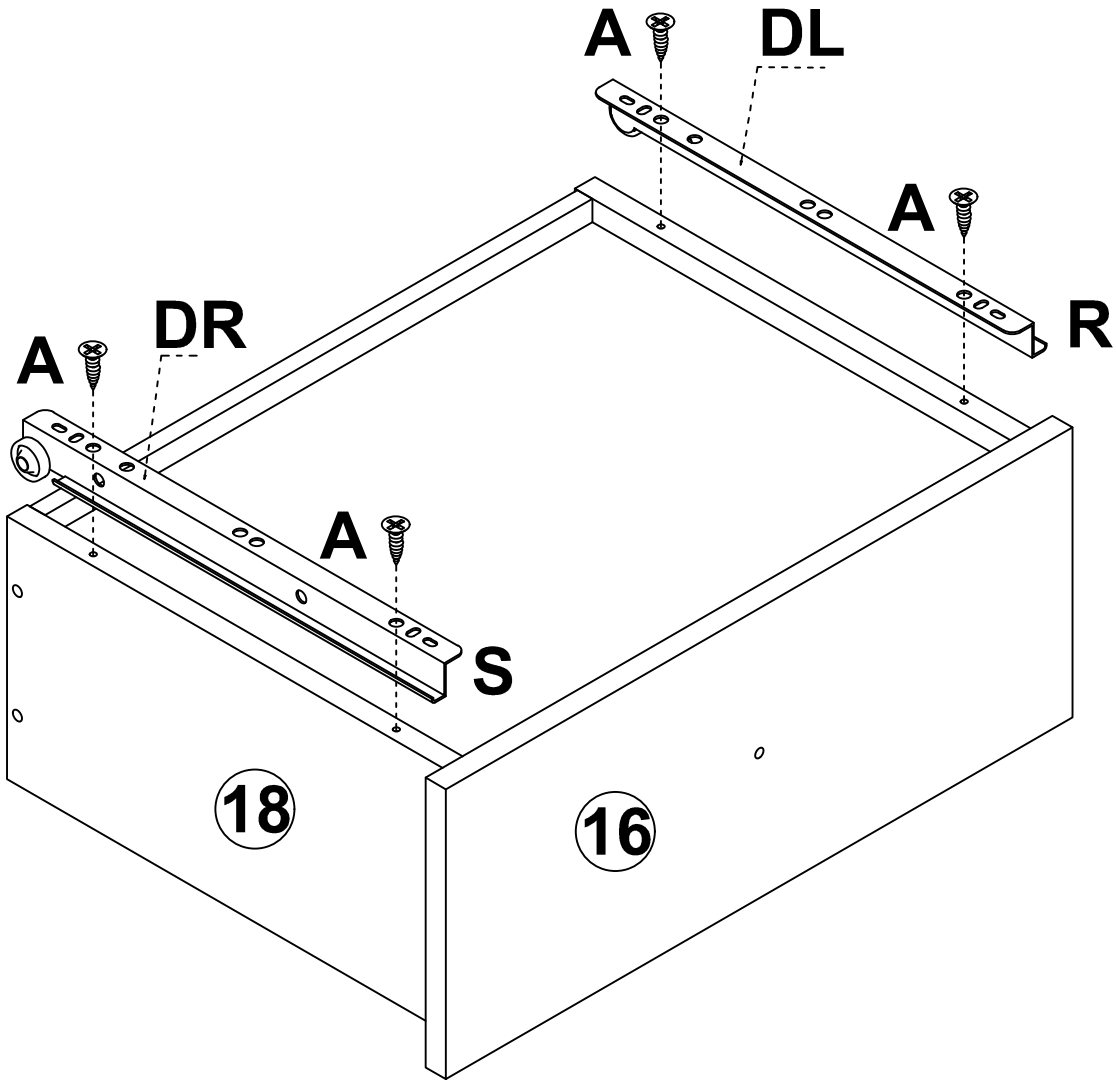


Step 26

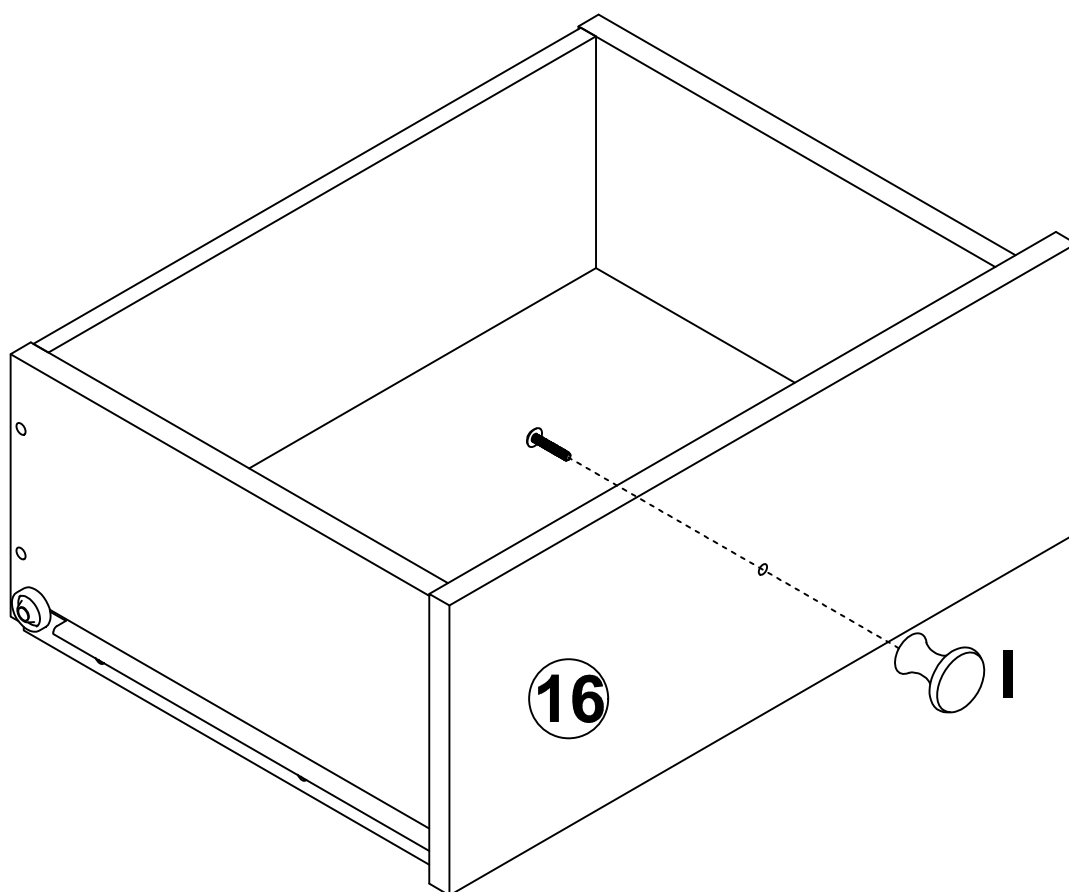
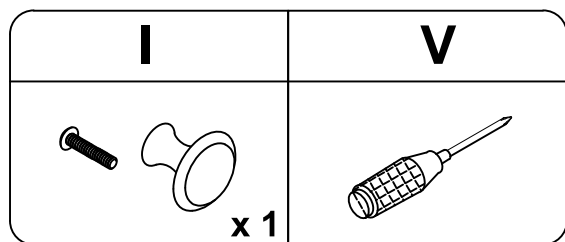


Step 27

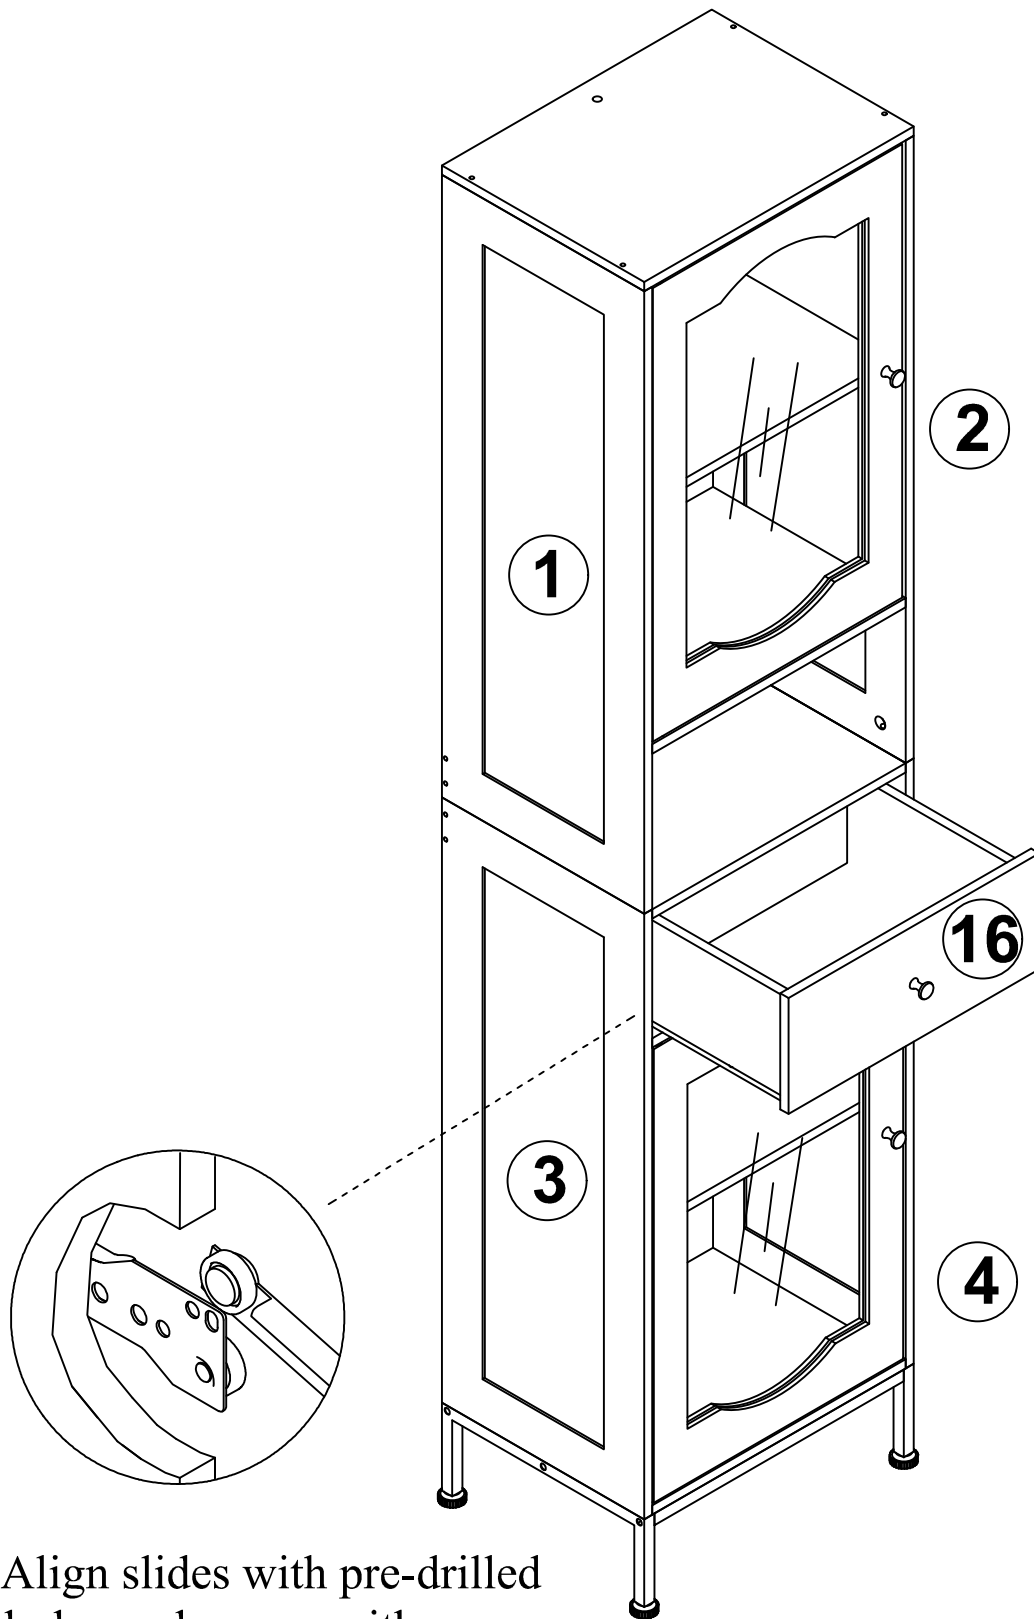
A	R	S	V
 x 4	 x 1	 x 1	



Step 28





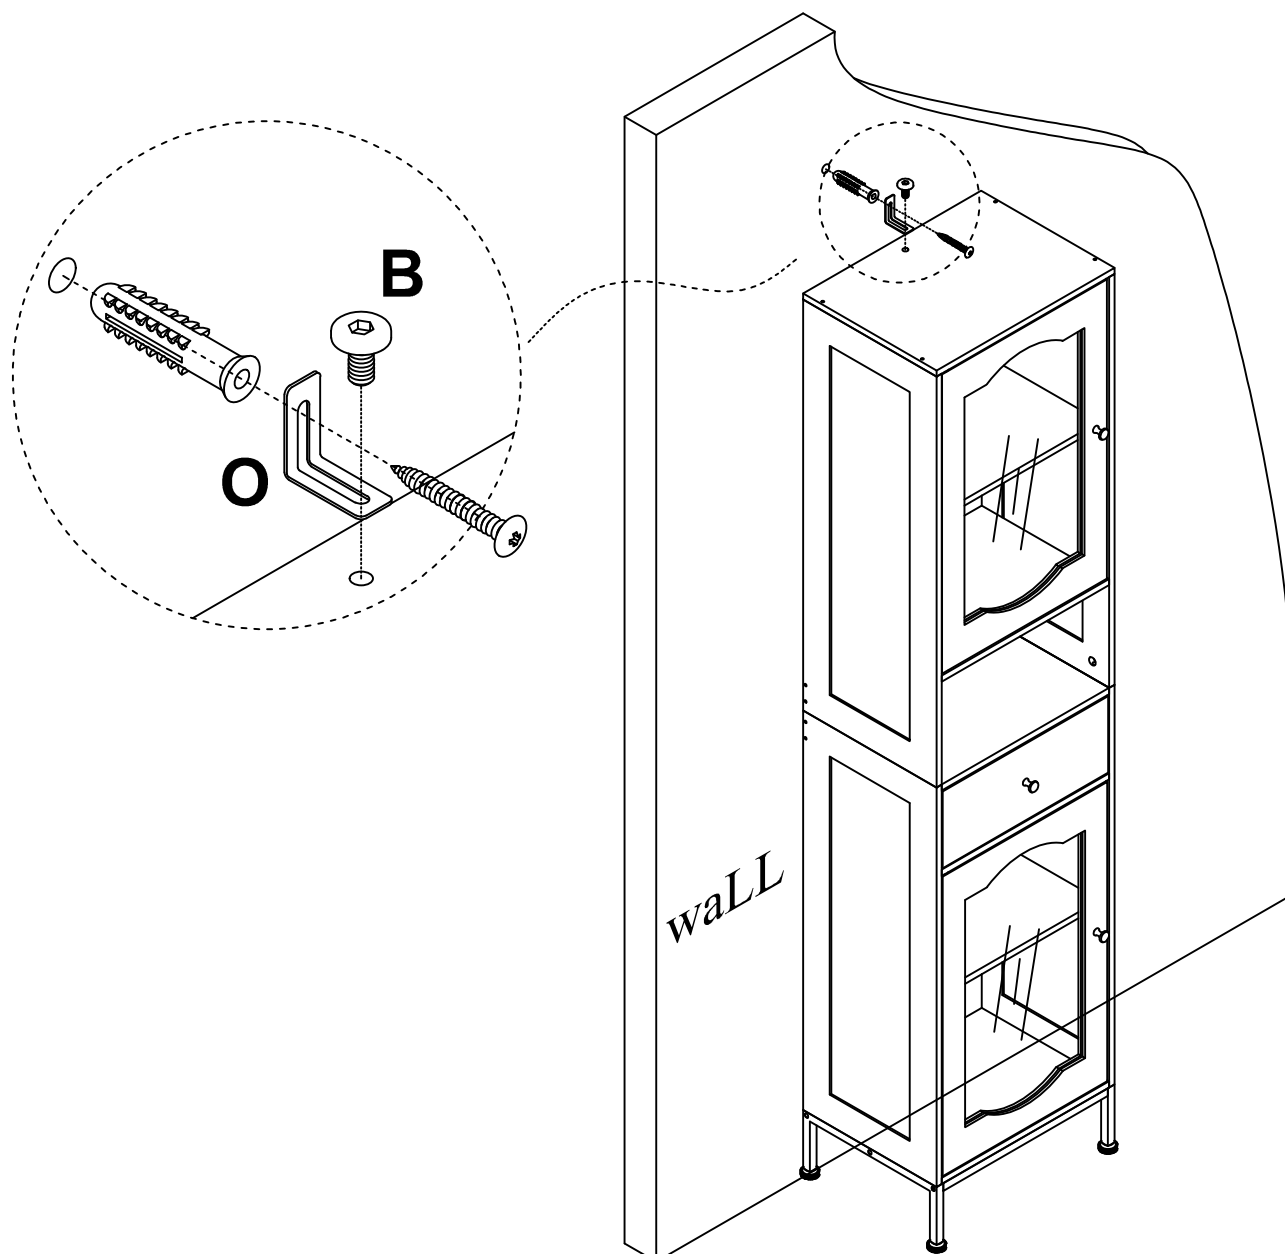
Step 29



Note: Align slides with pre-drilled holes and secure with screws for proper drawer installation.

Step 30

B	O	T	V
 x 1	 x 1		



Note: This is optional - the anti-tip kit can be installed if needed. However, if you have children at home, we recommend installing it to prevent climbing accidents.