



## 4' to 8' Aromatic Cedar Closet Model # 801

PLEASE READ INSTALLATION  
INSTRUCTIONS BEFORE ASSEMBLING


Rev. D

IF YOU ARE MISSING PARTS OR HAVE  
QUESTIONS PLEASE CONTACT:  
[customerservice@cedargreen.net](mailto:customerservice@cedargreen.net)

### Tools Required:





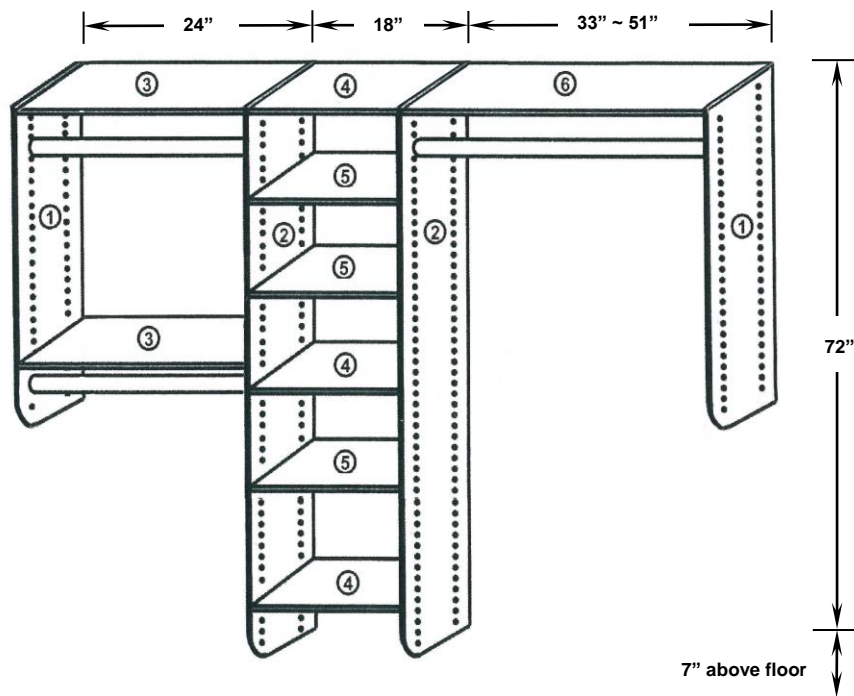









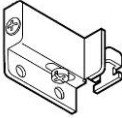
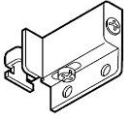



### Panel & Shelf Identification



ITEM	DESCRIPTION	QTY
①	Wall Panel	2
②	Tower Panel	2
③	24" Shelf with Rafix	2
④	18" Tower Shelf with Rafix	3
⑤	18" Tower Shelf	3
⑥	51" Max Adjustable Shelf (33"~ 51")	1

## Hardware Identification Sheet

ITEM	PICTURE	DESCRIPTION	QTY
A		Rafix Connector Bolt	24
B		Wardrobe Tube Support	3 pairs
C		Dry Wall Anchor	12
D		Flathead Phillips Screw #6 x 1/2"	8
E		Panhead Phillips Screw #8 x 1"	12
F		Flathead Phillips Screw #8 x 3/4"	14
G		Wall Rail 44"	1
H		Wall Rail 18"	1
I		Wall Rail Covering Strip 43"	1
J		Wall Rail Covering Strip 53"	1
K		Wardrobe Tube 24"	2
L		Wardrobe Tube 51"	1
M		Panel Bracket	4
N		Shelf Support	14
O		Left Panel Hanger	2
P		Right Panel Hanger	2
Q		Rafix Connector	24

## BEFORE YOU BEGIN ASSEMBLY:


Read your instruction manual fully. Check all parts and hardware. If anything is missing or not satisfactory, please **DO NOT** call the store or return the product to them. Please email to [customerservice@cedargreen.net](mailto:customerservice@cedargreen.net) for assistance. Most problems are resolved promptly without you needing to leave home.

## Installation Steps

- Using a level draw a horizontal line across back of closet, 74" above floor.
- Locate studs by using a stud finder, lightly mark wall 1/4" below horizontal line to reference stud locations.
- Mark vertical panel locations: using left wall as starting point; mark X at 25" for left **Tower Panel (2)**; mark X at 44" for right **Tower Panel (2)**; mark X at right end for right **Wall Panel (1)**.

### *Hint:*


- 74" above floor is just a recommendation, horizontal line could be set higher (e.g. 78") if more hanging space is desired.
- Closet has to be at least 78" wide in order to fit all three sections of the system. Less than three sections can be installed for smaller closet.

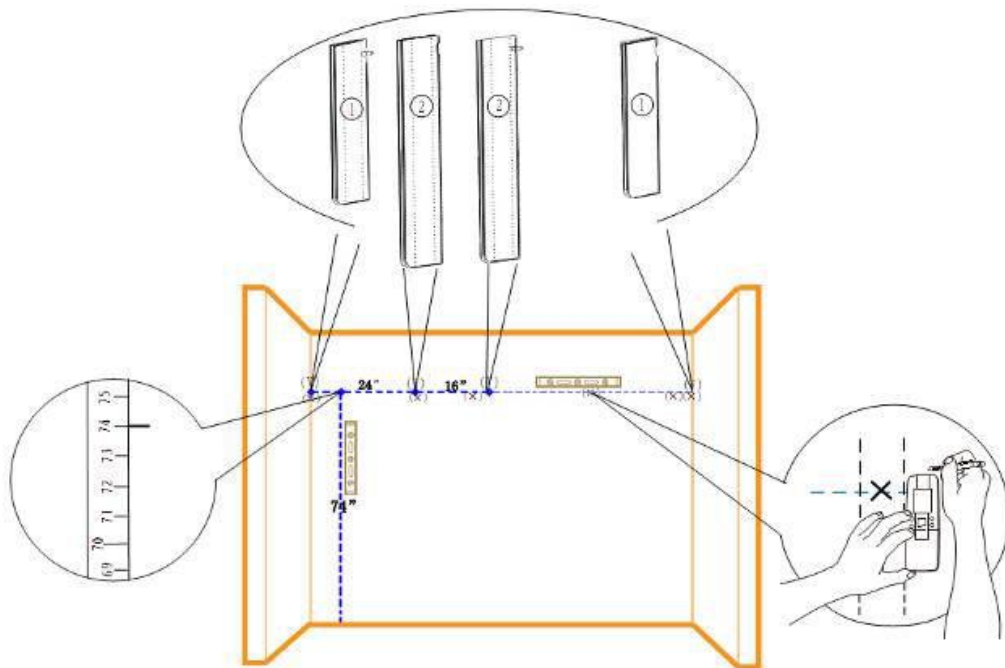

- Mount **WALL RAIL (G)** from left to right on top of the Horizontal Line. To secure the wall rail onto the wall – Use **Panhead Screws (E)** on stud reference marks. Mark the screw locations then drill pilot holes using a 1/8” drill bit.
- If any of the **Panels** are not within 3” of a stud, **Dry Wall Anchor (C)** are needed.
- Mount **Wall Rail (H)** from right end to left. Using **Panhead Phillips Screw (E)** and **Dry Wall Anchor (C)**.
- Cover long **Wall Rail 44” (G)** with **Wall Rail Covering Strip (I)**. Snap fit the cover from top to bottom. Narrow side fits the top and the bottom will snap in.
- Measure and cut **Wall Rail Covering Strip (J)** to fit remaining area of wall rails and the gap between two wall rails.

**Hint:**


- *Wall rails must be mounted on studs behind wall. This is very important.*

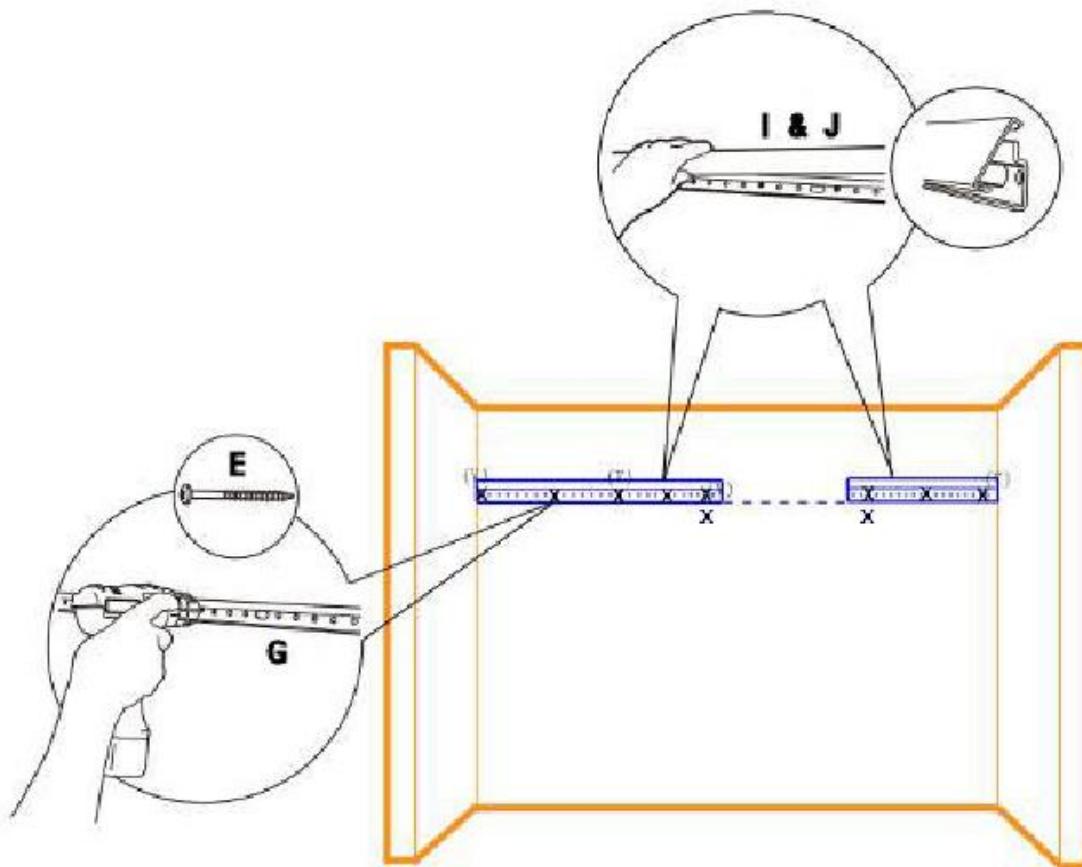

- Attach the **Left Panel Hangers (O)** onto the left **Wall Panel (1)** and left **Tower panel (2)** by using **Flathead Phillips Screws (F)**, put the **Left Panel Hanger (O)** at the ½ circle Indent at the top of the Panel, locate the Two pre-drilled Holes just below the Indent. The bottom screw Holes of the **Left Panel Hanger (O)** should match the pre-drilled ones.
- Repeat the steps to attach the two **Right Panel Hangers (P)** onto the right **Tower Panel (2)** and the right **Wall Panel (1)**.
- Add **Panel Bracket (M)** onto the bottom of the **Wall Panels** and **Tower Panels (1 & 2)** using **Flathead Phillips Screws (F)**.
- Hang left **Wall Panel (1)** onto **Wall Rail (G)**.
- Hang left **Tower Panel (2)** onto **Wall Rail (G)** at marked X location.
- Hang right **Tower Panel (2)** onto **Wall Rail (G)** at marked X location.
- Hang right **Wall Panel (1)** onto right end of **Wall Rail (H)**.

**Hint:**


- *You can level the Wall and Tower Panels(1 & 2) using the vertical and depth adjustment screws on the Panel Hangers (O & P).*

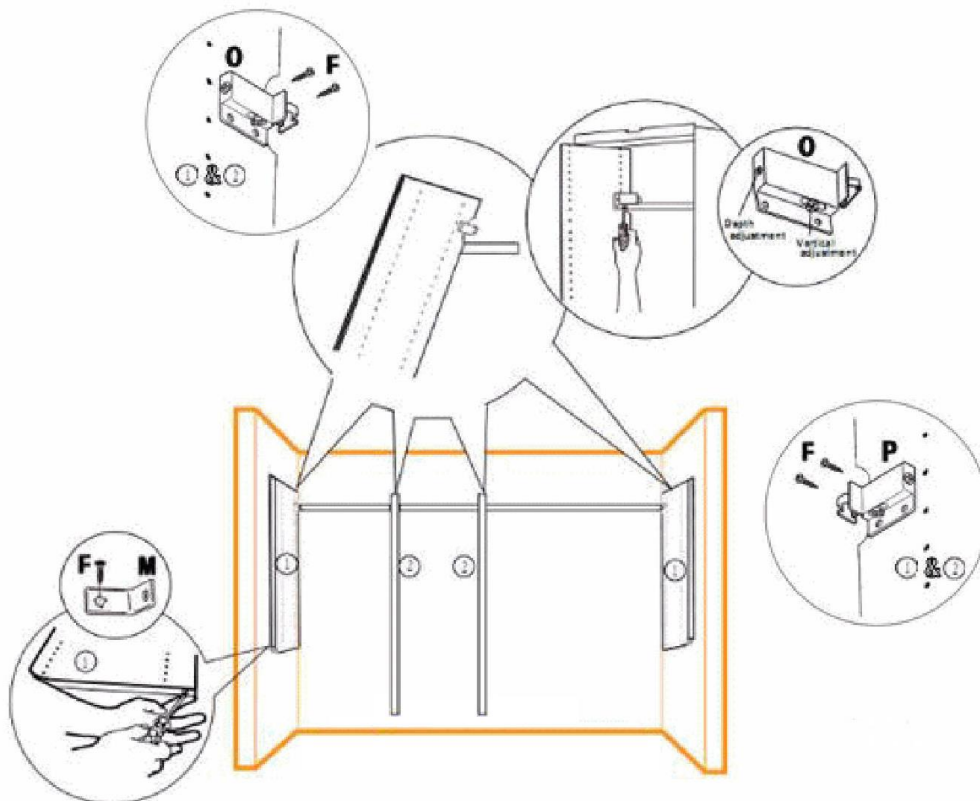

- Insert **Rafix Connector (Q)** into shelf holes with the openings facing outward. Do this for all shelves (3), (4) and (6).
- Mount **Rafix Connector Bolt (A)** on the first holes from top of left **Wall Panel (1)** and left **Tower Panel (2)** using Phillips or Power screwdriver. Top holes are used for flat top shelving.
- Place one **24" Shelf (3)** onto the Rafix Connector Bolts. Lock the **Rafix Connector Bolt (A)** with **Rafix Connectors (Q)** by inserting the screwdriver into the Rafix connector Hole and turning Clockwise.
- Repeat the steps for all shelves with Rafix Connectors:
  - Mount the 2nd **24" shelf (3)** 6 holes from bottom up on left **Wall Panel (1)**;
  - Mount the Top **18" Shelf with Rafix Connector (4)** on the first holes from top between both **Tower Panels (2)**;
  - Mount 2nd **18" Shelf with Rafix Connector (4)** at the same level of 2nd **24" shelf (3)**;
  - Mount the 3rd **18" Shelf with Rafix Connector (4)** 2 holes from bottom up;
  - Mount the **Adjustable Shelf (6)** between right **Tower Panel (2)** and right **Wall Panel (1)**, pull or push to adjust the shelf width to the desired Length.

**Hint:**


- ***Rafix Connector Bolt (A)** can be mounted in different holes depending on customer's desired shelf locations.*

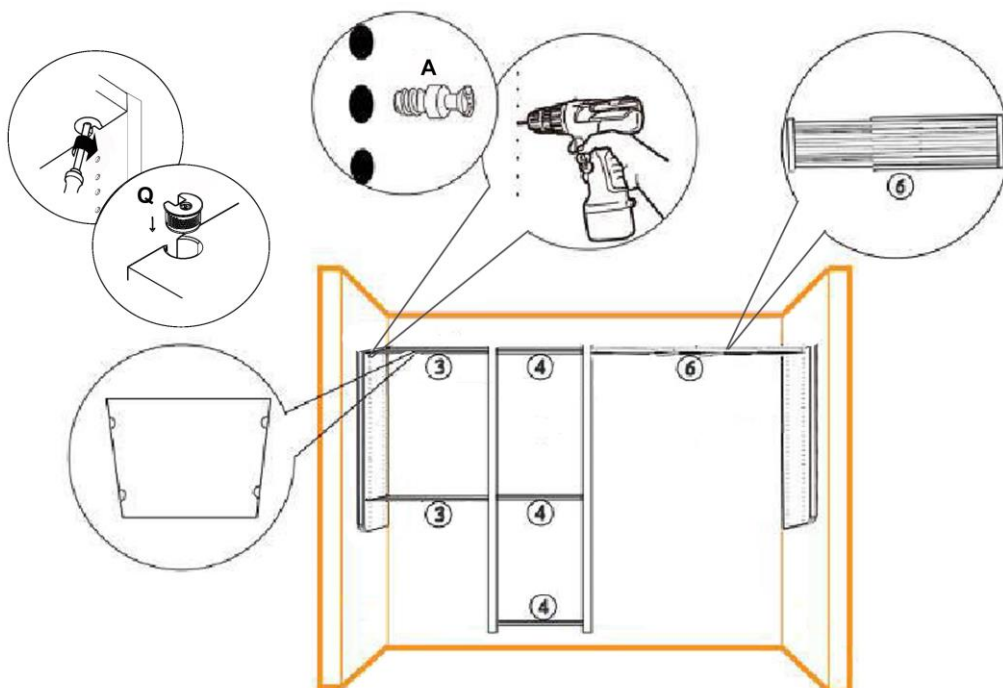

- Mount **Wardrobe Tube Support (B)** in left wardrobe section, 2 holes down from both **24" shelf (3)**, with **Flathead Phillips Screw (D)**. Do same for both end pieces.
- Set both **Wardrobe Tube 24" (K)** in 24" shelving sections.
- Mount **Wardrobe Tube Support (B)** in right wardrobe section 2 holes down from **Adjustable Shelf (6)**.
- Measure distance between two ends of **Wardrobe Tube Support (B)**, mark **Wardrobe Tube 51" (L)** and cut with Hacksaw or a Tube Cutter.
- Set **Wardrobe Tube (L)** in adjustable shelf section.
- With **Shelf Support (N)** add three **18" Tower Shelf (5)** to desired locations in the middle/tower section.
- Position all **Wall and Tower Panels (1 & 2)**, mount **Panel Bracket (M)** onto back wall using **Panhead Phillips Screw (E)** and **Dry Wall Anchor (C)** if necessary.

**Hint:**








- *Suggested Shelf and Wardrobe Tube locations can be changed*
- *Customize you closet to meet your need.*

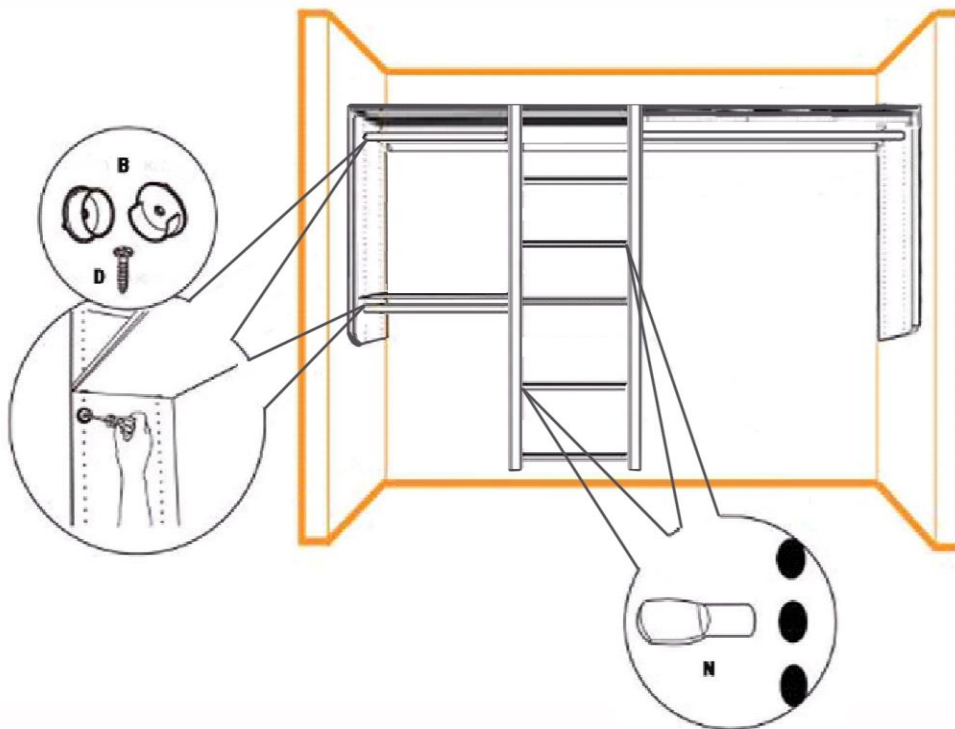

Now your beautiful new cedar closet is finished, enjoy the aromatic scent.



**Be creative with your Cedar Closet System, suggested combinations:**

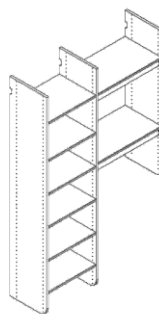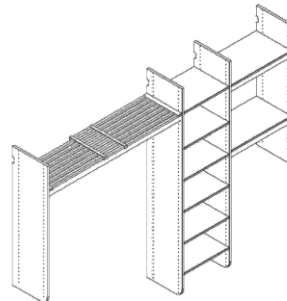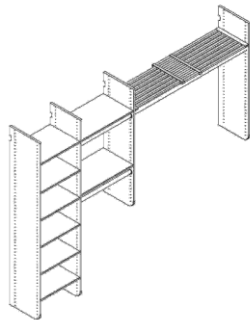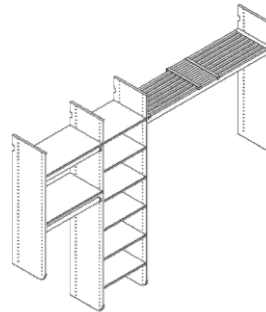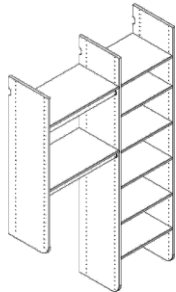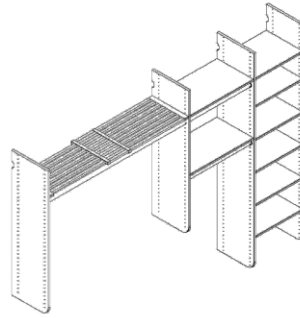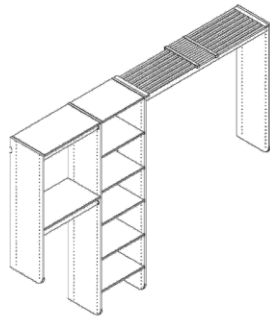

**CEDAR<sup>®</sup>**  
**GREEN**

Item No.: 801  
Aromatic Cedar Closet System  
by Cedar Green  
800-336-4690  
[www.cedargreen.net](http://www.cedargreen.net)