



ASSEMBLY INSTRUCTION

WF199321-WF199322-WF199323

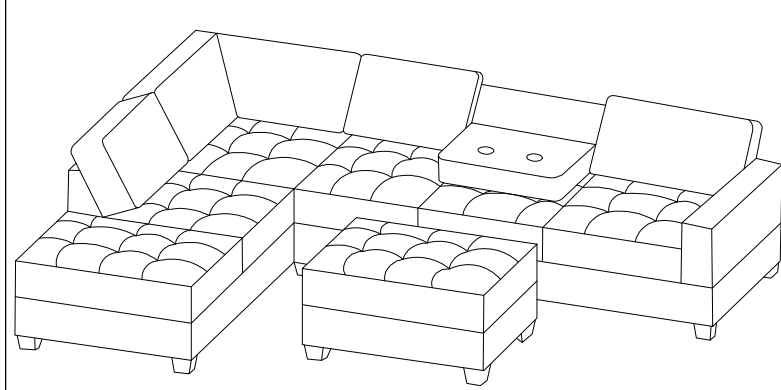


OPTION 1: CHAISE ON LEFT

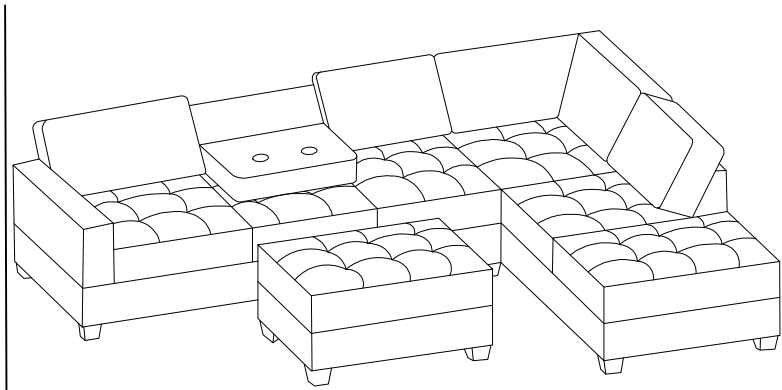


OPTION 2: CHAISE ON RIGHT

PARTS

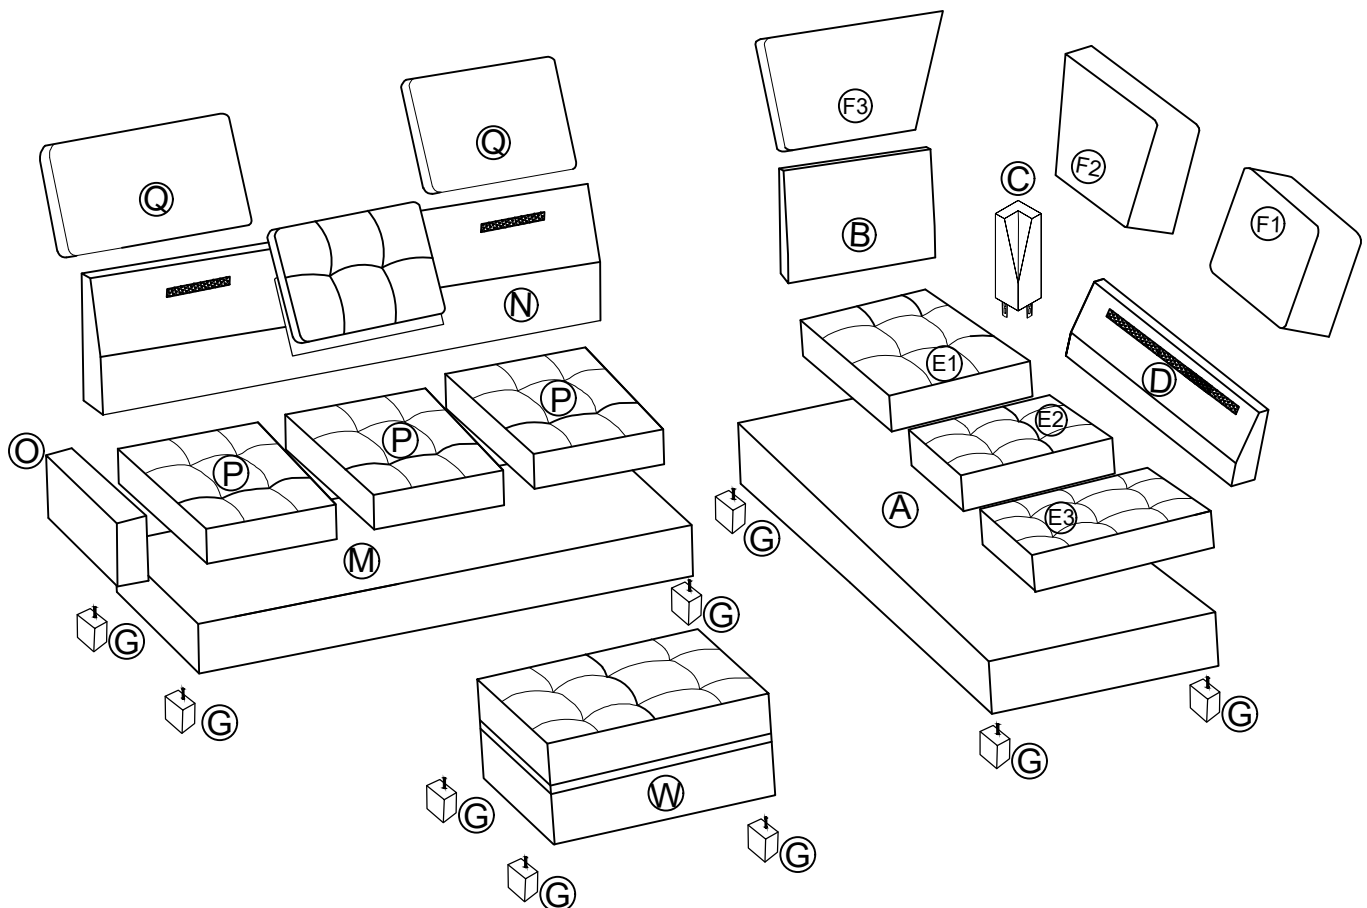


WF199322 - COMPONENT LIST

W

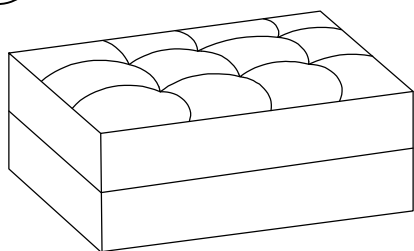

STORAGE OTTOMAN x 1


G

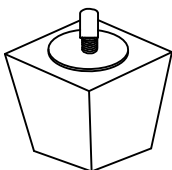

LEG x 4


WF199323 - COMPONENT LIST

A

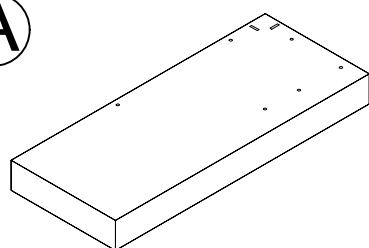


CHAISE SEAT x 1

B

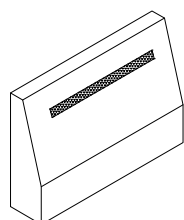


SHORT CHAISE BACK REST x 1

C




BACK CORNER x 1

D

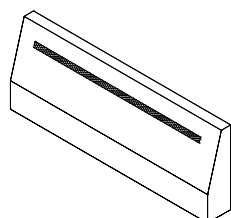


LONG CHAISE
BACK REST x 1

E1

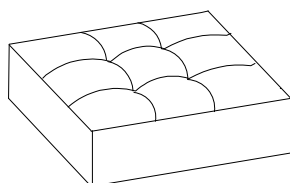


REAR SEAT CUSHION x 1

E2

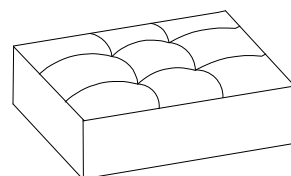


MIDDLE SEAT CUSHION x 1

E3

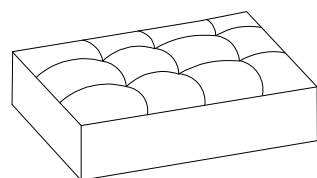


FRONT SEAT
CUSHION x 1

F1

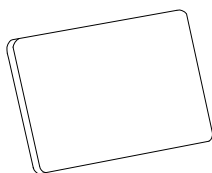


FRONT BACK
CUSHION x 1

F2

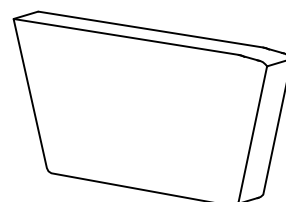


MIDDLE BACK
CUSHION x 1

F3

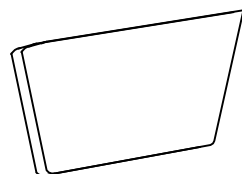

REAR BACK CUSHION x 1


G

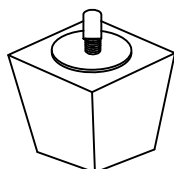

LEG x 4


WF199321 - COMPONENT LIST

Ⓜ

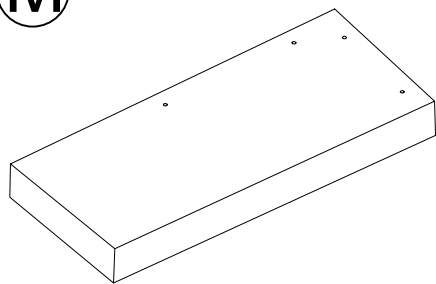


SOFA FRAME x 1

Ⓝ

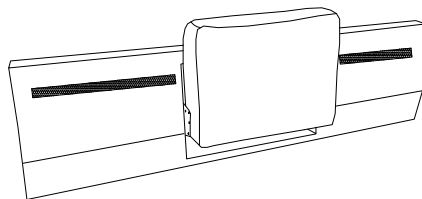


SOFA BACK REST
WITH MIDDLE BACK CUSHION x 1

Ⓞ

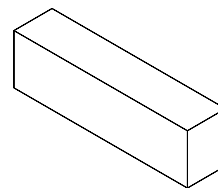


ARM x 1

Ⓟ

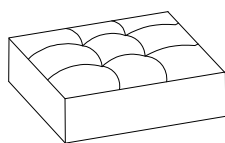


SOFA SEAT CUSHION x 3

Ⓠ

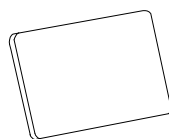

SOFA BACK CUSHION x 2


Ⓤ

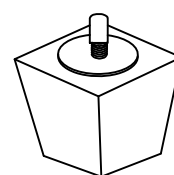

LEG x 4


HARDWARE (in box WF199321)

ⓗ

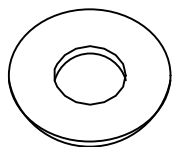

FLAT WASHER
Ø5/16" x 22MM
9PCS

ⓘ

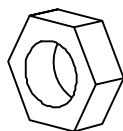


HEX NUT
Ø5/16" x 12MM
9PCS

ⓙ




BOLT
Ø5/16" x 90MM
9PCS

Ⓚ



OPEN WRENCH
1PC


Ⓛ

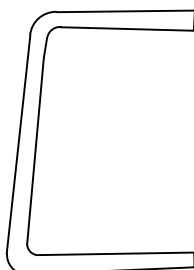

METAL CONNECTOR
2PCS


Step 1:

Remove the hardware and the leg box from packet.
Place all parts on a clean, smooth surface.

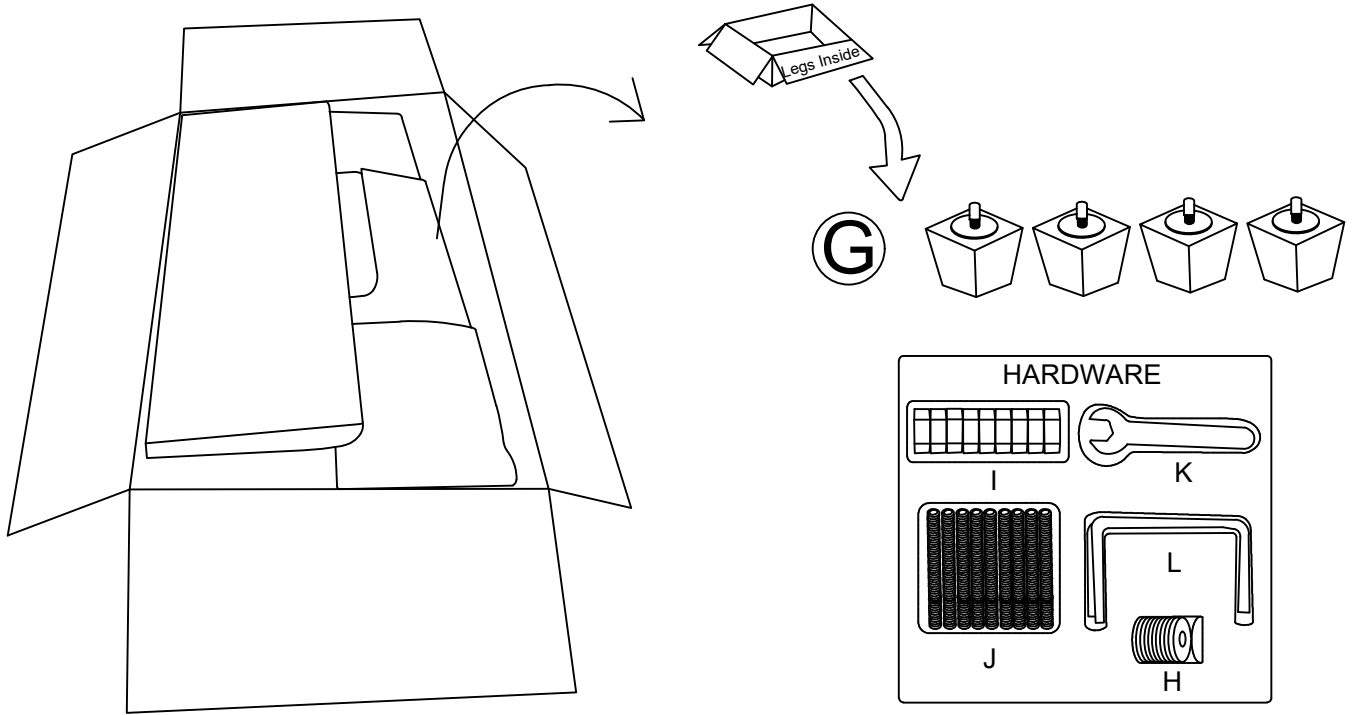


Step 2:

Manually screw J to B and D as shown.

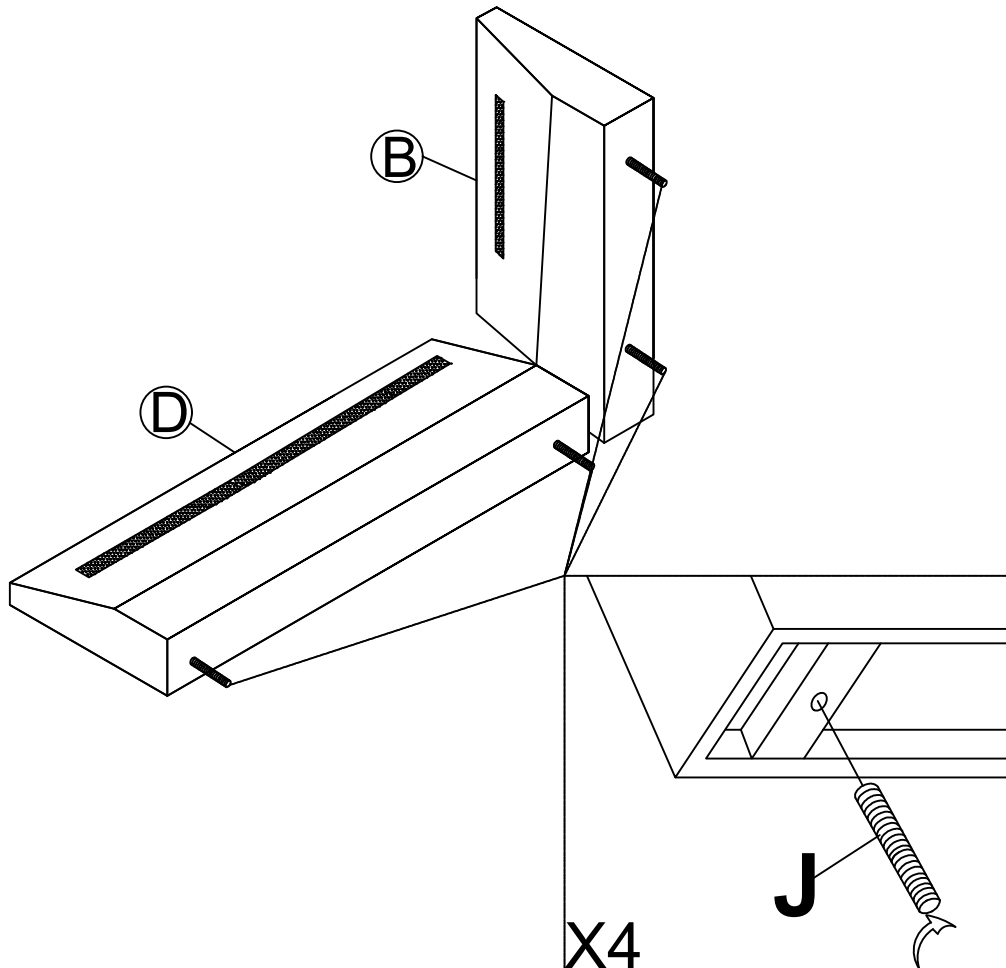

Step 3:


Insert part C to the hole in A.

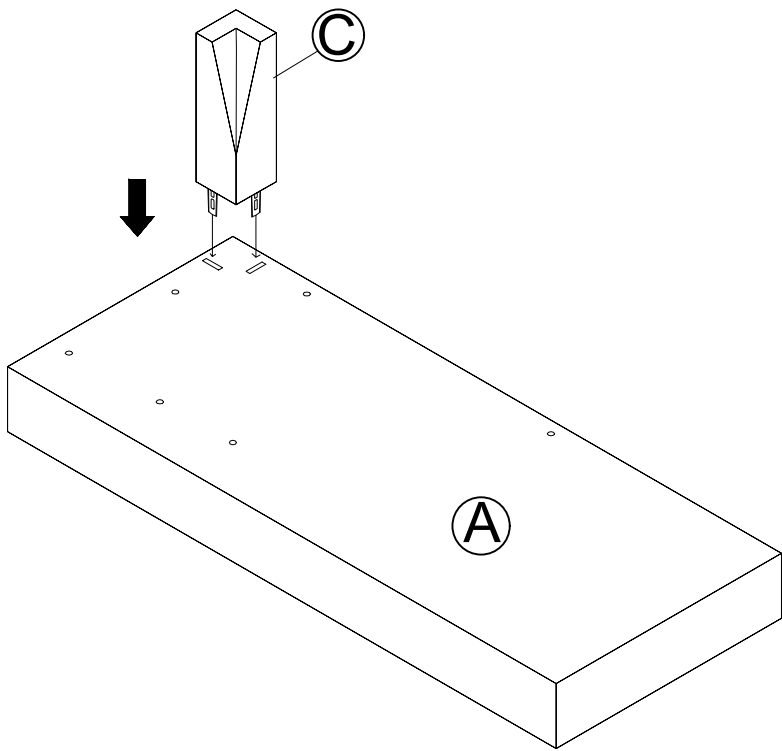


Step 4:

Align the backrest D and B with the hole in A. Fix it by using H&I

Option 1

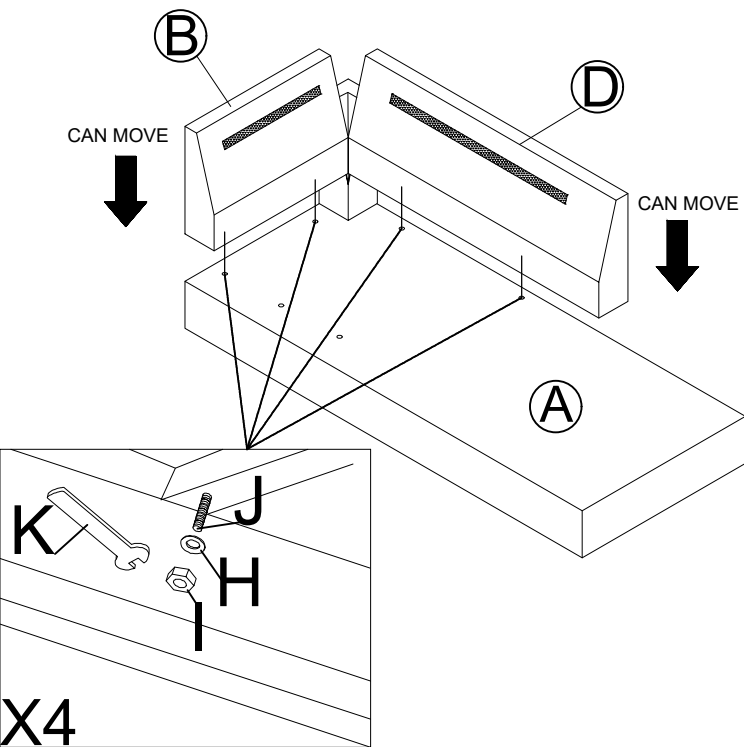



Option 2

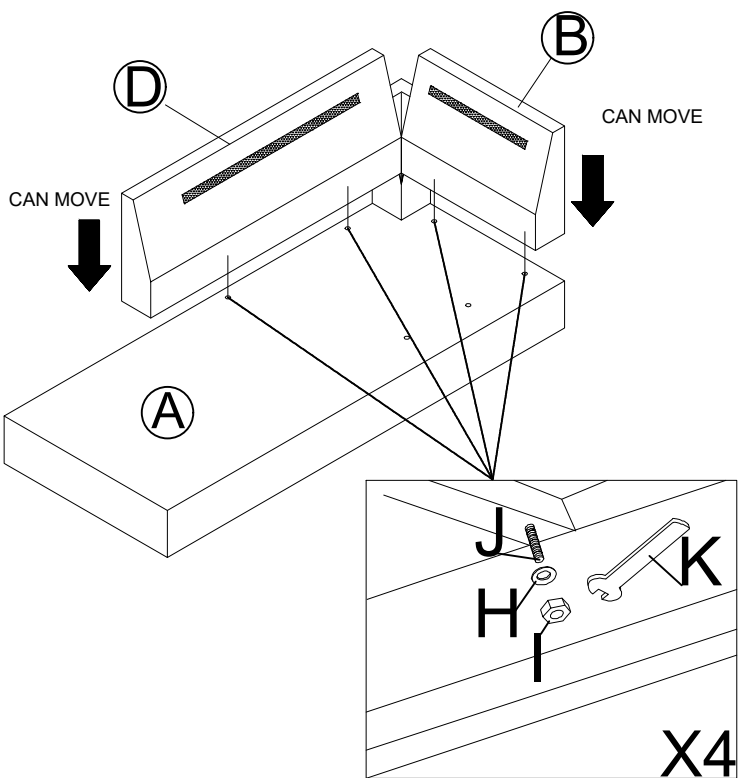


Step 5:

Manually legs G x 4 to A , as shown


▲Please remove the protective cap on the tip of thread before assembling.

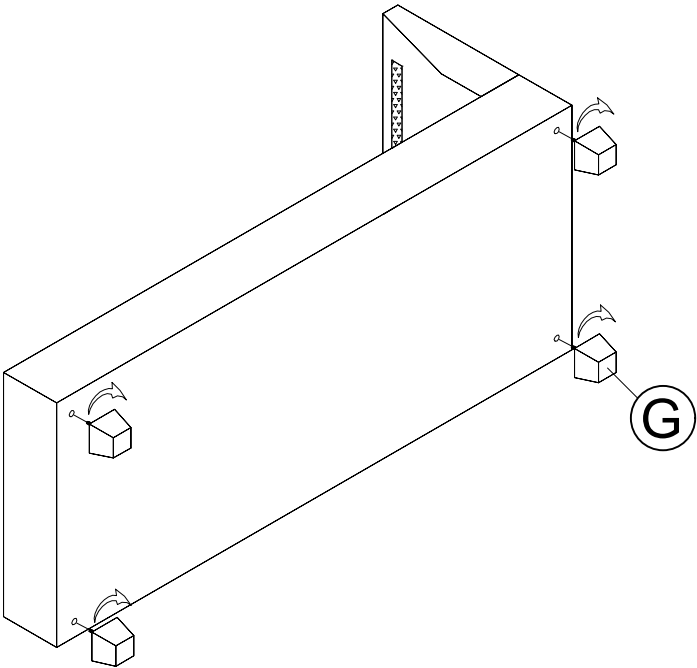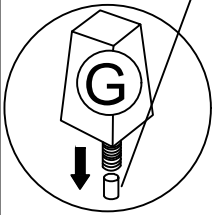

BOTTOM VIEW

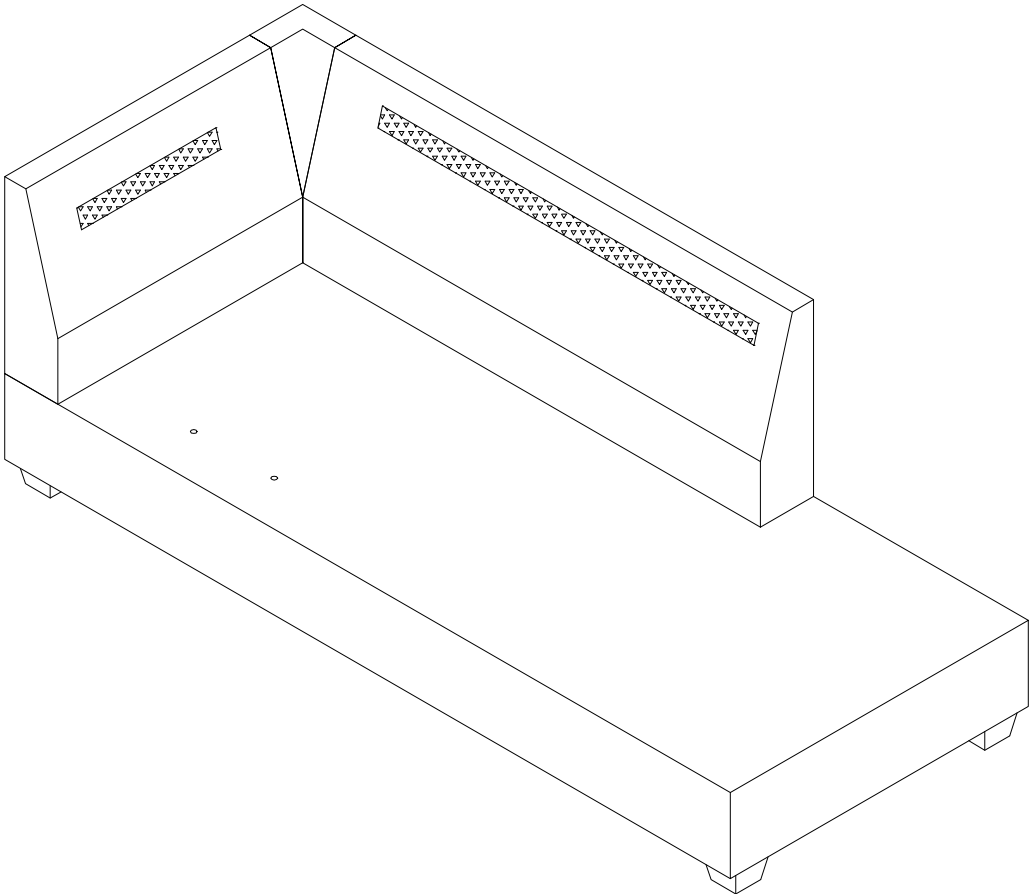


Step 6:
Manually screw J to N and O as shown.

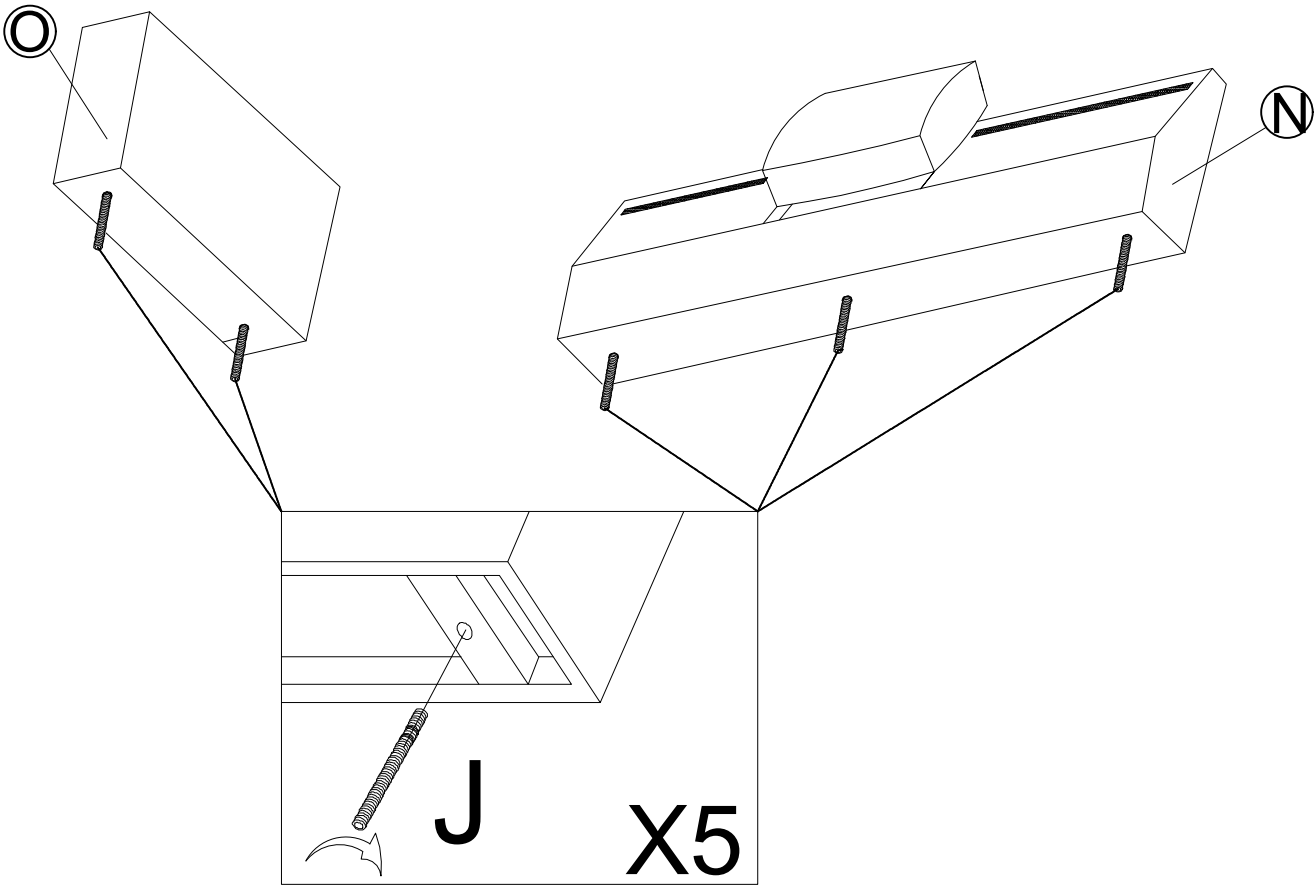


Step 7:
Align the backrest O and N with the hole in M. Fix it by using H & I.

Option 1

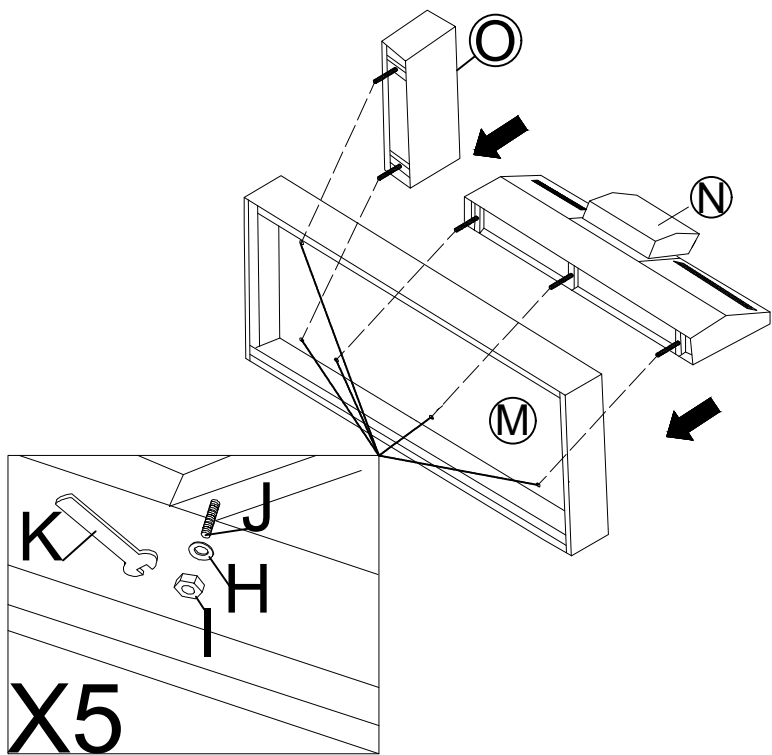



Option 2

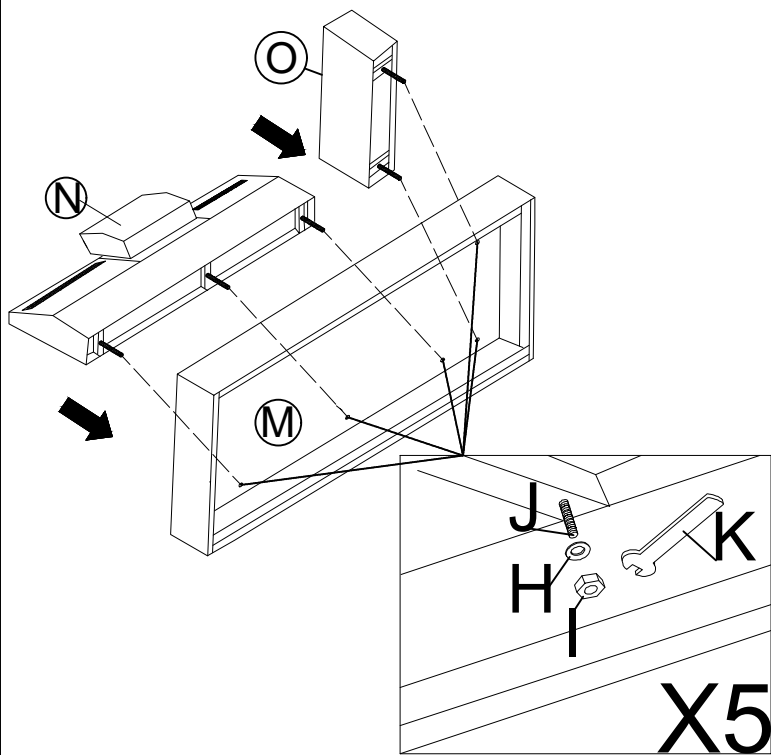


Step 8:

Manually legs G x 4 to M , as shown.

▲ Please remove the protective cap on the tip of thread before assembling.

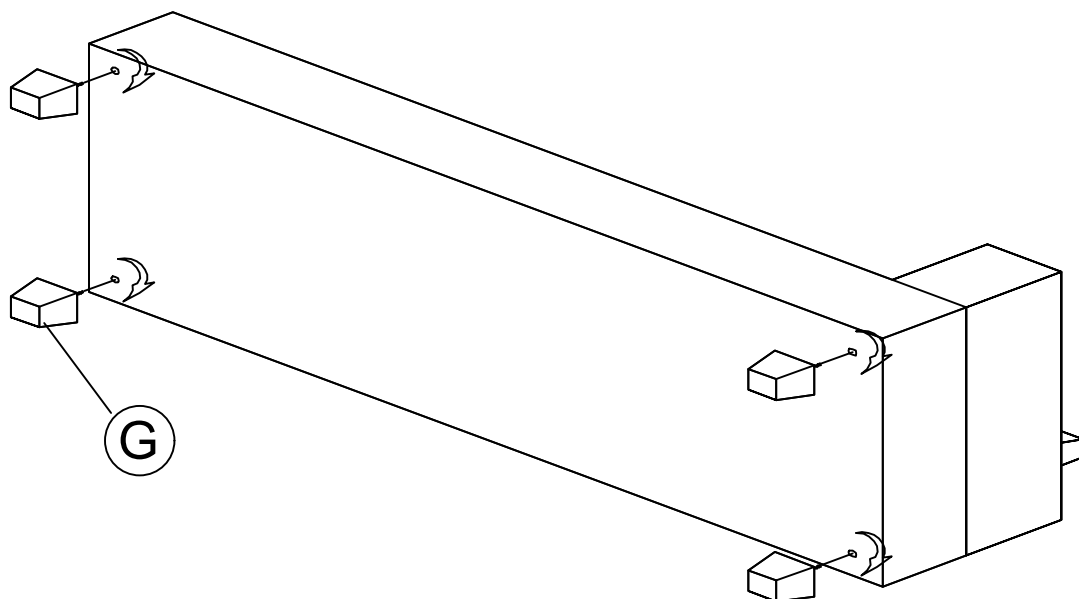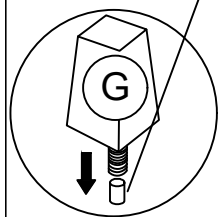


BOTTOM VIEW

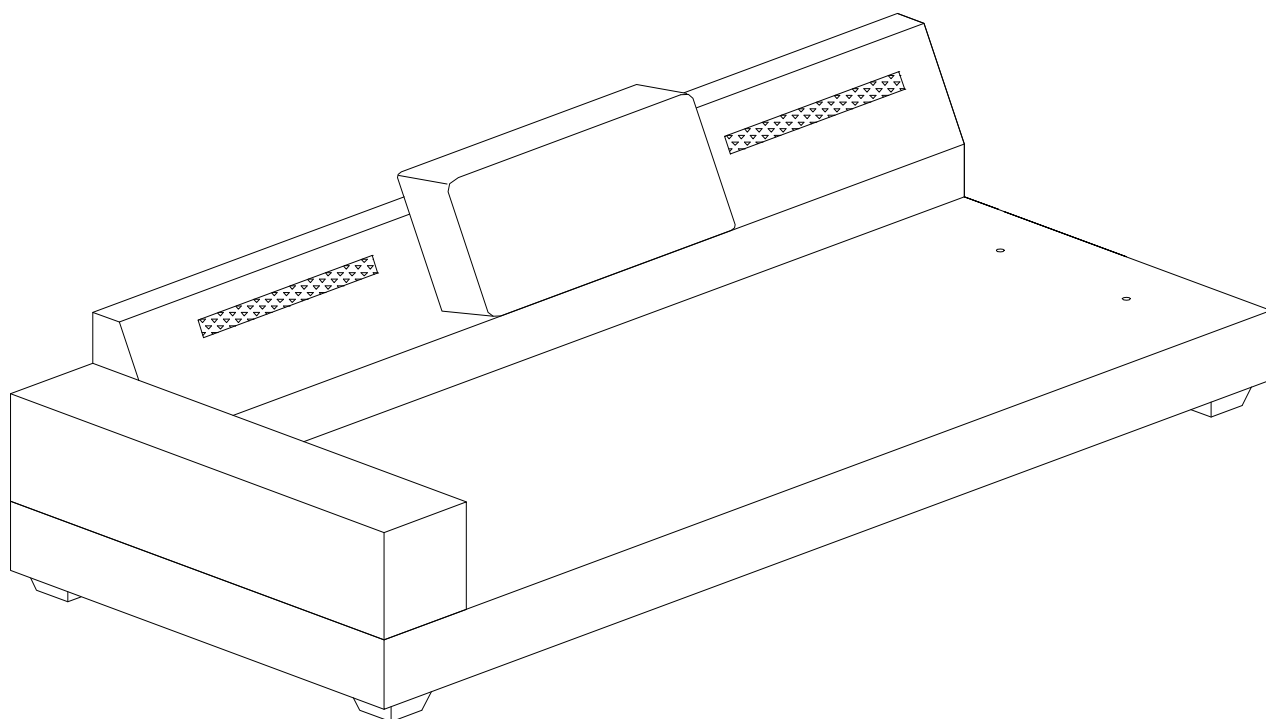


Step 9:

Insert the U-shaped part L into the hole to fix base.

Option 1

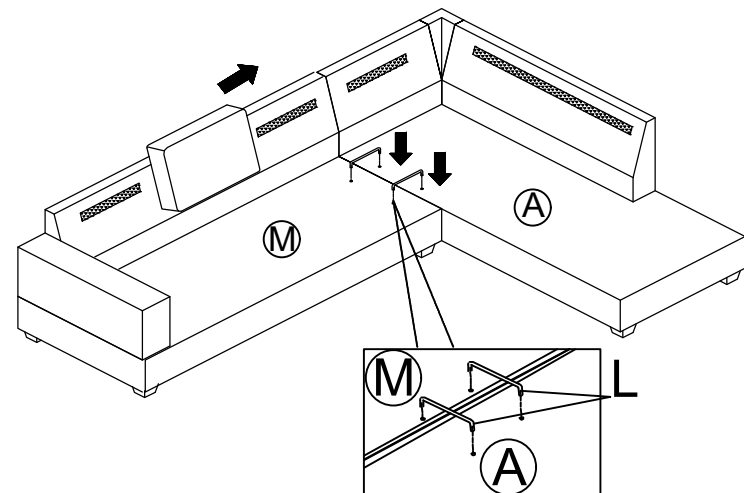

Option 2

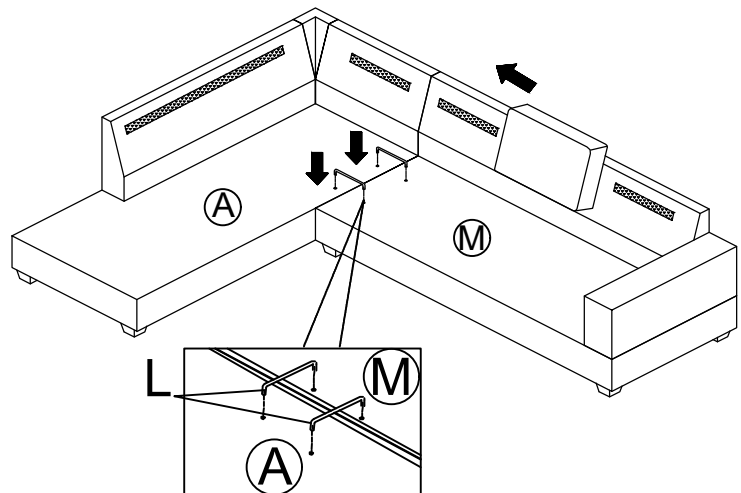


Step 10:


Remove seat cushion from their package.

Place E3x1, E2x1, E1x1 and Px3 onto the sofa.



Option 1

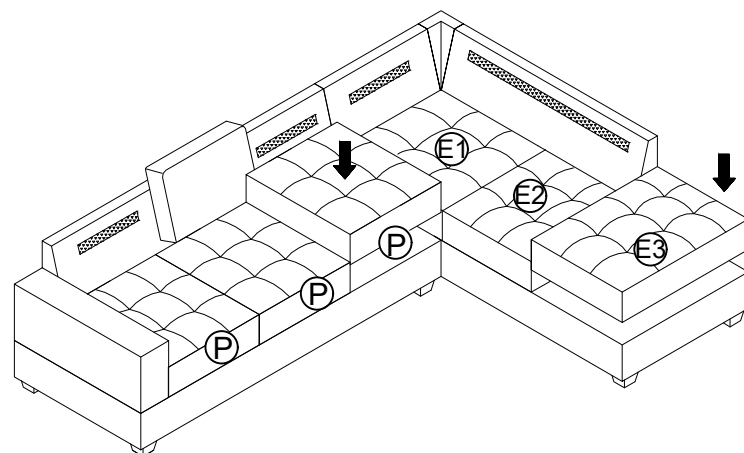

Option 2

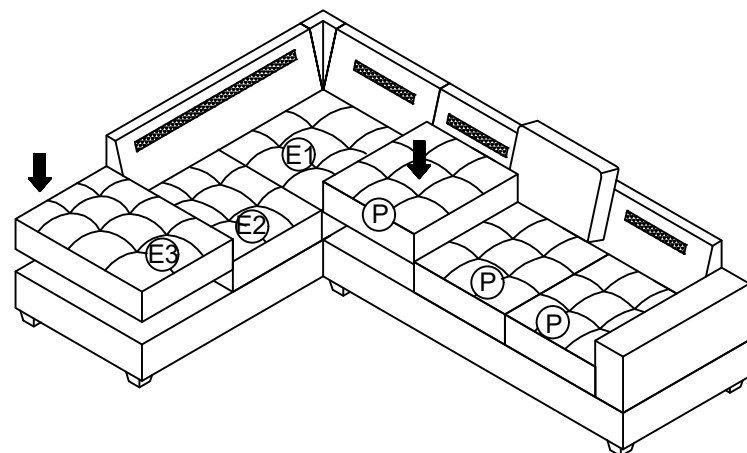


Tips: Stretch, pull down and pat seat cushions and back cushions to return nature shape and state.

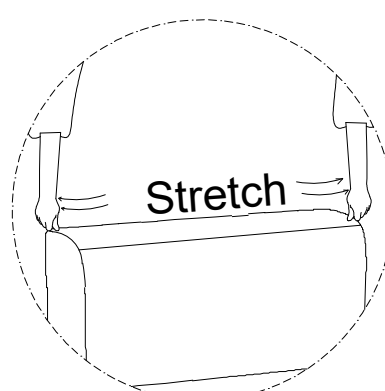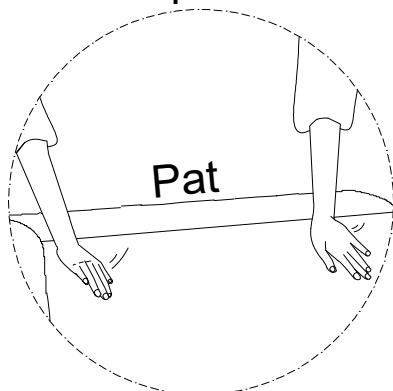


Step 11:

Remove back cushion from their package.
Place F1x1, F2x1, F3x1, and Qx2 onto the sofa.
Option 1


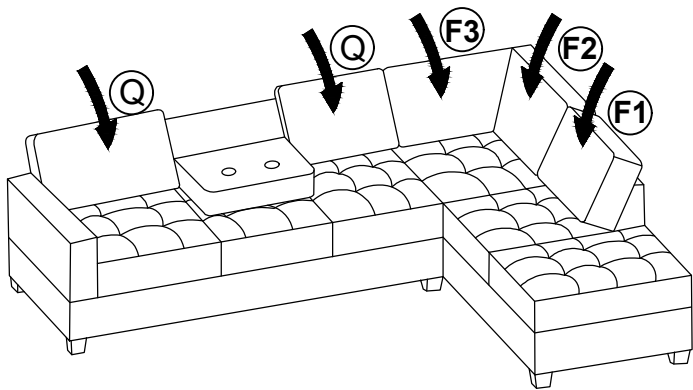


Option 2

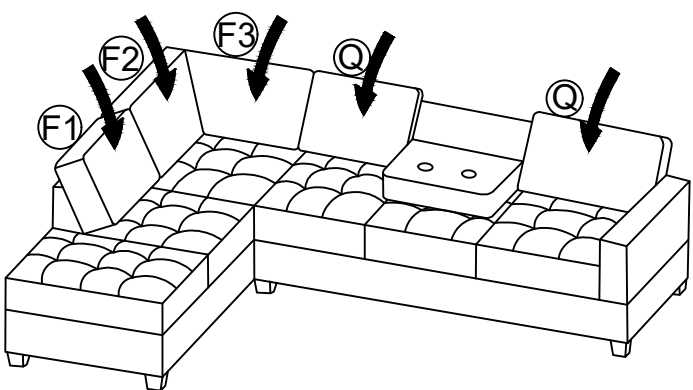



Step 12:

Manually legs G x 4 to W, as shown.

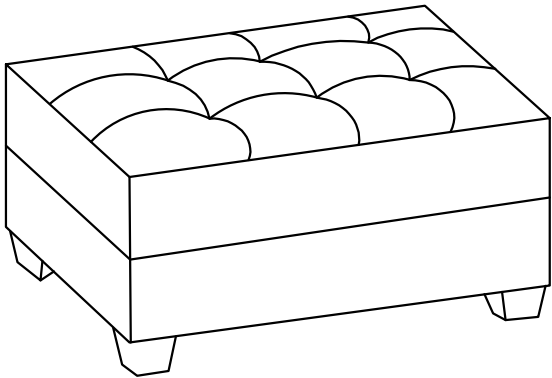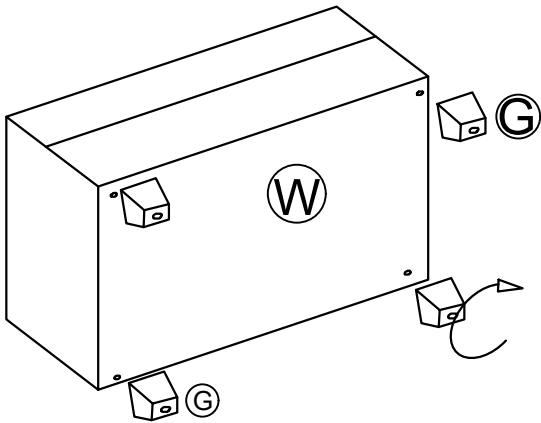

Assembly Completed !

THE CONSOLE PIECE CAN BE DROPPED DOWN AND TURN INTO
AN ARMREST PANEL WITH CUP HOLDERS

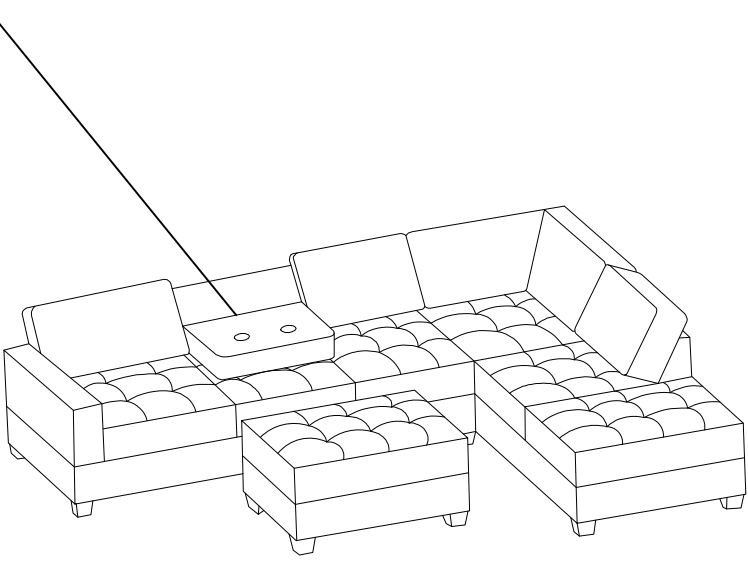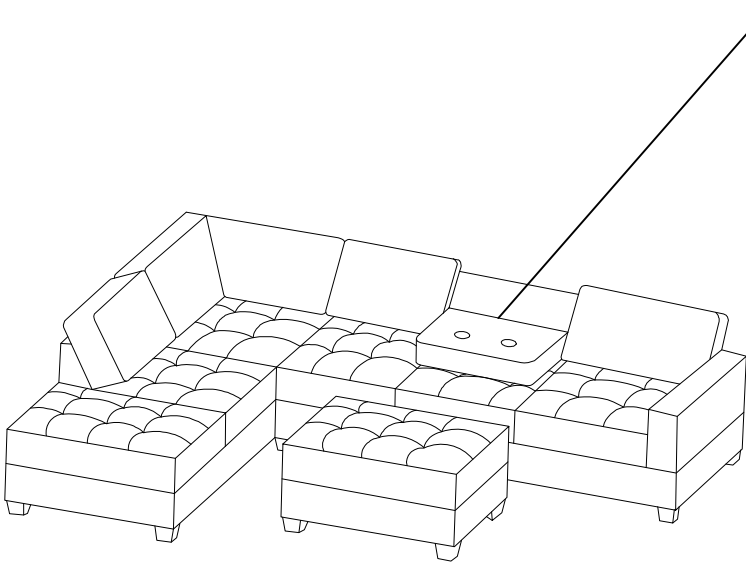

OPTION 1: CHAISE ON LEFT

OPTION 2: CHAISE ON RIGHT