CollaredEagle

Storage cabinet

VD011

Figure 1


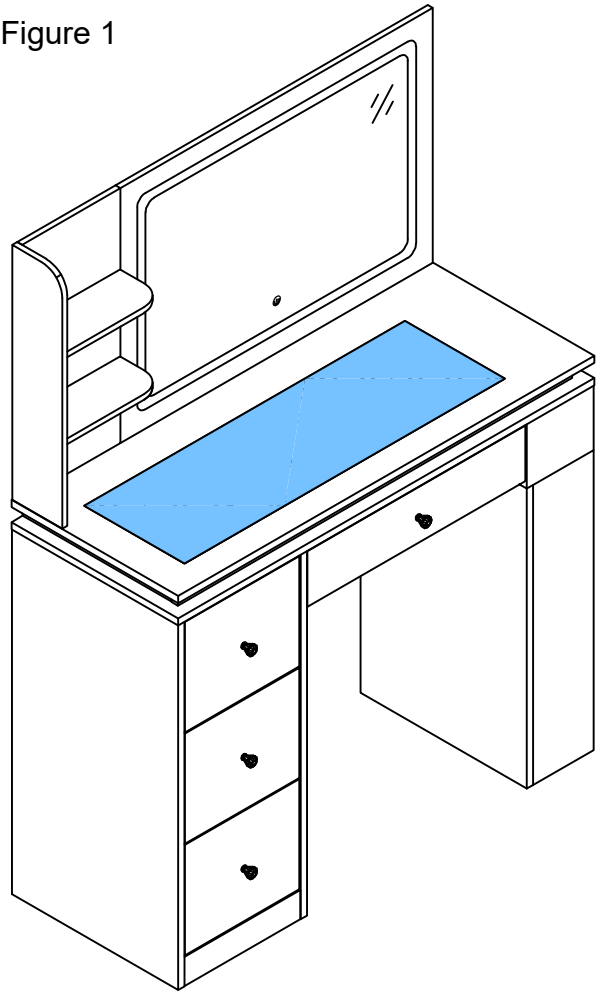


Figure 2

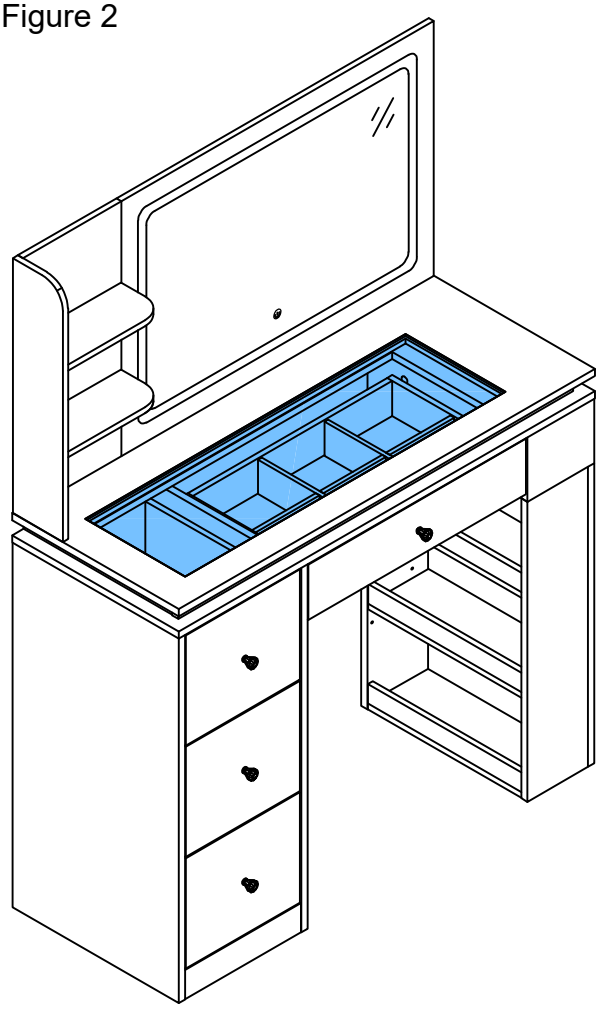

Suggestion: To make the installation process easier and faster, we recommend that two people work together to install the Storage cabinet.

Helpful Hints

1.We recommend two people to assemble the product easier and faster.

2. Please DO NOT tighten the screws deeply during assembling avoiding that metal frame can be bent and plank will crack.


3.We recommend that all screws should not be tightened over during assembling to make it easy to adjust.When it is adjusted to proper stationall screws should be tightened.

4.Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Customer Service

As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us freely.  **CollaredEagle@163.com**


EXPLODED OR 1

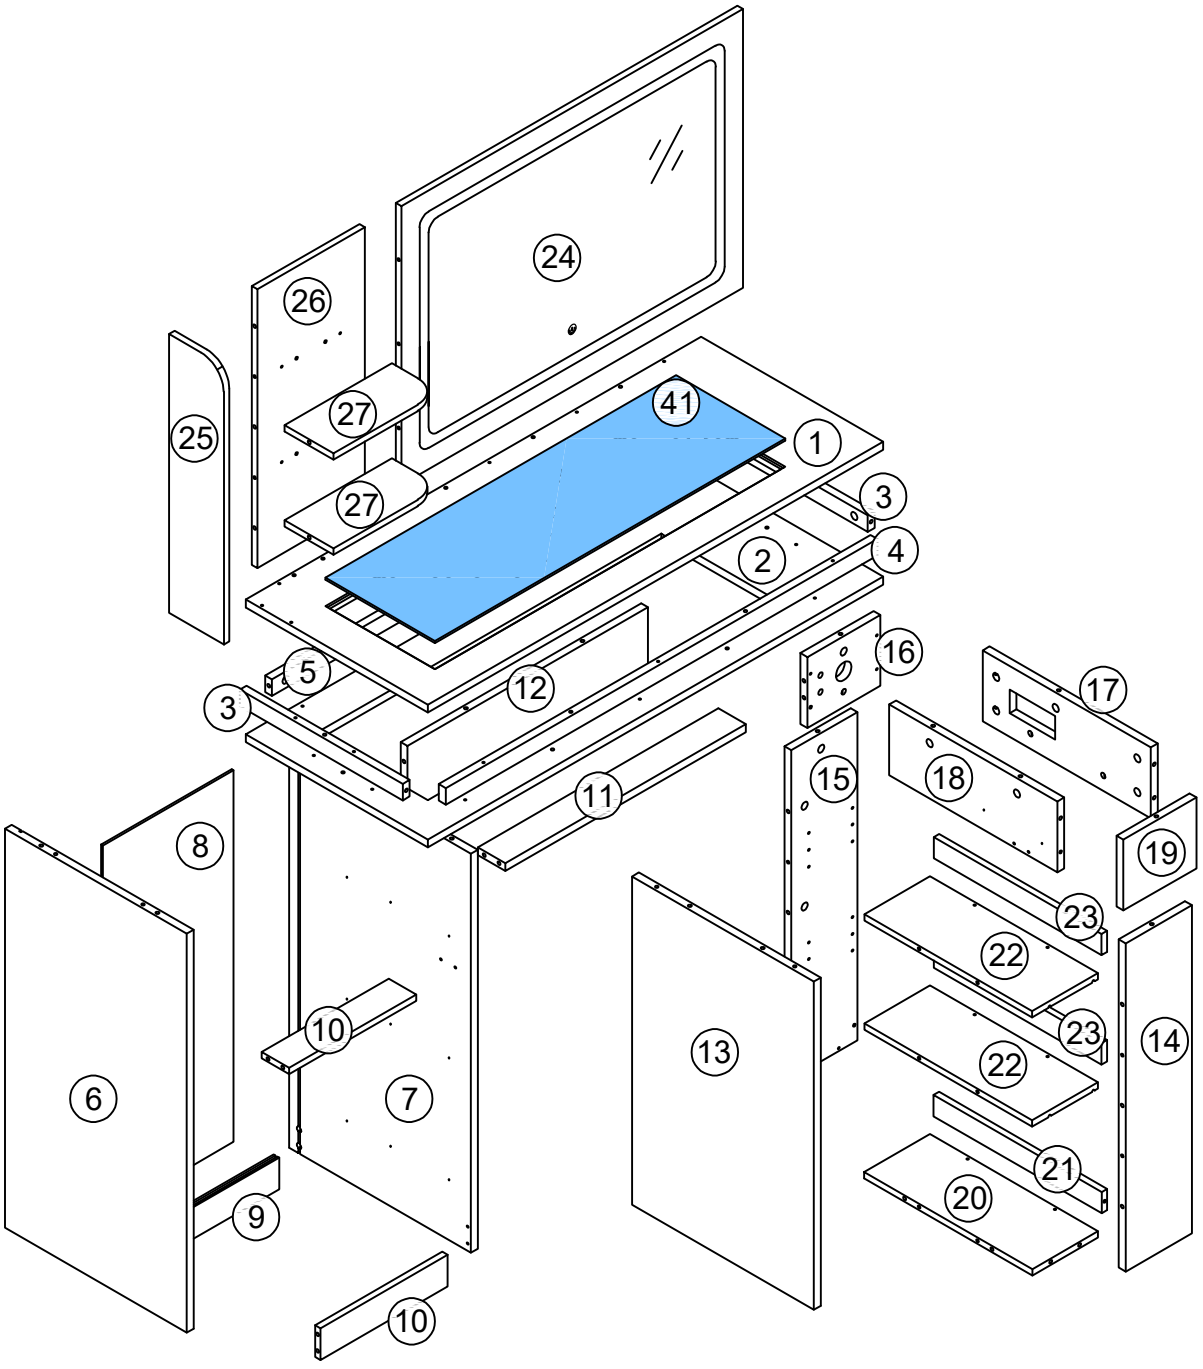


EXPLODED OR 2

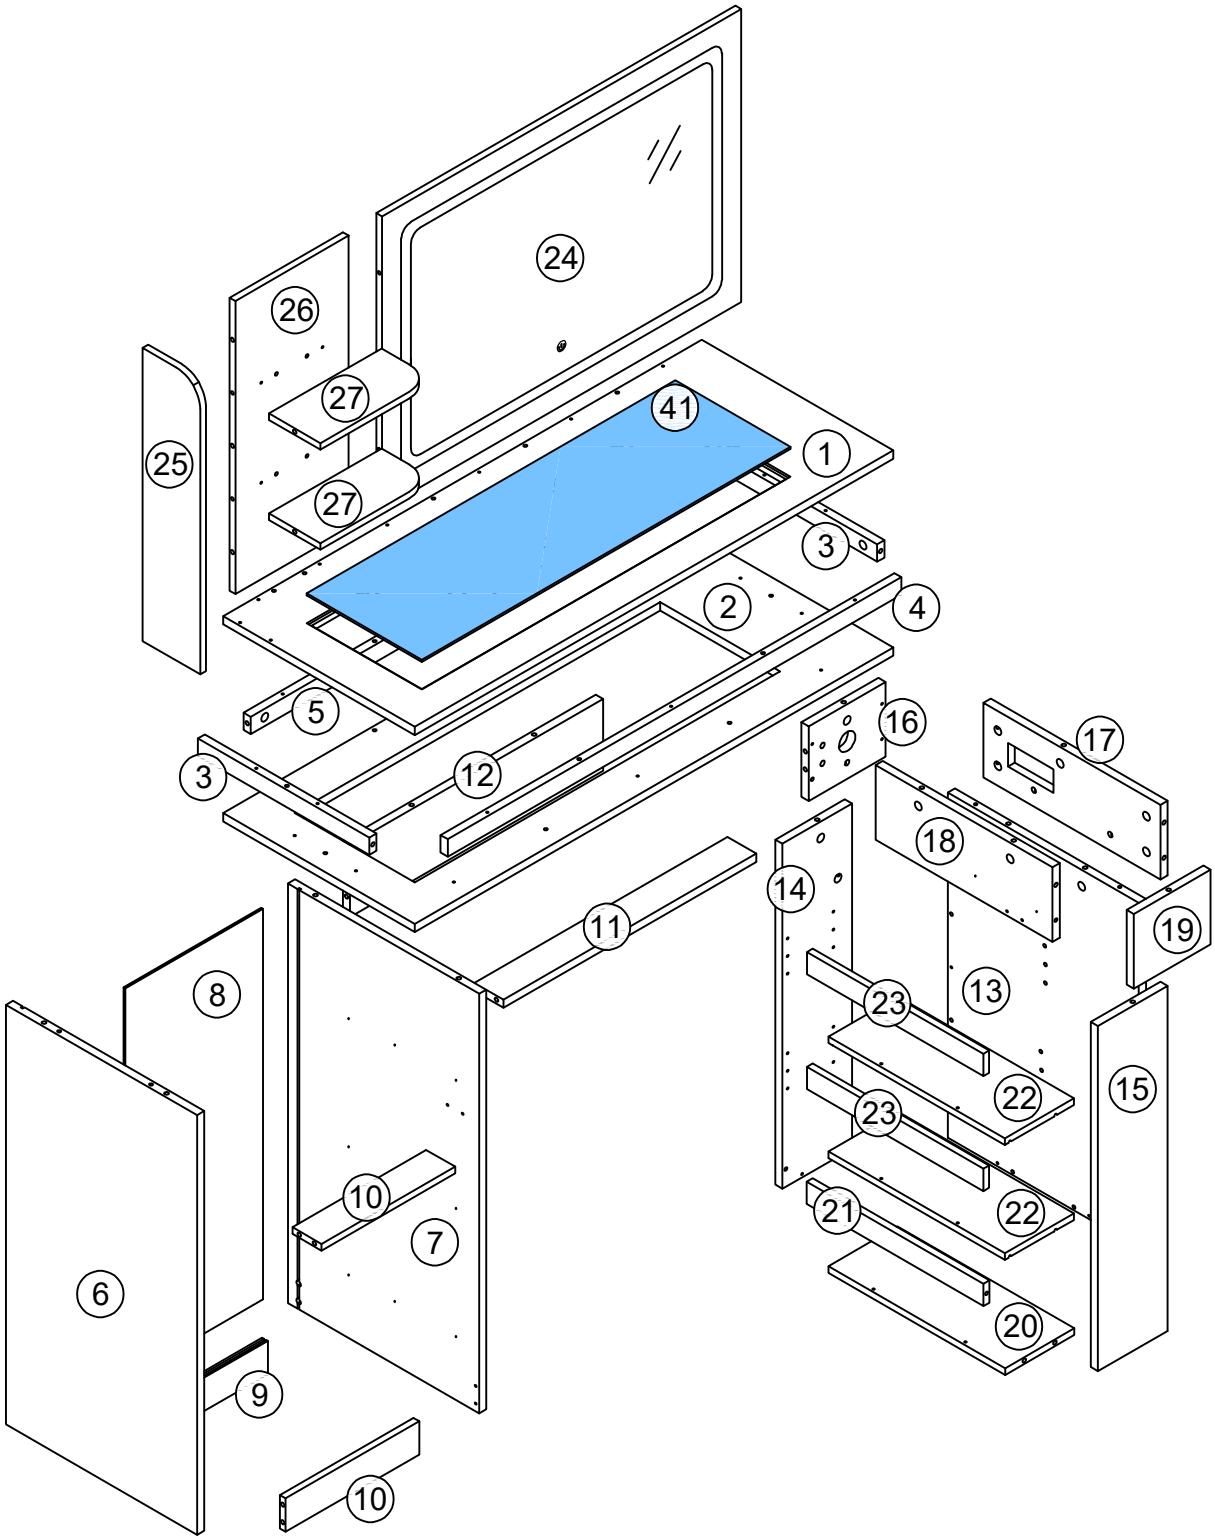


EXPLODED

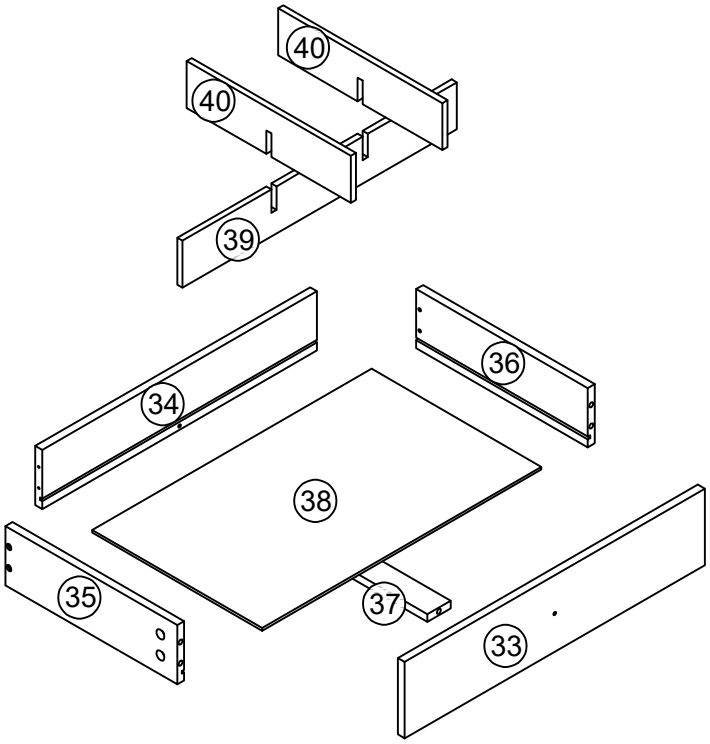


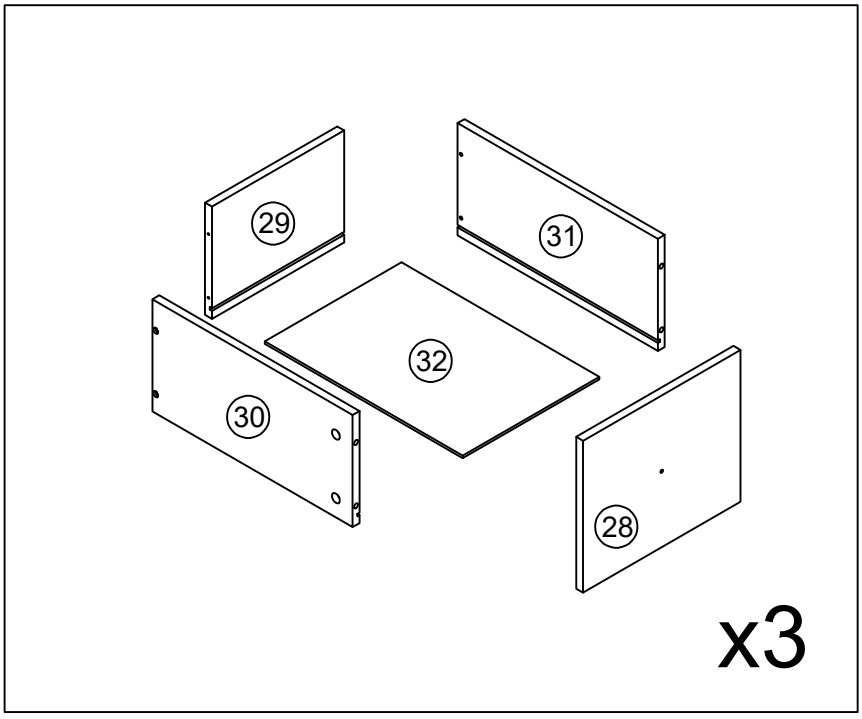


Accessories list

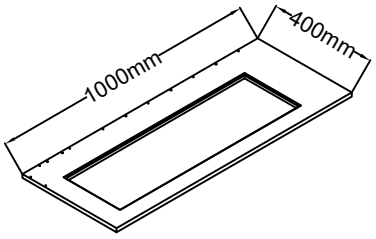


① Qty:1

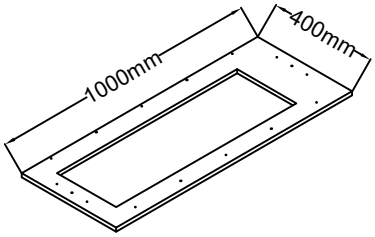


② Qty:1

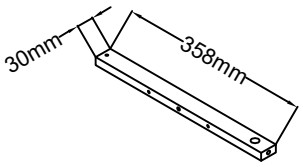


③ Qty:2

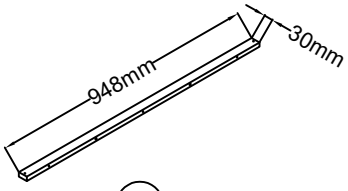


④ Qty:1

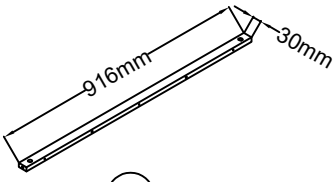


⑤ Qty:1

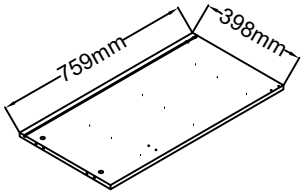


⑥ Qty:1

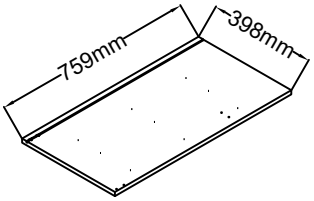


⑦ Qty:1

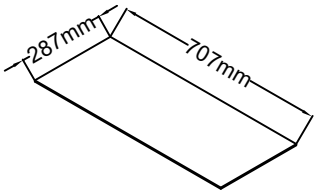


⑧ Qty:1

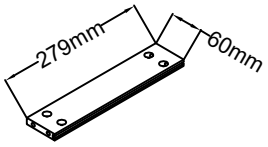


⑨ Qty:1

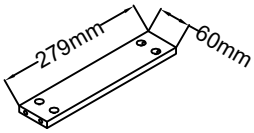


⑩ Qty:2

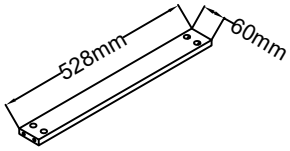


⑪ Qty:1

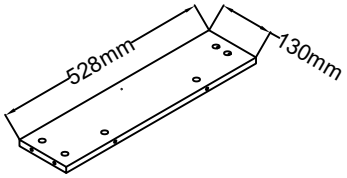


⑫ Qty:1

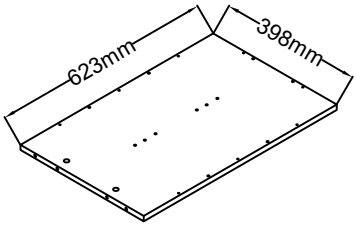

⑬ Qty:1

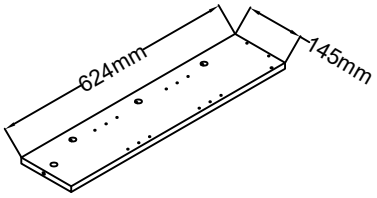


⑭ Qty:1

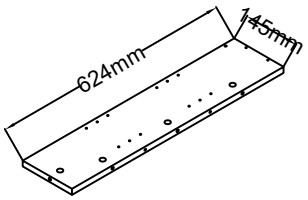


⑮ Qty:1

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

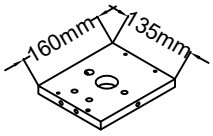


16
Qty:1

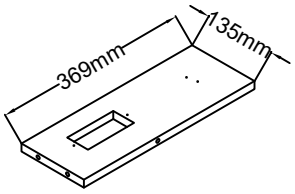


17
Qty:1

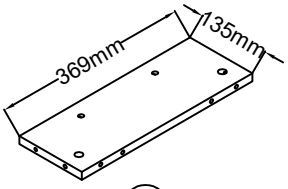


18
Qty:1

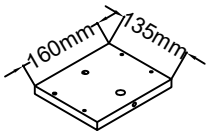


19
Qty:1

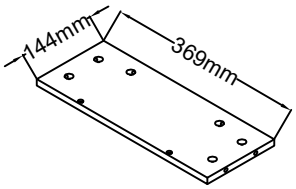


20
Qty:1

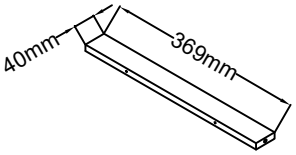


21
Qty:1

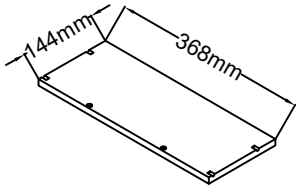


22
Qty:2

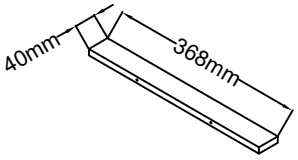


23
Qty:2

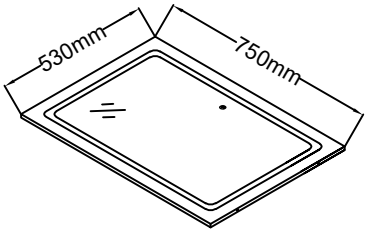


24
Qty1

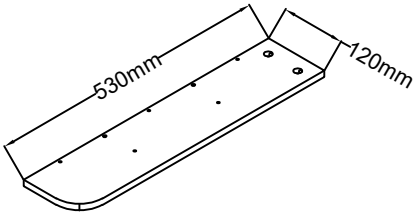


25
Qty1

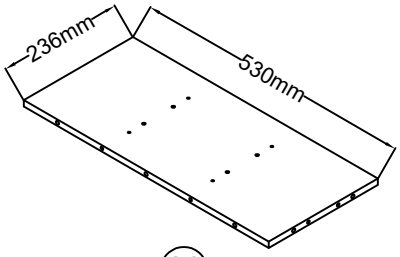


26
Qty:1

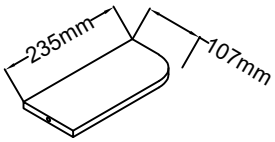


27
Qty:2

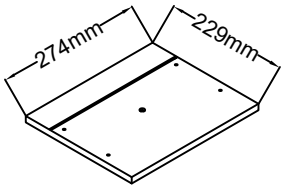

28
Qty:3

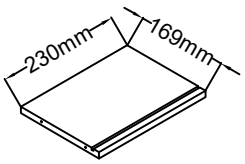


29
Qty:3

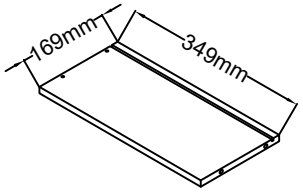


30
Qty:3

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

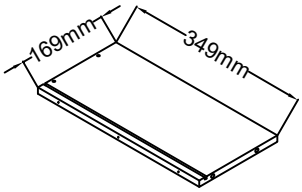


31
Qty:3

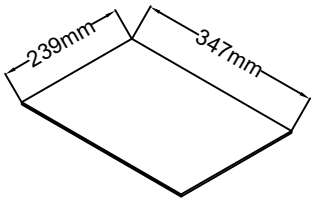


32
Qty:3

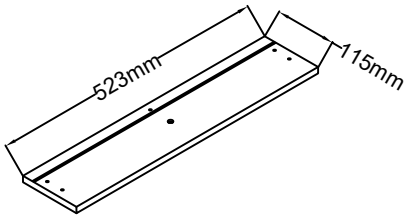


33
Qty1

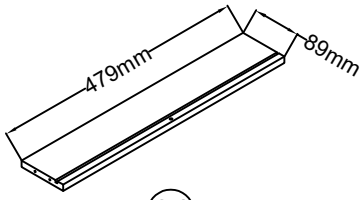


34
Qty:1

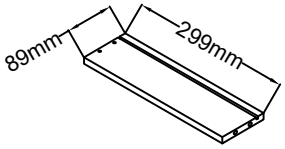


35
Qty:1

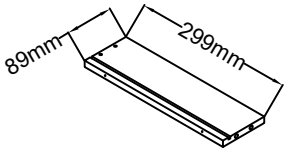


36
Qty:1

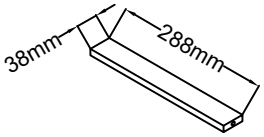


37
Qty:1

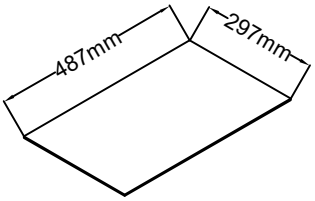


38
Qty:1

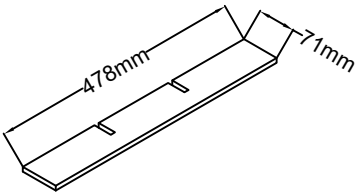

39
Qty:1

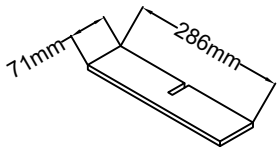












40
Qty:2

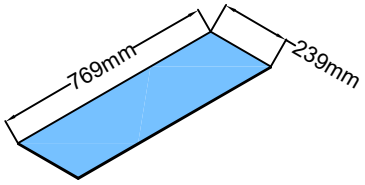

41
Qty:1

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

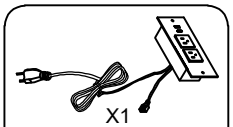X81+2	 X87+2	X28+2	X27+1	 X1
Ⓐ M6.5X35mm	Ⓑ 15X9.5mm	Ⓒ M6X30mm	Ⓓ M4X40mm	Ⓔ
 X52+1	 X1	 X1	 X2	 X6
Ⓕ M3.5X12mm	Ⓖ 3mm	Ⓗ	Ⓘ M4X12mm	Ⓙ
 X6	 X6	X10	 X4	 X4
Ⓚ M3X14mm	Ⓛ	Ⓜ M5X50mm	Ⓝ	Ⓞ M4X22mm
 X2	X6	X6	 X8	 X4
Ⓟ	Ⓠ M6X50mm	Ⓡ M60mm	Ⓢ	Ⓣ
 X1	 X8	 X14	X2	 X3
Ⓤ	Ⓥ	Ⓦ 20mm	Ⓧ M3.5X12mm	Ⓒⓛ 350mm
 X3	 X3	 X3	 X1	 X1
Ⓒⓡ 350mm	Ⓓⓡ 350mm	Ⓓⓛ 350mm	Ⓒⓛ 300mm	Ⓒⓡ 300mm
 X1	 X1	 X1		
Ⓓⓡ 300mm	Ⓓⓛ 300mm			


In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.





x3

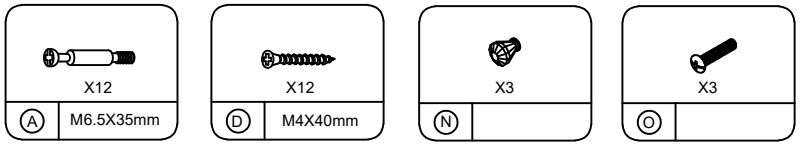


The common steps for the installation methods of the first and second structures are 1 to 15.

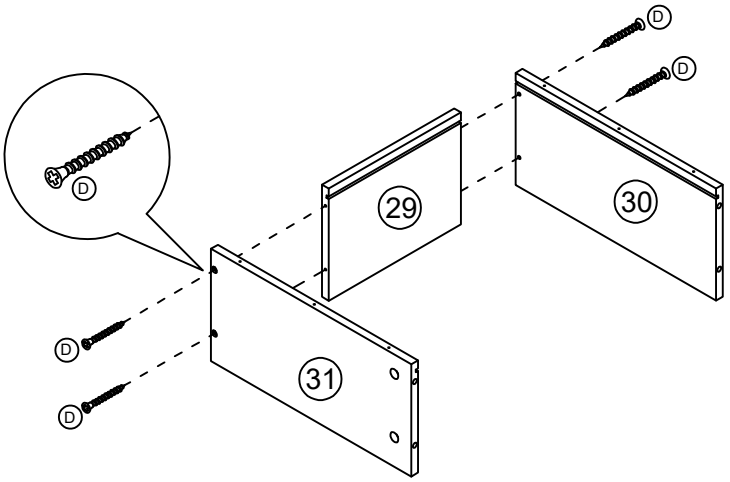

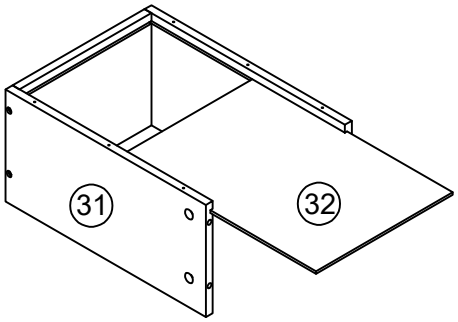


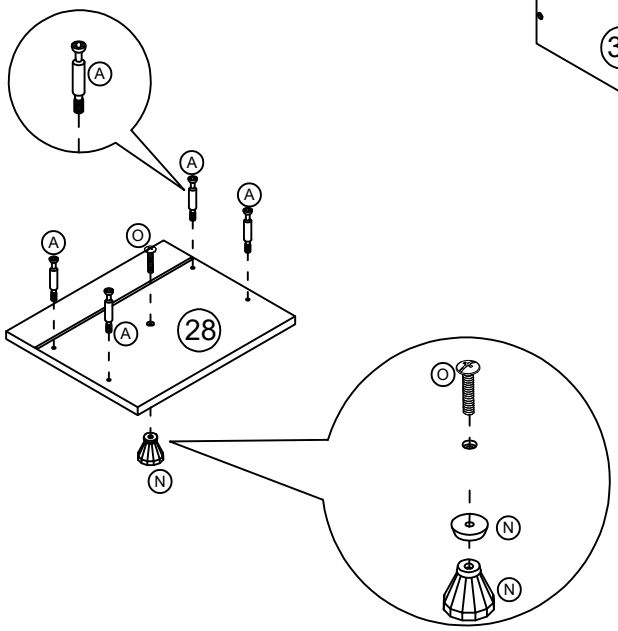


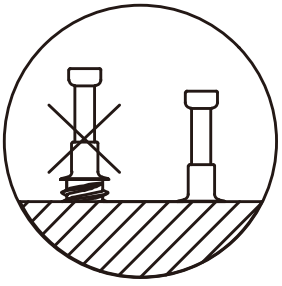




x3

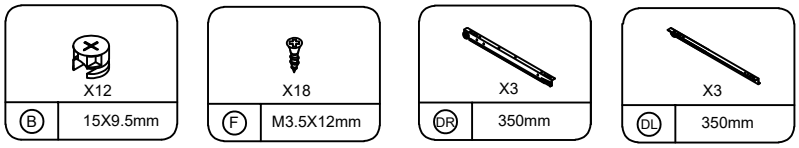


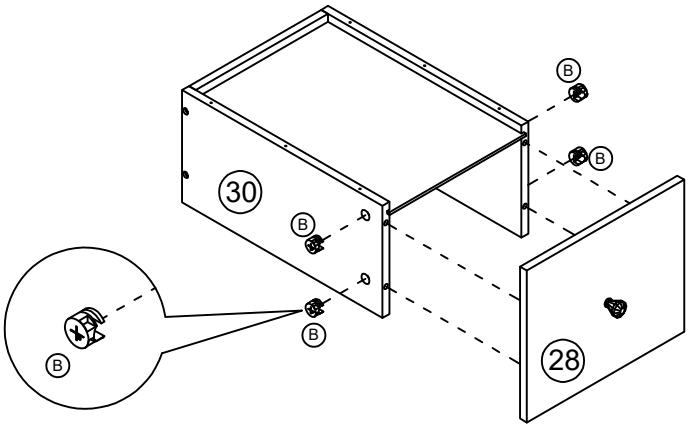


Note that the length of DR DL is 350mm.

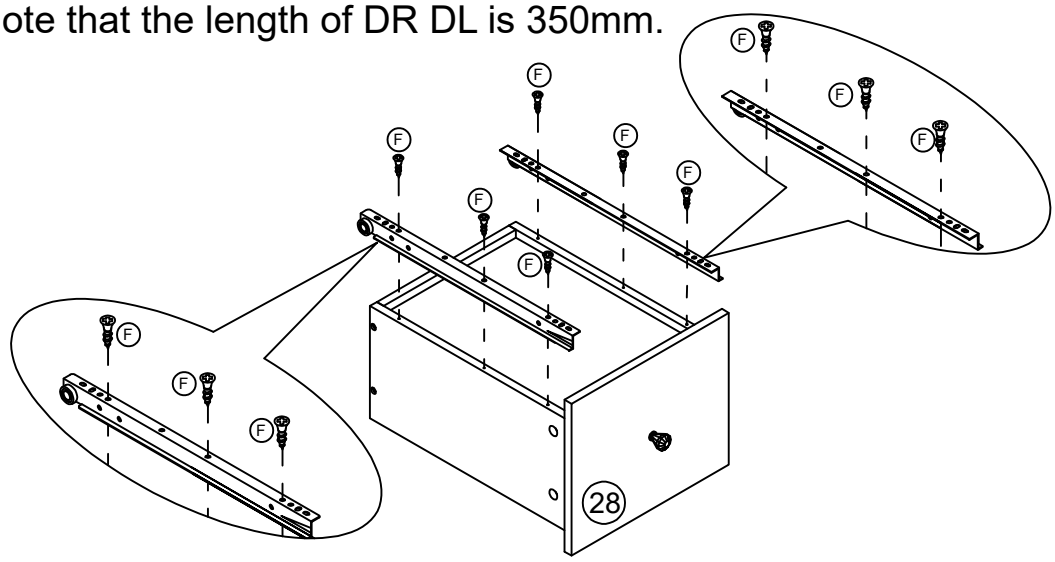


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

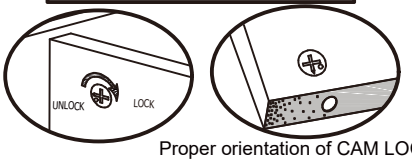


Proper orientation of CAM LOCK

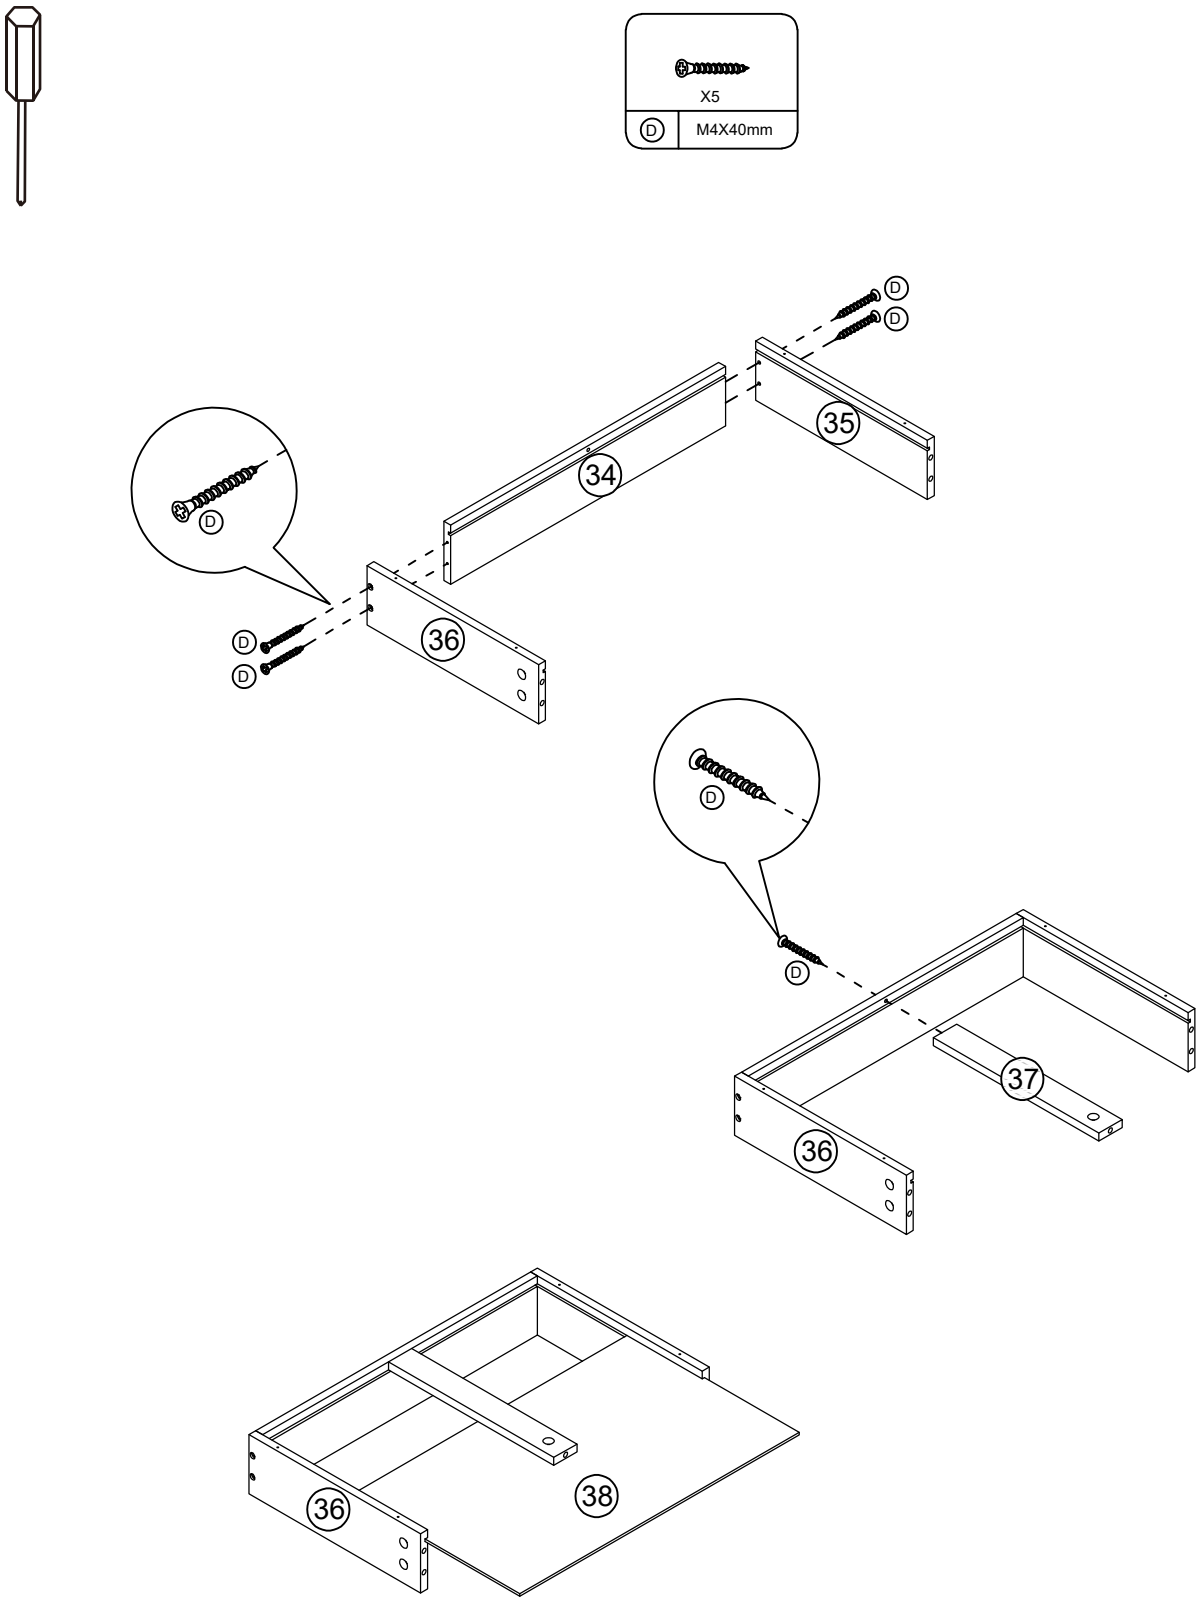

X5
D
M4X40mm
D
D
35
34
D
36
D
D
37
36
36
38



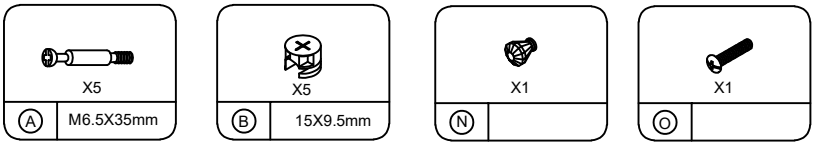


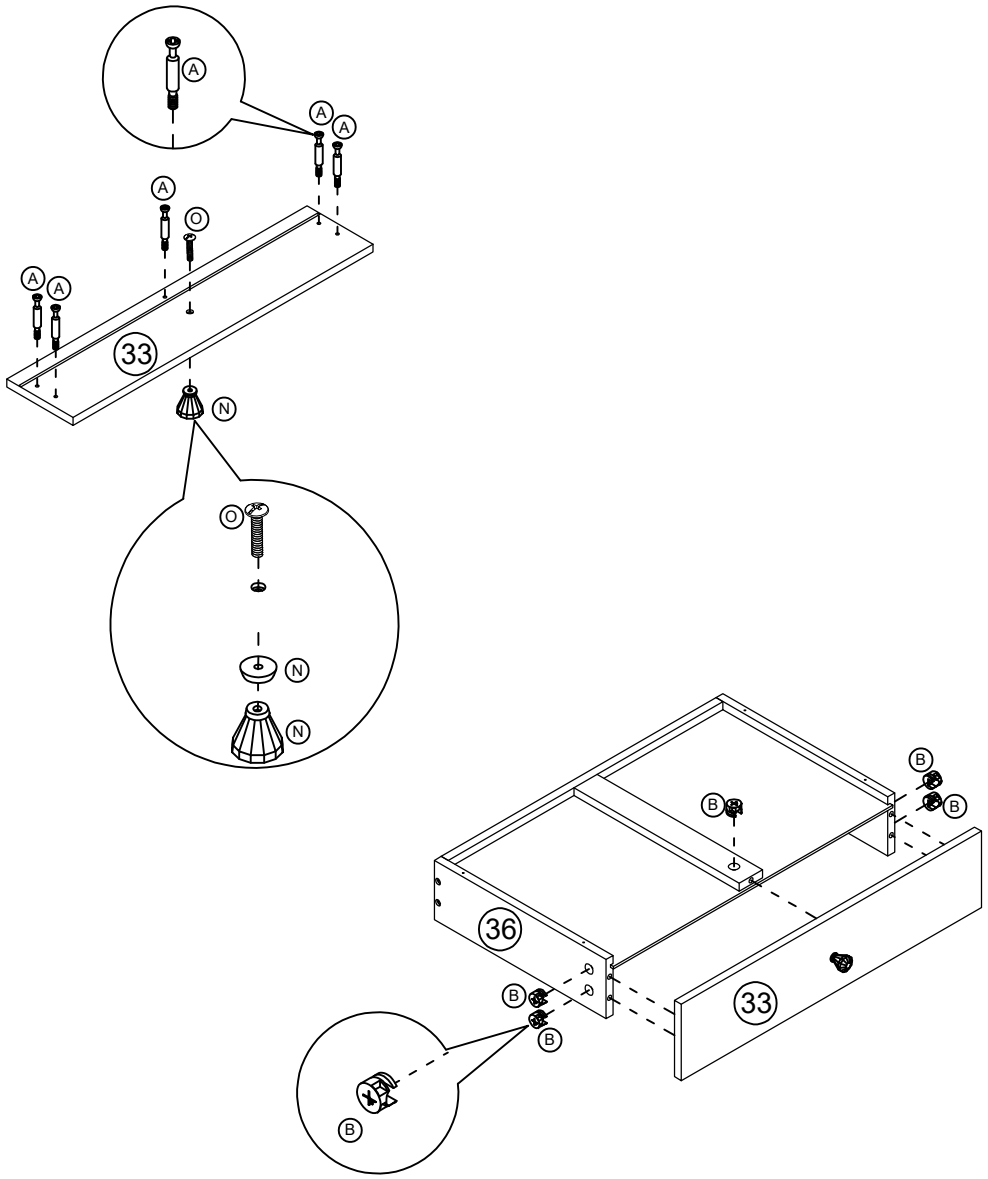

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

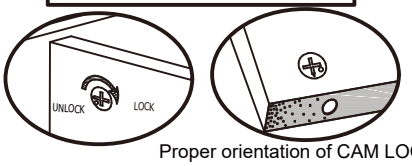


Proper orientation of CAM LOCK

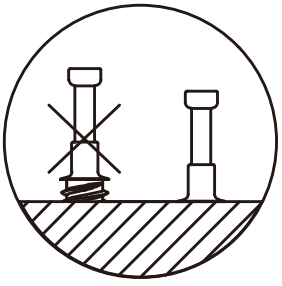



step 5




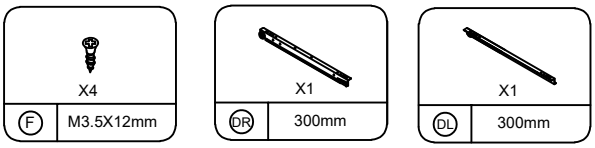


Note that the length of DR DL is 300mm.

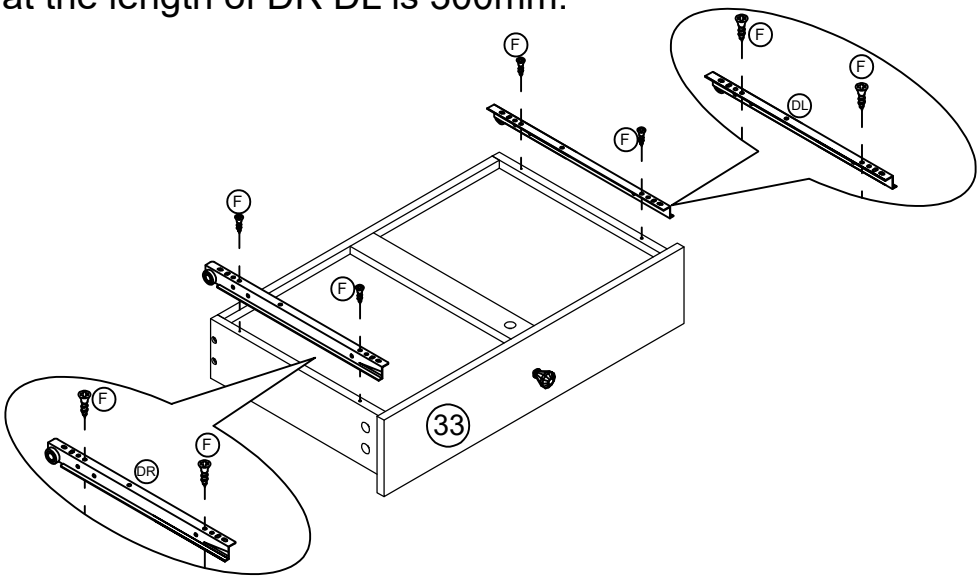


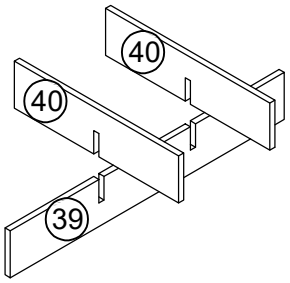

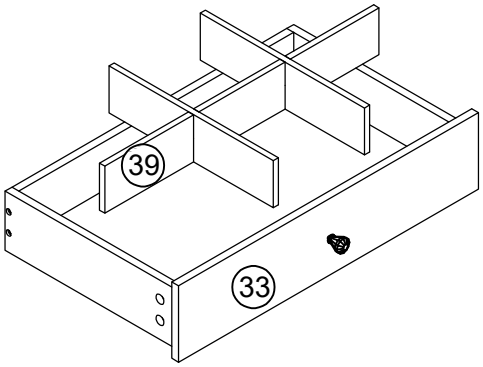




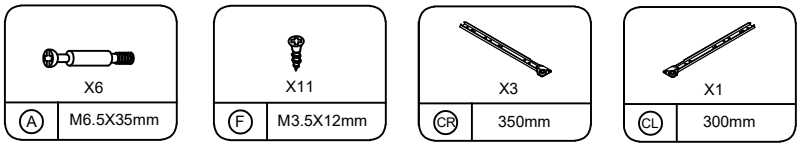


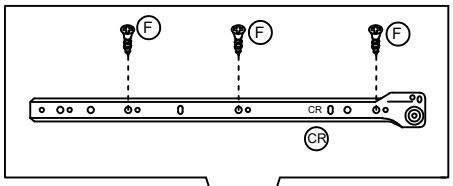


Note that the CR length is 350mm.

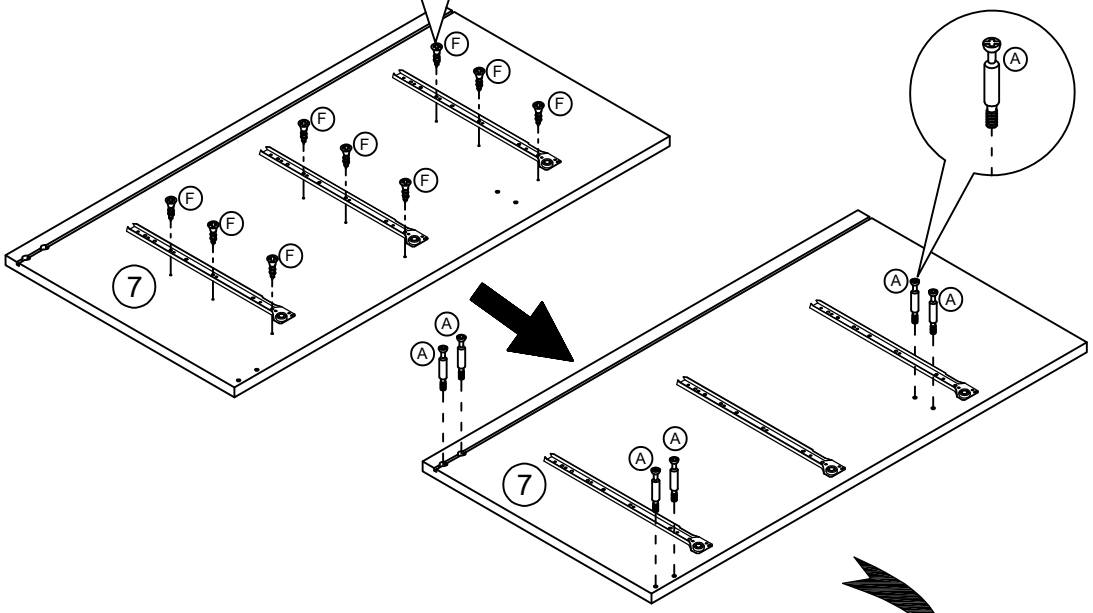


180!

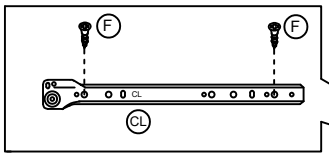



Note that the CL length is 300mm.

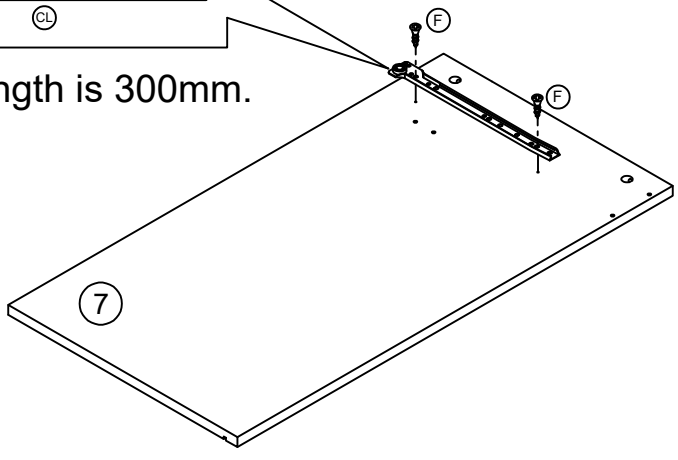

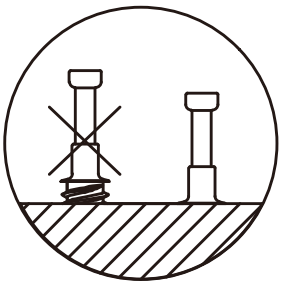





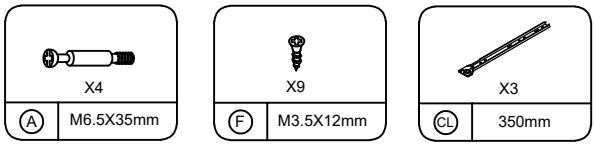

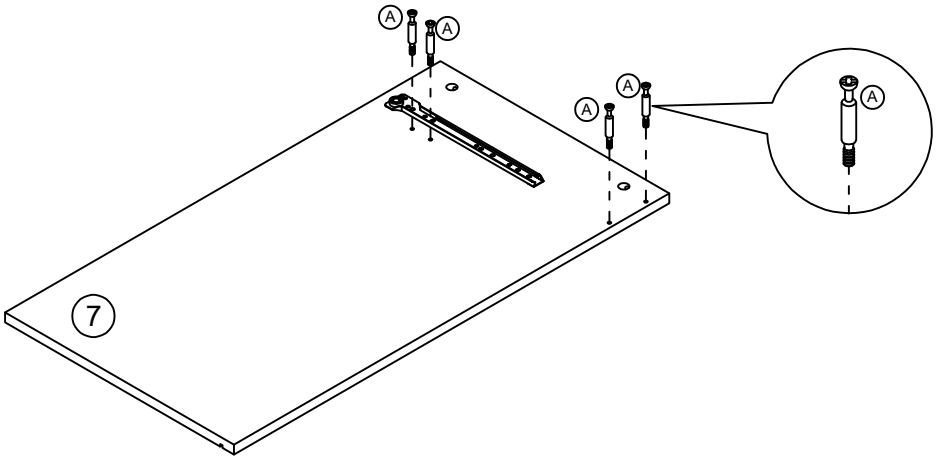


Note that the CL length is 350mm.

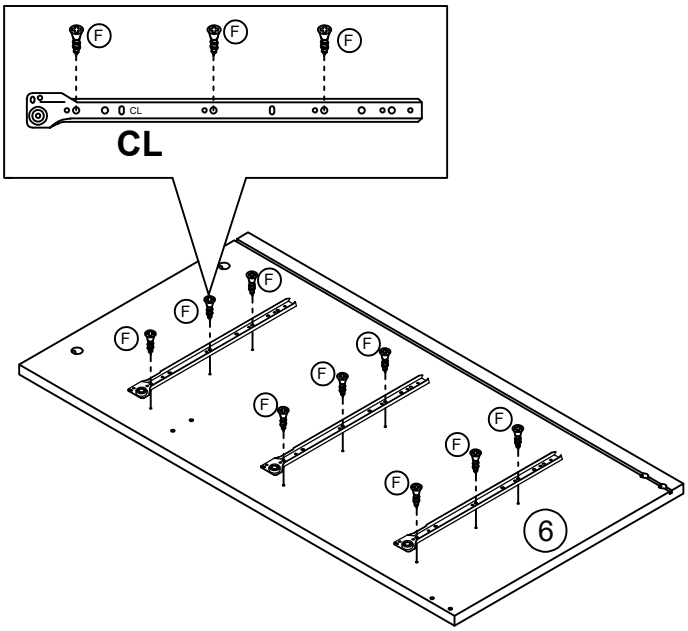


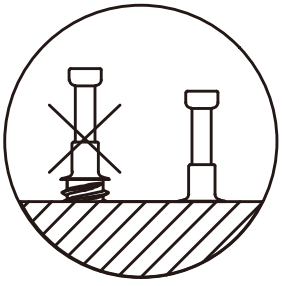


step 8




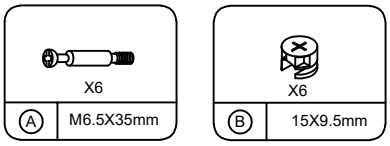

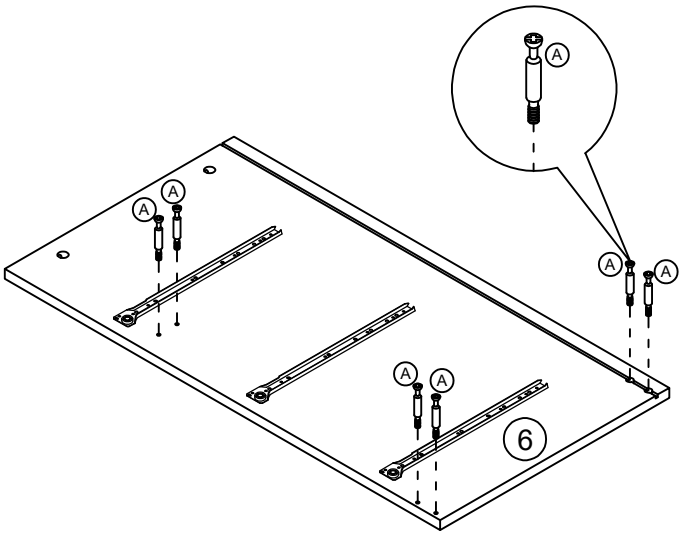


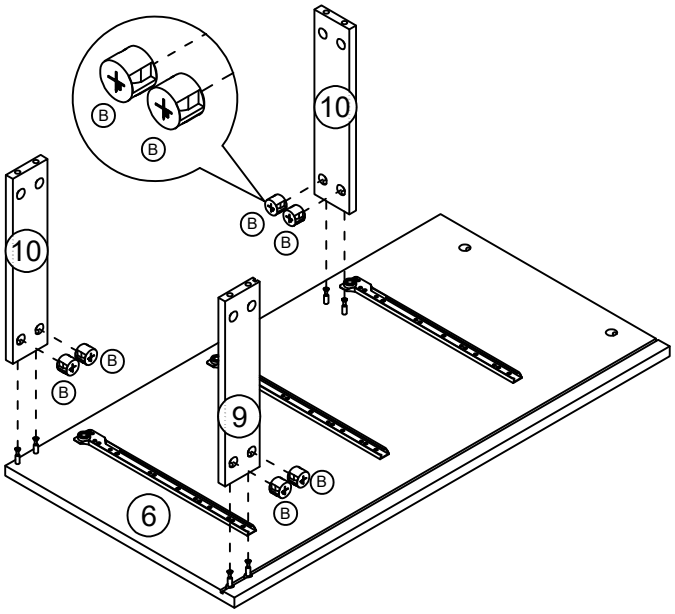

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

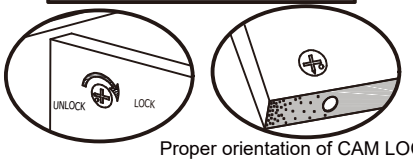



Proper orientation of CAM LOCK

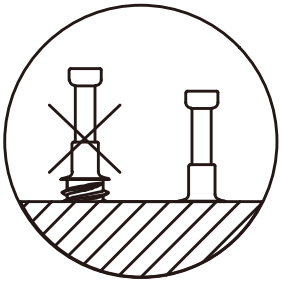


step 9



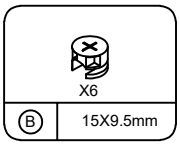


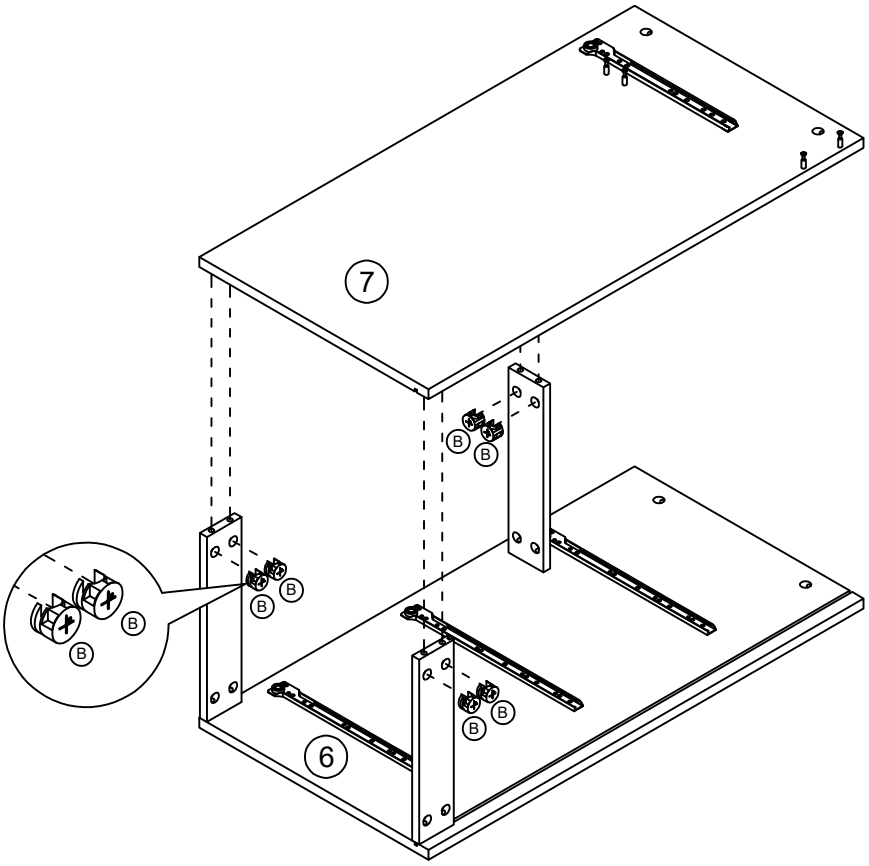



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

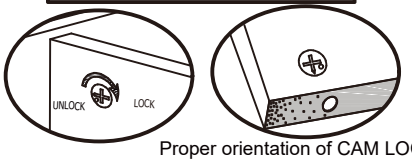


Proper orientation of CAM LOCK

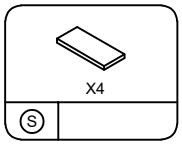

X4
S

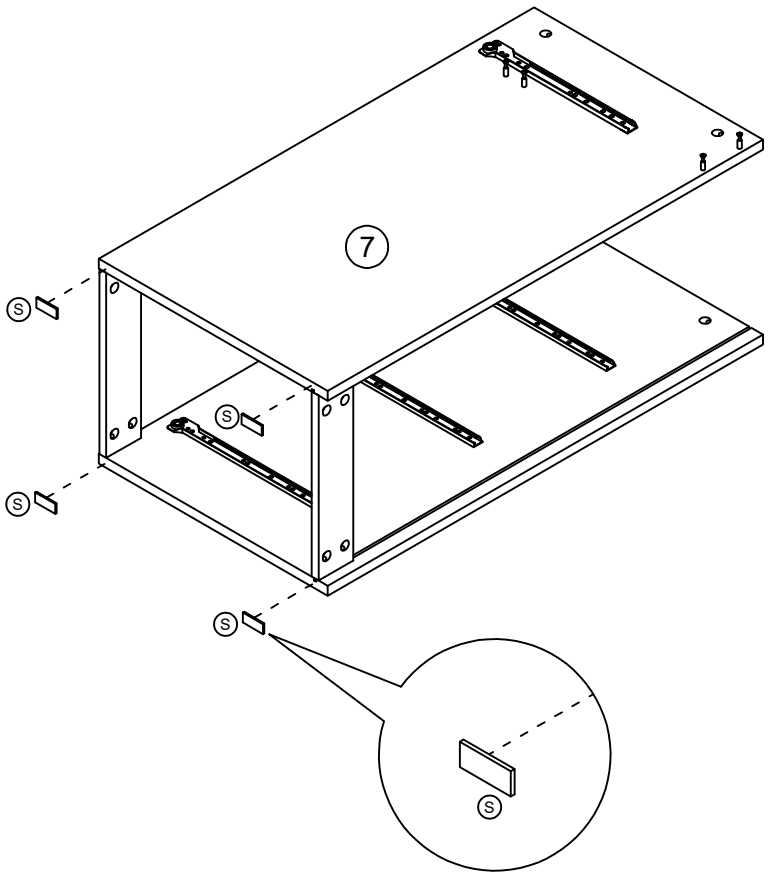

7
S
S
S
S

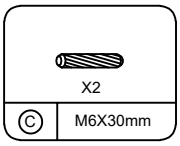

X2
C
M6X30mm

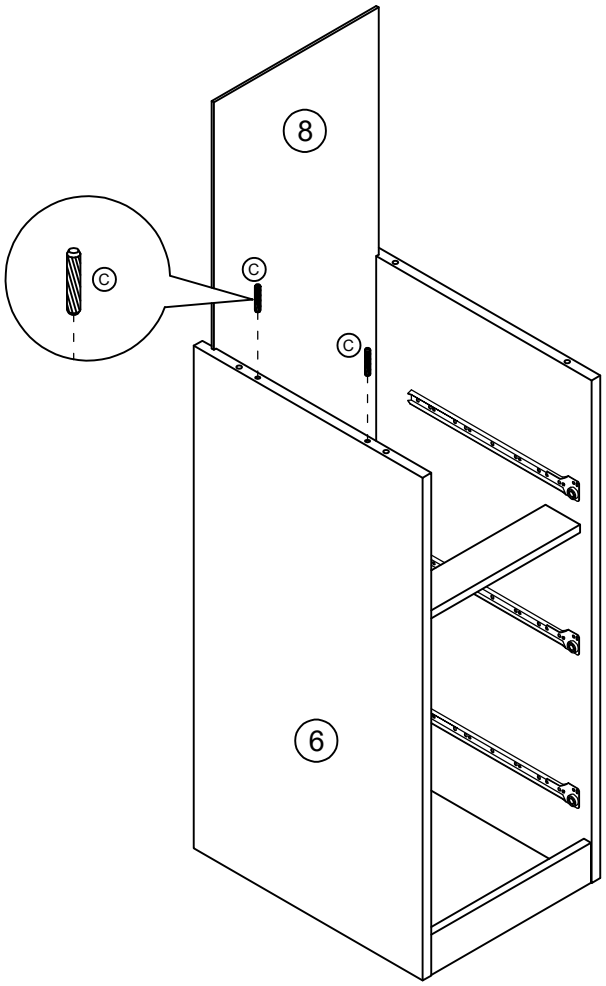

8
C
C
C
6

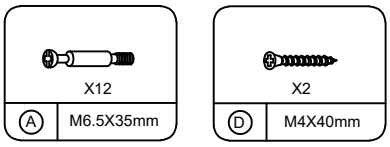




X12
A
M6.5X35mm
X2
D
M4X40mm

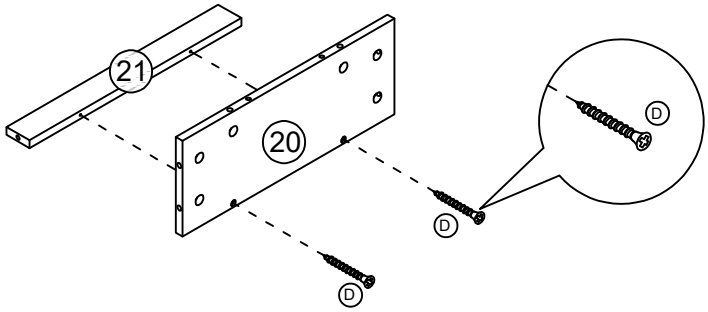
21
20
D
D
D

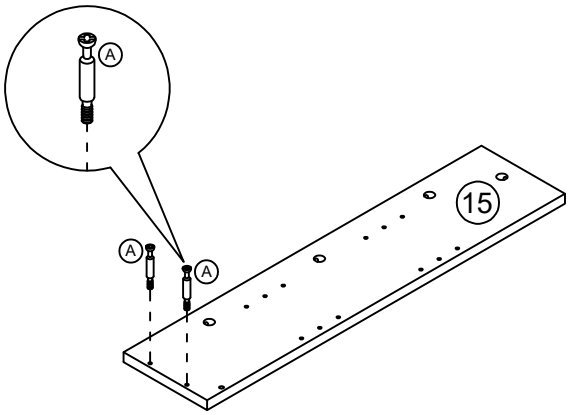

A
A
A
15

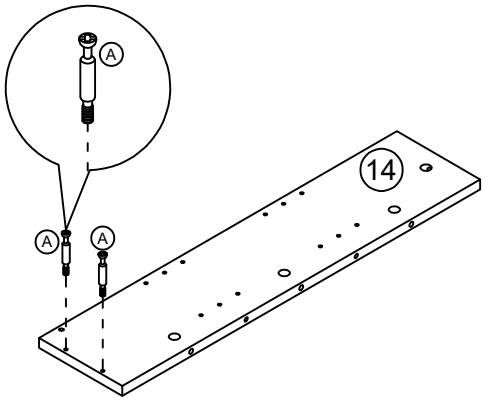

A
A
A
14

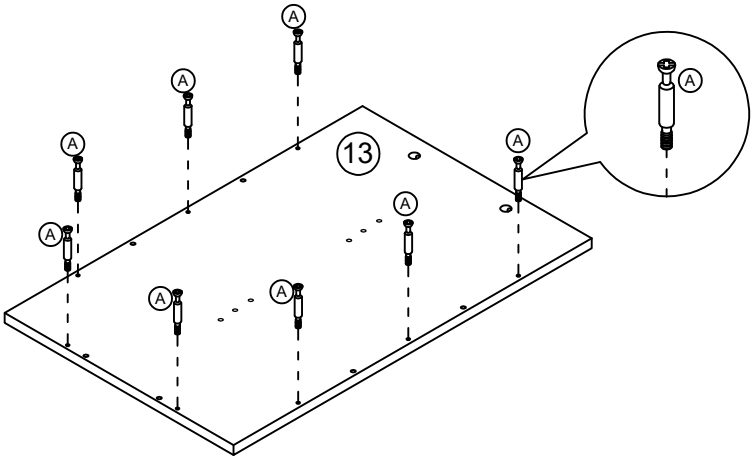

A
A
A
A
A
A
A
A
A
13

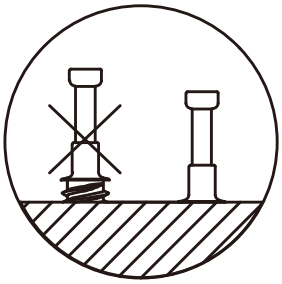




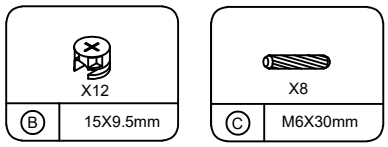

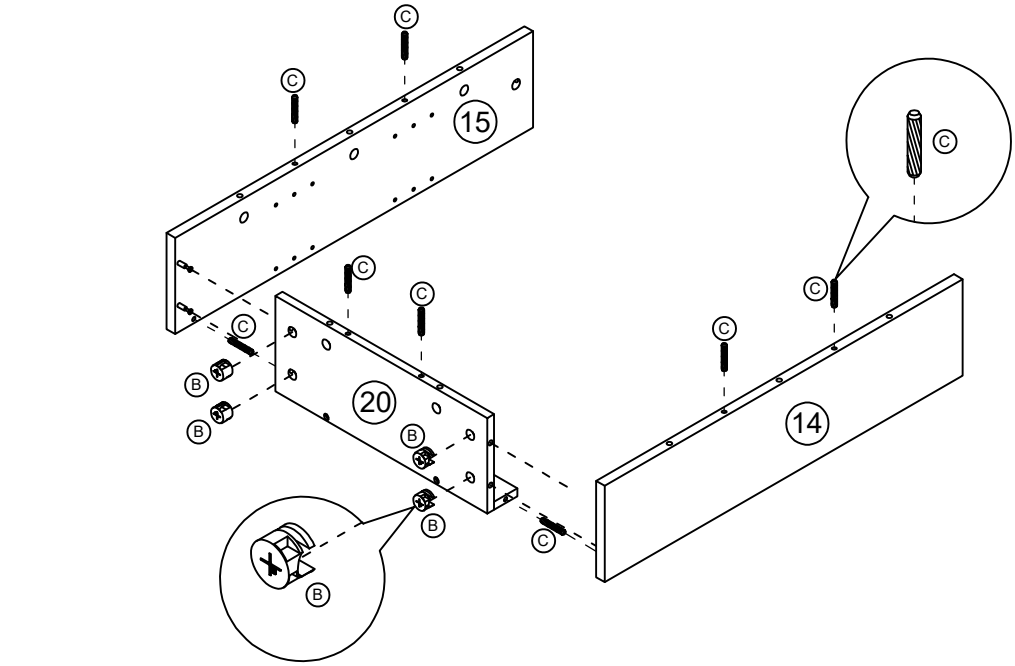


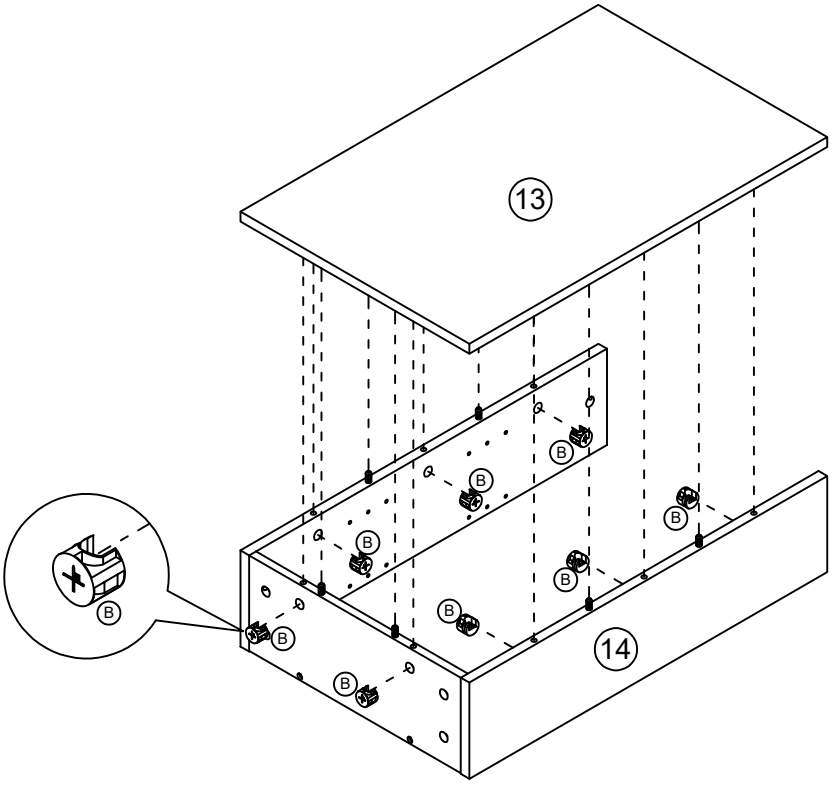


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

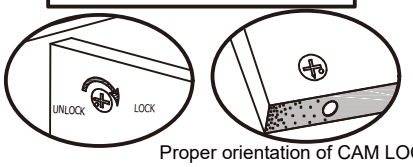



Proper orientation of CAM LOCK

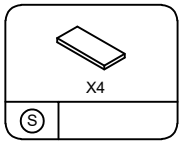

X4
S

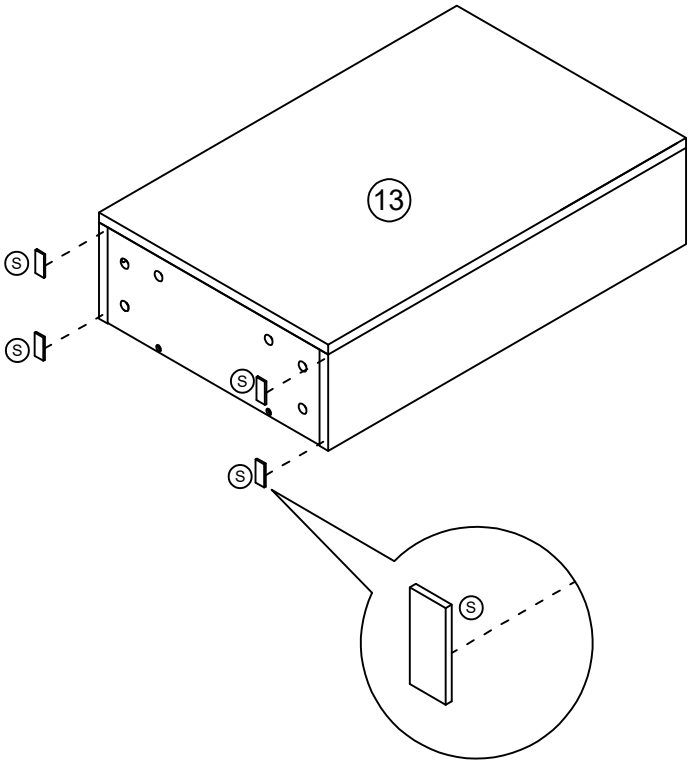

13
S
S
S
S
S

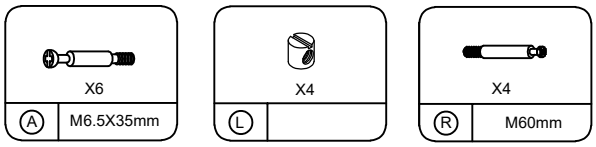



X6
A
M6.5X35mm
X4
L
X4
R
M60mm

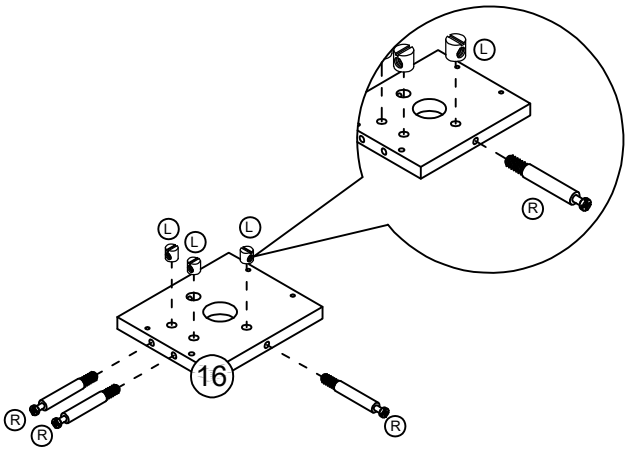
L
L
L
L
R
R
R
16

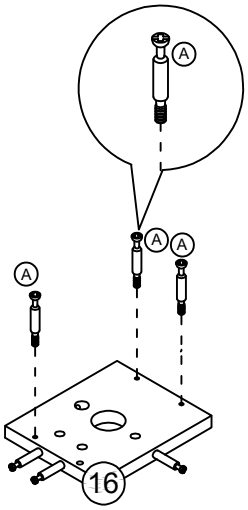
A
A
A
A
16

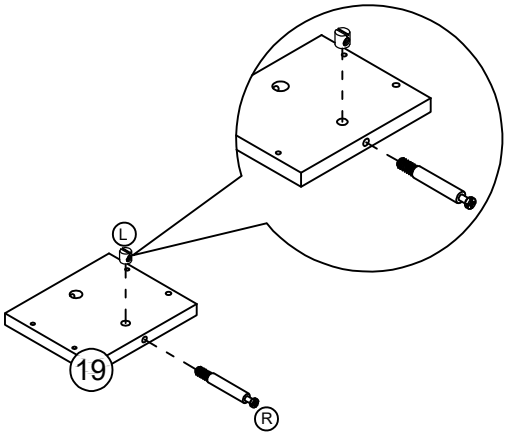
L
19
R

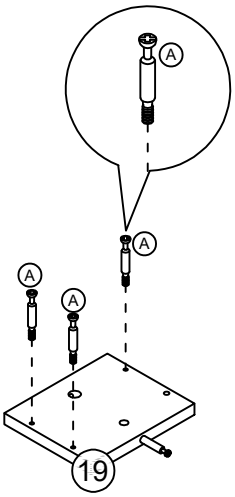
A
A
A
A
19

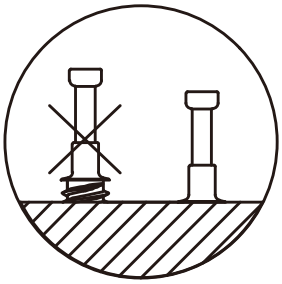
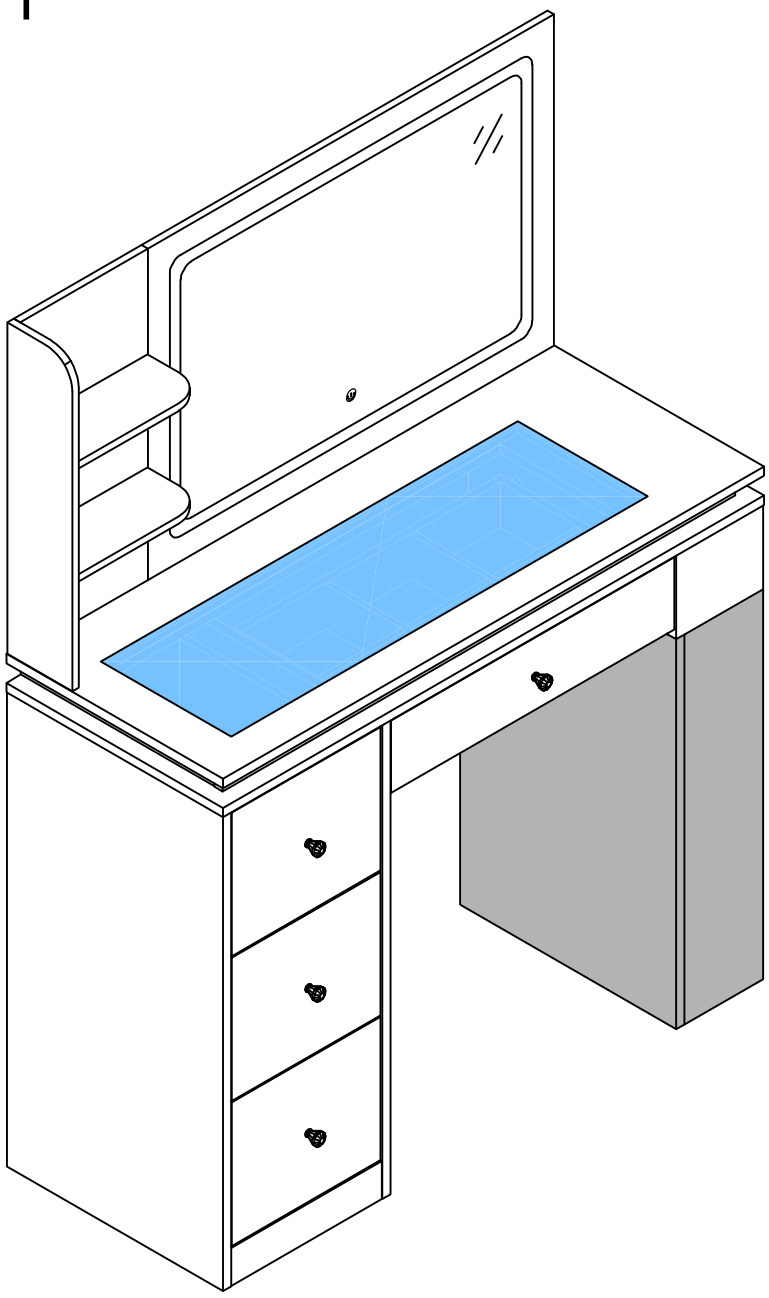


Figure 1






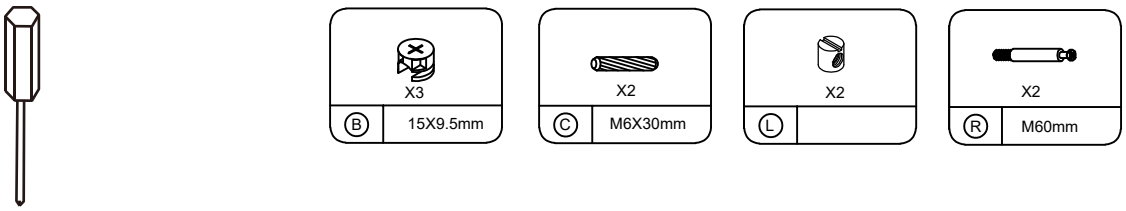


Figure 1：Steps 16 to 37 adopt the first installation method.

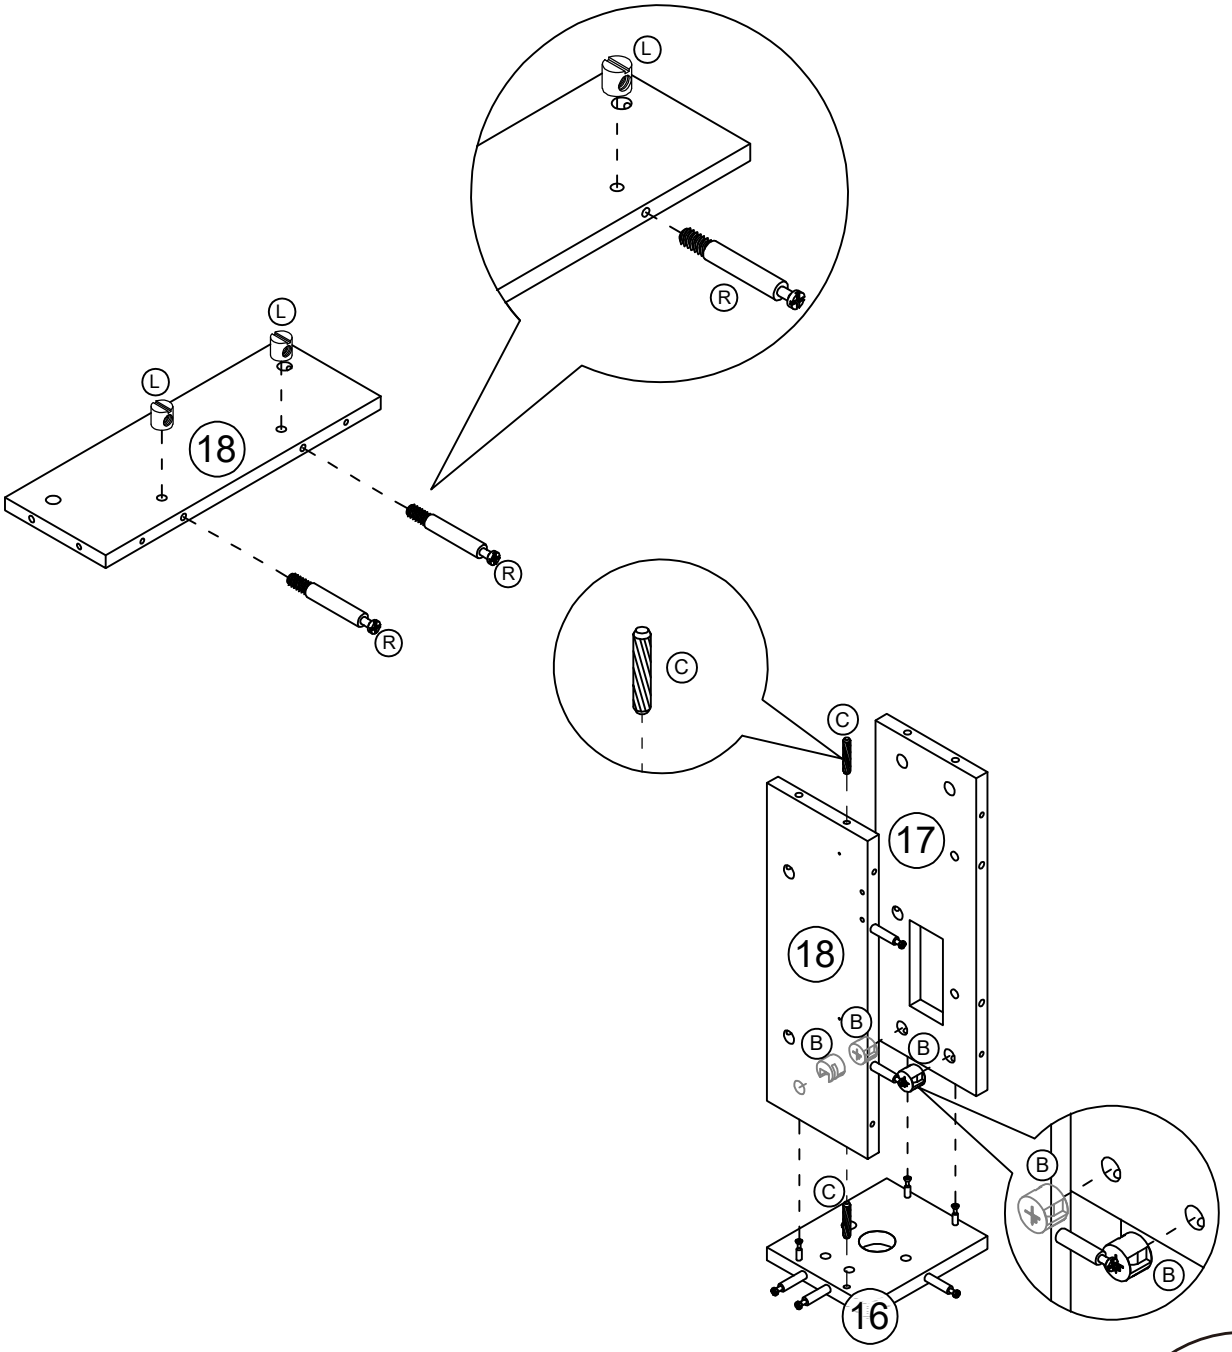

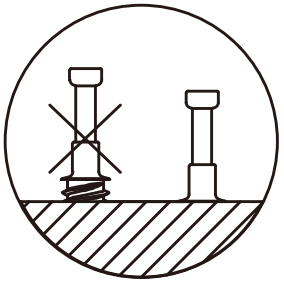



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

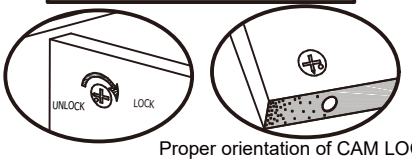


Proper orientation of CAM LOCK



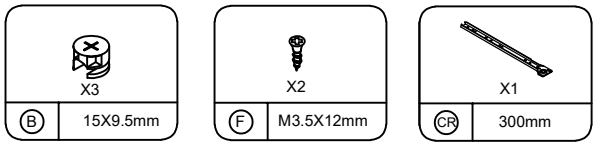


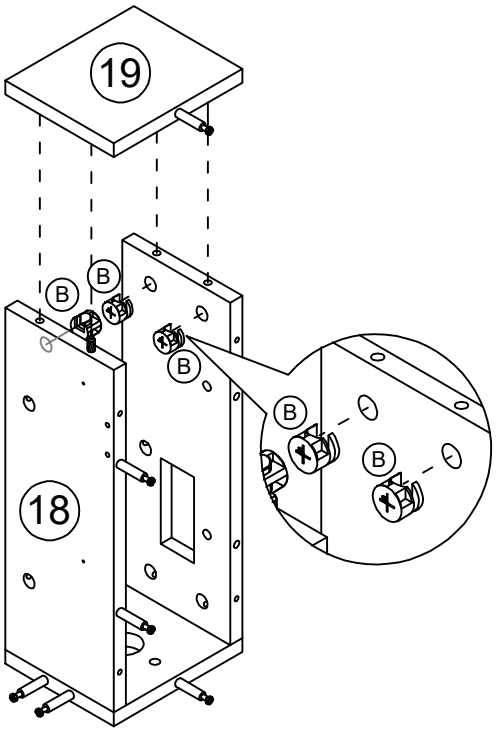

Note that the CR length is 300mm.

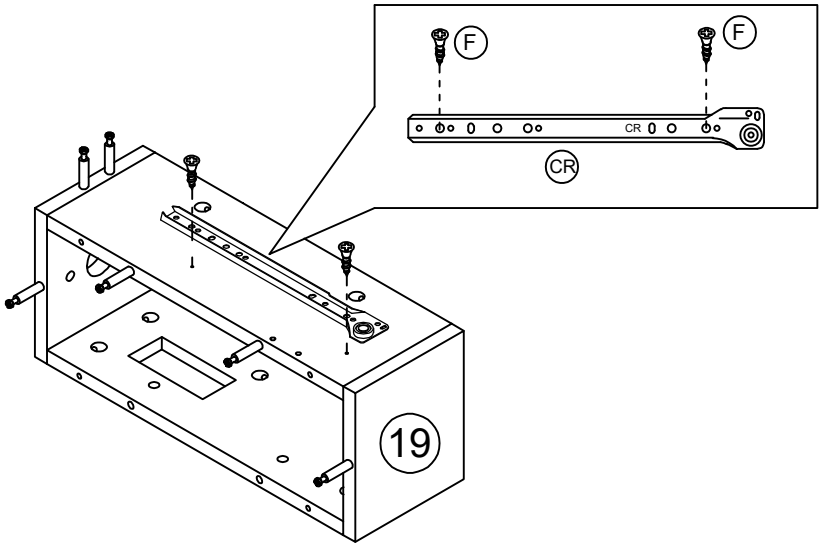


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

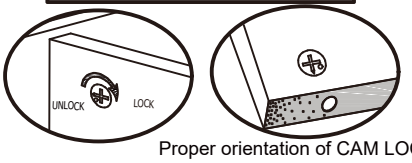



Proper orientation of CAM LOCK

step 18




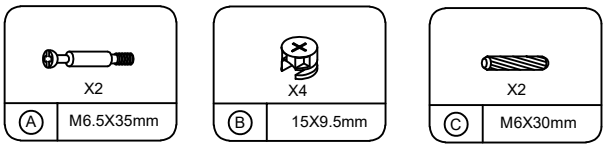

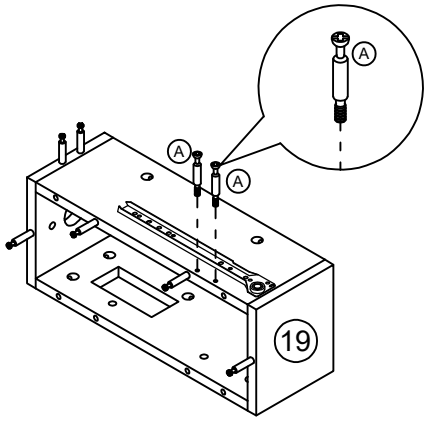


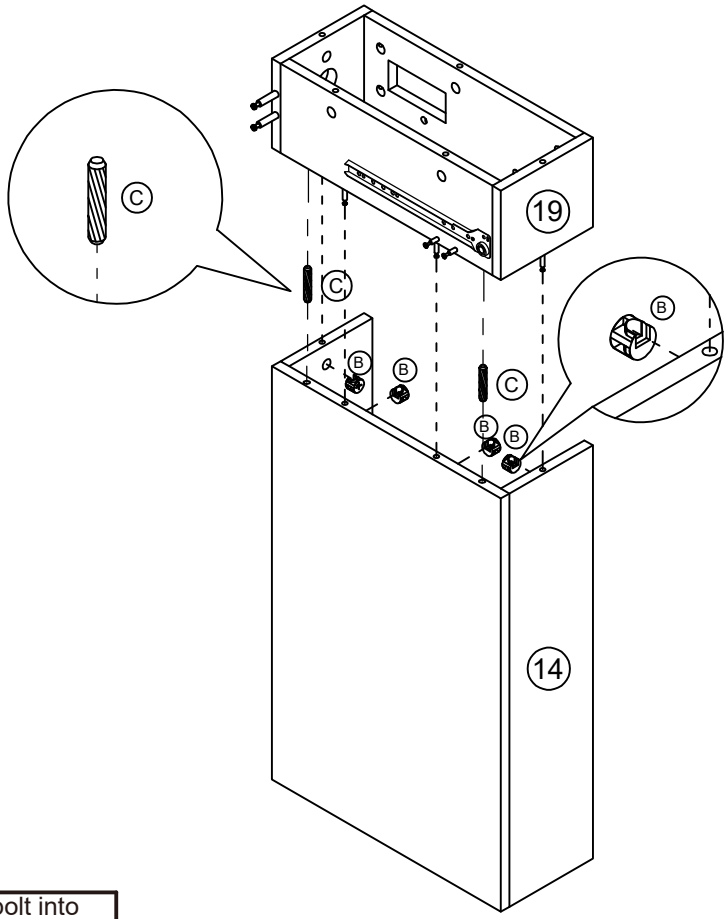


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

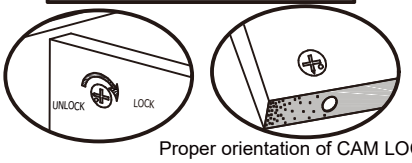


Proper orientation of CAM LOCK

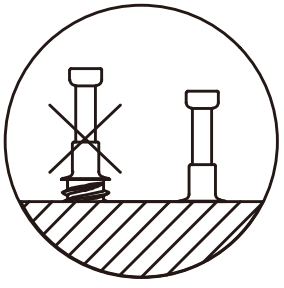




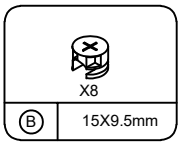

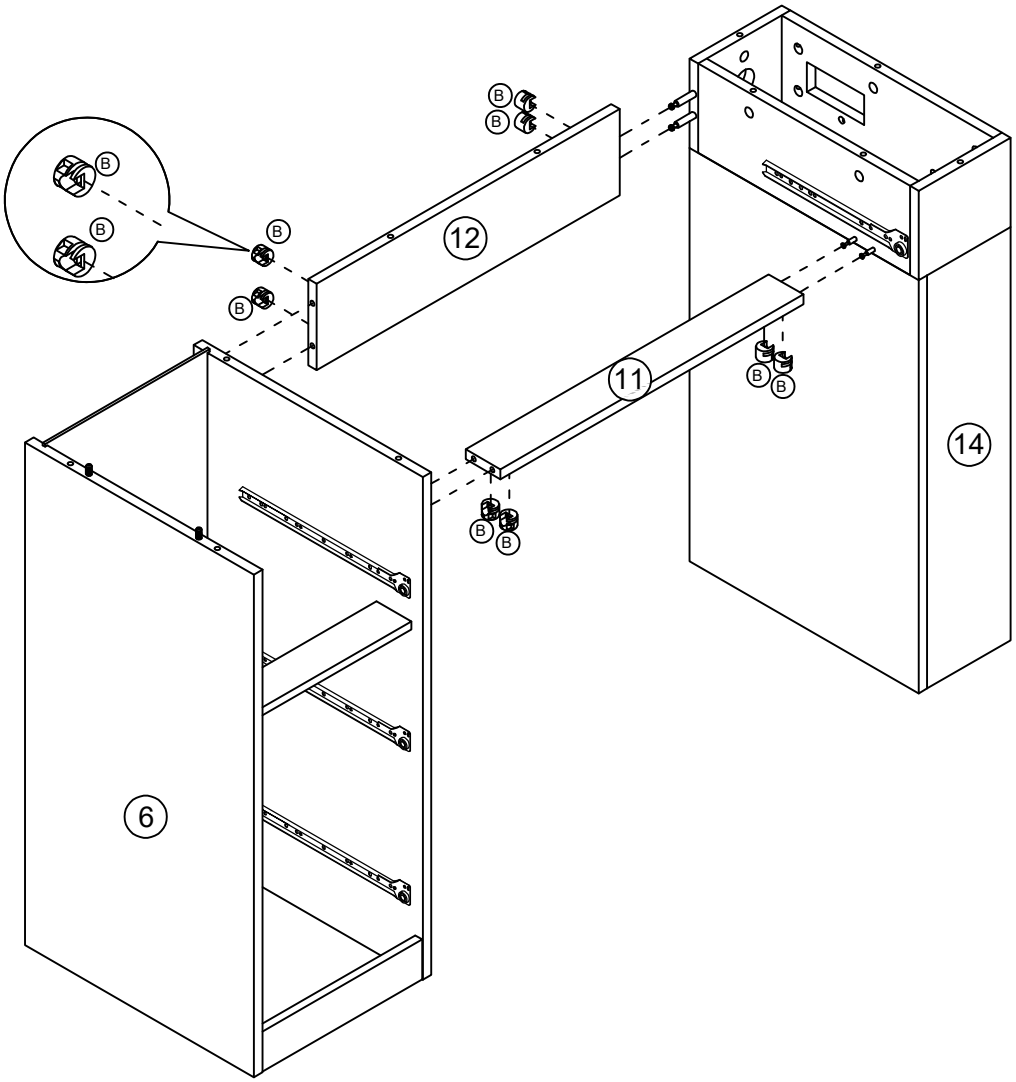



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

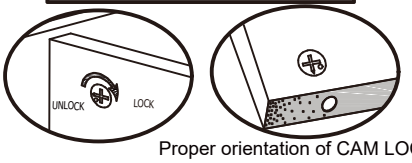


Proper orientation of CAM LOCK

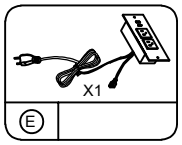



X1
E

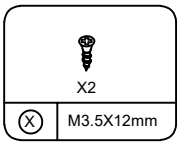

X2
X
M3.5X12mm

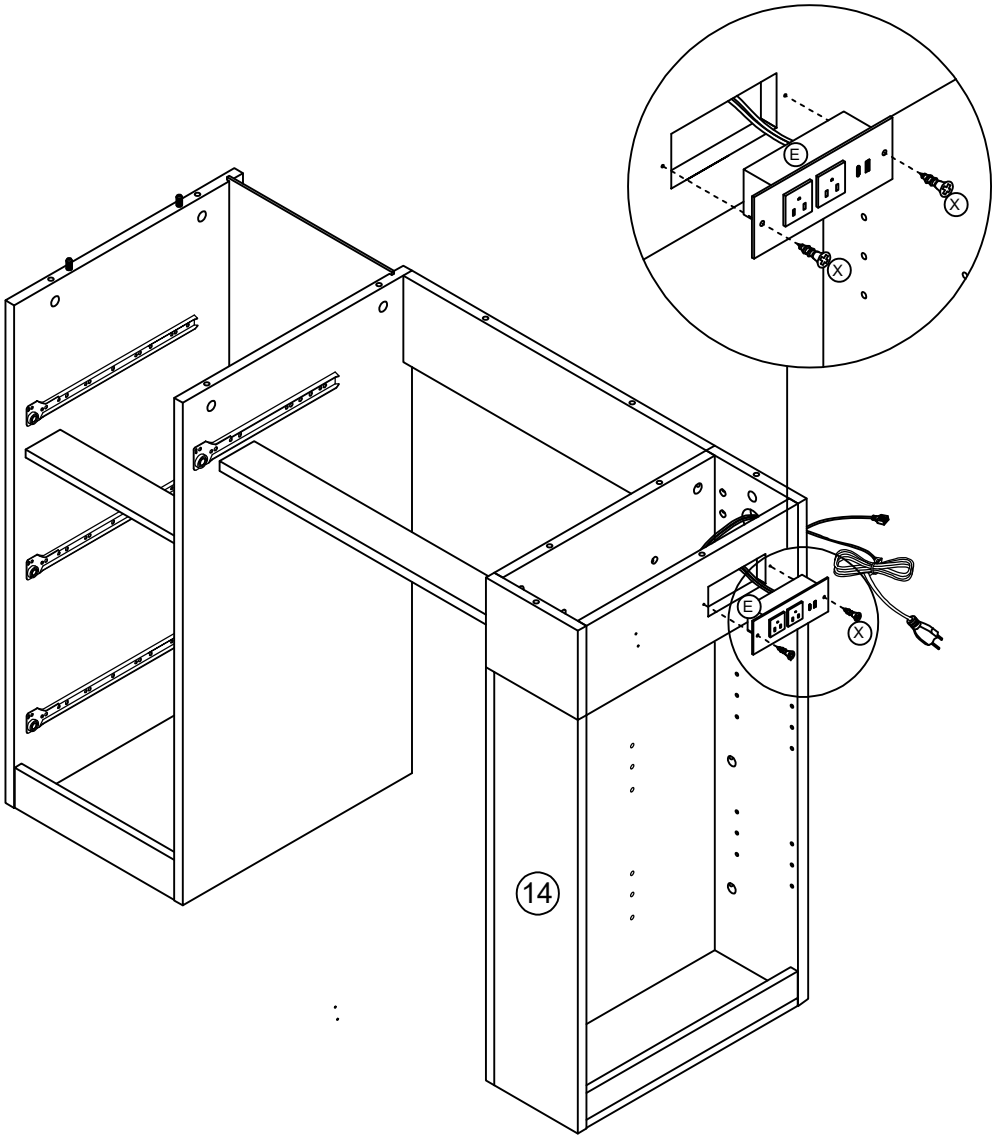
E
X
X
E
X
14


step 21




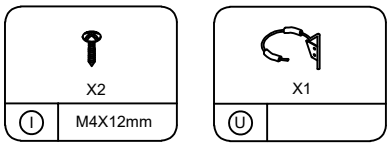

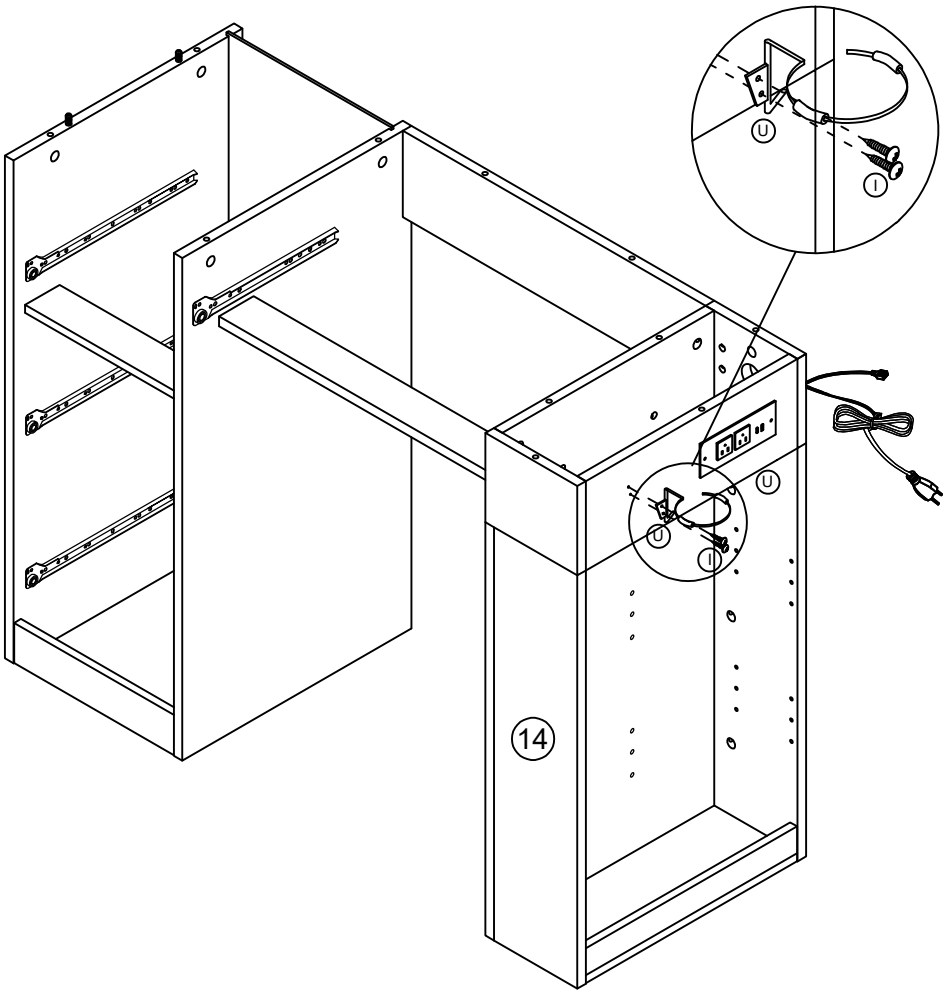


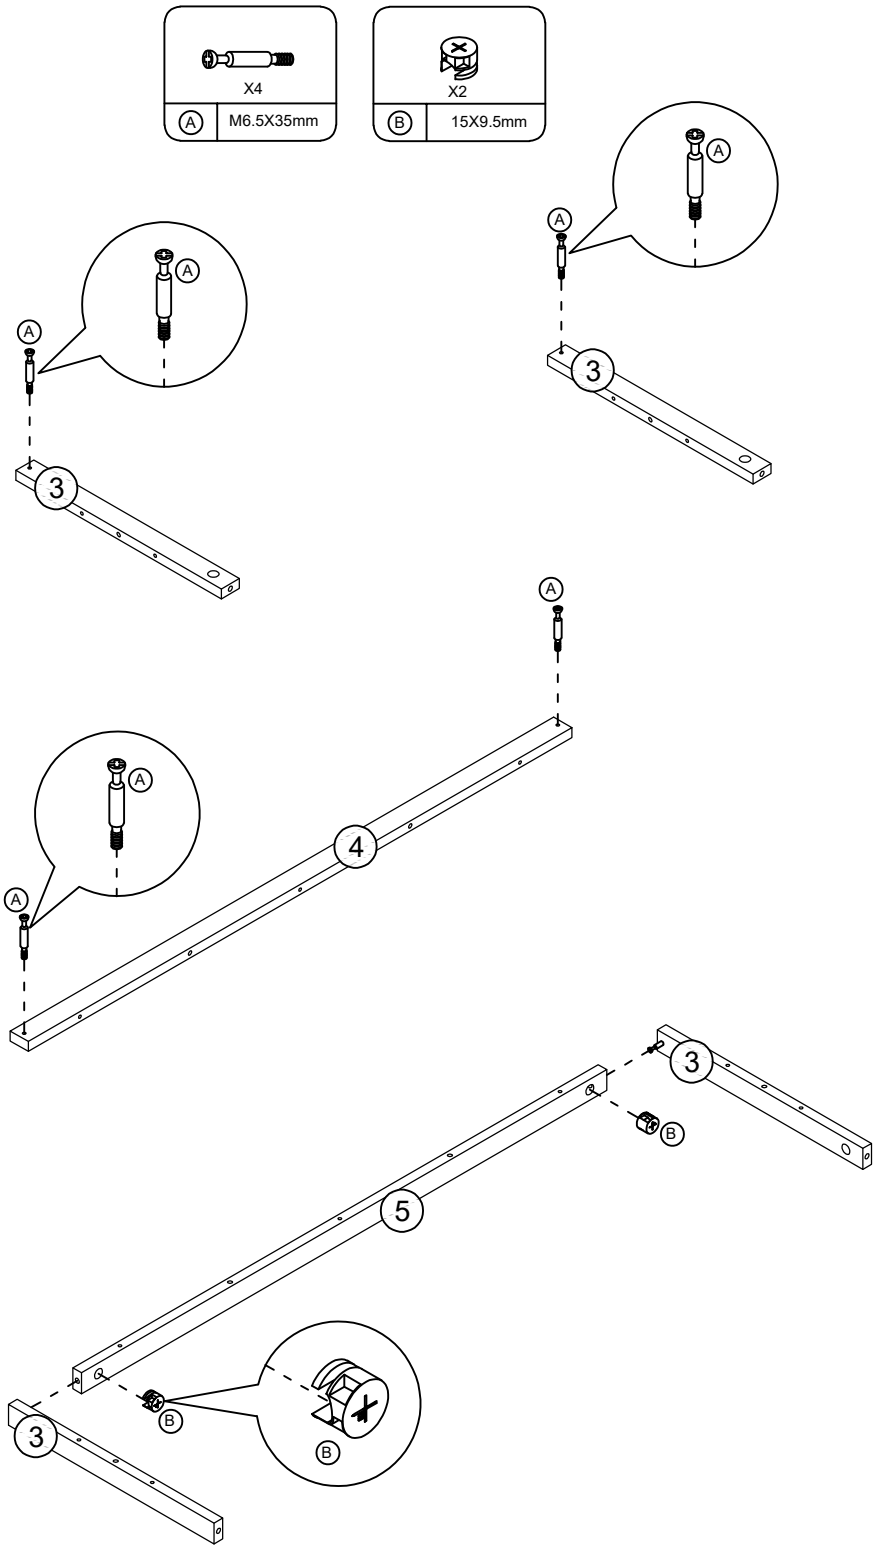




X4
A
M6.5X35mm
X2
B
15X9.5mm
A
3
4
5
B

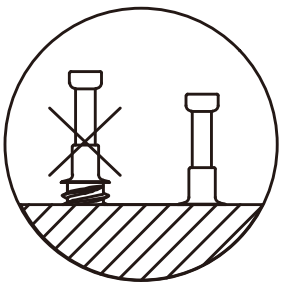




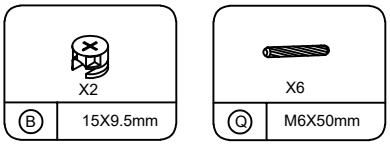

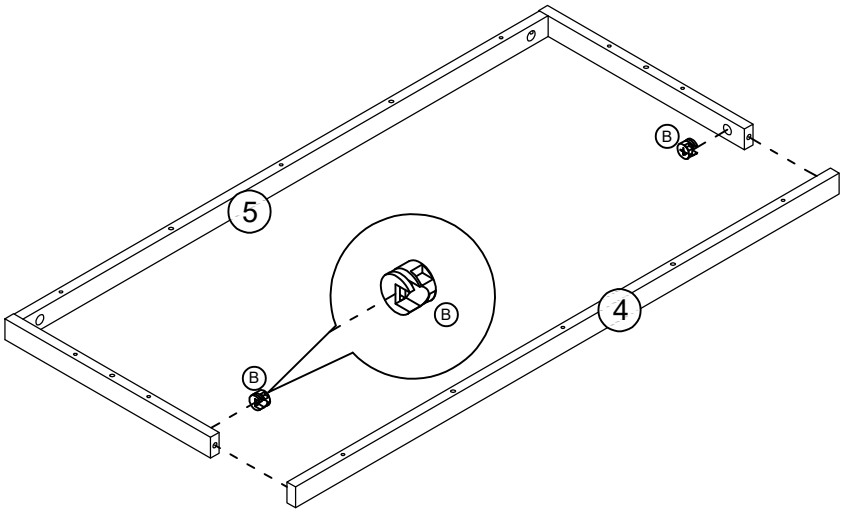

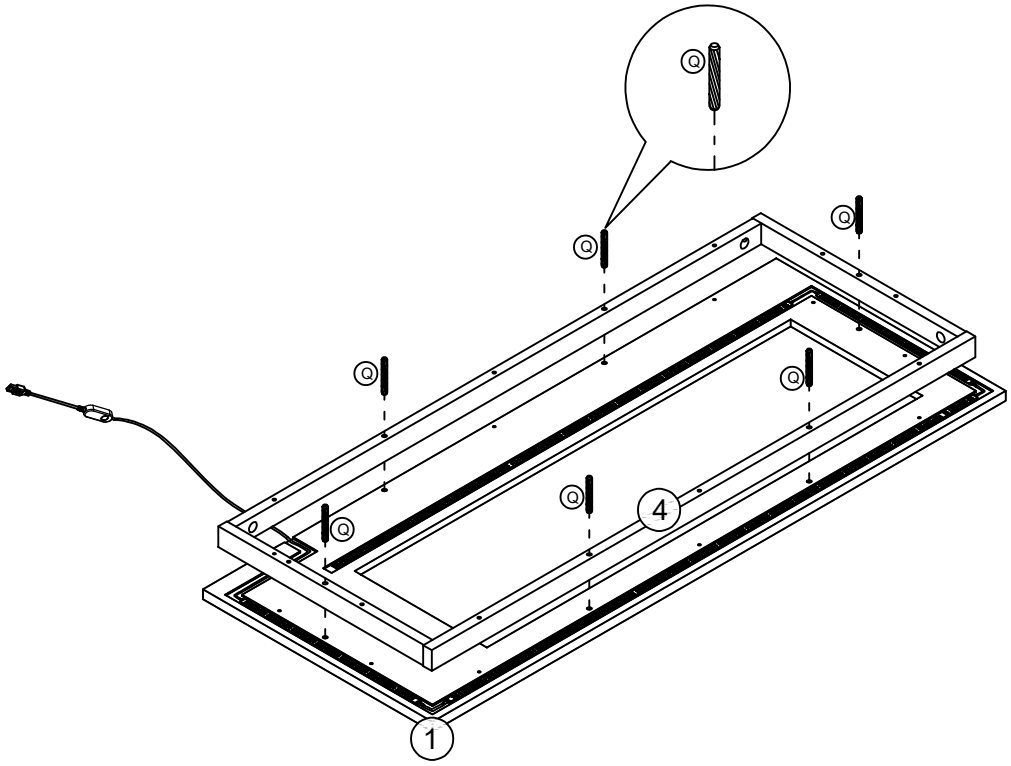



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

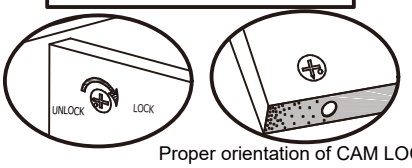


Proper orientation of CAM LOCK

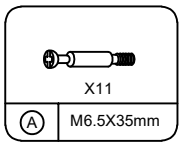




X11
A
M6.5X35mm

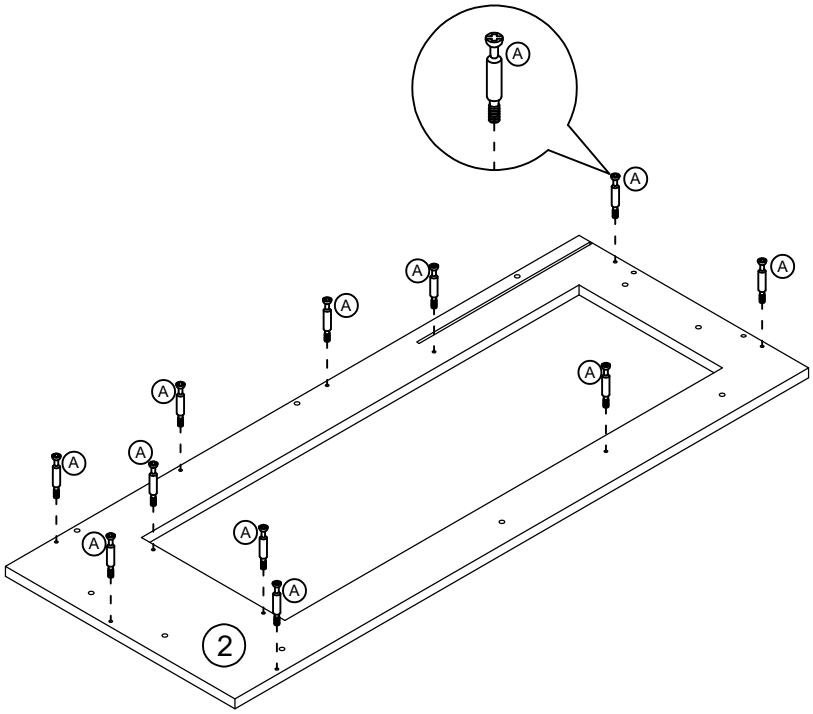
A
2

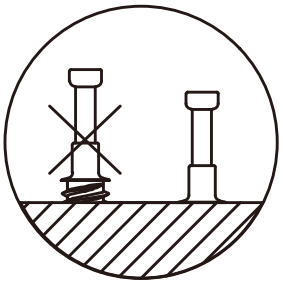


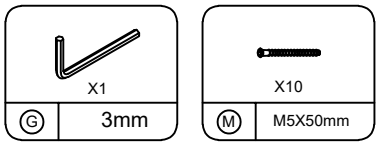



X1
G
3mm
X10
M
M5X50mm

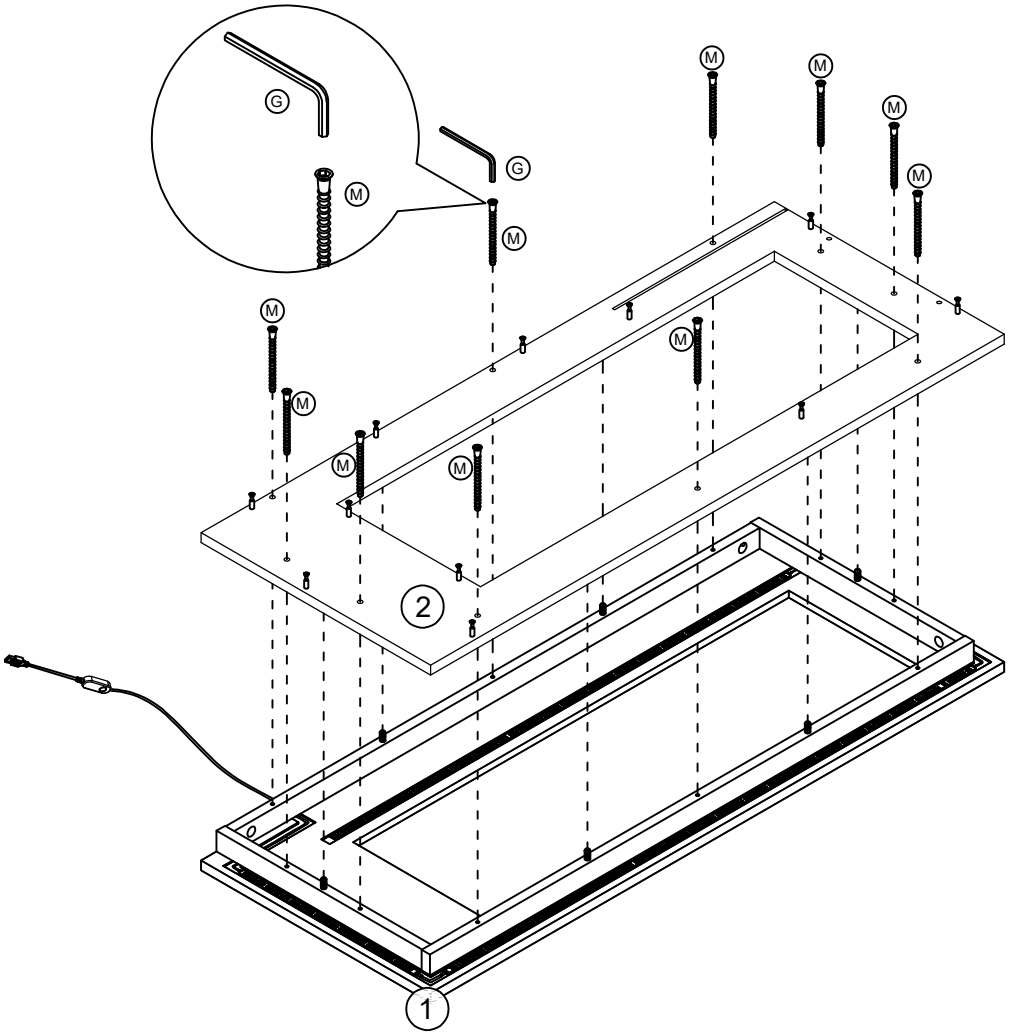

G
M
G
M
M
M
M
M
M
M
M
M
2
1



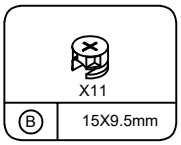

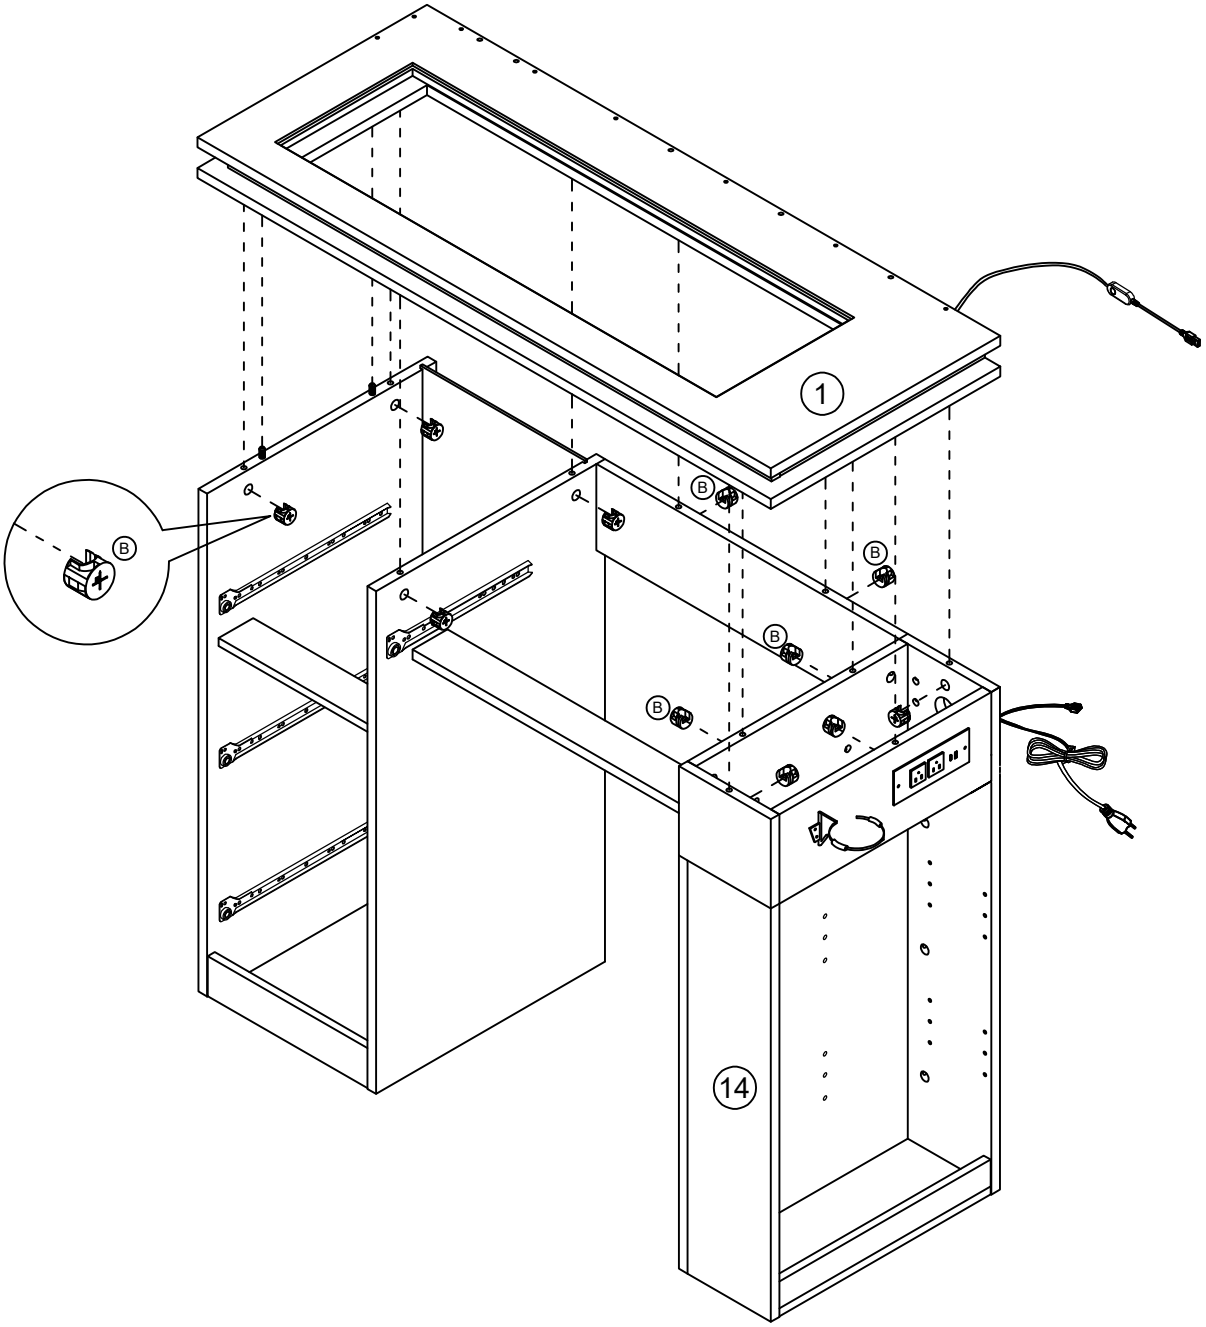



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

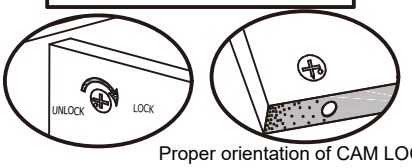


Proper orientation of CAM LOCK

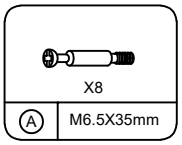




X8
A
M6.5X35mm

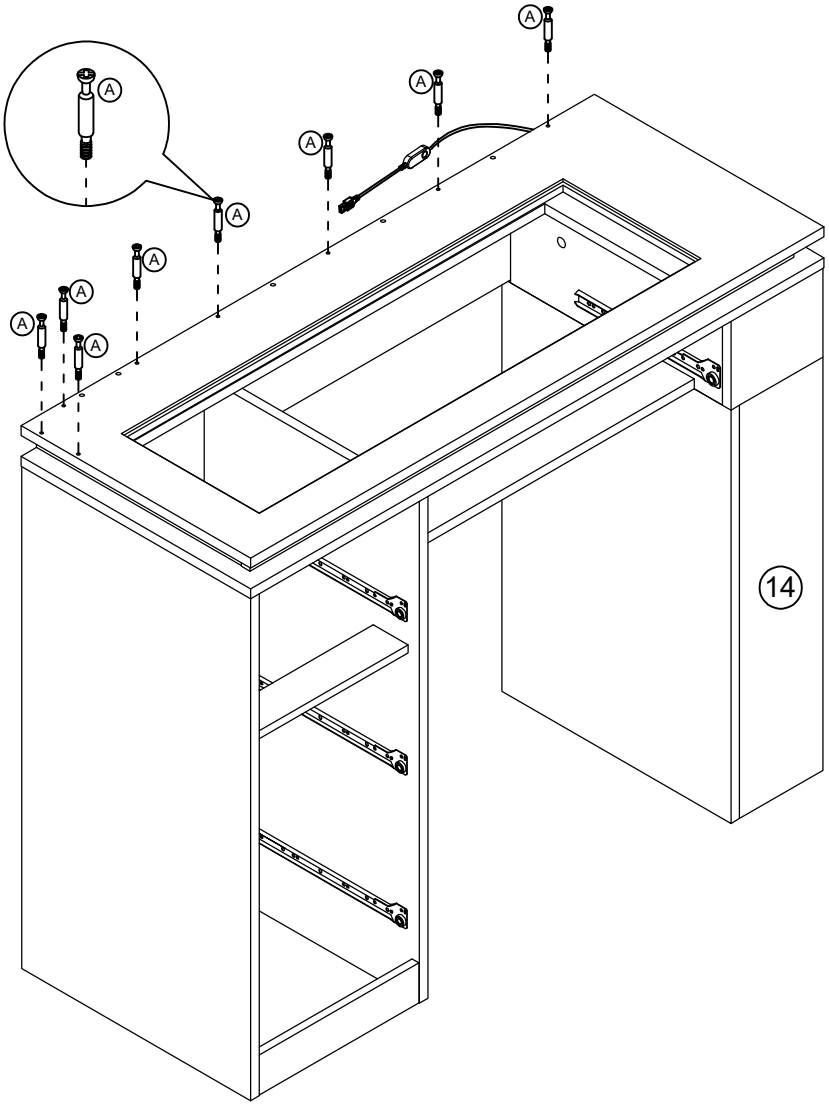
A
14

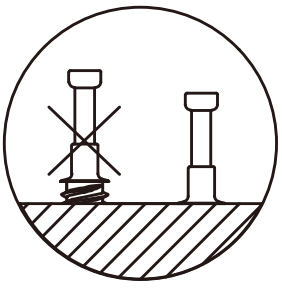


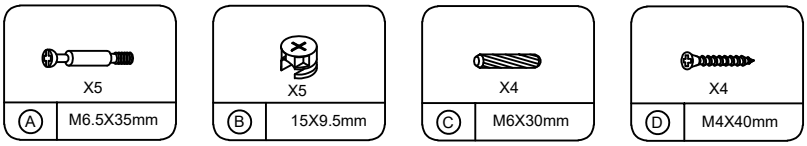




X5
A
M6.5X35mm
X5
B
15X9.5mm
X4
C
M6X30mm
X4
D
M4X40mm

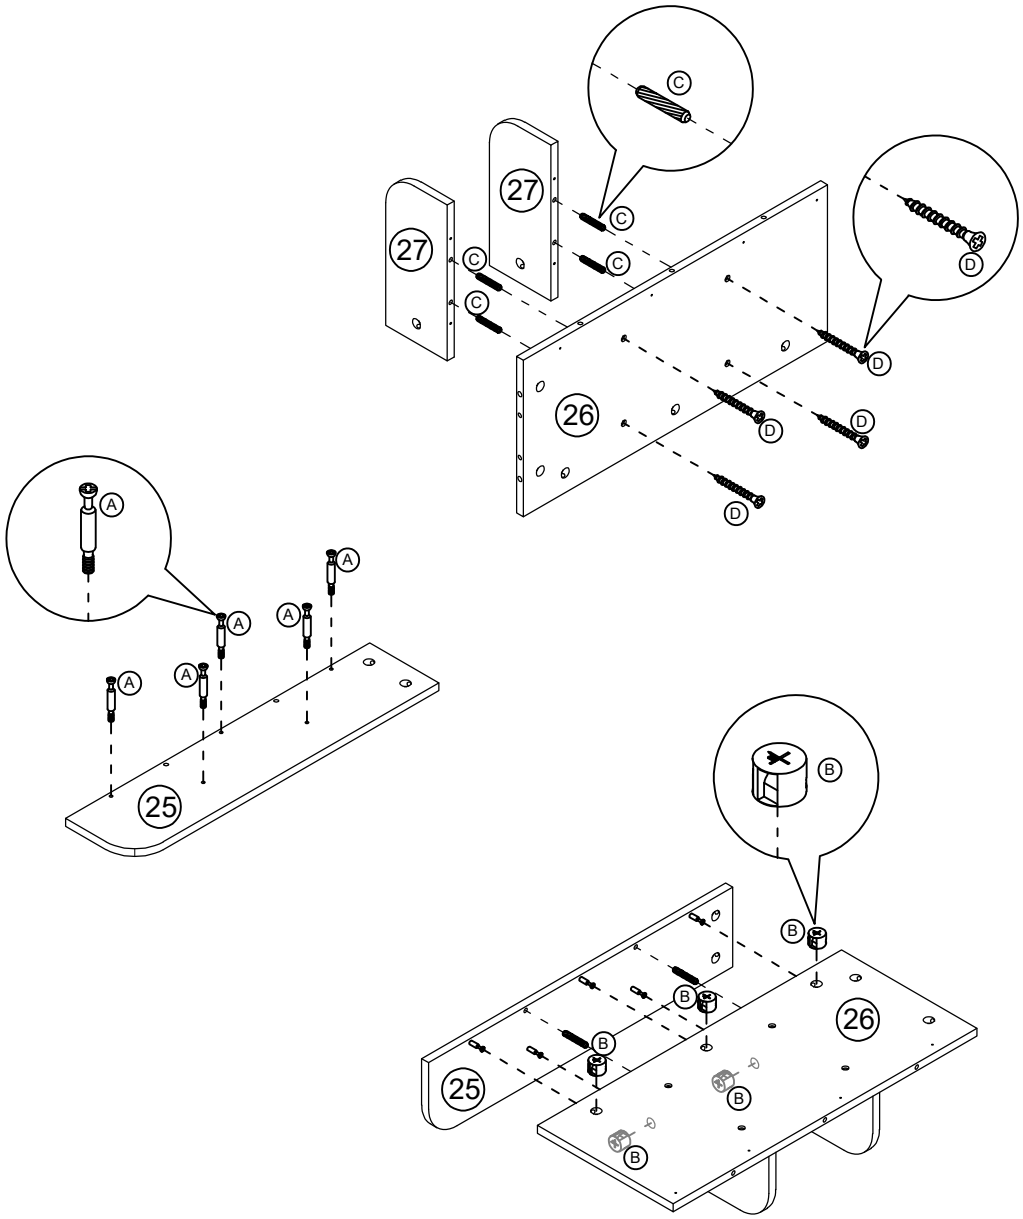
C
27
27
C
C
C
D
D
D
D
D
26
A
A
A
A
A
25
B
B
B
B
B
B
26
25

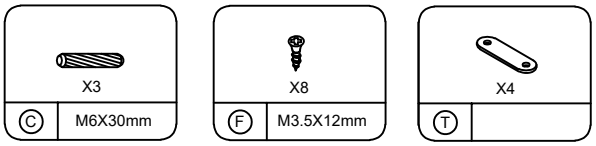




X3
C
M6X30mm
X8
F
M3.5X12mm
X4
T

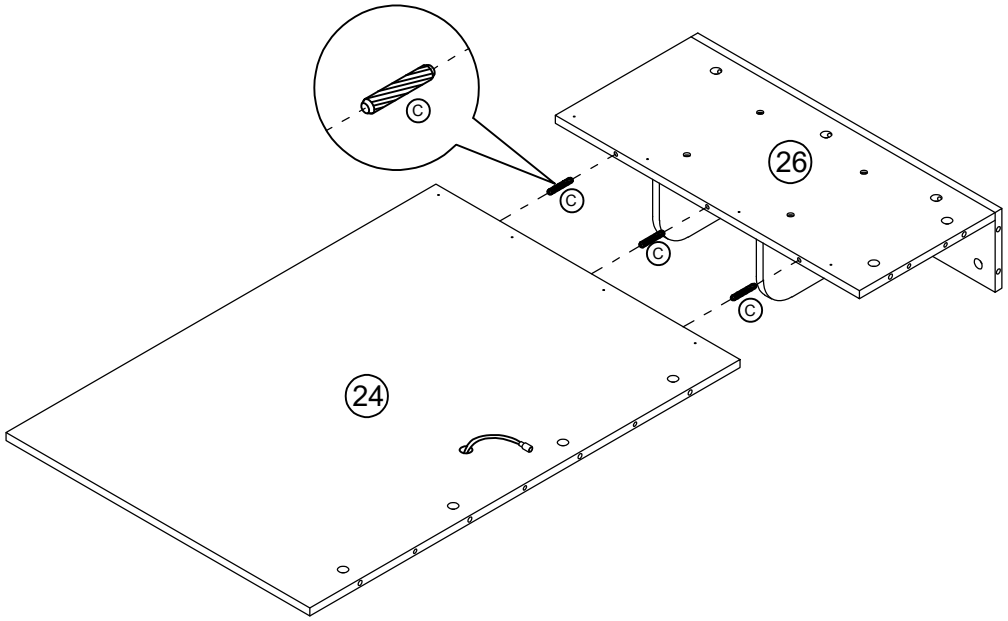
C
26
24

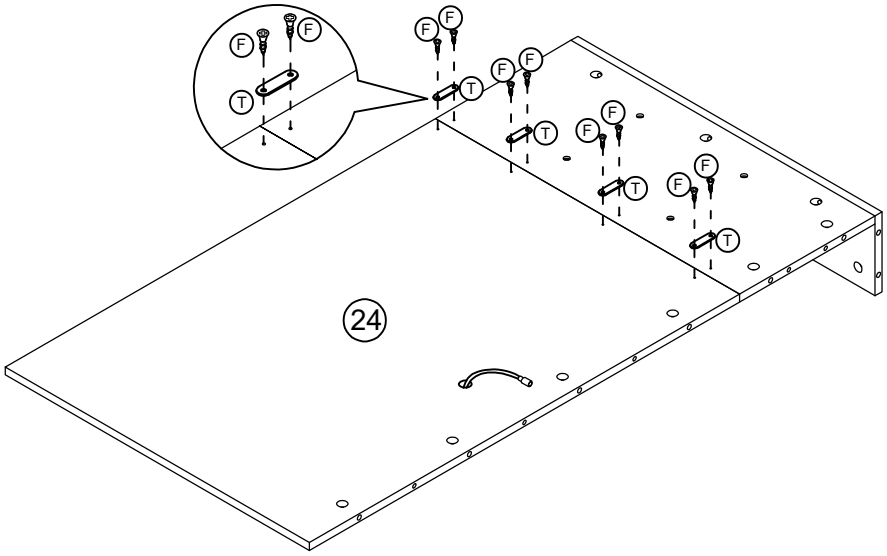

F
T
24



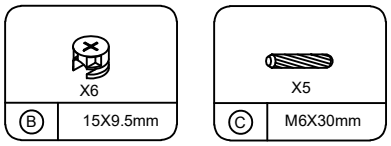


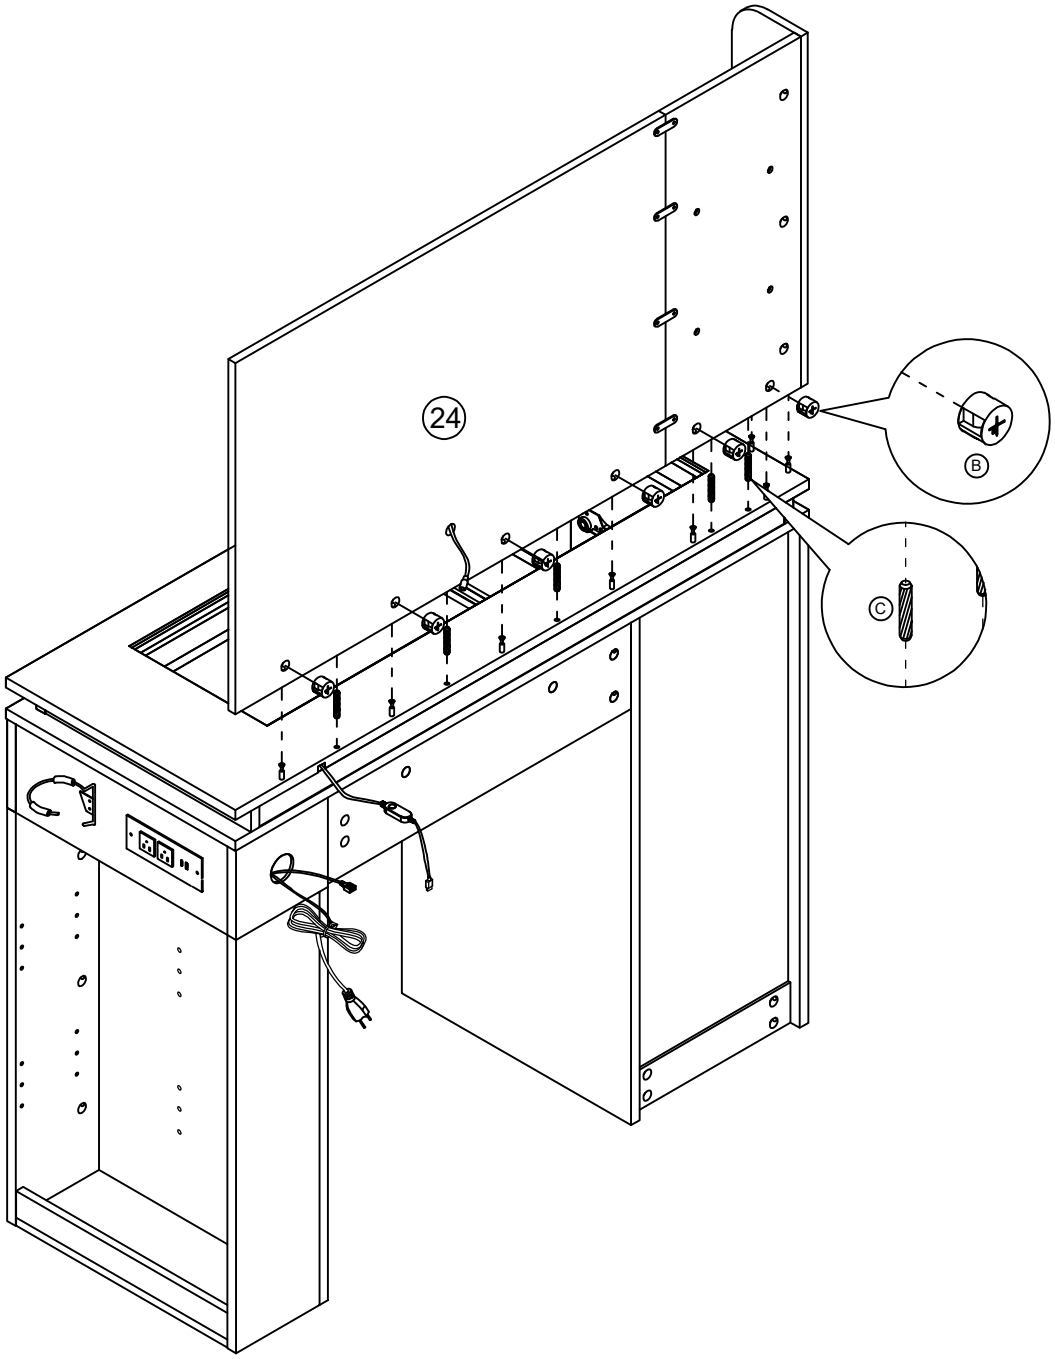


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

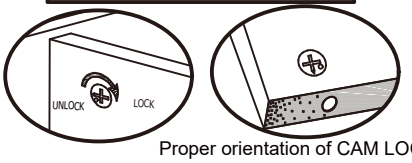


Proper orientation of CAM LOCK

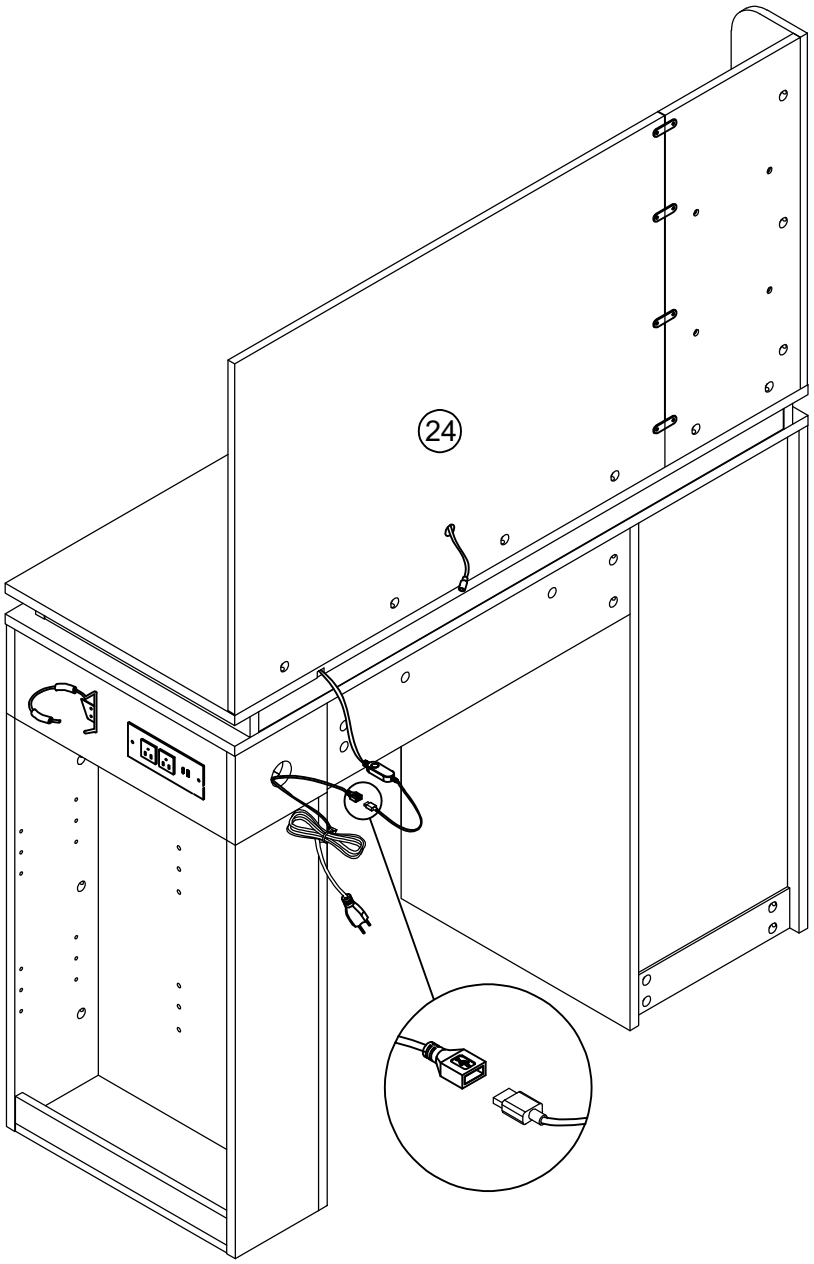
24

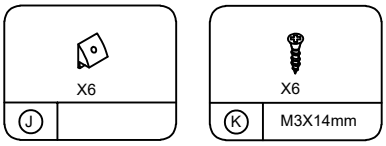




X6
J
X6
K
M3X14mm

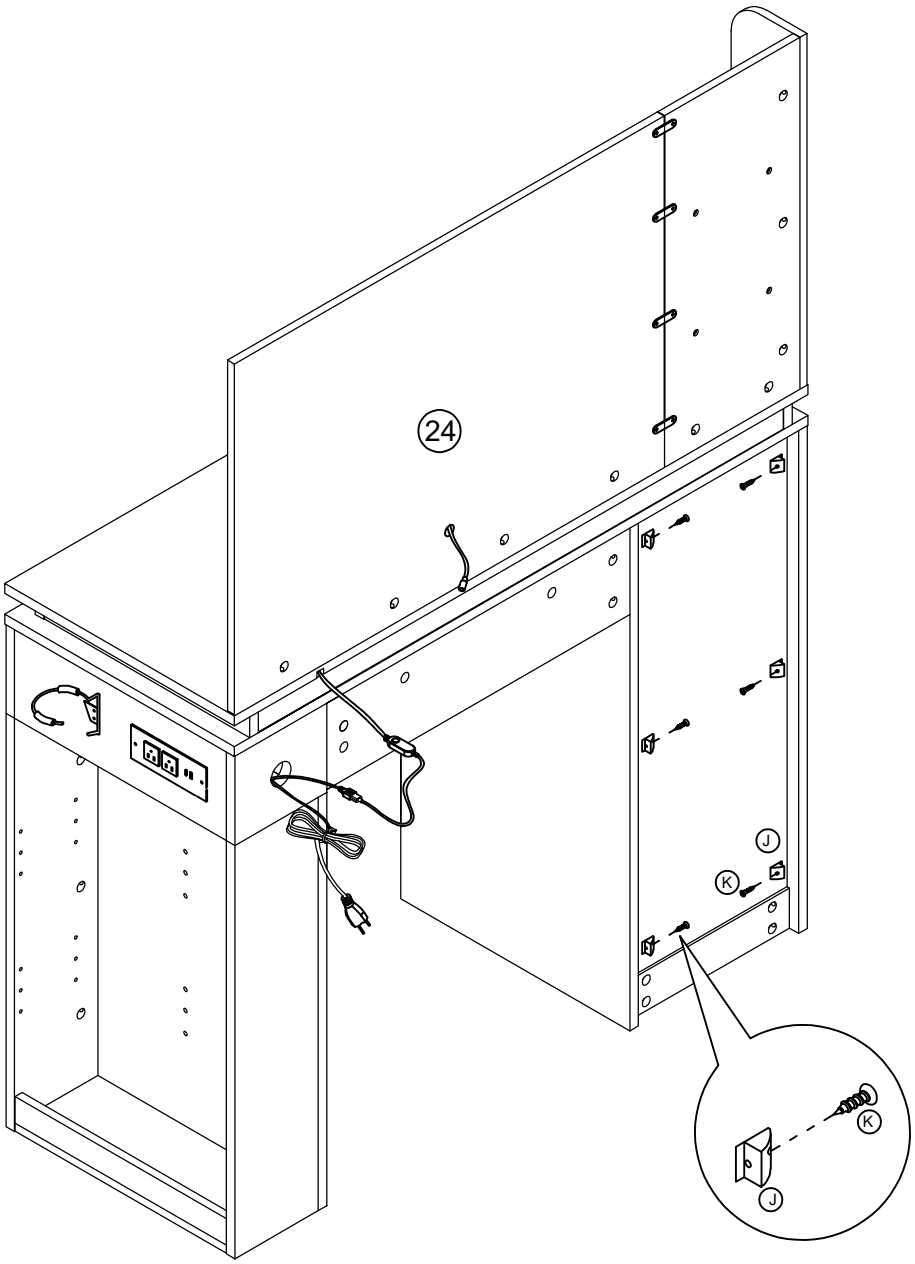

24
J
K
K
J





x2

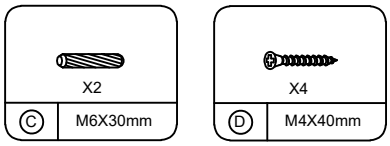


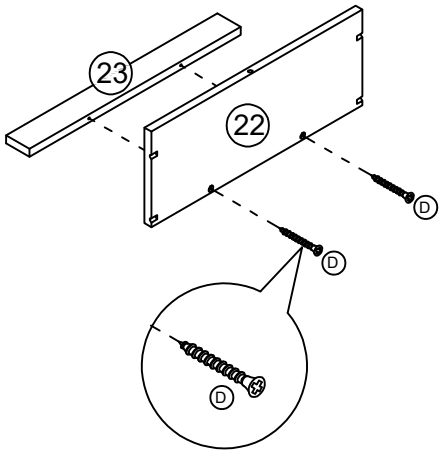


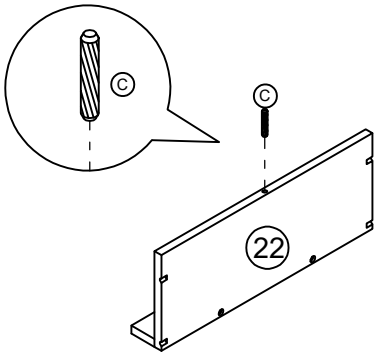


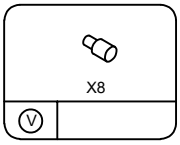

X8
V

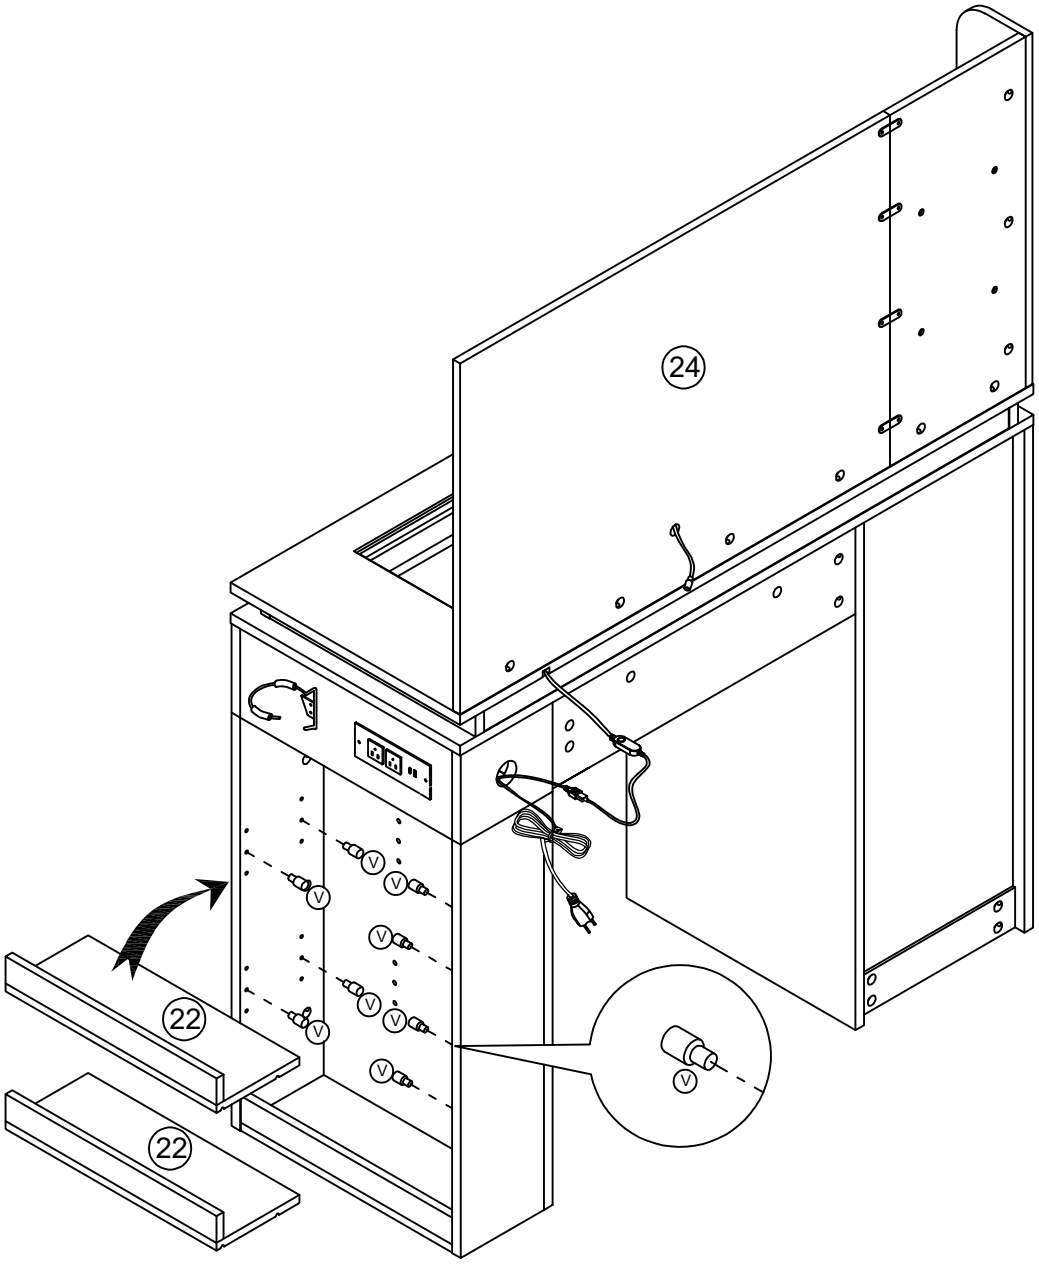

24
22
22
V

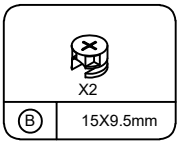
X2
B
15X9.5mm

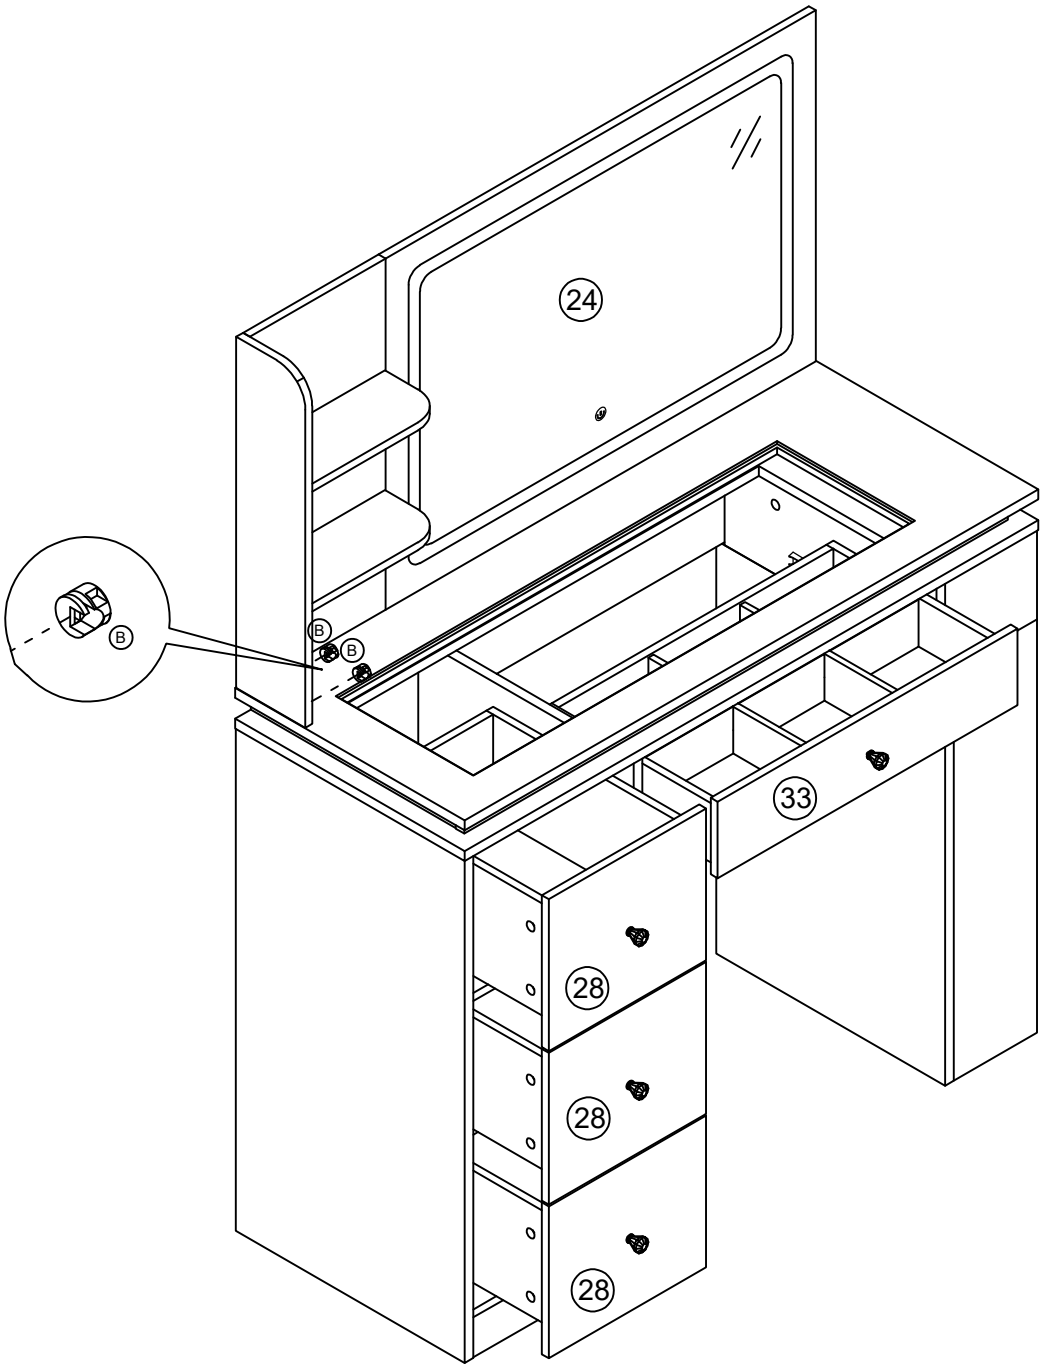
24
B
B
B
33
28
28
28

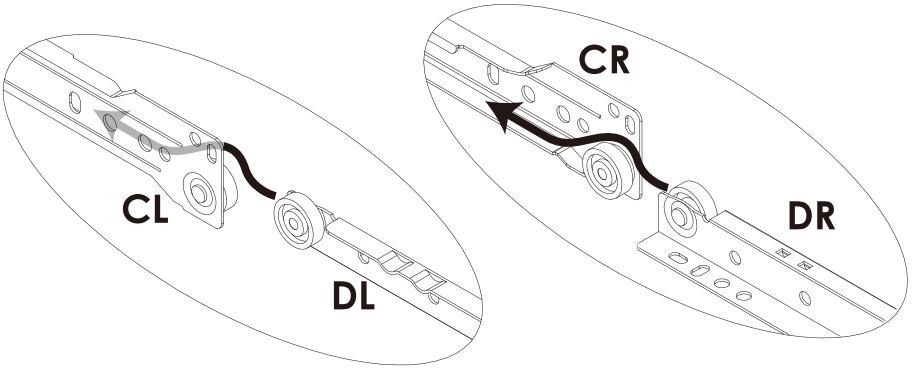
CL
DL
CR
DR

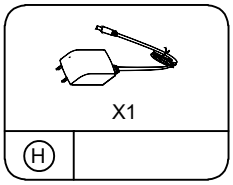
X1
H

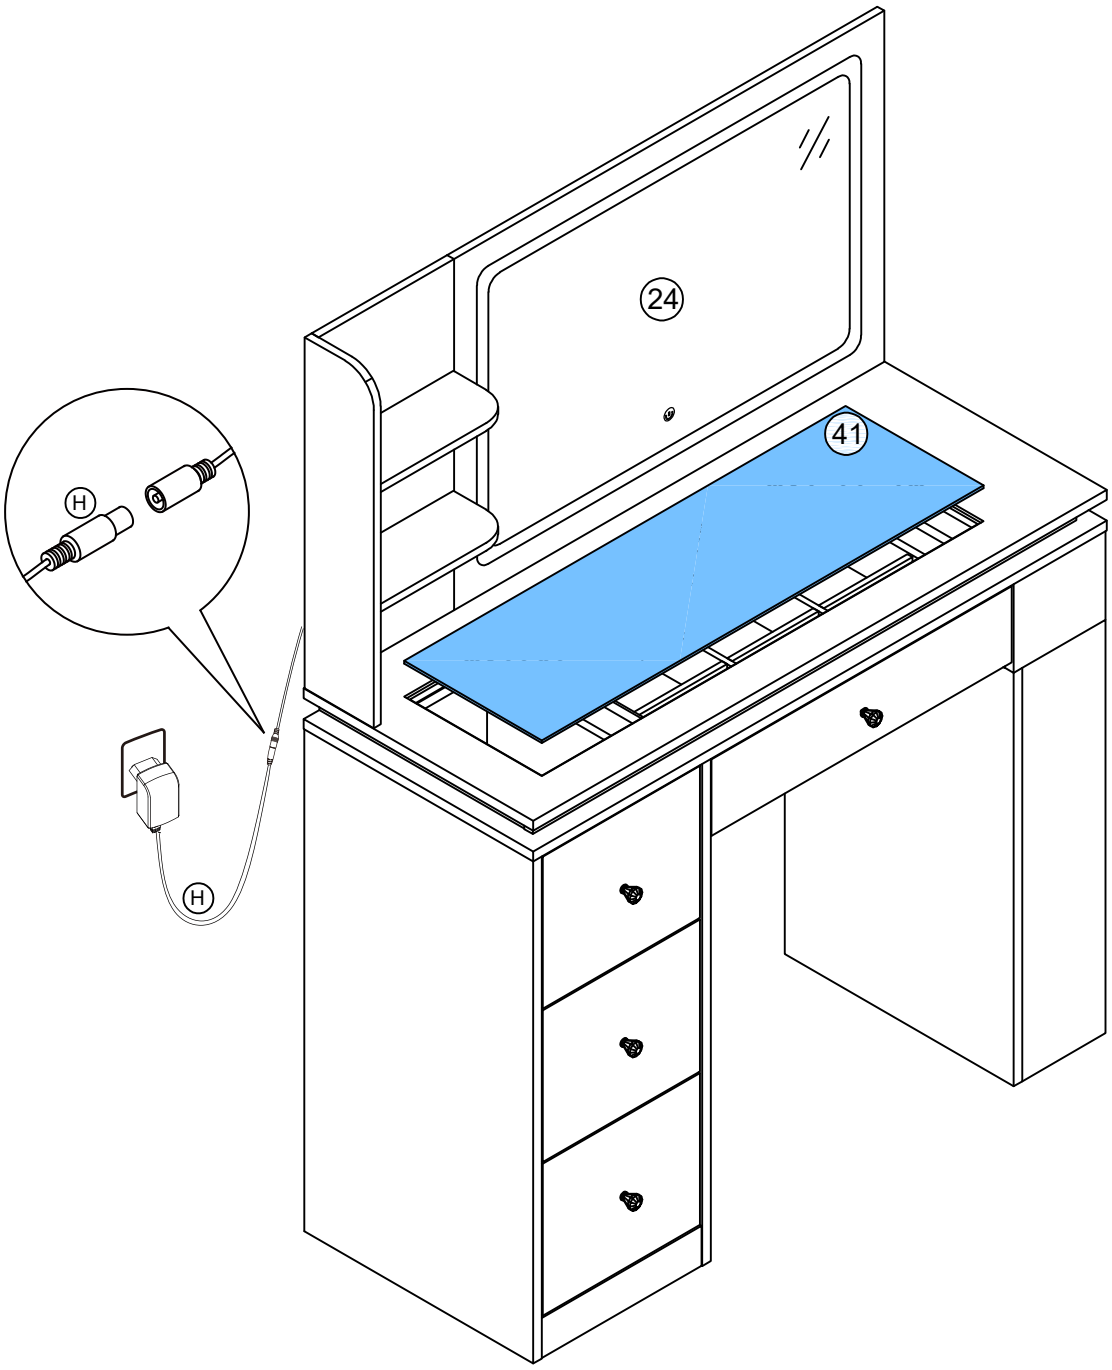
24
41
H
H

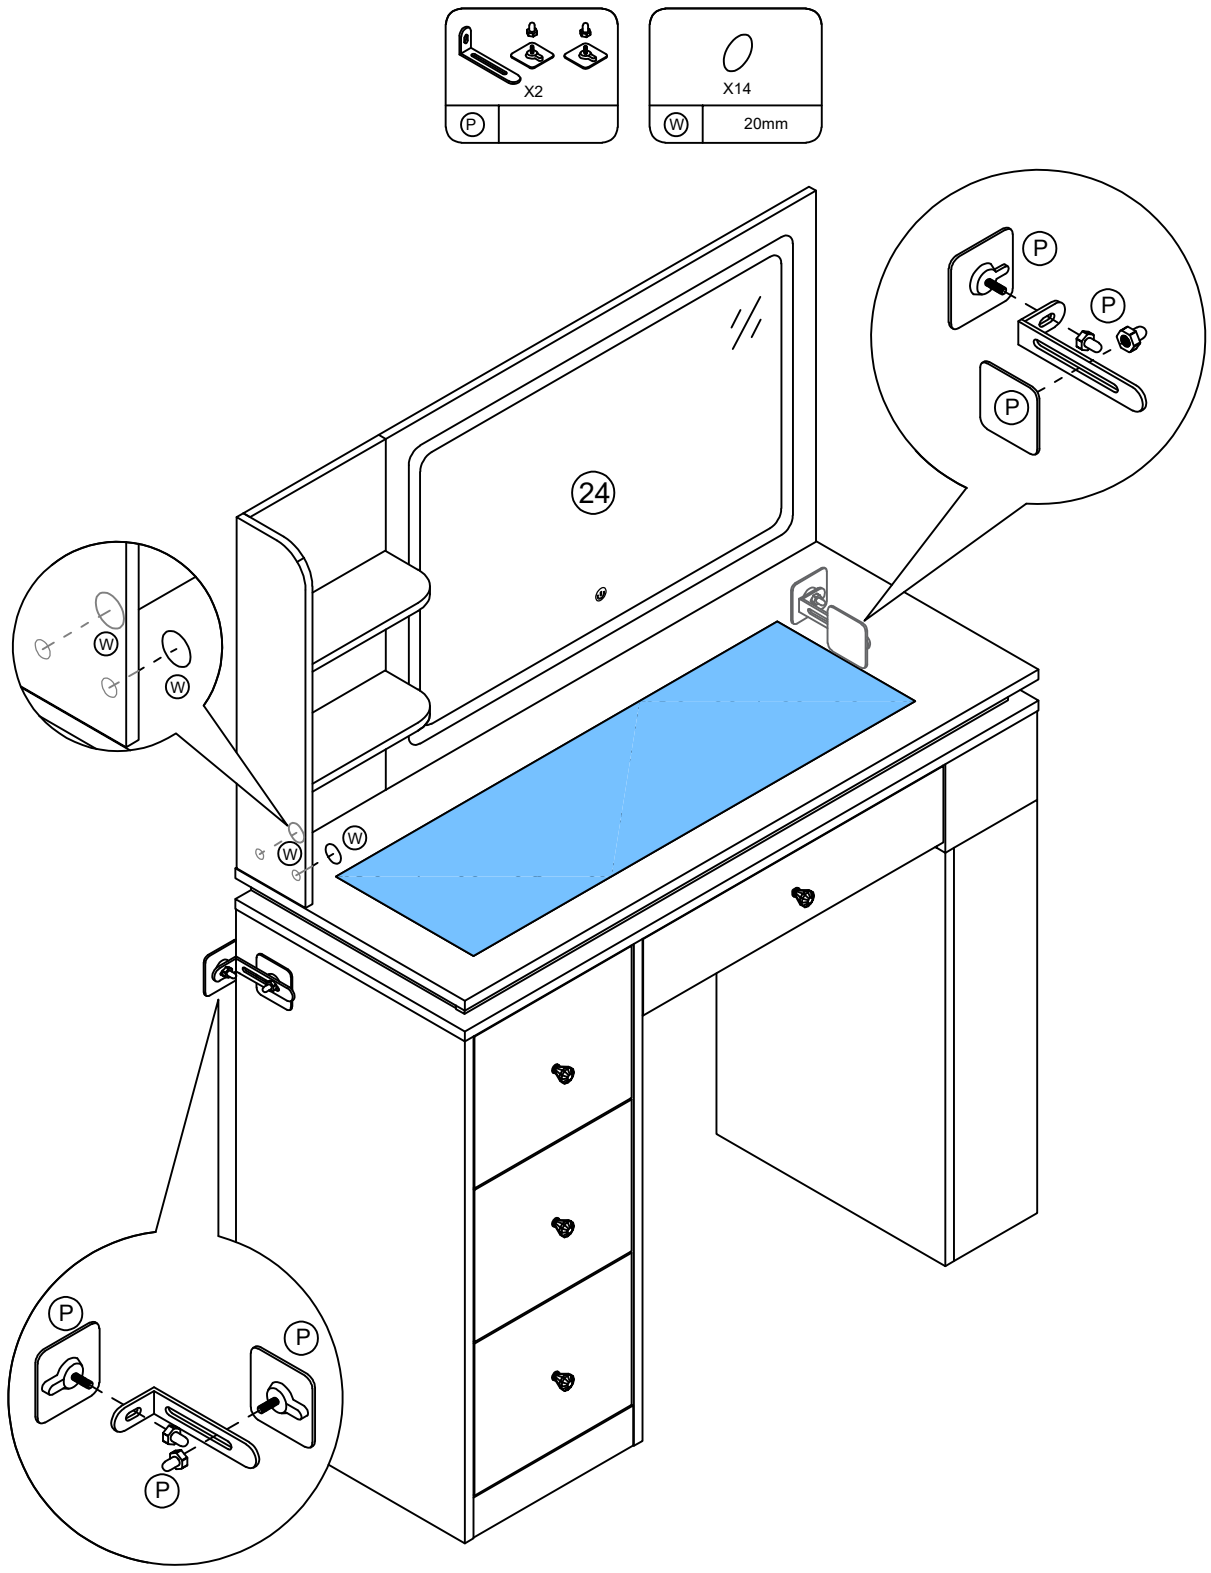
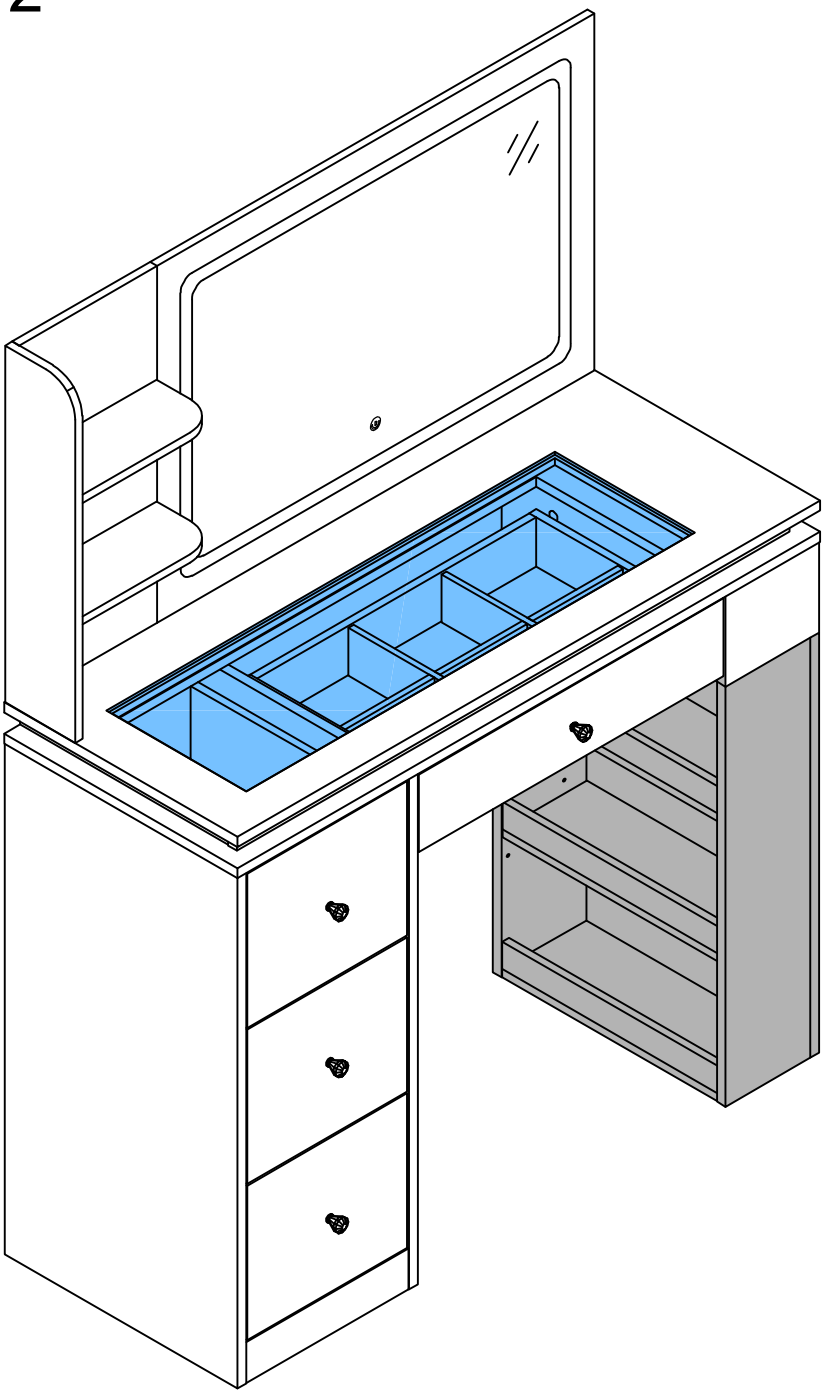
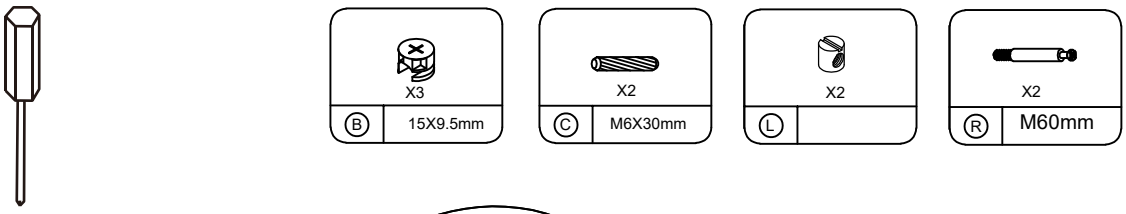

X2
P
X14
W
20mm
24
P
P
P
W
W
W
W
P
P
P

Figure 2







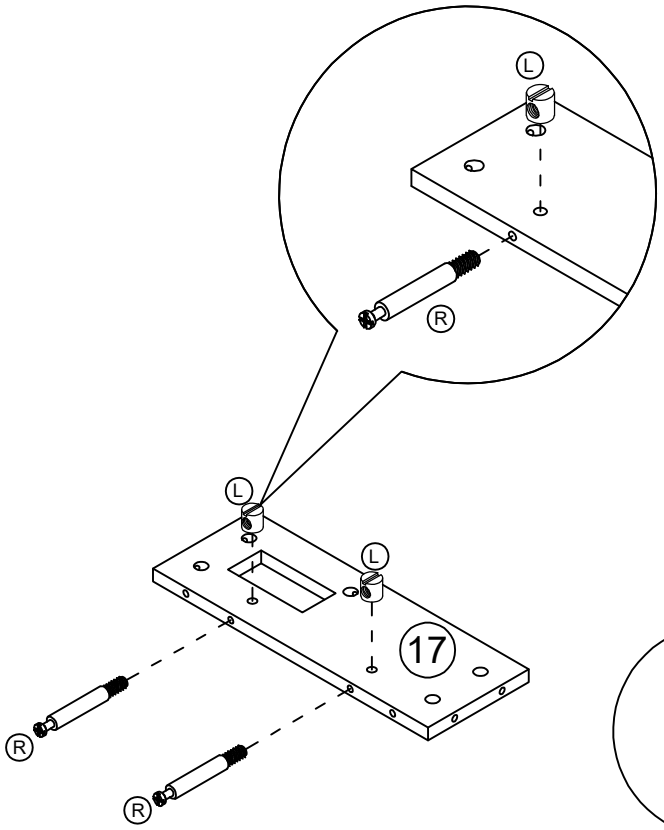



Figure 2 : Steps 38 to 59 adopt the second installation method.

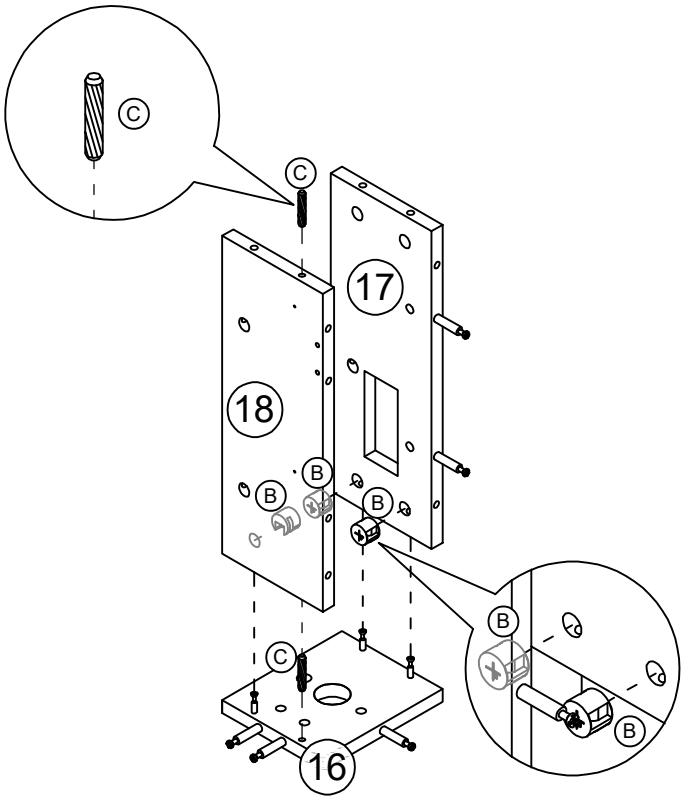


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

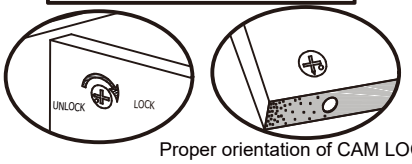


Proper orientation of CAM LOCK

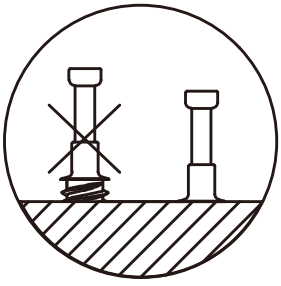




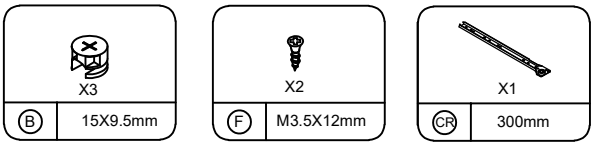


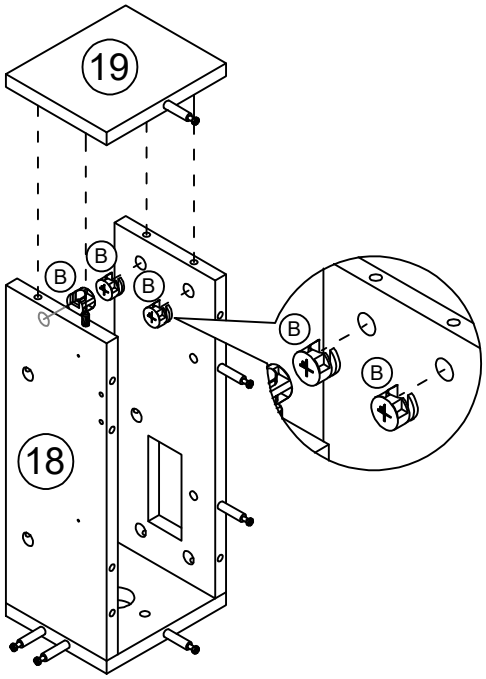

Note that the CR length is 300mm.

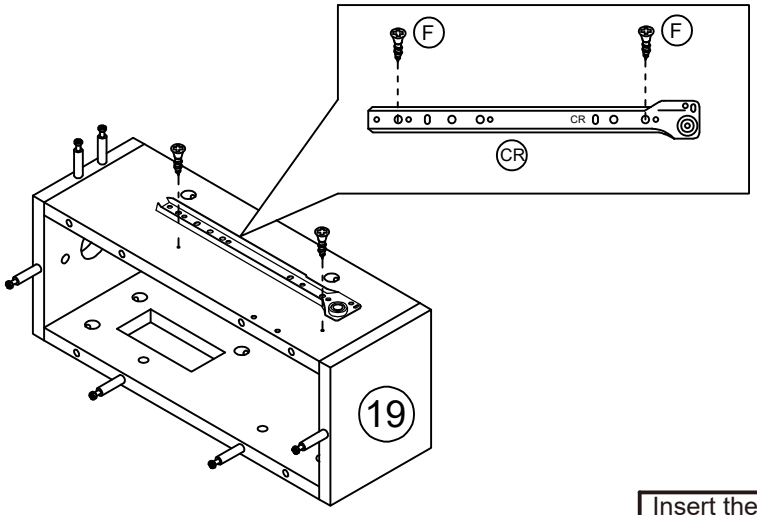



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

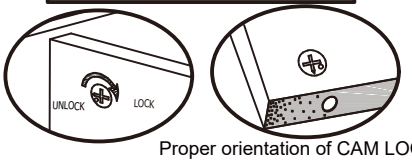


Proper orientation of CAM LOCK




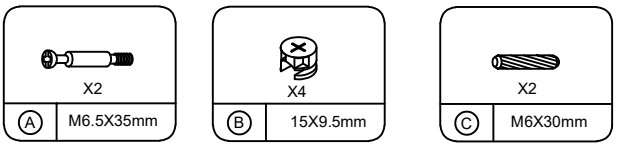

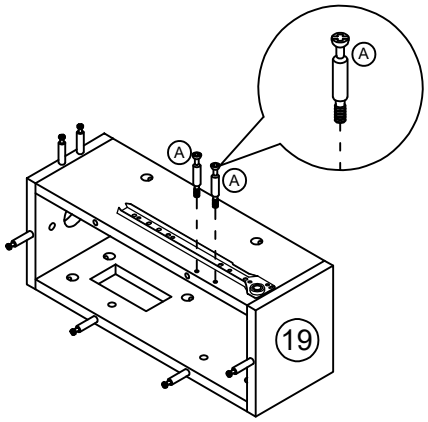


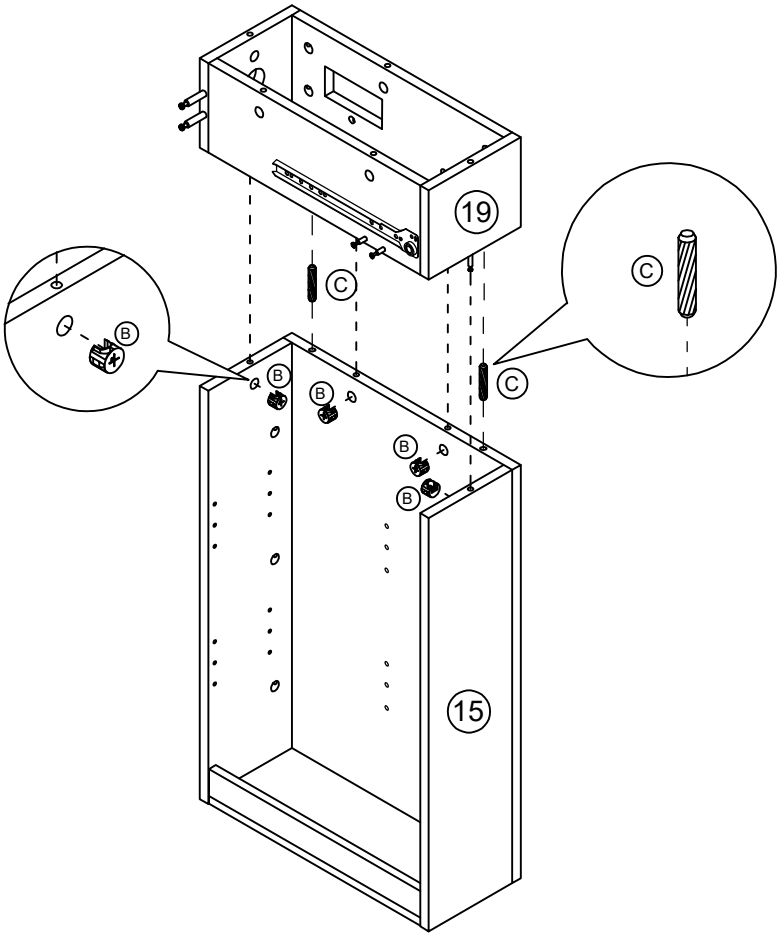


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

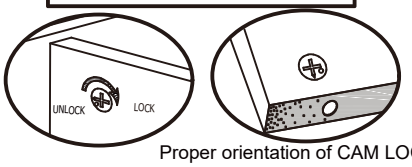


Proper orientation of CAM LOCK

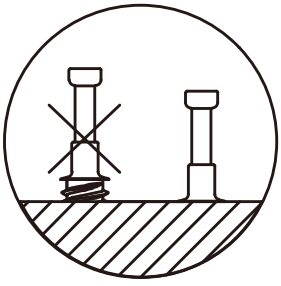




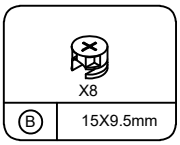

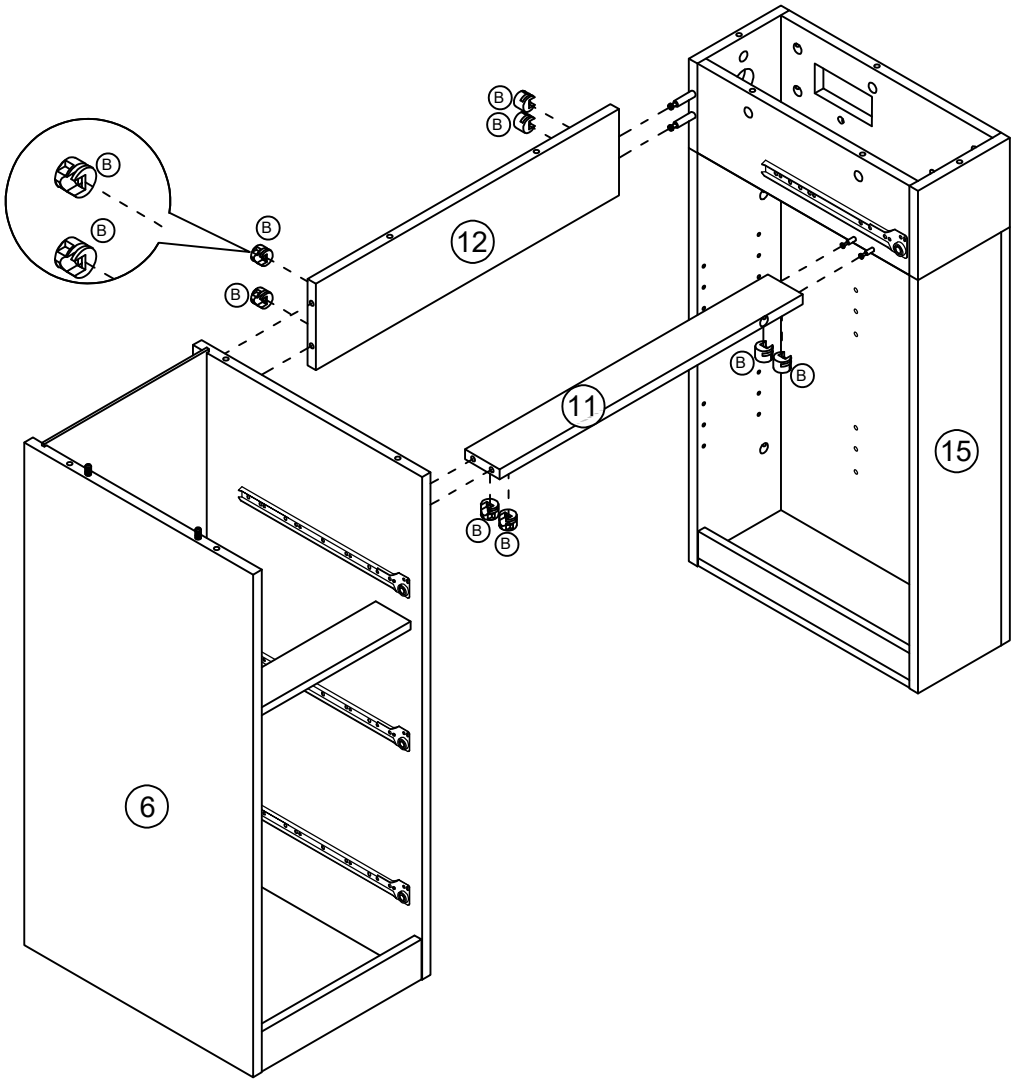



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

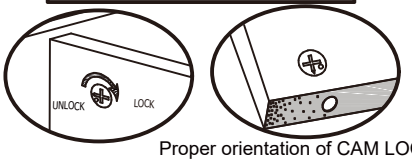


Proper orientation of CAM LOCK

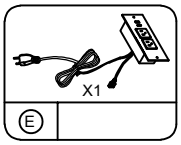




X1
E

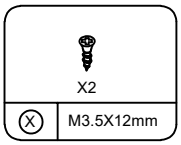

X2
X
M3.5X12mm

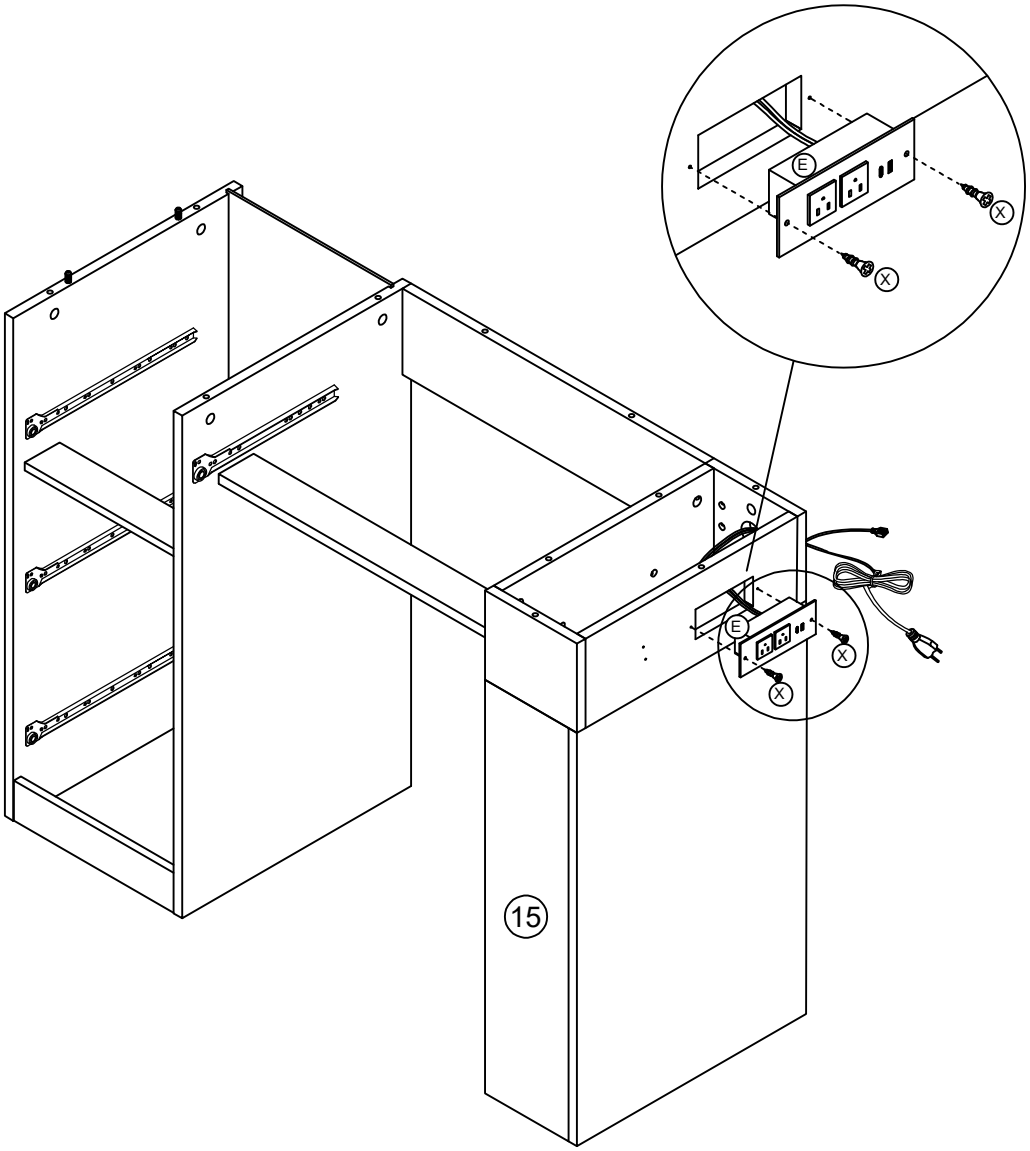
E
X
X
E
X
X
15

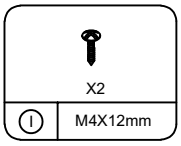




X2
I
M4X12mm

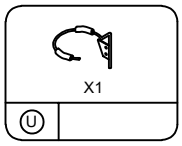
X1
U

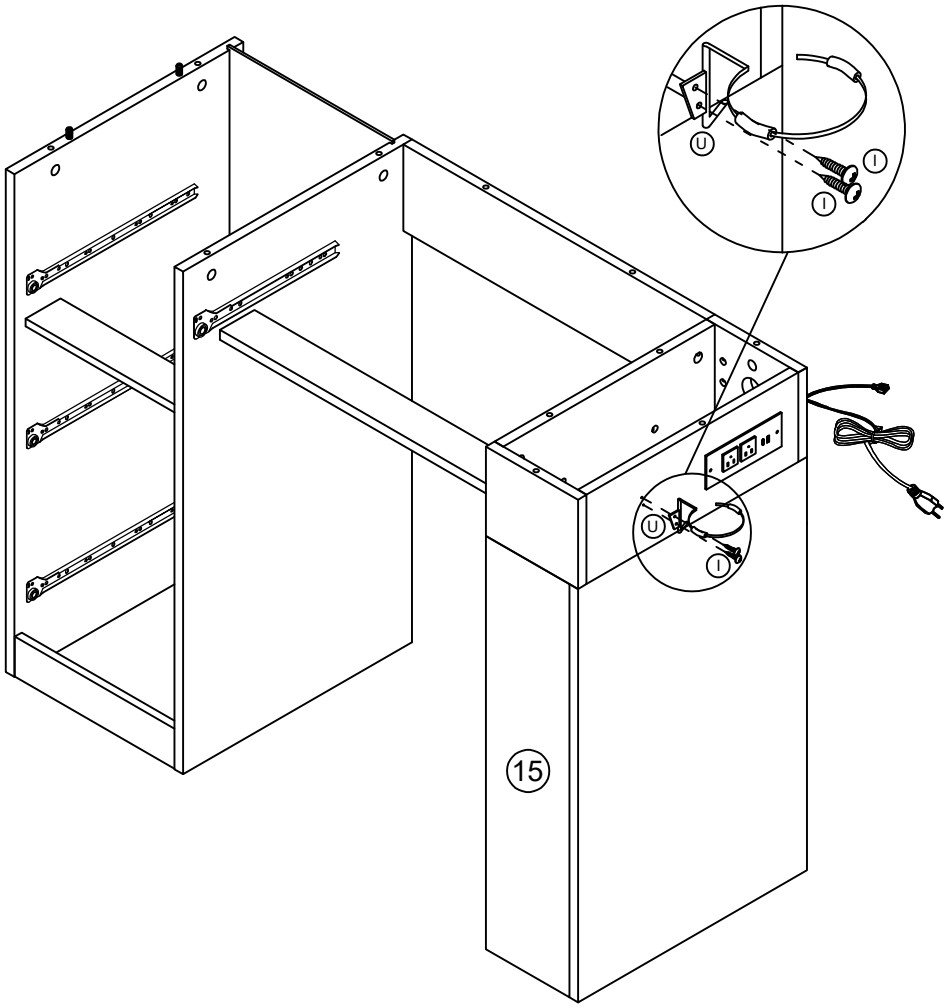

U
I
I
U
I
15

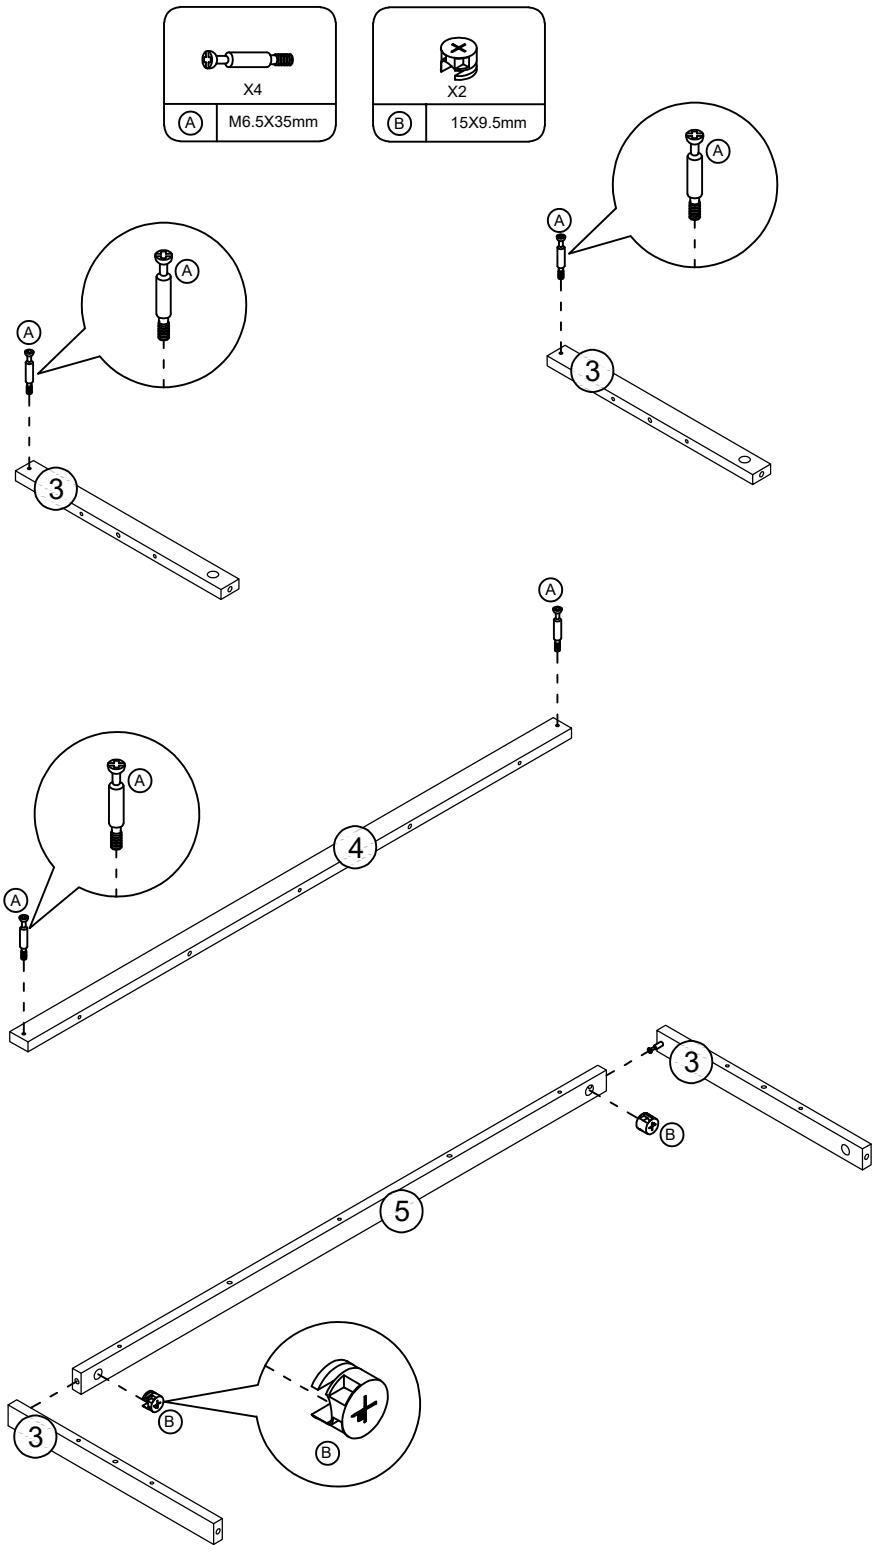




X4
A
M6.5X35mm
X2
B
15X9.5mm
A
3
4
5
B

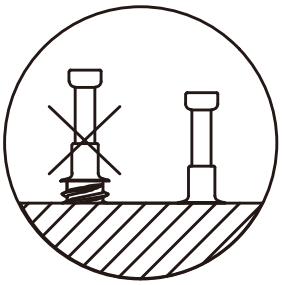




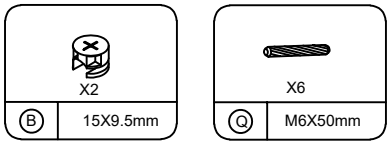

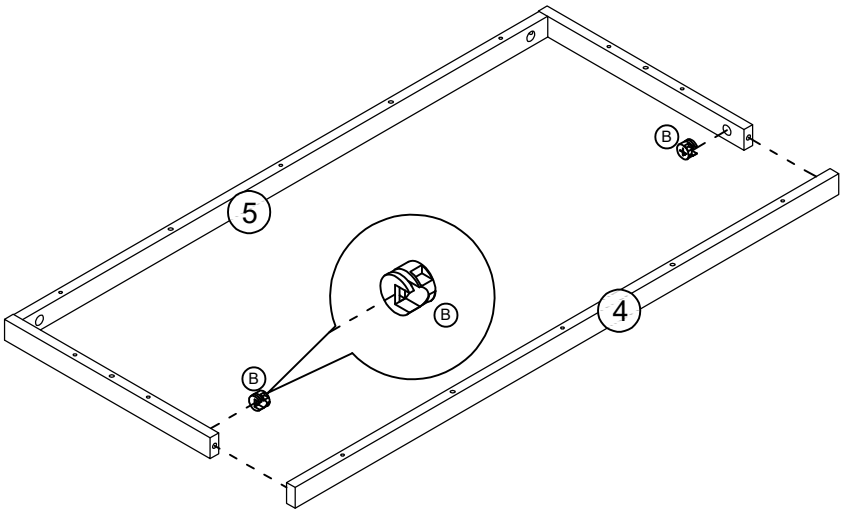

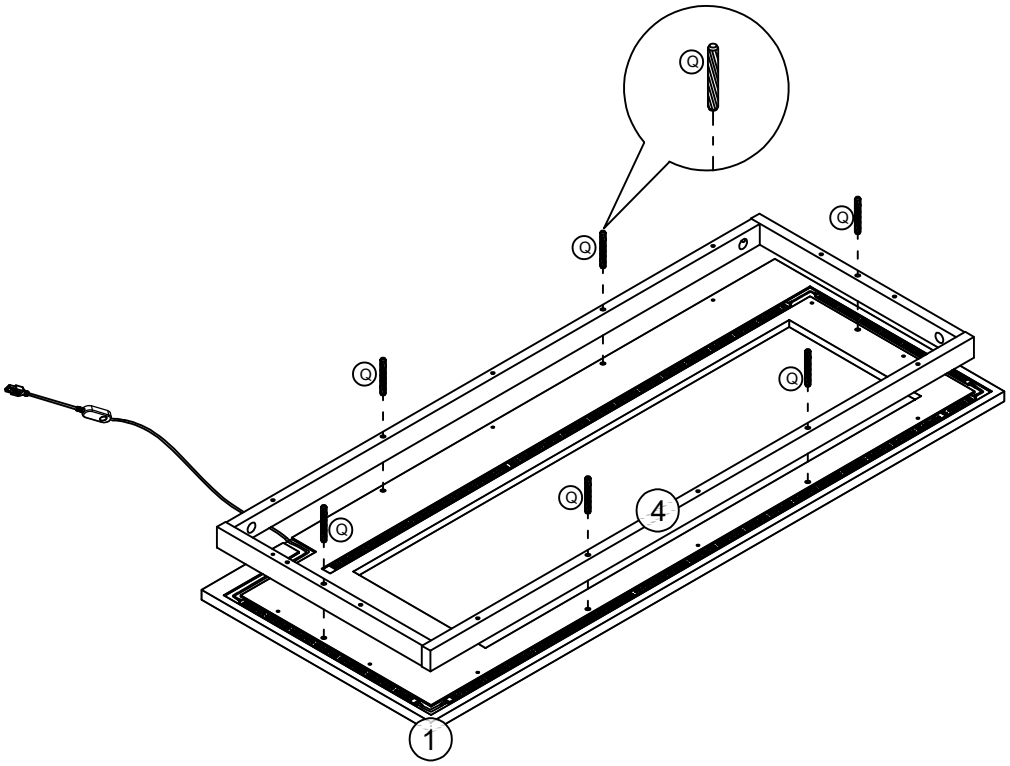



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

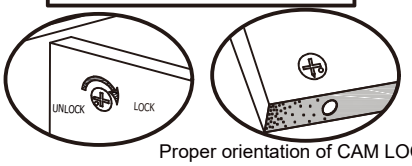


Proper orientation of CAM LOCK

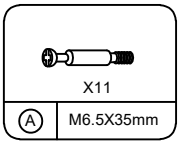




X11
A
M6.5X35mm

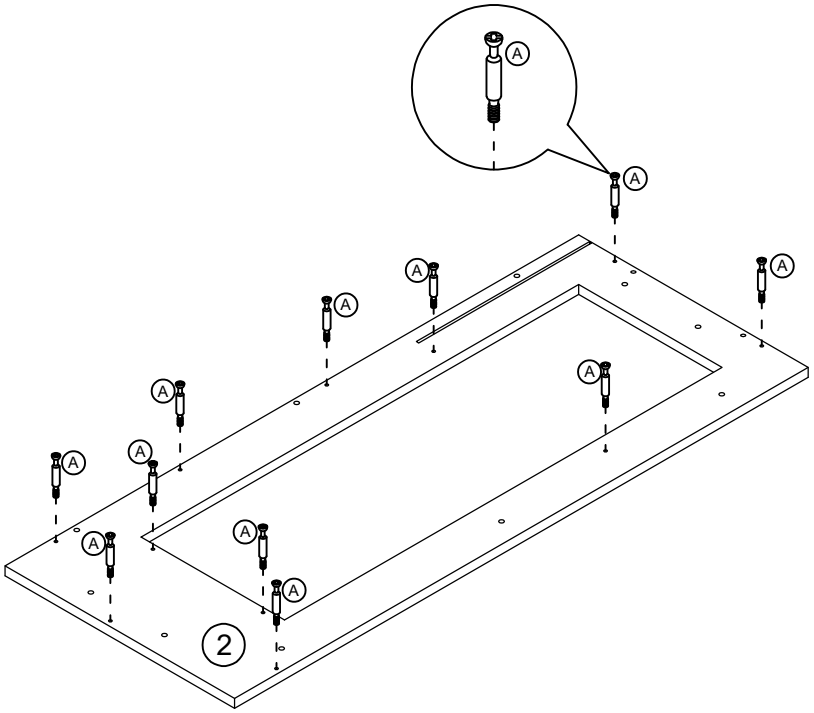
A
2

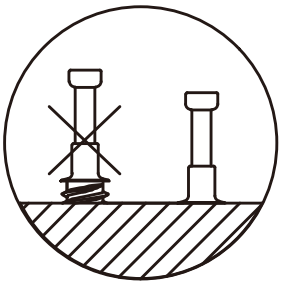


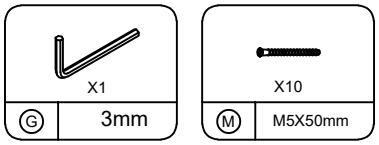



X1
G
3mm
X10
M
M5X50mm

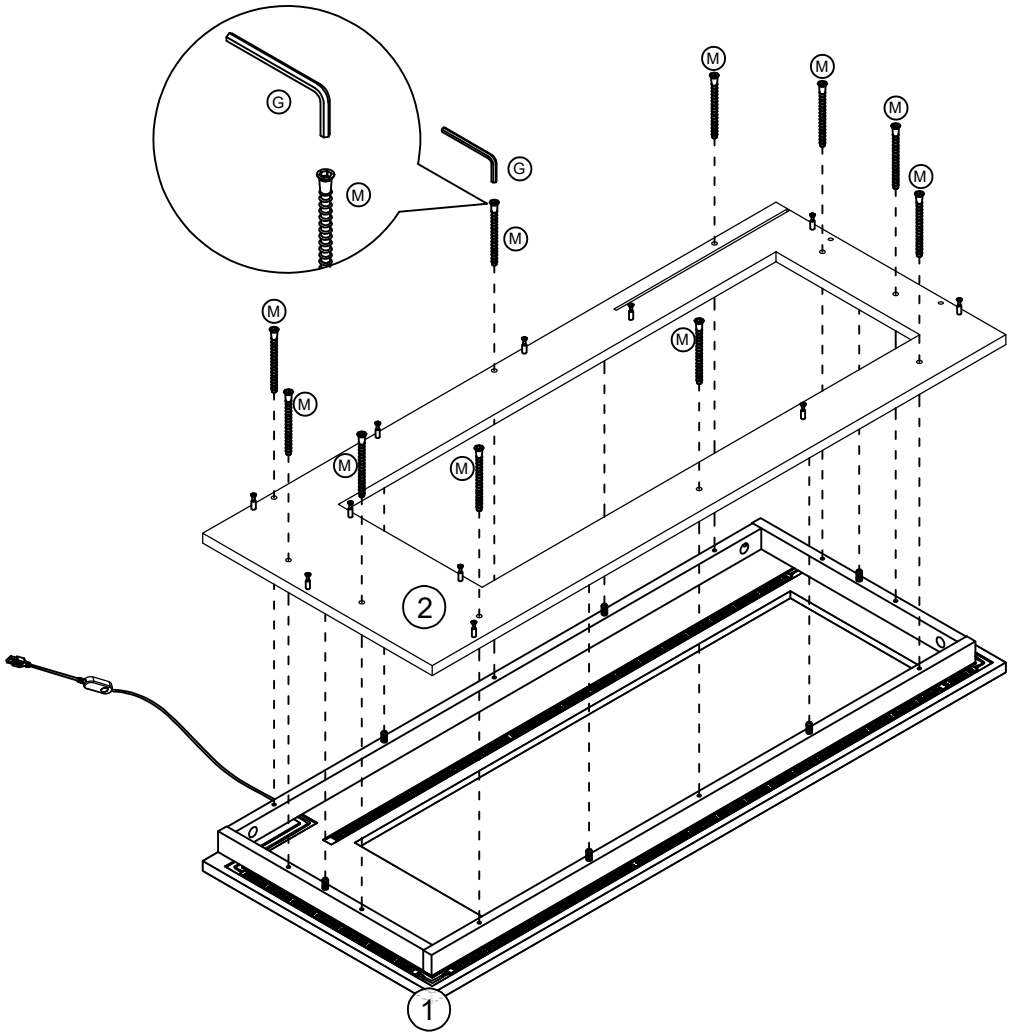

G
M
G
M
M
M
M
M
M
M
M
M
2
1



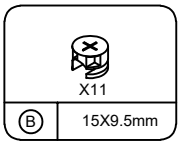

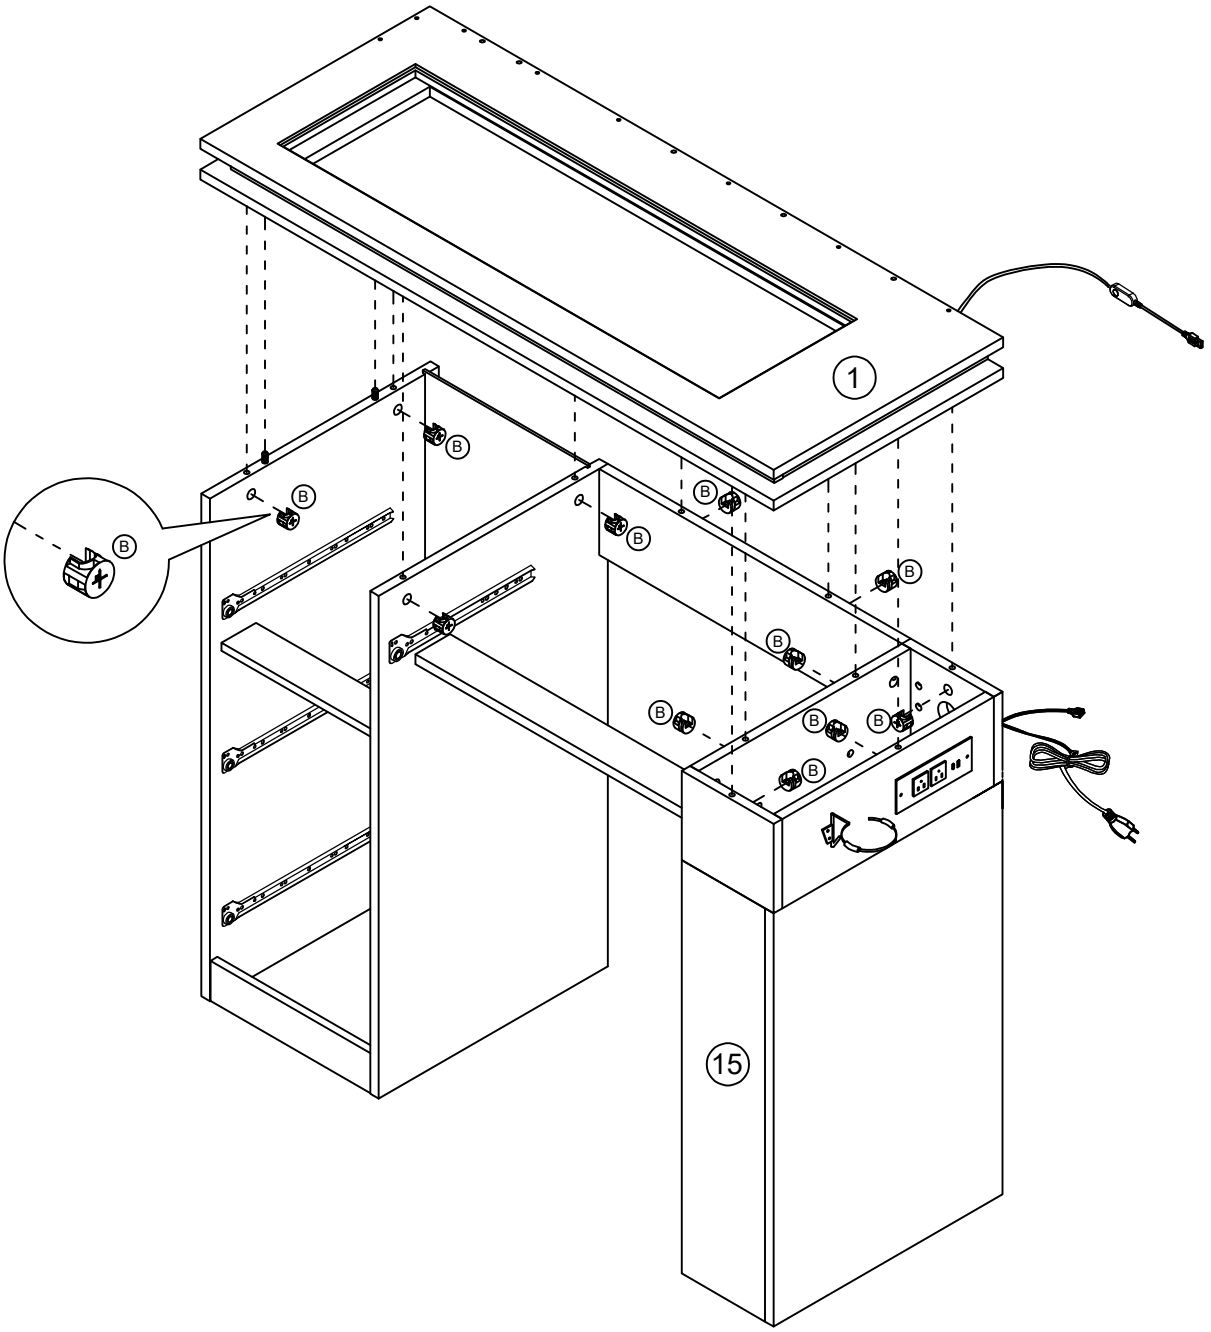



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

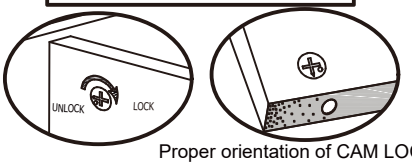


Proper orientation of CAM LOCK

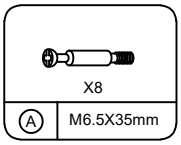




X8
A
M6.5X35mm

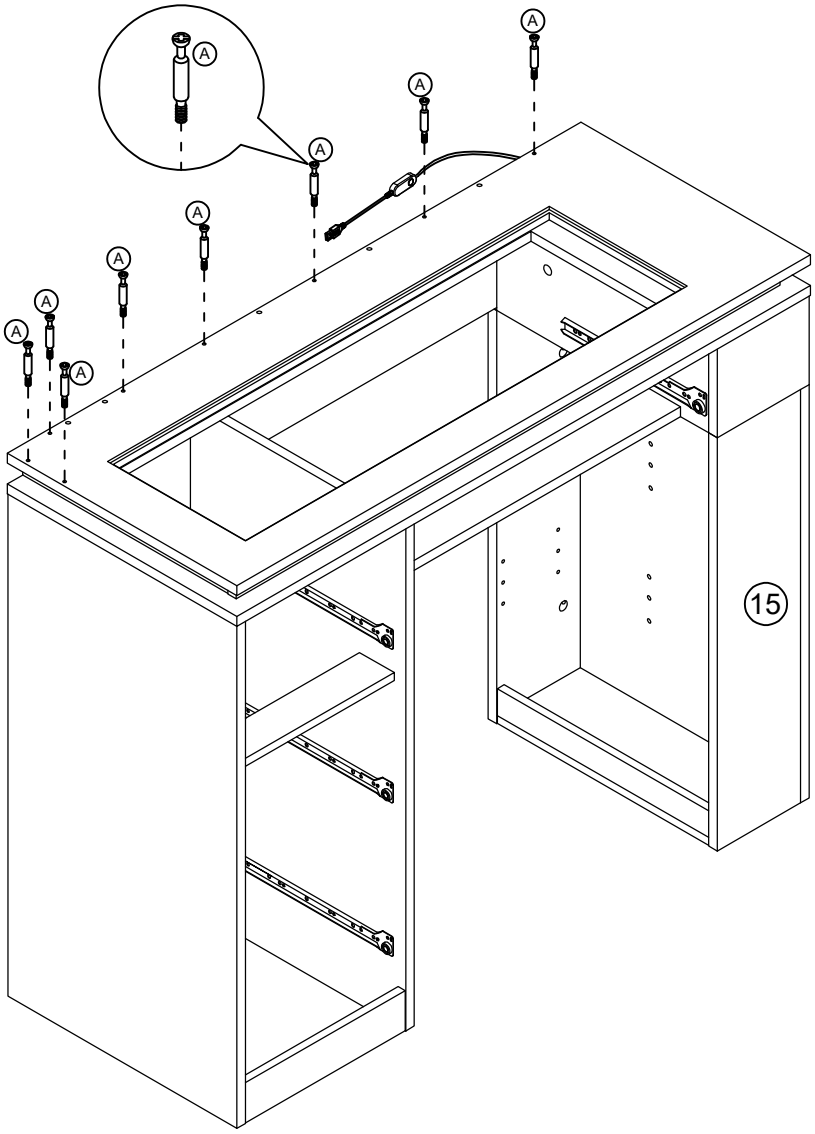
A
15

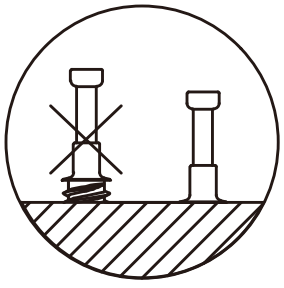


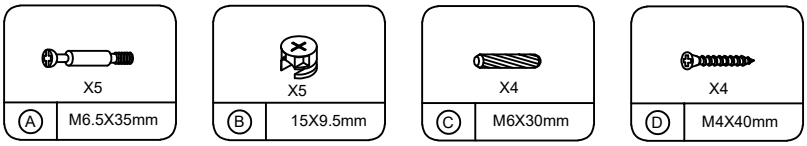




X5
A
M6.5X35mm
X5
B
15X9.5mm
X4
C
M6X30mm
X4
D
M4X40mm

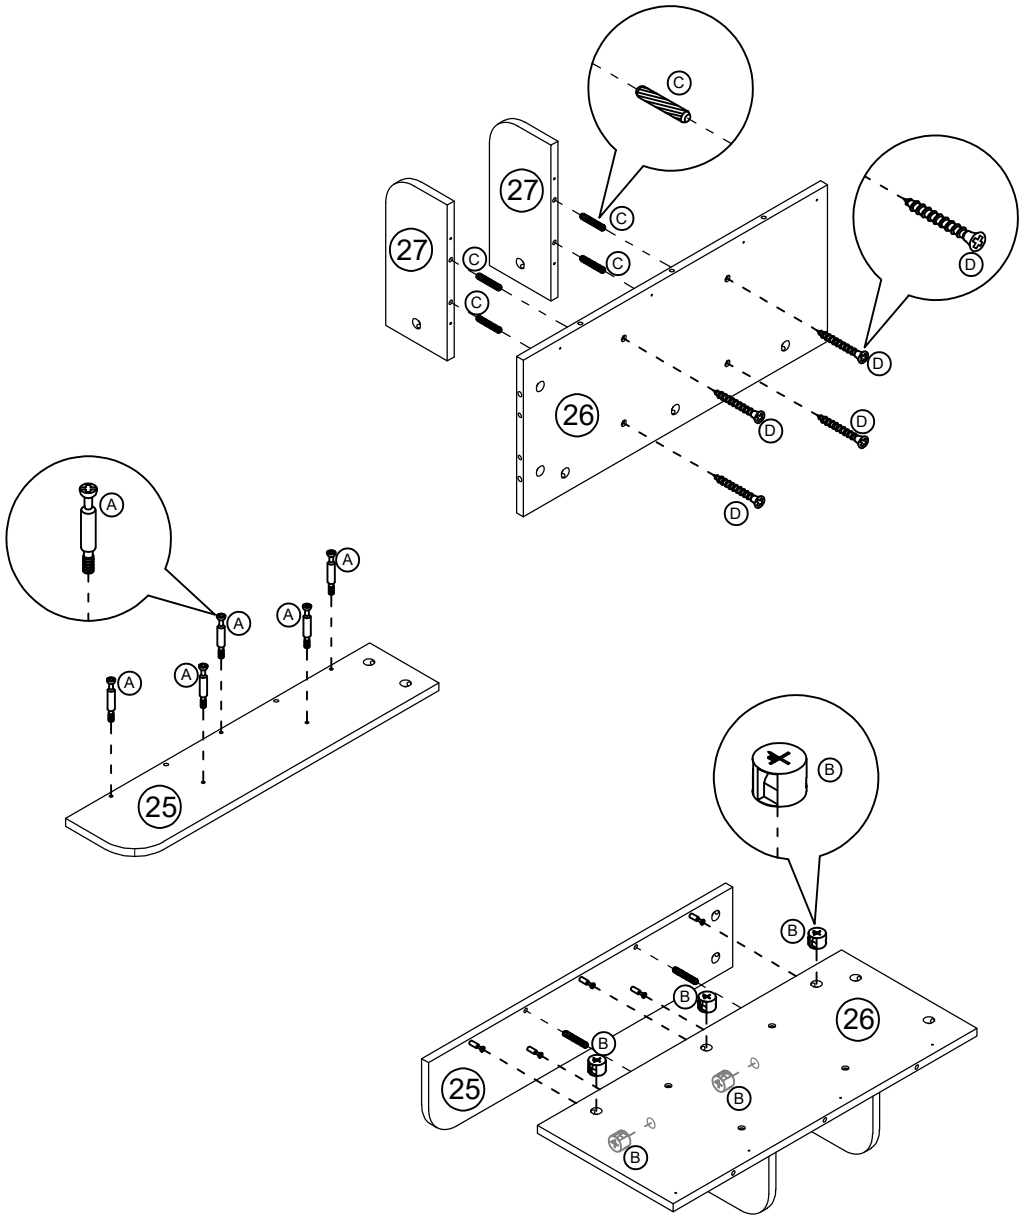
C
27
27
C
C
C
D
D
D
D
D
26
A
A
A
A
A
25
B
B
B
B
B
B
26
25

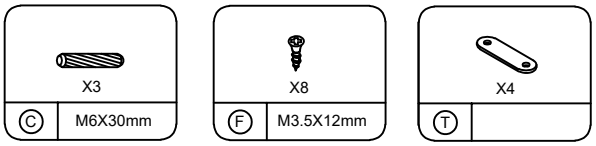




X3
C
M6X30mm
X8
F
M3.5X12mm
X4
T

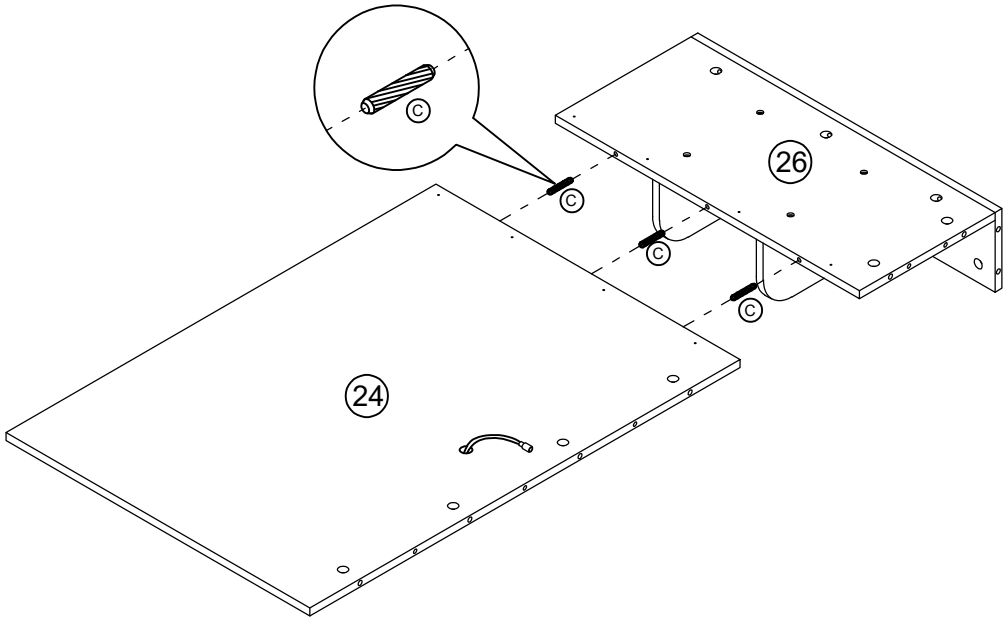

C
26
24

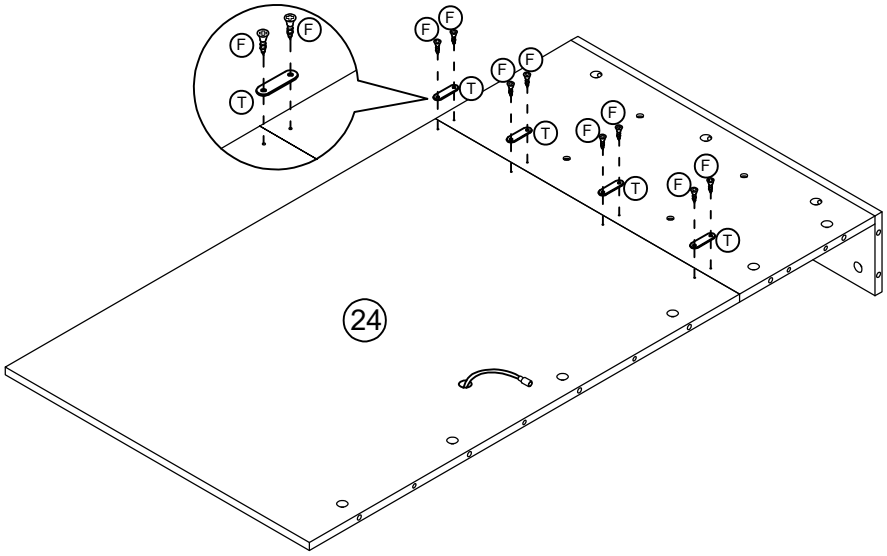
F
T
24




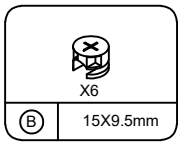

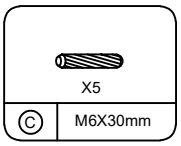


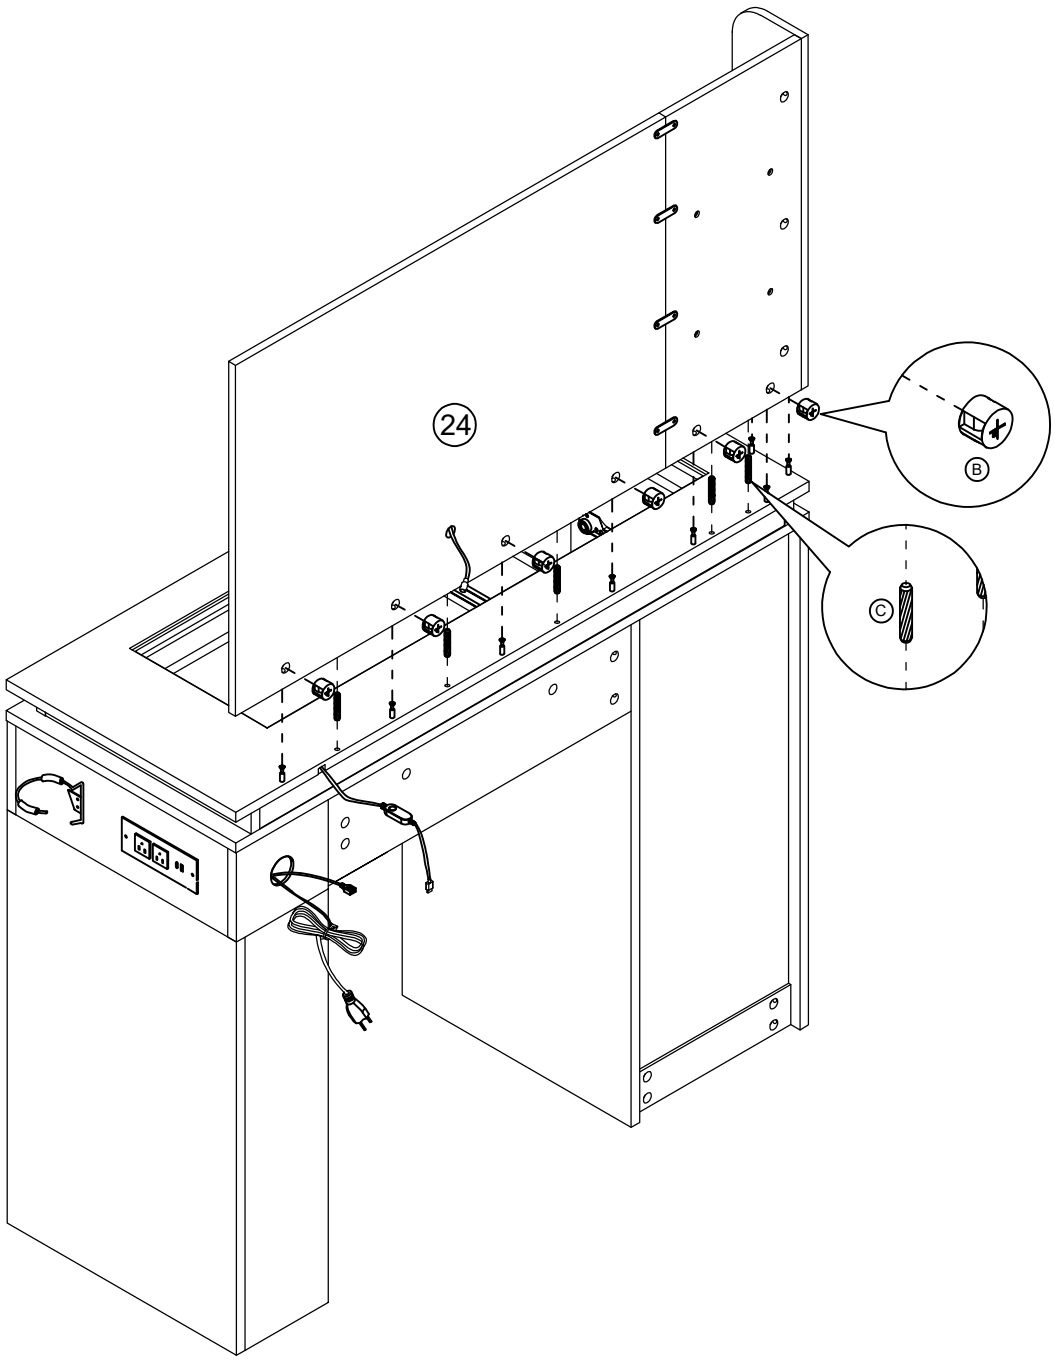


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

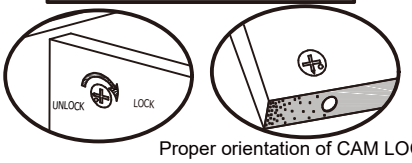



Proper orientation of CAM LOCK

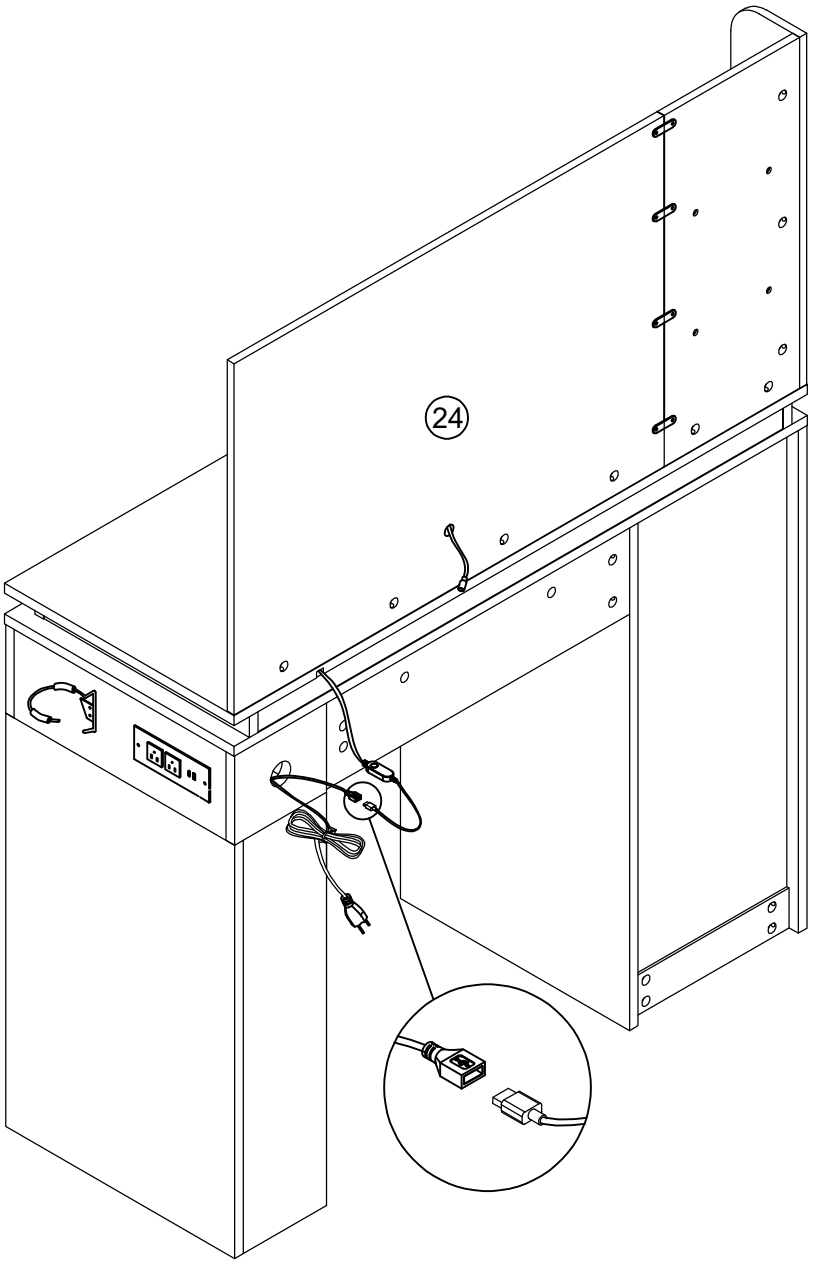
24

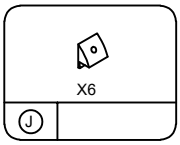



X6
J

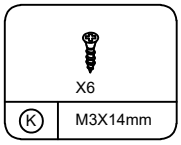

X6
K
M3X14mm

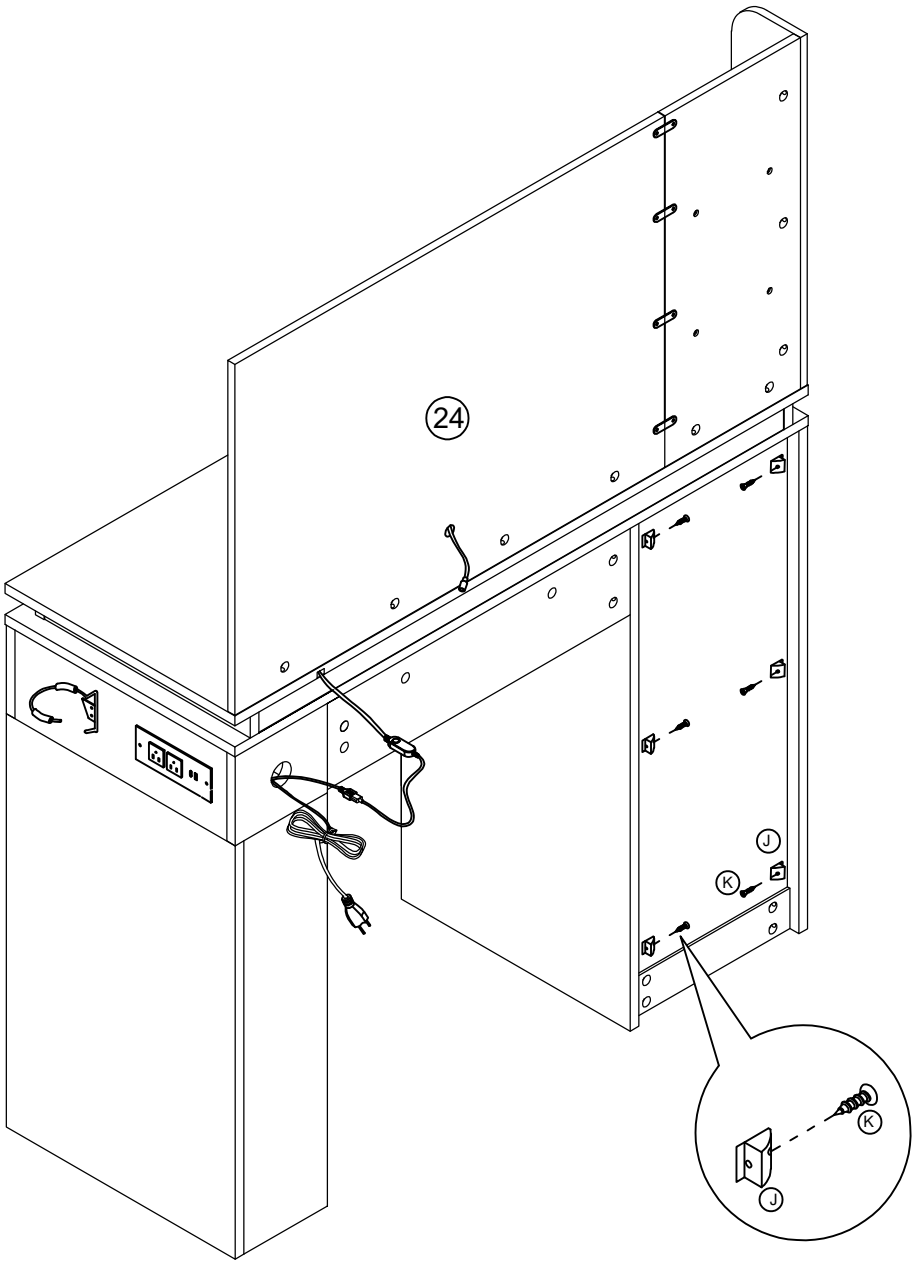

24
J
K
K
J





x2

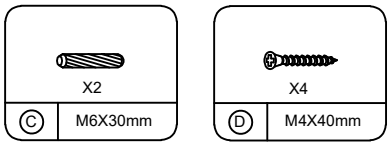


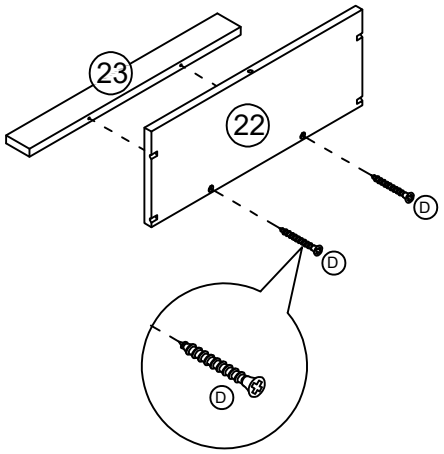


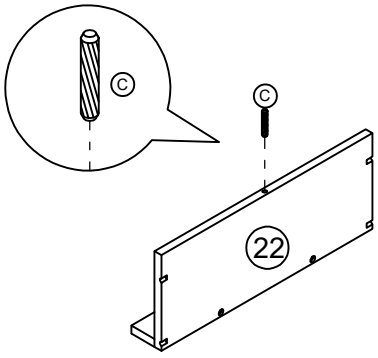


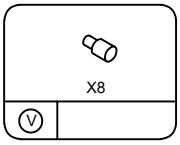

X8
V

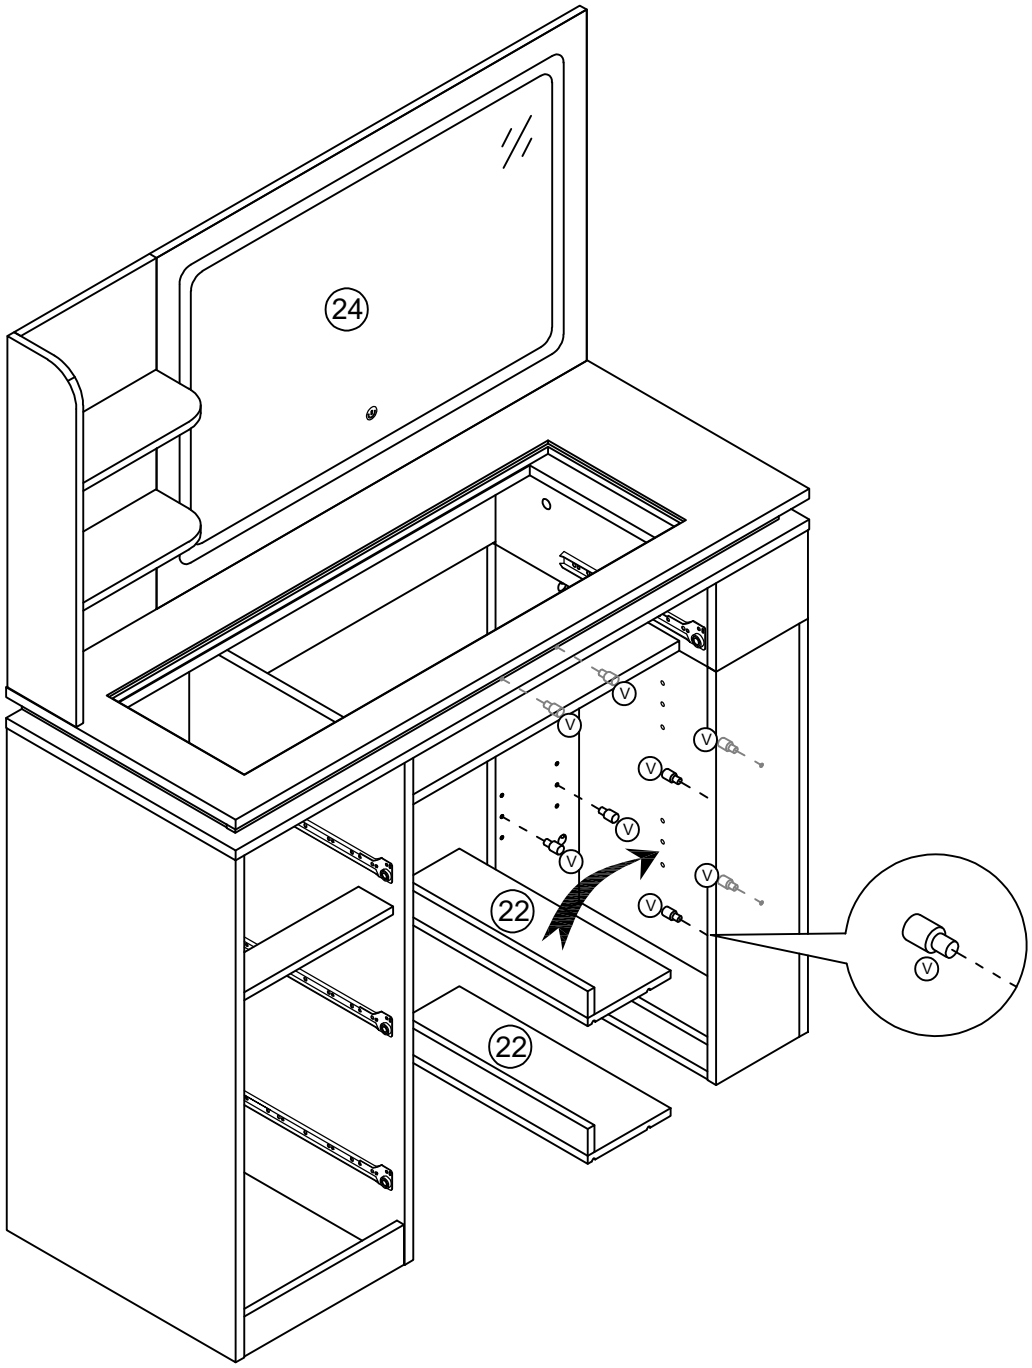

24
22
22
V

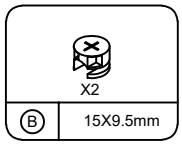

X2
B
15X9.5mm

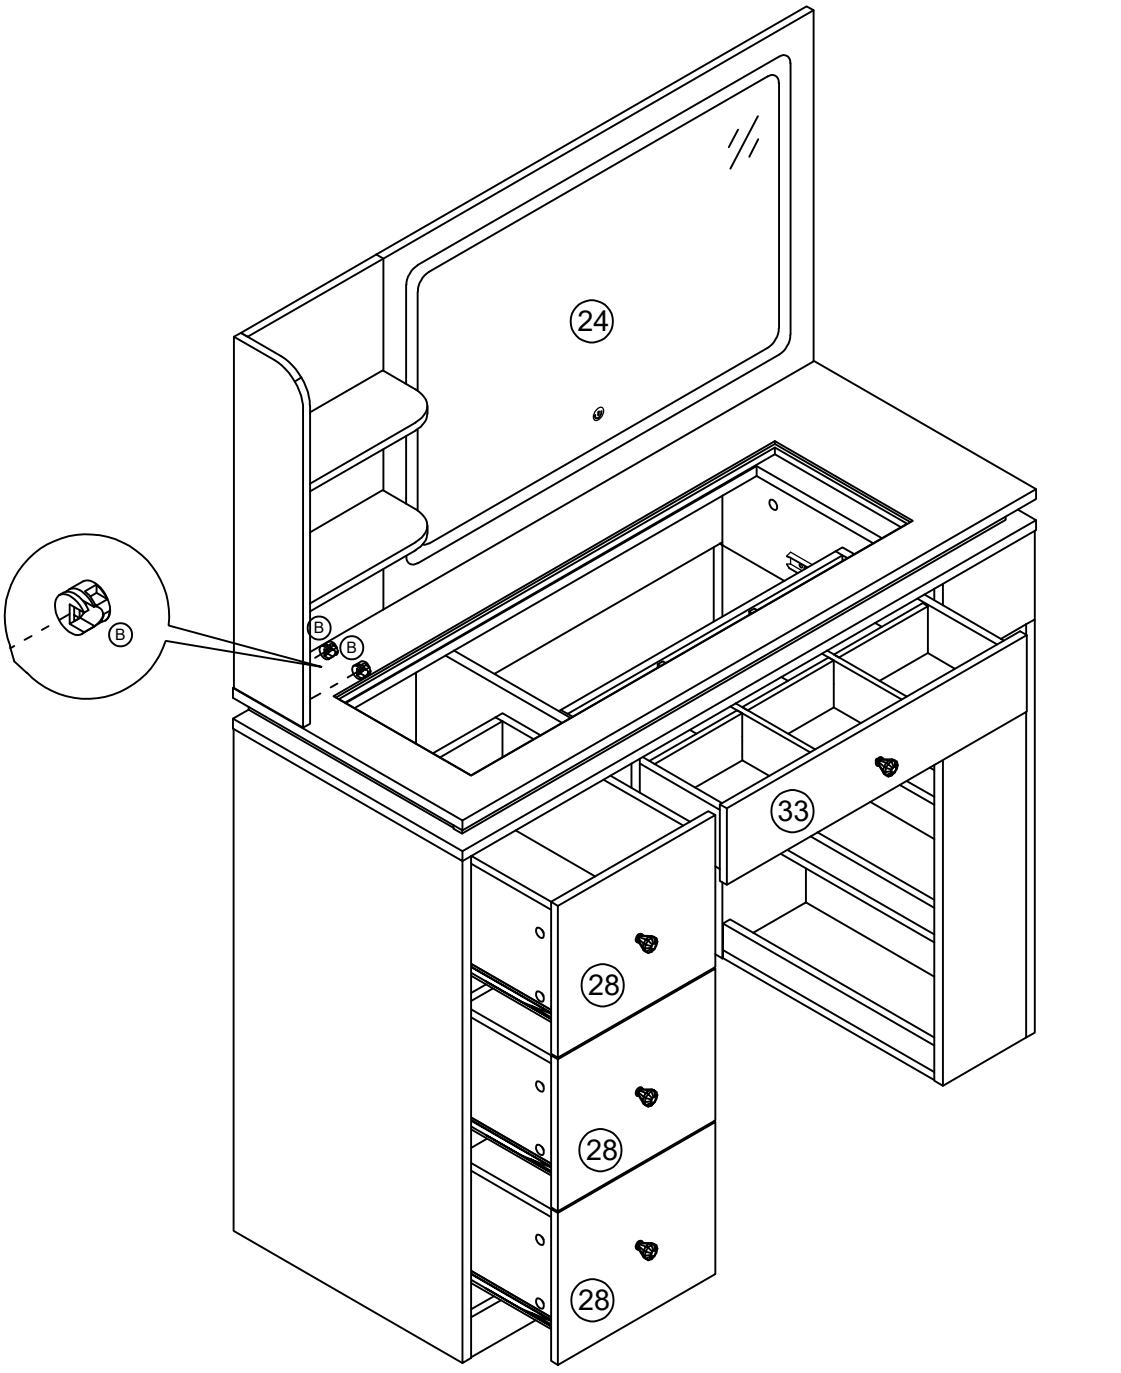
24
B
B
B
33
28
28
28

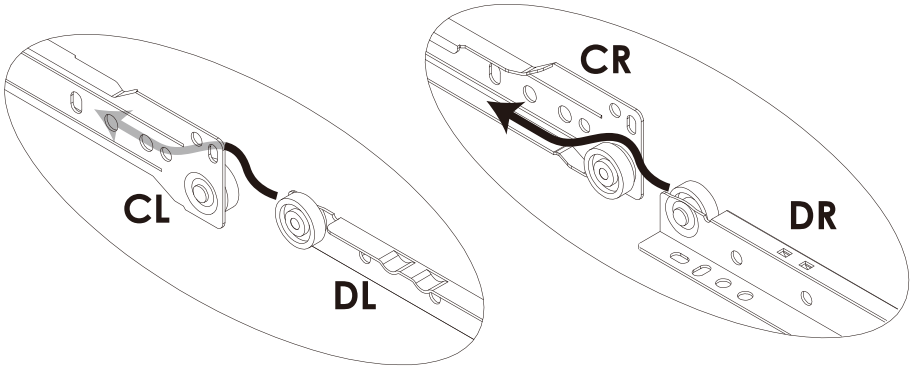
CL
DL
CR
DR

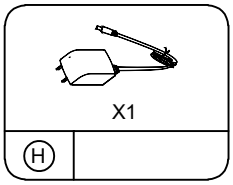
X1
H

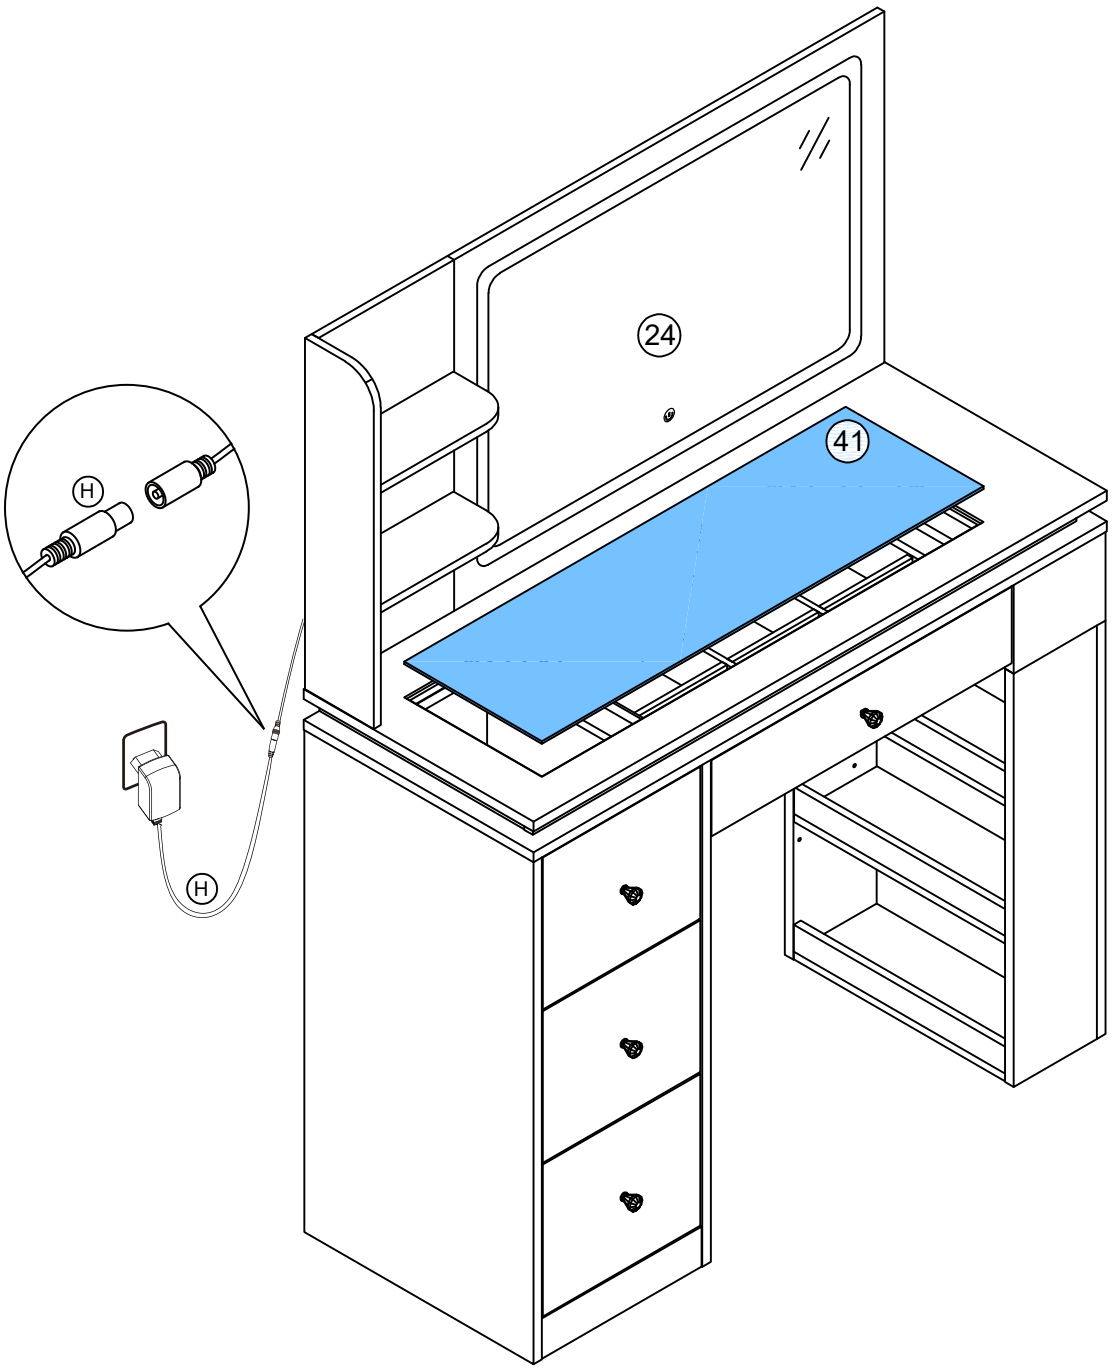
24
41
H
H

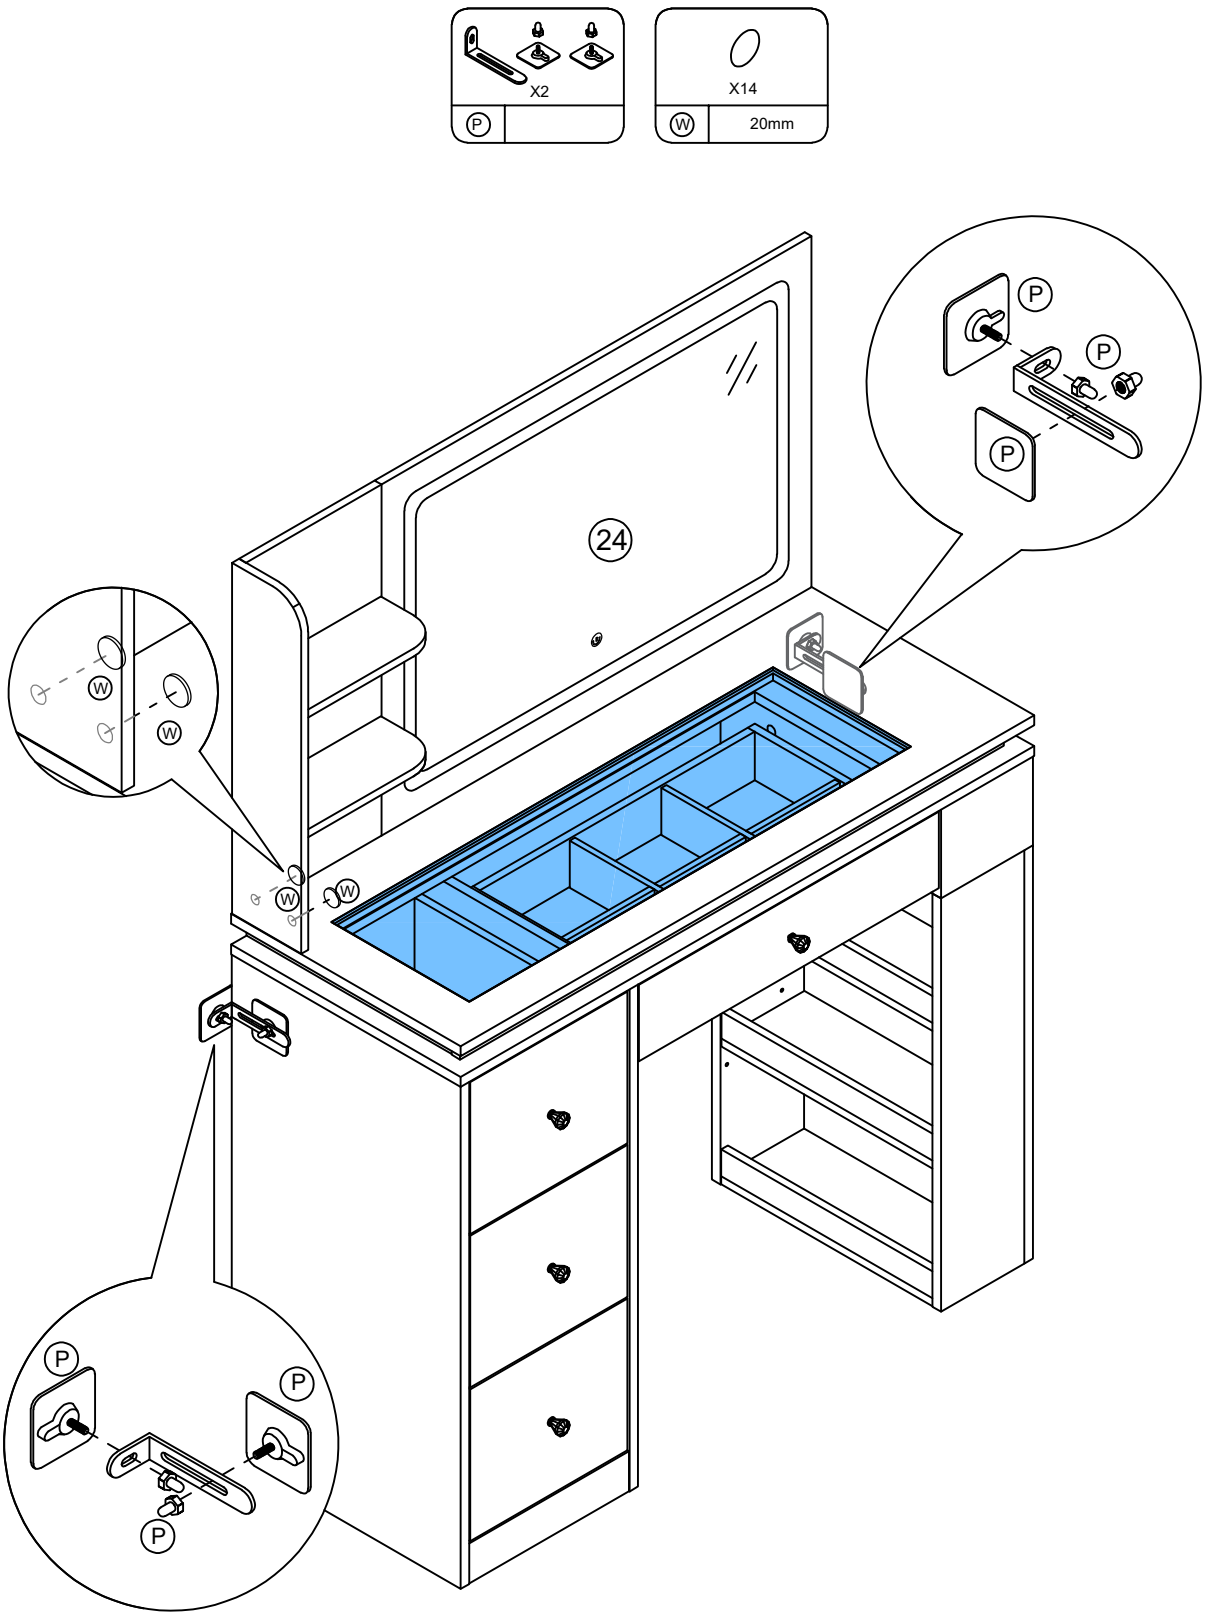
X2
P
X14
W
20mm
24
P
P
P
W
W
W
W
P
P
P