


FLORAVANTI CHENILLE AND METAL ACCENT STOOL

DESIGN# SFV2261

Assembly Instructions

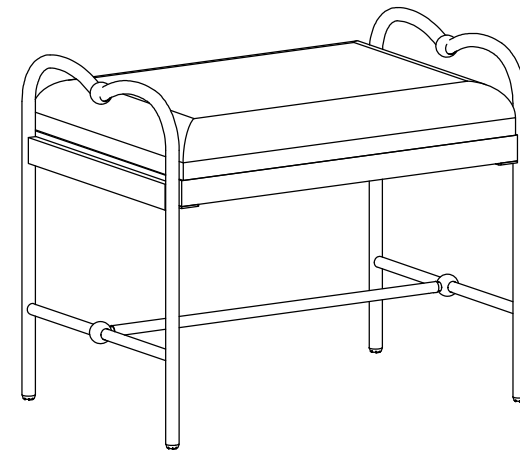

Need help?
Feel free to contact us via email or call
if you have any specific questions!



contact us:
cs@safavieh.com
866-422-9070

SAFAVIEH
C O U T U R E

Thanks for bringing
Safavieh Couture into
your home

Everything we make is incredibly
simple to set up, including your new
stool. You won't need any
additional tools.


Parts List

A X 1 Seat Cushion	
B X 2 Side Frame	
C X 1 Seat frame	
D X 1 Circular Connecting Tube	


Hardware List

HW1 x 6 Hex Socket Bolt 1/4"-20 x 0.625"	
HW2 x 4 Hex Socket Bolt 1/4"-20 x 1"	
HW3 x 4 Wood Screw ø4x15mm	
HW4 x 1 Allen Key M4	

1
Insert the Connecting Bar (D) into the connection points on both of the Side Frames (B).
Attach them together by using the Allen Key (HW4) to screw in the 2 Hex Socket Bolts (HW1).
Align the bolt holes on the Side Frames (B) with the threaded holes on the Seat Frame (C).
Attach them together by using the Allen Key (HW4) to screw in the 4 Hex Socket Bolts (HW2).

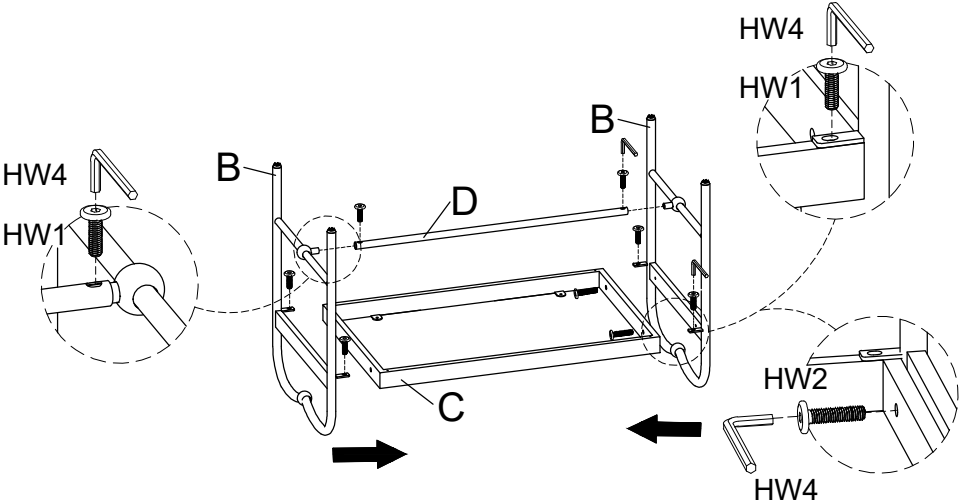

2
Place the Seat Cushion (A) upside down on a soft and clean surface. Align the assembled metal base with the bottom of the Seat Cushion (A). Using a Phillips head screwdriver (not included) screw in the 4 Wood Screws (HW3) through the mounting tabs on the Seat Frame (C), and into the bottom of the Seat Cushion (A). Fully tighten all screws before use.

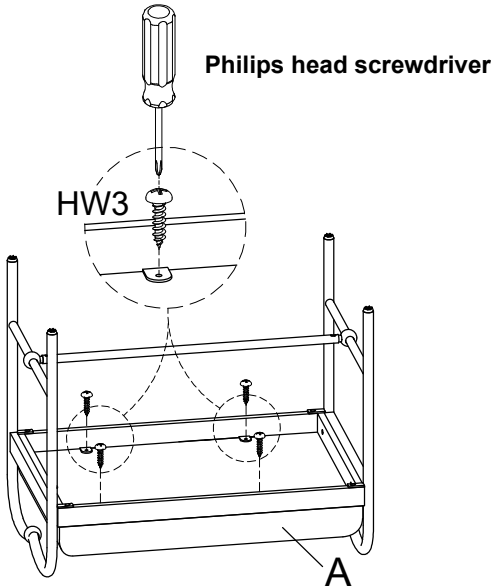

3
Place the stool in the place where you will use it and adjust the levelers on the bottom of the legs as needed to make the bench level. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

