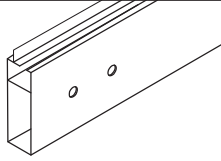
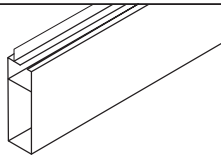
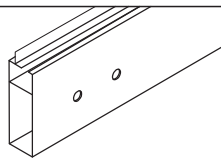
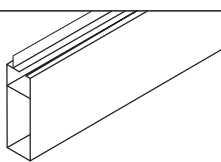
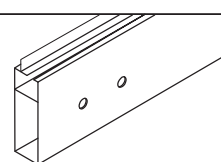
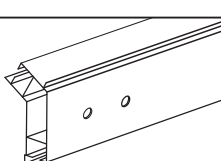
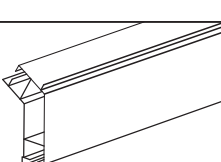
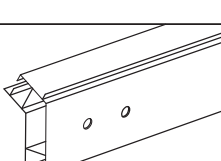
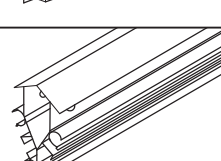
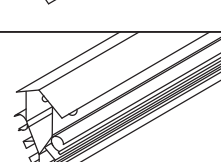








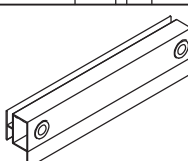
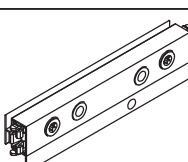
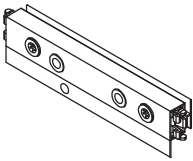

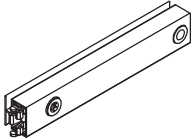
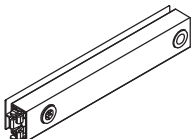
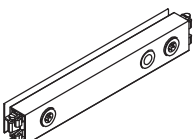
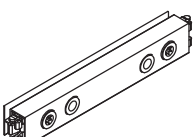
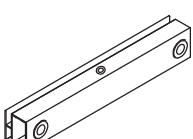
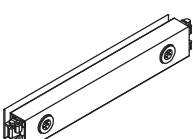
				
Toolbox	Hammer	Glove	Power drill	Tape Measure	Bitbits









Aluminum Parts:

No.	Picture	Qty.
A1-1		x2
A1-2		x2
A2-1		x2
A2-2		x2
A2-3		x2
A3-1		x2
A3-2		x2
A3-3		x2
A4-1		x2
A4-2		x1

No.	Picture	Qty.
A5-1		x2
A5-2		x2
A6-1		x1
A6-2		x1
A7-1		x1
A7-2		x1
A8-1		x1
A8-2		x1
A9		x1
A10-1		x2

Aluminum Parts:

No.	Picture	Qty.
A10-2		x2
A11-1		x1
A11-2		x1
A12		x4
A13		x4
A15		x14
A16		x10
A17		x2
A18-1		x1
A18-2		x1
A19		x1

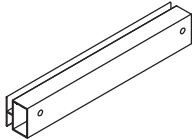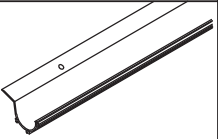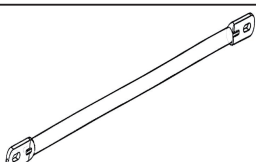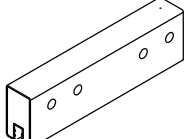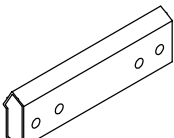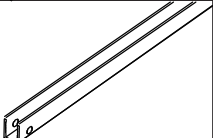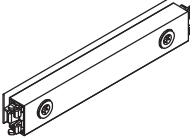No.	Picture	Qty.
A20		x2
A21		x4
A21-1		x2
A23		x8
A25-1		x7
A25-2		x14
A25-3		x4
A26		x6
A27		x4
A28		x2
A30-2		x2
A31		x1

Plastic Parts:



No.	Picture	Qty.
H1		x4
H2-1		x2
H3-1		x2



No.	Picture	Qty.
H4		x2
H5		x2
C5		x4

Hardware:







No.	Picture	Qty.	Size
H6		x34	M6x30
H7		x1	
H8		x106	M6x12
H9		x50	M6
H11		x22	ST4x10
H12		x4	ST5x10
H13		x18	ST5x16
H14		x1	


No.	Picture	Qty.	Size
H15		x1	
H16		x2	
H17		x4	
H18		x24	M6x20
H19		x4	
H20		x2	M4x38
A30-1		x2	

Hardware :

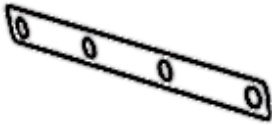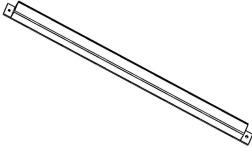
No.	Picture	Qty.
C1		x4
C2		x2
C3-1		x2
C6		x14
C7		x4
C8		x2

Twin PC Board:

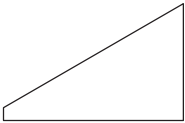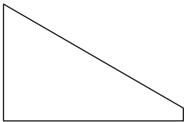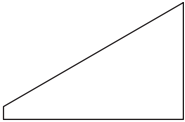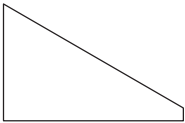
No.	Picture	Qty.
B1		4
B2		4
B3		16
B4		14
B5		2
B6		2
B7-1		1
B7-2		1
B8		1
B9-1		1
B9-2		1

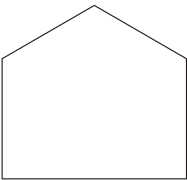No.	Picture	Qty.
B10		1
B11		2
B12		1


The white film faces
outwards if applicable.

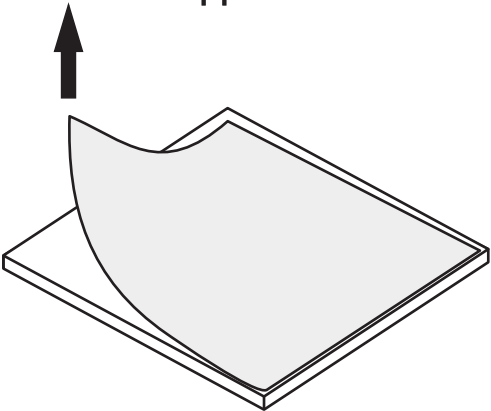

ROOF SECTION

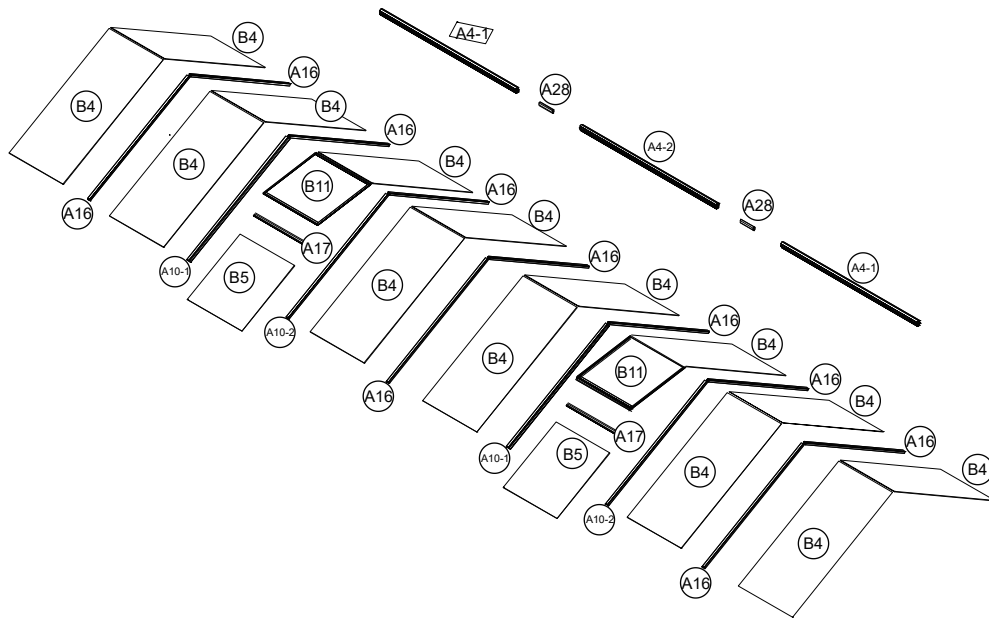


WALL SECTION

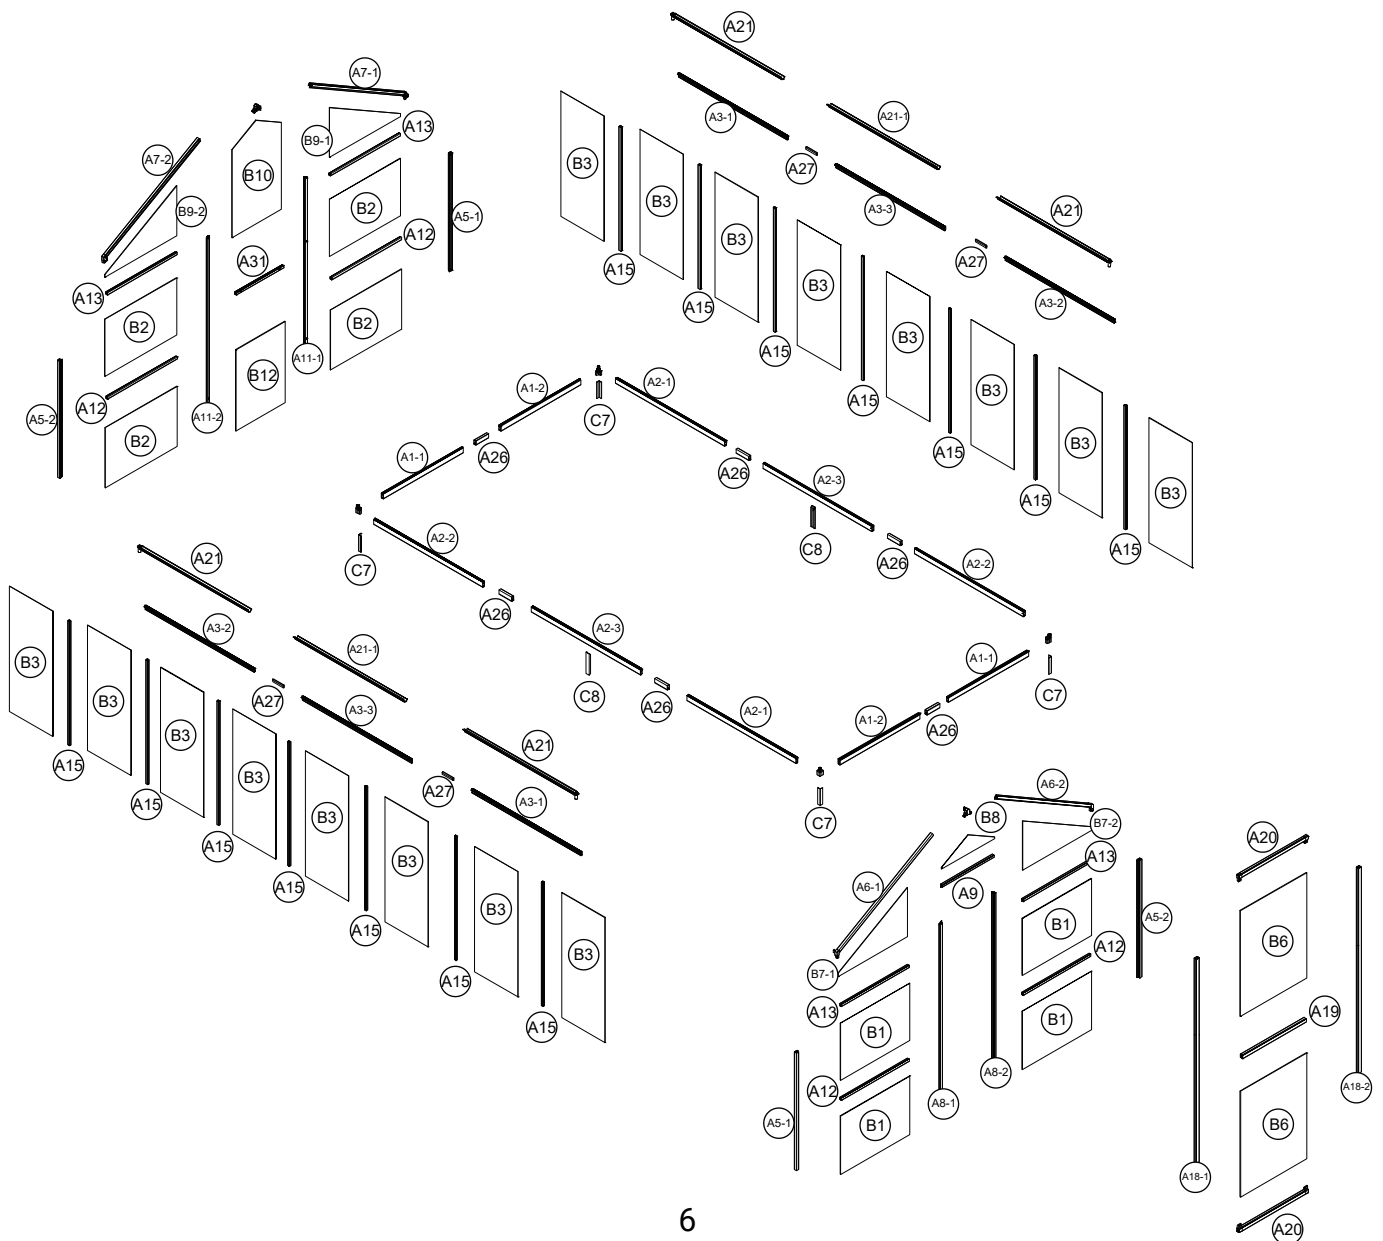


STEP 1


Please merge the fittings until there is no gap before tightening the screws.

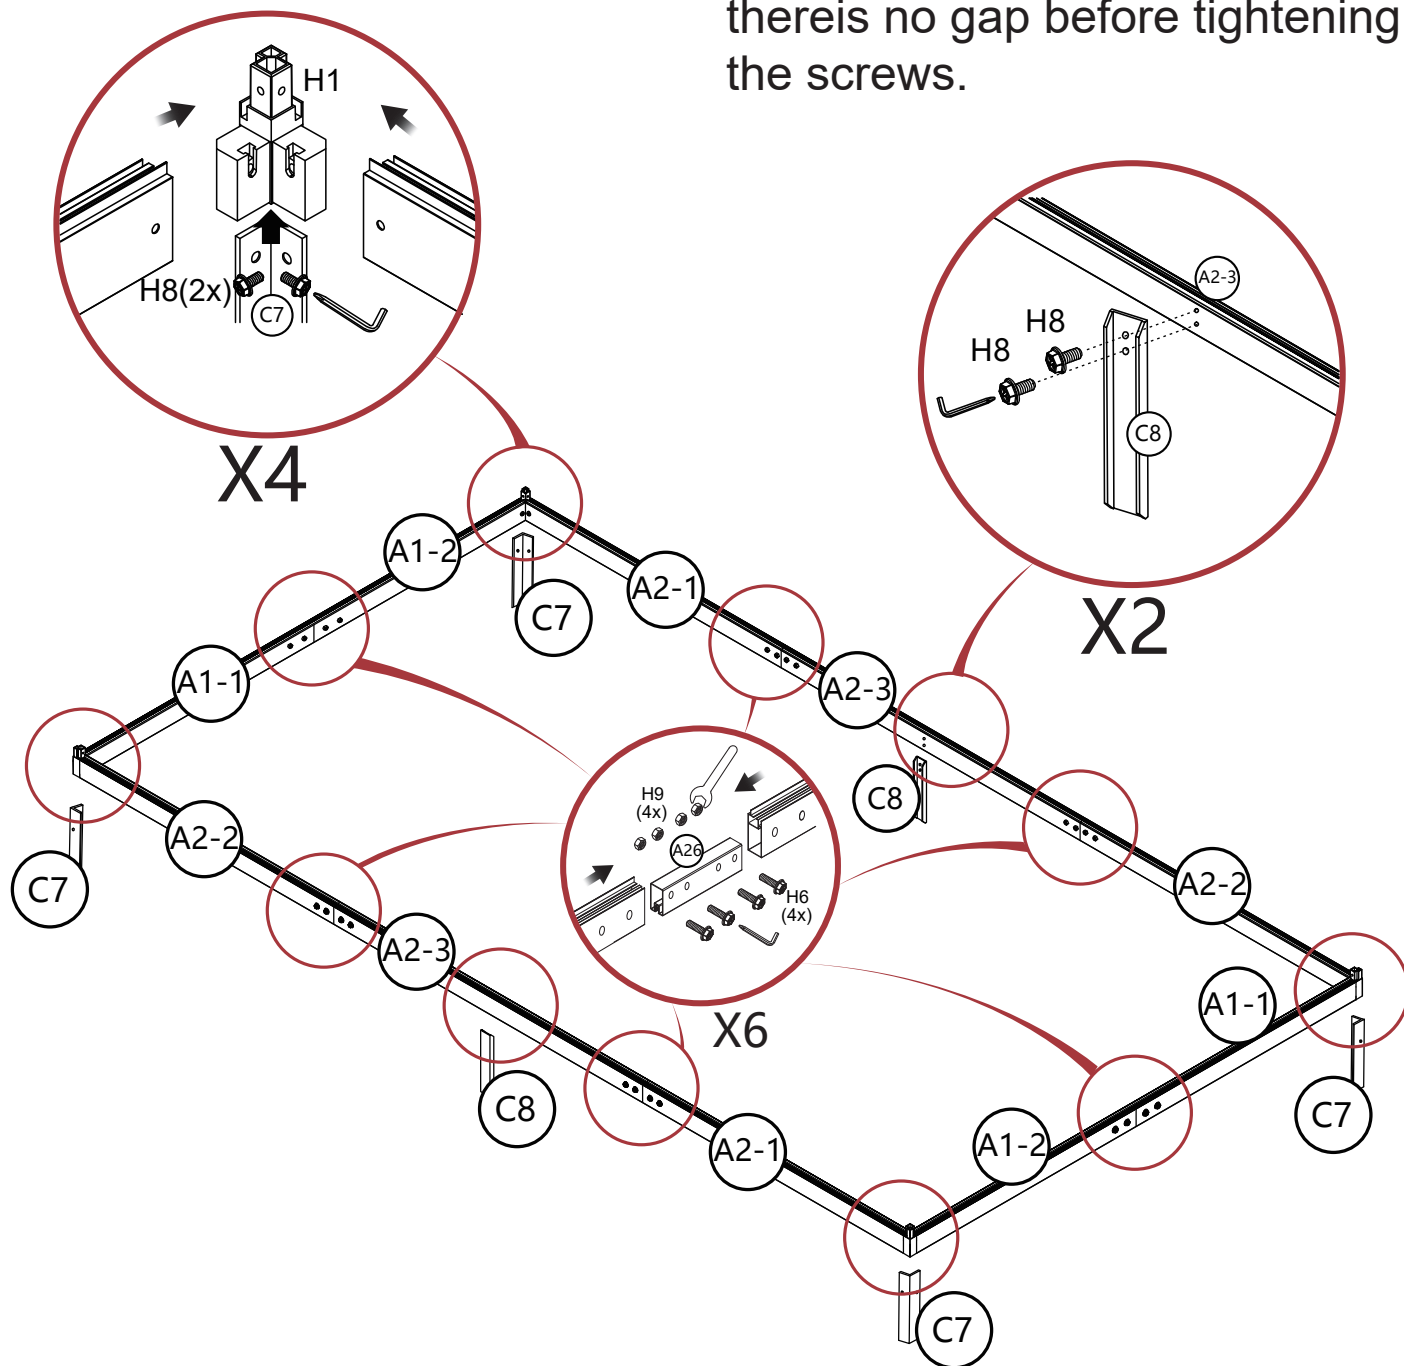


 M6x30	H6	x24
 M6x12	H8	x12
 M6	H9	x24

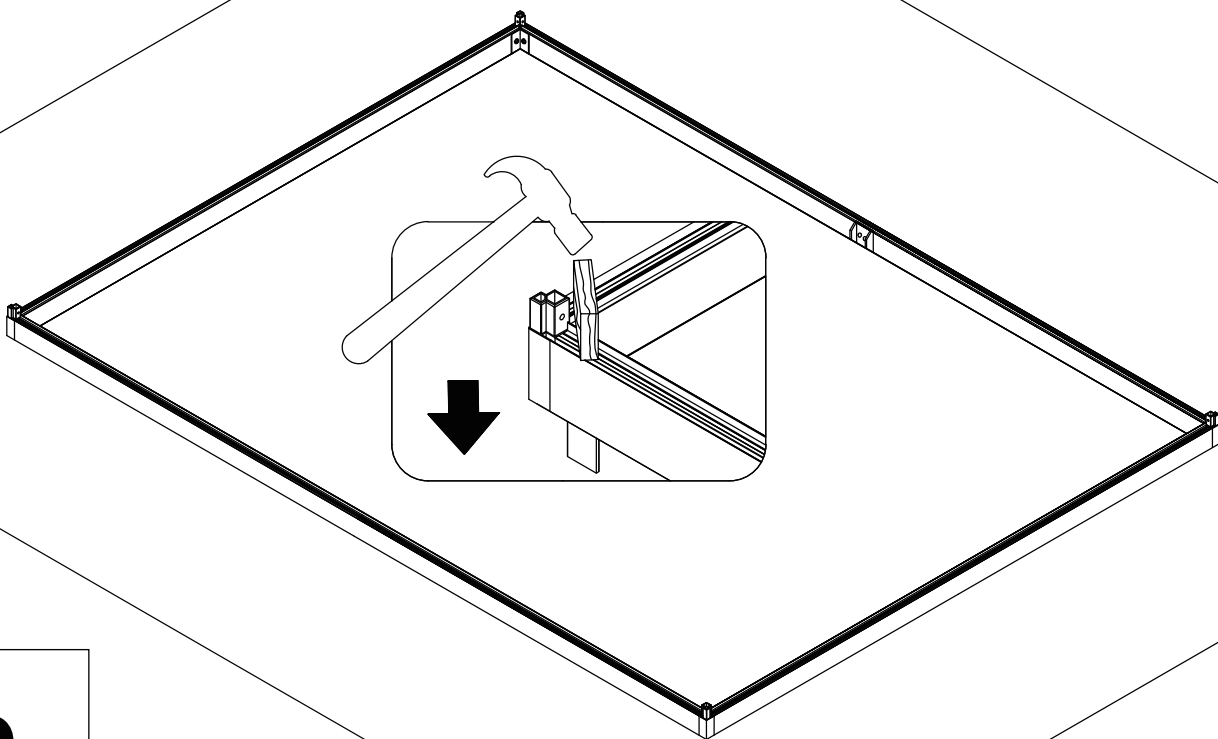


a
or
b

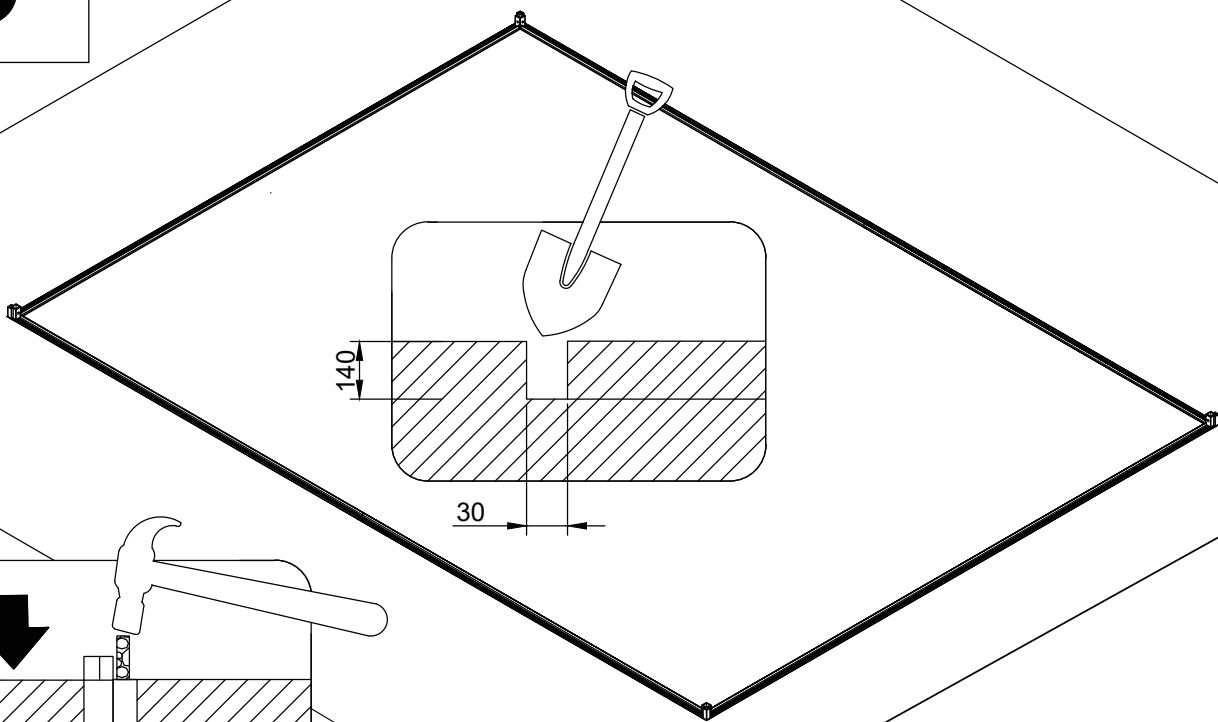




STEP 2

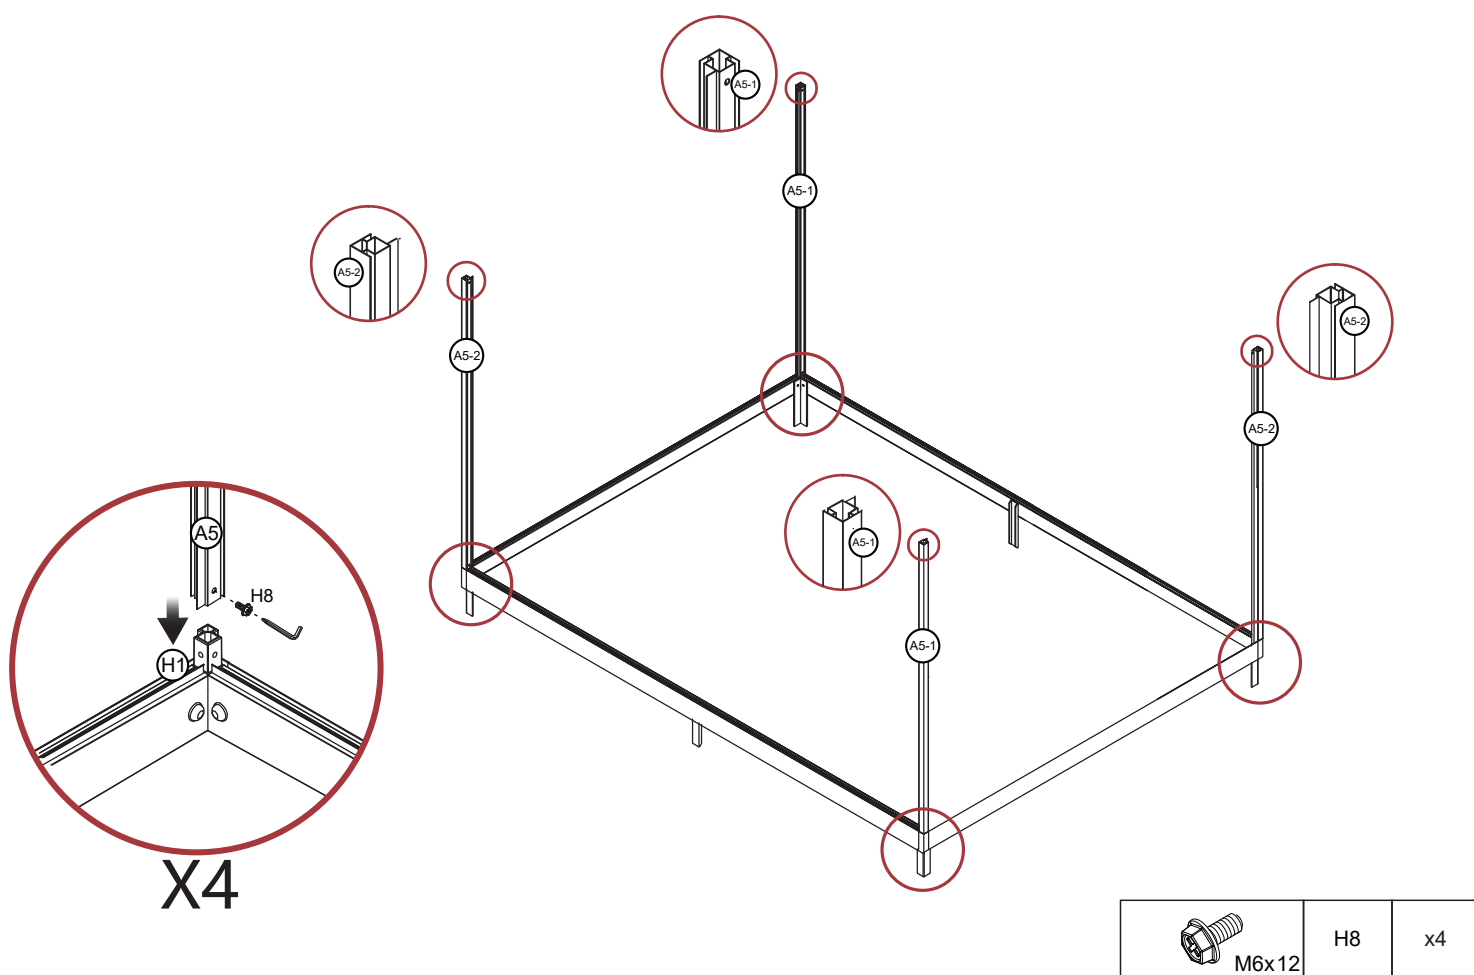

STEP 3

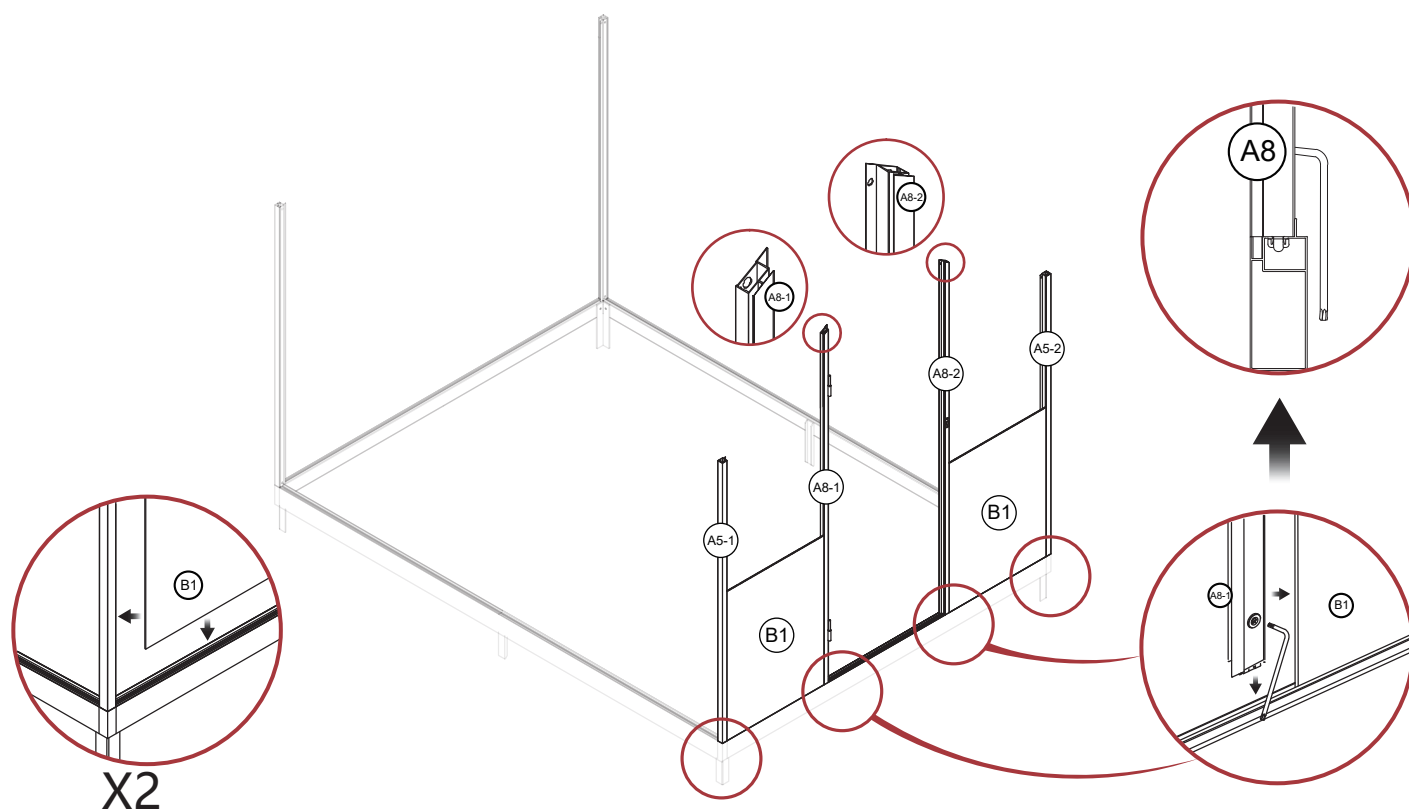


STEP 4

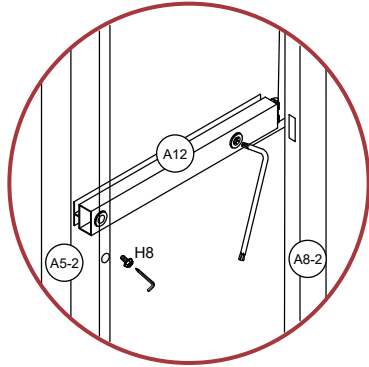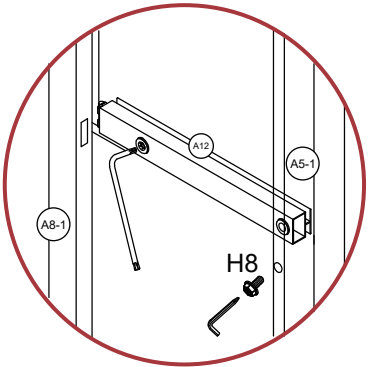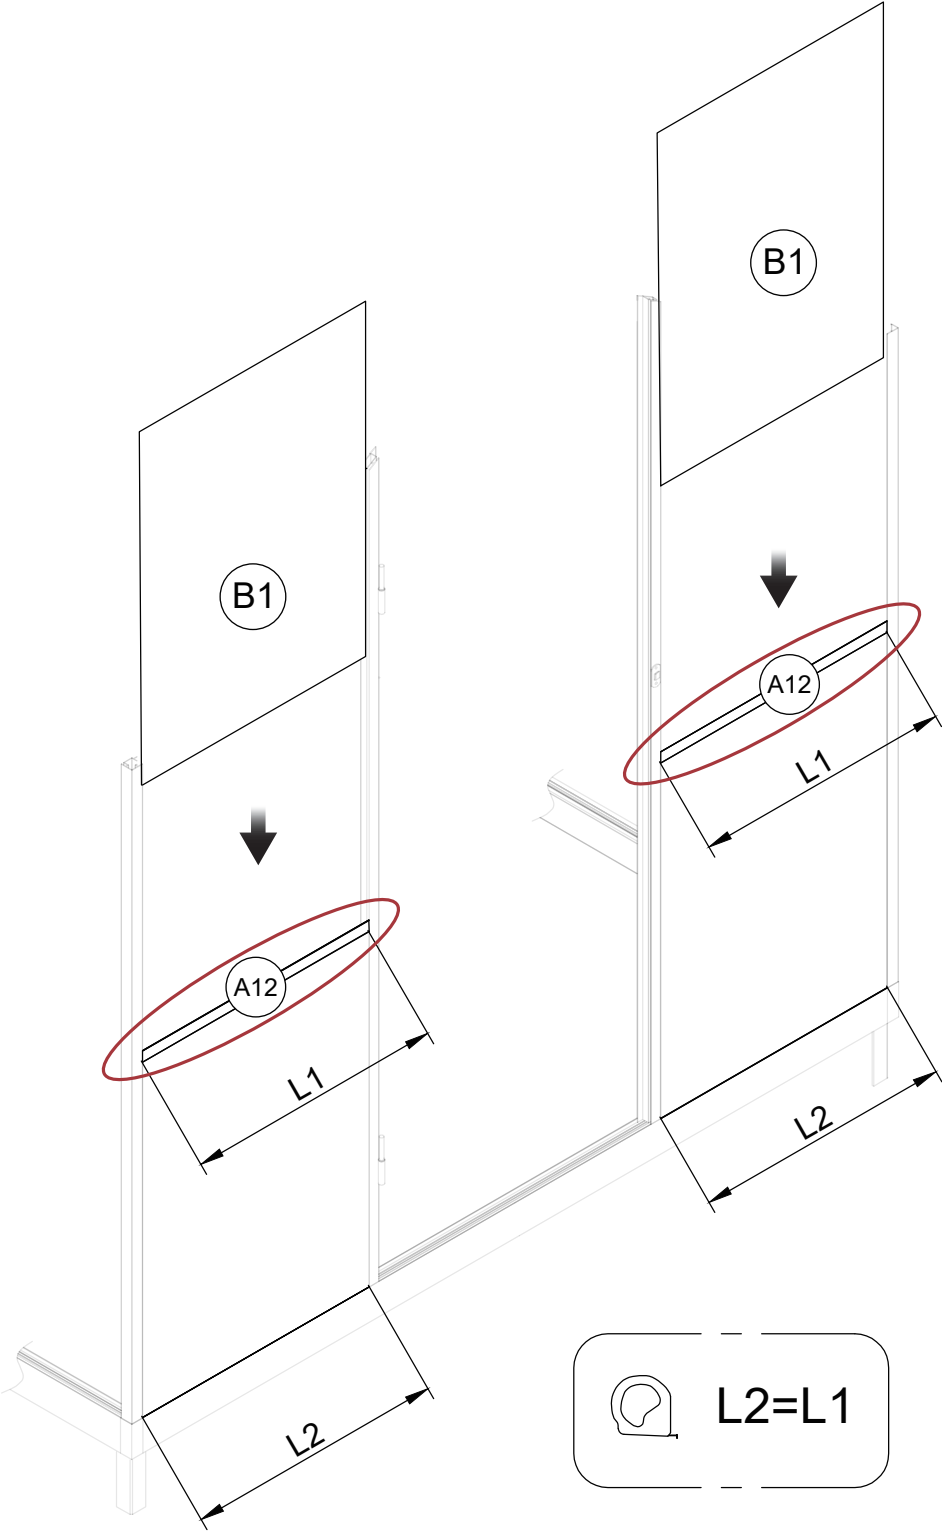



 M6x12	H8	x2
--	----	----

STEP 5

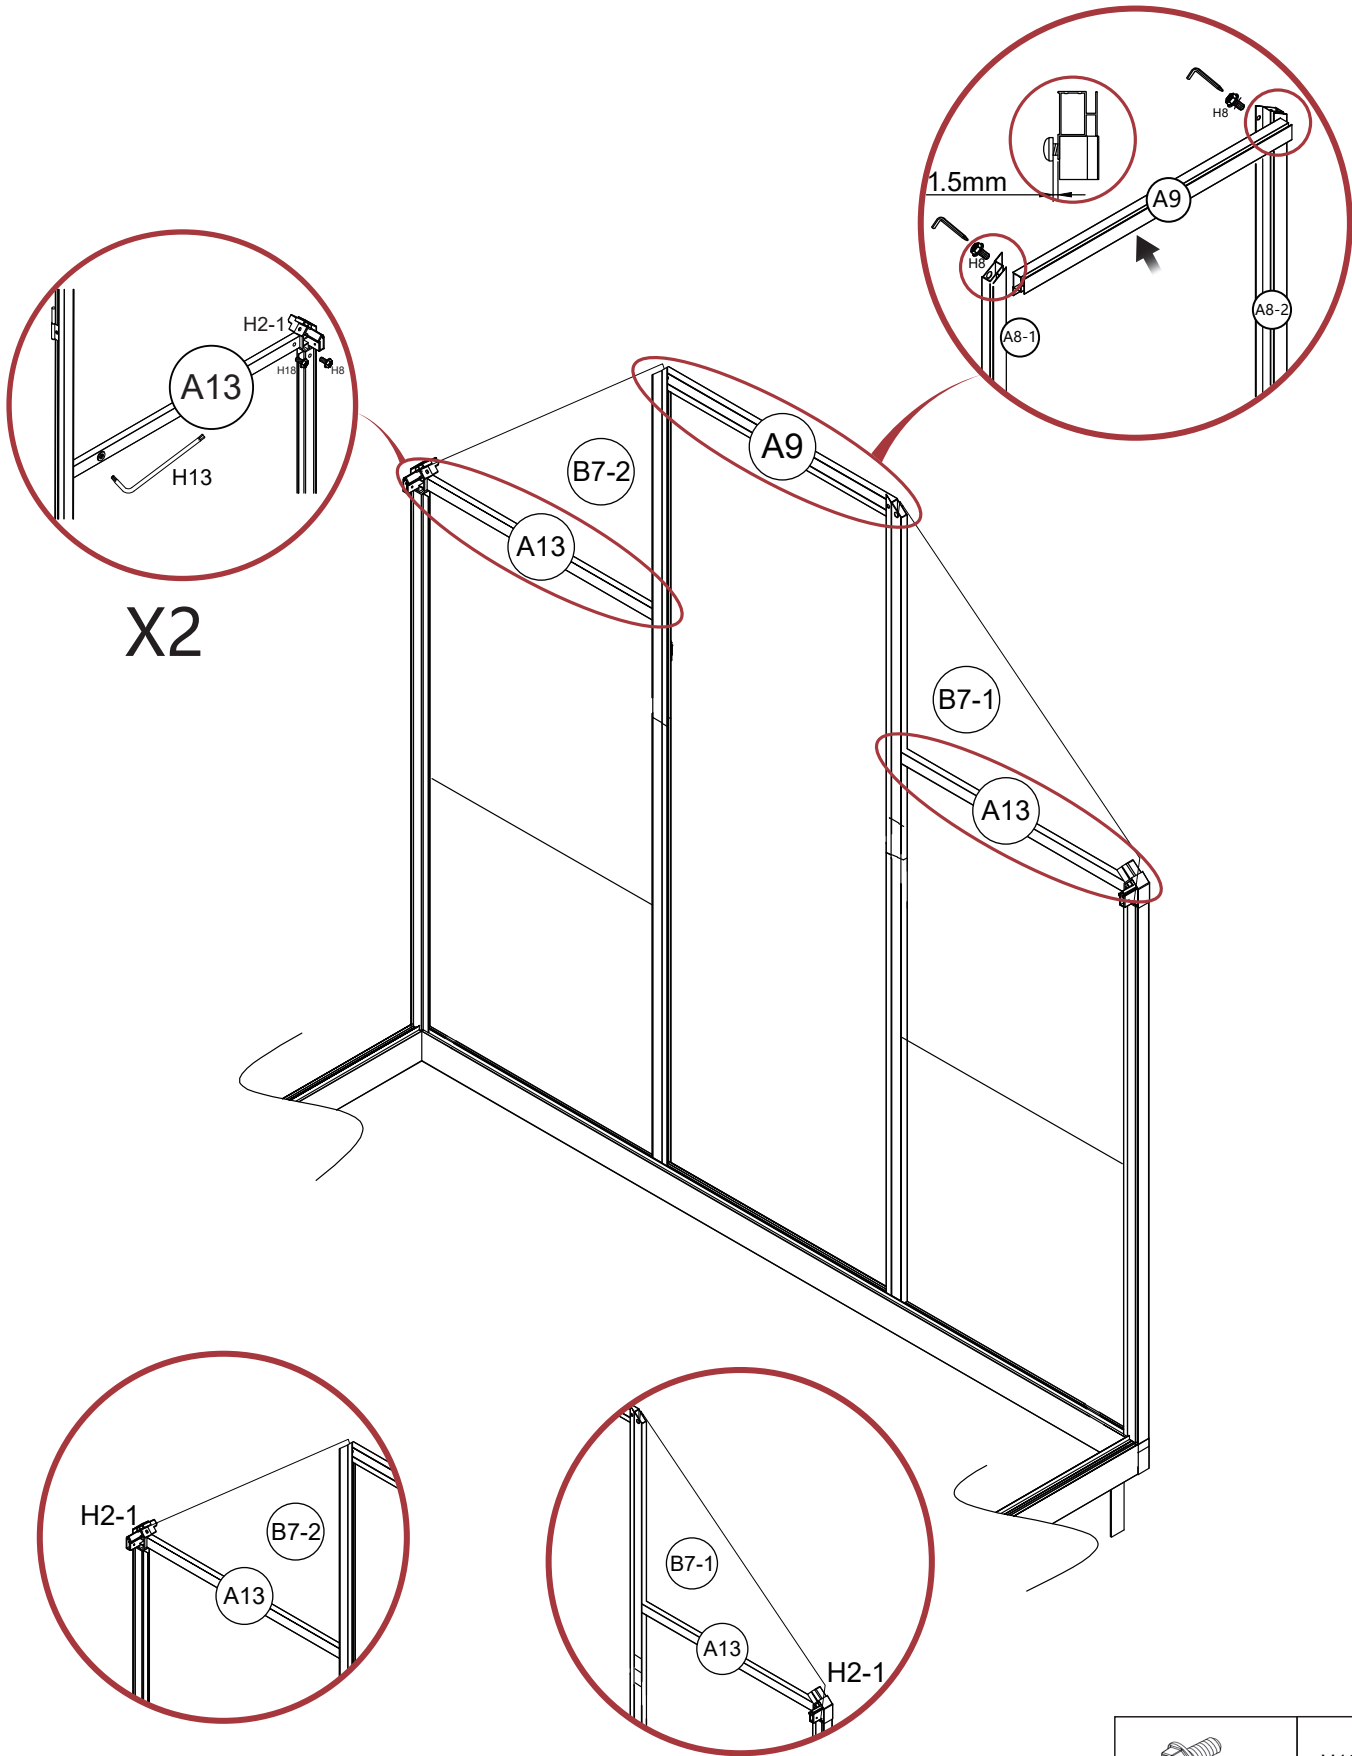


 M6x20	H18	x2
 M6x12	H8	x4

STEP 6

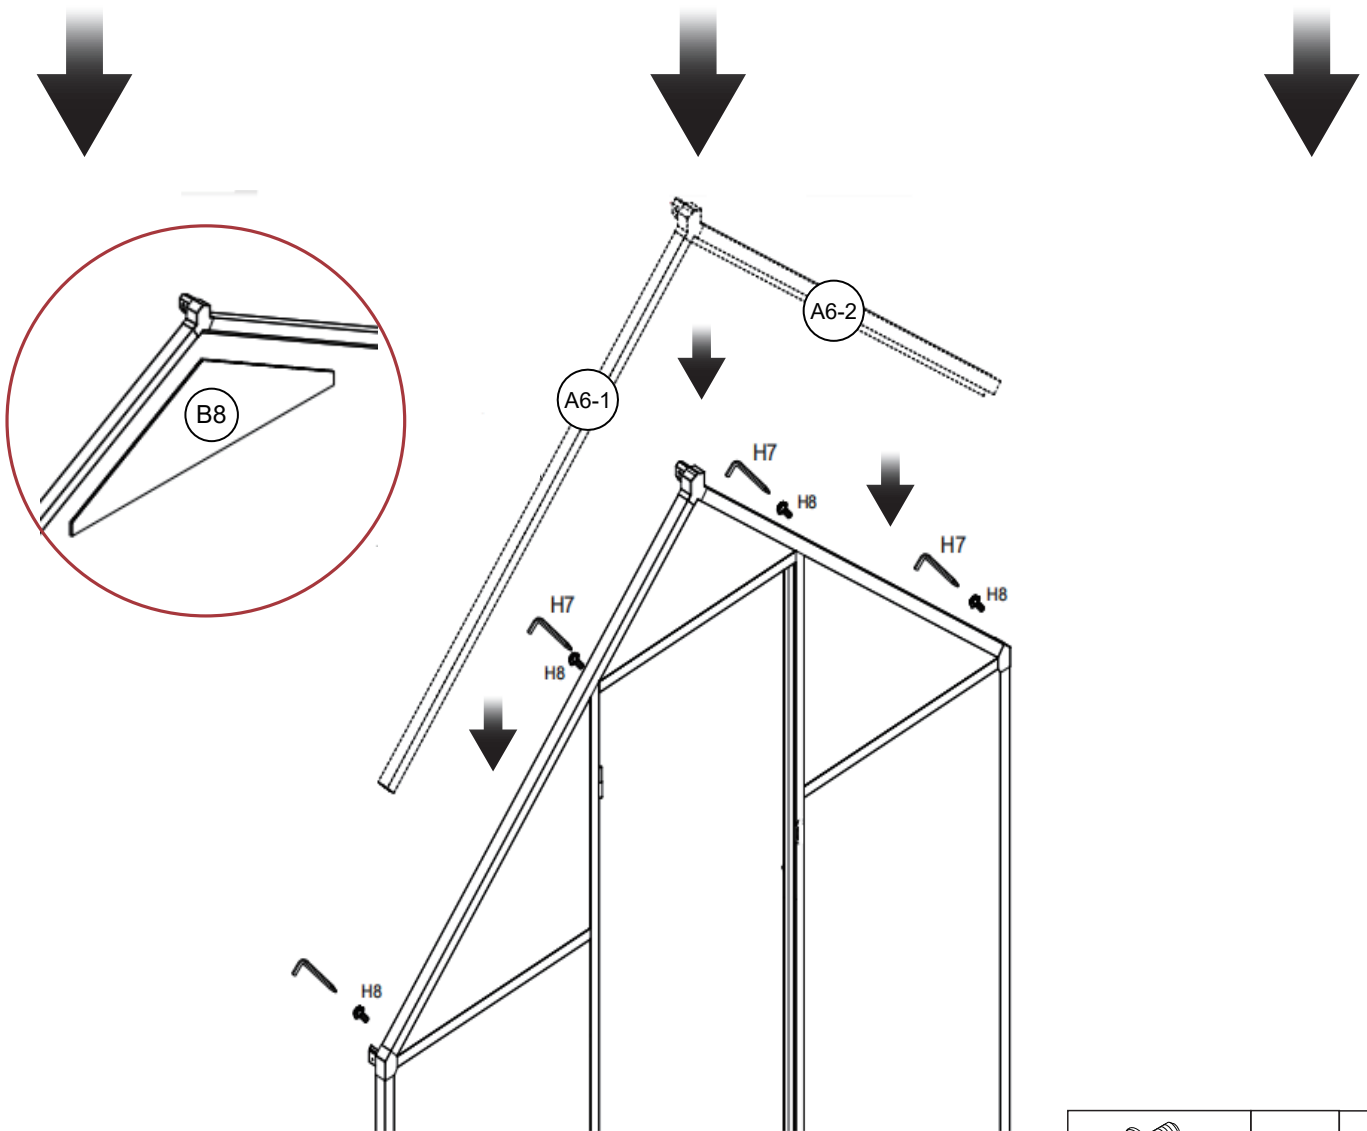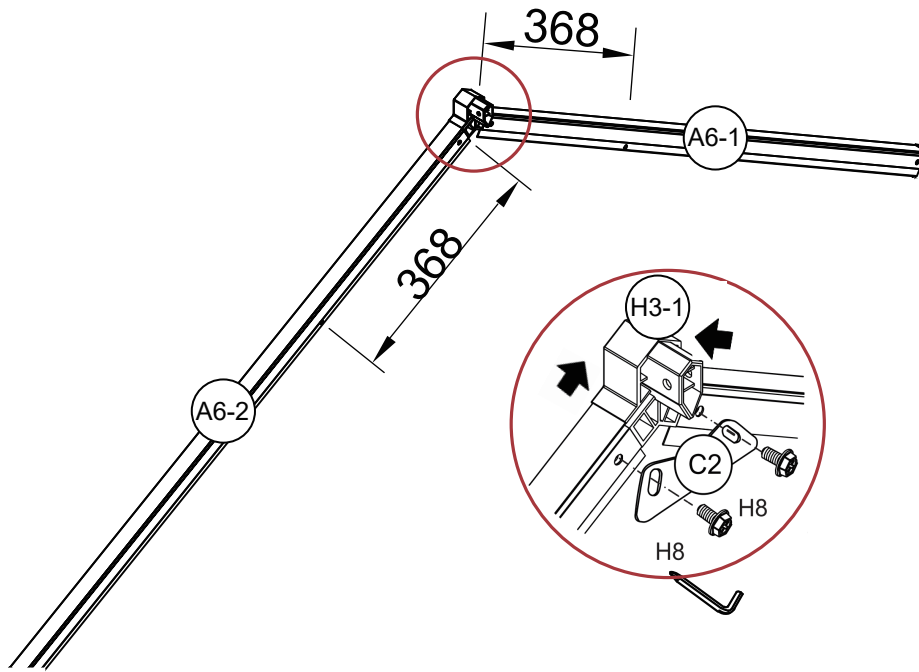


 M6x12	H8	x6
---	----	----


STEP 7

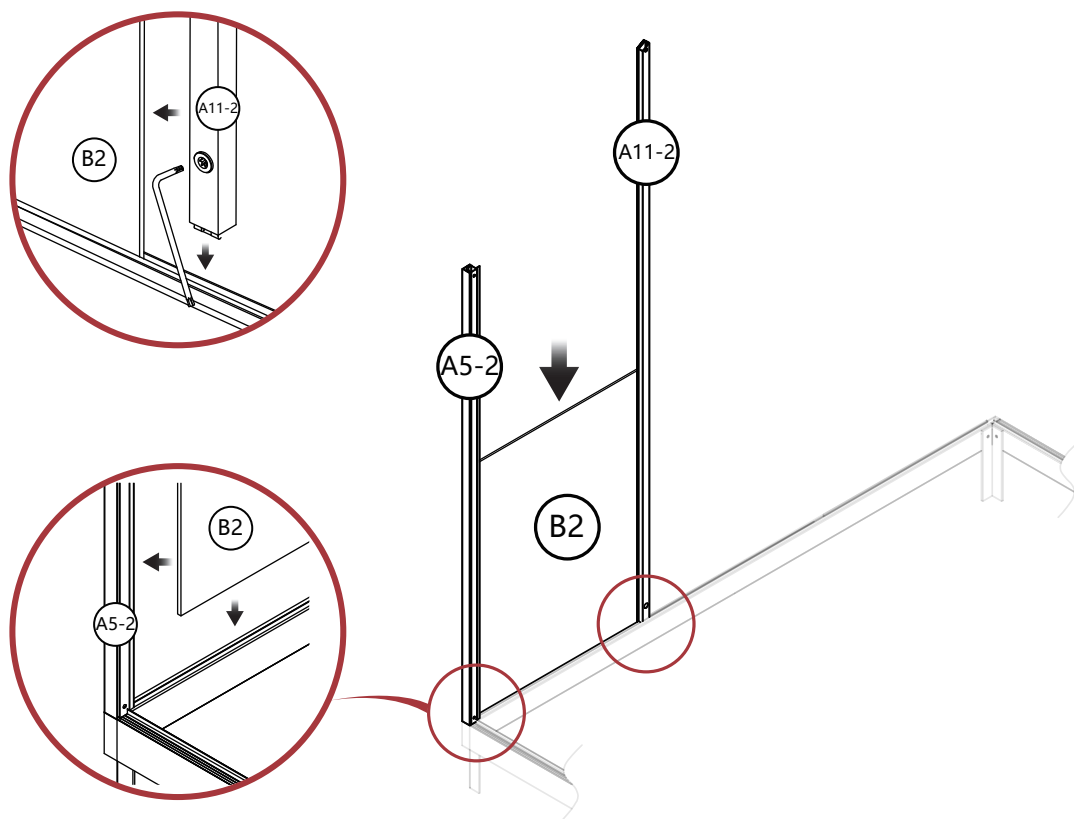

STEP 8

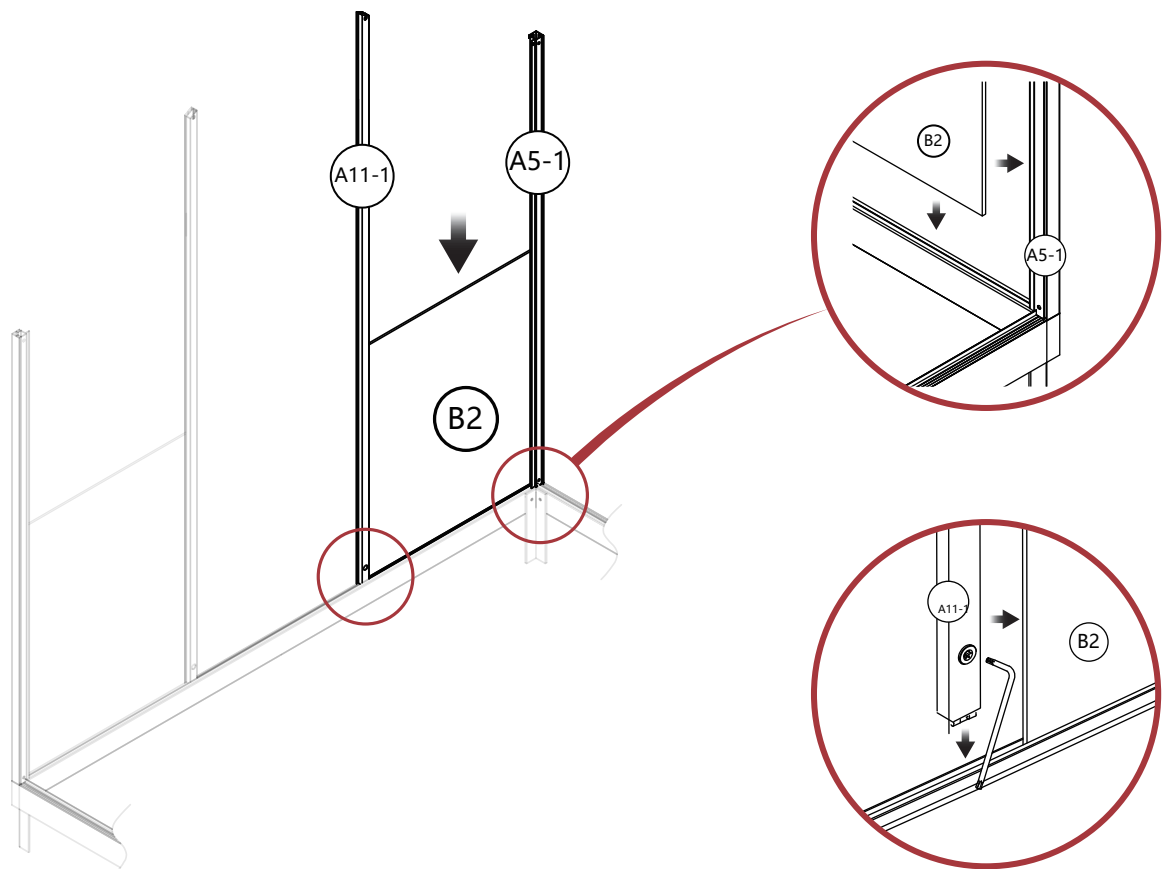


STEP 9

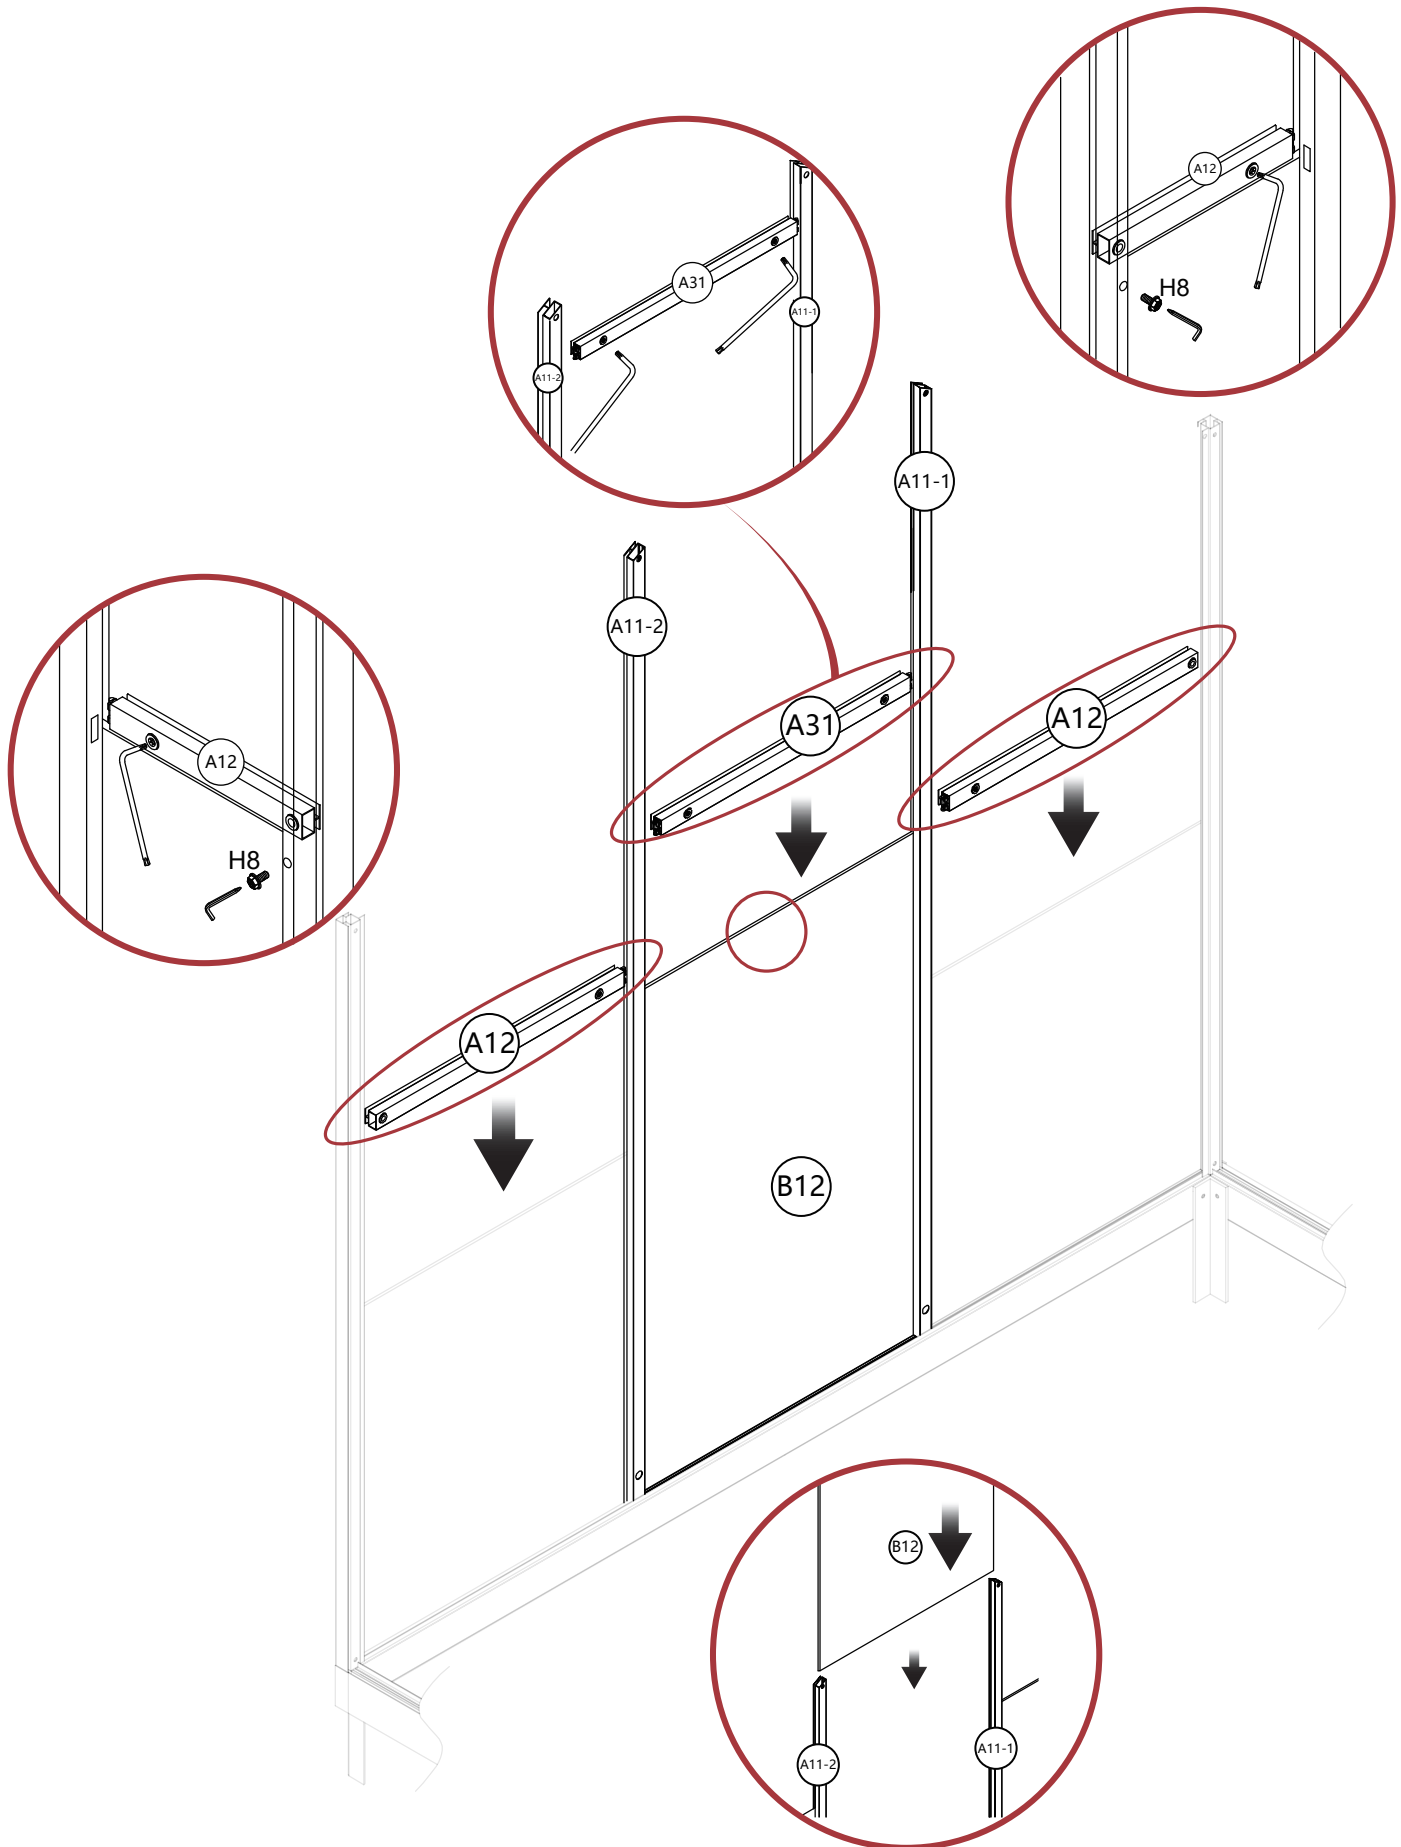


	M6x12	H8	x2
---	-------	----	----

STEP 10

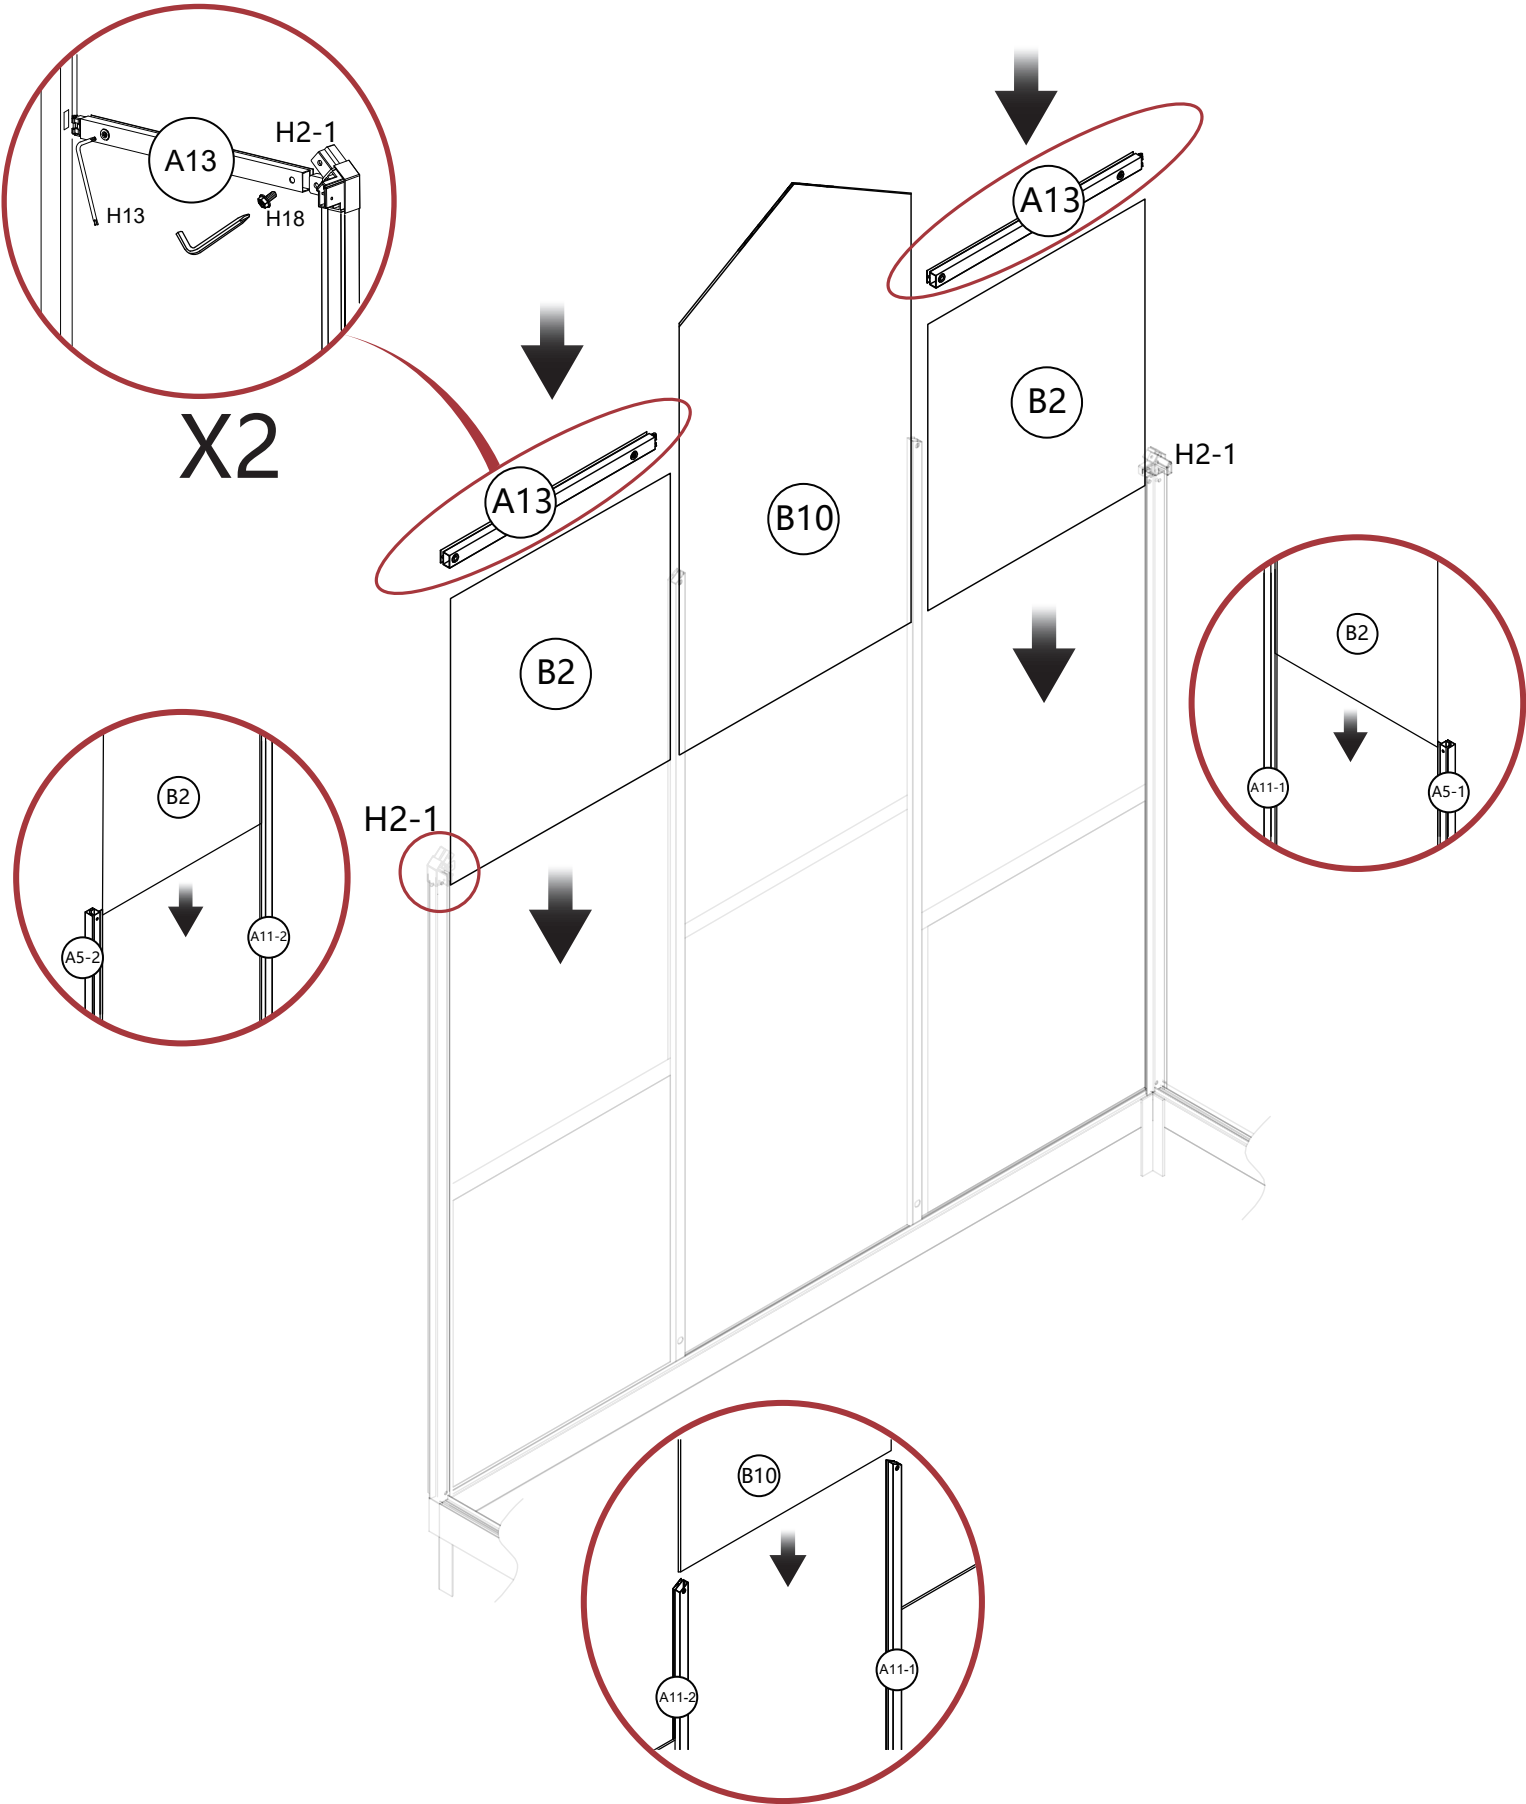


	H18	x2
M6x20		

STEP 11

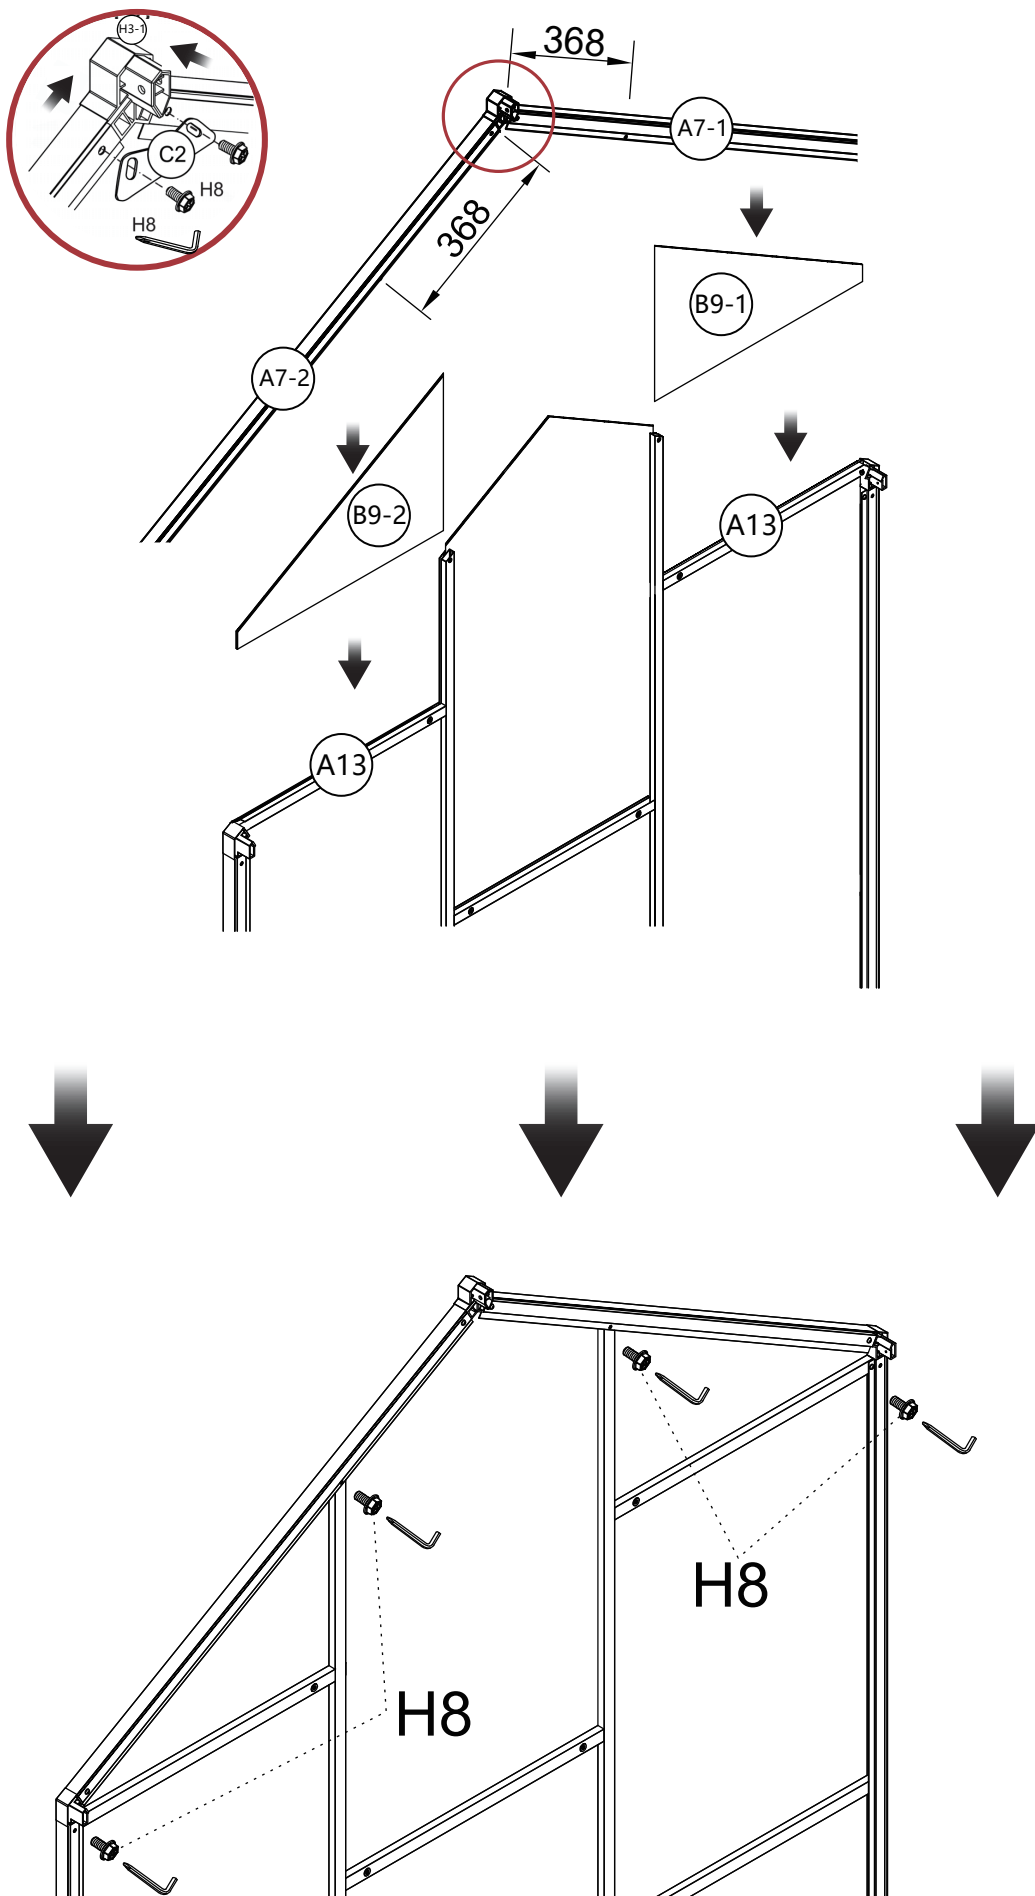


 M6x12	H8	x6
--	----	----

STEP 12

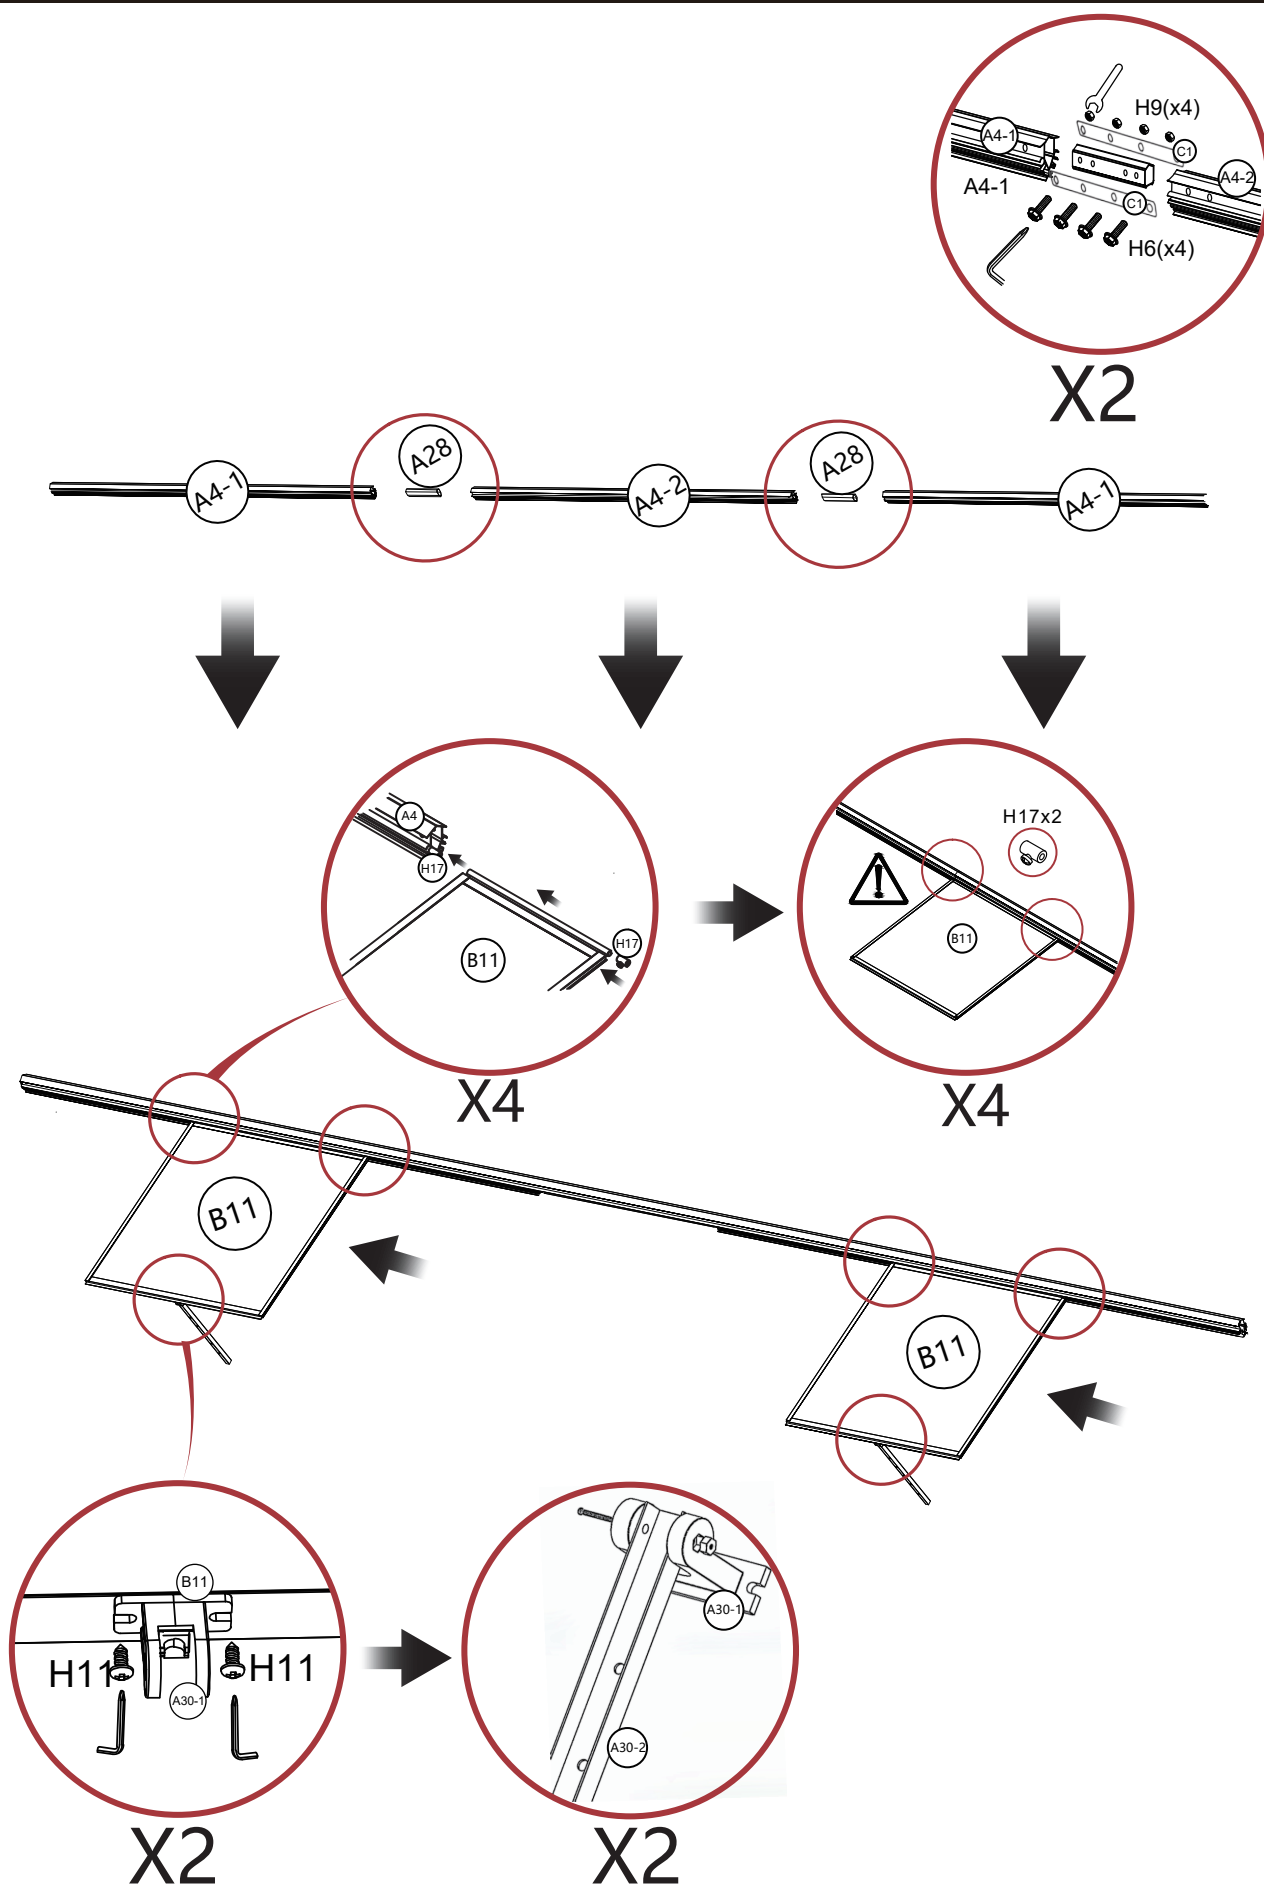


	A30-1	x2		H6	x8
	H11	x4		M6	x8

STEP 13

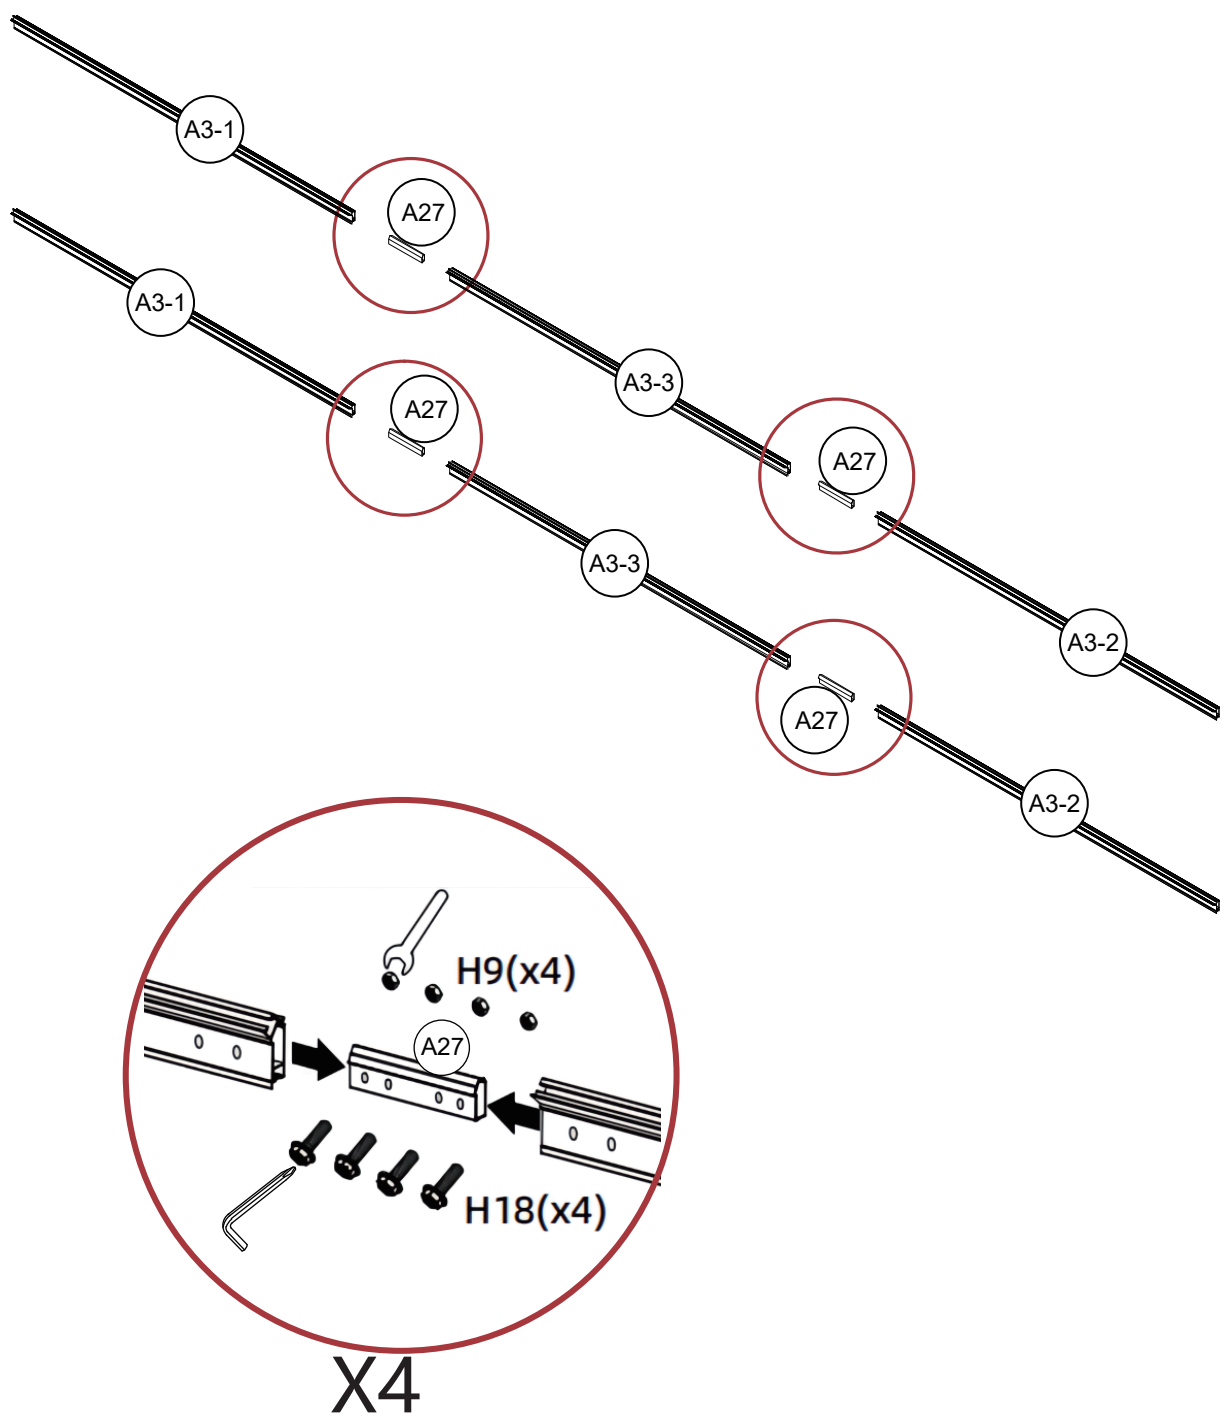



	M6	H9	x16
	M6x20	H18	x16

STEP 14

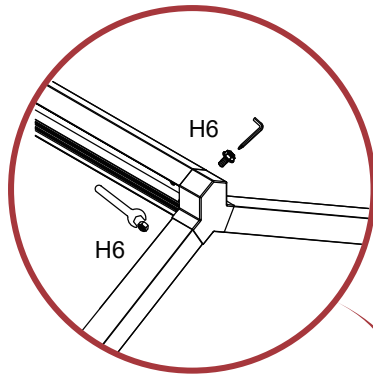


X2


To install the C3 -1 reinforcement, you need to loosen the previously installed H8 and H18 screws first

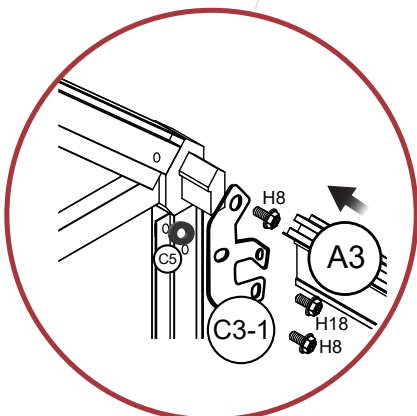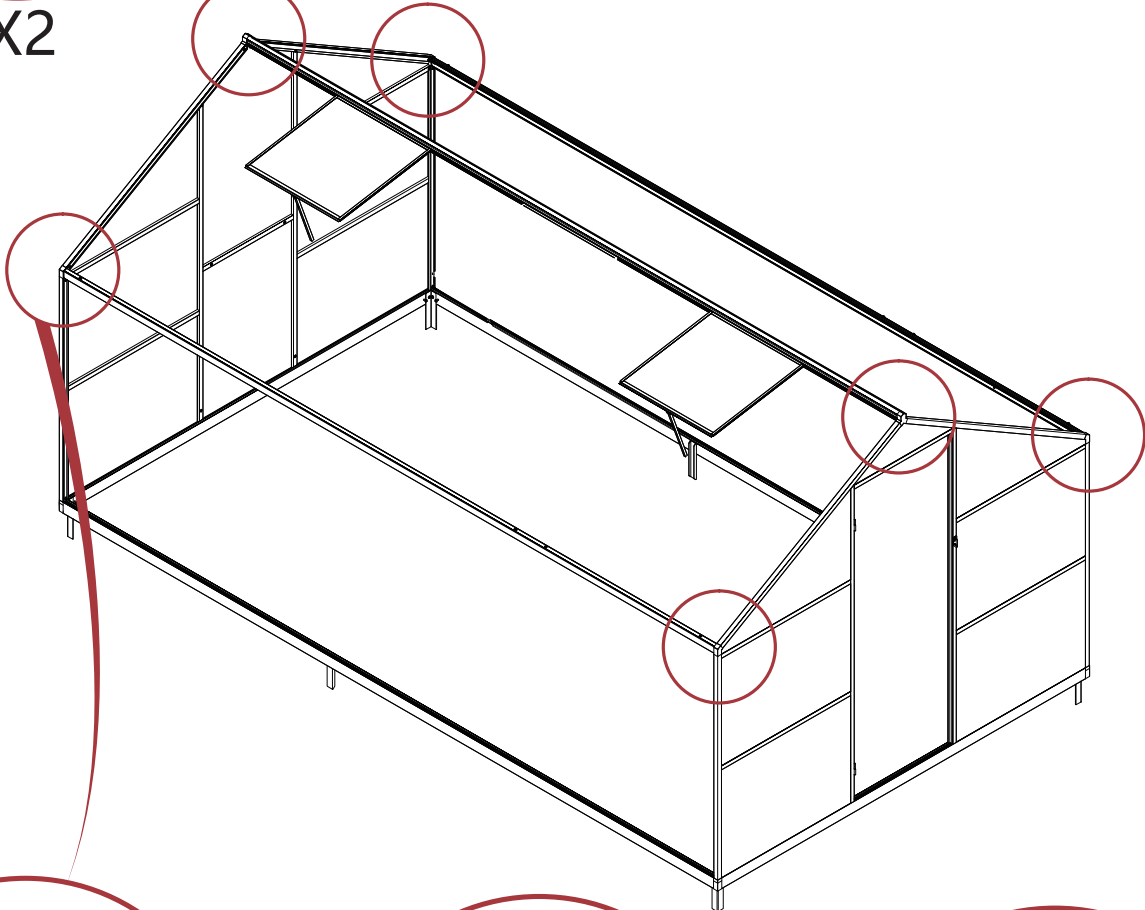

X4

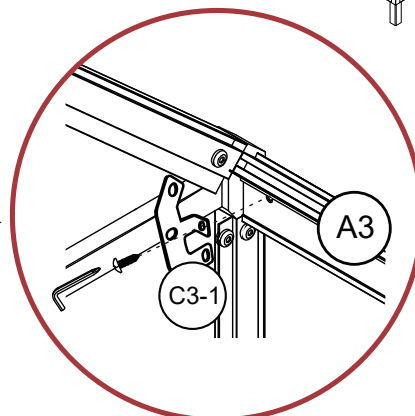

X4

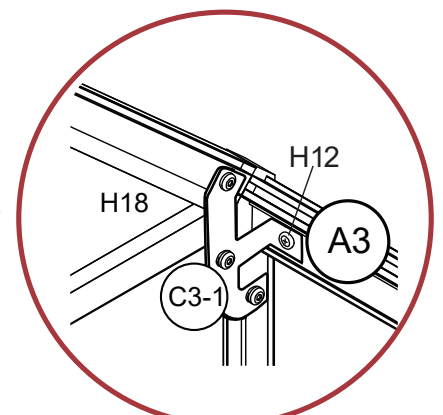


X4


	H6	x2
	H9	x2
	H12	x4

STEP 15

The installation position of PC board B3 is shown in the figure (outside of the aluminum profile)

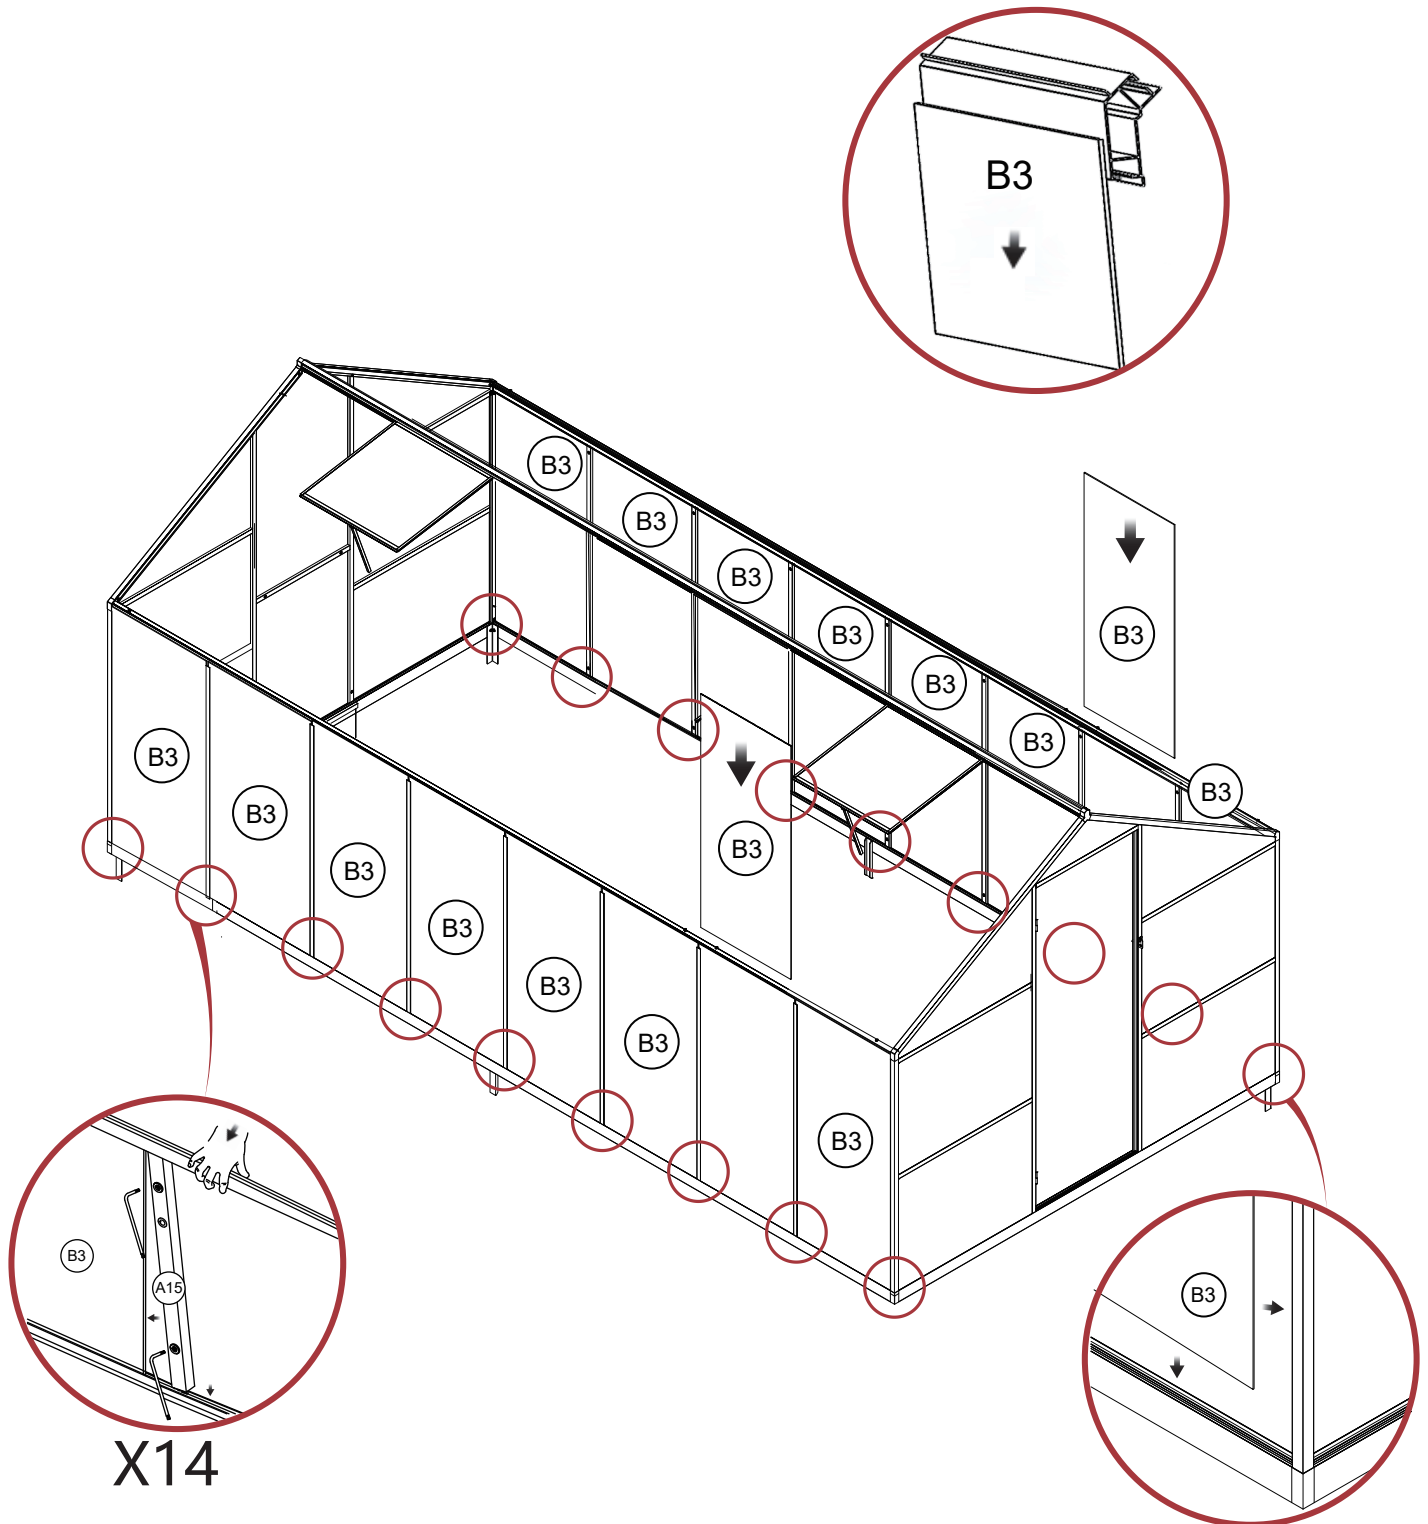


STEP 16

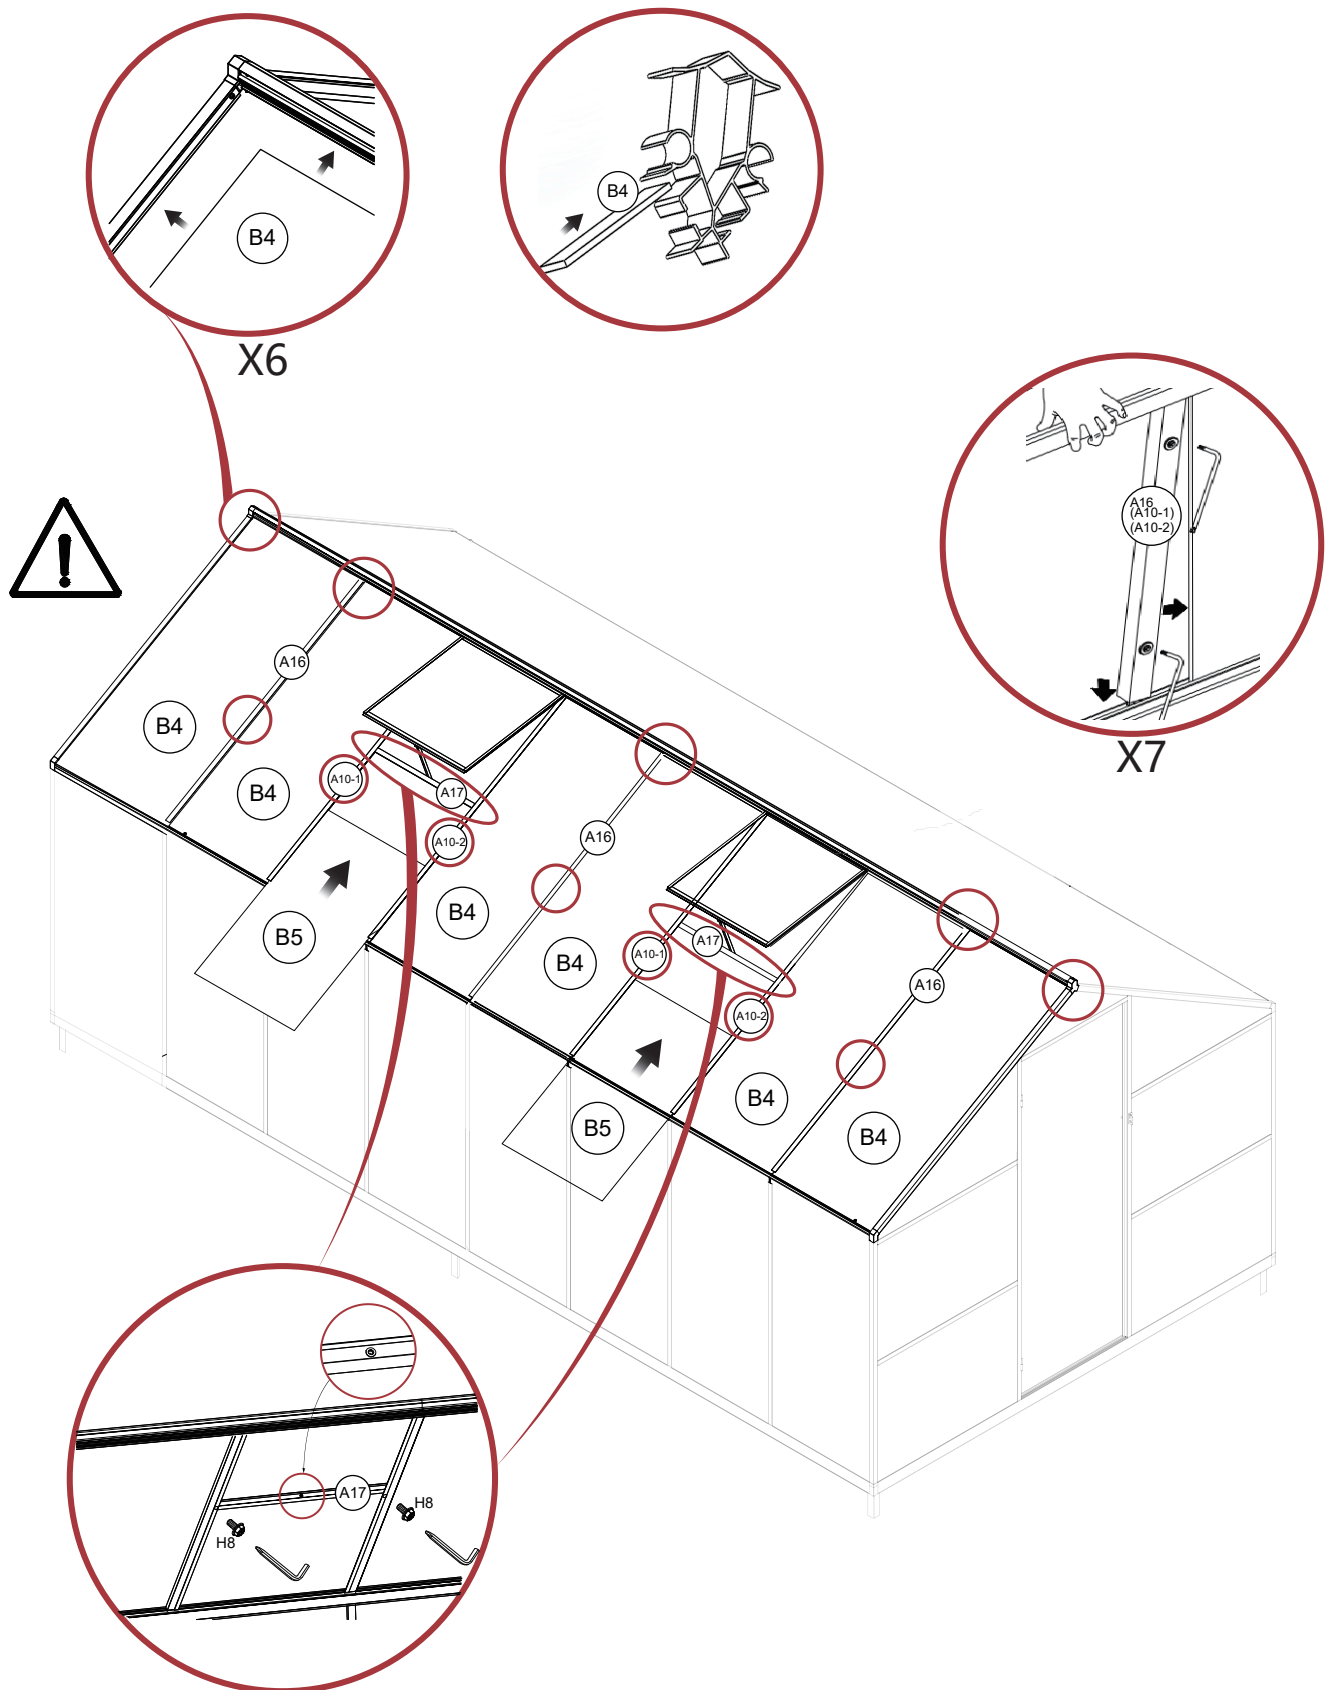


	M6x12	H8	x4
---	-------	----	----

STEP 17


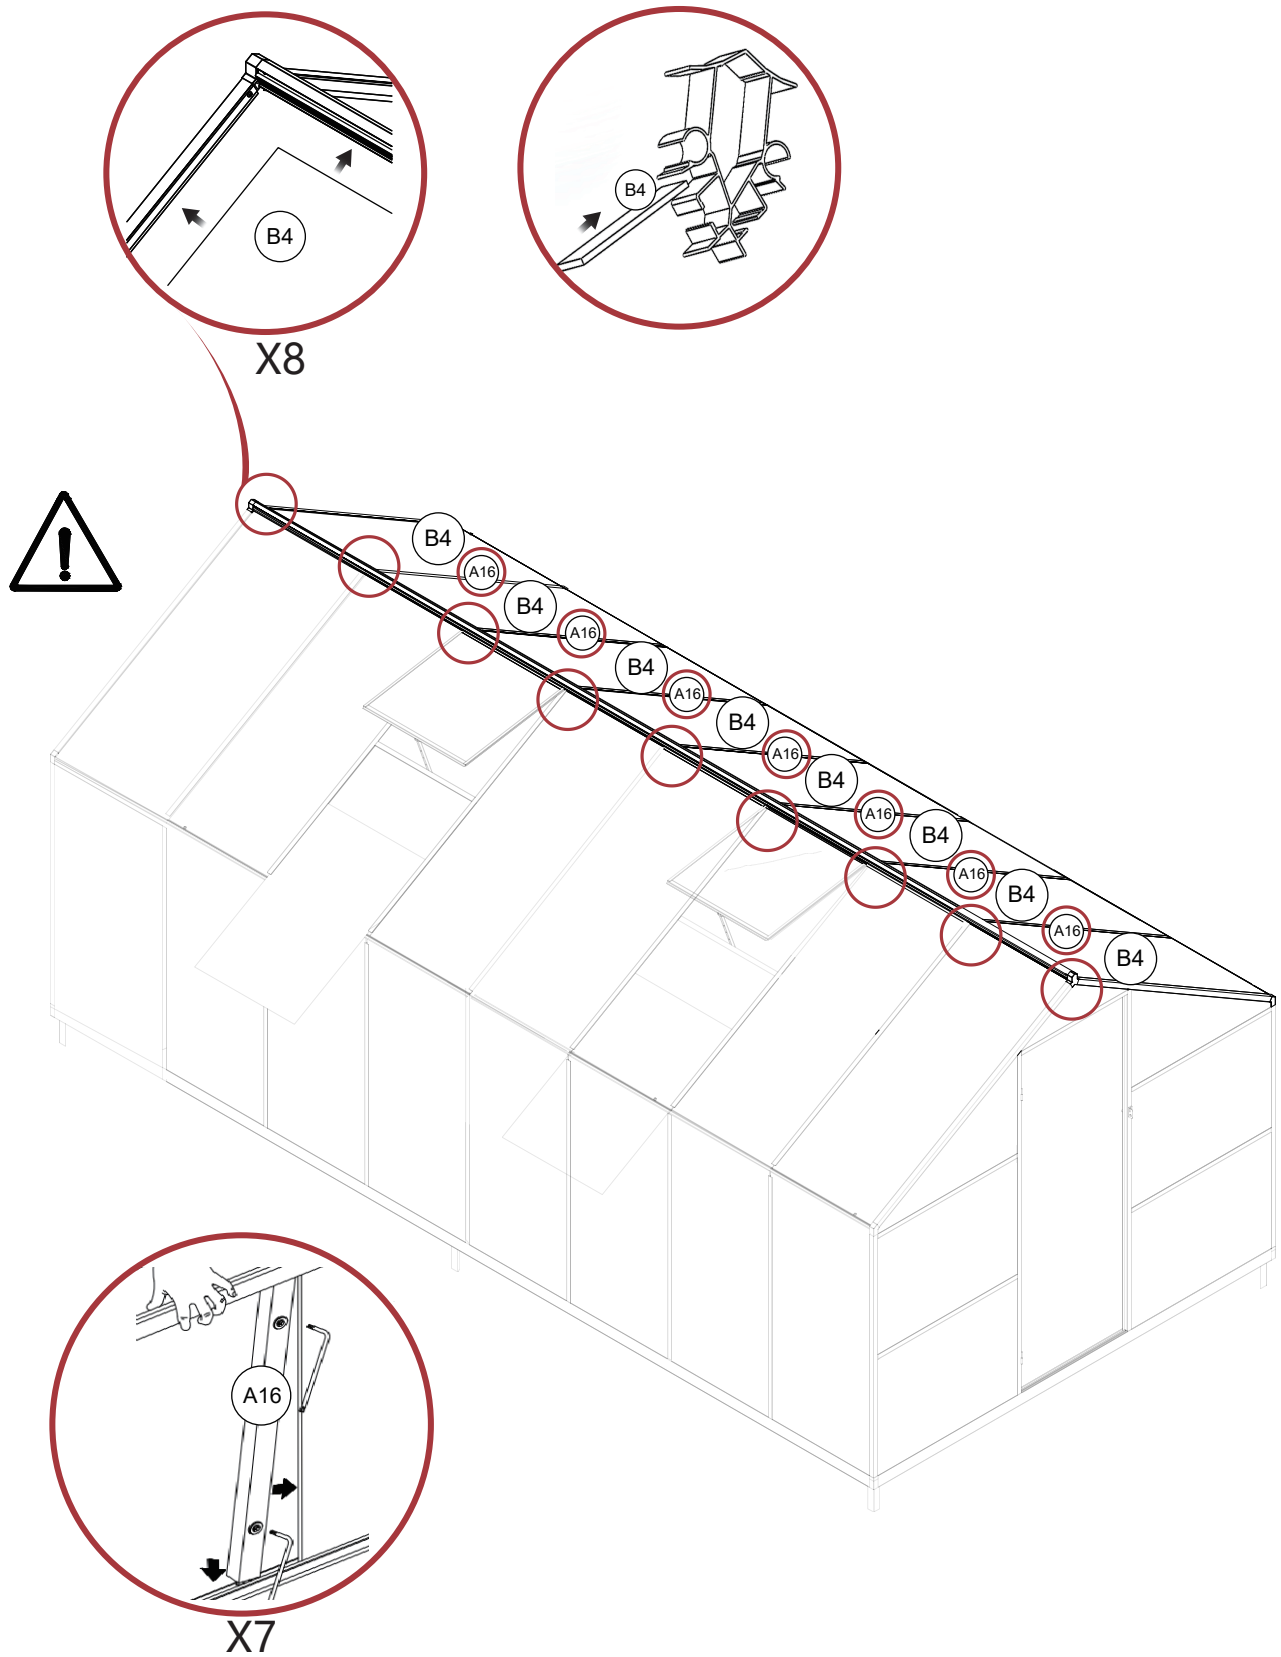


STEP 18

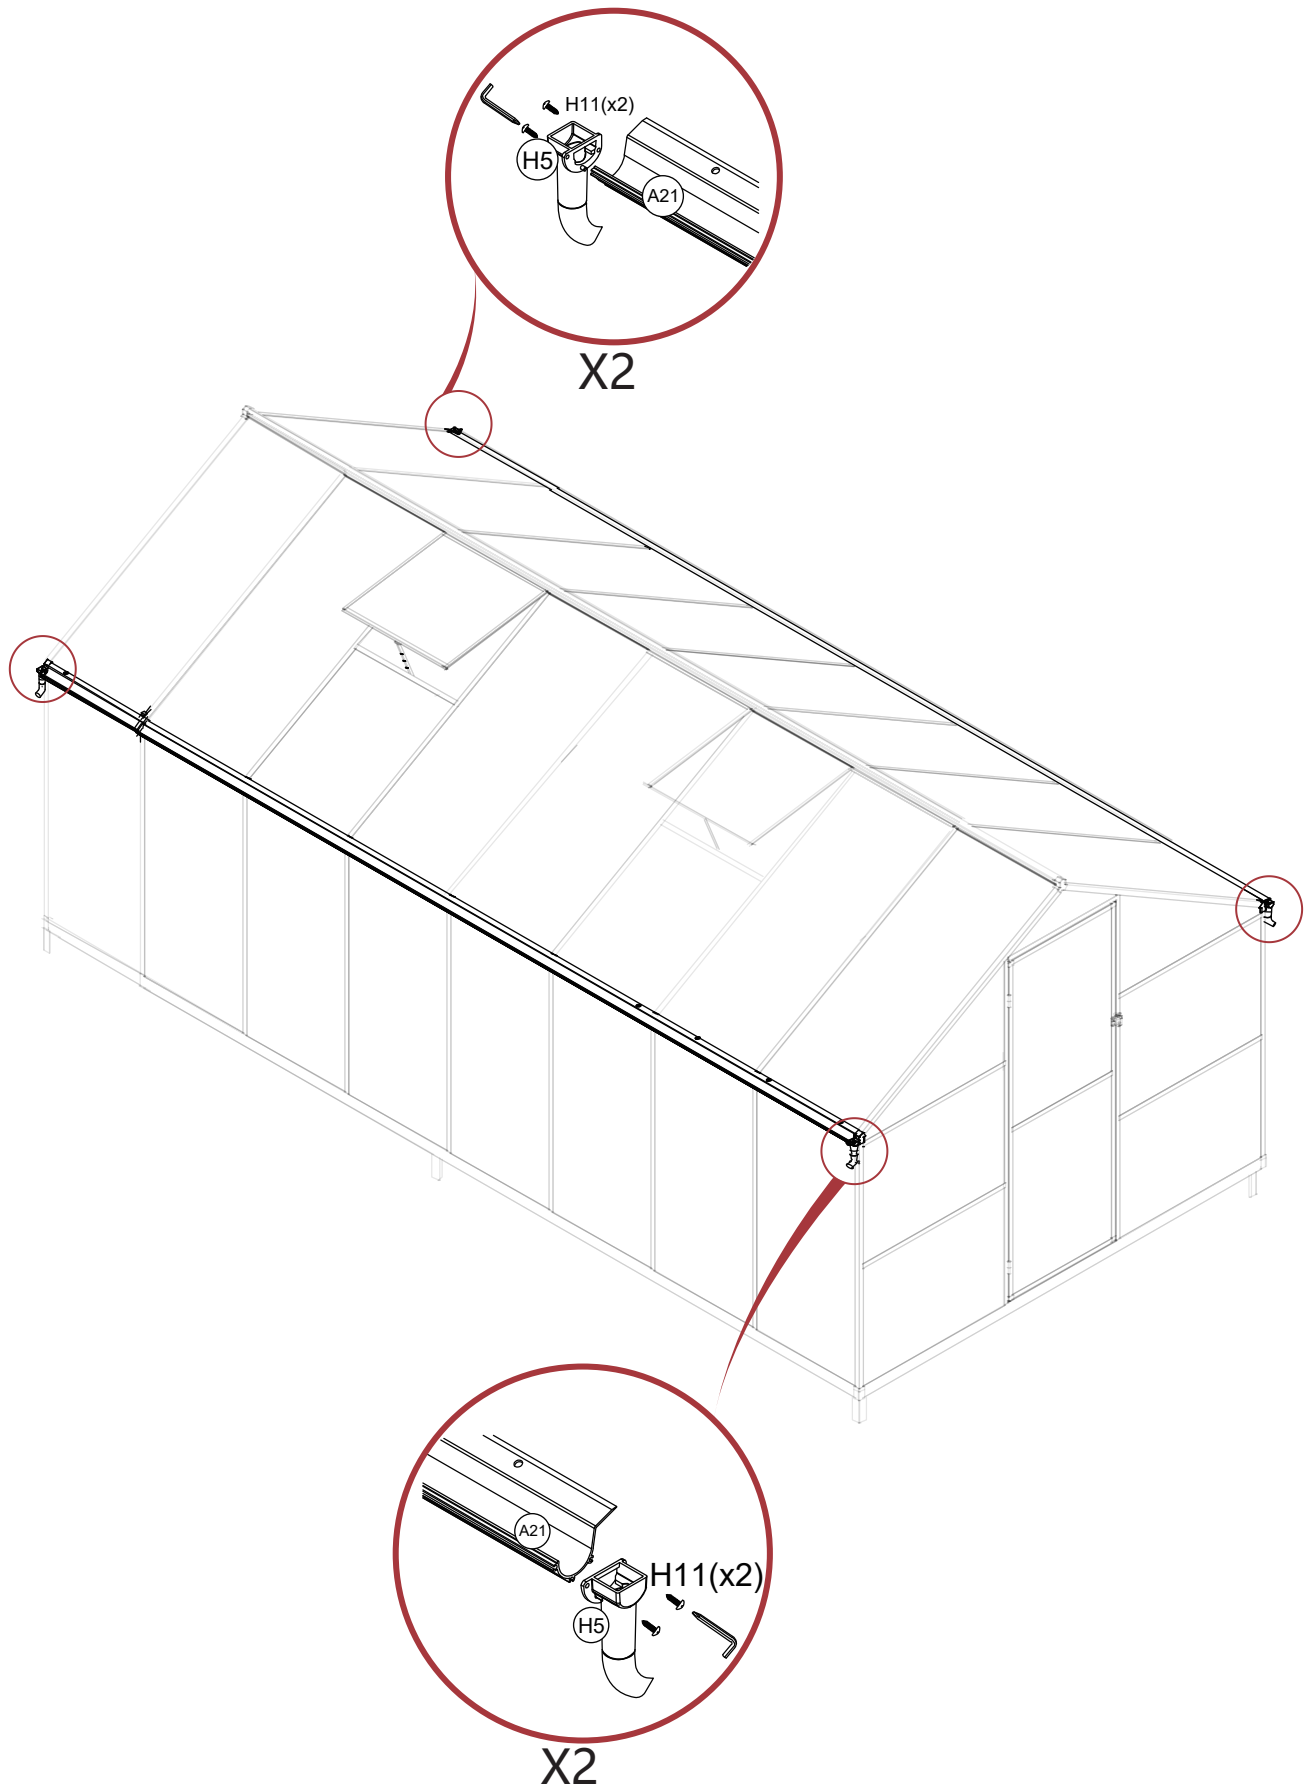


⊕	ST4x10	H11	x8
---	--------	-----	----

STEP 19

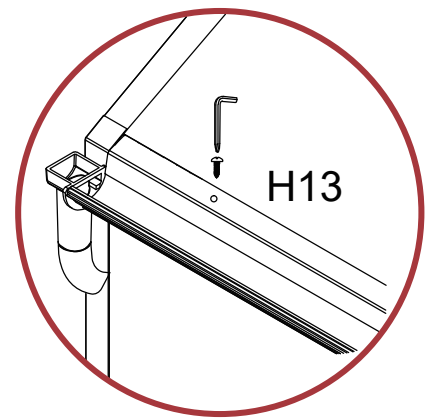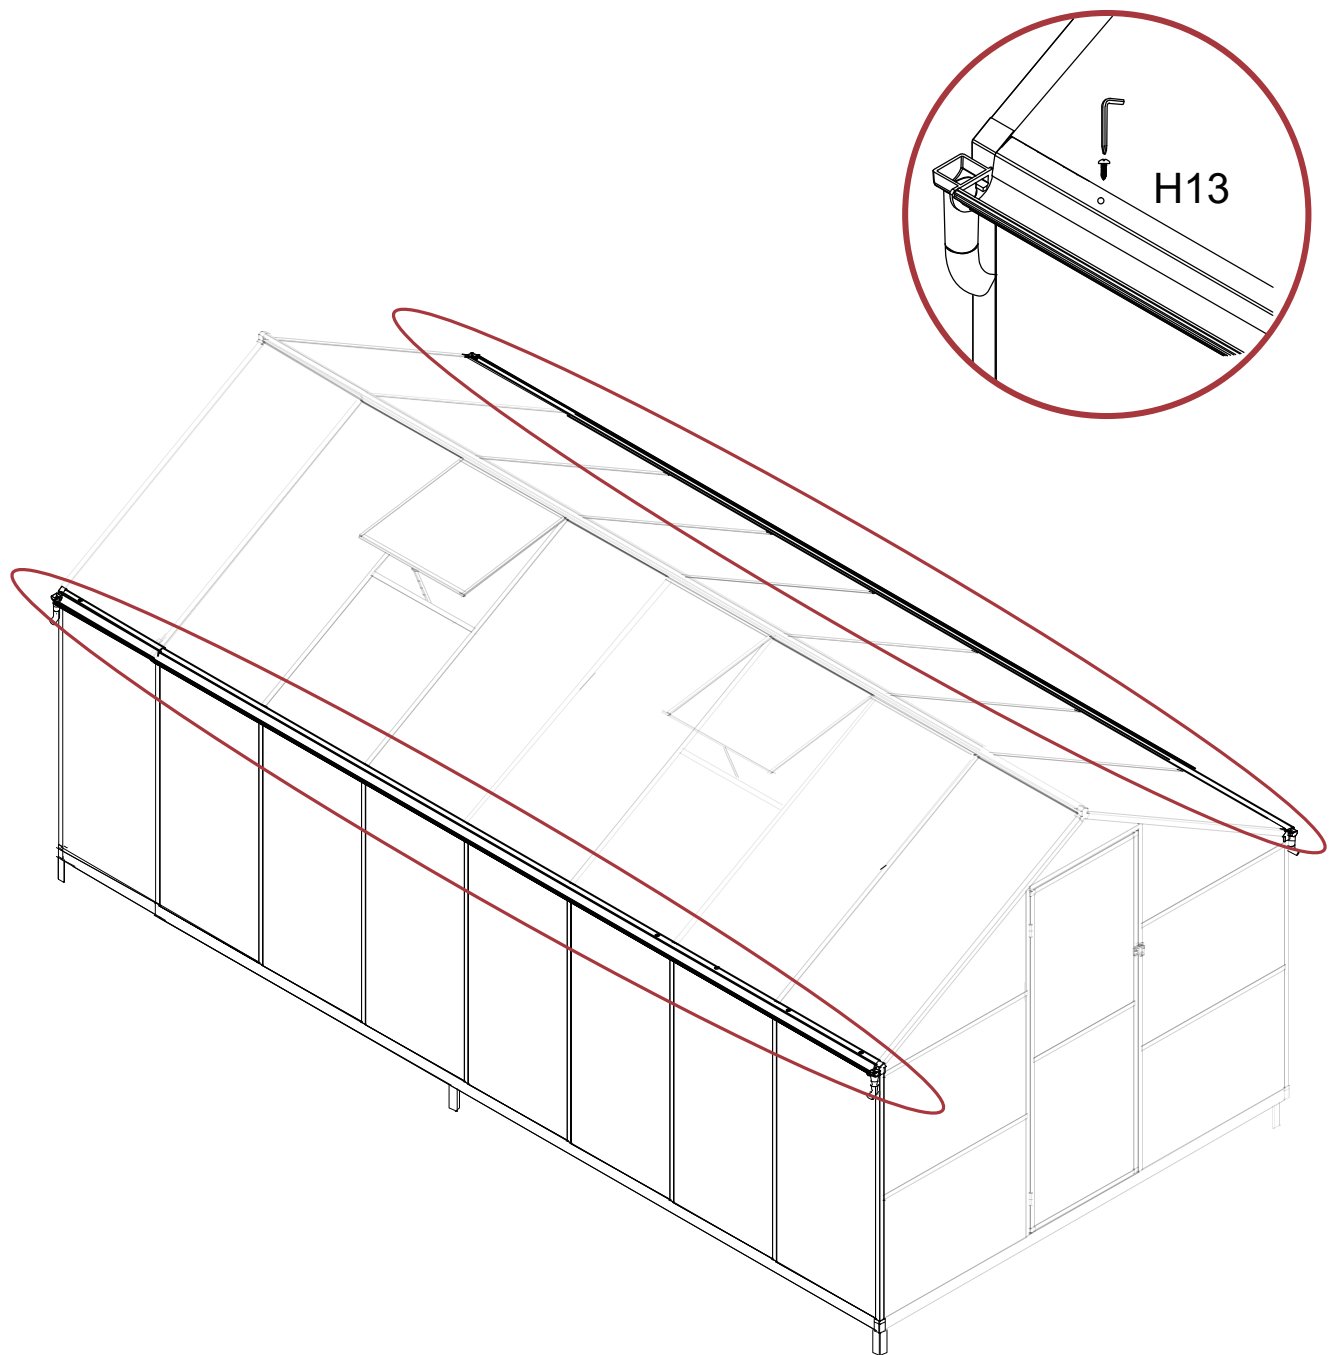


		H13	x18
ST5x16			


STEP 20

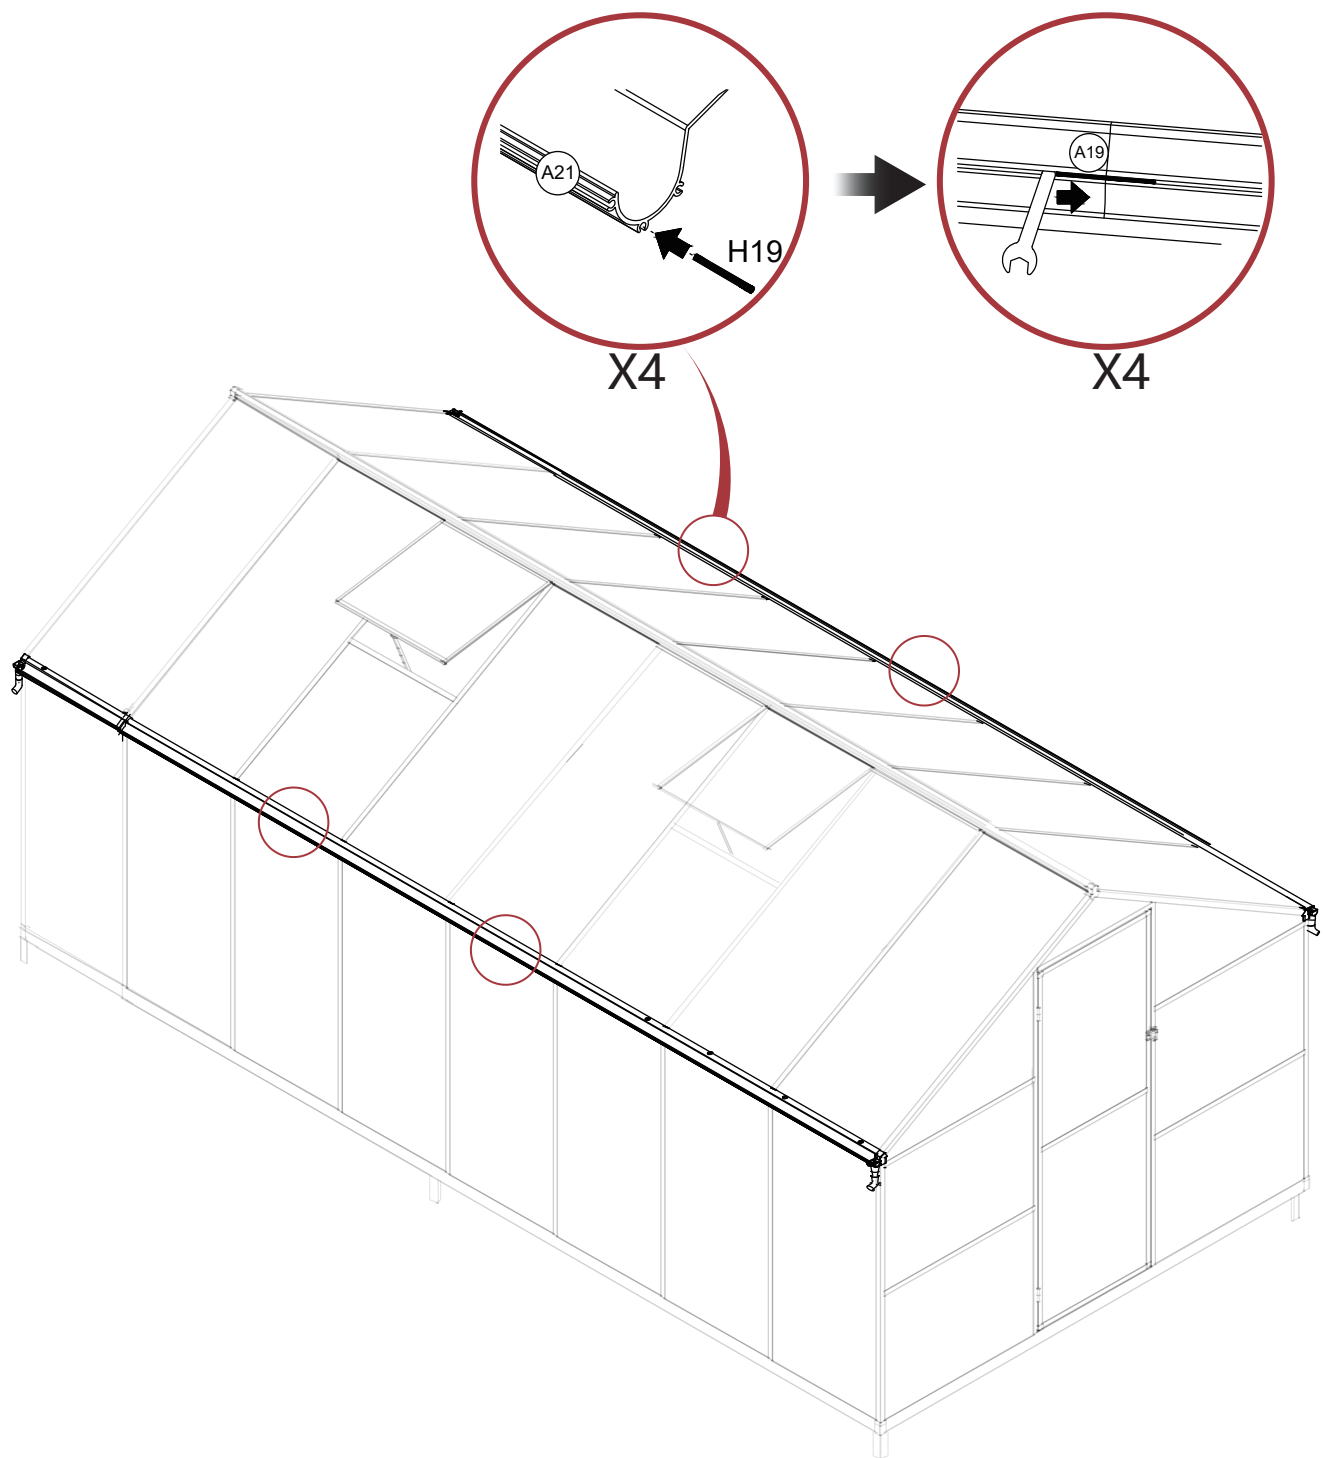


STEP 21

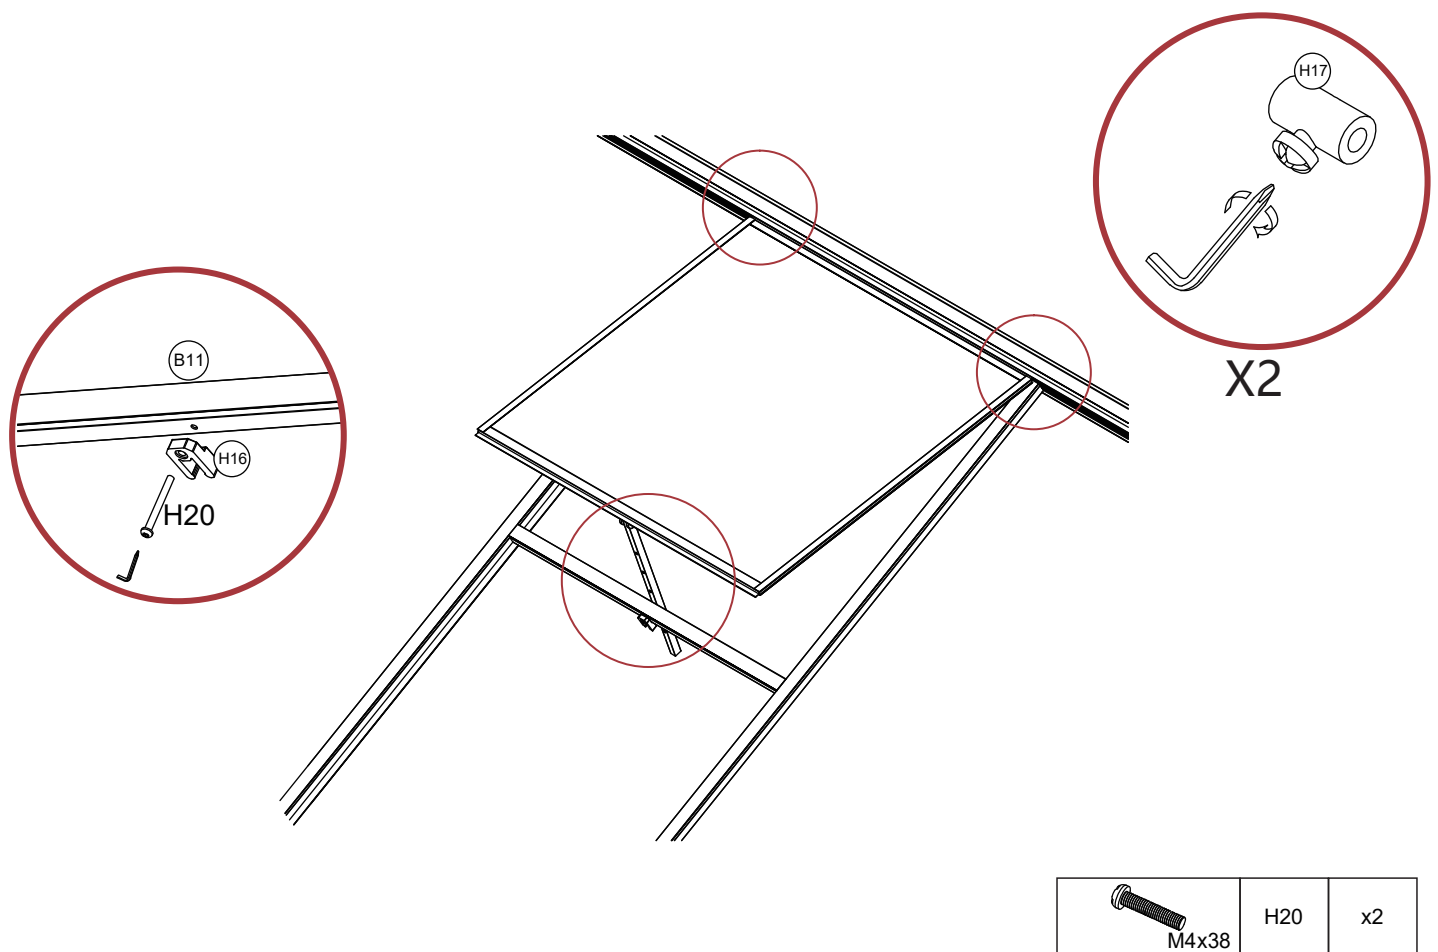


STEP 22

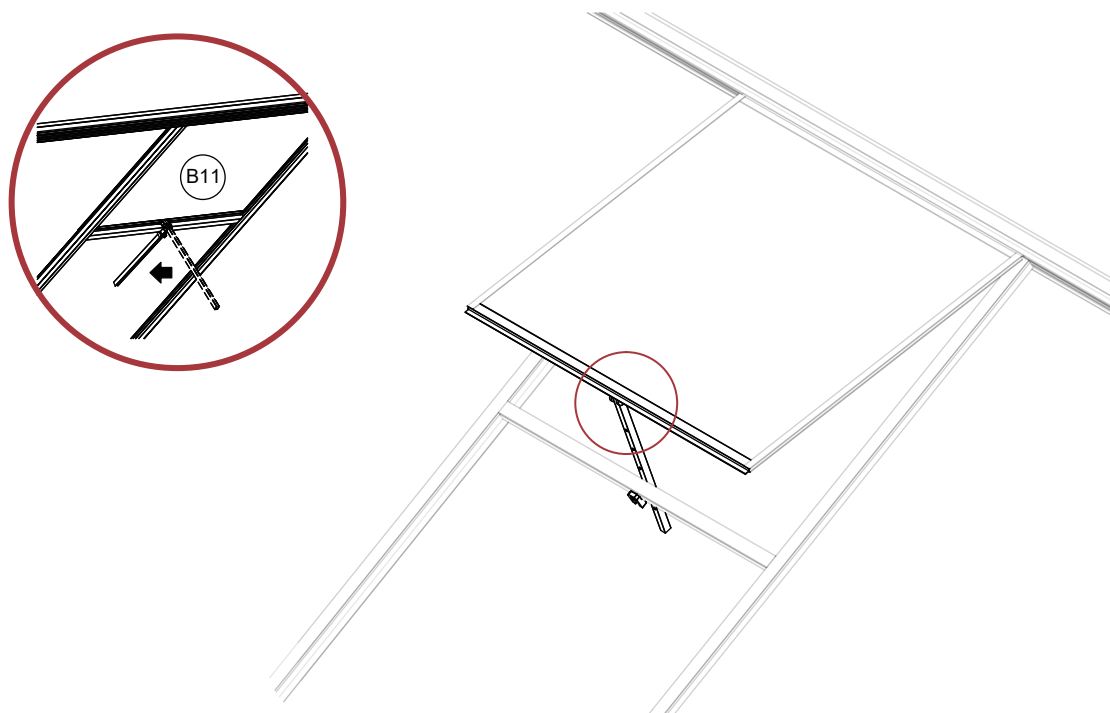

STEP 23

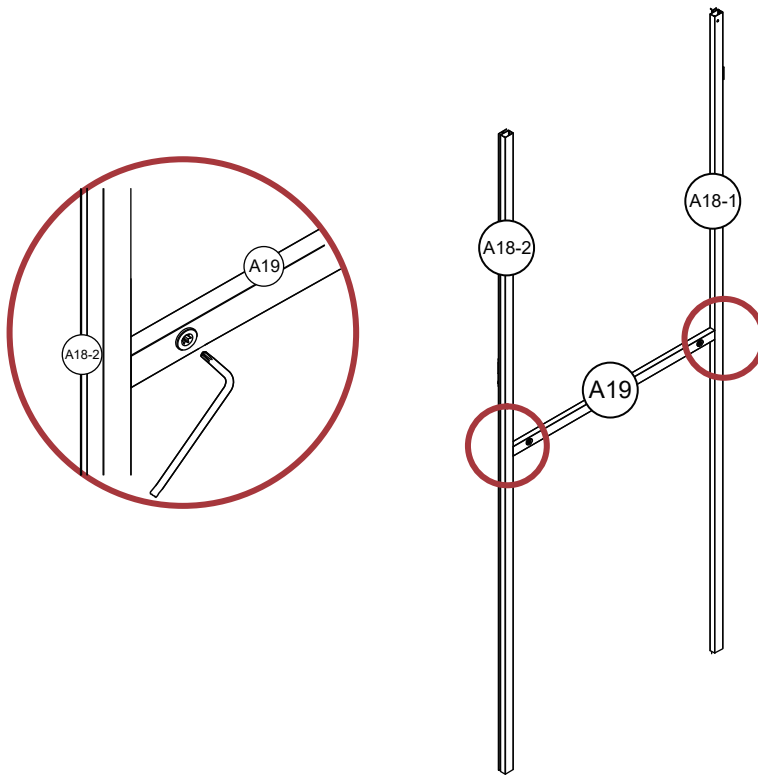


STEP 24

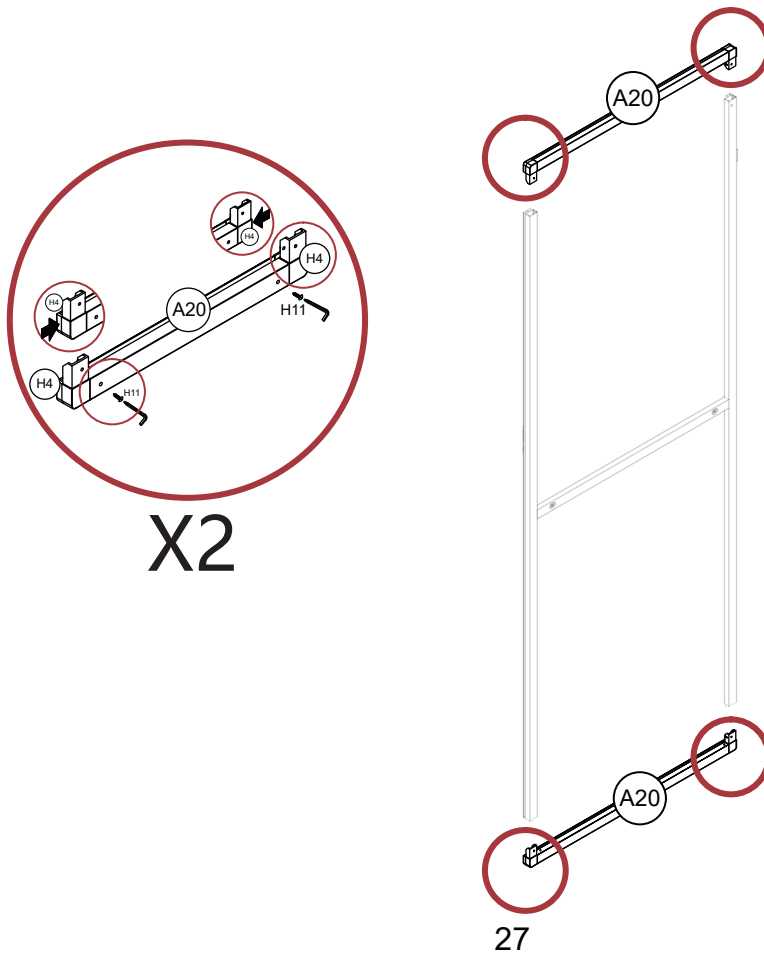


⊕	ST4x10	H11	x4
---	--------	-----	----

STEP 25

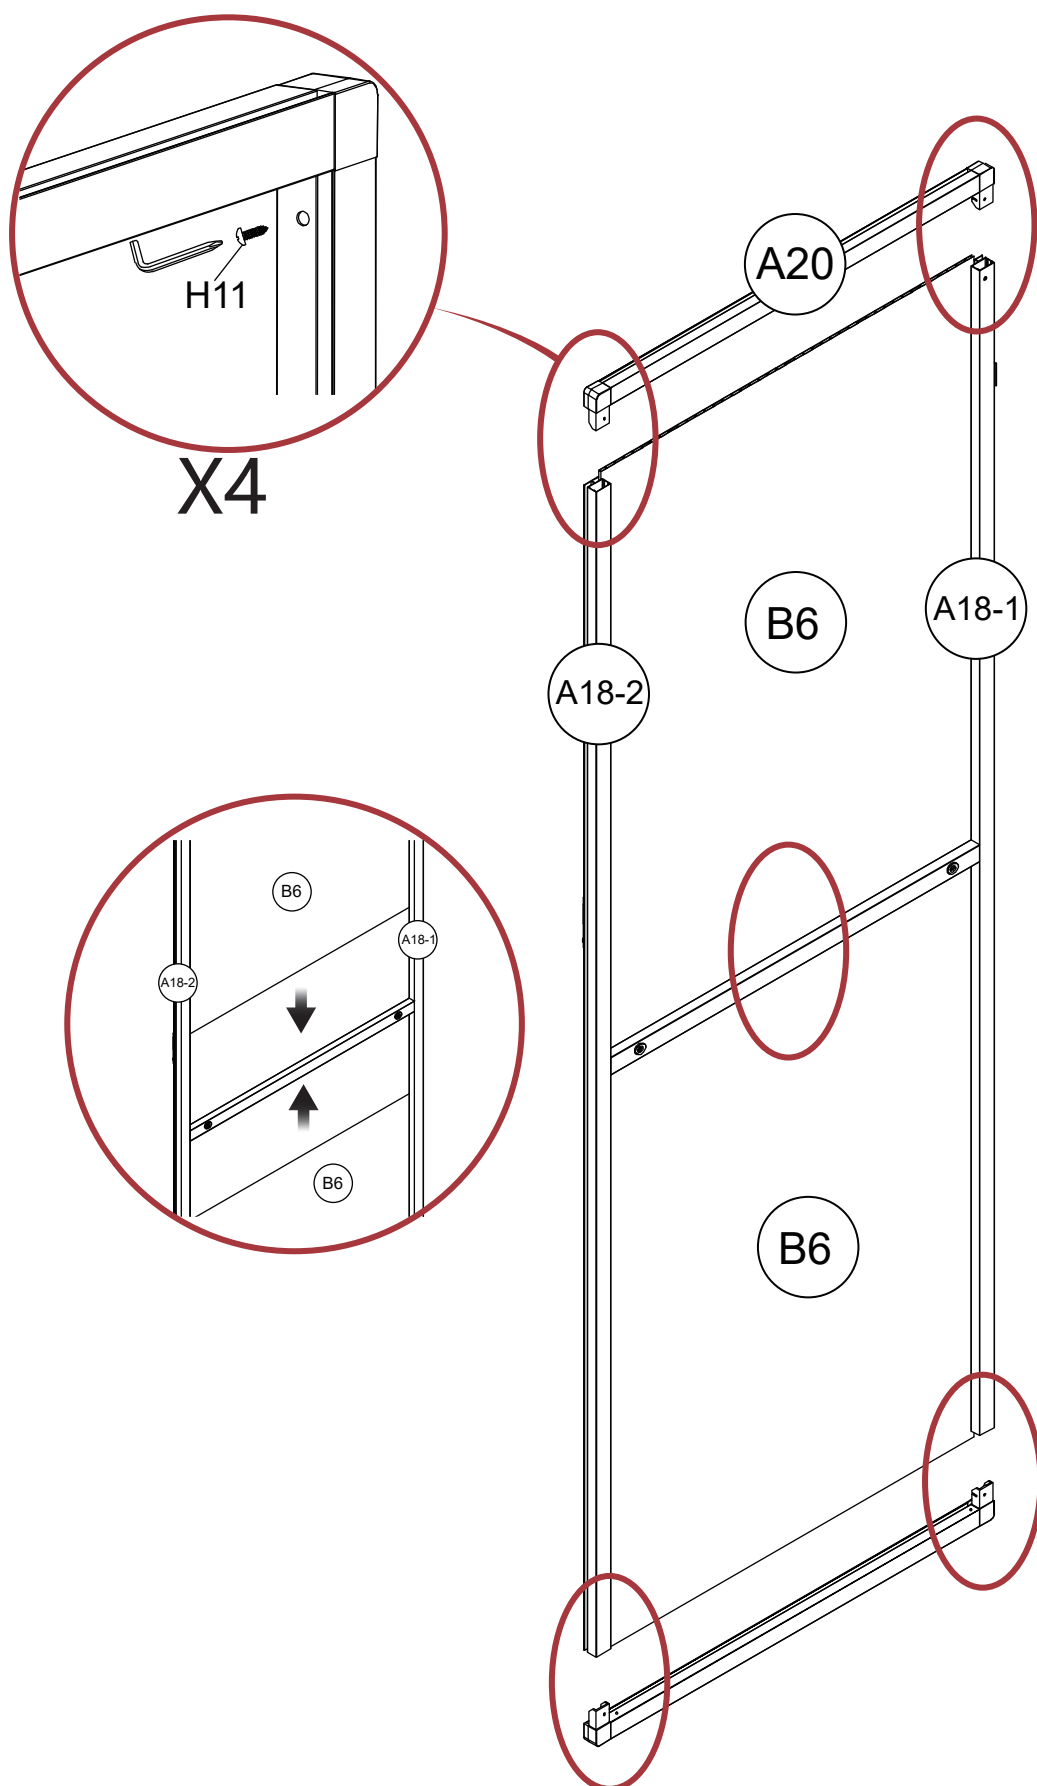


⊕	ST4x10	H11	x4
---	--------	-----	----

STEP 26

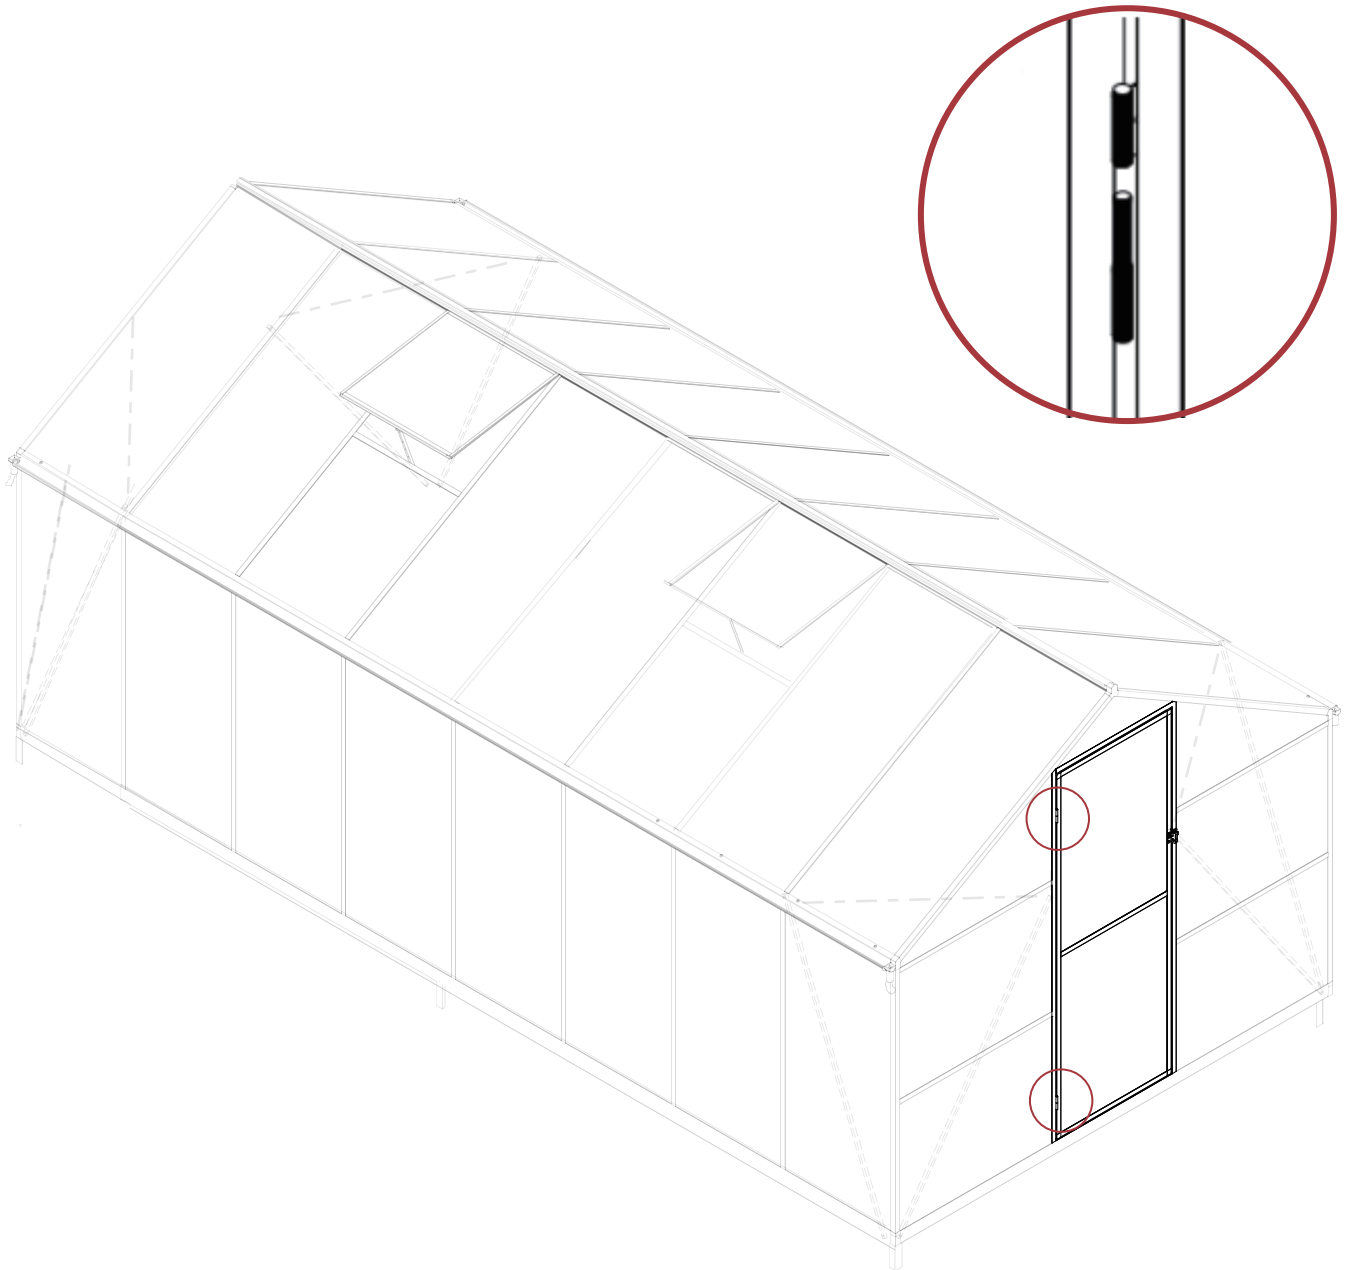


STEP 27

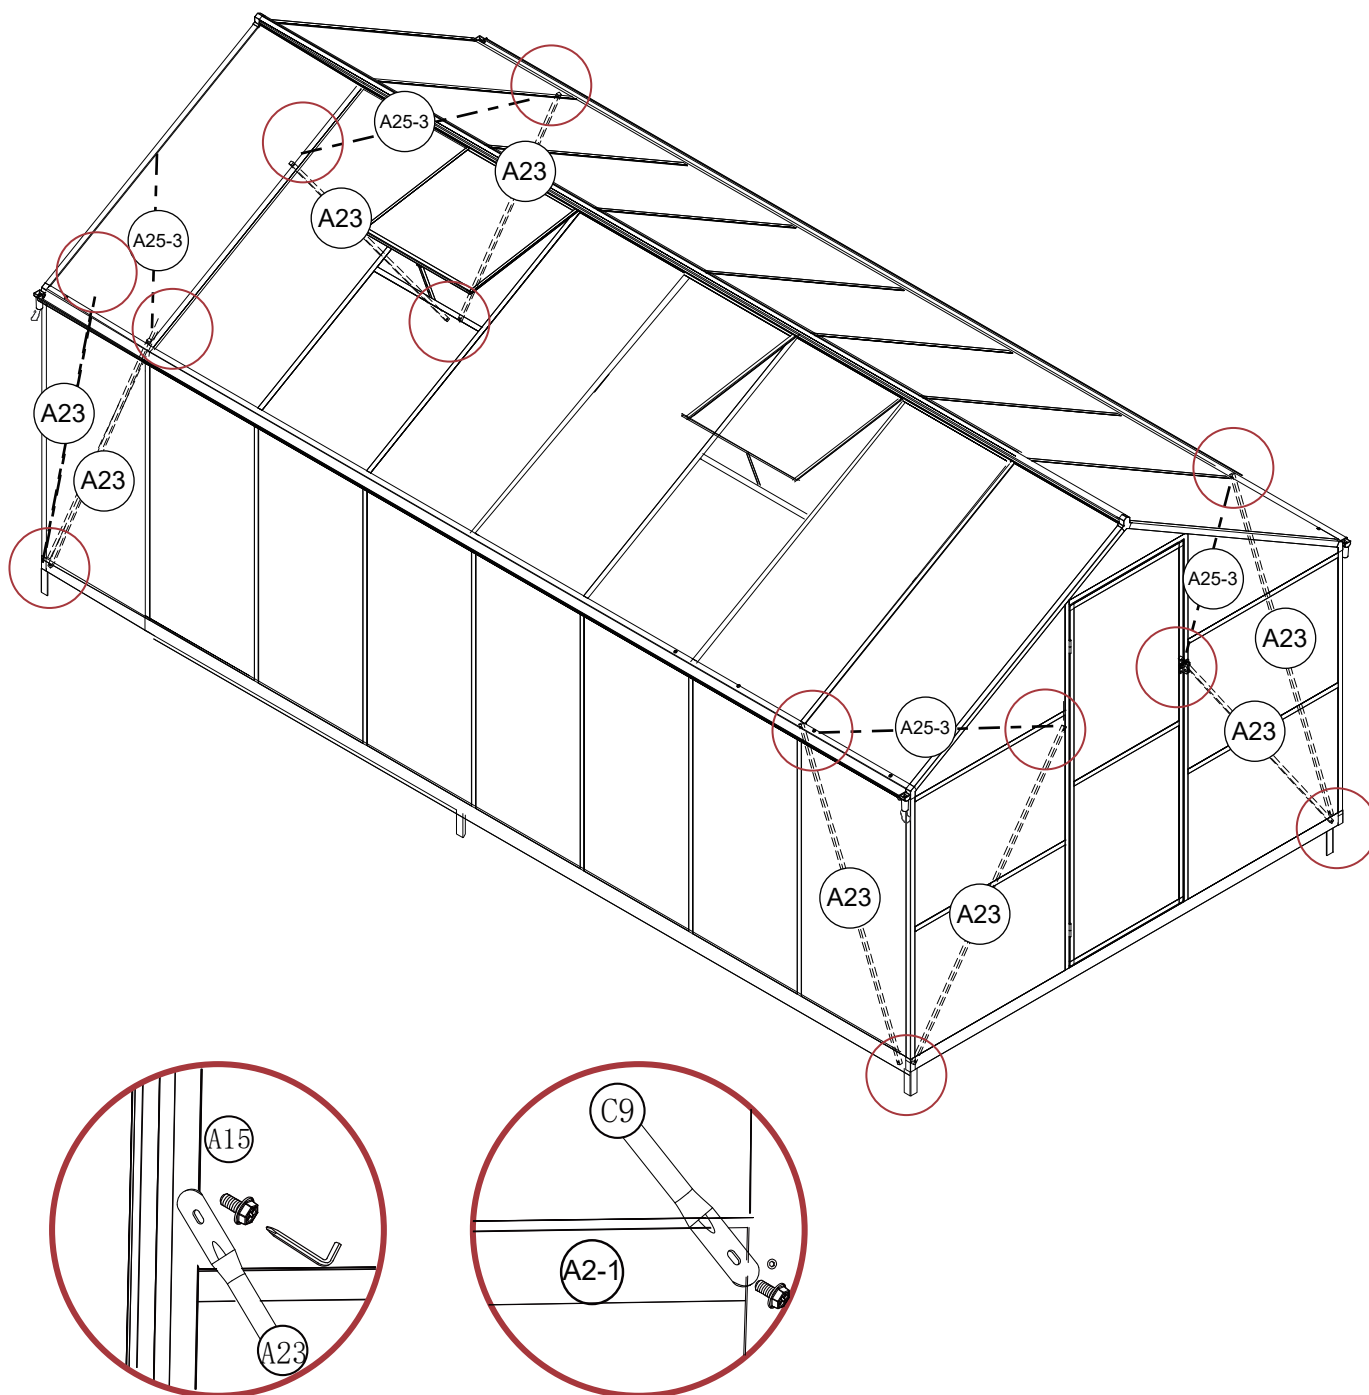

 M6x12	H8	x24
---	----	-----

STEP 28

X7

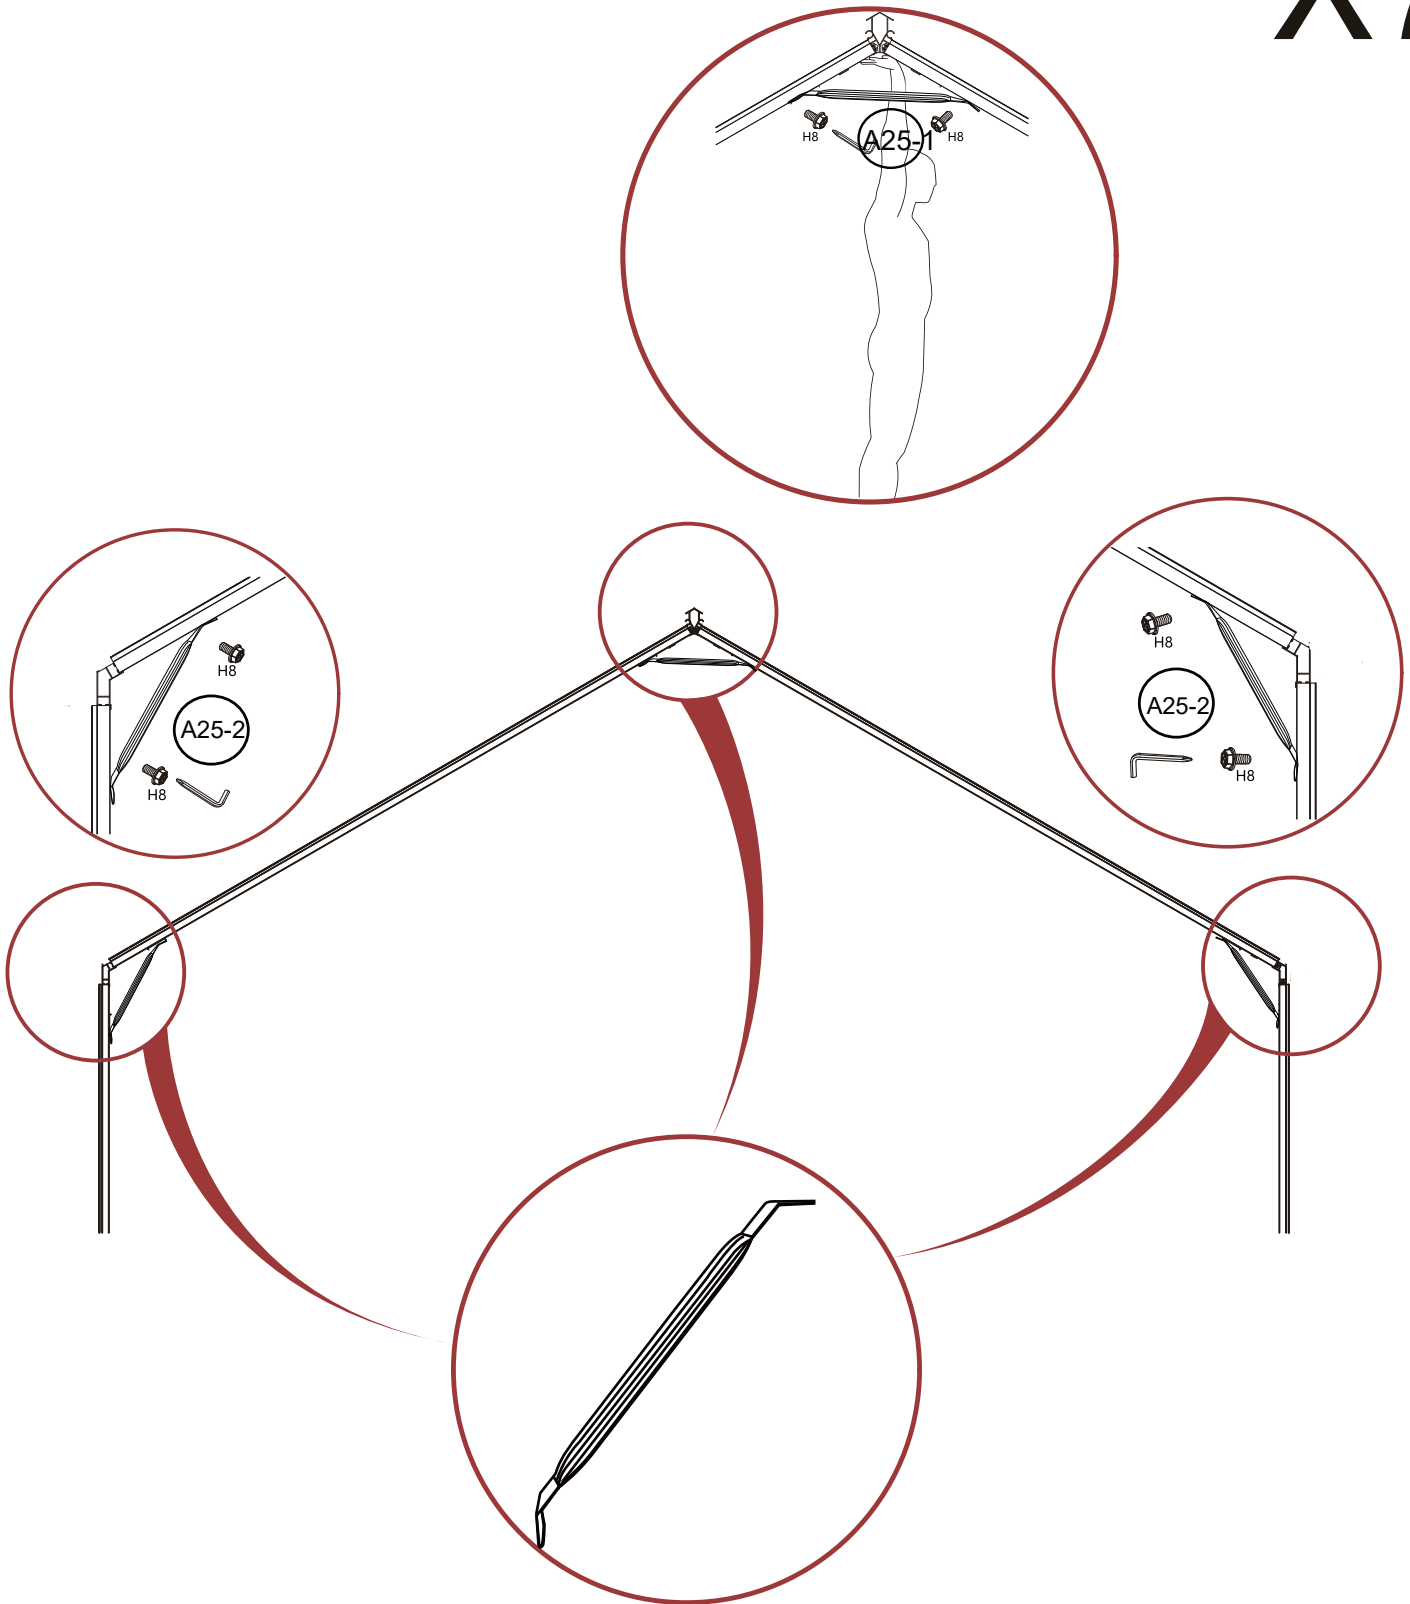

 M6x12	H8	x42
--	----	-----

STEP 29

