

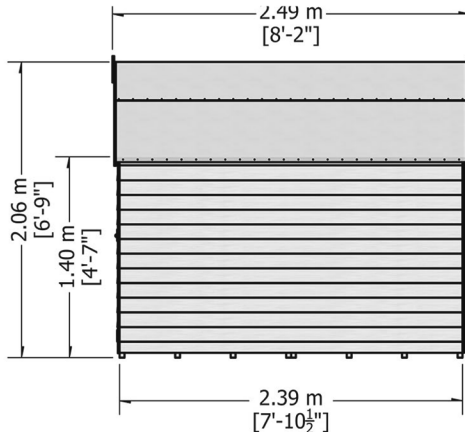


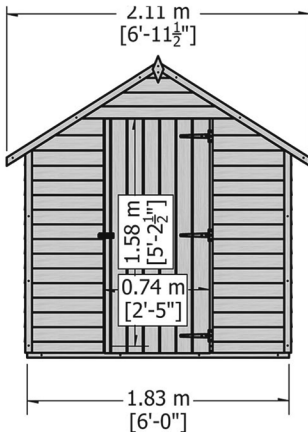

Follow and Tag Us: @shiregardenbuildings

SHIRE
BUILT AROUND OUR REPUTATION

© 8x6 Value Overlap

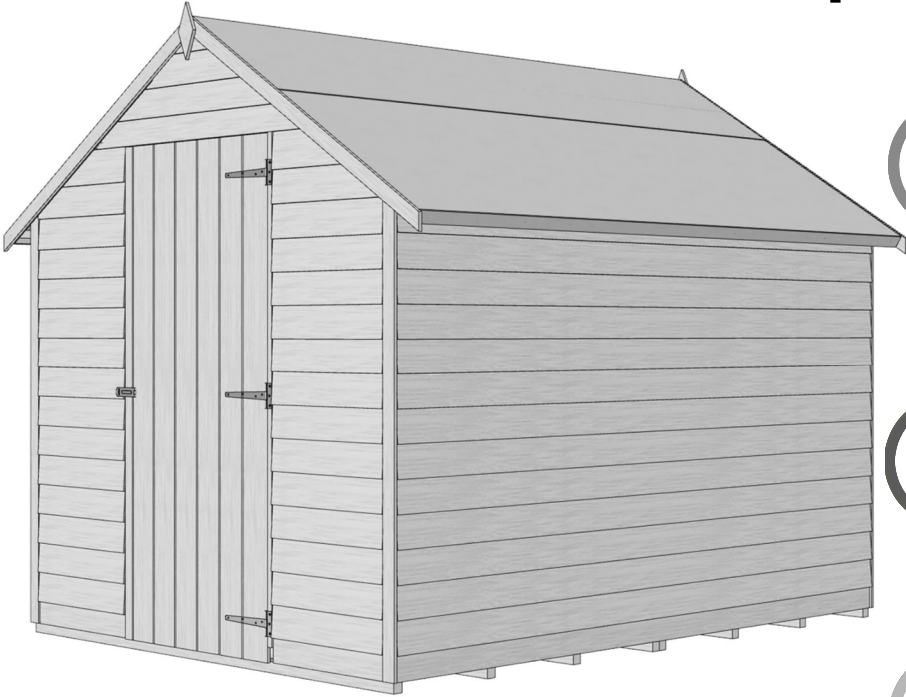

**These instructions are for your safety. Please read through them thoroughly before use.
PLEASE KEEP THIS LEAFLET FOR FUTURE REFERENCE**

Let's get started...

Important information...



Safety	03
Preparation of base	04
Warranty	04
Care, maintenance & Recycling	05

In more detail...



Parts List	06
Fascia & Nail List	07
Detailed Technical Drawing	08-09
Hardware chart	10
Before you start	11
Assembly instructions	12-23

Like us, Follow us, Recommend us & Tag us



Shire Garden Buildings



@shiregardenbuildings



Shire Garden Buildings



customerservice@shiregb.co.uk



Brigstock Road Wisbech Cambridgeshire PE13 3JJ
Tel 01945 465 295

Check that you have noted all the following instructions:



- ☒ We advise the use of non slip protective gloves throughout the assembly process.
- ☒ We advise the use of steel capped protective footwear throughout the assembly process.
- ☒ We advise that you use a helper to hold the glass in position whilst you nail the beading in place.
- ☒ We advise the use of protective headwear and safety goggles throughout the assembly process.
- ☒ Where a ladder is in use another person must hold the ladder.
- ☒ Do not attempt to work in windy conditions.
- ☒ We advise the use of a scaffold tower when fitting the roof, for felting or if you cannot reach from the ground.
- ☒ Do not allow children near the tools and work area.
- ☒ Follow any safety precautions quoted by the manufacturer for any equipment you use.
- ☒ Check all parts before assembly.
- ☒ Only use child and animal safe wood preservative.
- ☒ Do not use creosote.
- ☒ Allow the wood preservative to fully dry before use.
- ☒ Regularly check the building for wear and tear.

Important!



EVERY PRECAUTION IS TAKEN TO ENSURE THAT YOUR BUILDING HAS NO ELEMENT INCORRECTLY PLACED OR POSSIBLY HAZARDOUS, HOWEVER PRIOR TO USE PLEASE CHECK ALL SURFACES FOR THE FOLLOWING:

- (1) RAISED GRAIN, SPLINTERS: Sand down timber to smooth finish.
- (2) NAIL/SCREW/PIN HEADS PROUD: Tap home to be flush with surface of timber.
- (3) DAMAGED SCREW HEADS RESULTING IN SHARP SPLINTERS OF METAL: Replace.
- (4) SHARP ENDS OF NAILS/ SCREWS/ PINS PROTRUDING THROUGH THE PANEL: Remove and reposition
- (5) ENSURE ALL PARTS ARE SECURED AGAINST REASONABLE FORCE: Remove and refit.
- (6) ENSURE THERE ARE NO LOOSE PARTS: Remove and refit/discard.



IMPORTANT ! For your safety please read carefully the safety warnings

Preparation of base...

We recommend that the base onto which your building will stand should be at least 75mm larger in each direction than the total floor size of the building.

- **Actual floor area of the building:** 2394mm x 1828mm
- **Total height clearance:** 2056mm
- **Roof size:** 2494mm x 2115mm

The chosen position in your garden for your building should be excavated to a depth of 75mm to allow a base of sand, on to which paving slabs can be evenly laid.

You may also use an adjustable timber base or a concrete base. Whatever base you decide upon IT MUST BE LEVEL AND FIRM.

Warranty...

10 Year anti rot warranty subject to the following:

- The building must be raised so it is not in contact with any water. retaining base surface (for example grass).
- This can be achieved using a timber, concrete or slab base .
- When using a concrete or slab base use damp proofing strips under the bearers.
- The building must have been completely treated and sealed immediately prior to or after assembly.
- The building must have been re-treated and re-sealed annually.

NOTE: Wood is a natural product and therefore the following are excluded from the warranty:

- Colour change
- Warping
- Splitting.

The following are also excluded:

- Damage resulting from poor assembly
- Poor treatment application
- Poor care and maintenance
- Changes to the design
- Misuse
- General wear and tear.

Care, Maintenance and Recycling

The 5 golden rules of care:

- (1) Ensure your base is level and firm.
- (2) Ensure the building is not sitting directly on the ground using damp proof membrane or the optional timber base.
- (3) Ensure every piece of timber and surface, especially that is hidden upon assembly is treated with a top quality wood preservative at least twice (before assembly). Turn the panels upside down whilst painting so the treatment runs into the seams.
- (4) Garden buildings are not waterproof, therefore we recommend you seal between all the panels with a silicone based sealant.
- (5) Regularly check your roofing felt for weather damage and leaks.

The 6 golden rules of maintenance:

- (1) Visually check for weather damage.
- (2) Check and replace if necessary any Silicone sealant if used on your building.
- (3) Check the roofing material for wear.
- (4) The doors and windows may require periodical adjustment.
- (5) Ensure your building is well ventilated especially during hot weather.
- (6) During extremely hot periods humidify your building to prevent the timber from drying out.

Recycling and disposal:



packaging

1. Pallet and timber widely recycled
2. Cardboard widely recycled
3. Plastic strapping subject to local regulations
4. Plastic sheeting subject to local regulations.




Building


1. Timber widely recycled
2. Metal fixings widely recycled
3. Glass widely recycled
4. **Roofing felt not currently recycled.**

Stacked Parts List


FLOOR PANEL
(A0130)x02

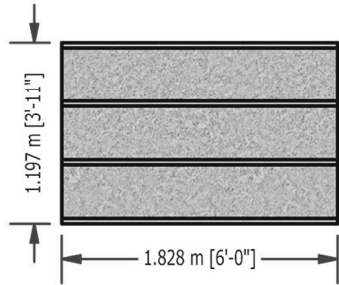


DOOR PANEL
(A4386)x01

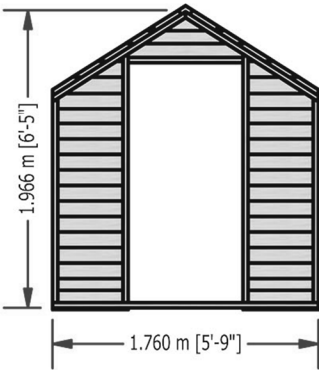


RUSTIC DOOR
(A4420)x01

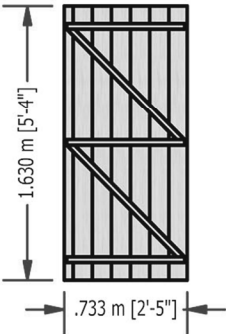


PLAIN GABLE
(A4387)x01

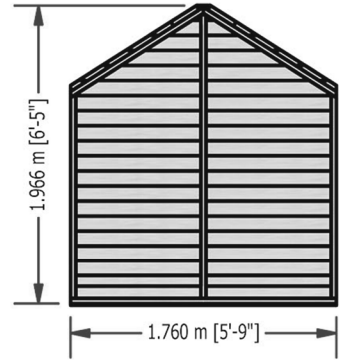


PLAIN PANEL
(A4388)x02

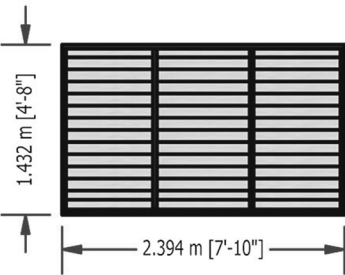


OSB ROOF 1140x2410
(A4389)x02

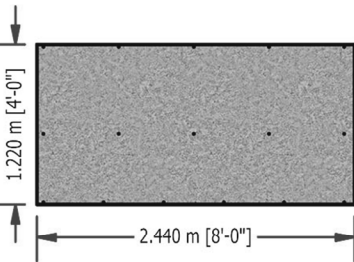

FELT STRIP 2.6
(A2545)x03

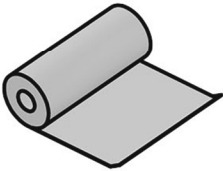


34X34X2440
(A08783)x06

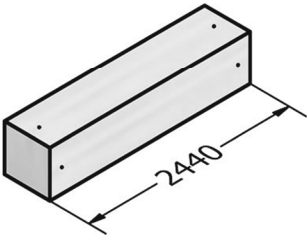


Description
(part No) - Qty

Stacked Parts List


HINGE STRIP 20X46
(A2546)x01

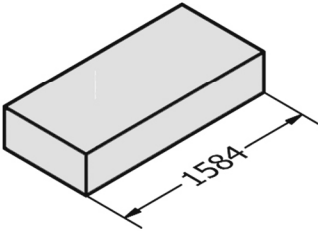


DOOR STOP 12X28X1585
(A4421)x02

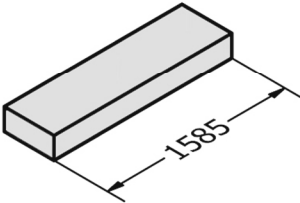

DOOR STOP 12X28X716
(A4449)x01

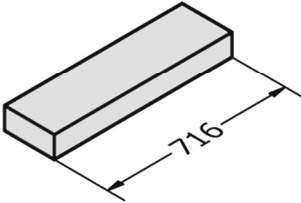


FASCIA
(A4422)x04

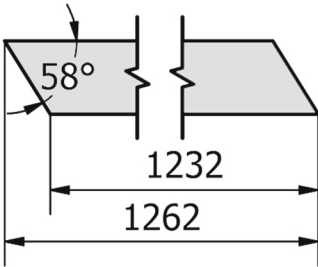

DIAMOND
(A0019)x02




COVERSTRIP 12X48X1430
(A4400)x04

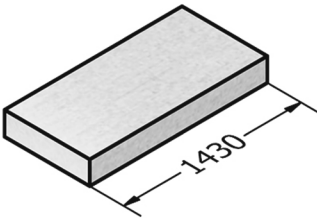


Description
(part No) - Qty


Fascia and Nail Bag Parts List


HASP & STAPLE
(A0123)x01

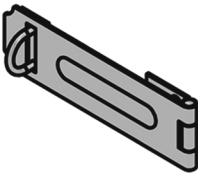

TEE HINGE
(A0049)x03



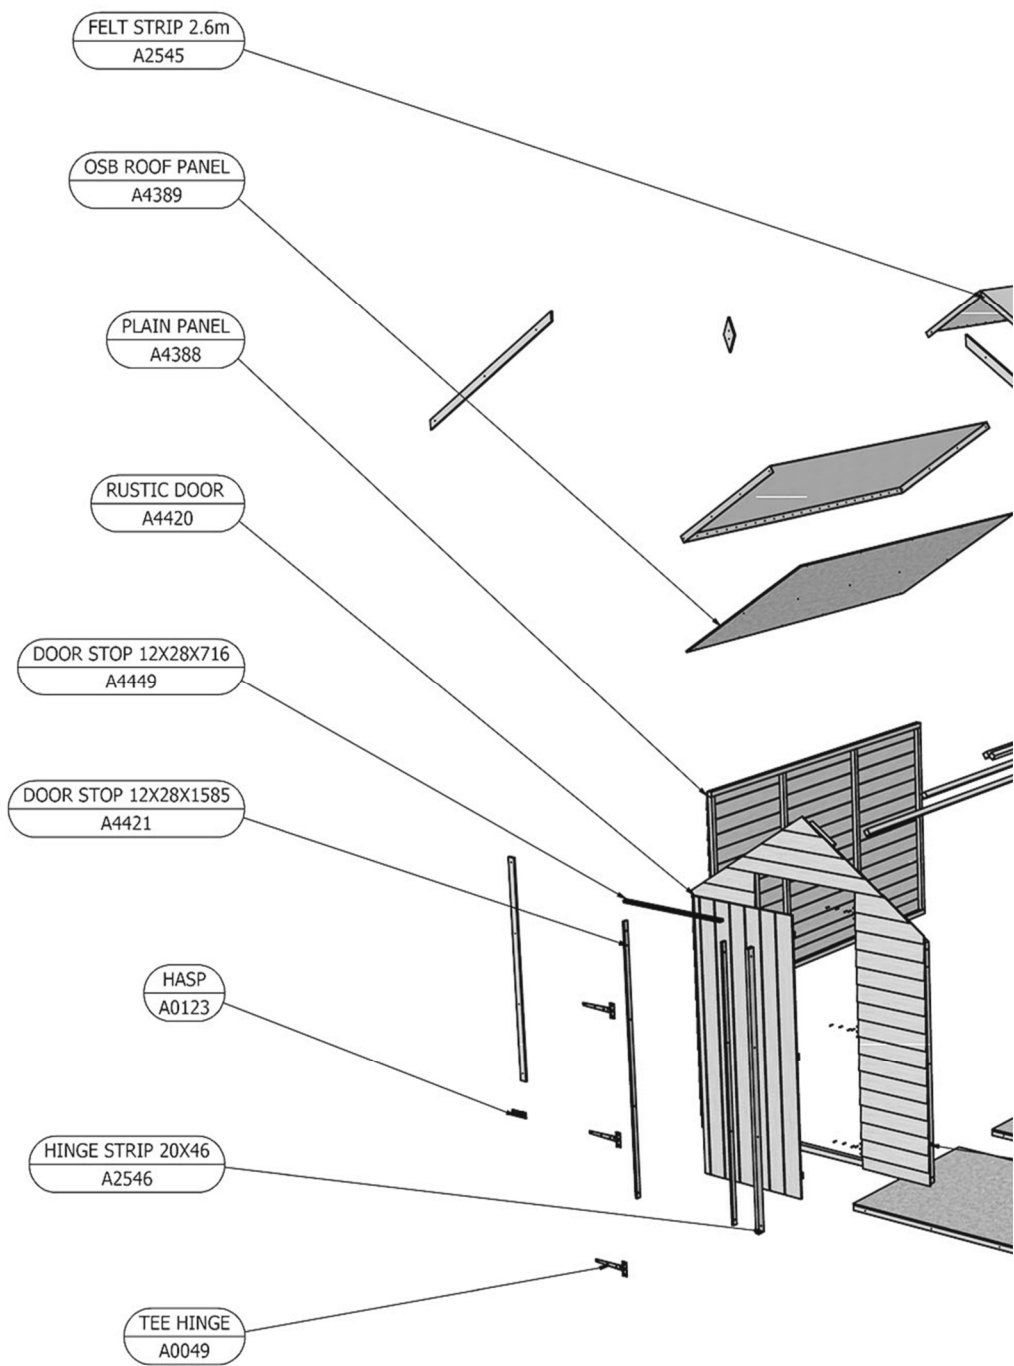

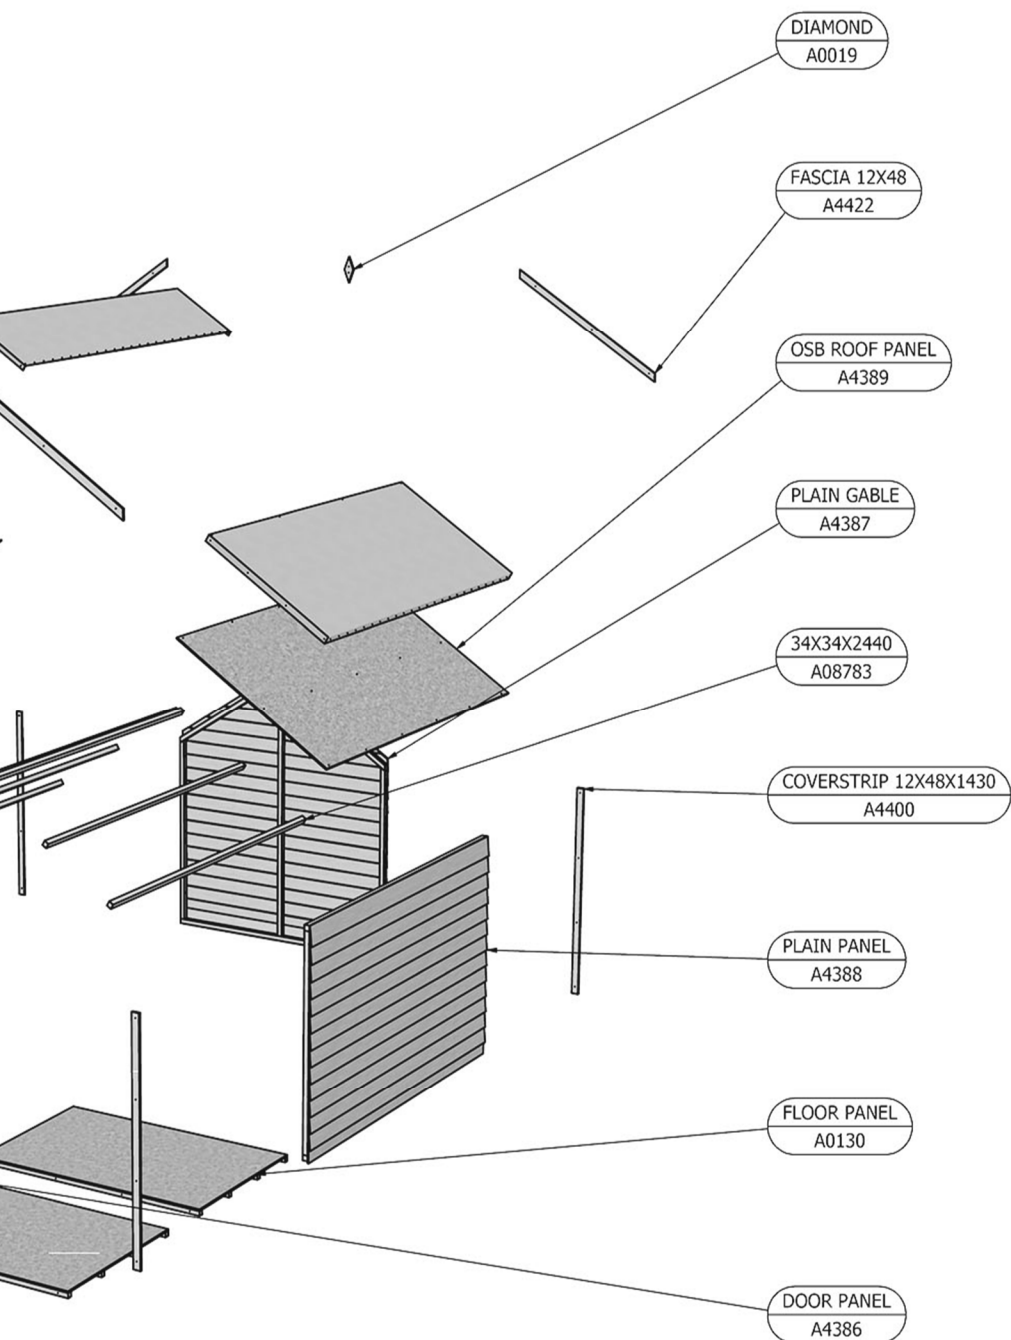


In more detail....

Hardware Chart Scale 1:1


8mm Felt Nail
(A0266) x128




40mm Round head nail
(A0025) x83



25mm Posi-drive screw
(A0032) x27

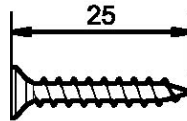

60mm Posi-drive screw
(A0035) x30

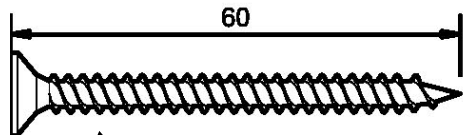

If using a drill or electric screwdriver carefully but firmly push the opposite end to the screwdriver bit into the screw head and keep the pressure on to prevent the screwdriver spinning in the screw.

Drill a pilot hole through first panel only so the screw stem drops through and the screw self taps into the second panel



Before you start...

Things to check before you start:

- ✓ Ensure your base is ready – See page 4.
- ✓ Check all parts as listed in the parts lists.
- ✓ Read the instructions fully before starting work
- ✓ Follow all the health and safety guidelines.

When you see the drill icon


Only ever drill through the first piece of framework which will be a pilot hole for the screw to attach the second piece of framework
The required drill bit size is shown with the icon.

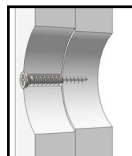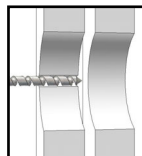

You will need:




- Hammer




- Spirit level




- Ladder




- 1mm 3mm 5mm 8mm drill bit



- Drill



- Tape measure & Ruler




- Sand paper



- Gloves




- Saw



- Pencil



- Goggles



- A helper for some tasks



- Screwdriver



- Sharp knife




- Masking tape

Assembly instructions:


These instructions are for your safety. Please read through them thoroughly before use.
Treat all the parts before assembly – see page 5!

GB-IE The **door end panels** and the **opposite end panels** **FIT INSIDE THE SIDE PANELS!**





01

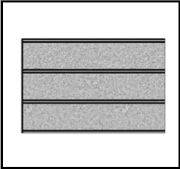

Floor Panel
(A0130)x02



60mm Screws
(A0035)x04

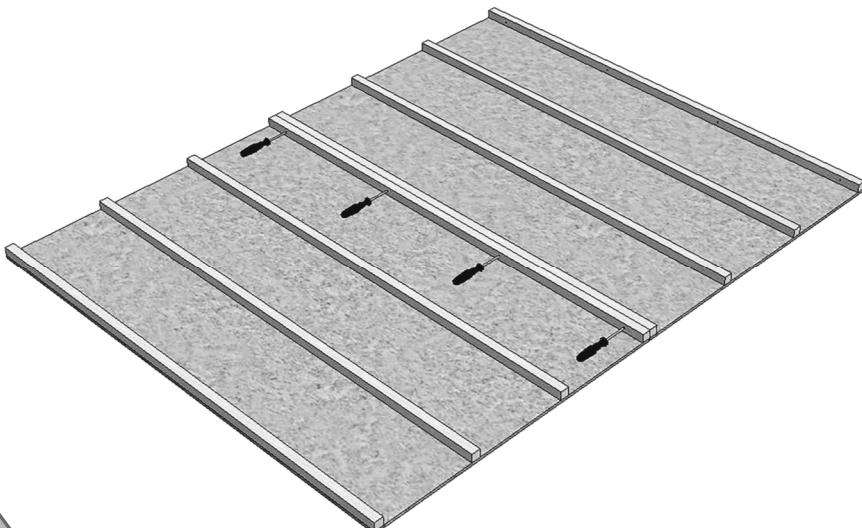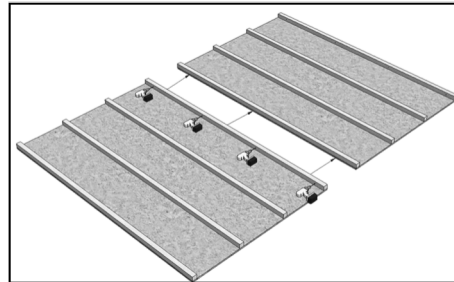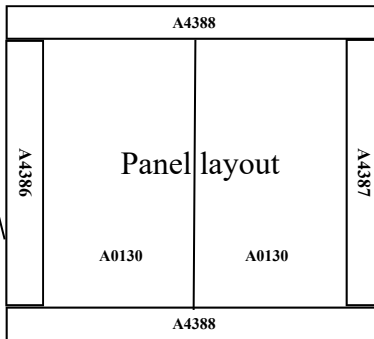




GB-IE

Drill one **Floor Panel (A0130)** as below.
Secure both together with 4x **60mm Screws (A0035)**.
Carefully turn over and put onto your base.


12

Drill the **Plain Gable (A4387)** as below.
 Drill one **Plain Panel (A4388)**, making sure the holes are inline with the floor bearers.
 Place the plain panel into the corner of the floor so that the cladding overlaps.
 Push the gable up to it and secure with 3x **60mm Screws (A0035)**.


02



**Plain Panel
(A4388)x01**

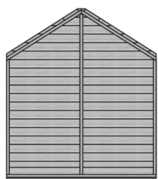




**Plain Gable
(A4387)x01**




**60mm Screws
(A0035)x03**



Inline with floor bearer

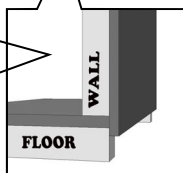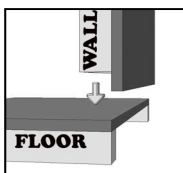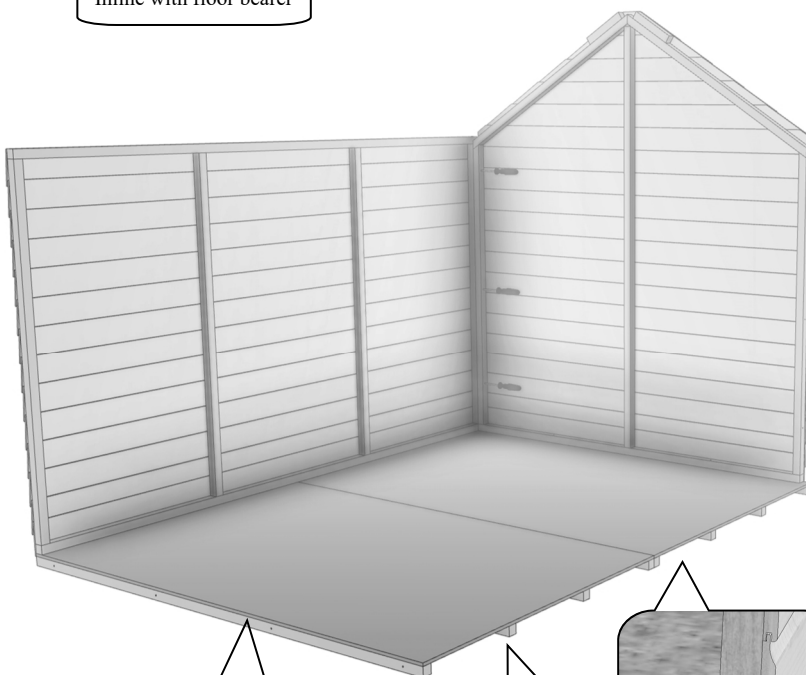


DO NOT
FIX WALLS TO
FLOOR
UNTIL ASKED

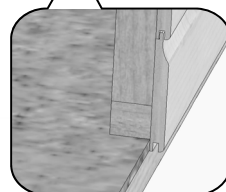


GB-IE Drill the **Door Panel (A4386)** as below.
Place onto the floor and secure with 3x **60mm Screws (A0035)**.








03

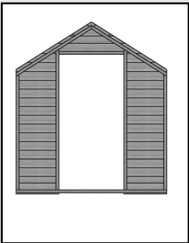


**Door Panel
(A4386)x01**



**60mm Screws
(A0035)x03**

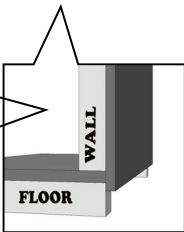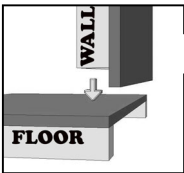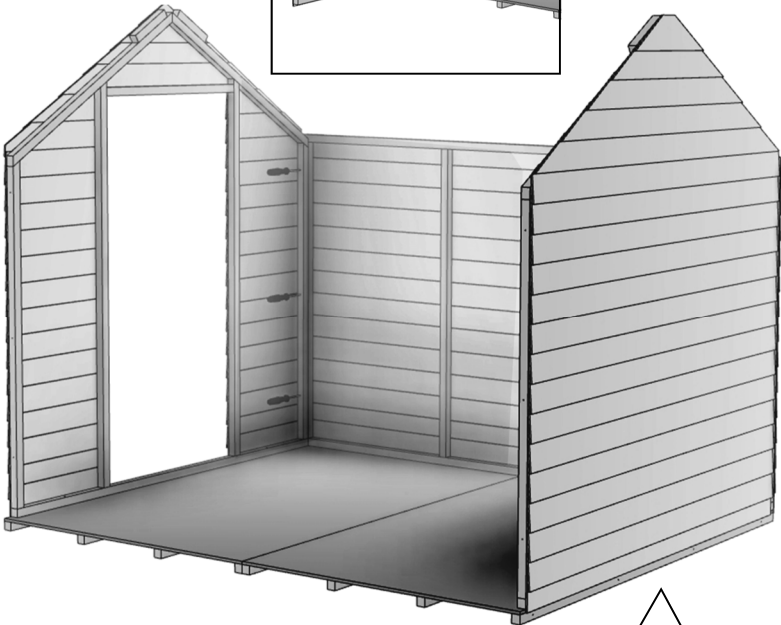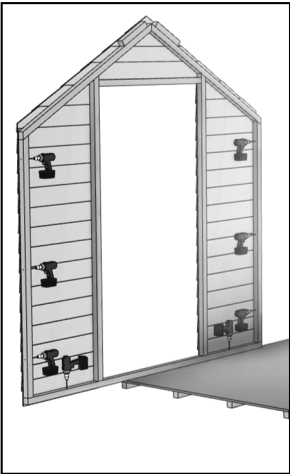



DO NOT
FIX WALLS TO
FLOOR
UNTIL ASKED

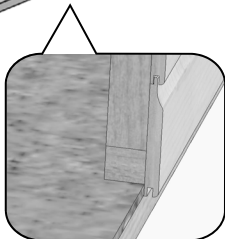


GB-IE Drill the other **Plain Panel (A4388)**, making sure the holes are inline with the floor bearers. Place onto your building and secure with 3x **60mm Screws (A0035)** in each side of the gable ends as below.





04




Plain Panel
(A4388)x01



60mm Screws
(A0035)x06

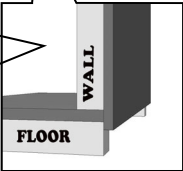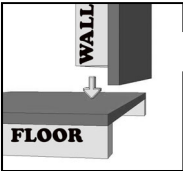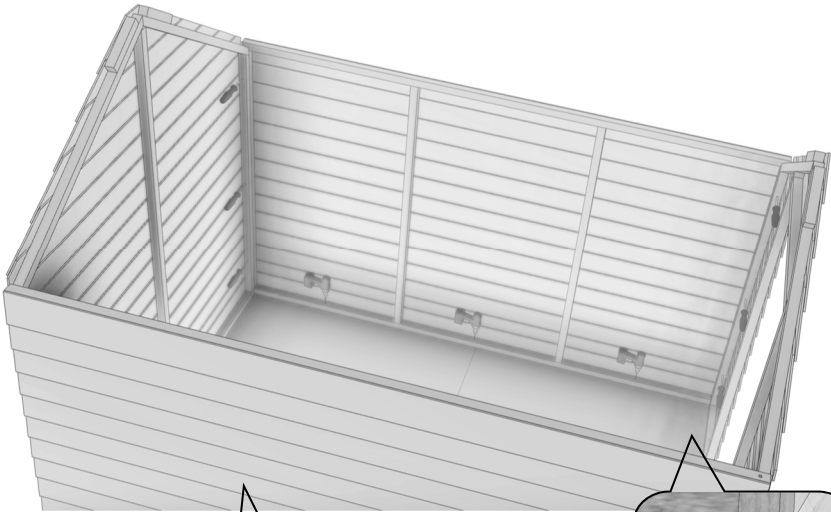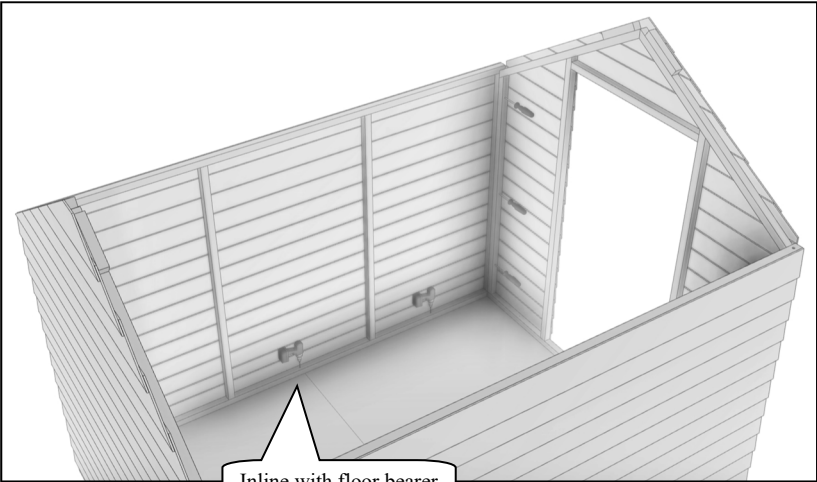


DO NOT
FIX WALLS TO
FLOOR
UNTIL ASKED

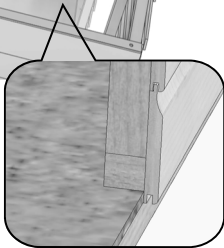


Fix three **34x34x2440 (A08783)** bearers to one **OSB Roof Panel (A4389)** as below.
 Make sure one bearers is fixed **21mm** away from the edge as below.
 Secure with 4x **40mm Nails (A0025)** in each. Repeat so you have two assembled roof panels.
 Place one panel, with the **21mm** gap at the top, onto your building, cutting the gable cladding.
 Secure from the inside, with 2x **60mm Screws (A0035)** in each end, fixing into the bearers.
 Secure with 6x **40mm Nails (A0025)** along the wall panel side as below.
 Repeat with the second roof panel.


05

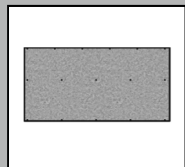


OSB Roof Panel (A4389)x02

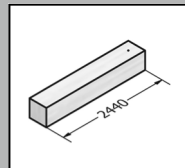



34x34x2440 (A08783)x06




40mm Nails (A0025)x36




60mm Screws (A0035)x04

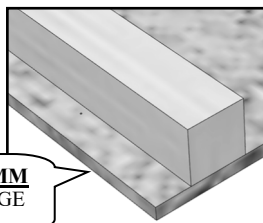

ONE BEARER **21MM** AWAY FROM EDGE

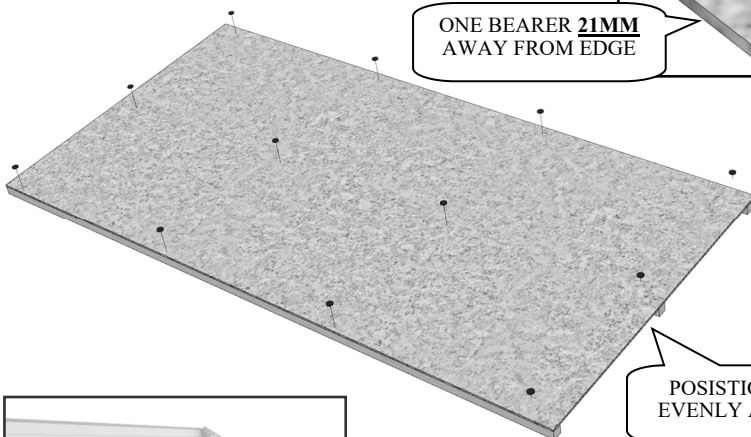


POSITIONED EVENLY APART

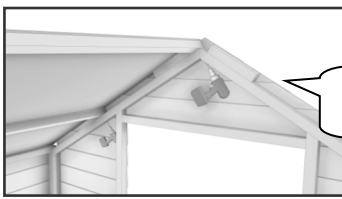


SECURE INTO BEARERS

CUT INTO CABLE CLADDING SO ROOF BEARERS CAN SOT THROUGH


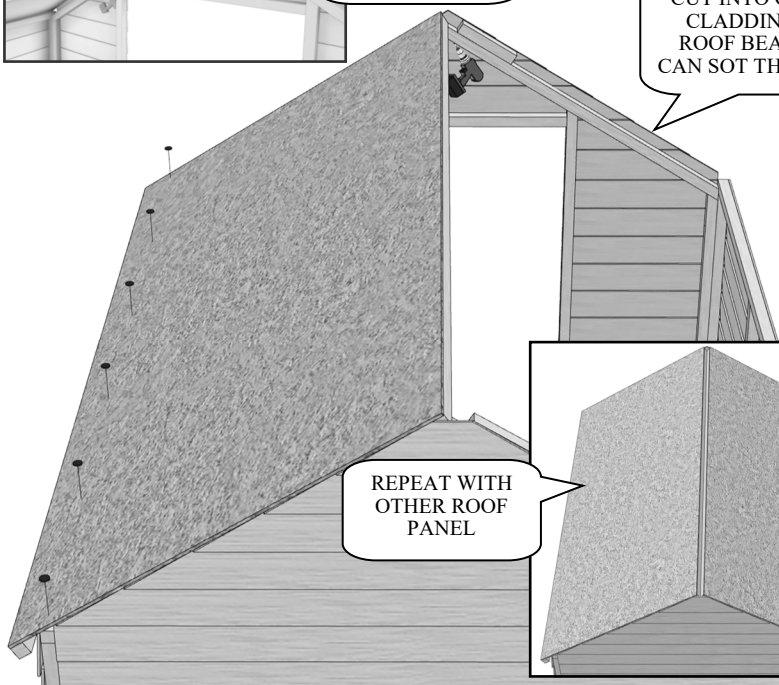


REPEAT WITH OTHER ROOF PANEL

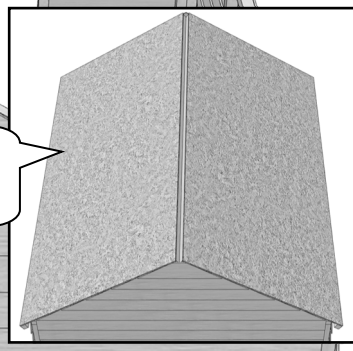


Align the **Hinge Strip 20x46 (A2546)** flush with the inside face of the doorway framework (widest side against framework) and fix with **40mm nails (A0025)**.

06

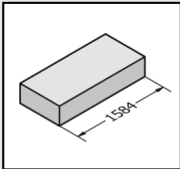

Hinge Strip 20x46
(A2546)x02




40mm Nails
(A0025)x04




A2546
FIT THIS TO
THE SIDE
YOU WISH
TO HANG
THE DOOR
HINGES

GB-IE Fix the **Tee Hinges (A0049)** as shown so the screws go into the horizontal framework on the back of the **Rustic Door (A4420)**.
Ensure the hinge is over the framework gap on the back of the door.


07

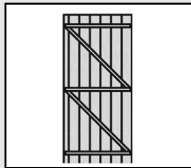



Rustic Door (A4420)x 01




Tee hinge (A0049)x03



25mm screws (A0032)x12

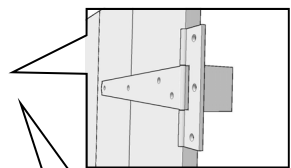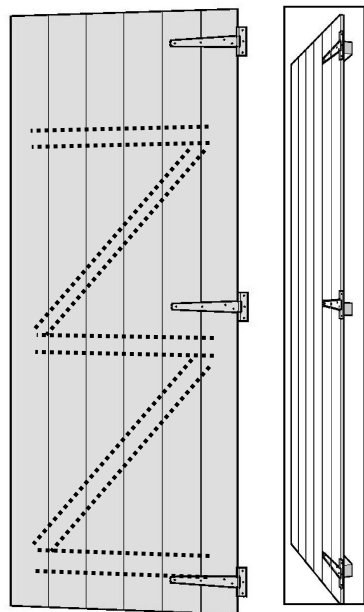


Hinge over door framework

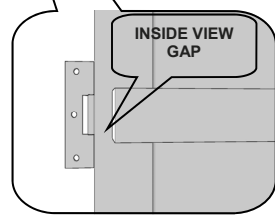




INSIDE VIEW GAP

GB-IE Carefully hang the doors using 1 screw per hinge at first to ensure they are square before adding the rest of the screws.
Tip You can use coins or something similar under the doors as packing to level the doors.

08




25mm Screws (A0032)x09

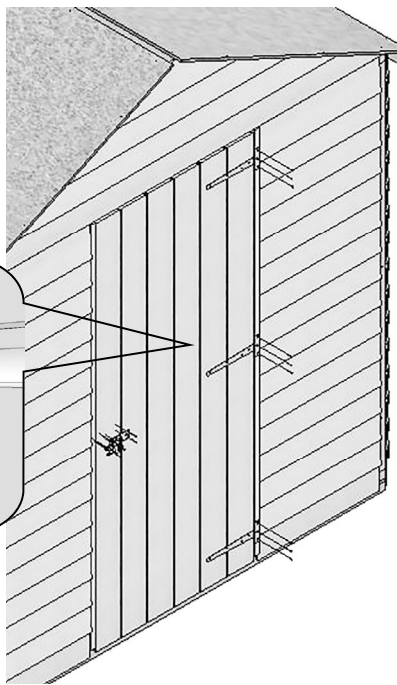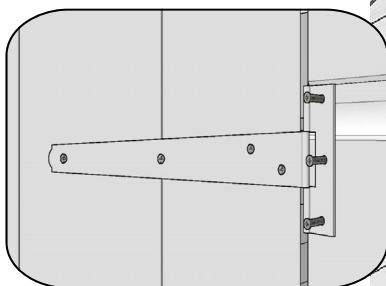


GB-IE

Fix the **Door Stop 12x28x1585 (A4421)** to the sides using 4x **40mm Nails (A0025)**.
Fix the **Door Stop 12x28x716 (A4449)** to the top using 3x **40mm Nails (A0025)**.
NOTE: Make sure the door stops are flush with the outside door framework **NOT** the cladding.


09

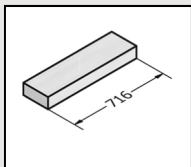



Door Stop 12x28x716 (A4449)x01

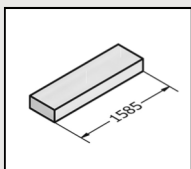

Door Stop 12x28x1585 (A4421)x02



40mm Nails (A0025)x11

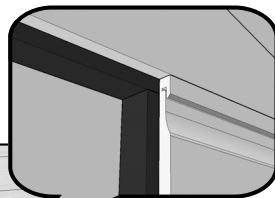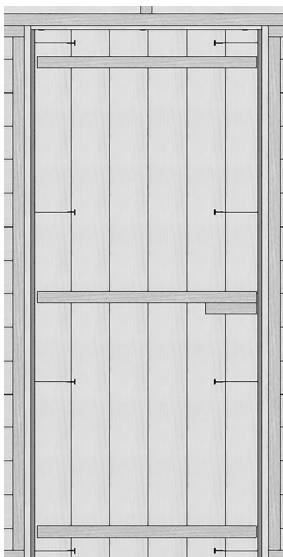


GB-IE

Fix the **Hasp and Staple (A0123)** so the screws go into the horizontal framework on the back of the door.


10



Hasp (A0123) x01




25mm Screw (A0032)x06

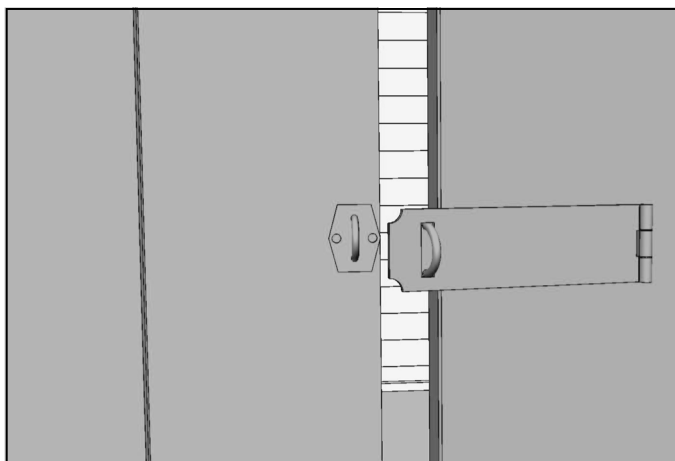




GB-IE

Make sure everything is square and true.
Fix the walls to the floor with 1x **60mm screw (A0035)** using the holes drilled previously.

11




60mm Screws (A0035)x10

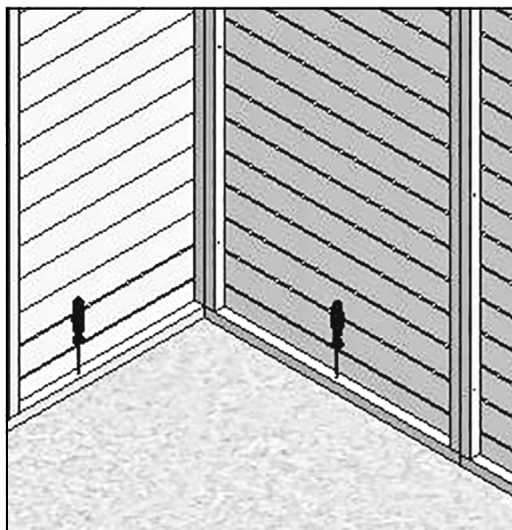


GB-IE

Fit **Coverstrips 12x48x1430 (A4400)** in each corner using 4x **40mm Nails (A0025)** in each.


12

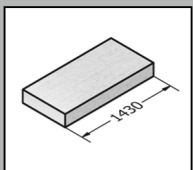

Coverstrip 12x48x1430 (A4400)x04




40mm Nails (A0025)x16

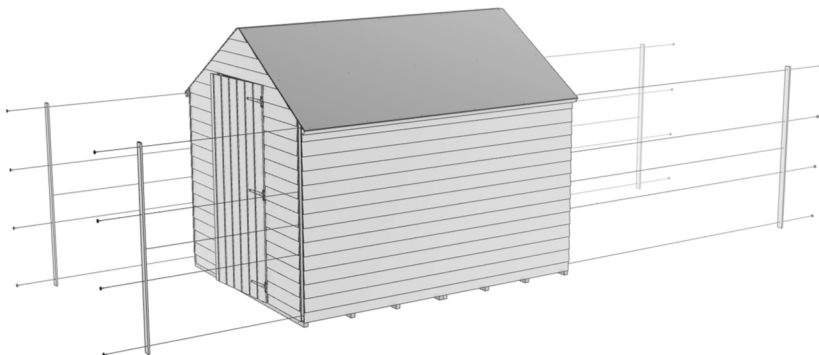


3 Strips of **Felt 2.6m (A2545)** have been supplied .
 Fit the 2 lower strips first folding the felt over the roof edging, with an even overhang front and back then secure with **8mm Felt Nails (A0266)** at the top to hold the felt in position and at the bottom nail at approximately 100mm centres.





13

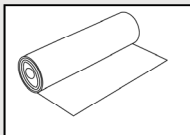

**Felt Strip 2.6m
(A2545)x02**

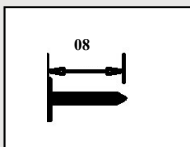


**08mm Felt nails
(A0266) x72**

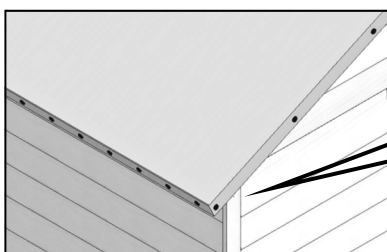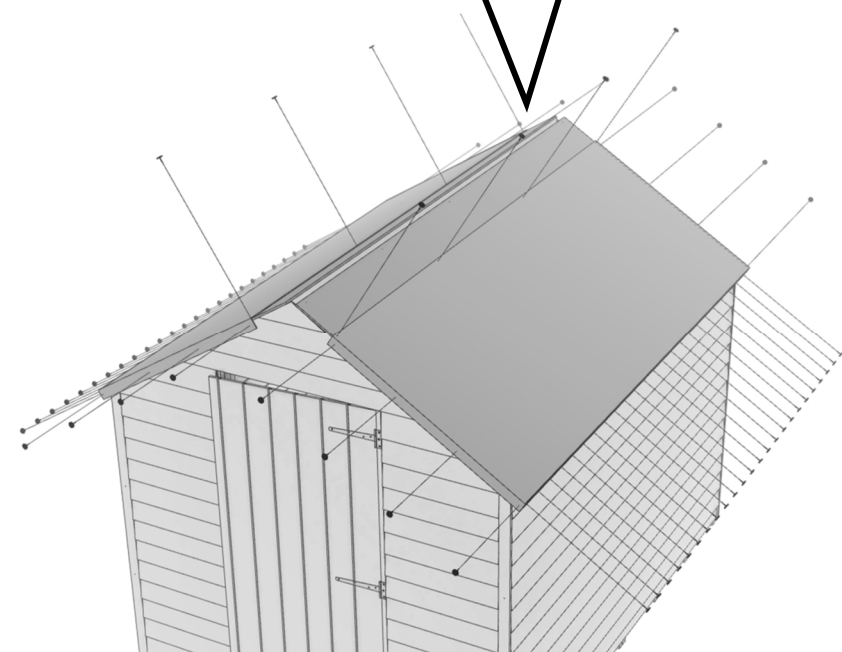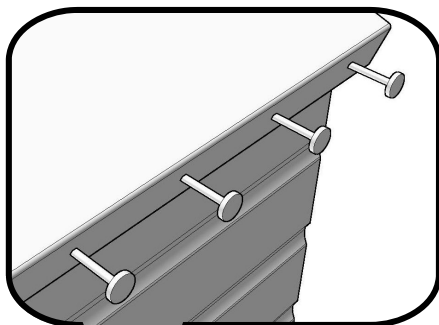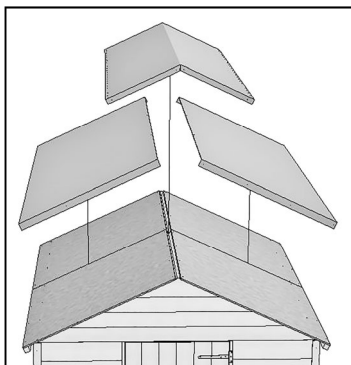


GB-IE The third piece overlaps the lower pair and goes over the ridge.
Nail at approximately 100mm centres


14

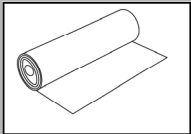

Felt Strip 2.6m
(A2545)x01

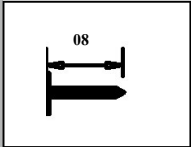


08mm Felt nails
(A0266) x56

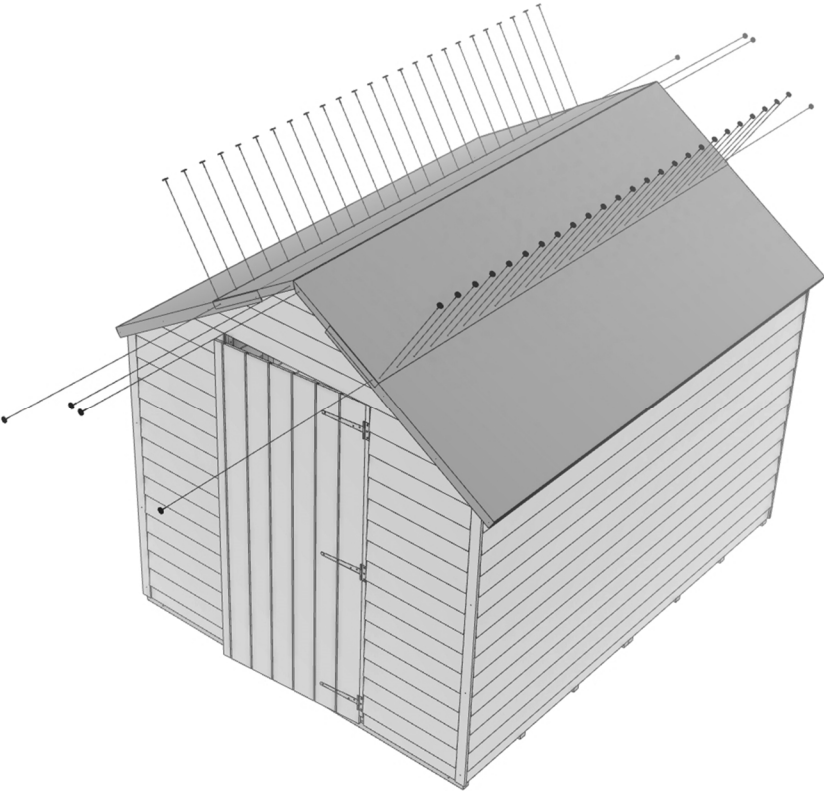


GB-IE Fix the **Fascia (A4422)** to your building as below using 3x **40mm Nails (A0025)** in each.
Fix the **Diamonds (A0019)** over the fascia joins using 2x **40mm Nails (A0025)**.


15

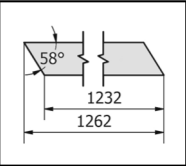

**Fascia
(A4422)x04**

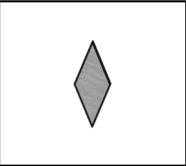

**Diamond
(A0019)x02**



**40mm Nails
(A0025)x16**



NAIL IN END OF
EACH BEARER OF
THE ROOF PANEL

