


# INSTRUCTION MANUAL

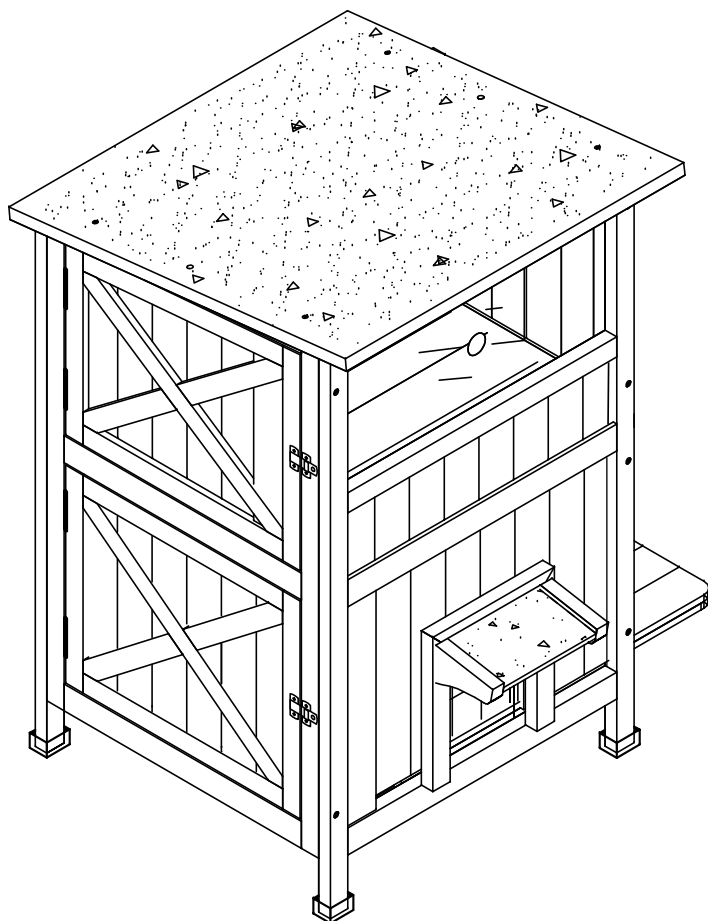



## NOTICE

Please retain these instructions for future reference.


- Firmly secure all bolts,screws and knobs before use.
- Reconfirm that all bolts,screws,and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure,crush and cut.
- If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer' s instructions as this could void the product warranty.



## TOOLS REQUIRED //



PHILLIPS  
SCREWDRIVER



DRILL  
(RECOMMENDED)



2PERSON  
ASSEMBLY



APPROXIMATELY  
30MIN. ASSEMBLY

## HARDWARE //

M4.0x40mm SCREW  
4PCS+1 spare



P1

M3.5x45mm SCREW  
12PCS+1 spare



P2

M3.5x35mm SCREW  
4PCS +1spare




P3

M3.5x25mm SCREW  
4PCS +1spare



P4


Plastic Feets  
4PCS

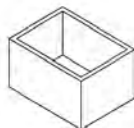

P5


# PARTS

PVC curtain  
2PCS

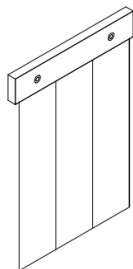


A

Front panel  
1 PC

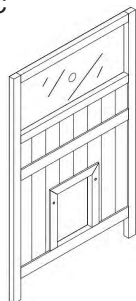


B

Roof Overhang  
2PCS

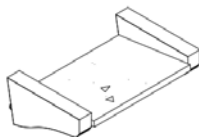

C

Upper panel- Right side  
1PC

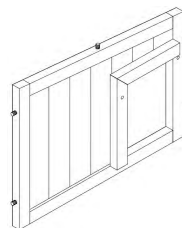

D

Down panel- Right side  
1PC



E

Back panel  
1 PC




F

Left panel  
1PC




G

Layer panel- Upper  
1PC




H

Layer panel- Down  
1PC

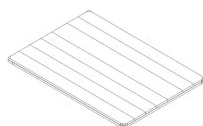


I

Roof  
1PC

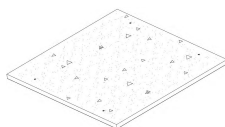


J

Insulated liner & Mat- Bottom  
part  
1PC

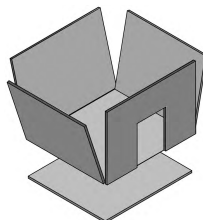

K

Insulated liner & Mat- Upper  
part  
1PC

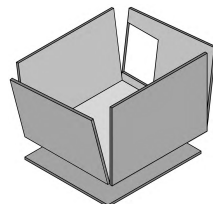


L

# PARTS

Insulated liner for roof

1PC





**M**

## PRODUCT ASSEMBLY //



01

Screw the curtain Part A to the INSIDE of Part B by 2xP4.  
Screw Part C from the INSIDE of Part B by 2xP1.

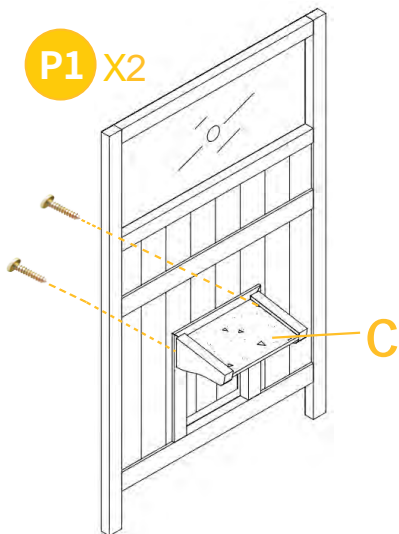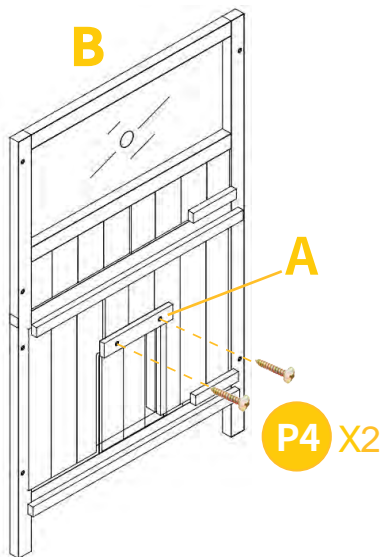


02

Screw the curtain Part A to the INSIDE of Part D by 2xP4.  
Screw Part C from the INSIDE of Part D by 2xP1.

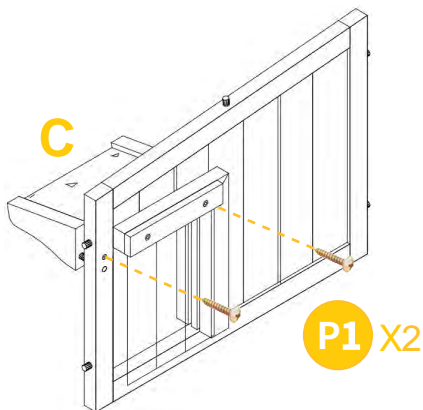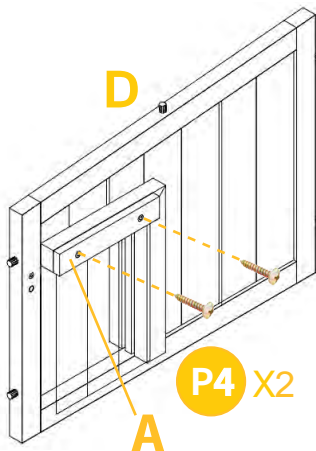


## PRODUCT ASSEMBLY //

**03** Screw Part B, F, G and the right panel by 6xP2 on each side.

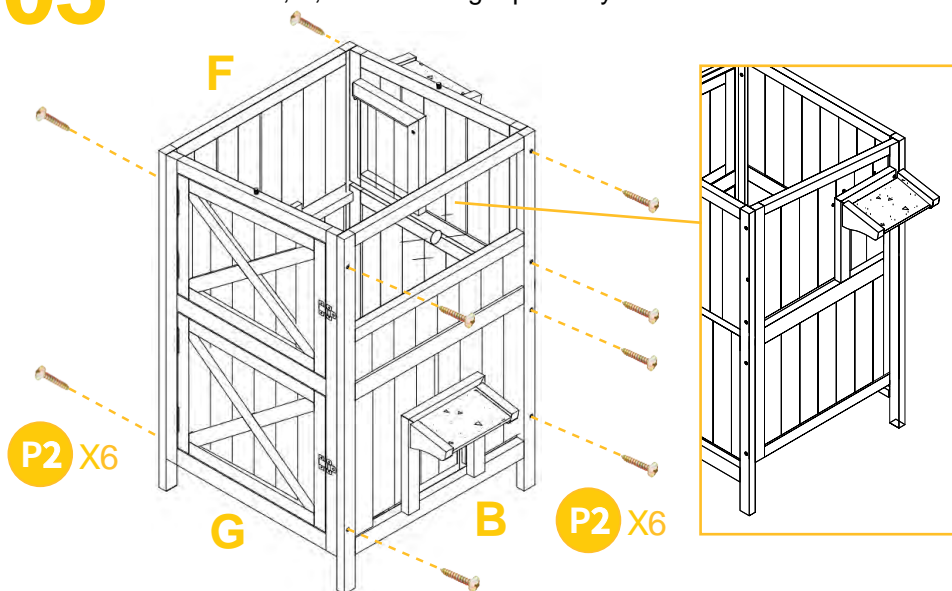


**04** Slide in the two layer panels.

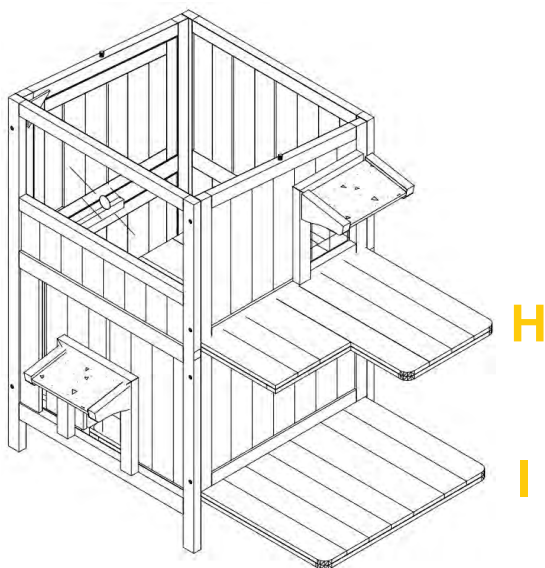


## PRODUCT ASSEMBLY //

- 05** Put the insulated liner Part K in the house first.  
And then put in the bottom liner.

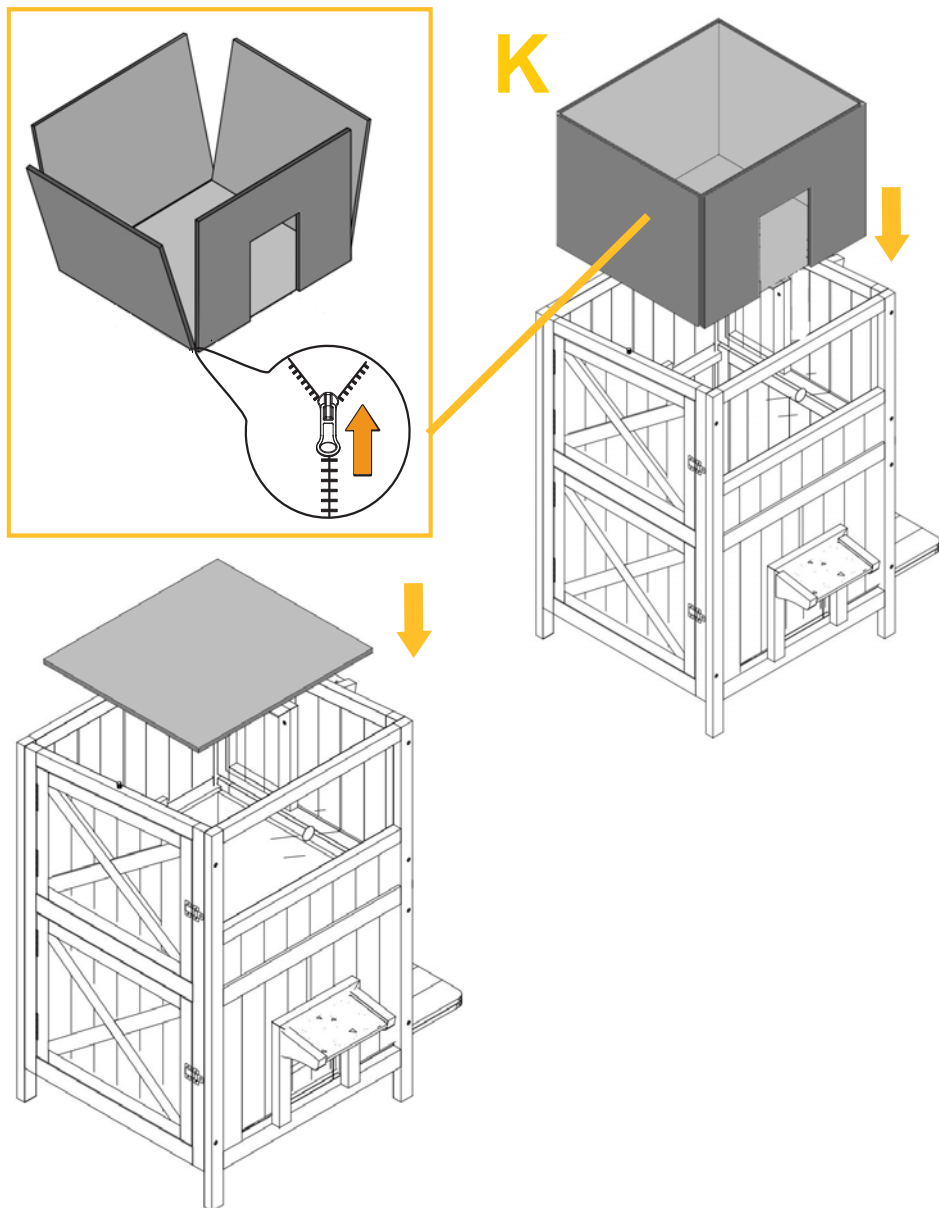


## PRODUCT ASSEMBLY //

- 06** Put the insulated liner Part L in the house first.  
And then put in the bottom liner.

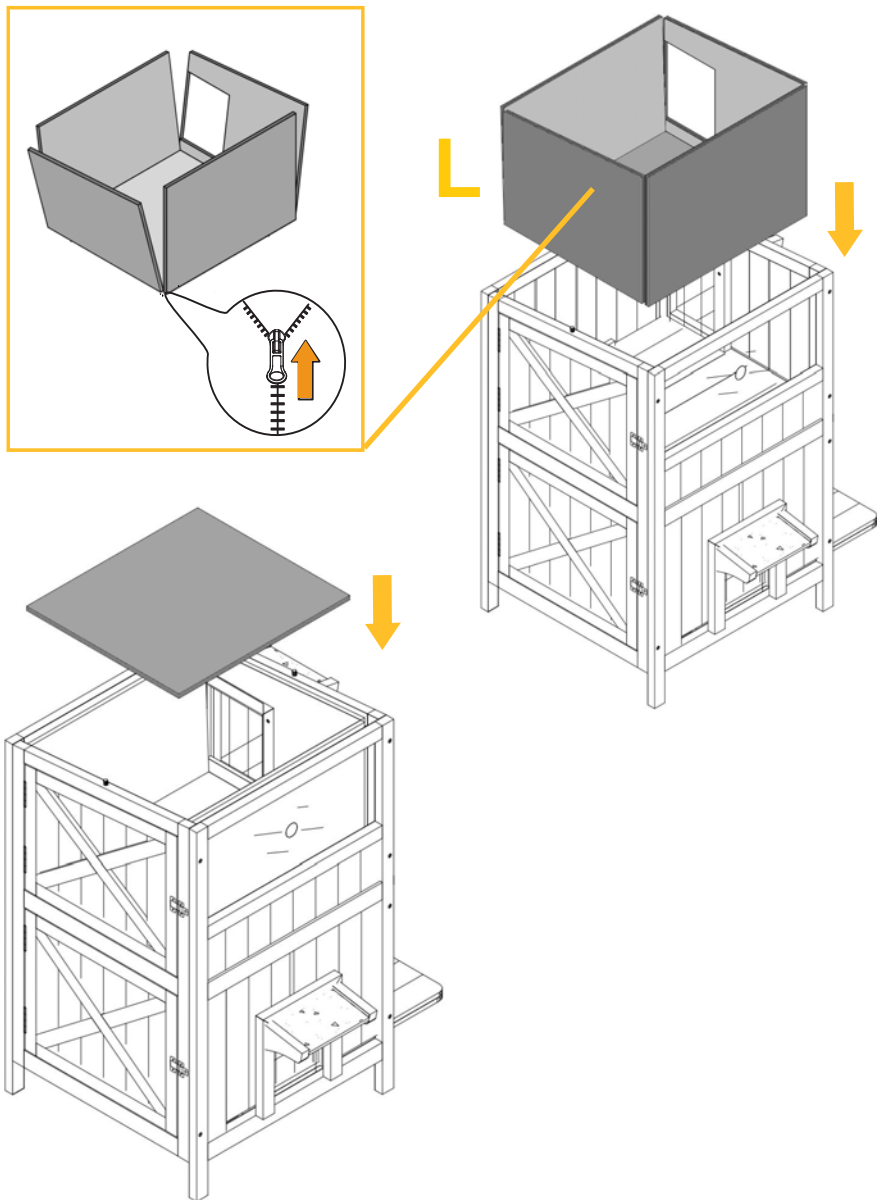


## PRODUCT ASSEMBLY

**07** Attach the roof Part J by 3xP4.

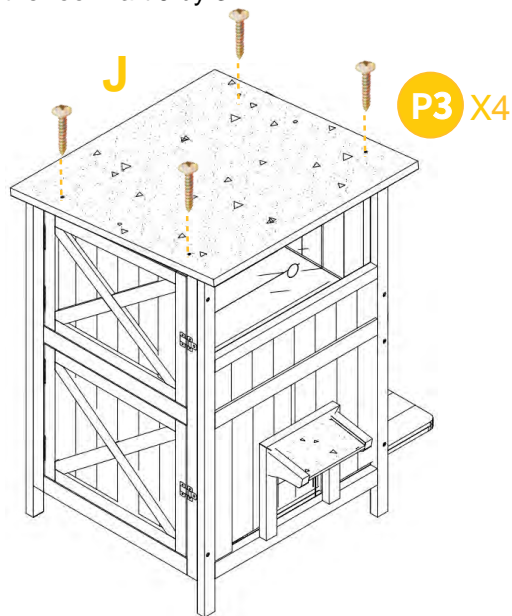


**08** Attach 4pcs of P4 to the feet of the cat house.

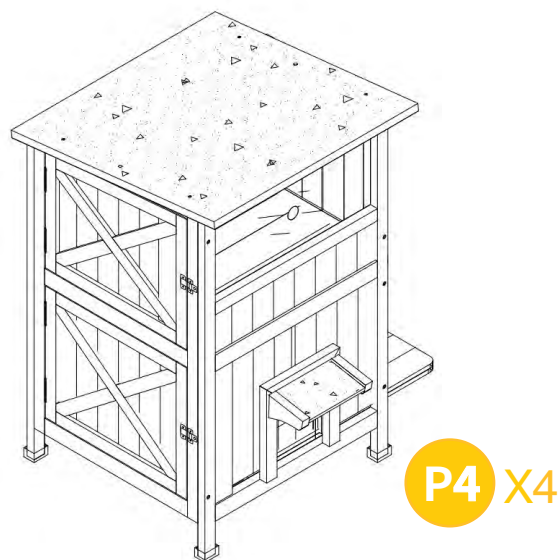



**09** Stick the roof insulated liner Part M **INSIDE** of the roof.

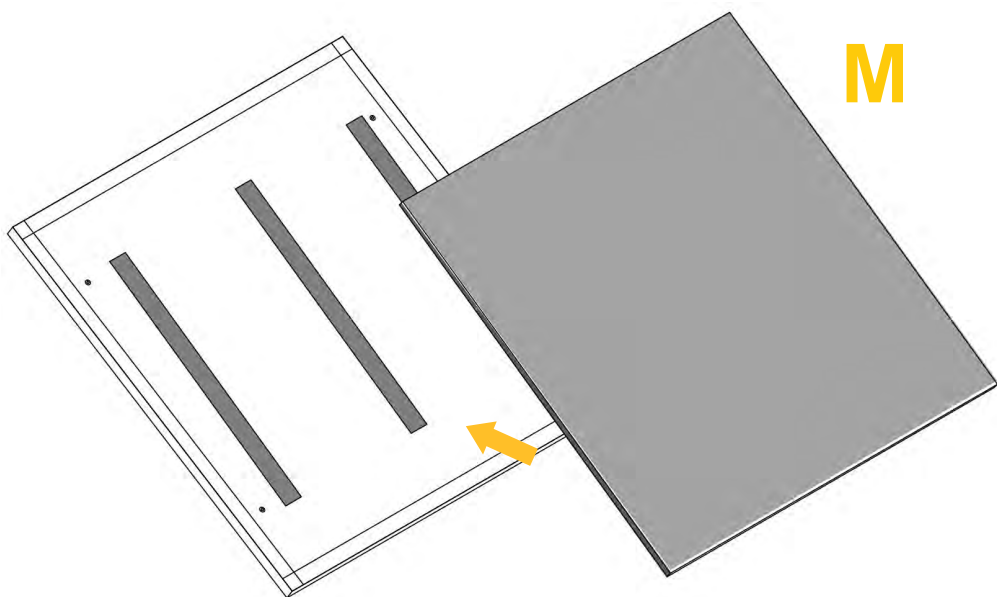

**WARNING**

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.