



ASSEMBLY INSTRUCTIONS

FULL HOUSE BED WITH TRUNDLE

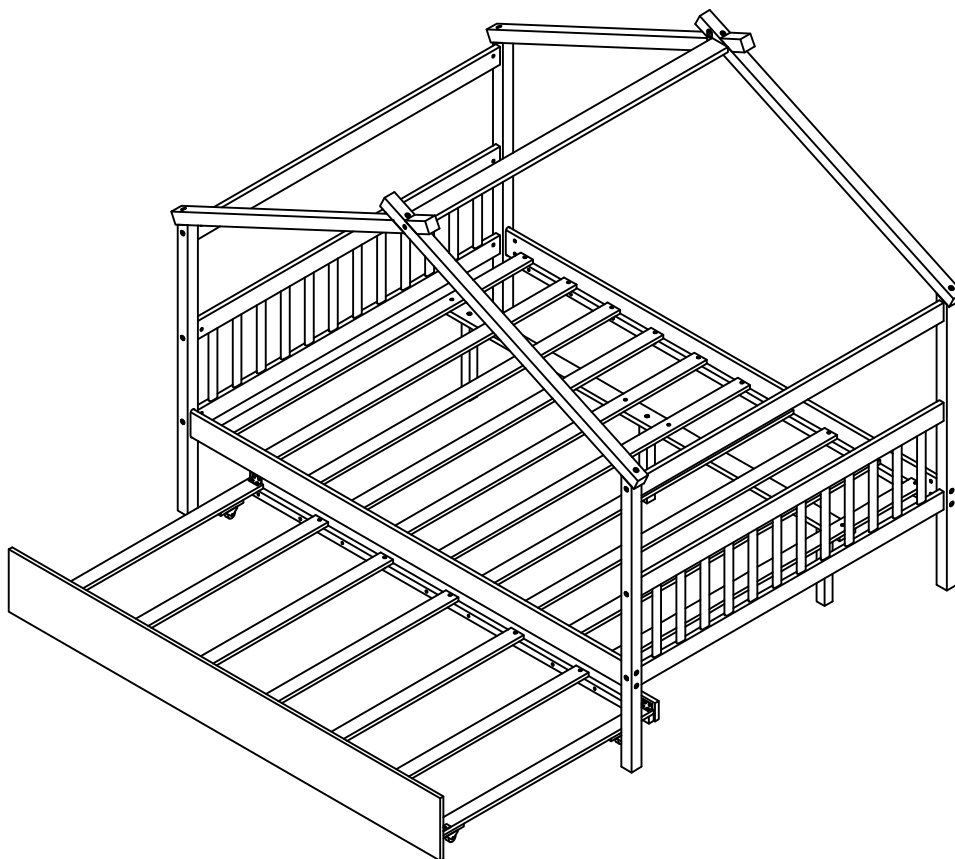
















WF300801/WF300802

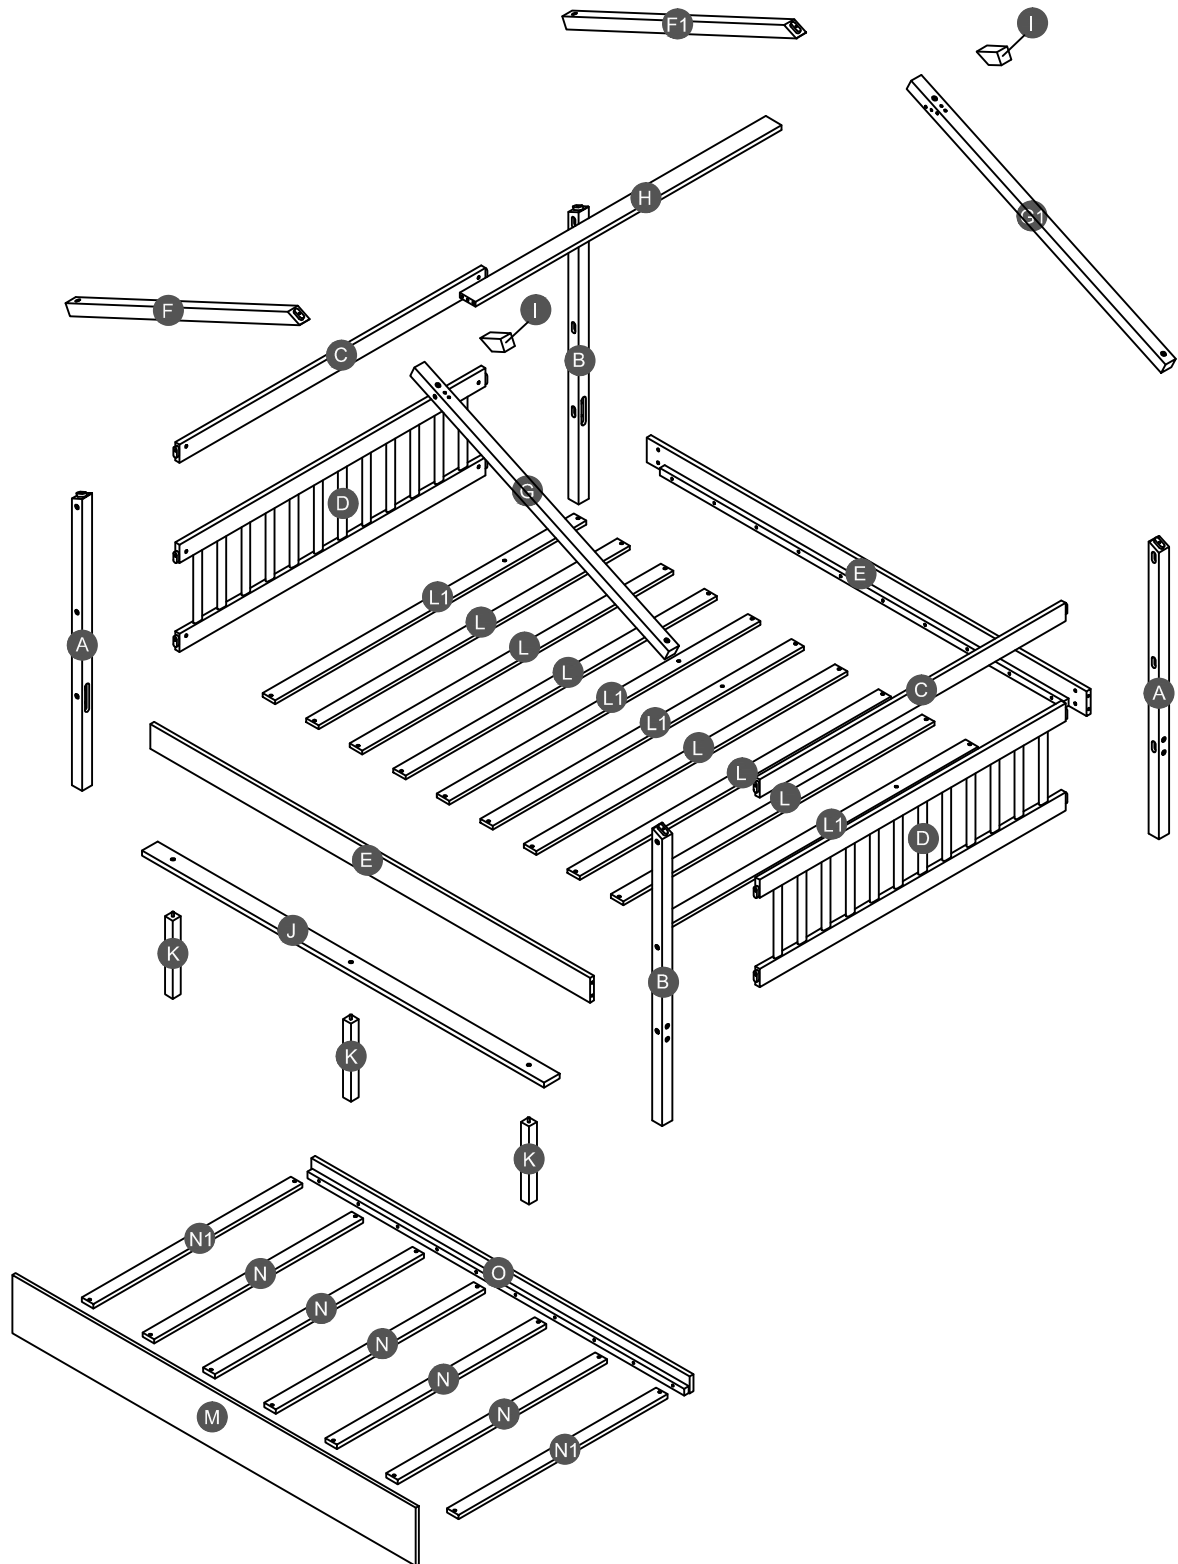Detail View







Part List










Hardware List WF300801

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Horizontal bar HB/FB - 2pcs
D  Frame HB/FB - 2pcs	E  Side rail - 2pcs	F  Upper (Left Front) - 1pc
F1  Upper (Left Back) - 1pc	G  Upper (Right Front) - 1pc	G1  Upper (Right Back) - 1pc
H  Upper horizontal bar - 1pc	I  Block - 2pcs	J  Lower support slat - 1pc
K  Leg support - 3pcs	L  Slats - 6pcs	L1  Slats - 4pcs






Hardware List WF300802

M  Front panel of Trundle - 1pc	N  Slats - 5pcs	N1  Slats - 2pcs
O  Back panel side rail of Trundle - 1pc		


Hardware List WF300801

1	 Ø8*30mm Wood dowel (6pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (14pcs)
4	 (Ø12)1/4"*65mm Hex-Head bolts (8pcs)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts(22pcs)	6	 (1/4")4.5*58mm Allen key (1pc)
7	 Ø4*30mm Wood screws (24pcs)	8	 Ø3.5*19mm Wood screws (8pcs)	9	 75*20*2 mm Metal bracket (2pcs)

Hardware List WF300802


7	 Ø4*30mm Wood screws (22pcs)	10	 Ø3.5*15mm Wood screws (16pcs)	11	 95*95*18*3mm Metal bracket (2pcs)
12	 40*18*18*2mm Metal bracket (2pcs)	13	 100*63*20mm Wheels (4pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

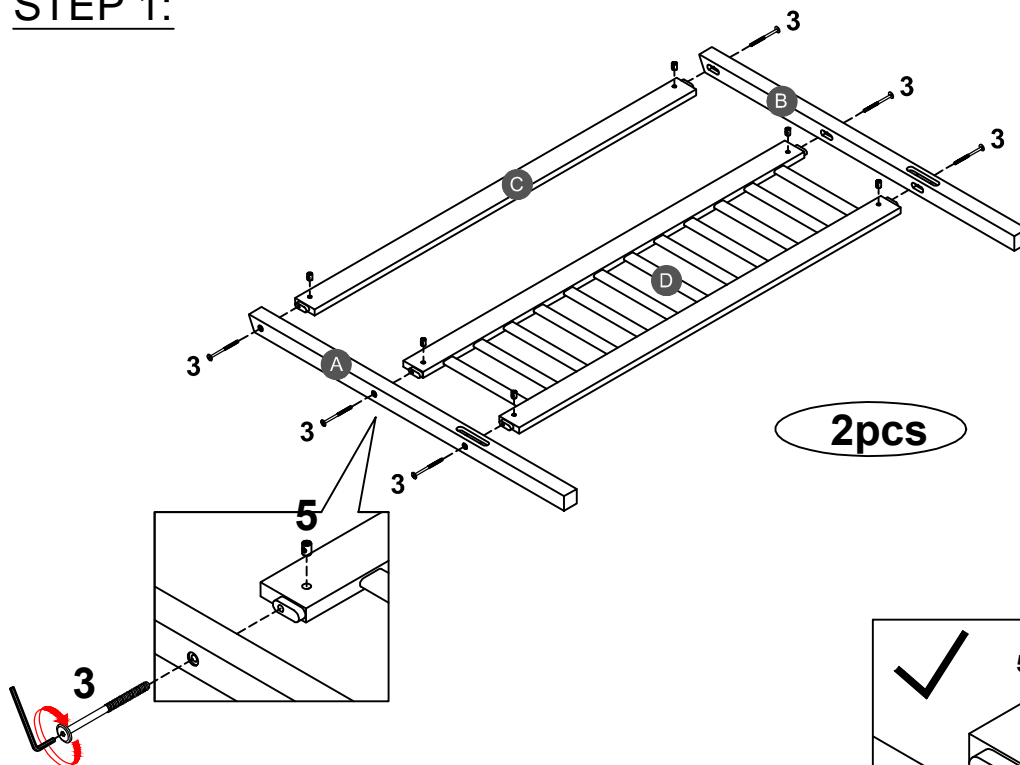


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

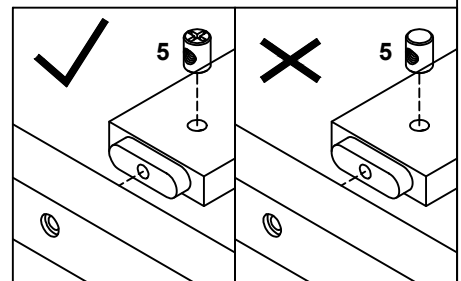


STEP 2:

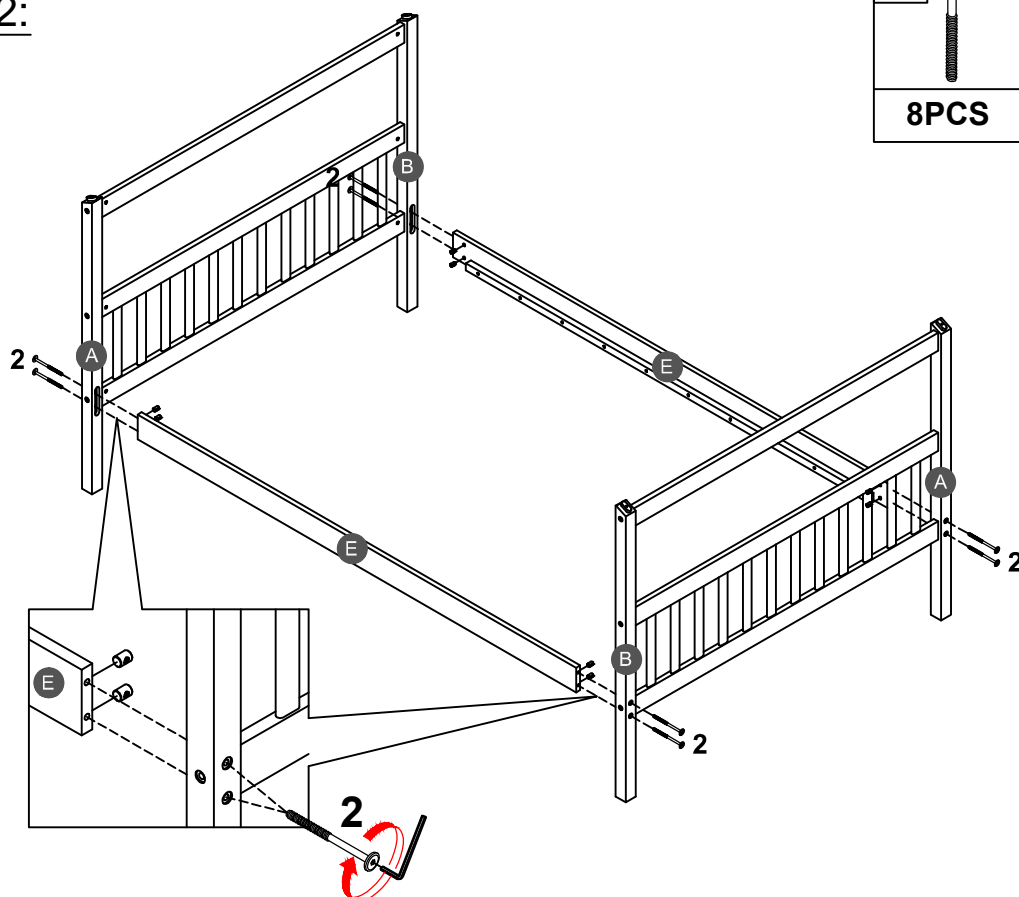


STEP 3:

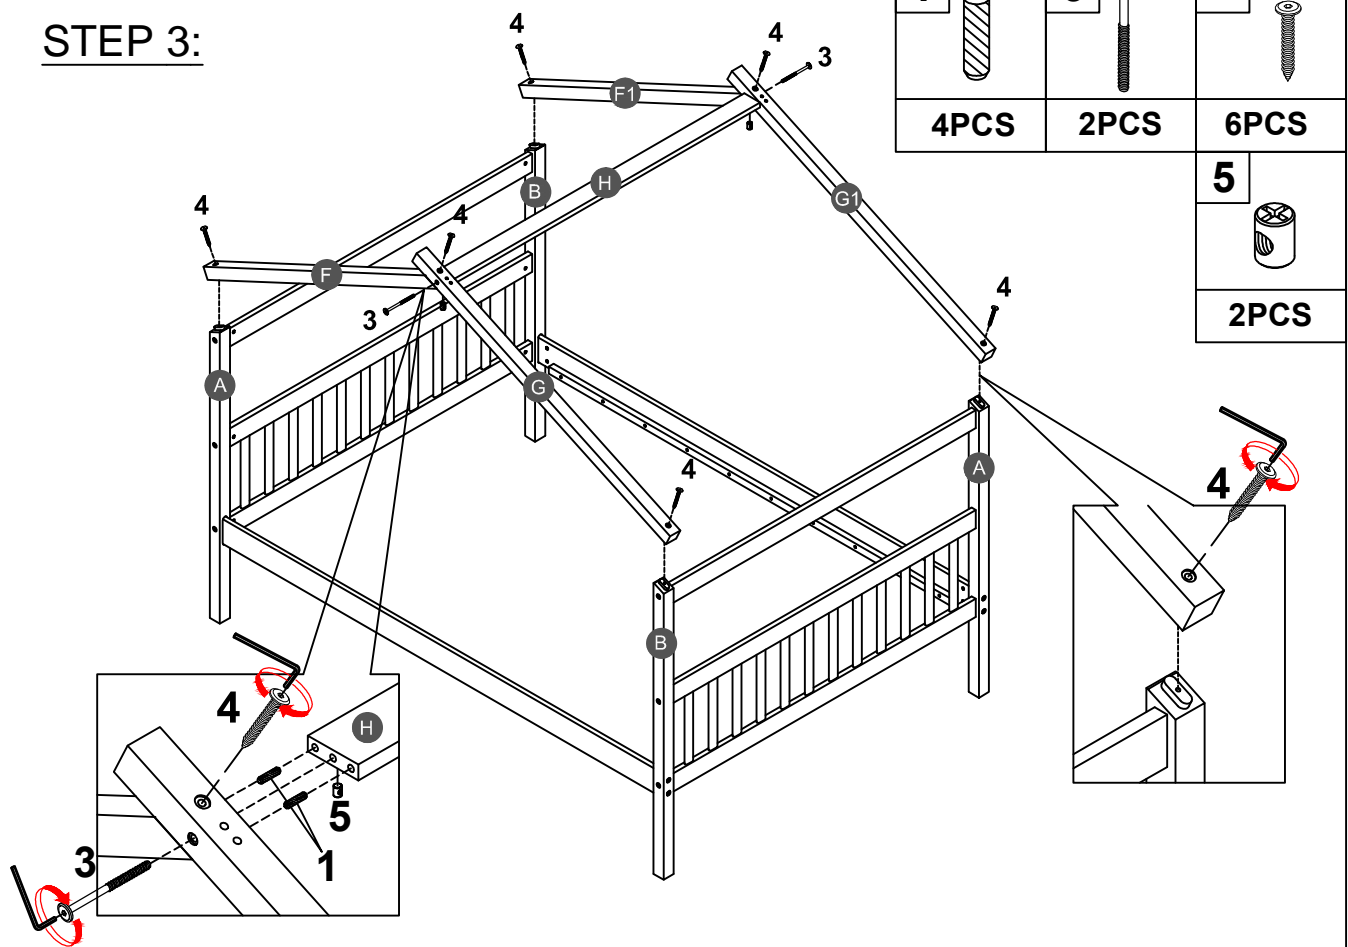




STEP 4:

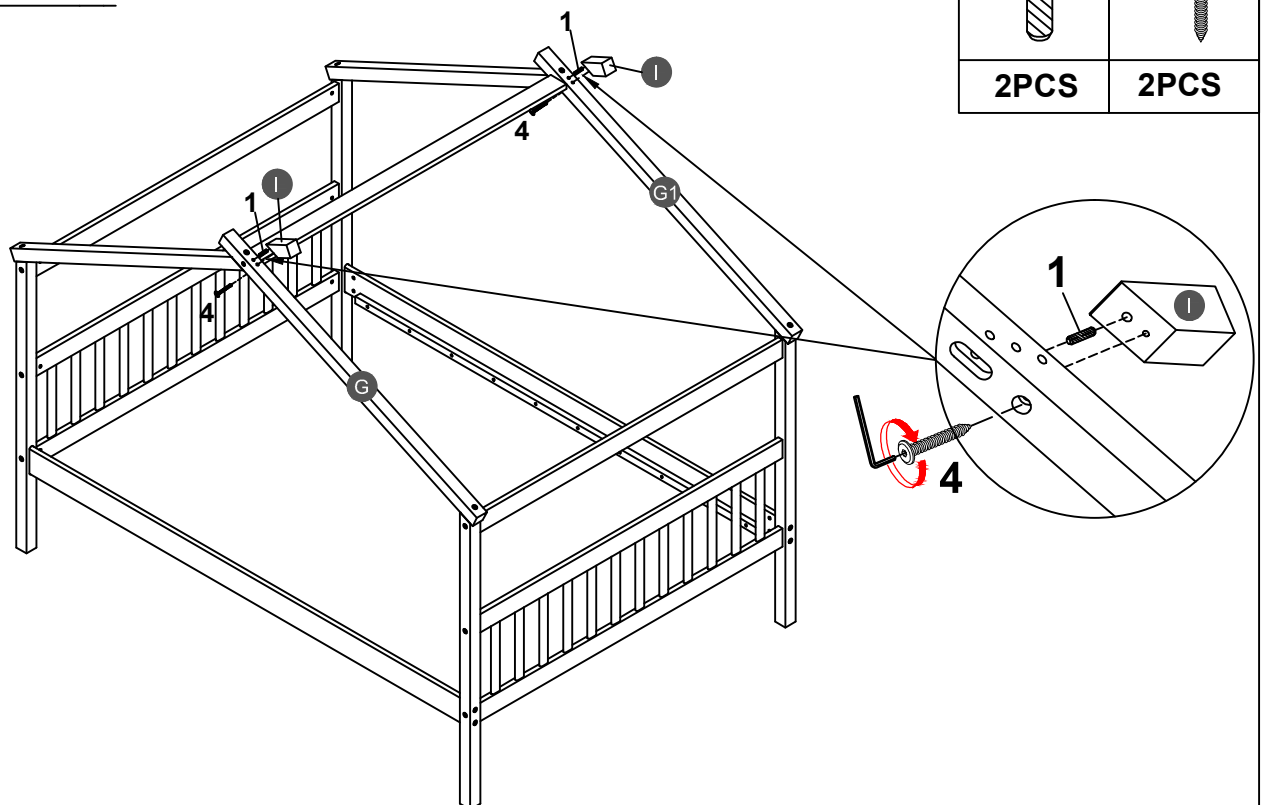



STEP 5:

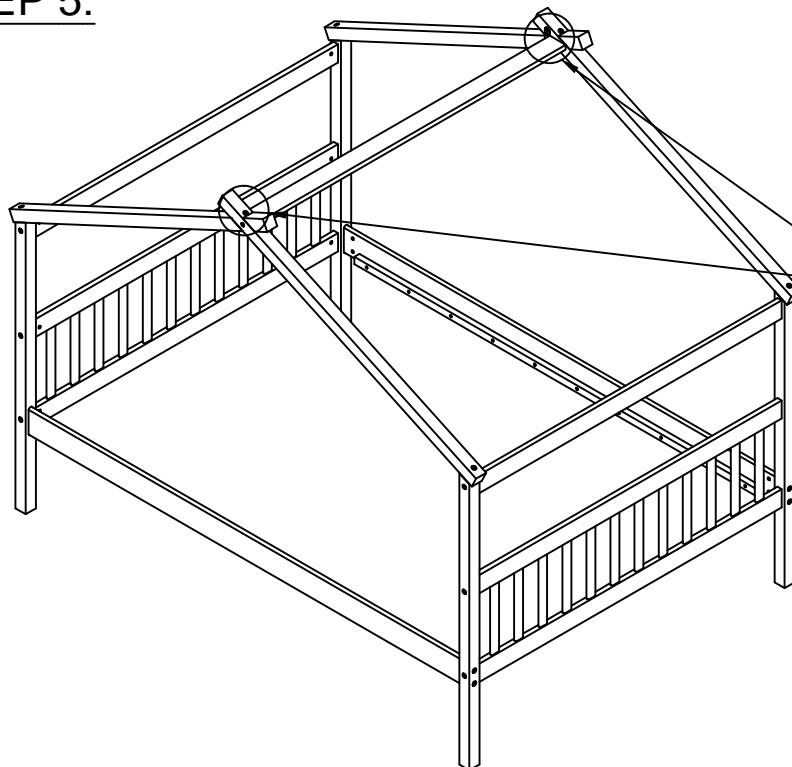

8		9	
8PCS		2PCS	

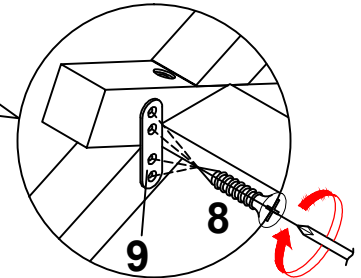

STEP 6:

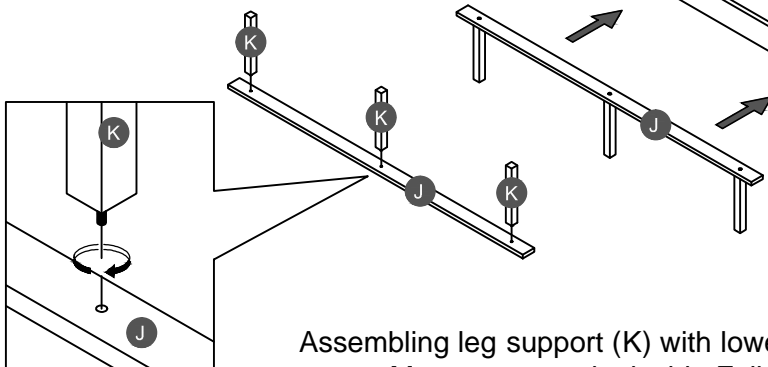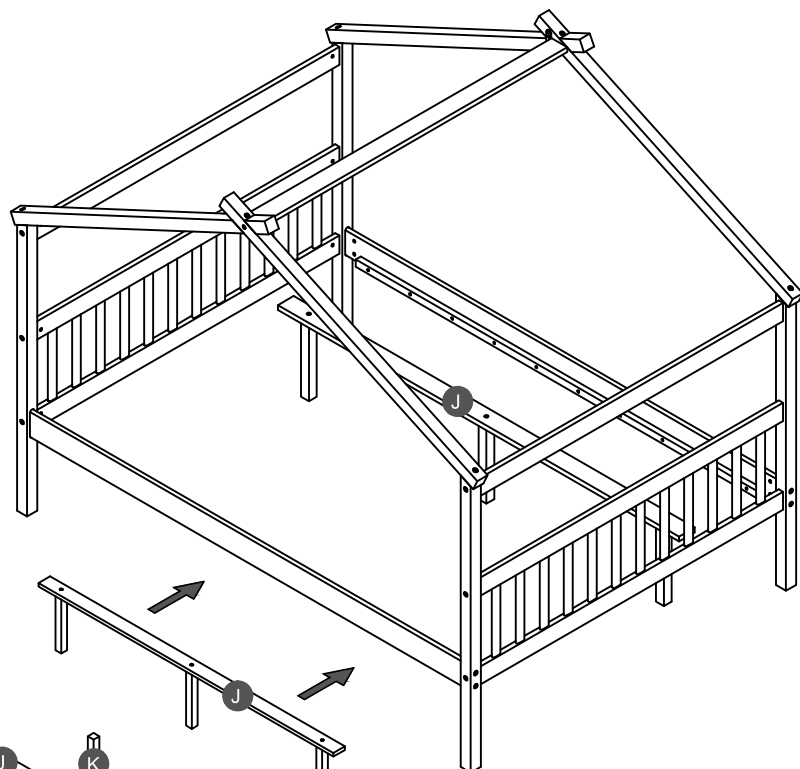





Assembling leg support (K) with lower support slat (J) later rotate, Move support slat inside Full bunkbed.

STEP 7:

7



24PCS

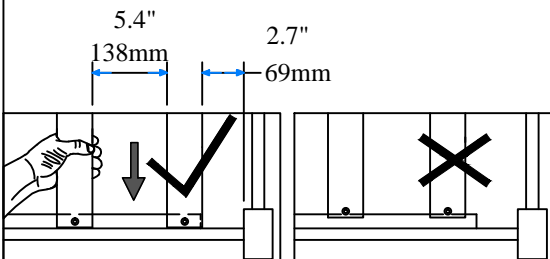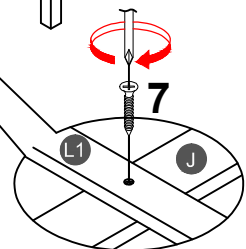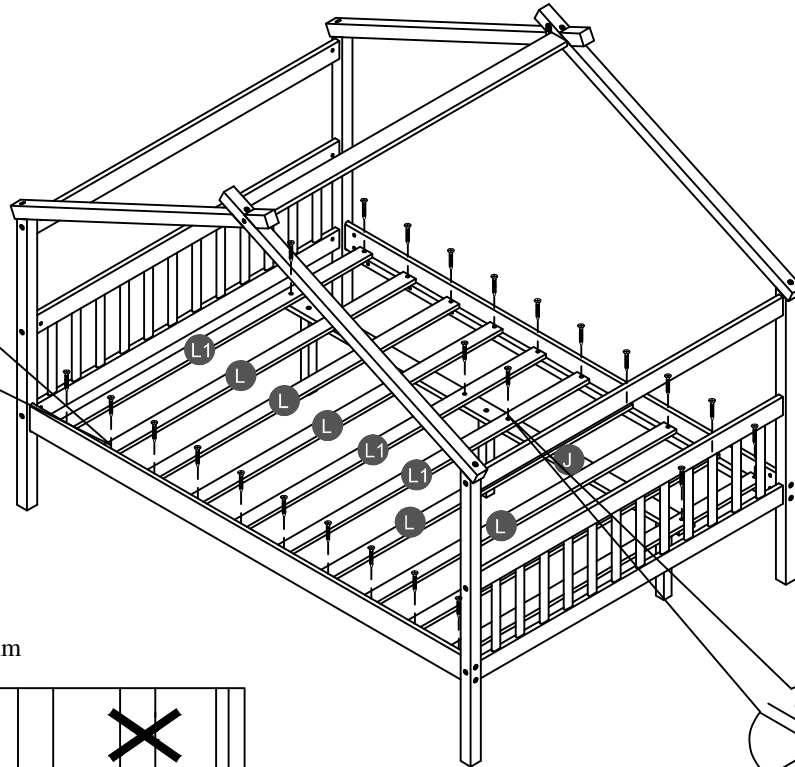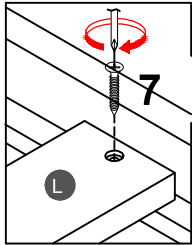

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 8:

7






8PCS

13



4PCS

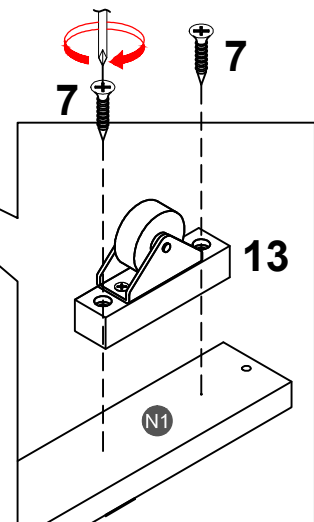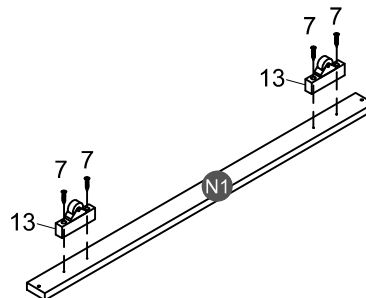
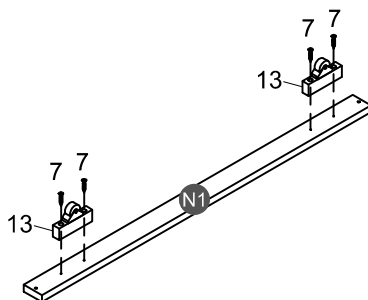


STEP 9:

7





14PCS

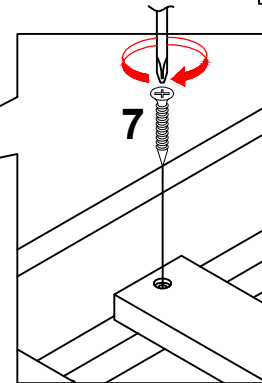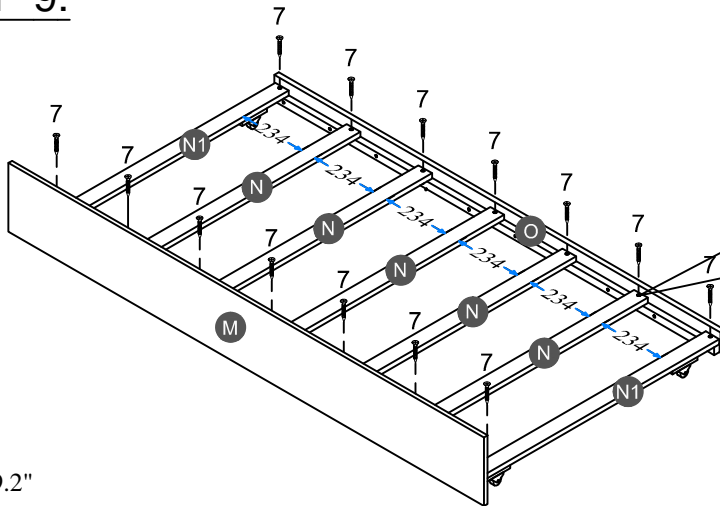

9.2"

234mm

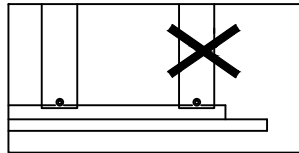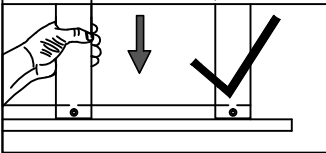

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 10:

10





8PCS



11





2PCS

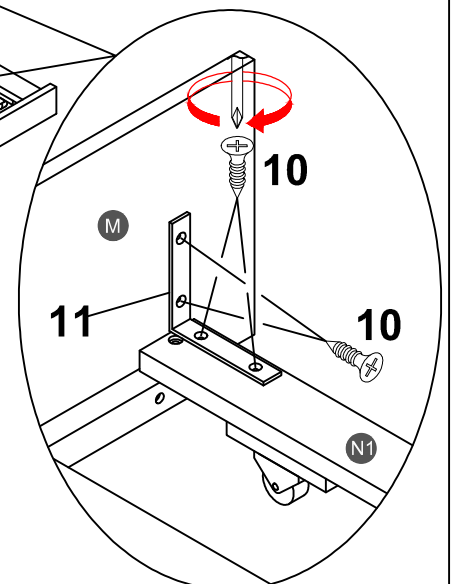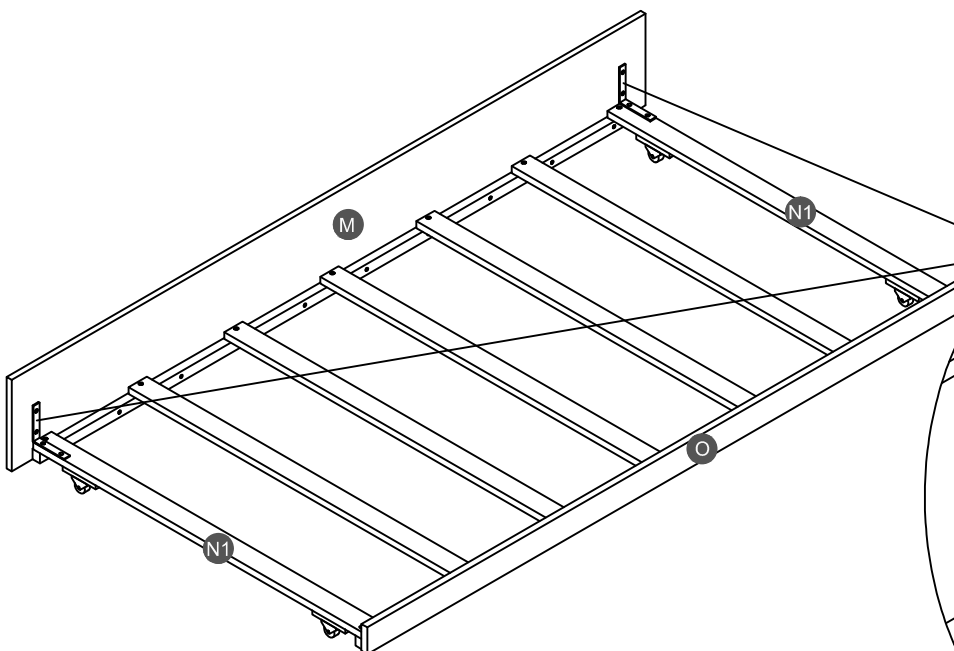


STEP 11:

10		12	
8PCS		2PCS	

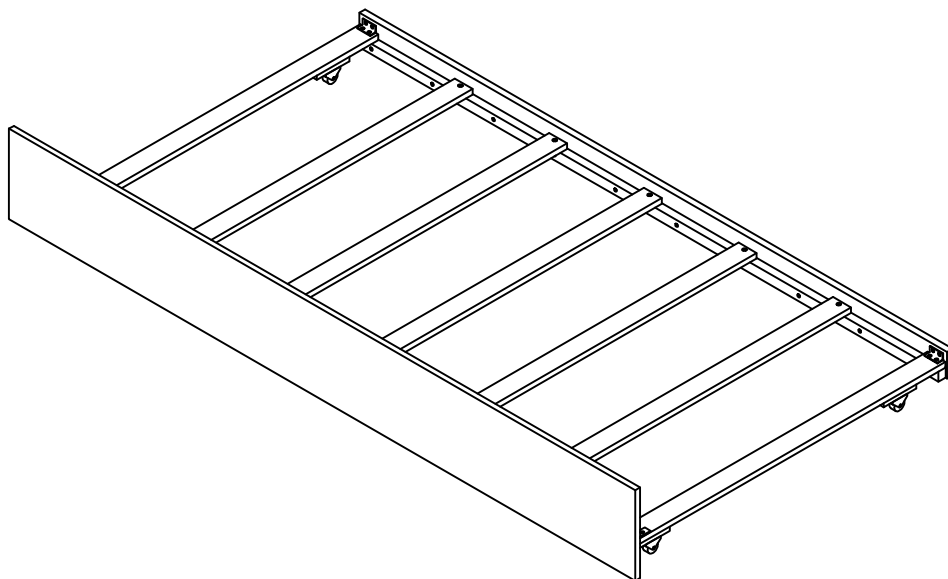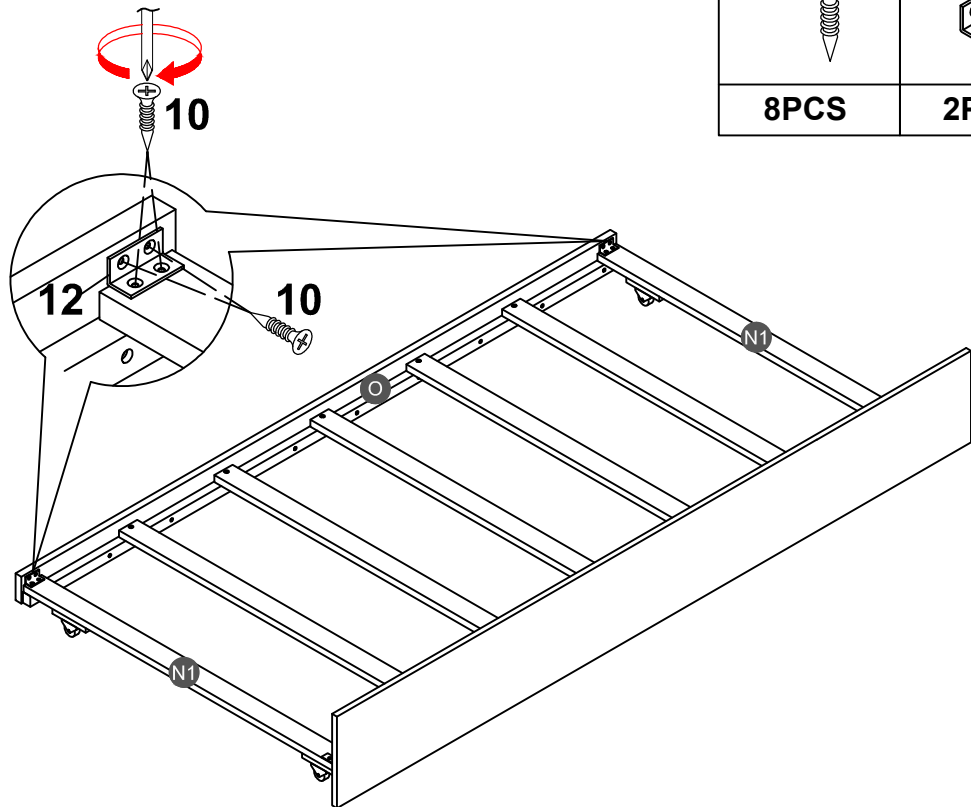

STEP 12:

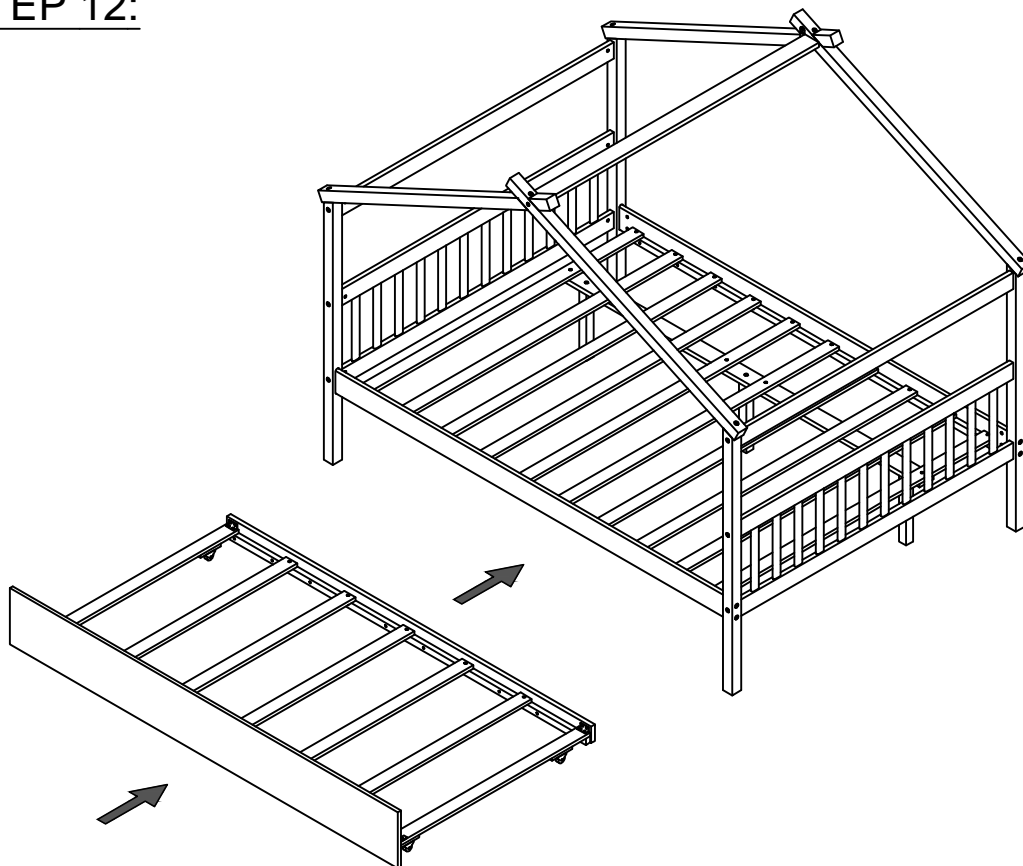

Push Trundle and Drawer under the bottom of Bunkbed.

