


Computer Desk

Instruction Manual


31IN

40IN

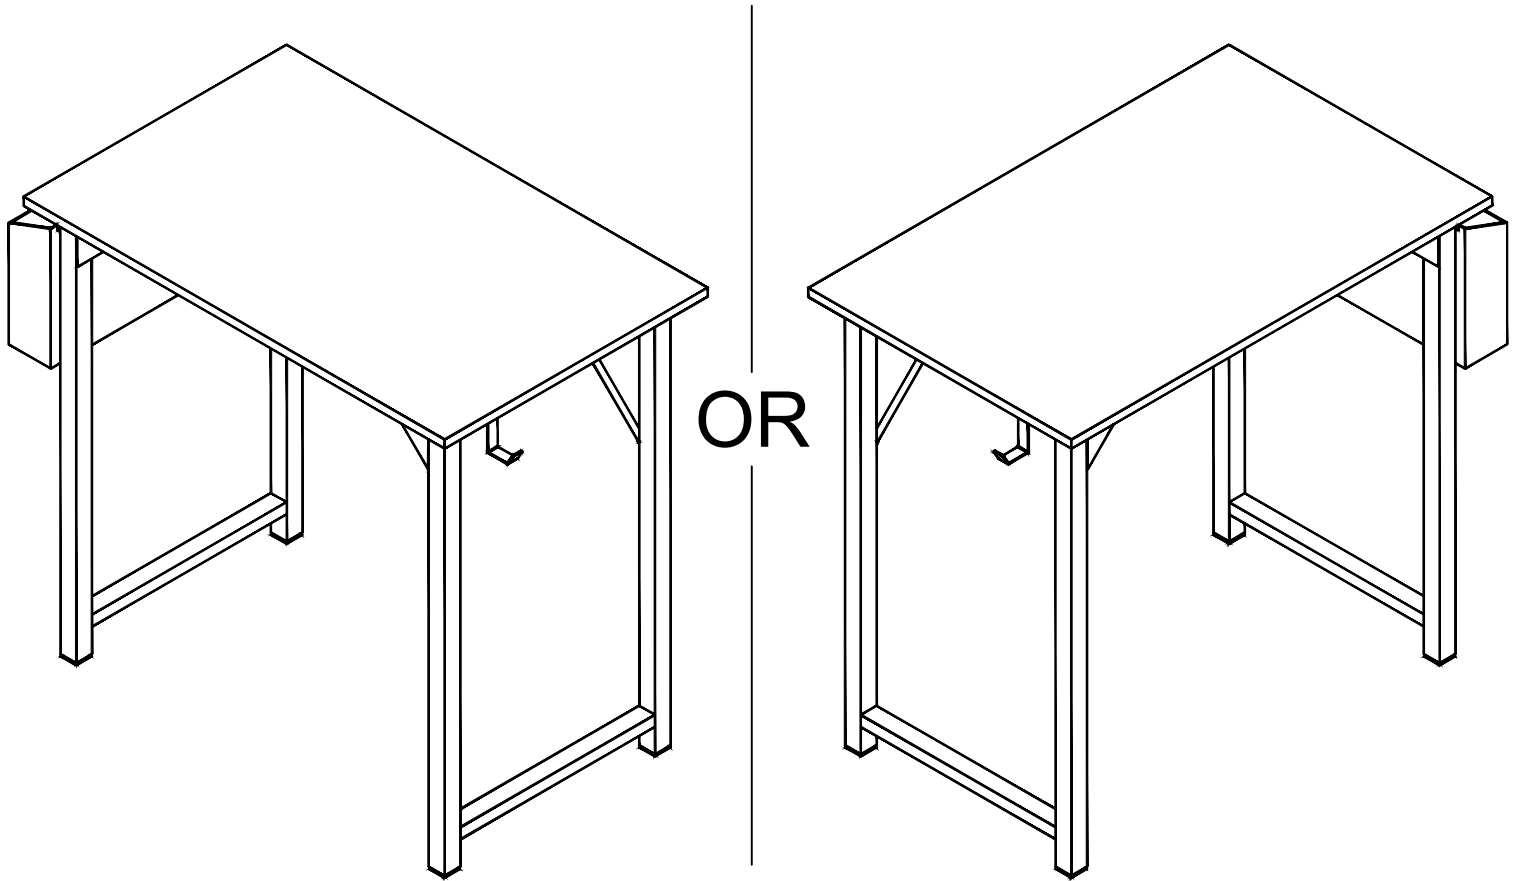


1 Component List

A X2

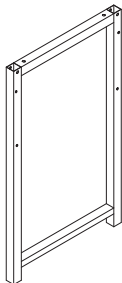


Leg

B X2

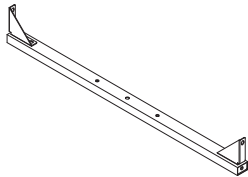


Crossbar

C X1

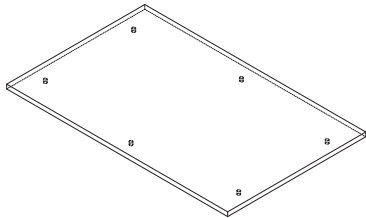


Board

D X2

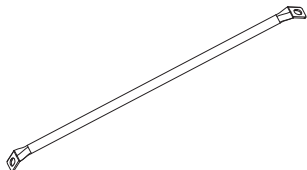


slant support

E X1



Hook


F X1

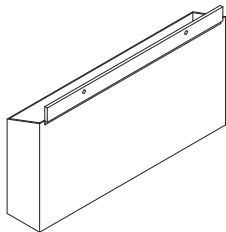

Storage bag

2 Supplied Parts and Hardware


G X11Pcs+1



M6x16mm

Screws


H X10Pcs+1

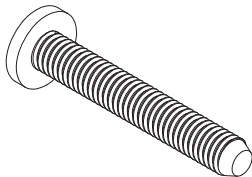

M6x28mm


Screws

I X1Pc



4mm


Wrench

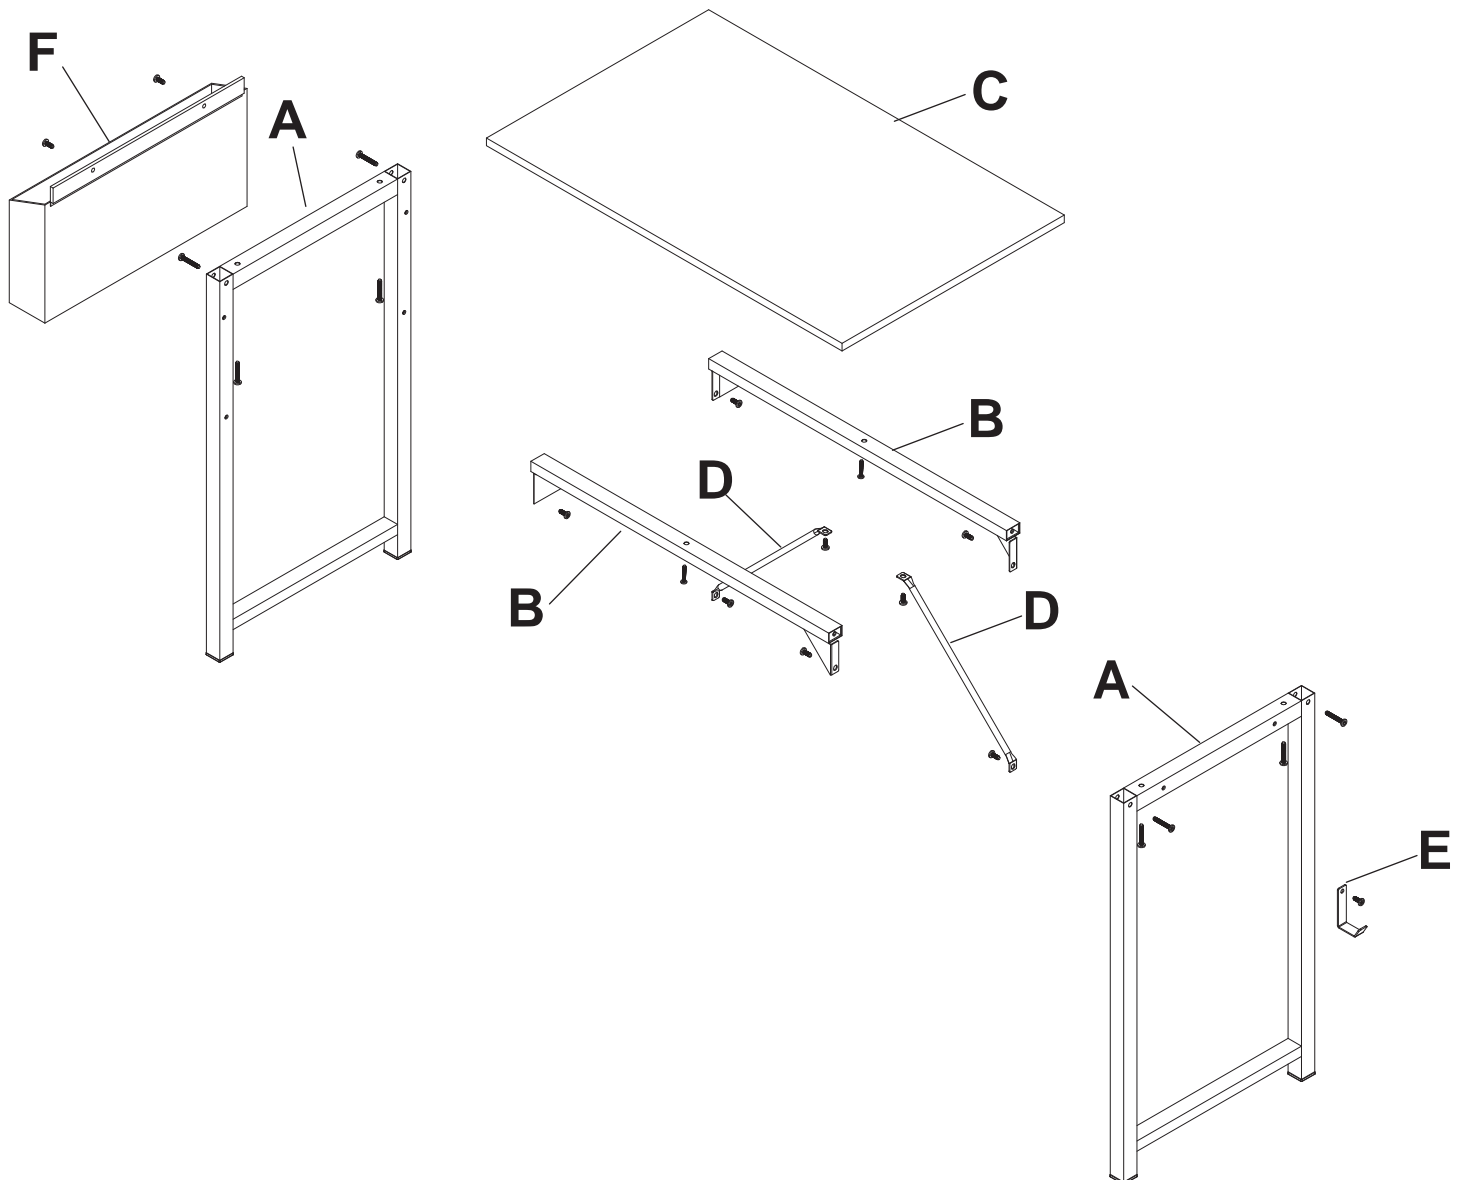



ATTENTION:

1. Please do not wipe the desk with corrosive liquids.
2. Please take good care of the parts to avoid children's contact and accidental eat in.
3. Please do not place overheated kitchenware and tableware to avoid damaging the desk.


Step 1

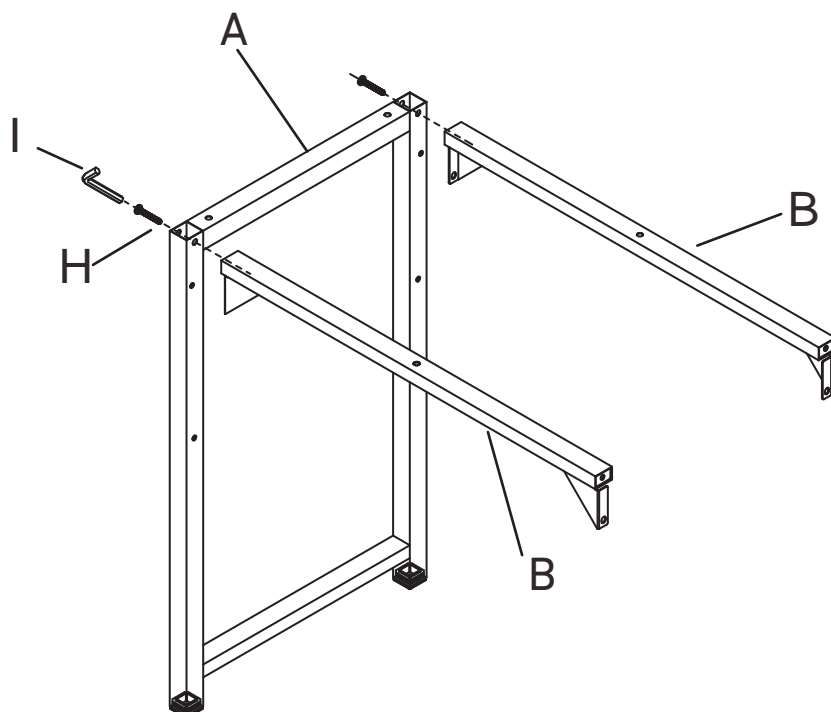



	
M6X28mm	
Hx2	I

Connect the crossbar **(B)** to the front side of the support leg **(A) * 2** using a wrench **(I)** and screws **(H) * 2**.

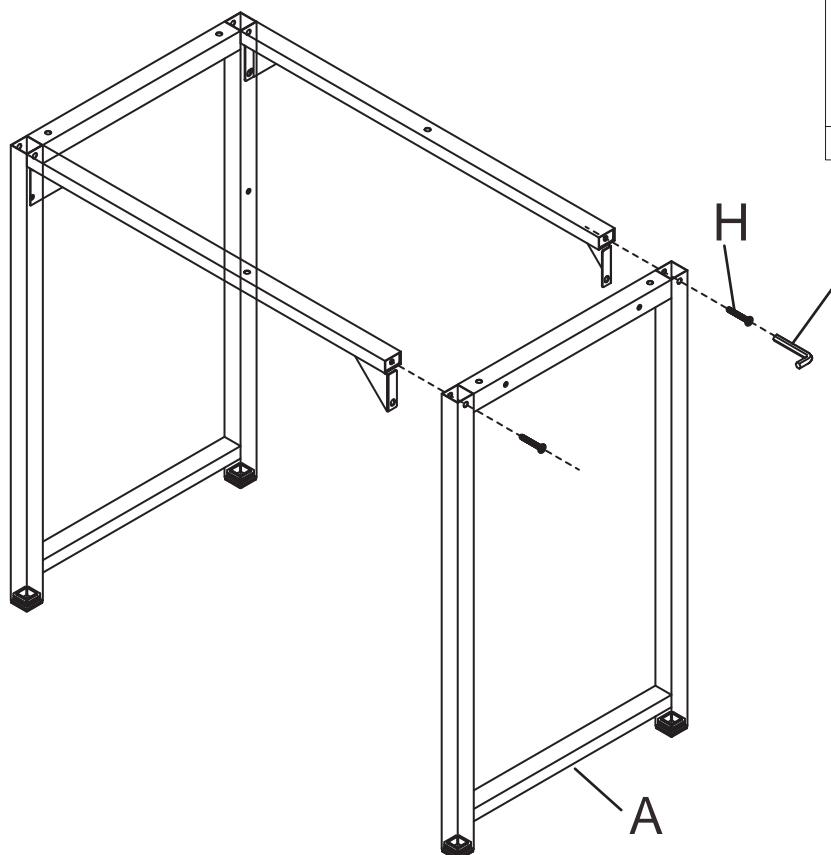
Step 2




	
M6X28mm	
Hx2	I

Connect the support leg **(A)** to the installed desktop frame using a wrench **(I)** and screws **(H) * 2**. Please ensure that the direction of the legs is correct.


Step 3

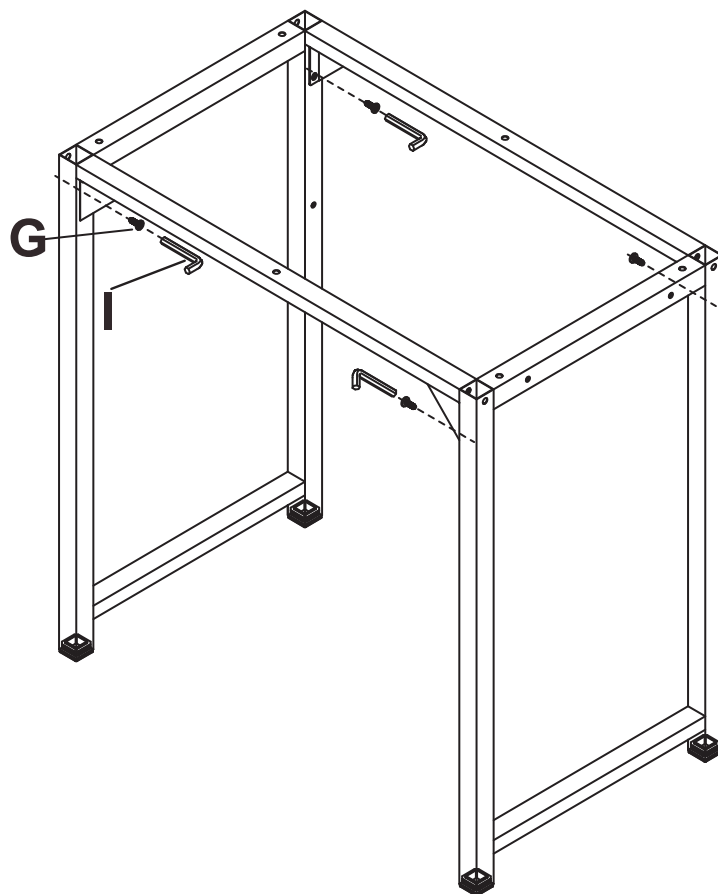

 M6X16mm	
Gx4	I

Use a wrench **(I)** and screws **(G)** * **4** to fully secure the remaining four screw holes of the crossbar **(B)** to the installed desktop frame.


Step 4

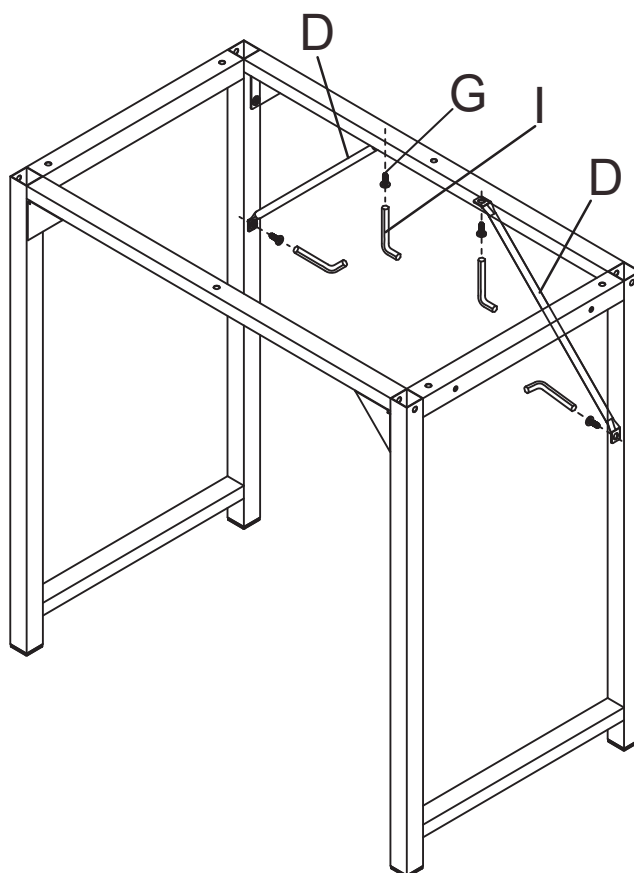


 M6X16mm	
Gx4	I



Use wrench **(I)** and screws **(G)** * **4** to connect slant support **(D)** * **2** to the support legs **(A)** and crossbar **(B)**.

Step 5

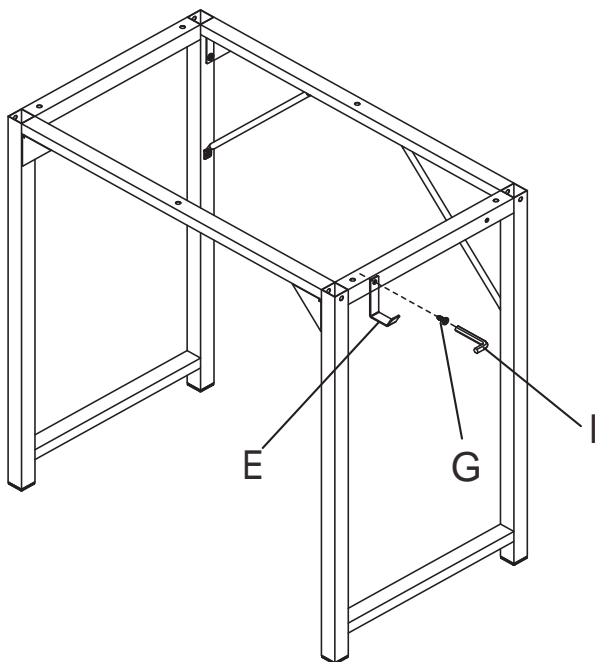


OR

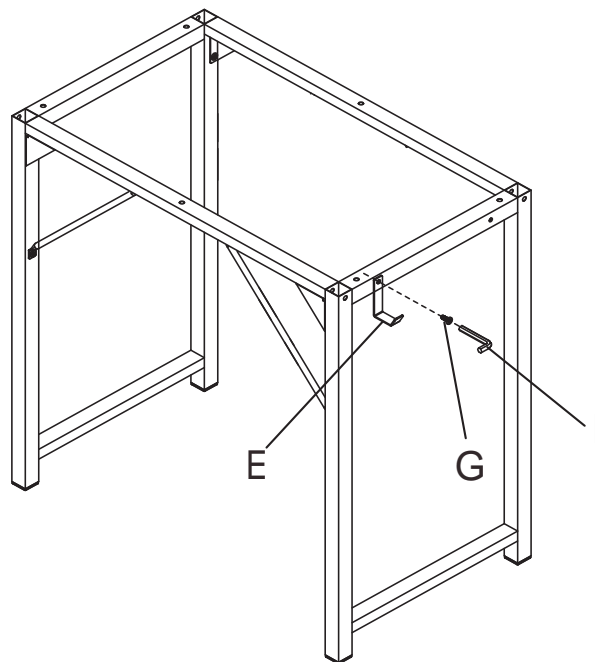


	
M6X16mm	I
Gx1	I



Connect the hook **(E)** to the support leg **(A)** using a wrench **(I)** and a screw **(G)** * 1.

Step 6

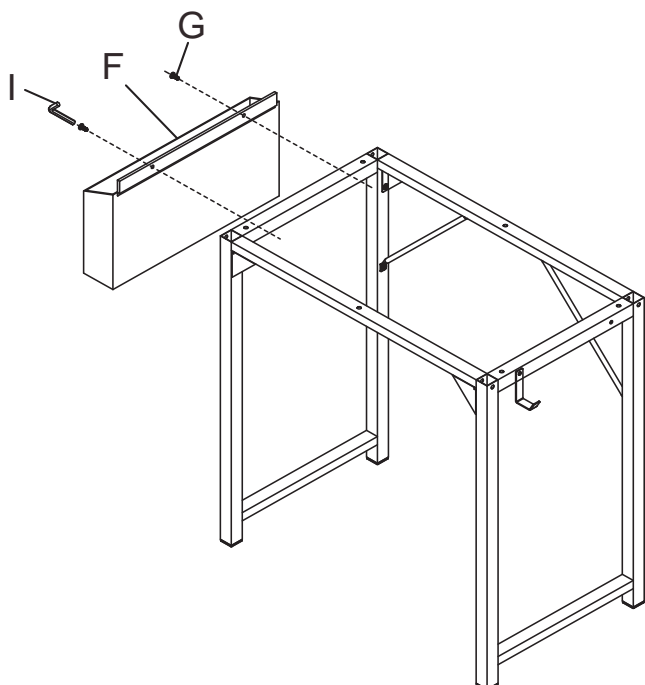

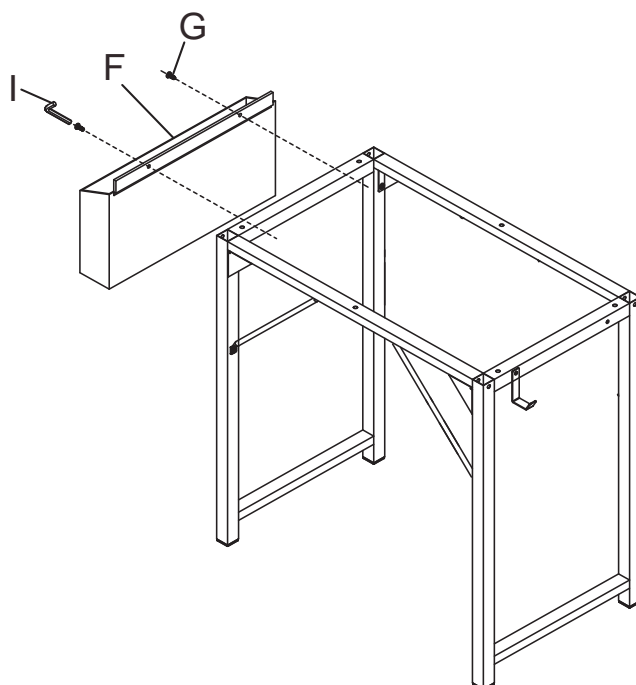

OR




	
M6X16mm	I
Gx2	I

Secure the storage bag **(F)** to the support leg **(A)** using a wrench **(I)** and screws **(G)** * 2.

Step 7

	
M6X28mm	
Hx6	I

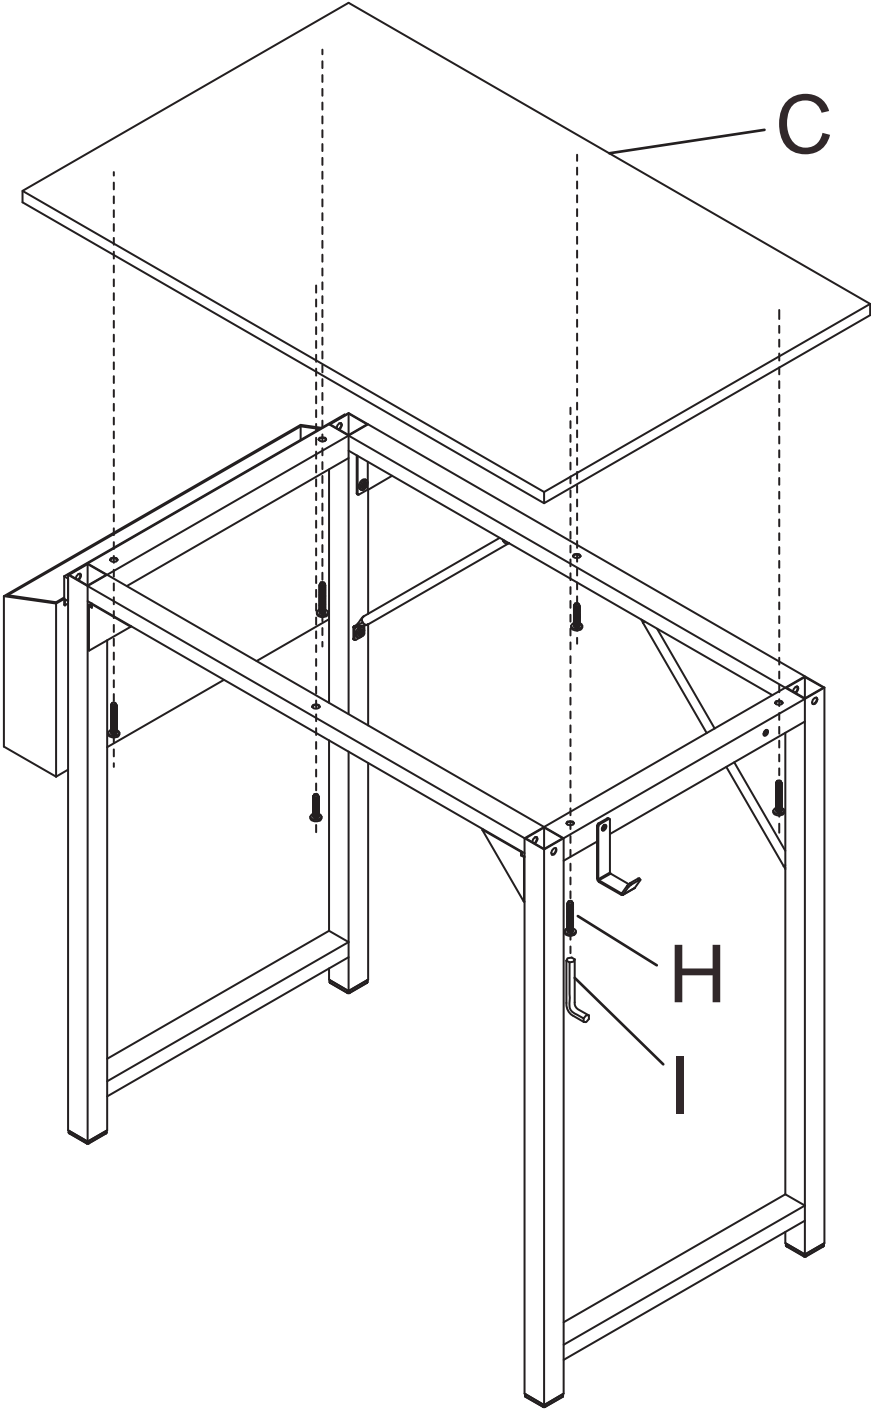

Connect the board **(C)** to the support legs **(A)** and crossbar **(B)** using a wrench **(I)** and screws **(H)** * 6.

NOTE: Ensure that the frame structure is flush when installing the desktop board.

