


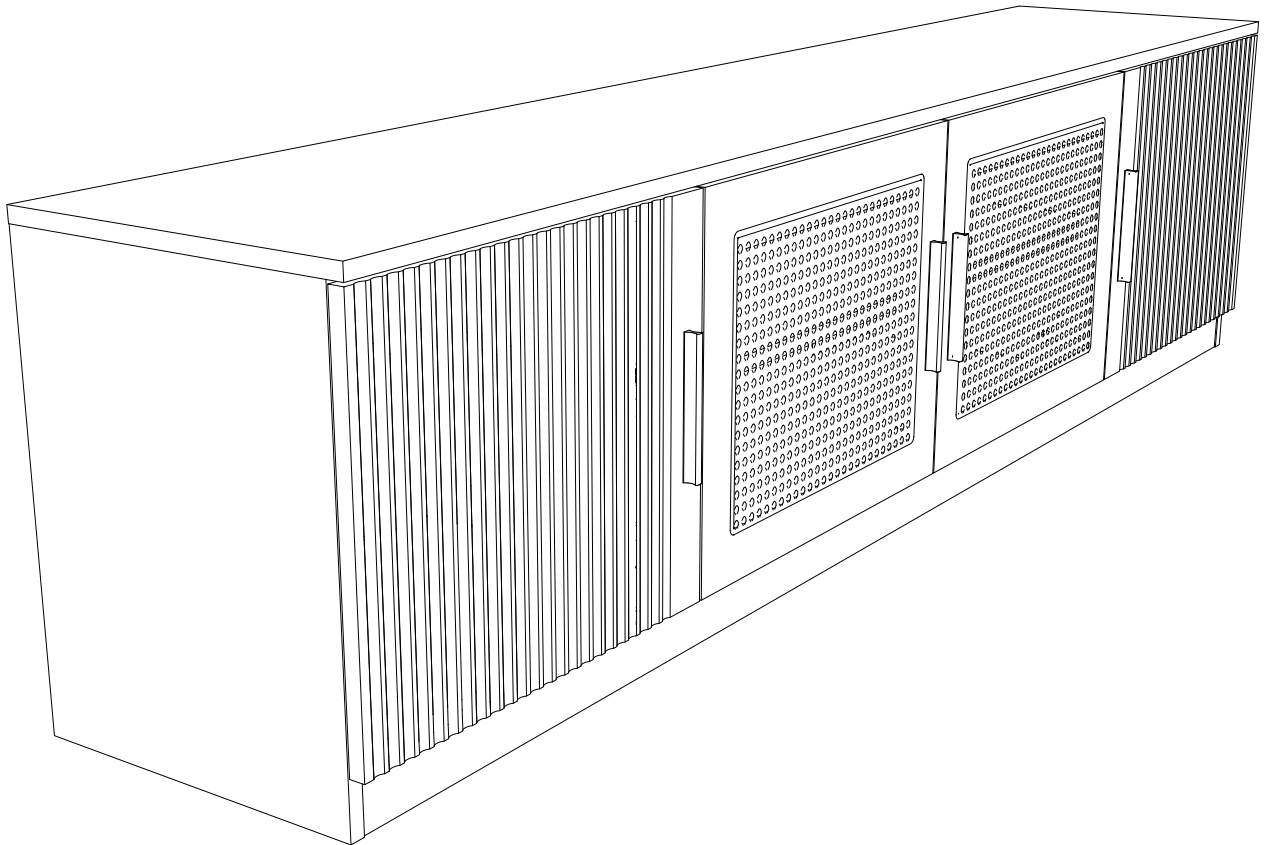


Assembly Instructions

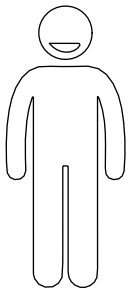

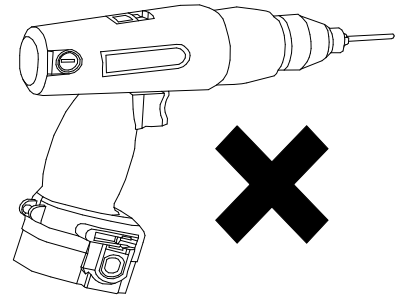


X2




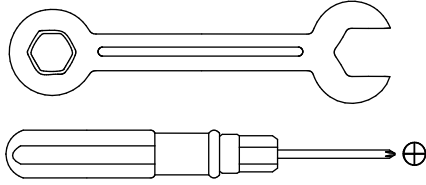


We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.


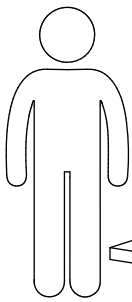



?

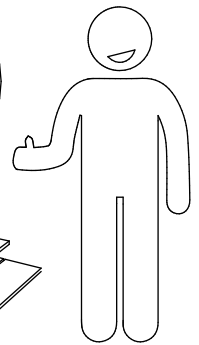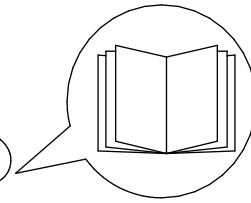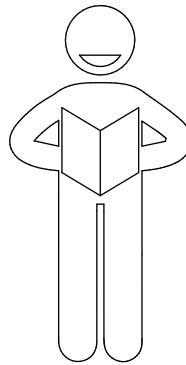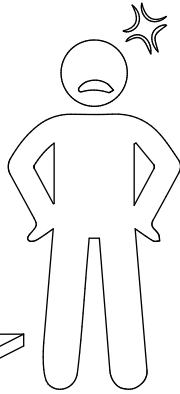

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.













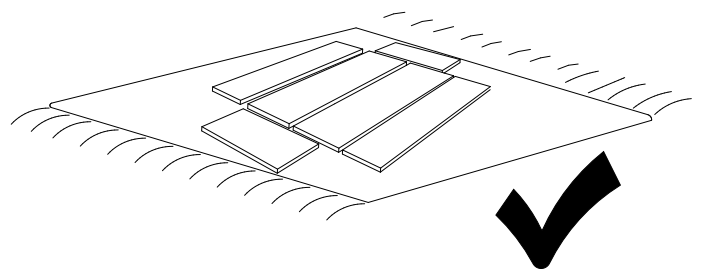
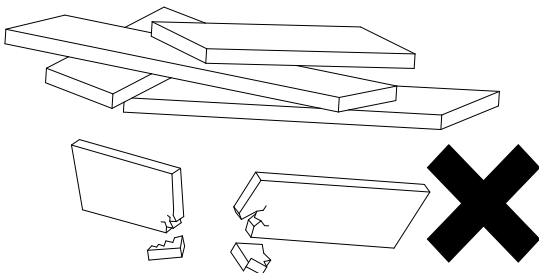


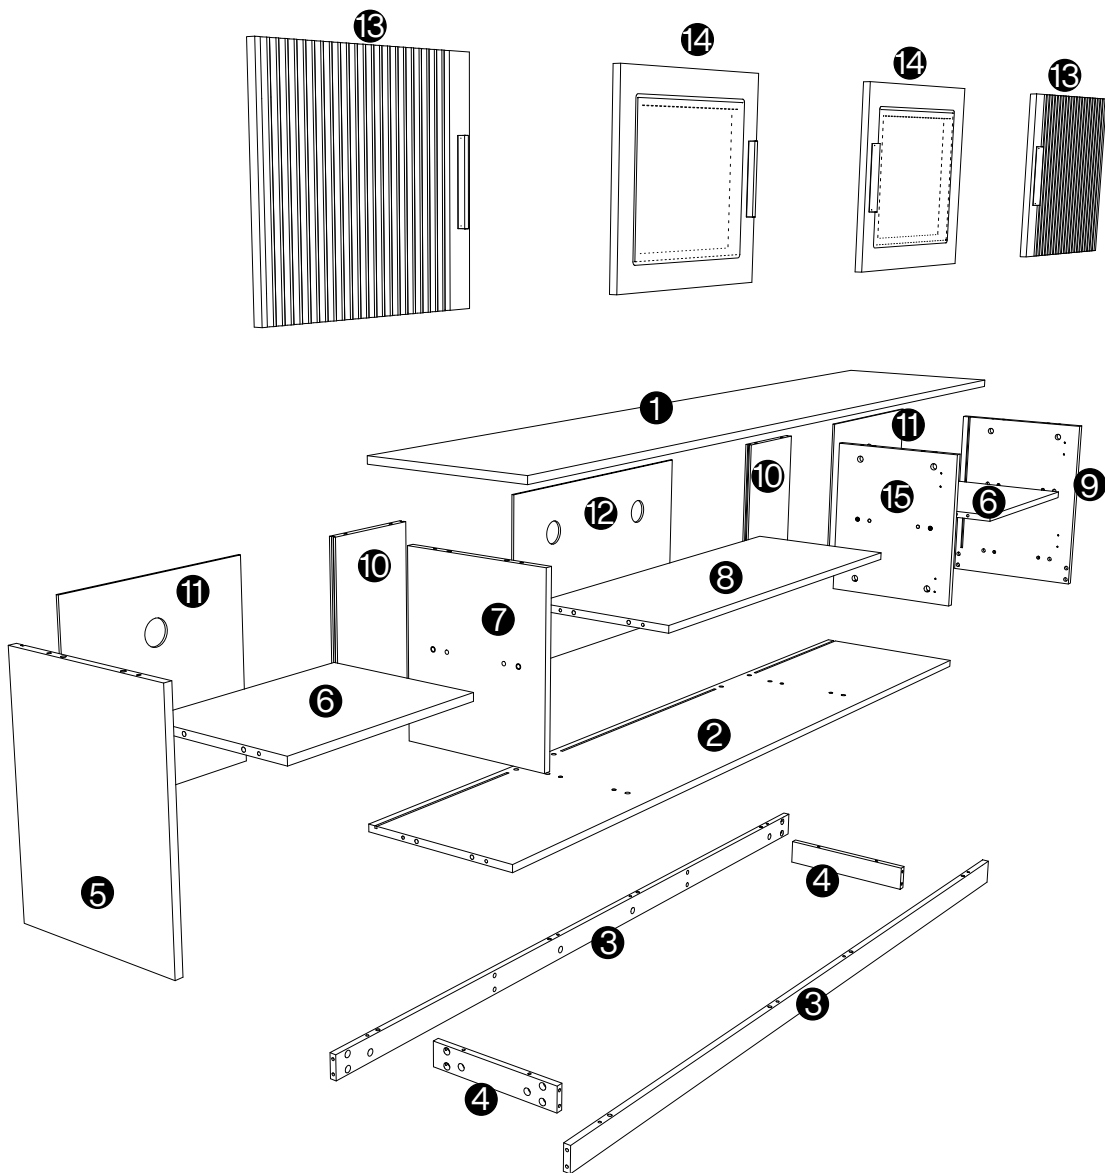








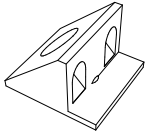

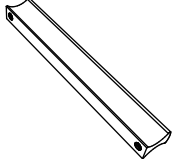
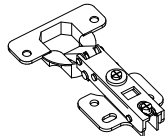
⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

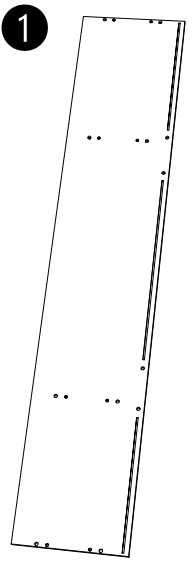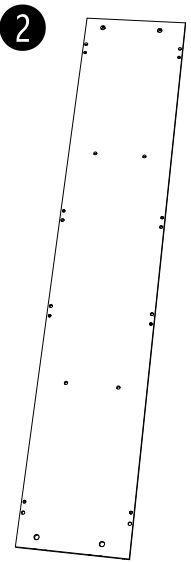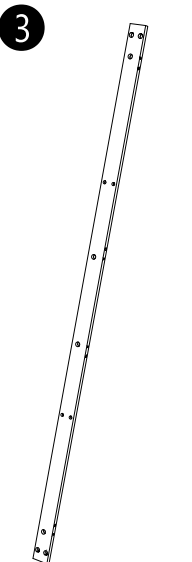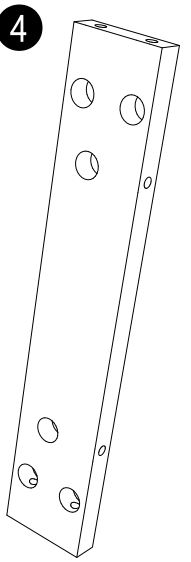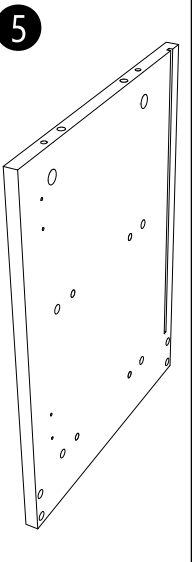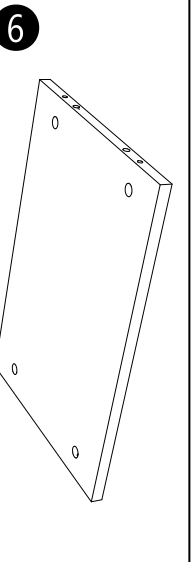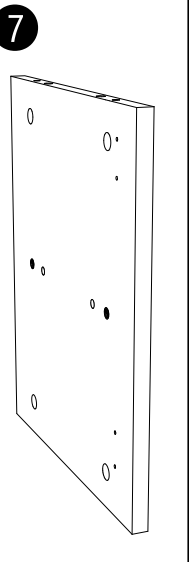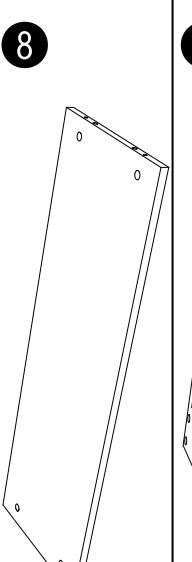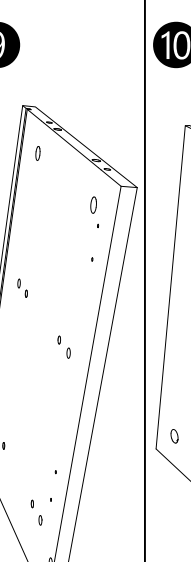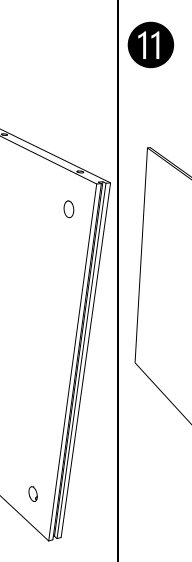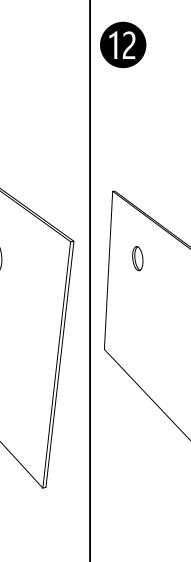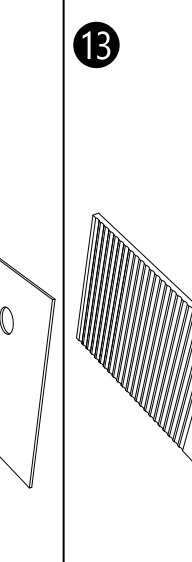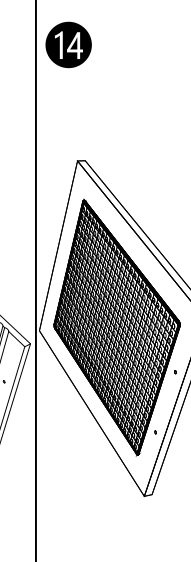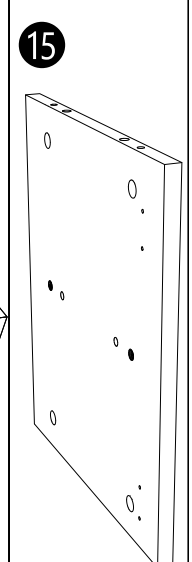Parts List


 1 pc	 1 pc	 2 pcs	 2 pcs	 1 pc	 2 pcs	 2 pcs	
 1 pc	 1 pc	 2 pcs	 2 pcs	 1 pc	 2 pcs	 2 pcs	 1 pc

Hardware List

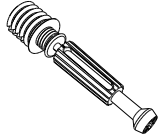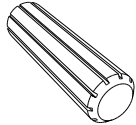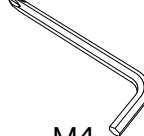
 Ø15x12mm 64 pcs	 M6x40mm 64 pcs	 Ø8x30mm 36 pcs	 Ø3.5x14mm 62 pcs	 M4 1 pc	 8 pcs	 14 pcs
 M4x18mm 8 pcs	 4 pcs	 8 pcs				

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

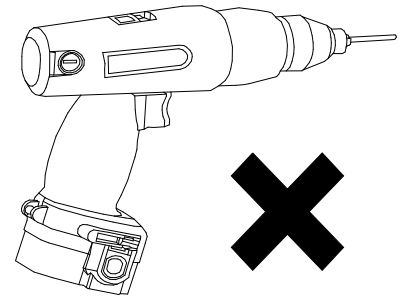


No gap


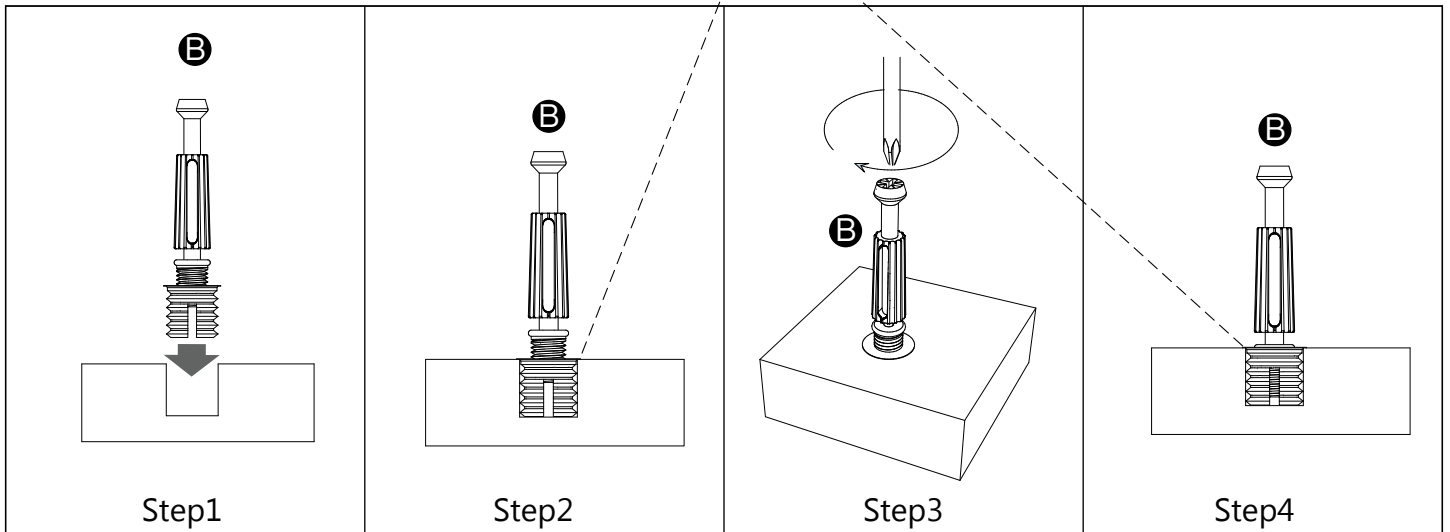



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

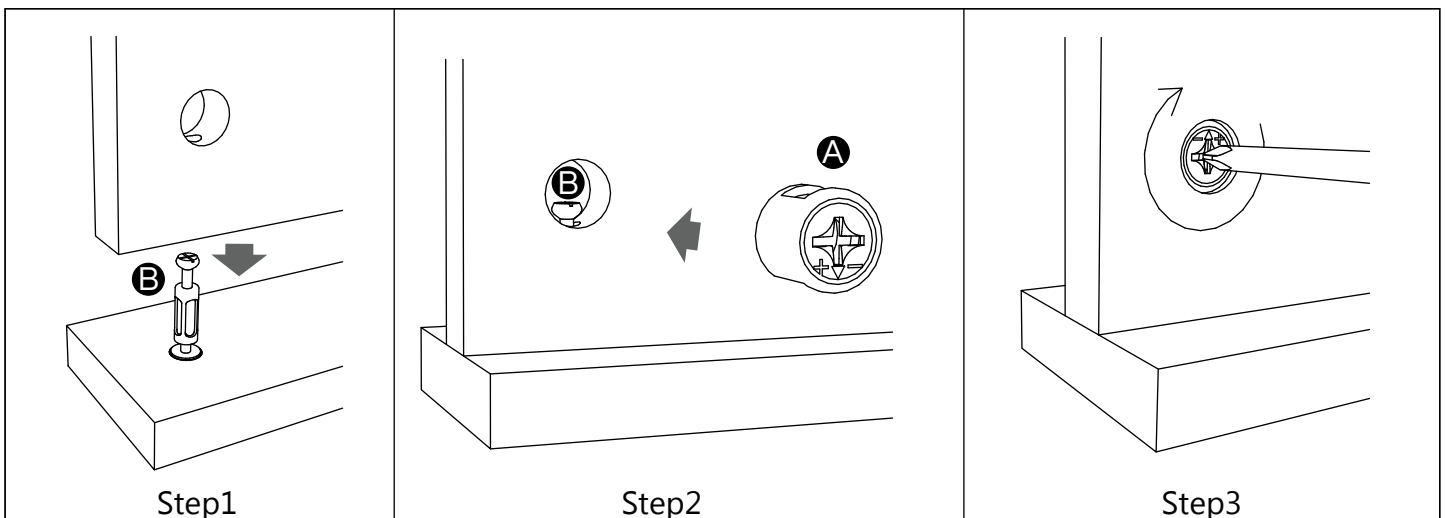


1

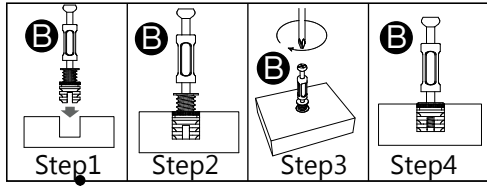

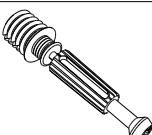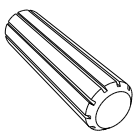B

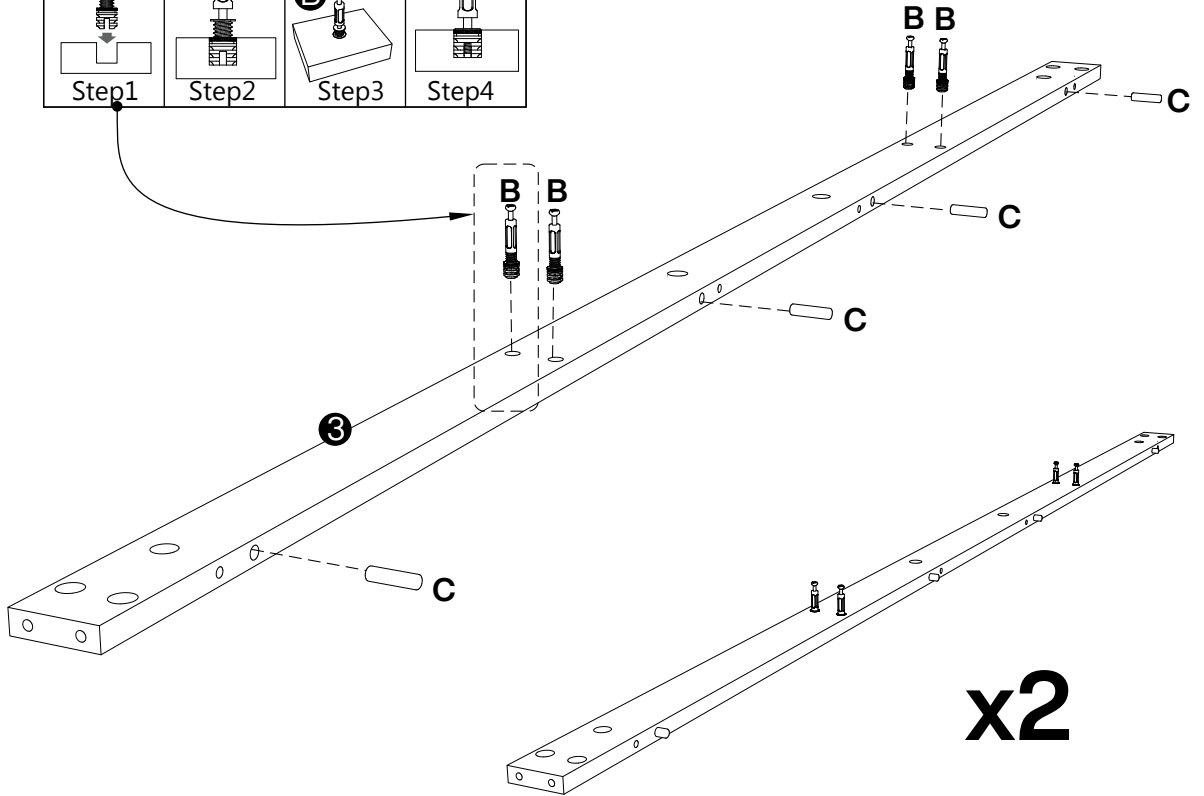M6x40mm
8 pcs
C

Ø8x30mm
8 pcs

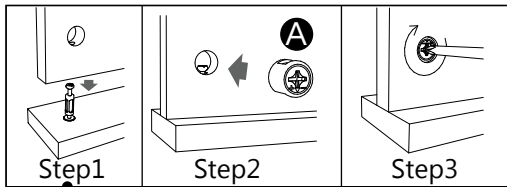


2





A


Ø15x12mm
8 pcs

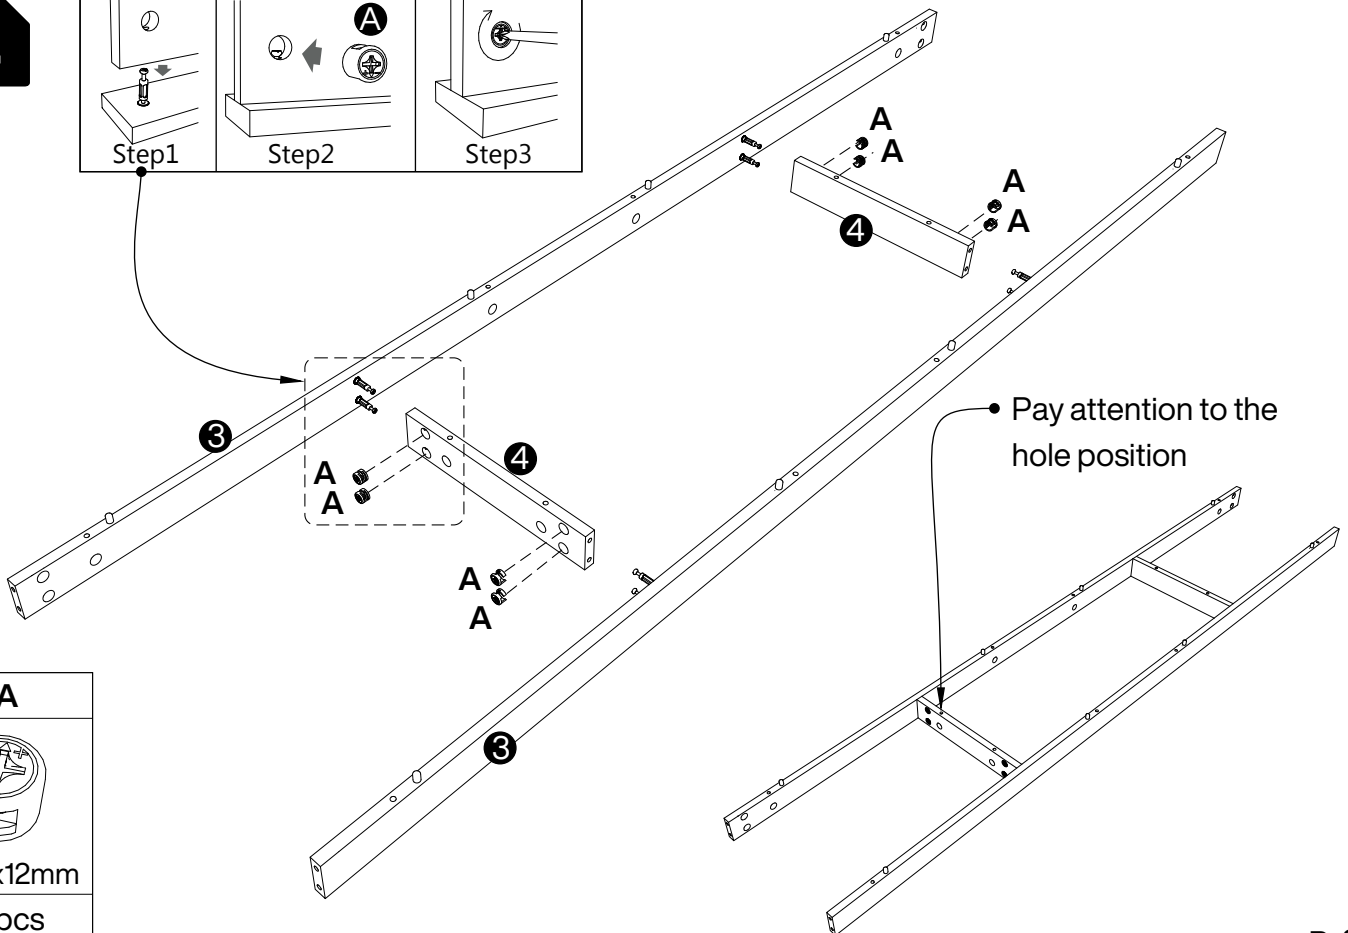



3

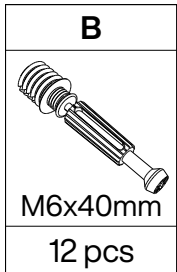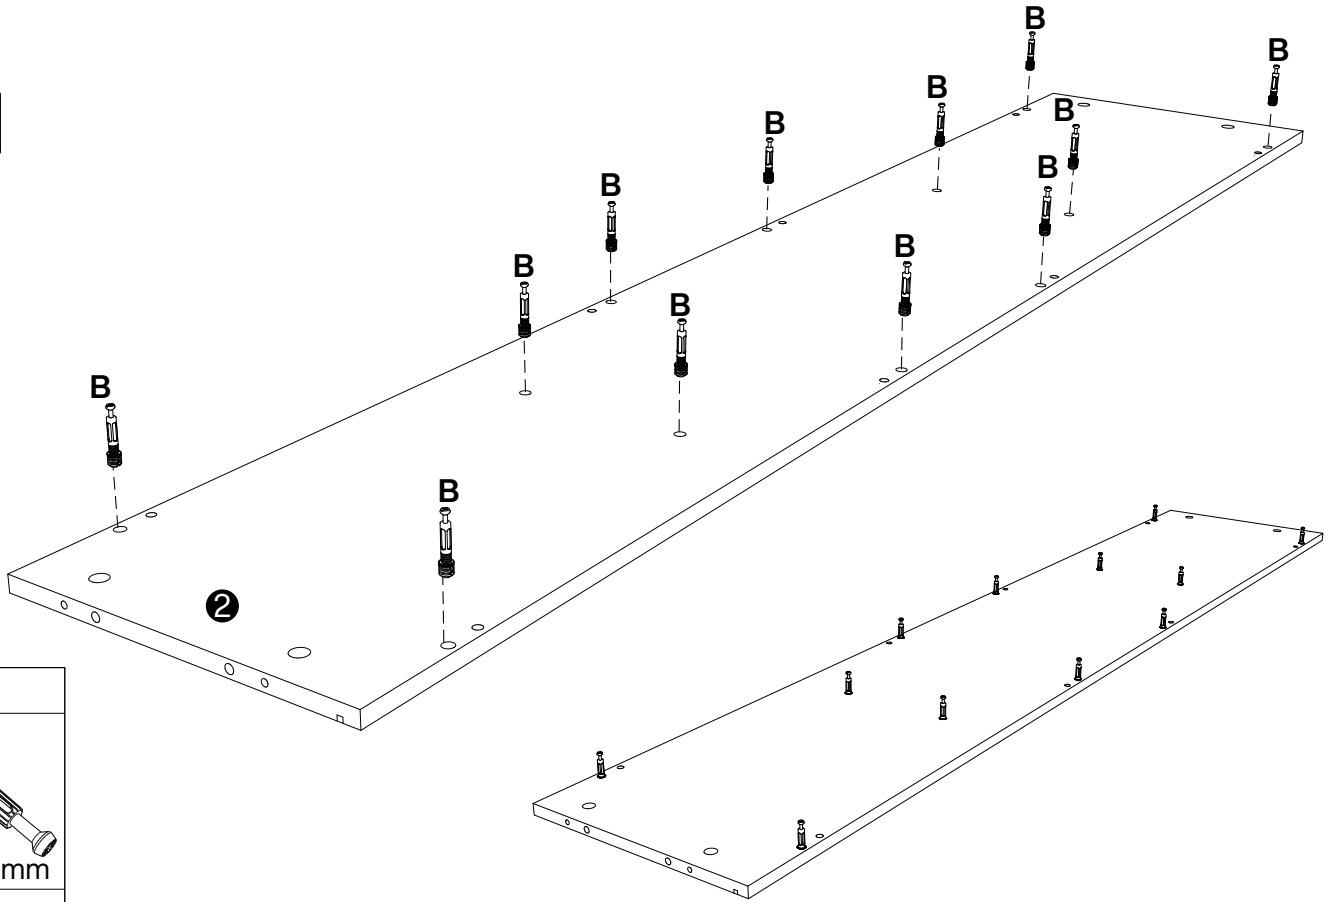


4


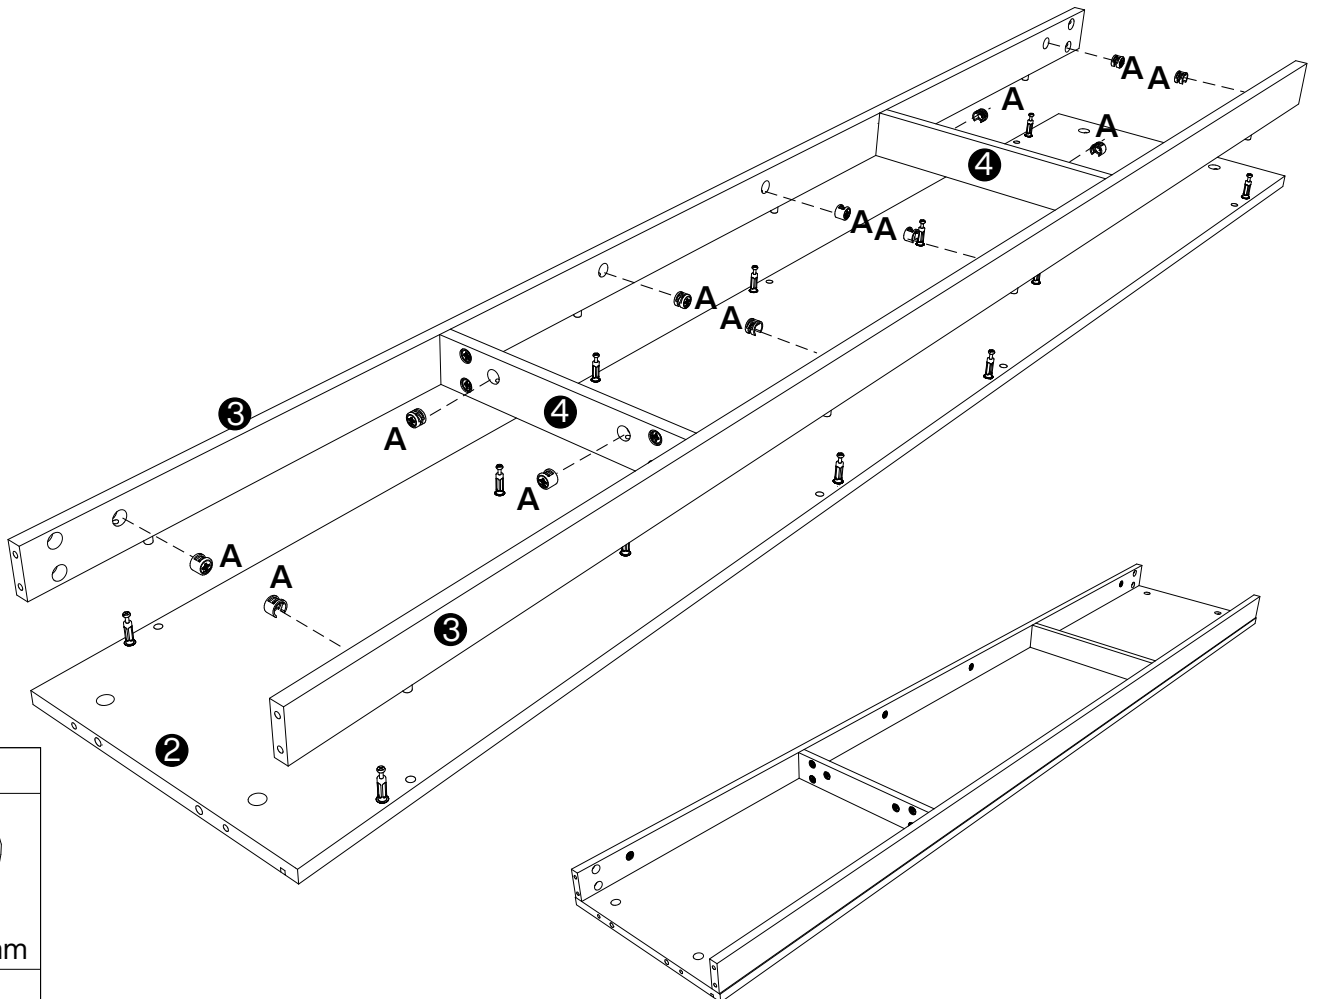



5

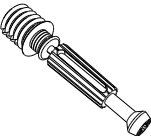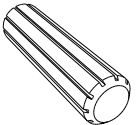B

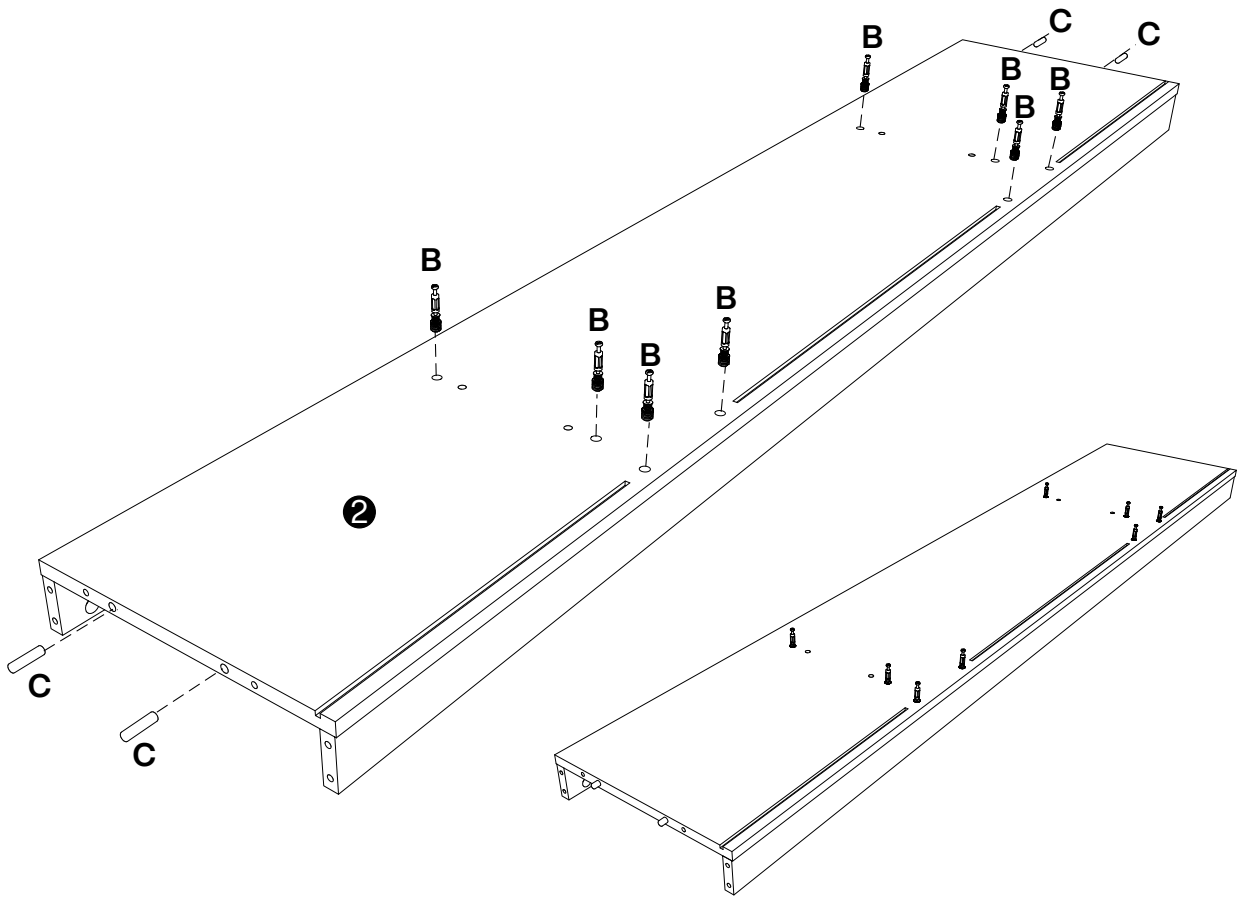M6x40mm
8 pcs
C

Ø8x30mm
4 pcs

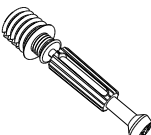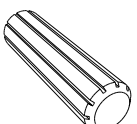


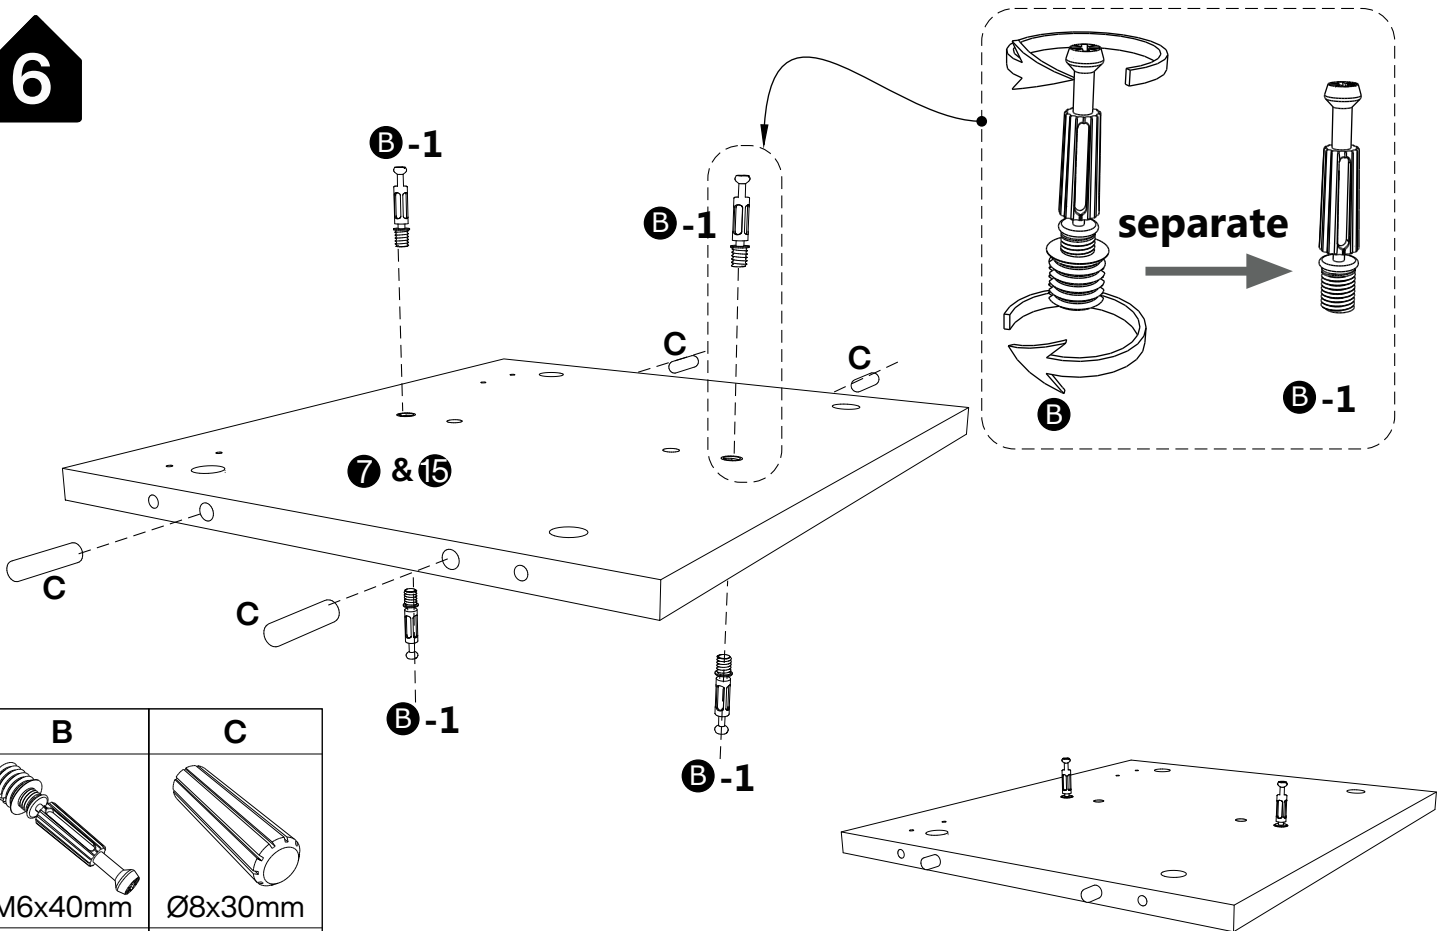
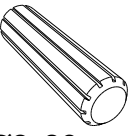
6

B	C
	
M6x40mm	Ø8x30mm
8 pcs	8 pcs




7

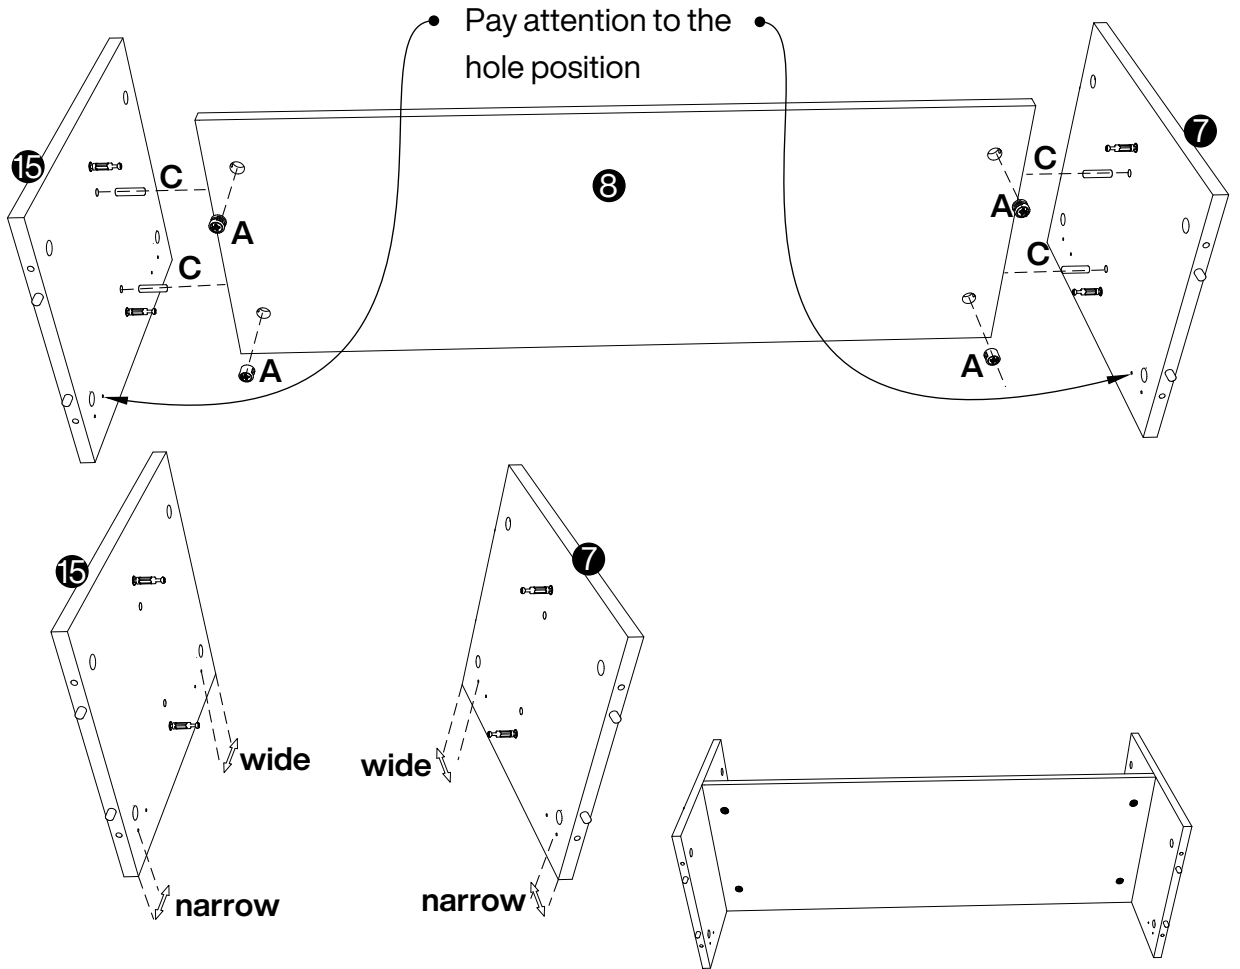

A

Ø15x12mm
4 pcs
C

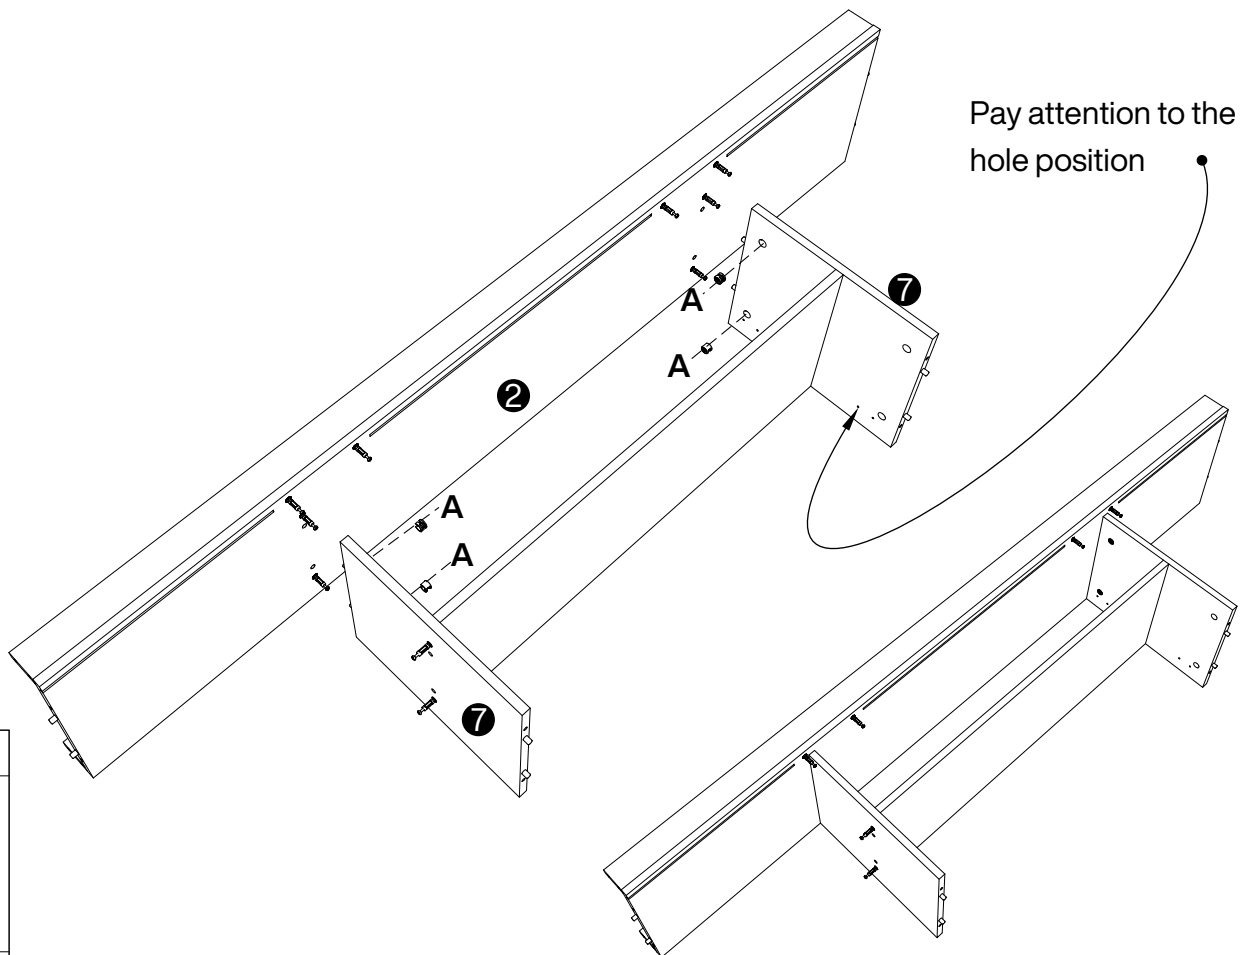Ø8x30mm
4 pcs


8





A


Ø15x12mm
4 pcs


9

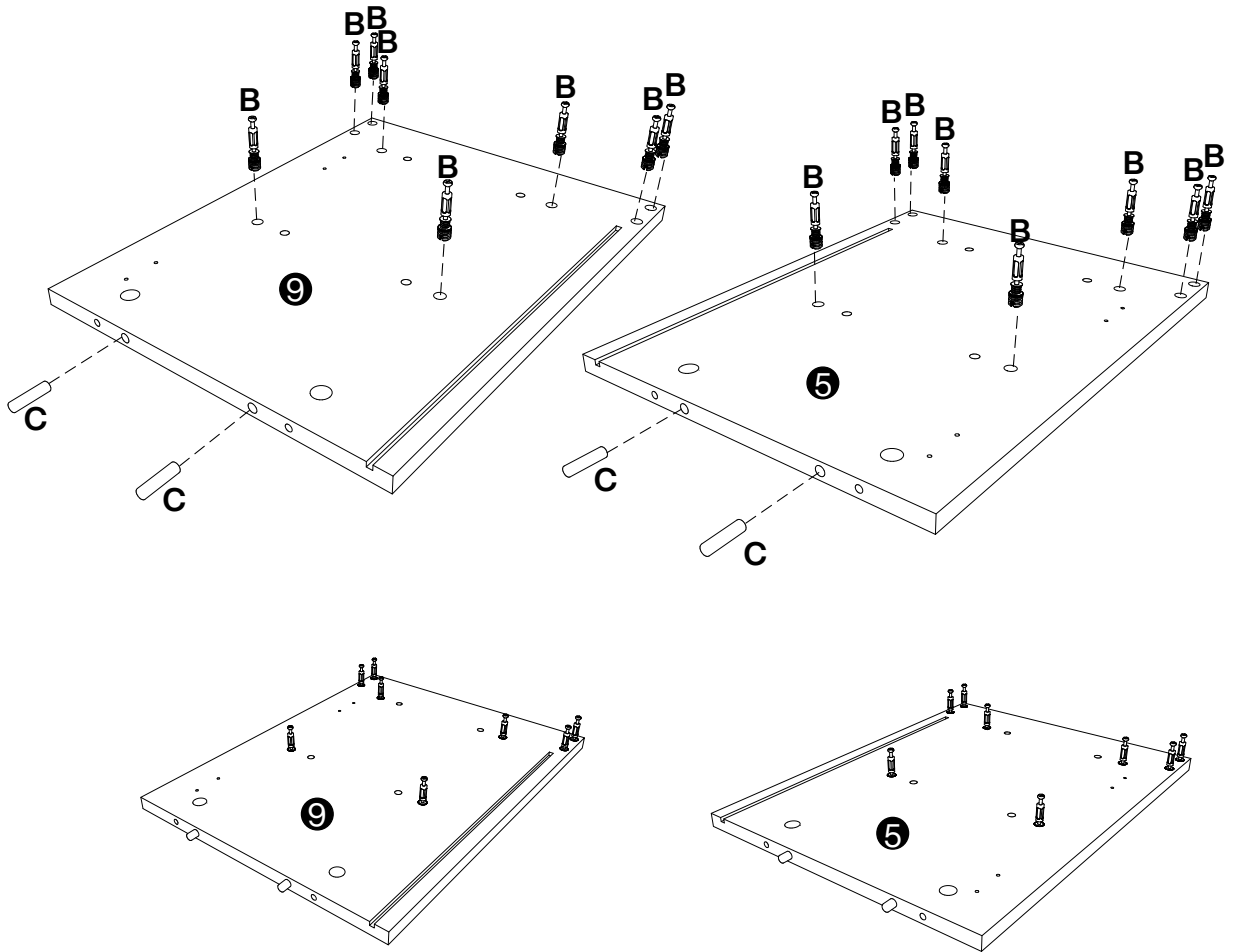

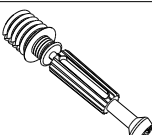
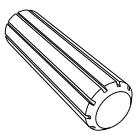
B

M6x40mm
16 pcs
C

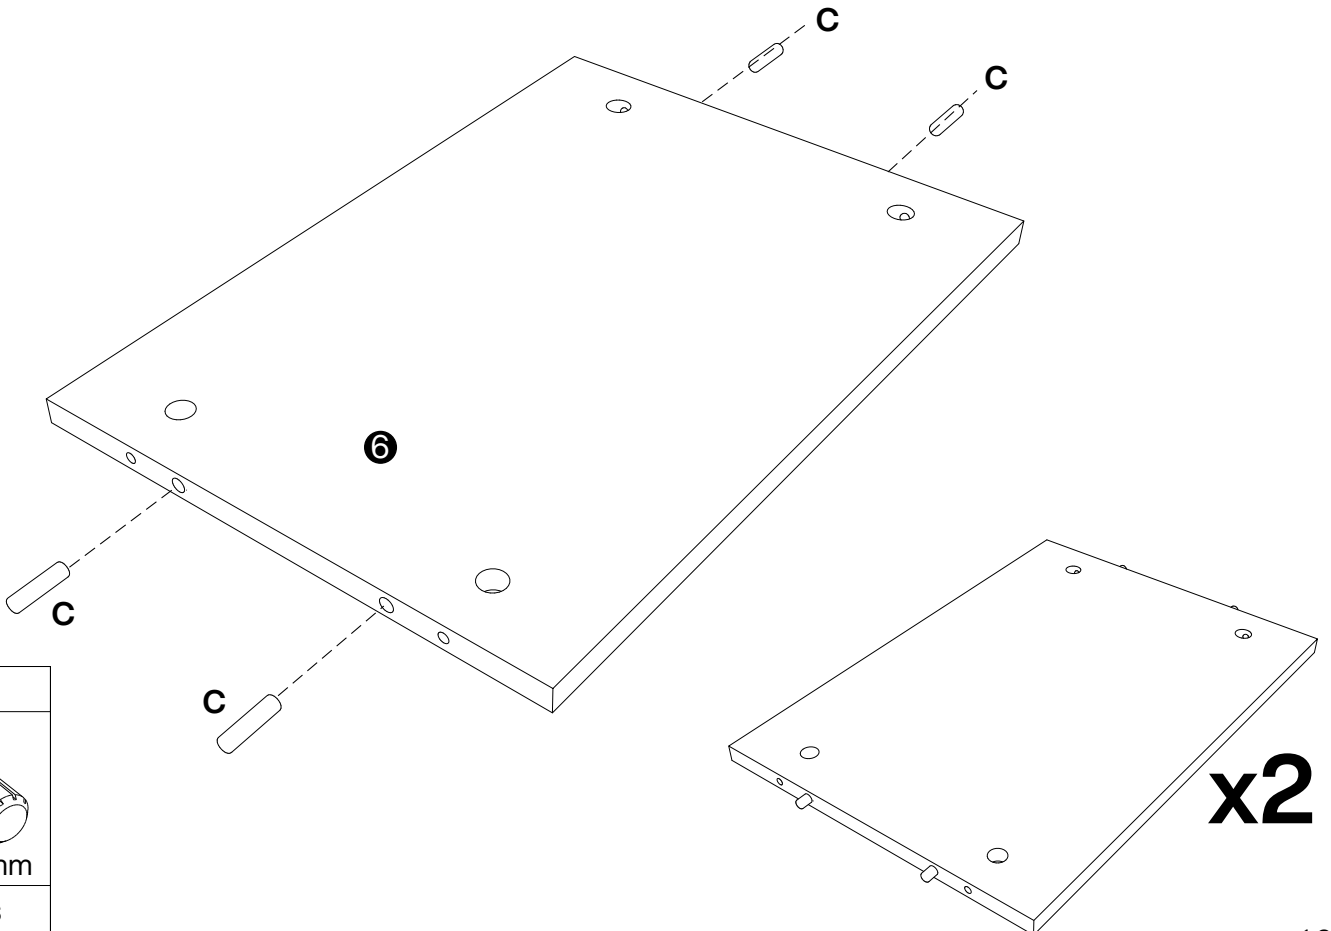Ø8x30mm
4 pcs

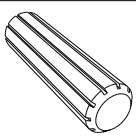10

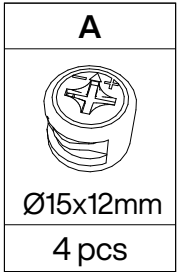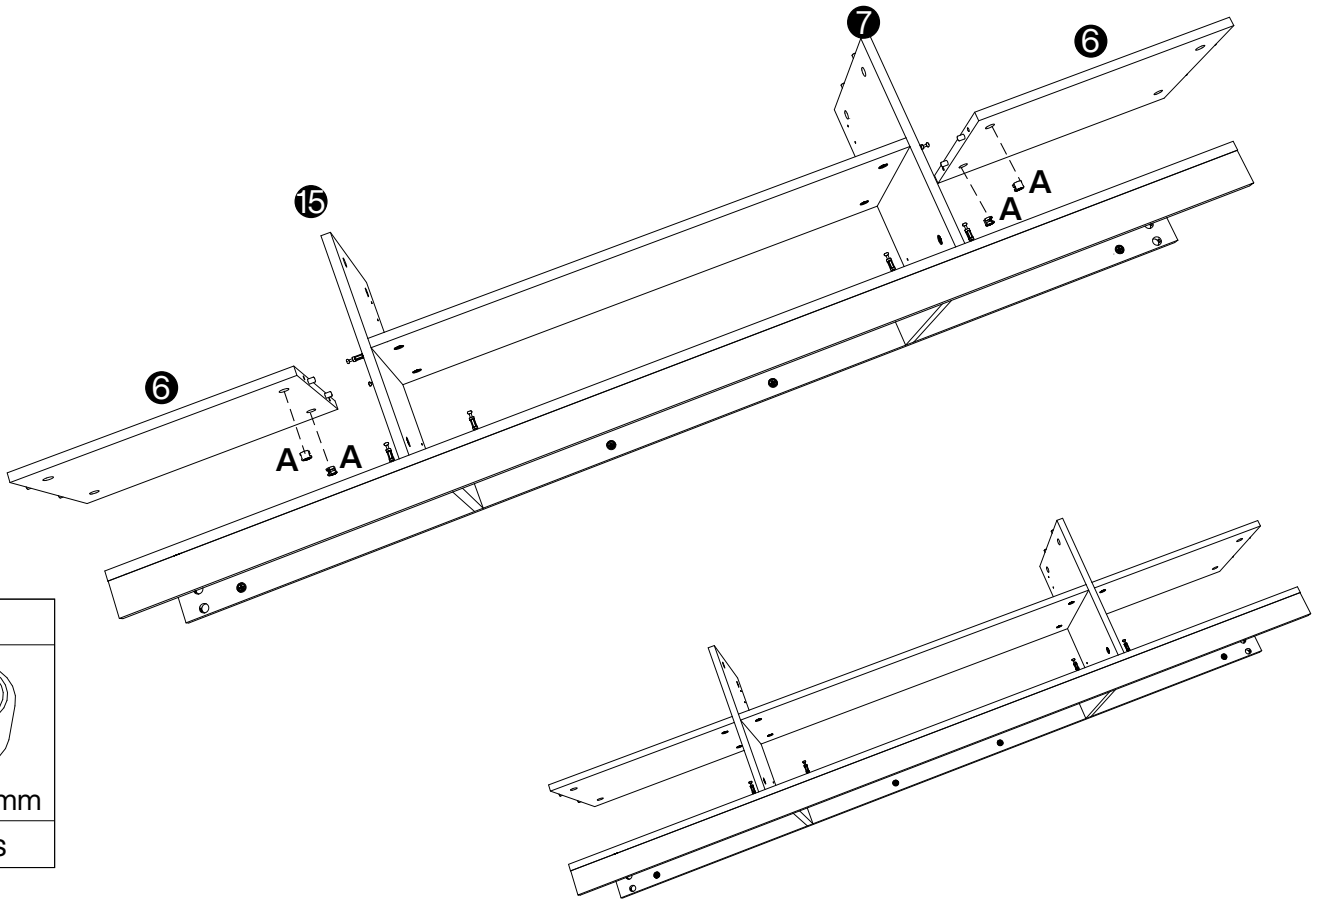


C

Ø8x30mm
8 pcs


11

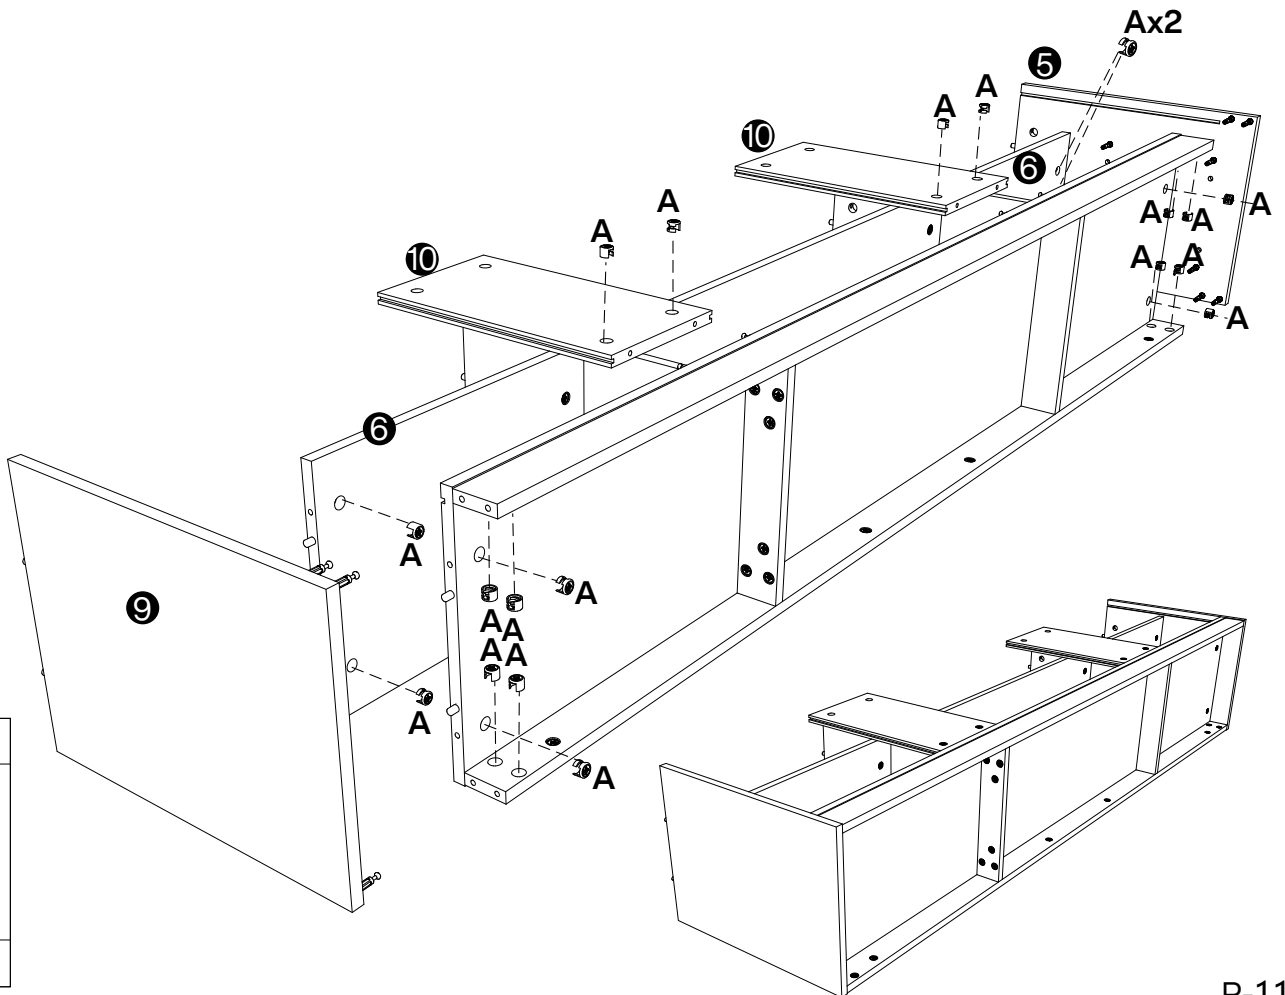


12




13

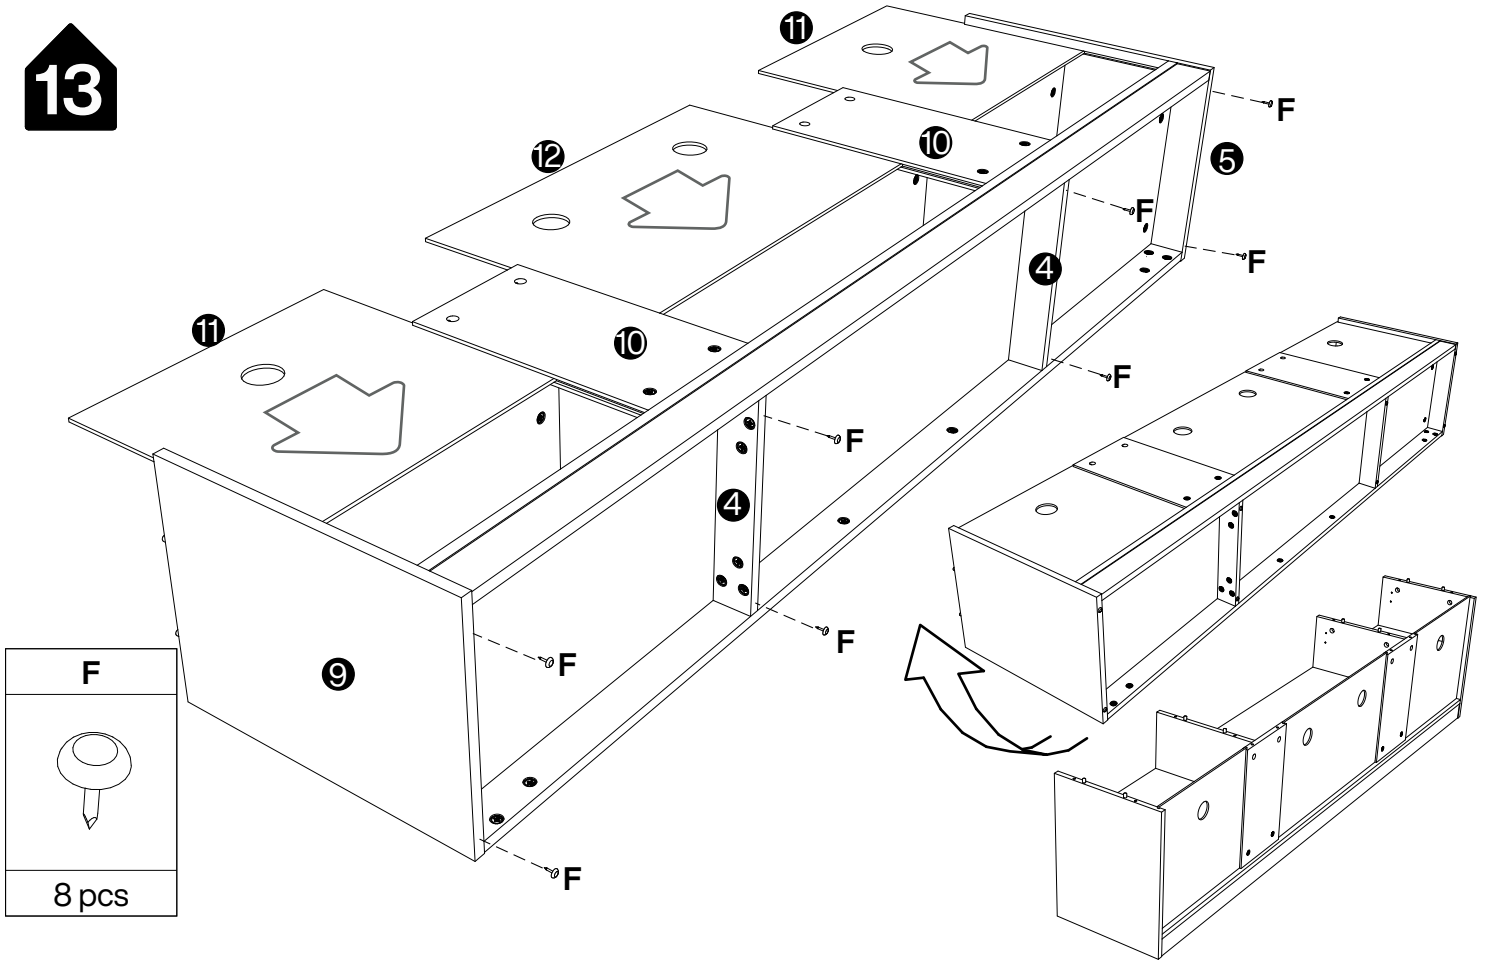

14

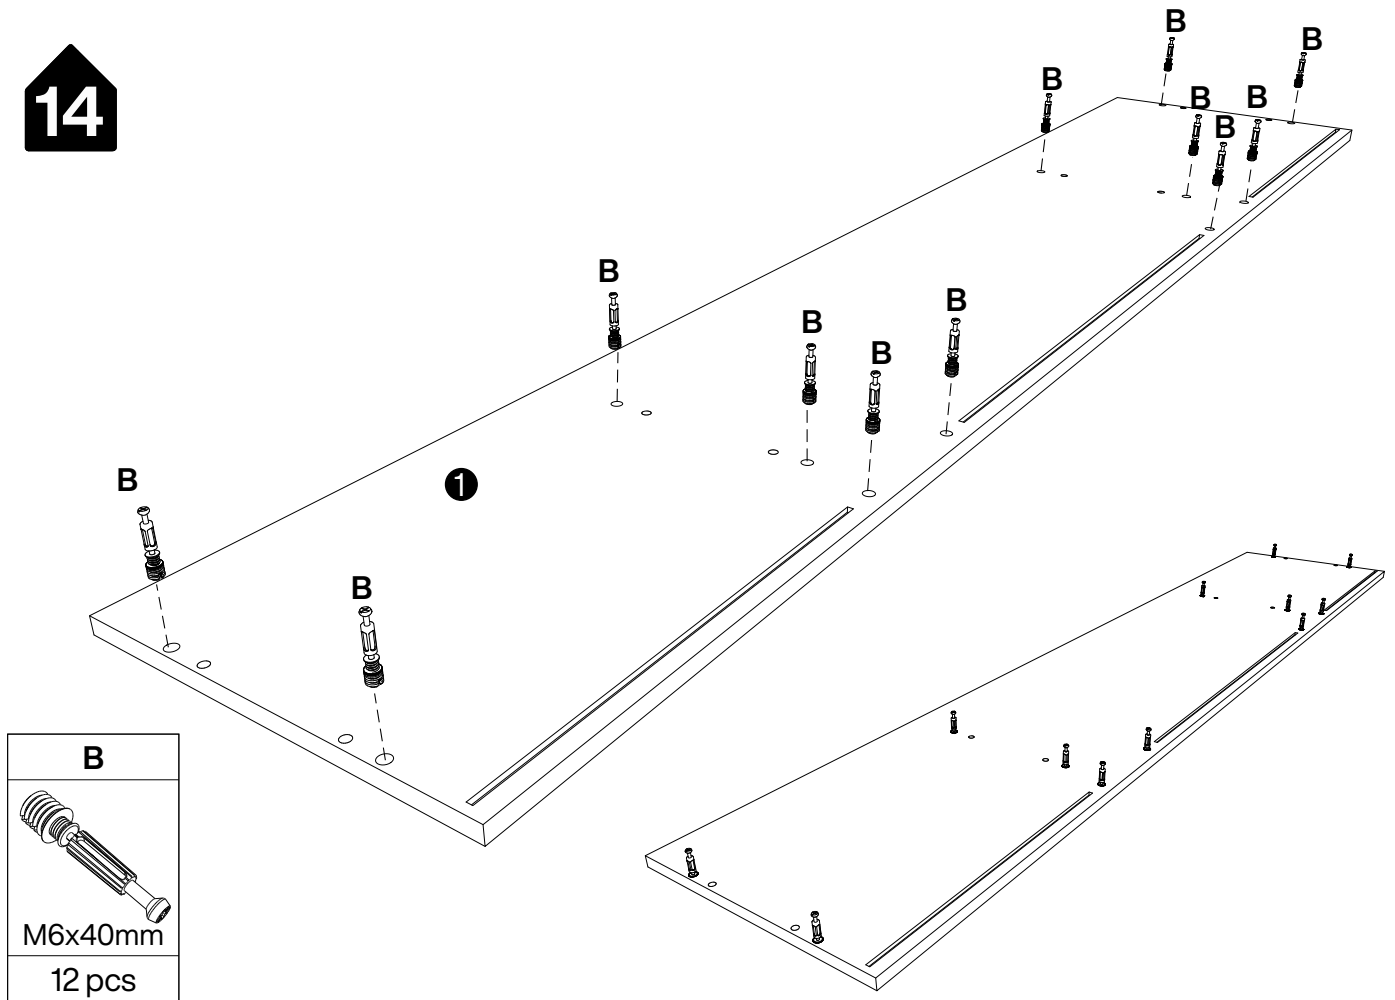


15


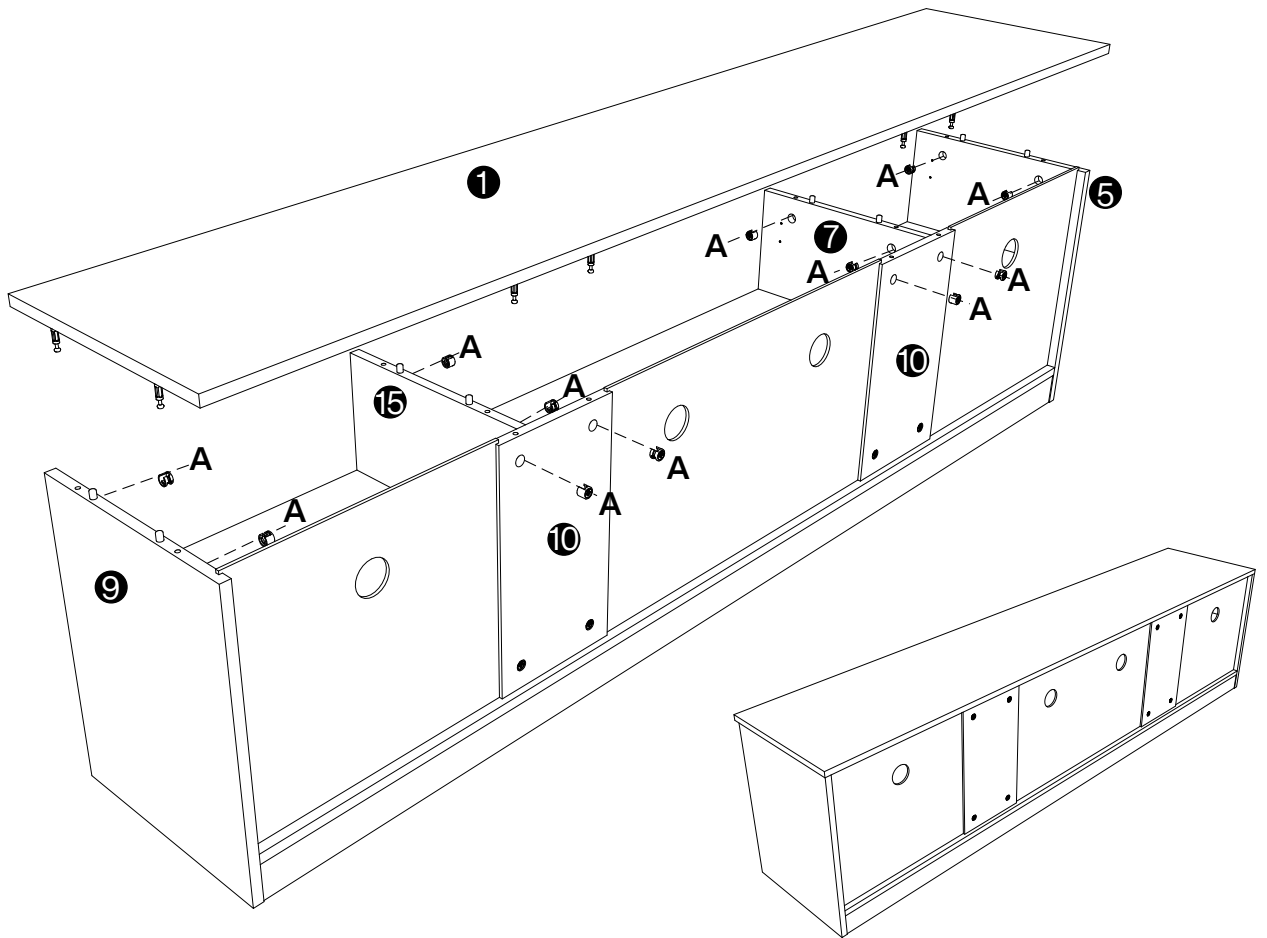


A
Ø15x12mm
12 pcs


16

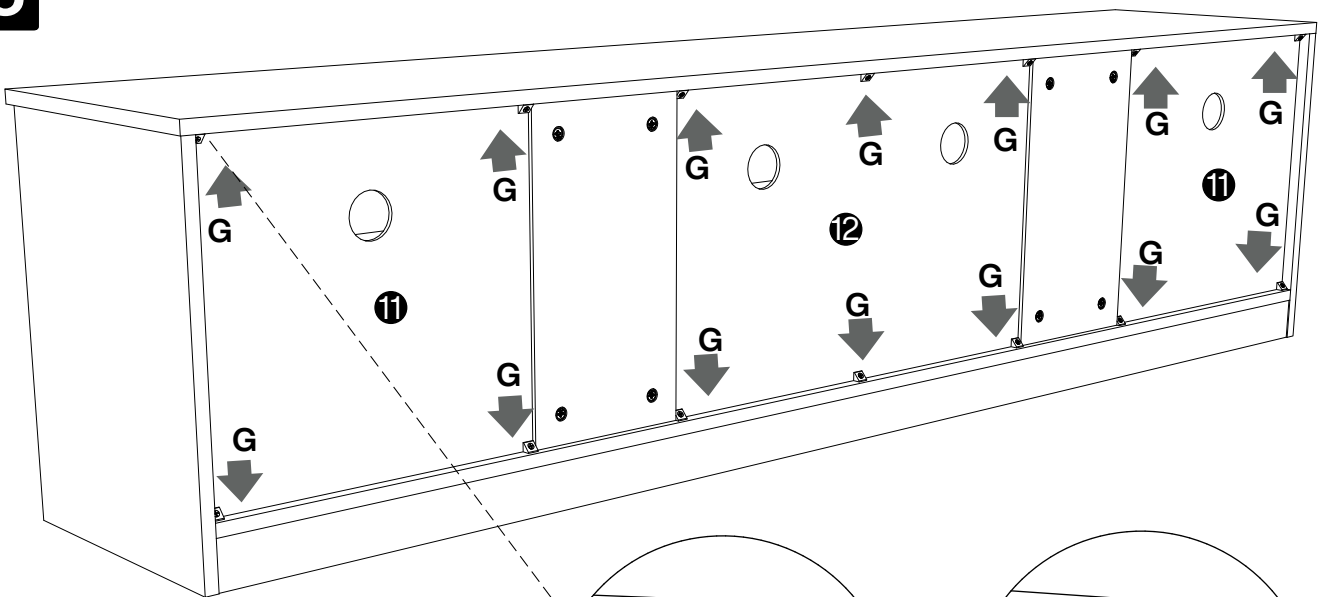

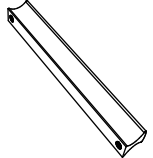
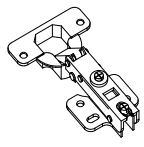



D	G
Ø3.5x14mm	
14 pcs	14 pcs

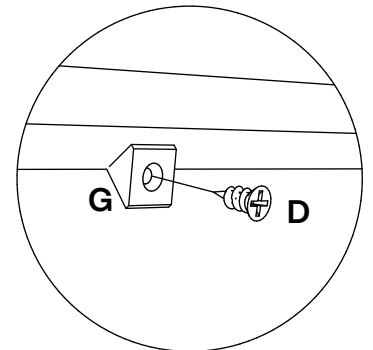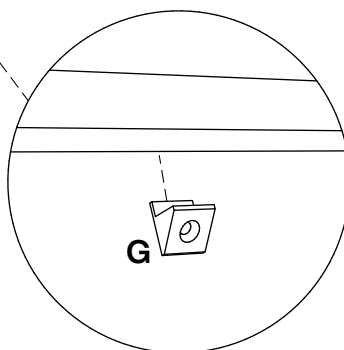


17

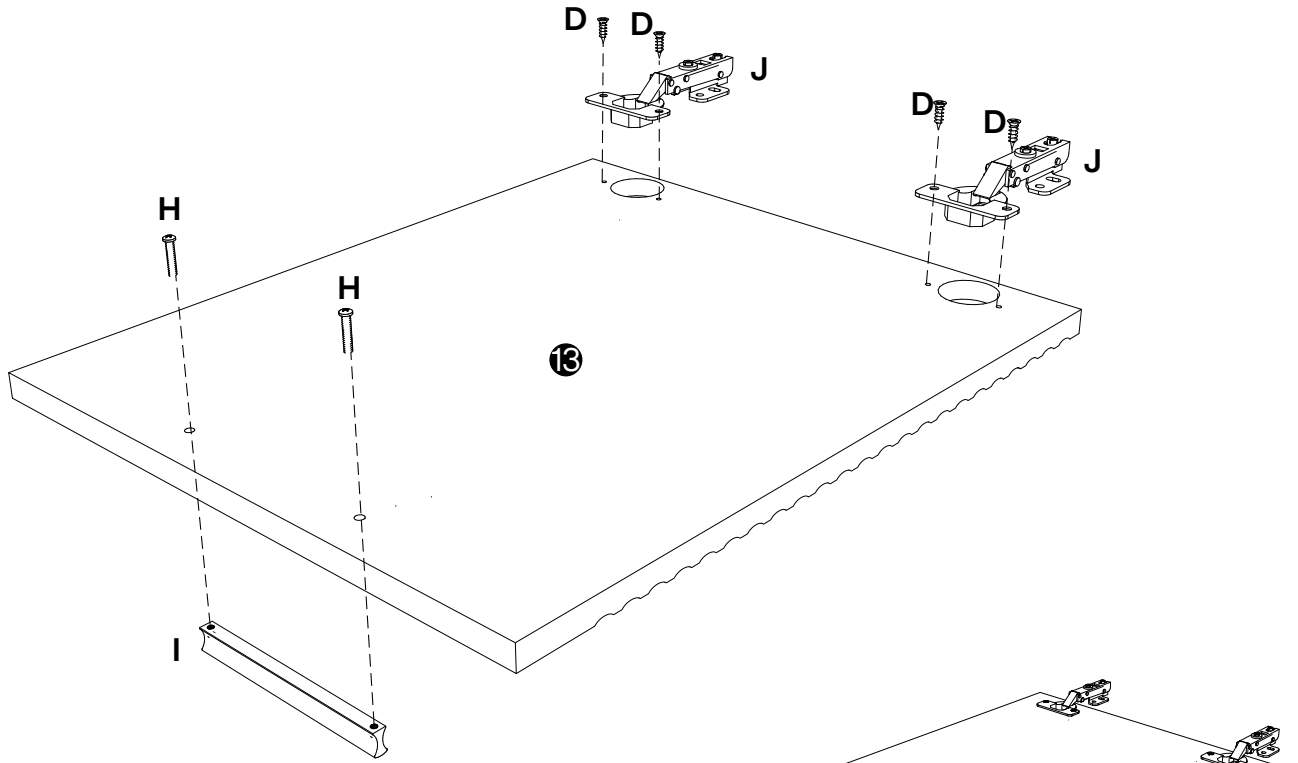


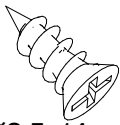


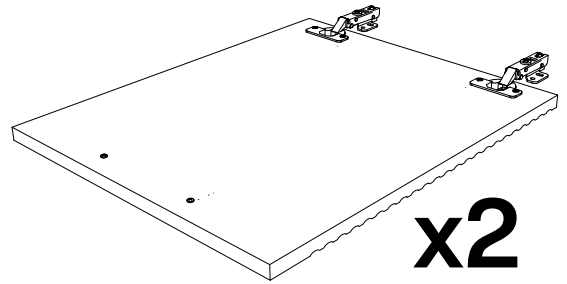D	H	I	J
			
Ø3.5x14mm	M4x18mm		
8 pcs	4 pcs	2 pcs	4 pcs

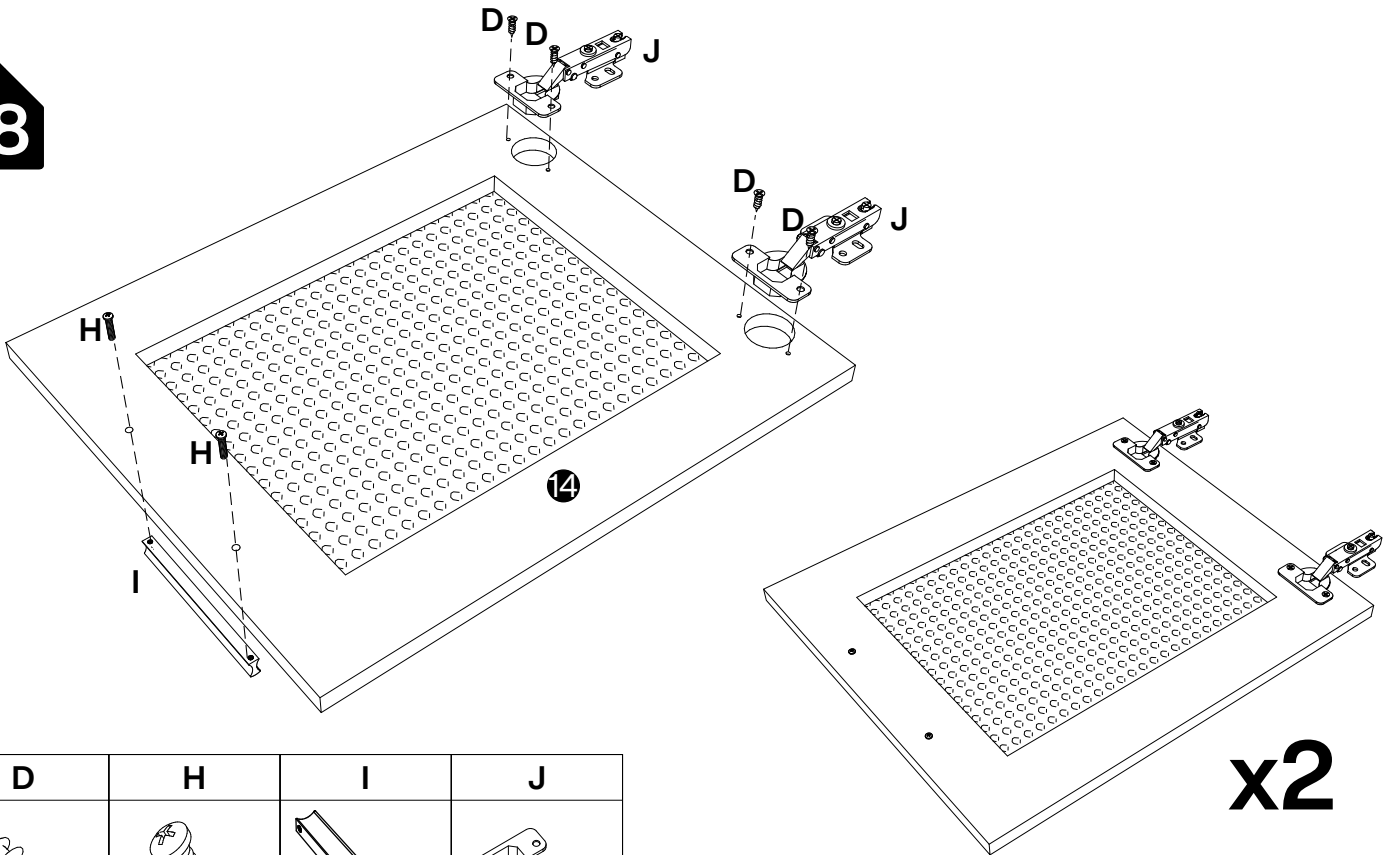


18

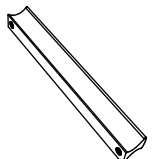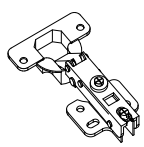


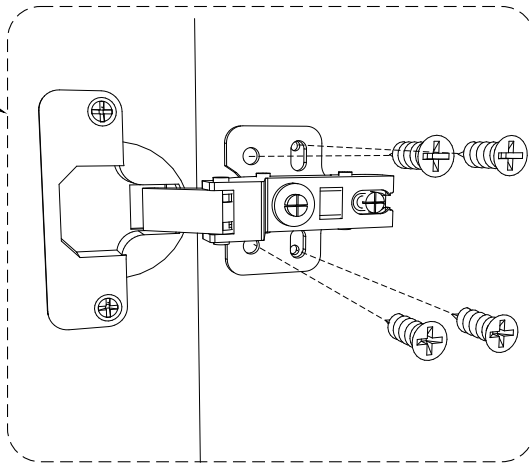
D	H	I	J
			
Ø3.5x14mm	M4x18mm		
8 pcs	4 pcs	2 pcs	4 pcs

x2

19

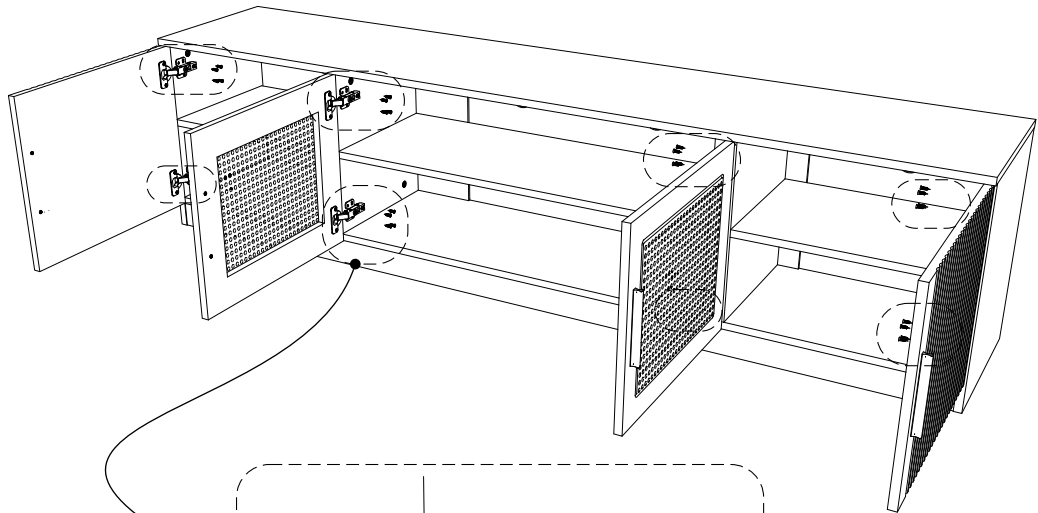


D

Ø3.5x14mm
32 pcs




To prevent the door hinge from falling off, please install 4 screws

20






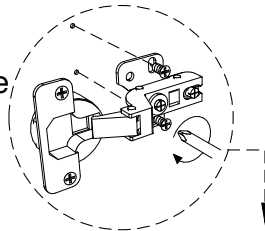
Please first install the two screws located near the interior of the cabinet



After completing the adjustments, please install the remaining two self-tapping screws

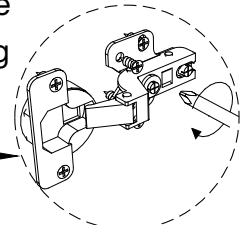

If there is misalignment after you install, adjust the screw to the best condition

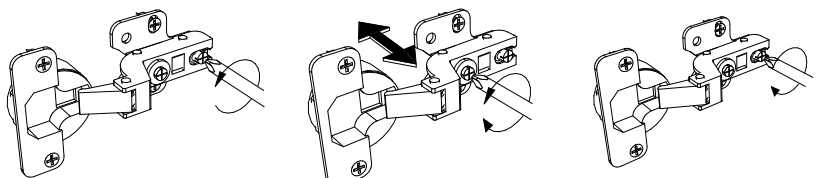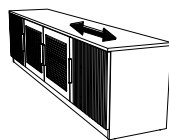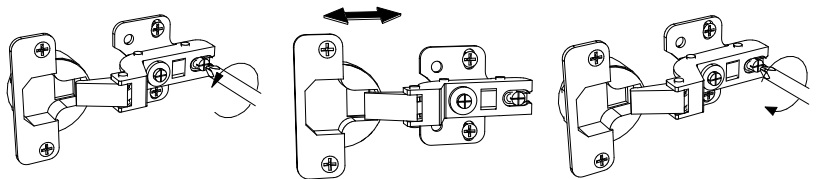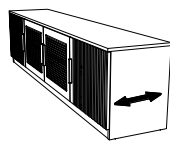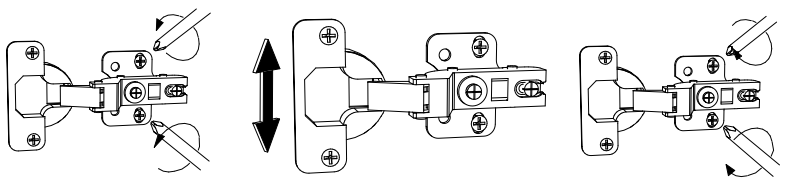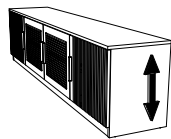

Thank you for your support!

