



Installation Manual


MOTIVATE
YOUR LIFE !

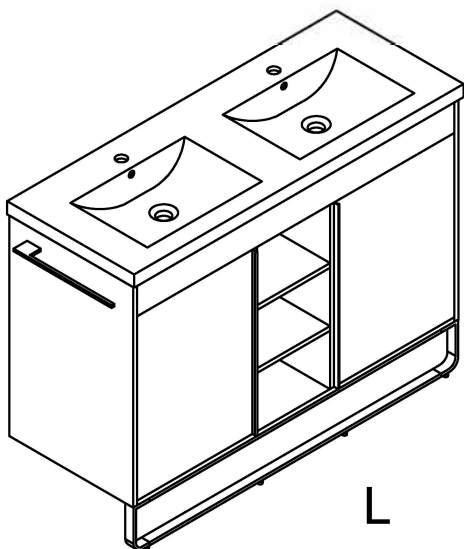

L

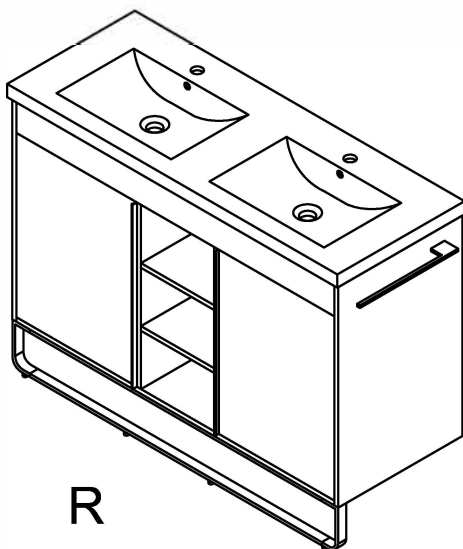



R

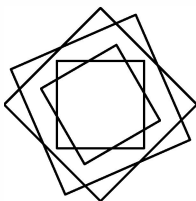


Thank you for shopping with us!

We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	56	K	 Handle(L580mm) Ø4*14mm	2
B	 Two-in-one connector	53	L	 Metal tripod (L1193mm) M4*20mm	1
C	 Two-in-one connector	53	M	 Towel rack	1
D	 Wood plug	14	N	 Screws M4x18mm	2
E	 Plastic anchor(Ø10mm)	4	O	 Movable laminate support	8
F	 Screws for fix on the wall	4	P	 Anti-collision gasket	2
G	 Bracket (53x70x44mm)	4	Q	 Screwdriver	1
H	 Bracket (19x19x35mm)	2			
I	 Hinges(Internal hiding)	4			
J	 Door stopper	2			


Recommended tools

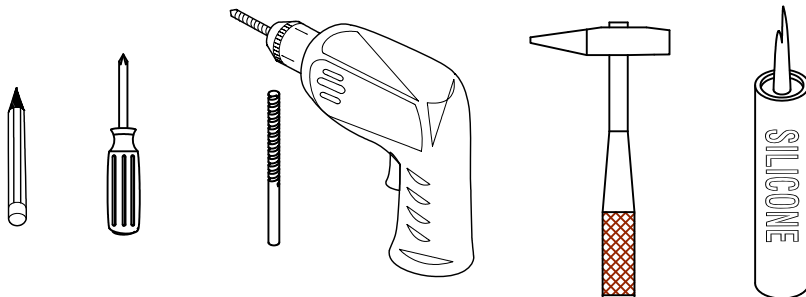




Dimensions

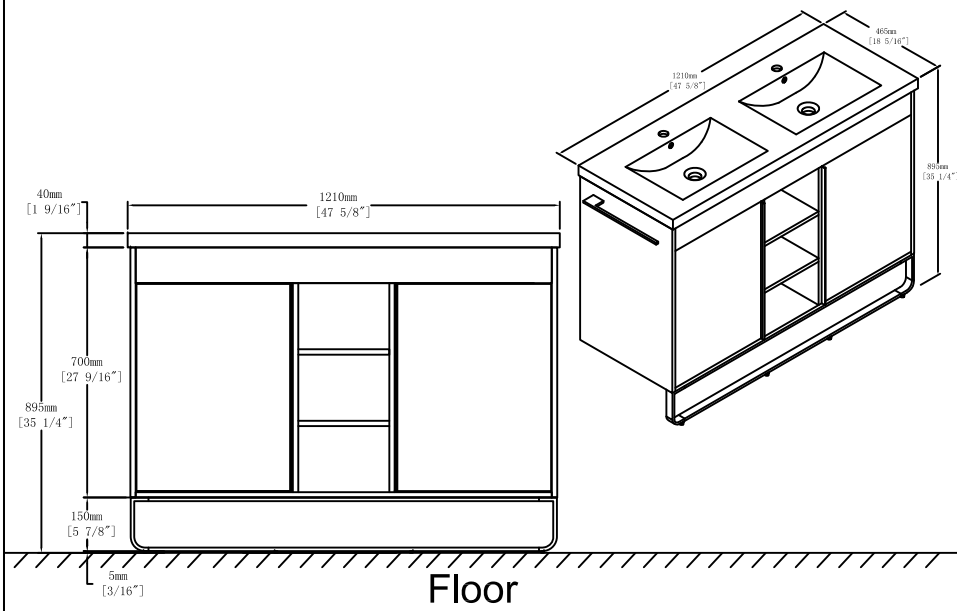

Components


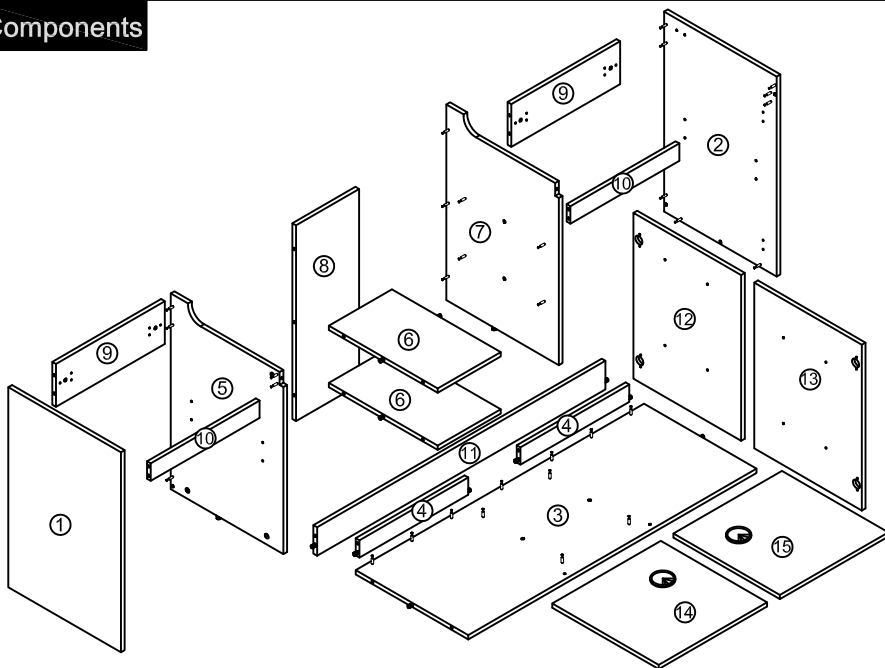


Step 1

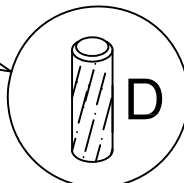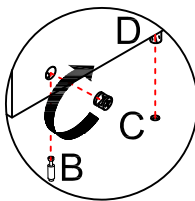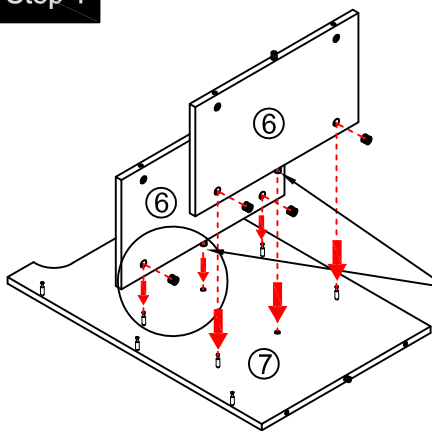


Note: The D parts are used for these two holes

	x4
B	
	x4
C	
	x2
D	
	
Q	


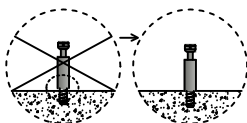
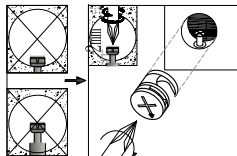


Notes: Screw installation depth as shown

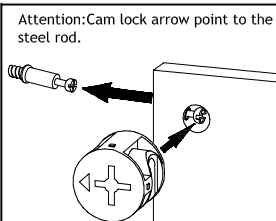


Attention: Cam lock arrow point to the steel rod.

Step 2

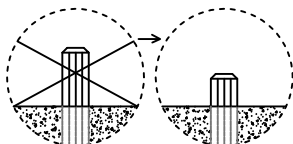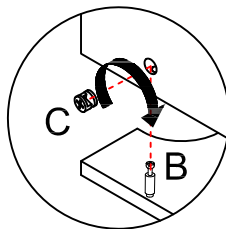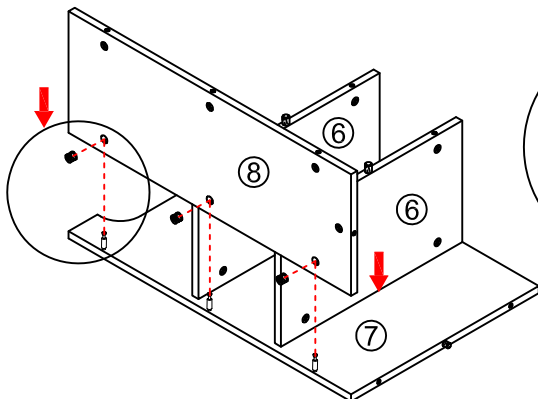

	x3
B	
	x3
C	
	
Q	

first step




second step




third step




Step 3

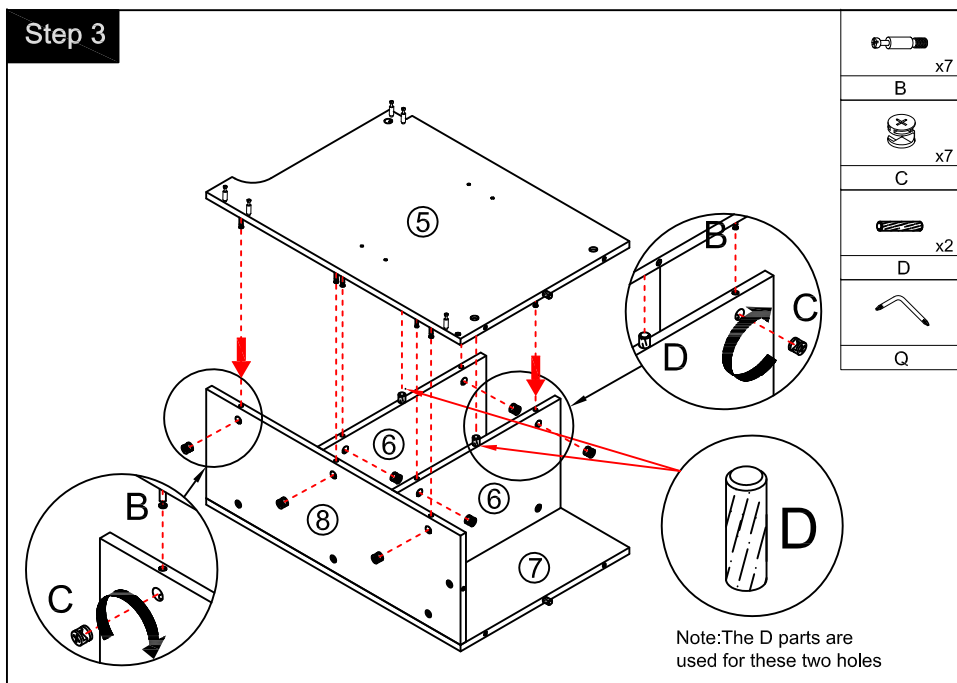


Step 4

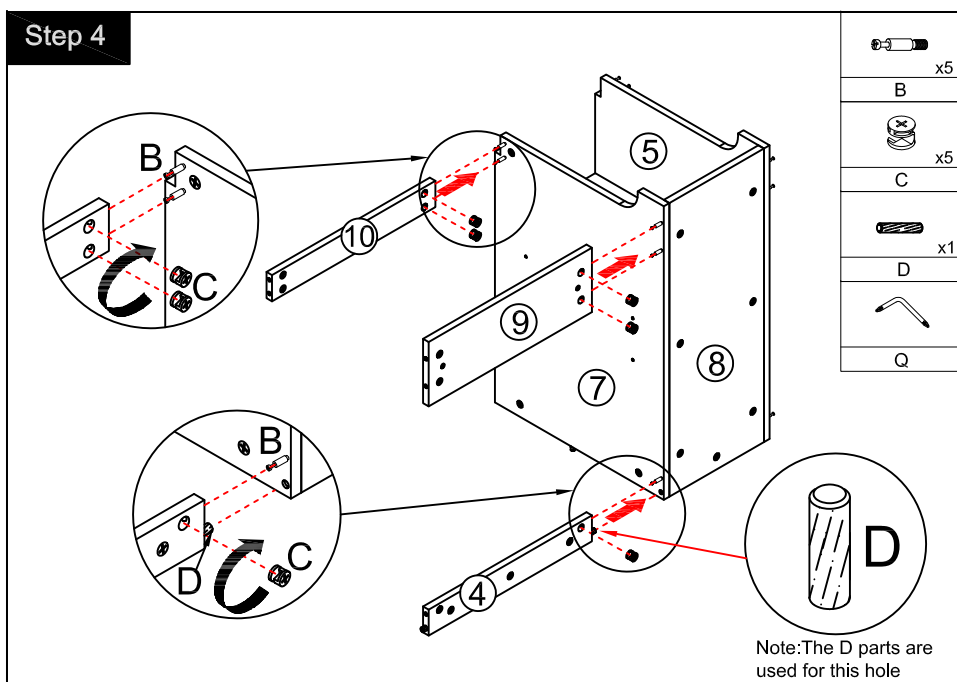


Step 5

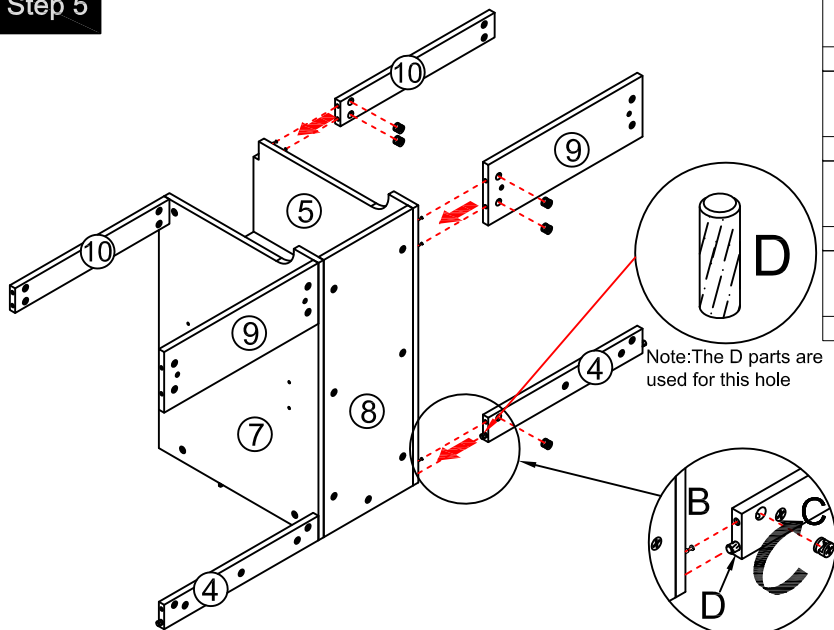


Step 6

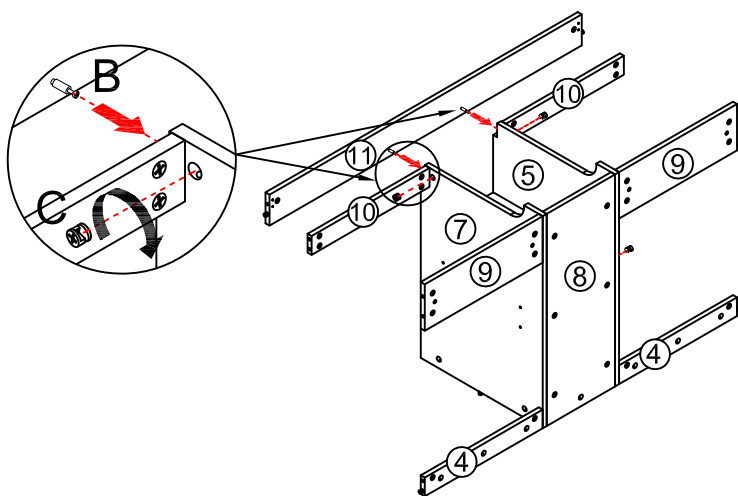


Step 7

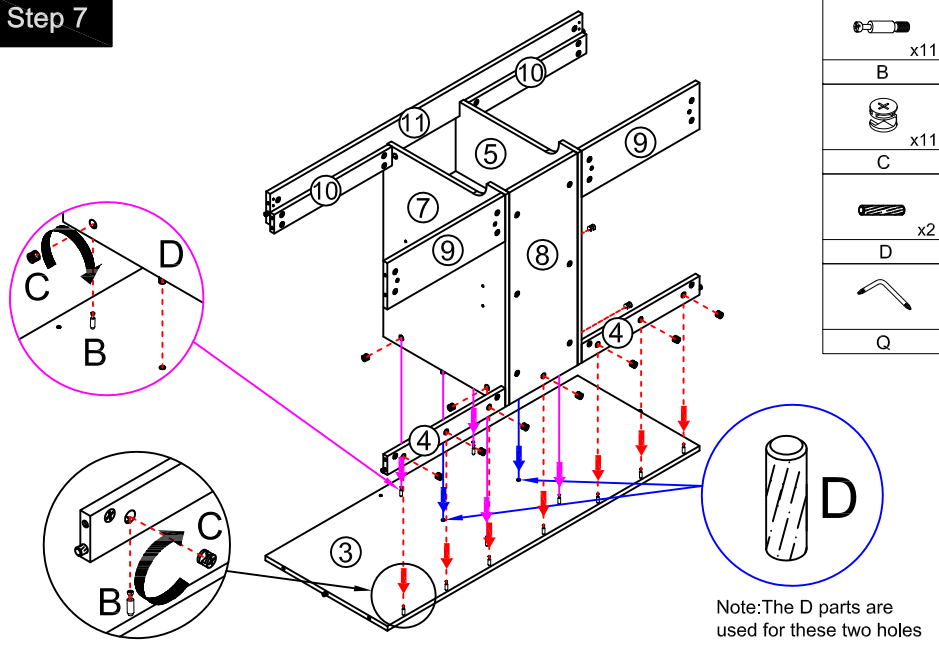


Step 8

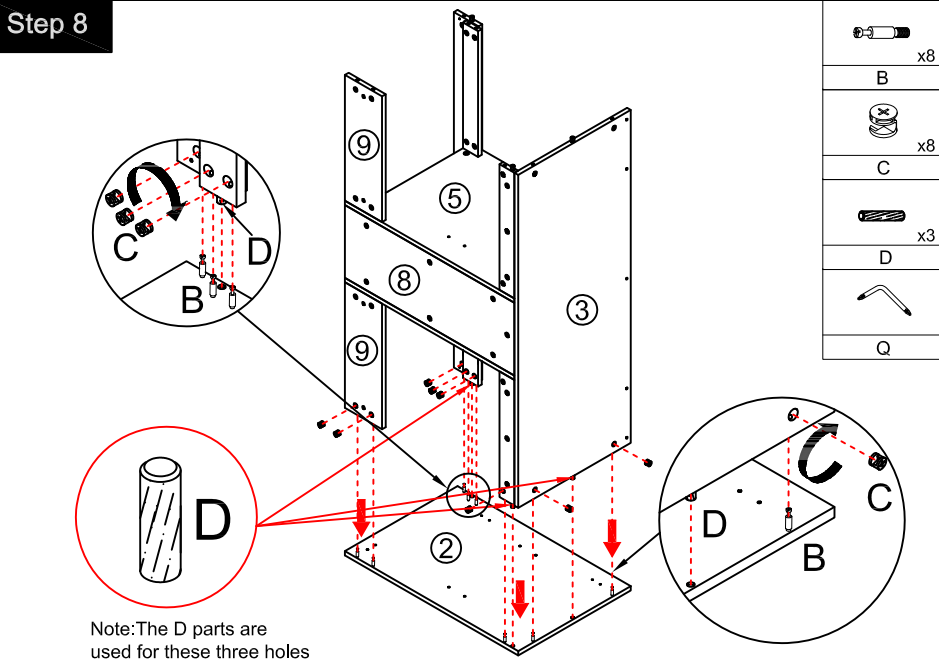


Step 9

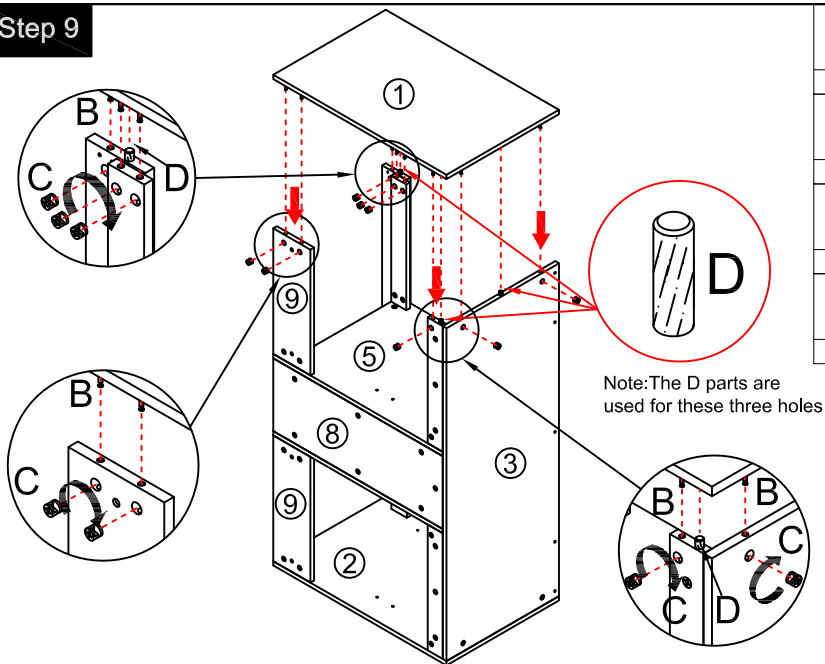

Step 10

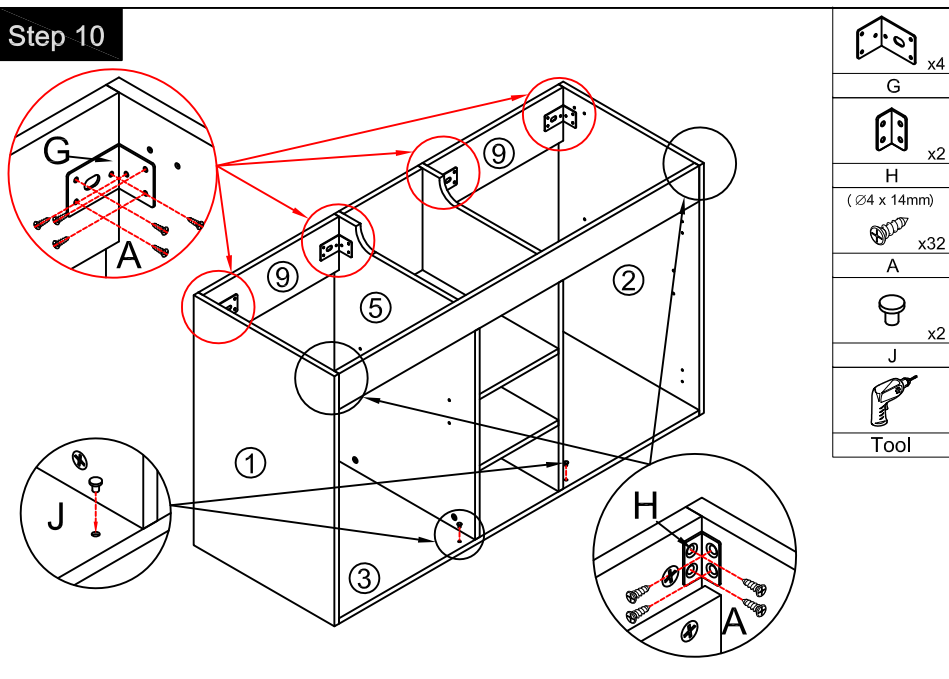


Step 11

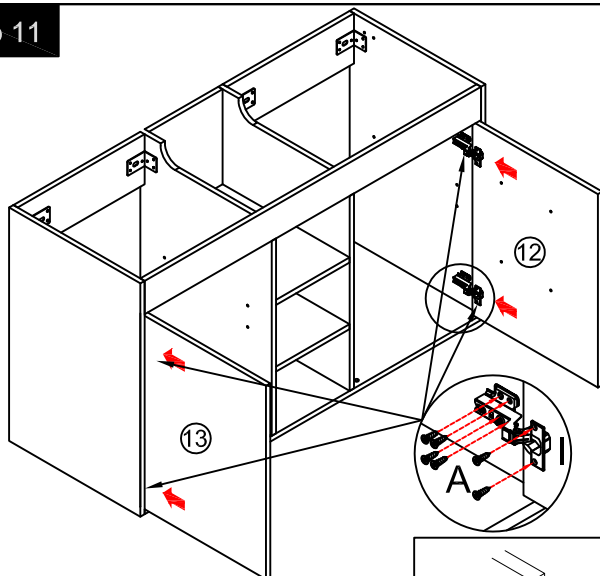


	x4
I ($\varnothing 4 \times 14\text{mm}$)	
	x24
A	
	
Tool	

You can adjust the doors by tightening or loosening the screws on the hinge. →

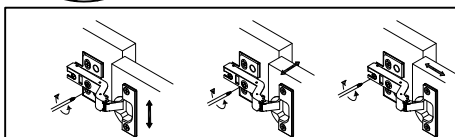



Step 12

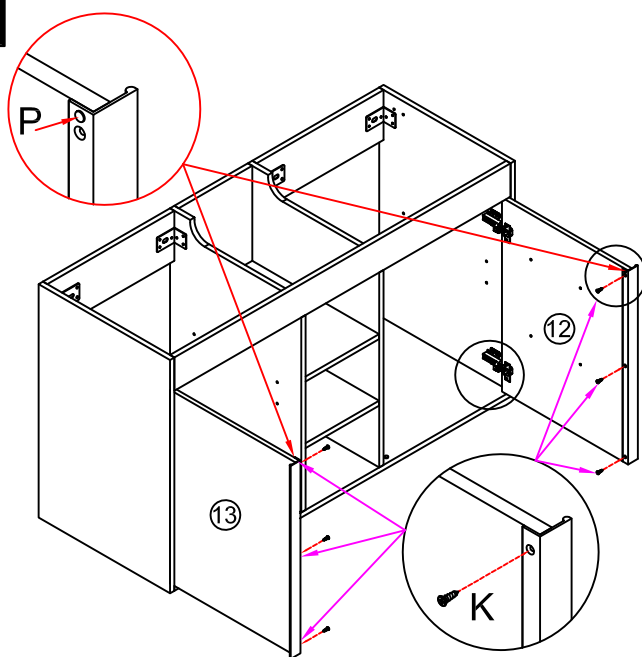


	x2
K	
	x2
P	
	
Tool	

Step 13


For the installation of the metal frame,
please refer to the instructions of Metal
Frame .

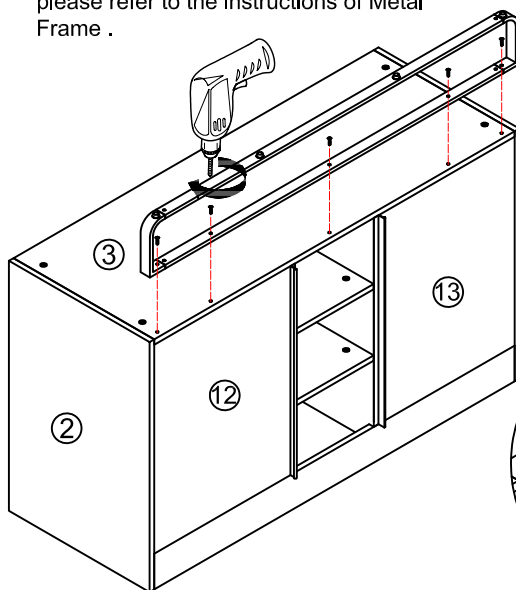


Step 14

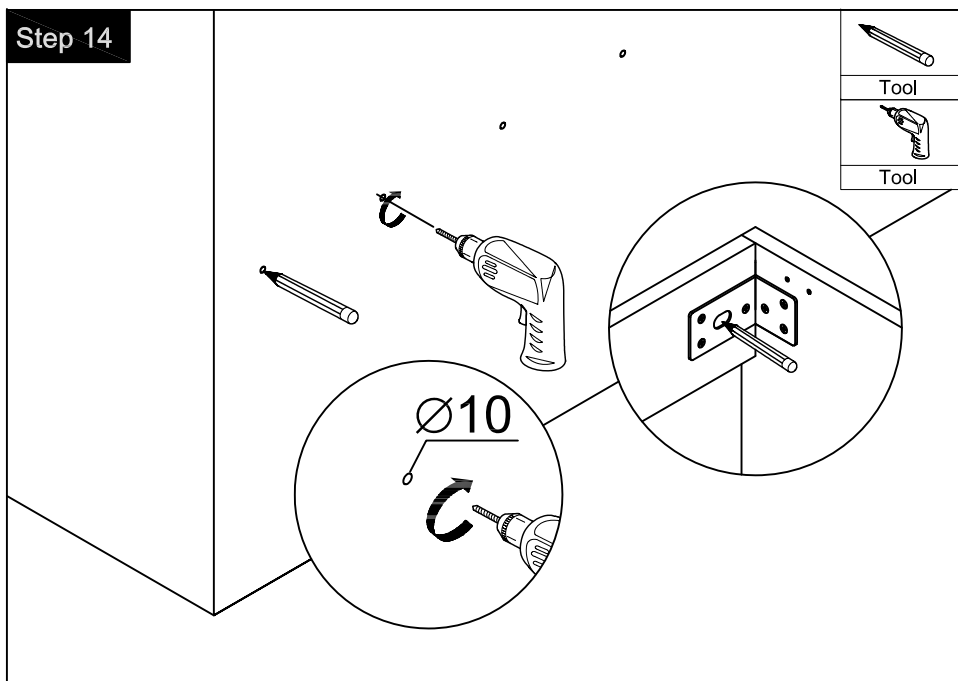


Step 15

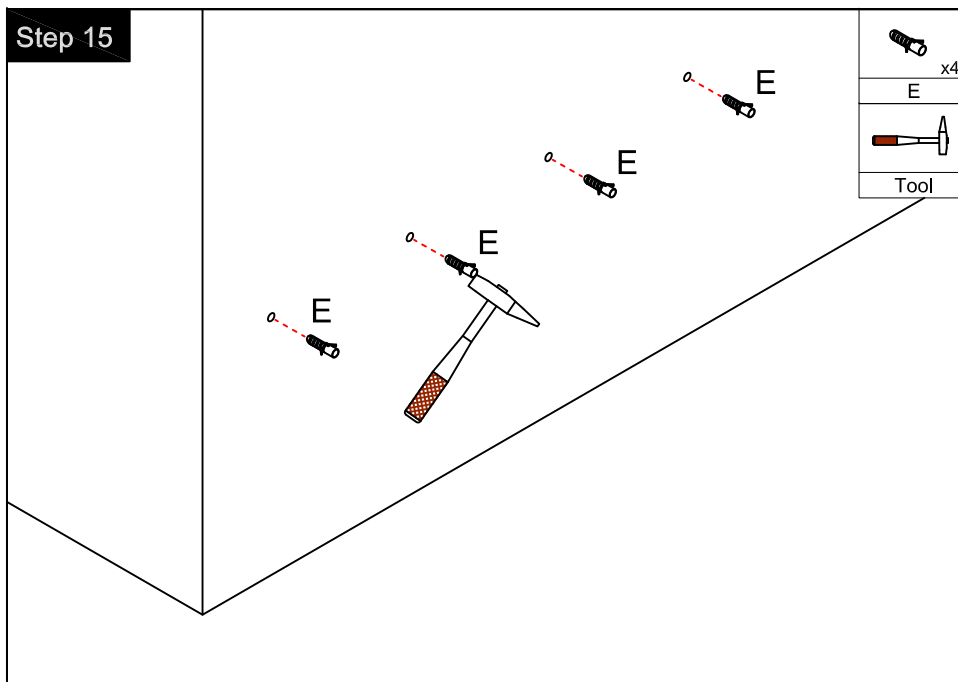

Step 16

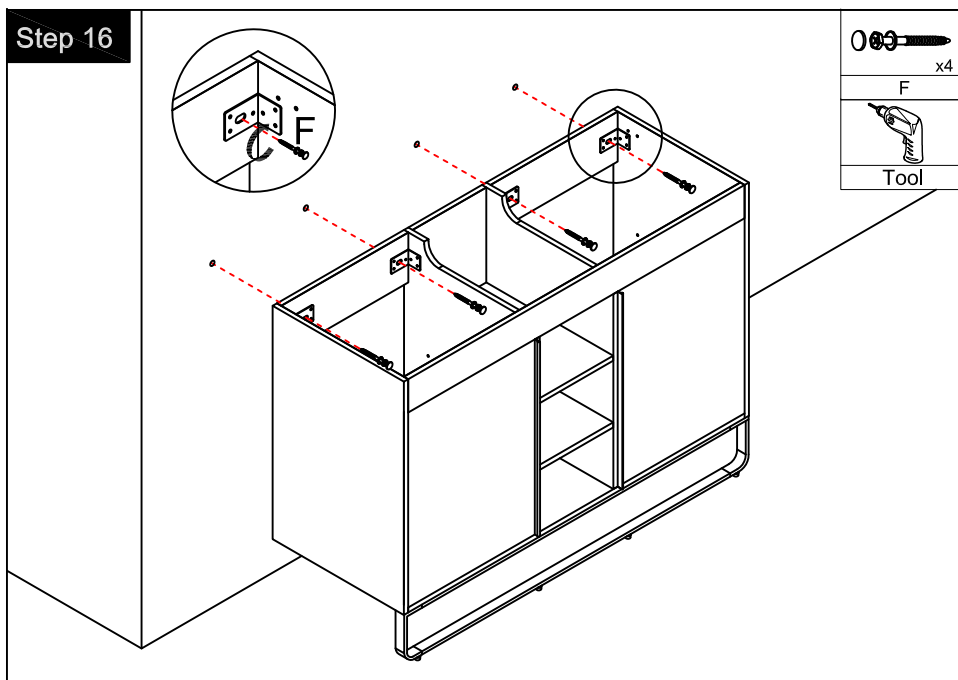


Step 17

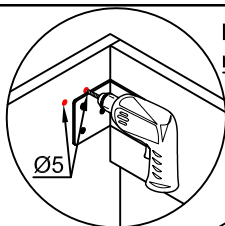

Hidden hole for towel
rack installation




Tool

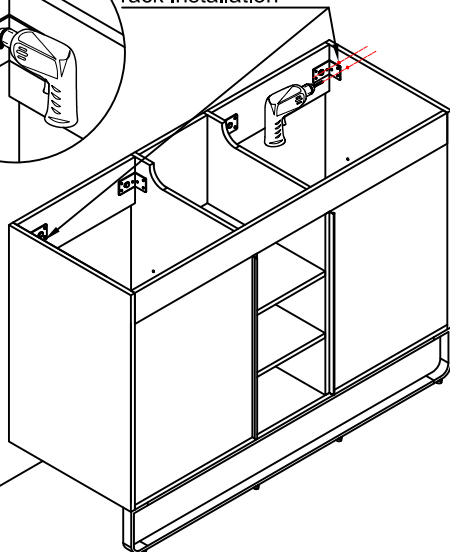


Use a 5mm drill bit to drill through the hidden holes on the inner side of the side panel according to the installation direction you need.


Step 18

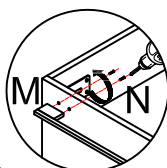

	(M4 x 18mm)	
x1 M	x2 N	Tool

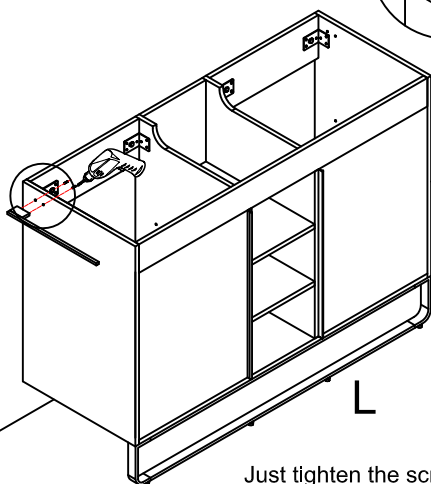


L

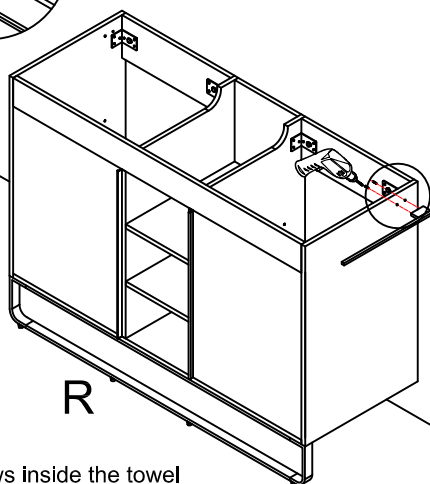

R

Just tighten the screws inside the towel
rack according to the hole position.

Step 19

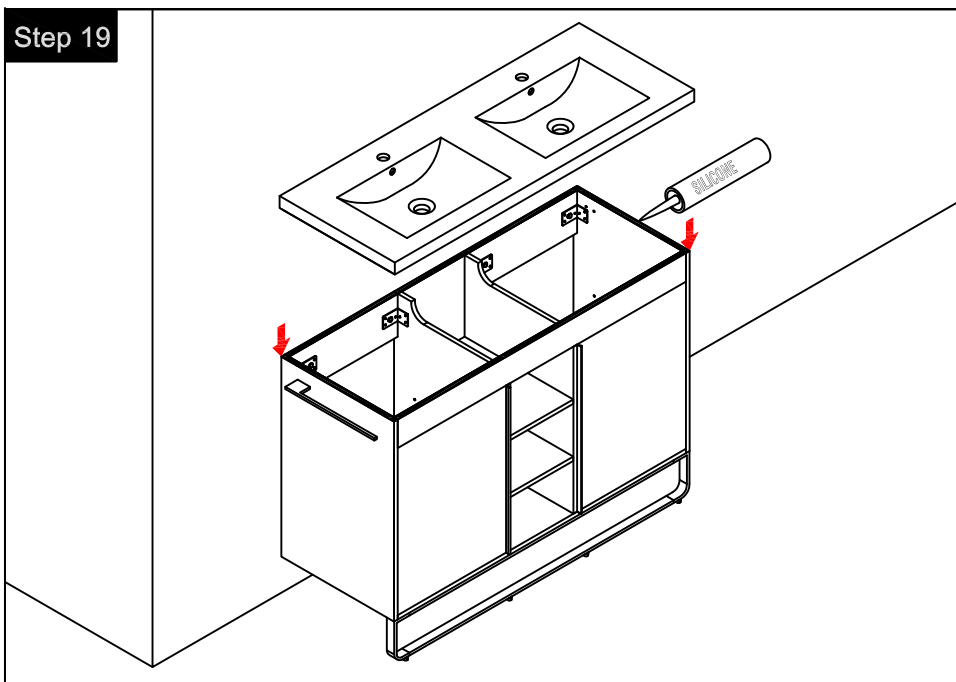

Step 20

Notes:

The installation position can be selected according to the required height.




x8


O




O x 8

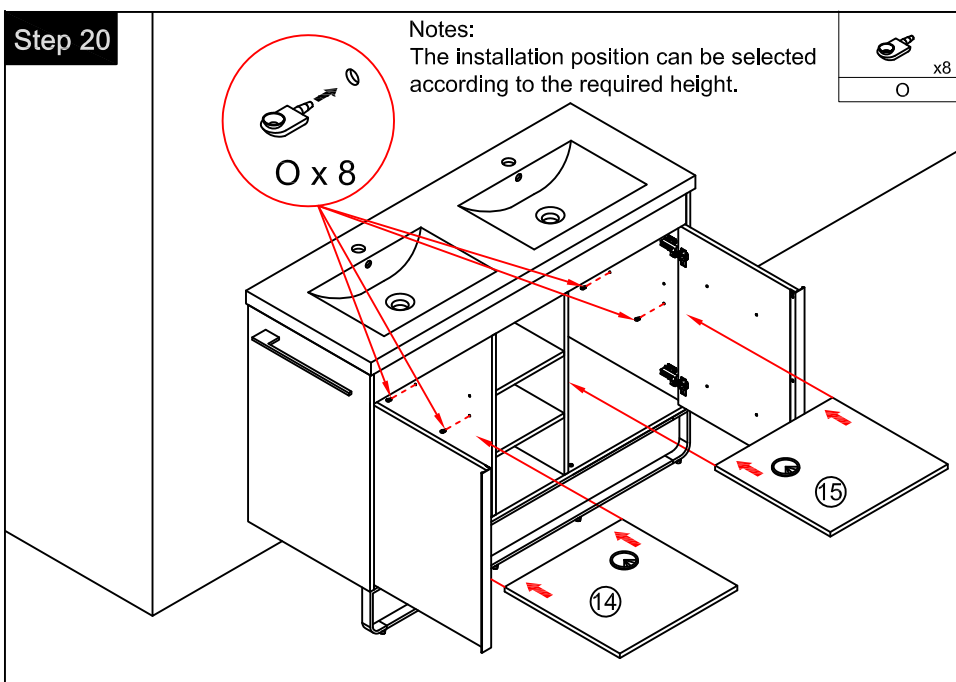

Finished

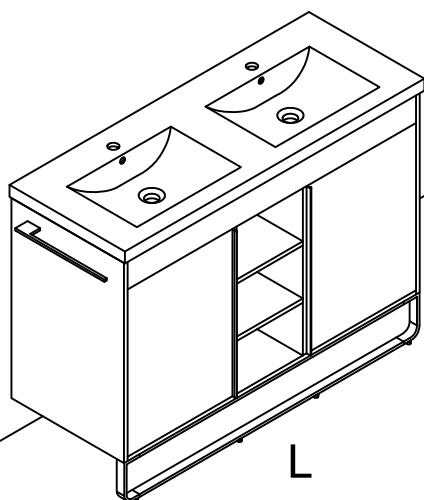


L

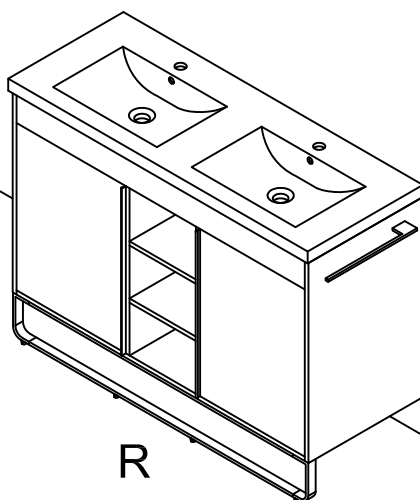


R


Procedure for installing the plastic box

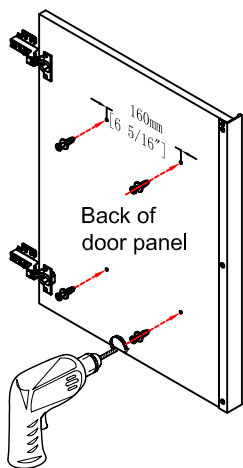

first step

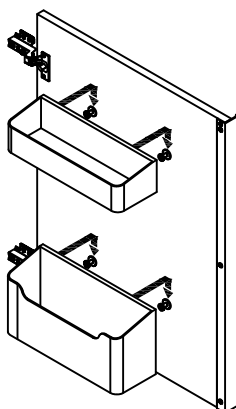


second step

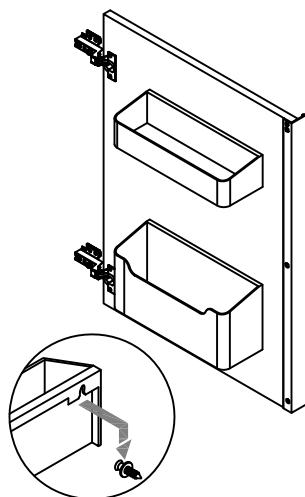


third step


Dimensions

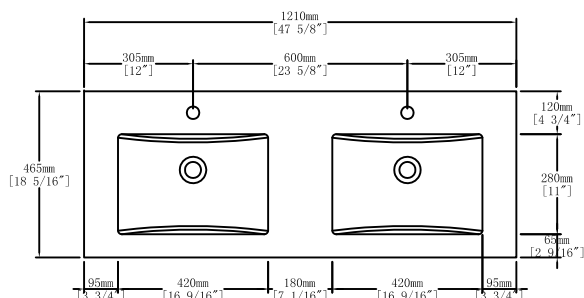

Top View

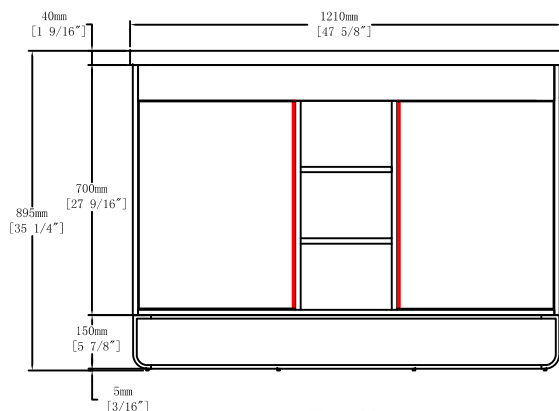

Front View

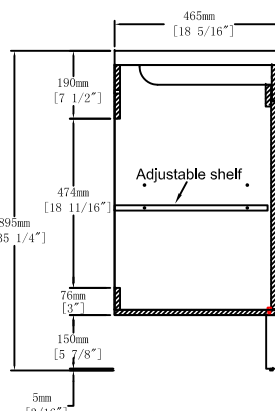



Side View

CARE CLEANING AND MAINTENANCE

1. Dust regularly with a soft , dry cloth.
2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
3. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
4. The sink is fragile, please pay attention to maintaining its appearance.
5. Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

Installation Manual

MOTIVATE
YOUR LIFE !

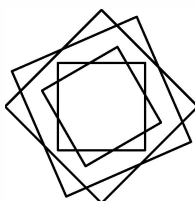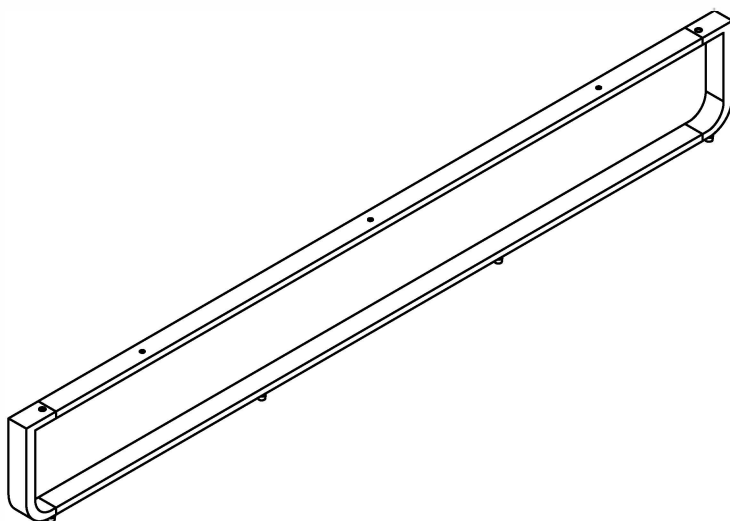

Thank you for shopping with us!

We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Hardware

NO.	Draw	QTY
A	 Screws M4x8mm	4

NO.	Draw	QTY
B	 Adjustable feet	4


Recommended tools




CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.

Step 1

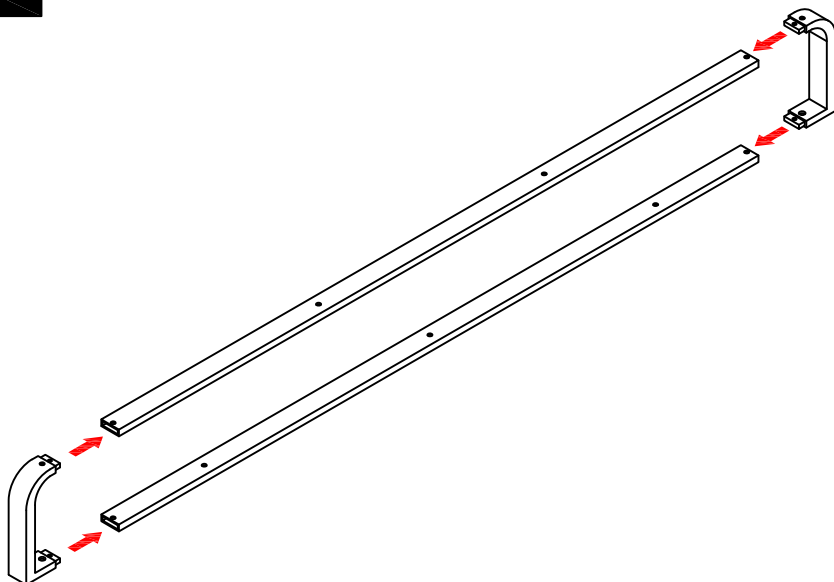

Step 2

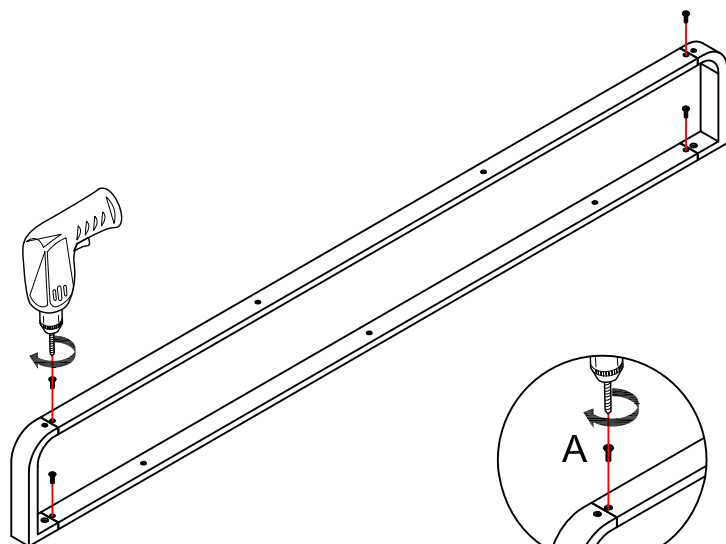


x4

A



Tool

Finished

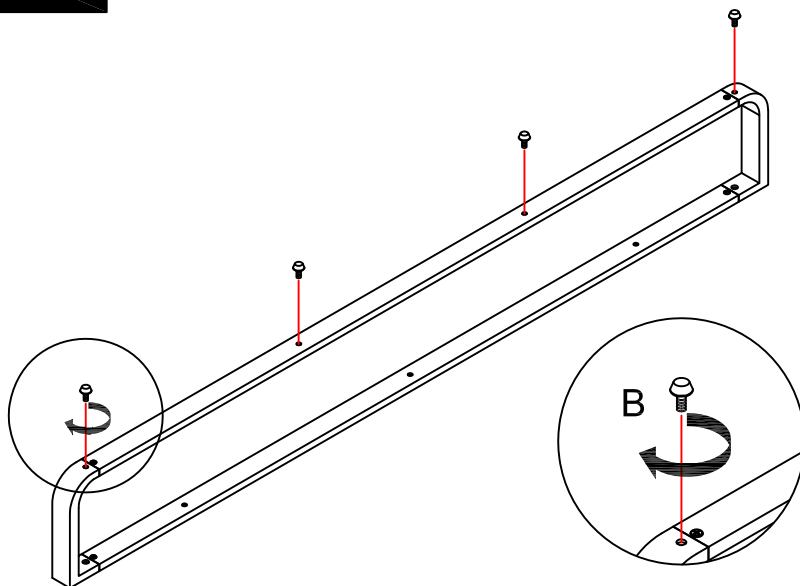

x4

B