

ASSEMBLY INSTRUCTIONS
30 INCES BATH VANITY (COMBO)

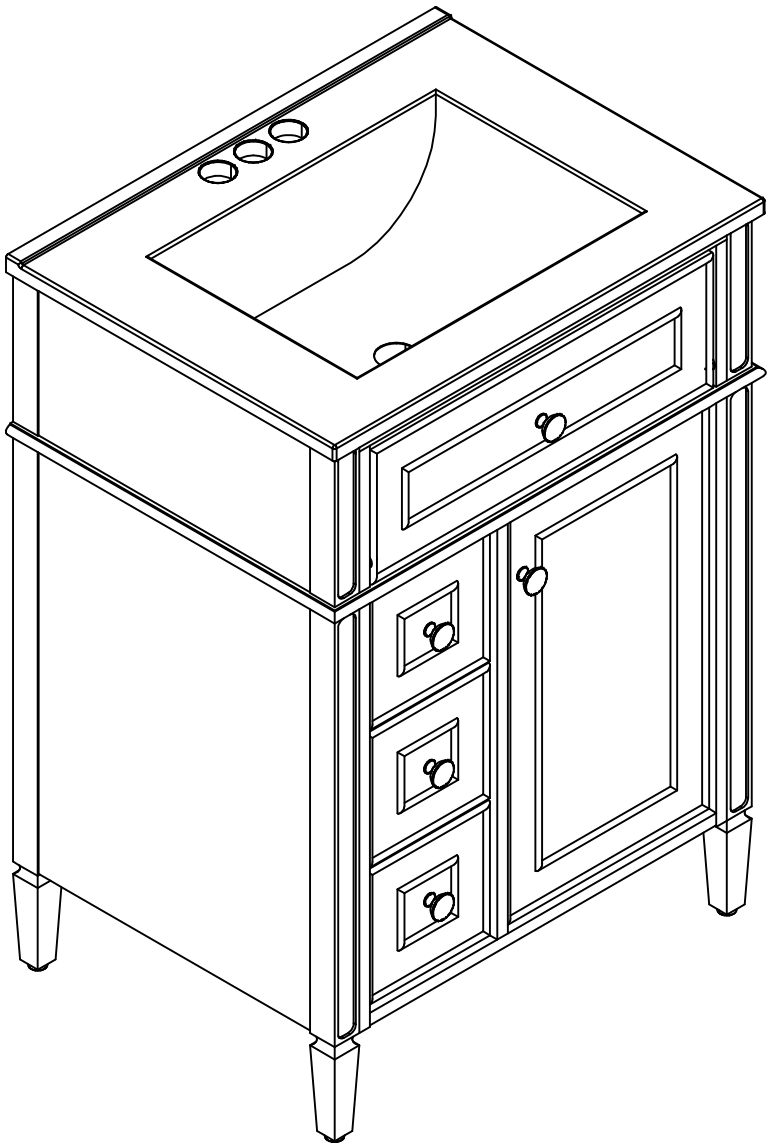

Thank you for purchasing this quality product. Be sure to check all pact material carefully for small parts which may have come loose inside carton during shipment. Separate, identify and count all parts and hardware Compare with the parts list to be sure all parts are present,
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

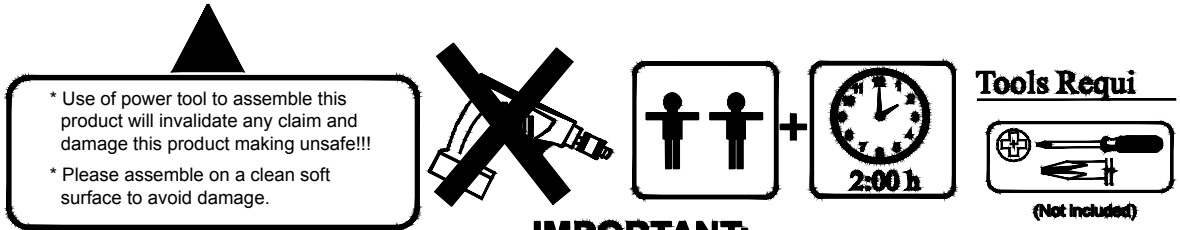

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installtion

Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.







. Please do not over tighten screws or bolts until the assembly is completed.

. Keep children and animal away from the work area, small parts could choke if swallowed.


. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.















Cam Lock Assembly Instructions

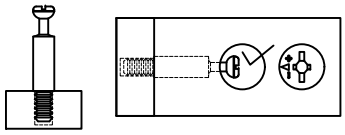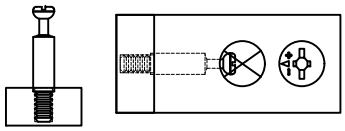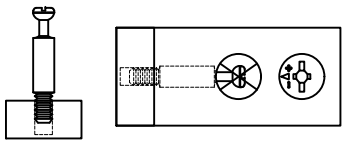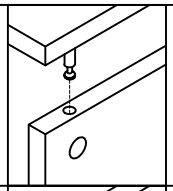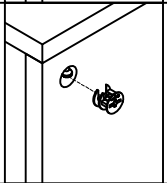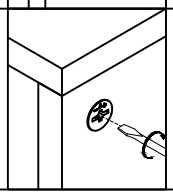	Insert Cam Bolt into hole as shown in diagram A.
	Make sure not to insert the Cam Bolt. Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
 	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
 	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. **Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*





PRODUCT DETAILS




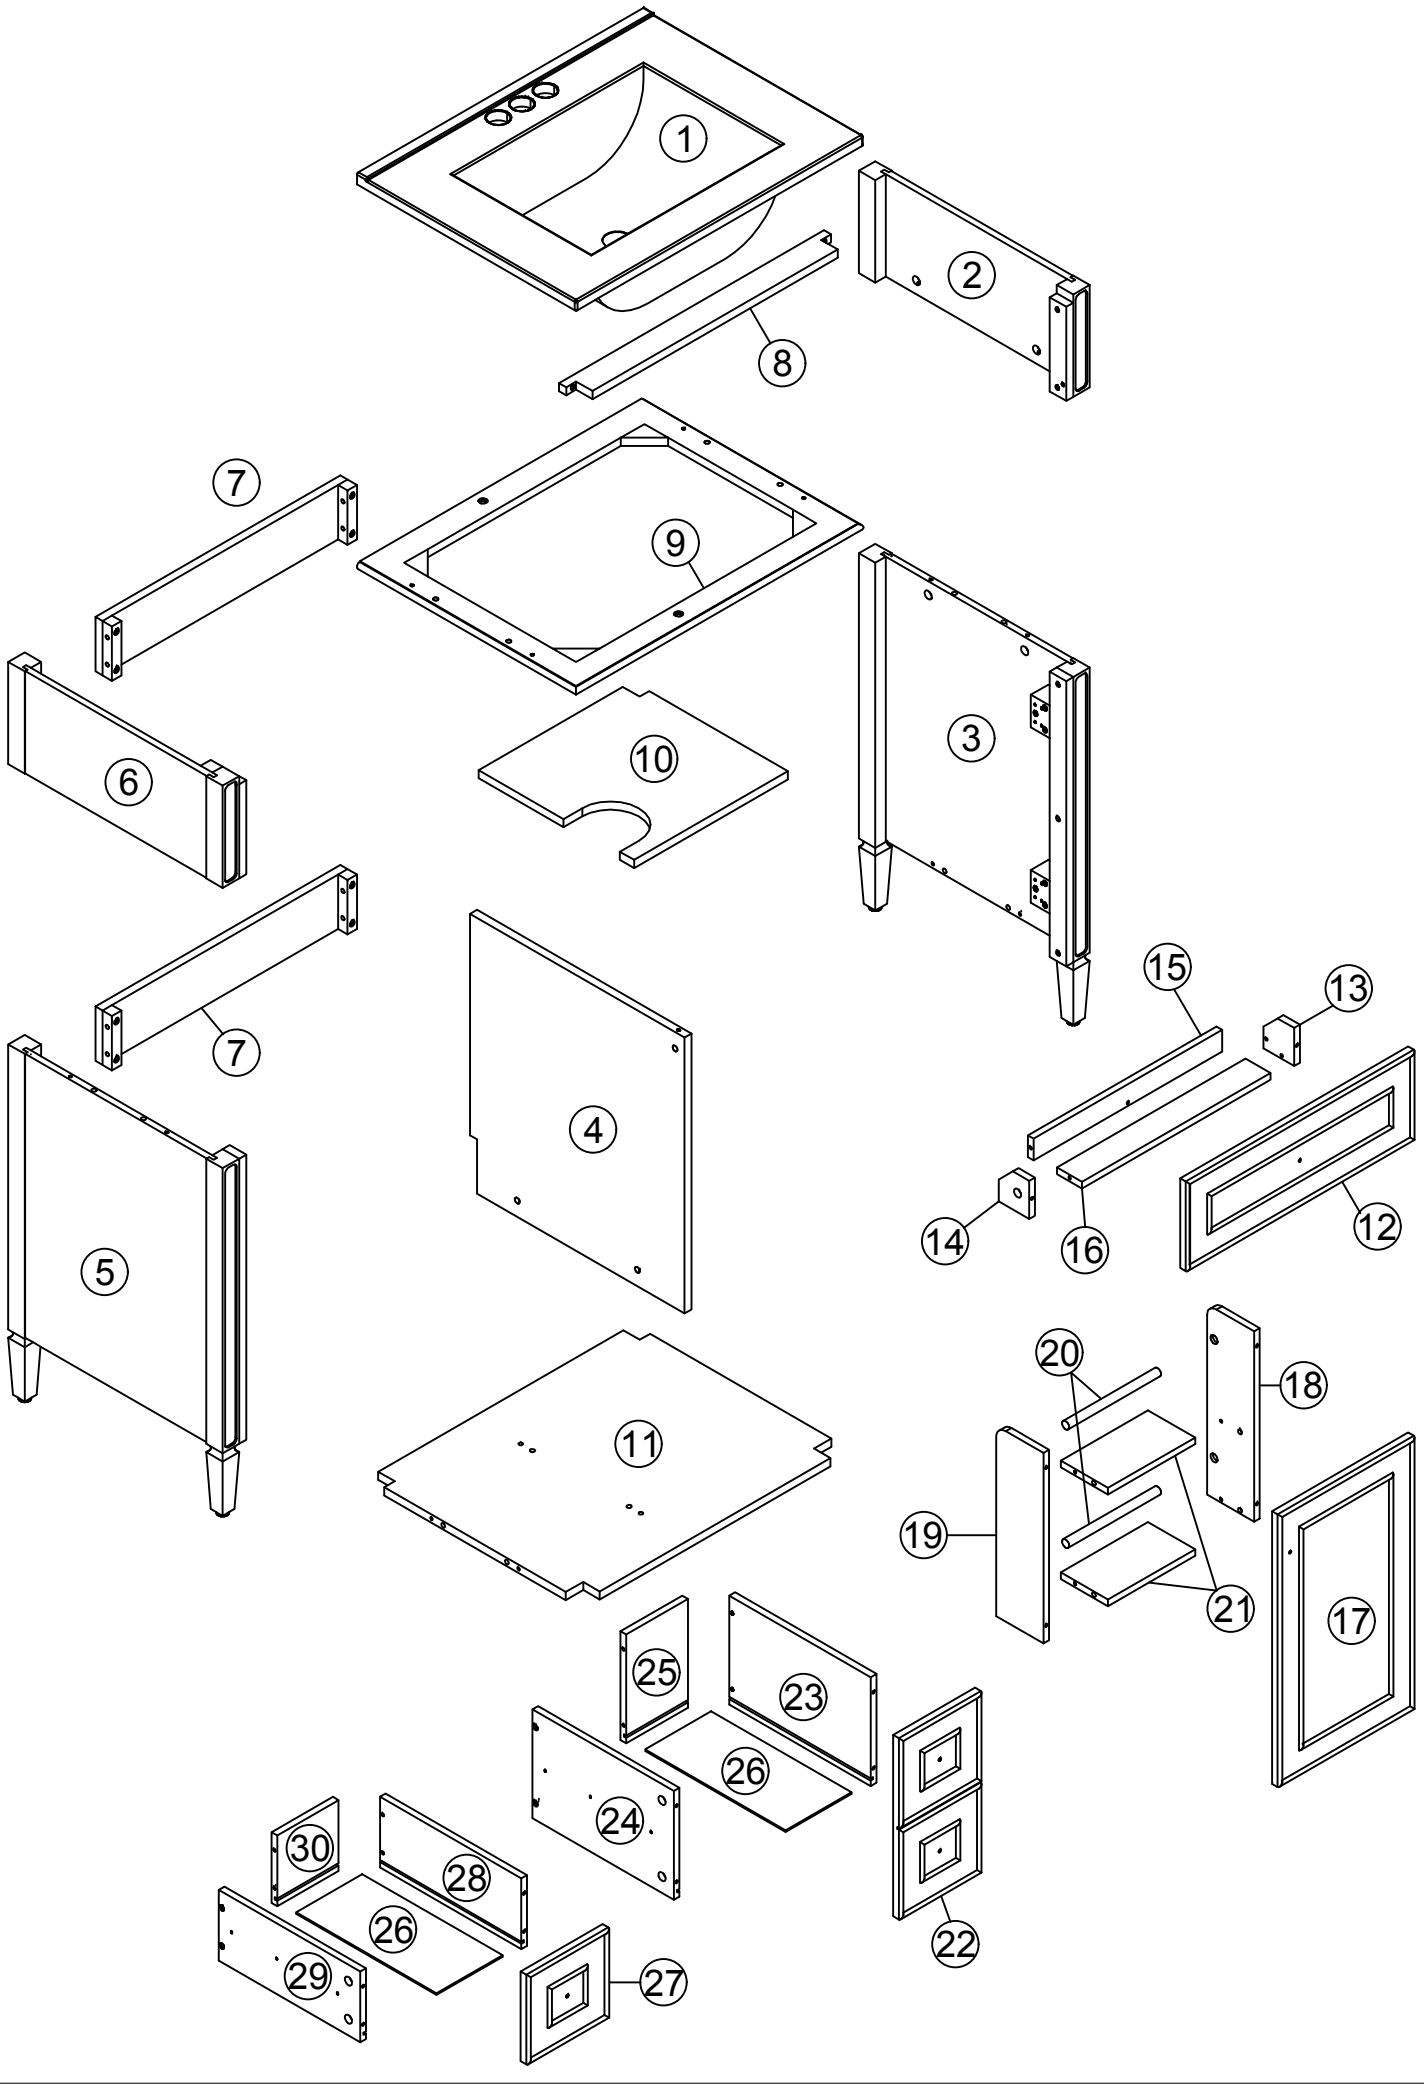


PARTS LIST

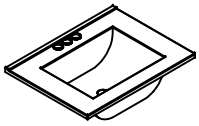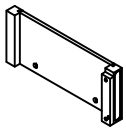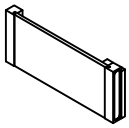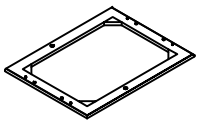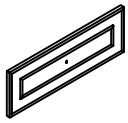
1	SINK (LAVABO)		1PC		
2	RIGHT HIP UP		1PC		
3	LOWER RIGHT HIP		1PC		
4	CENTER BOARD		1PC		
5	LOWER LEFT HIP		1PC		
6	LEFT HIP UP		1PC		
7	BACK HORIZONTAL BAR		2PCS		
8	FRONT HORIZONTAL BAR		1PC		
9	MIDDLE FRAME		1PC		
10	ADJUSTABLE SHELVE		1PC		
11	BOTTOM BOARD		1PC		
12	TOP DRAWER FACE		1PC		
13	RIGHT-TURN TOP DRAWER SIDE		1PC		
14	LEFT-TURN TOP DRAWER SIDE		1PC		
15	BACK BOARD OF FLIP-UP DRAWER		1PC		
				16	FLIP-UP TOP DRAWER BOTTOM
				17	DOOR FACE
				18	RIGHT DOOR SIDE
				19	LEFT DOOR SIDE
				20	ROUND WOODEN DOOR
				21	SHELVES DOORS
				22	DRAWER FACE 1
				23	RIGHT DRAWER SIDE 1
				24	LEFT DRAWER SIDE 1
				25	BACK DRAWER SIDE 1
				26	DRAWER BOTTOM
				27	DRAWER FACE 2
				28	RIGHT DRAWER SIDE 2
				29	LEFT DRAWER SIDE 2
				30	BACK DRAWER SIDE 2

HARDWARE LIST

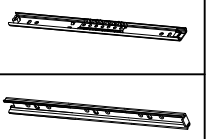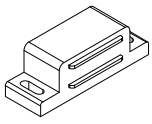
Ⓐ	A1 : D300MM A2 : D300MM		4SETS
Ⓑ	3.5*10MM		24PCS
Ⓒ	Ø 8 * 30MM		18PCS
Ⓓ	Ø5*35MM		35PCS
Ⓔ	Ø 15*10MM		35PCS
Ⓕ	M6*50MM		4SETS
Ⓖ	HINGES		2PCS
Ⓗ	L 45MM		2PCS
Ⓘ	L45MM		2PCS

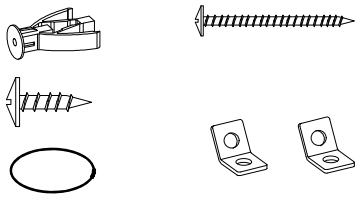
Ⓙ	3.5*12MM		14PCS
Ⓚ	M6*30MM		10PCS
Ⓛ	M4*18MM		5SETS
Ⓜ	M4*50MM		8SETS
Ⓝ	HANDLE		1PC
Ⓞ	L4*58MM		1PC
Ⓟ	L 15MM		6PCS
Ⓠ	3.5*12MM		16PCS
Ⓡ			2SET


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



STEP 1

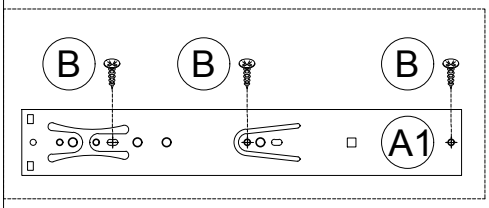


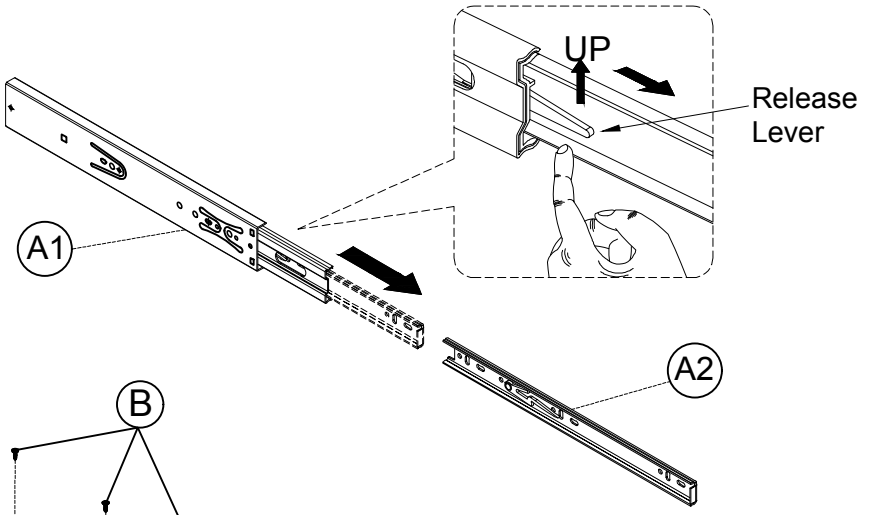


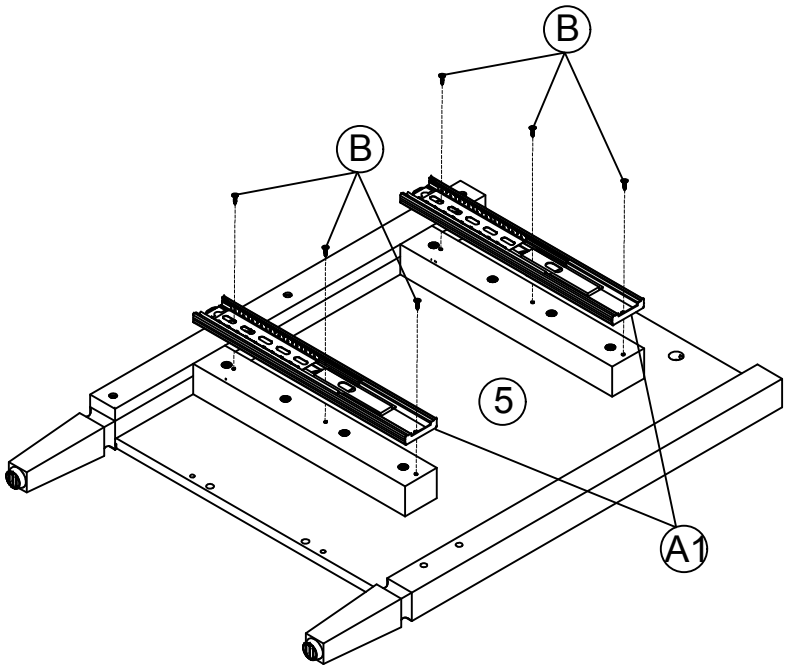

Ⓐ	A1 : D300MM 	2PCS	
Ⓑ	3.5*10MM 	6PCS	


STEP 2

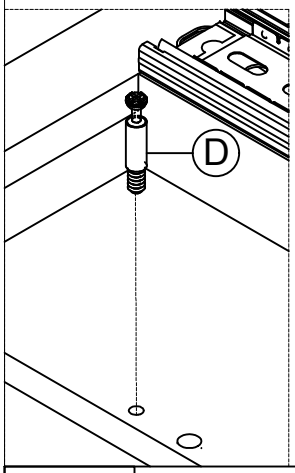

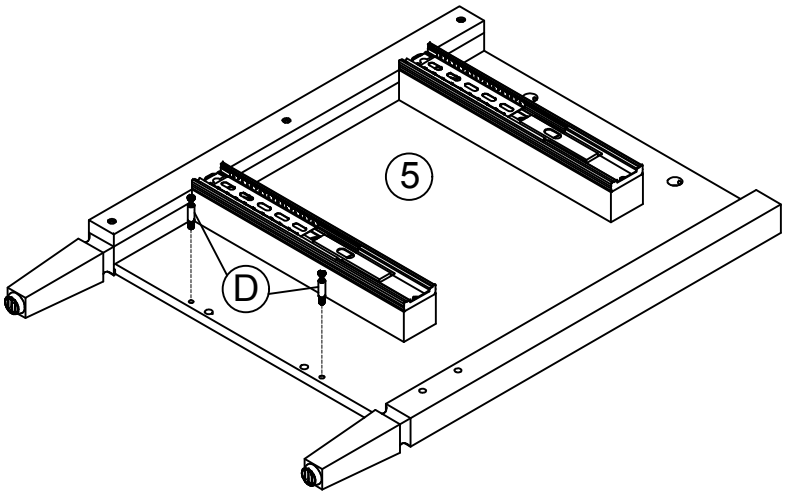


Ⓓ	Ø5*35MM 	2PCS	


STEP 3

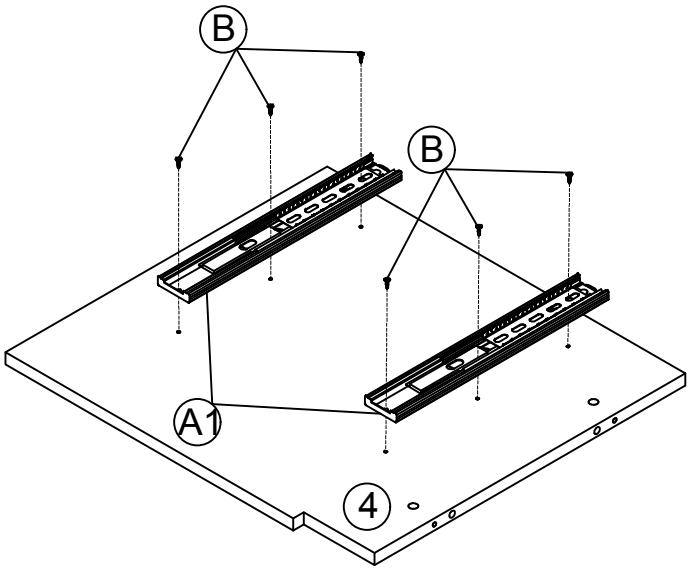


Ⓐ	A1 : D300MM		2PCS	Ⓑ	3.5*10MM		6PCS


STEP 4

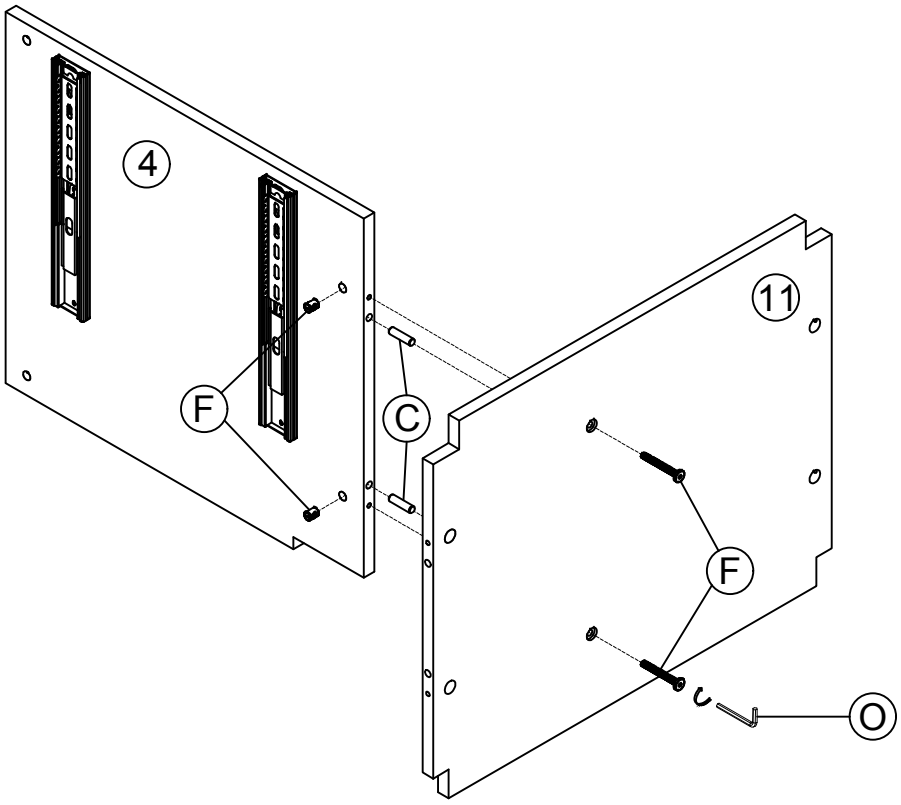

Ⓒ	Ø 8 * 30MM		2PCS				
Ⓕ	M6*50MM		2SET	Ⓞ	L4*58MM		1PC


STEP 5

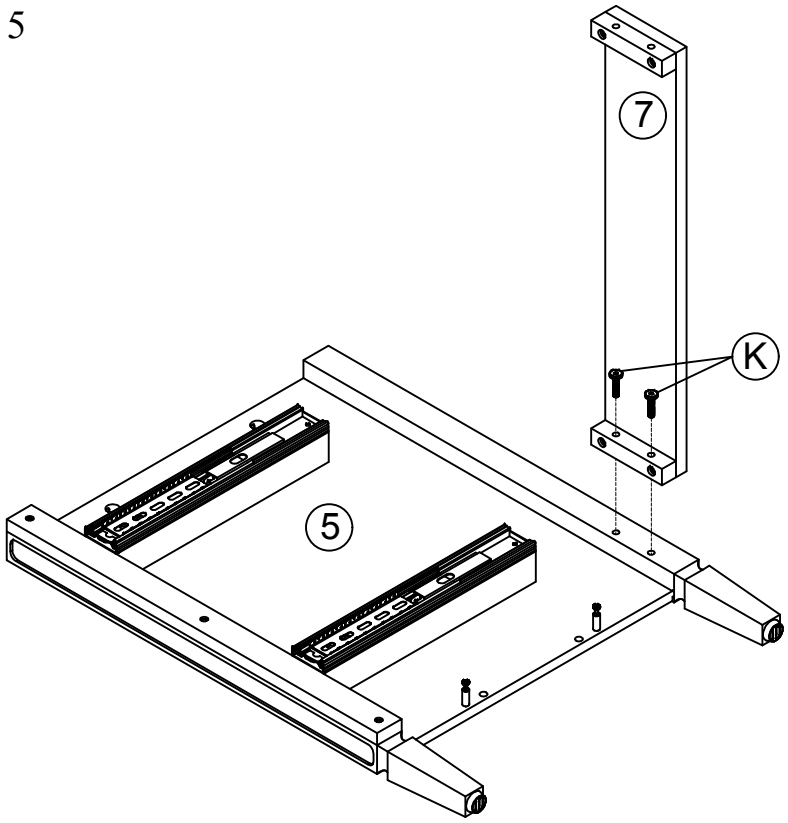


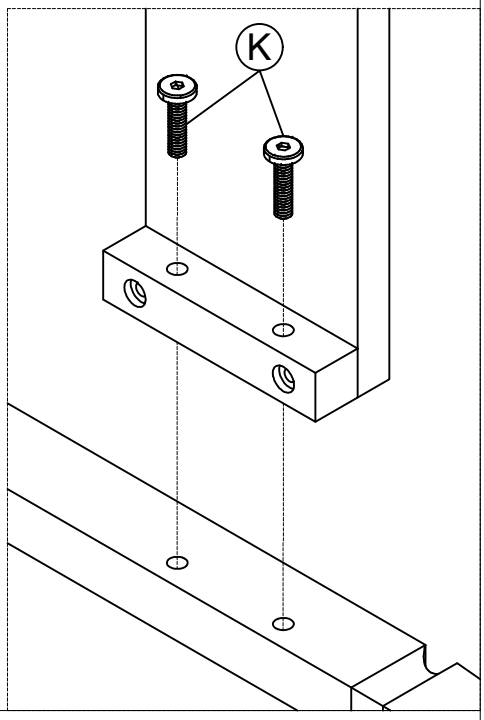

K	M6*30MM		2PCS


STEP 6

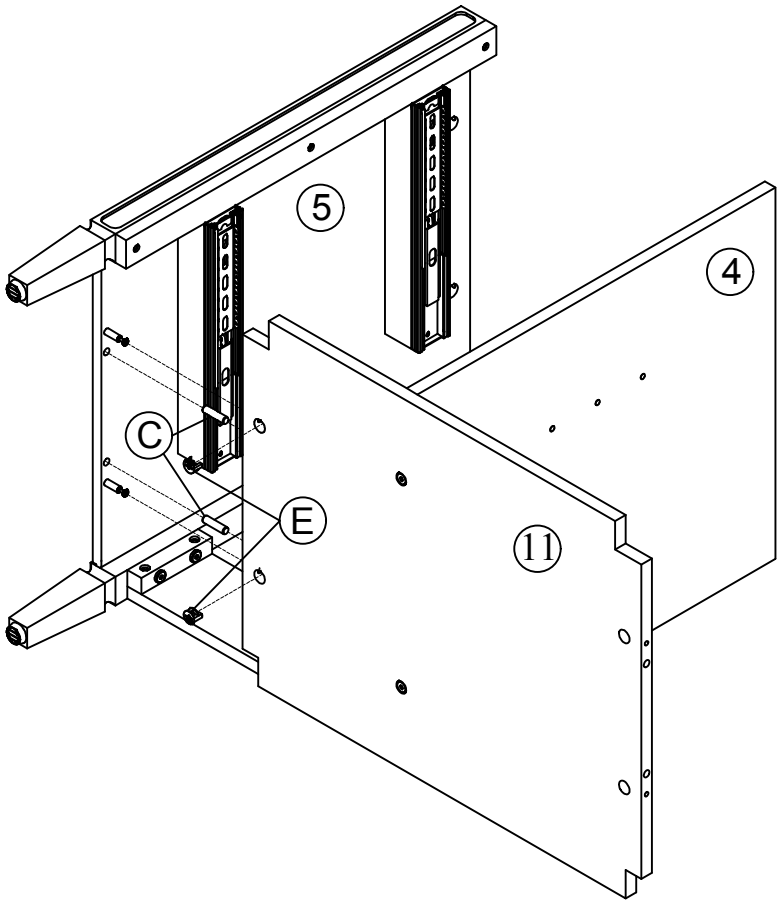



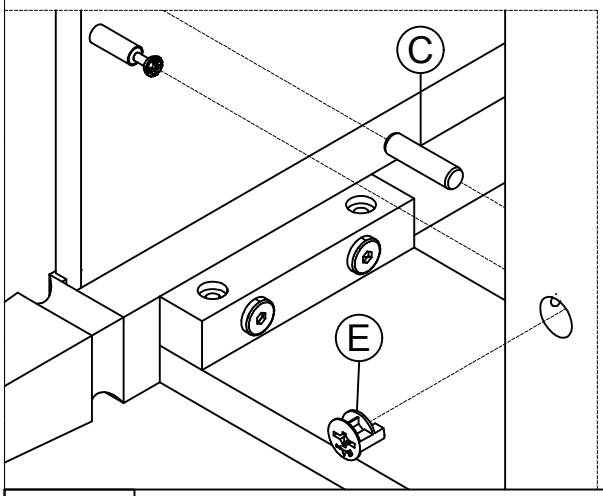


C	Ø 8 * 30MM		2PCS	E	Ø 15*10MM		2PCS

STEP 7

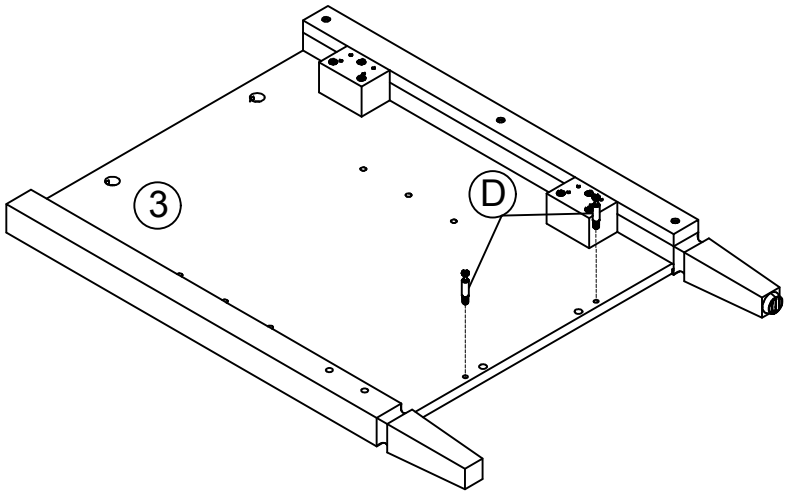


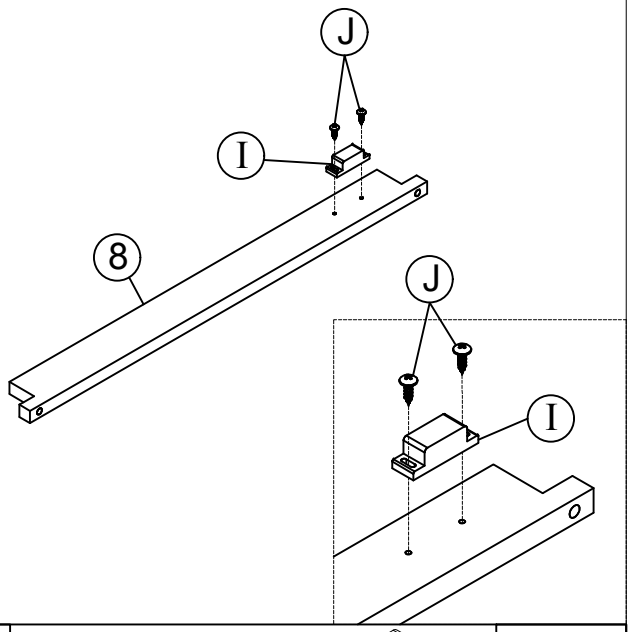


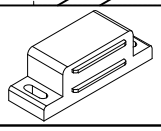Ⓘ	L45MM		1PC
Ⓙ	3.5*12MM		2PCS

Ⓓ	Ø5*35MM		2PCS

STEP 8

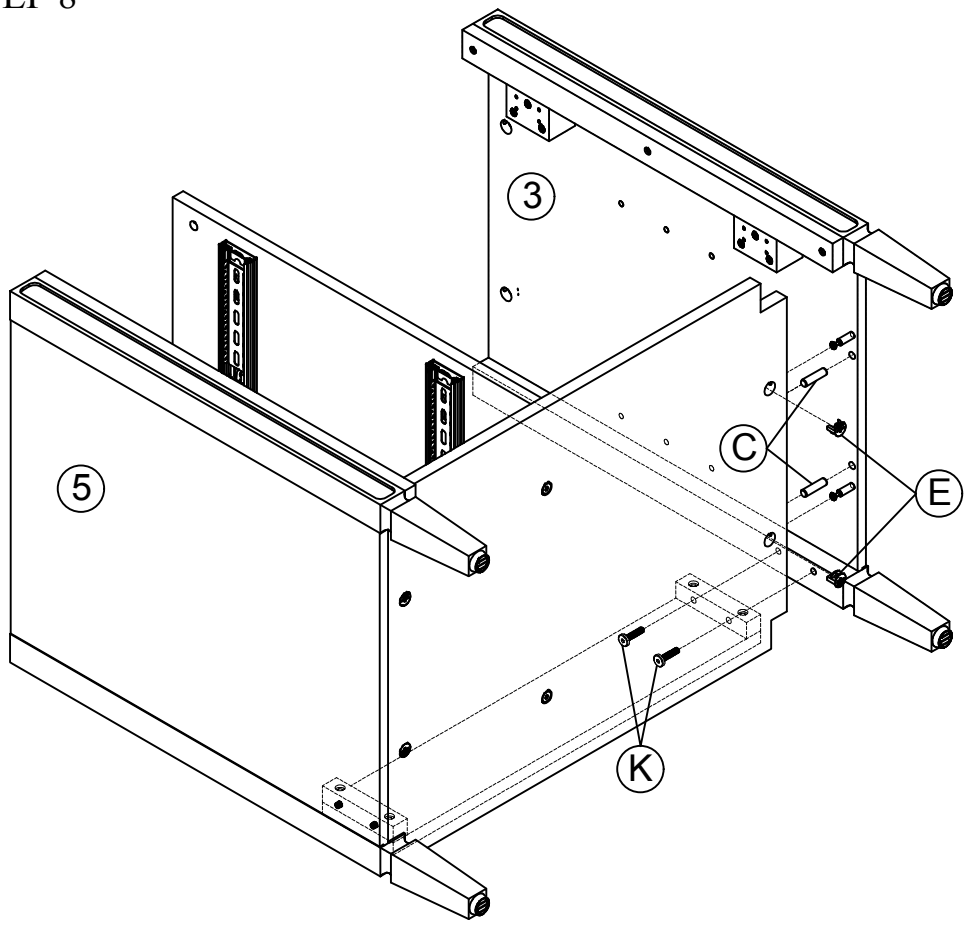



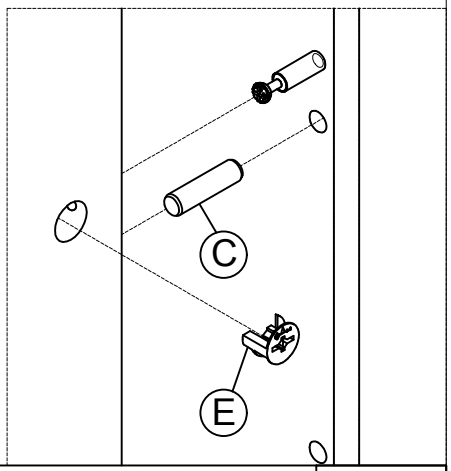


Ⓚ	M6*30MM		2PCS
Ⓔ	Ø 15*10MM		2PCS


Ⓒ	Ø 8 * 30MM		2PCS


STEP 9


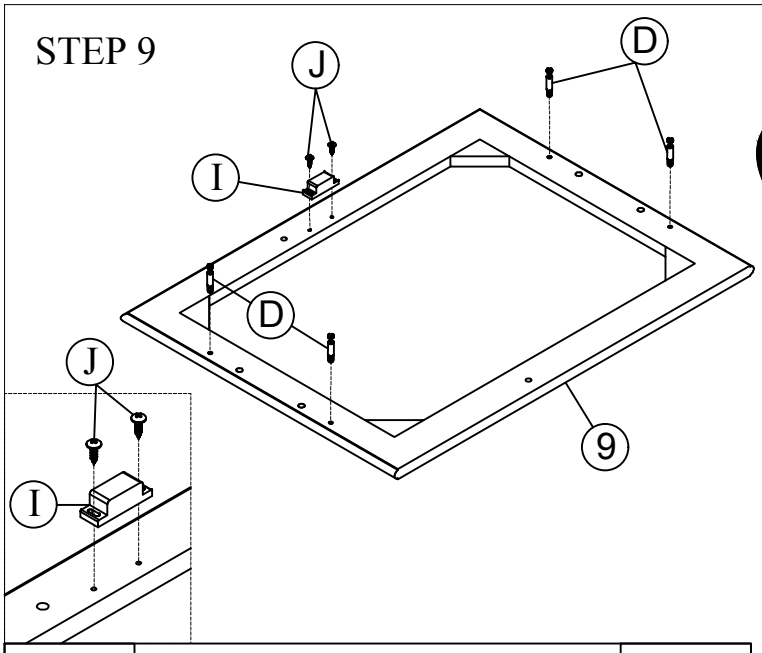


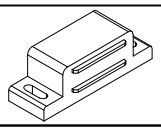Ⓘ	L45MM		1PC
Ⓙ	3.5*12MM		2PCS
Ⓓ	Ø5*35MM		8PCS


STEP 10

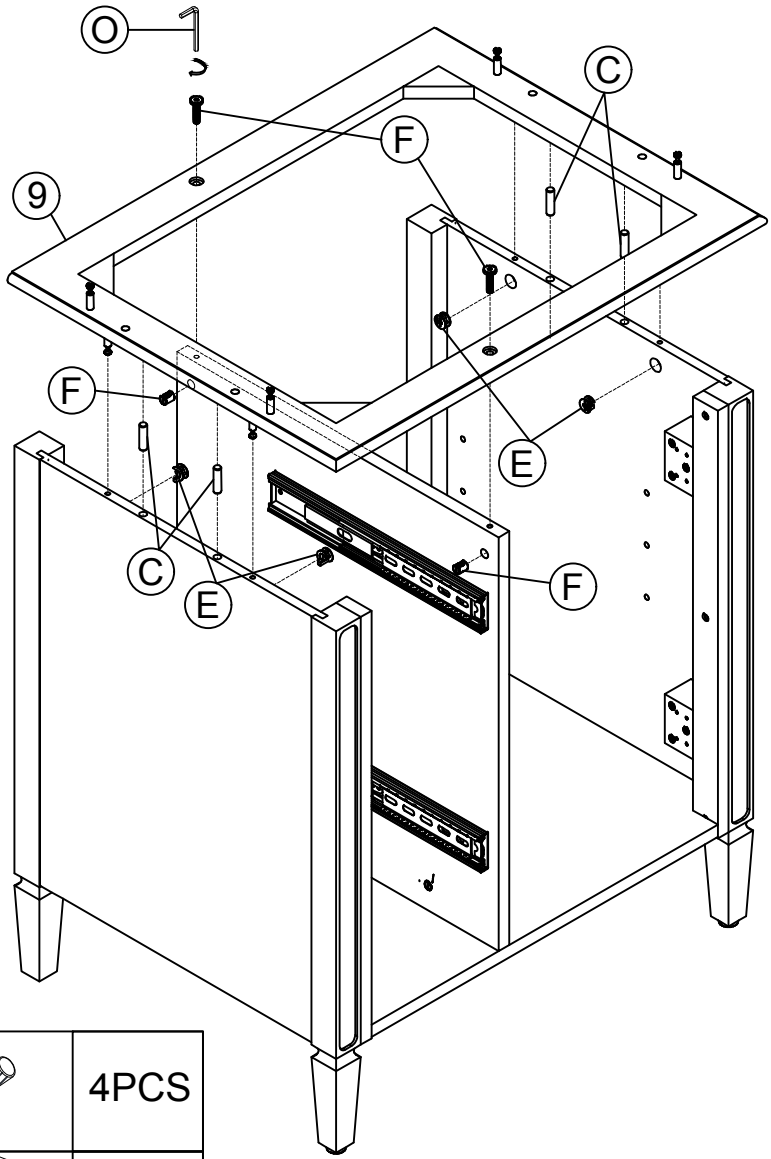


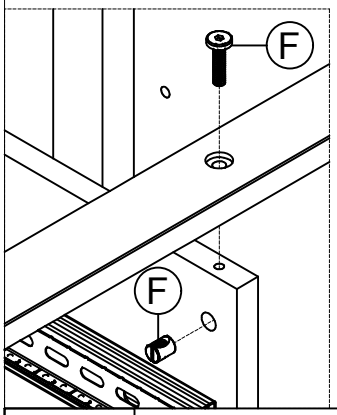

Ⓒ	Ø 8 * 30MM		4PCS
Ⓔ	Ø 15*10MM		4PCS
Ⓕ	M6*50MM		2SET
Ⓞ	L4*58MM		1PC


STEP 11

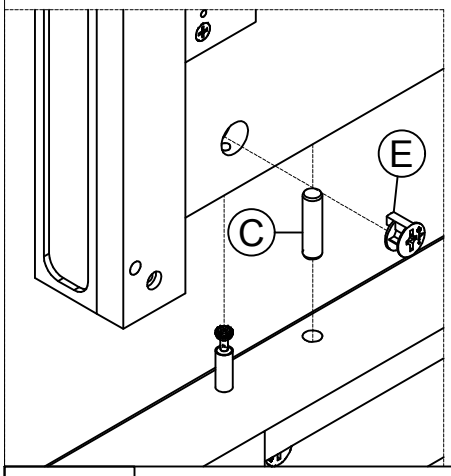


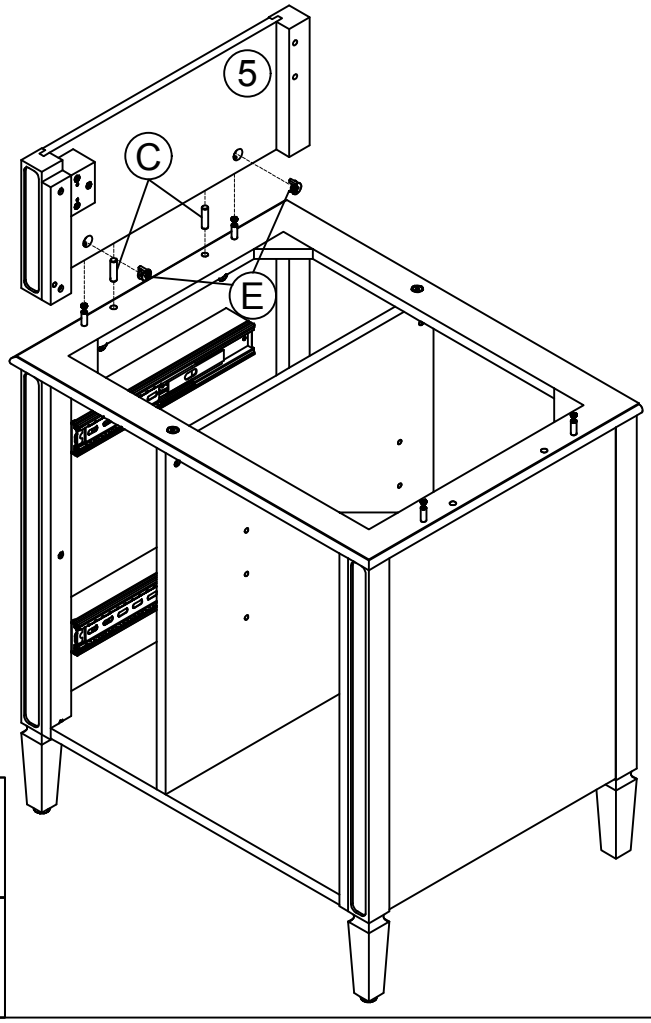


C	Ø 8 * 30MM		2PCS
E	Ø 15*10MM		2PCS


STEP 12

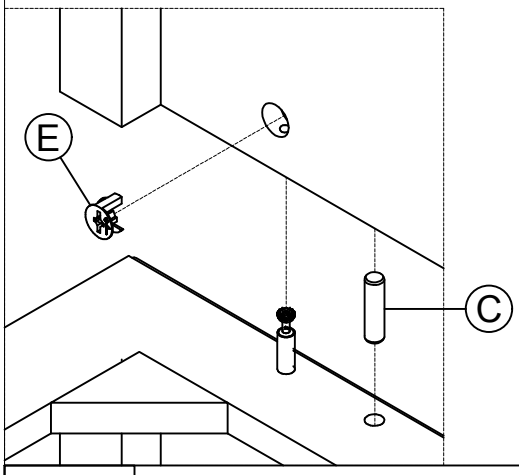


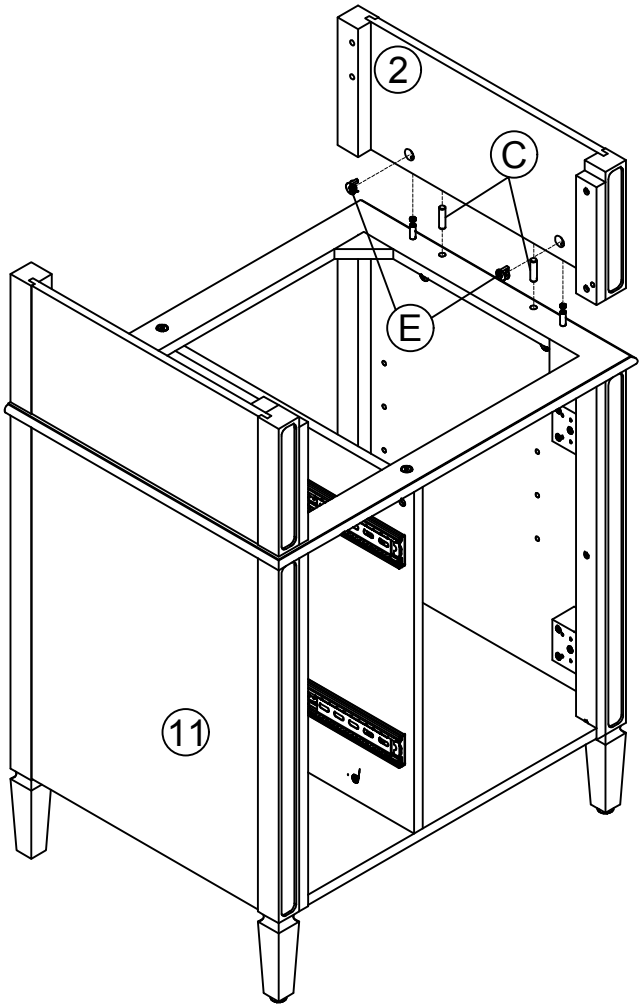


C	Ø 8 * 30MM		2PCS
E	Ø 15*10MM		2PCS

STEP 13

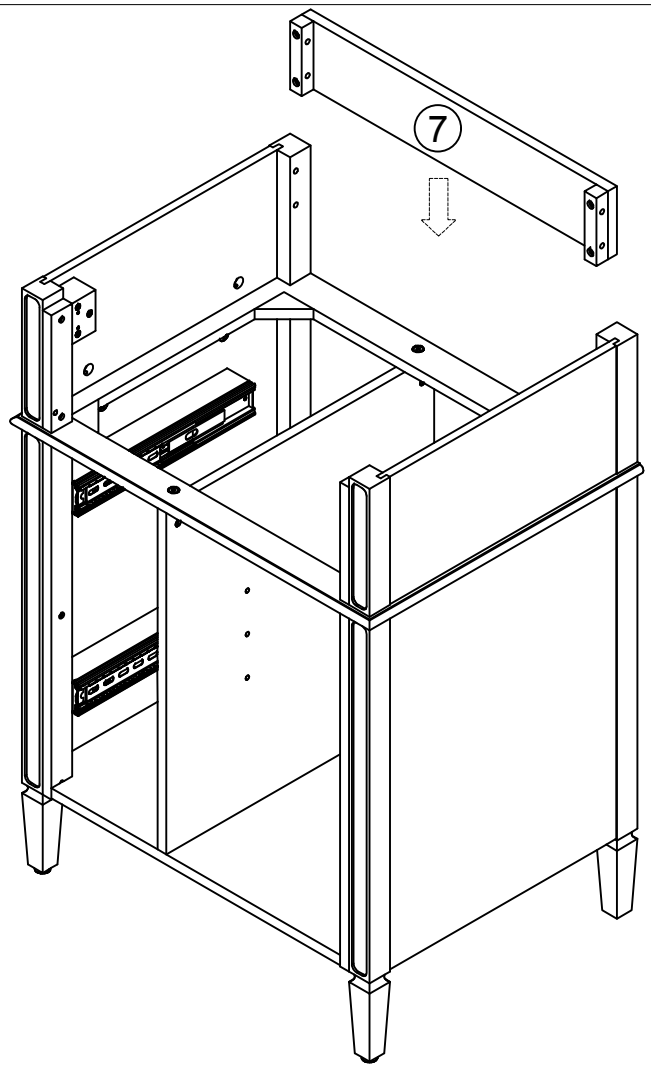


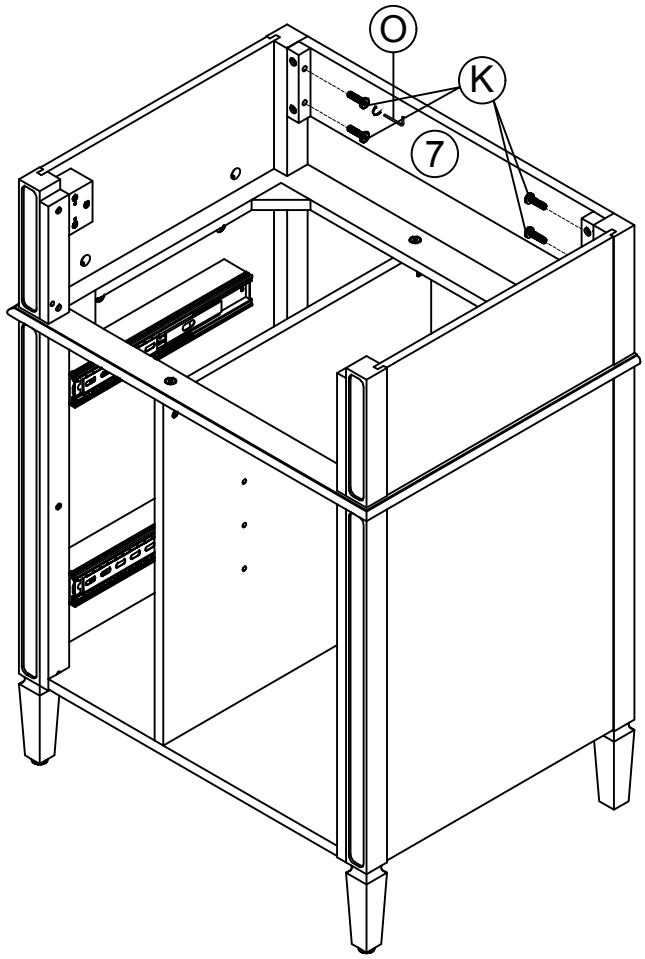

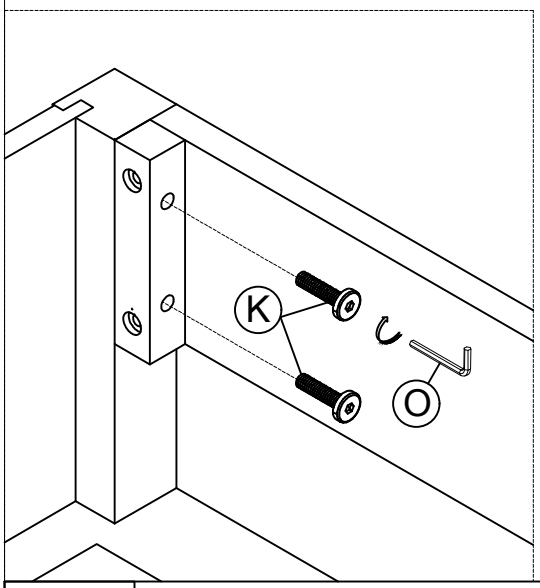

K	M6*30MM		4PCS	O	L4*58MM		1PC


STEP 14

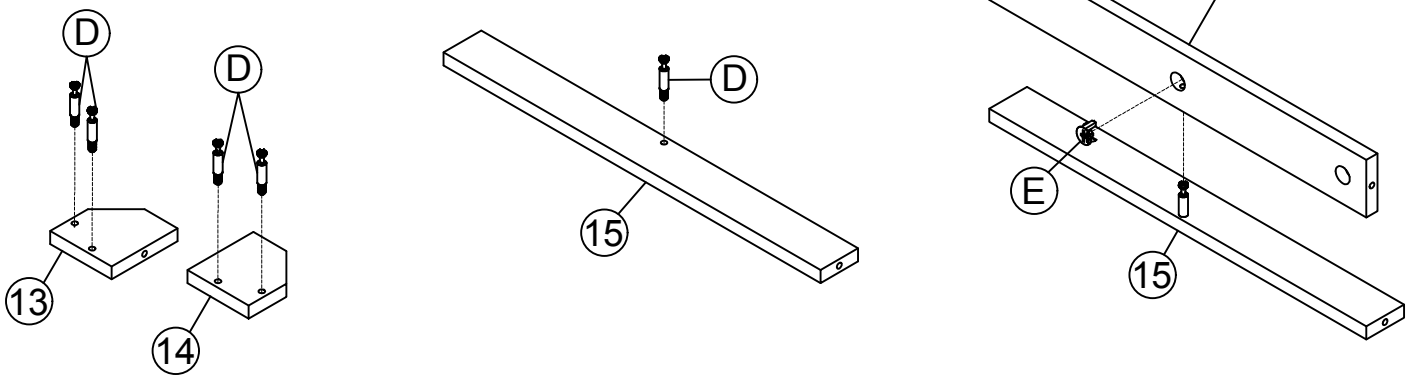


D	Ø5*35MM		5PCS


E	Ø 15*10MM		1PC

STEP 15

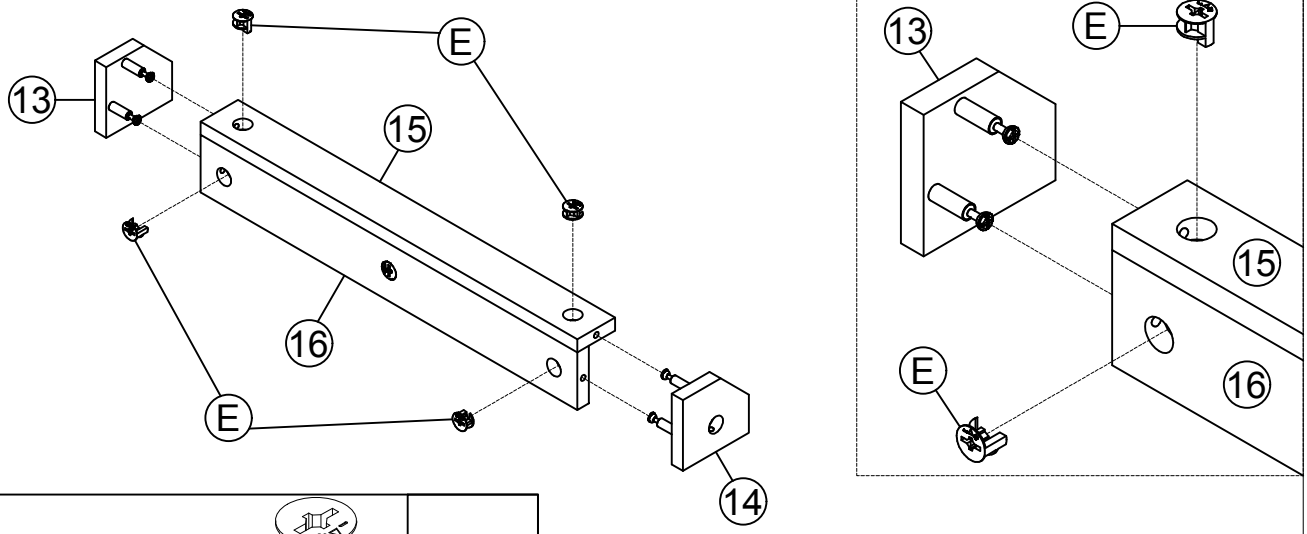


E	Ø 15*10MM		4PCS


STEP 16

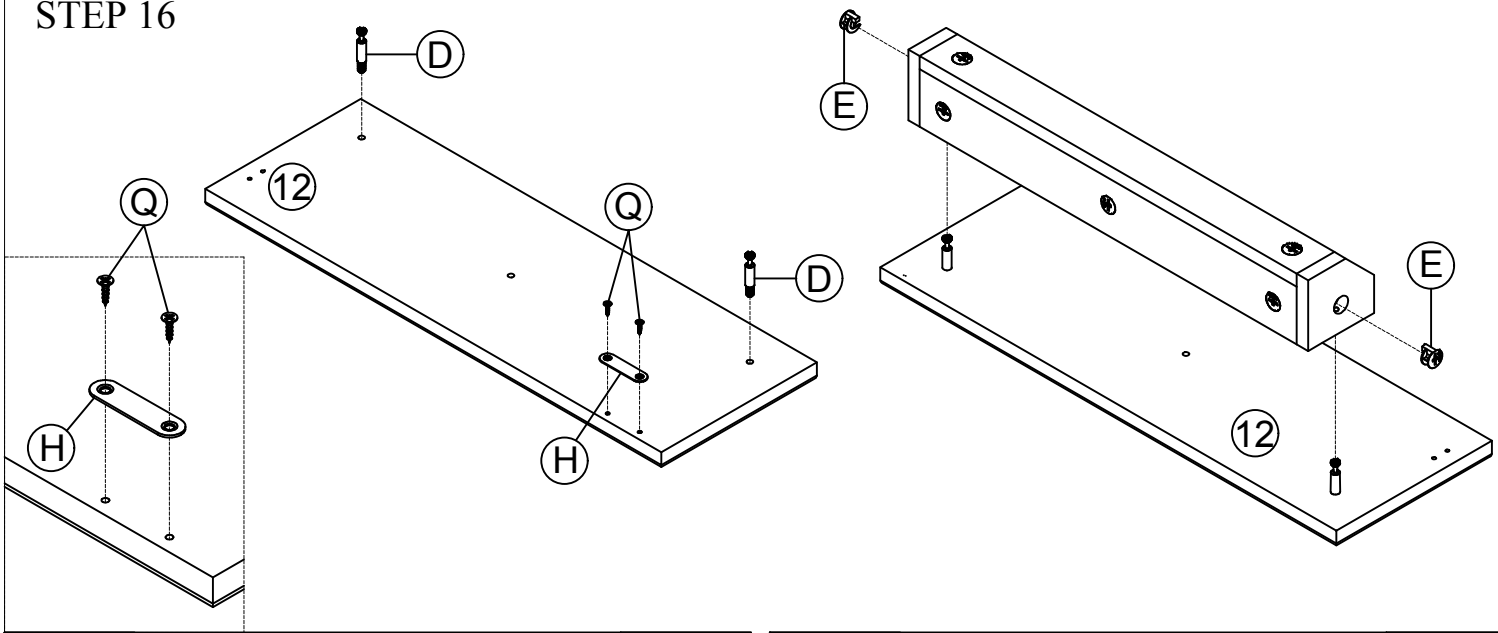



Q	3.5*12MM		2PCS
D	Ø5*35MM		2PCS

E	Ø 15*10MM		2PCS
H	L 45MM		1PC


STEP 17

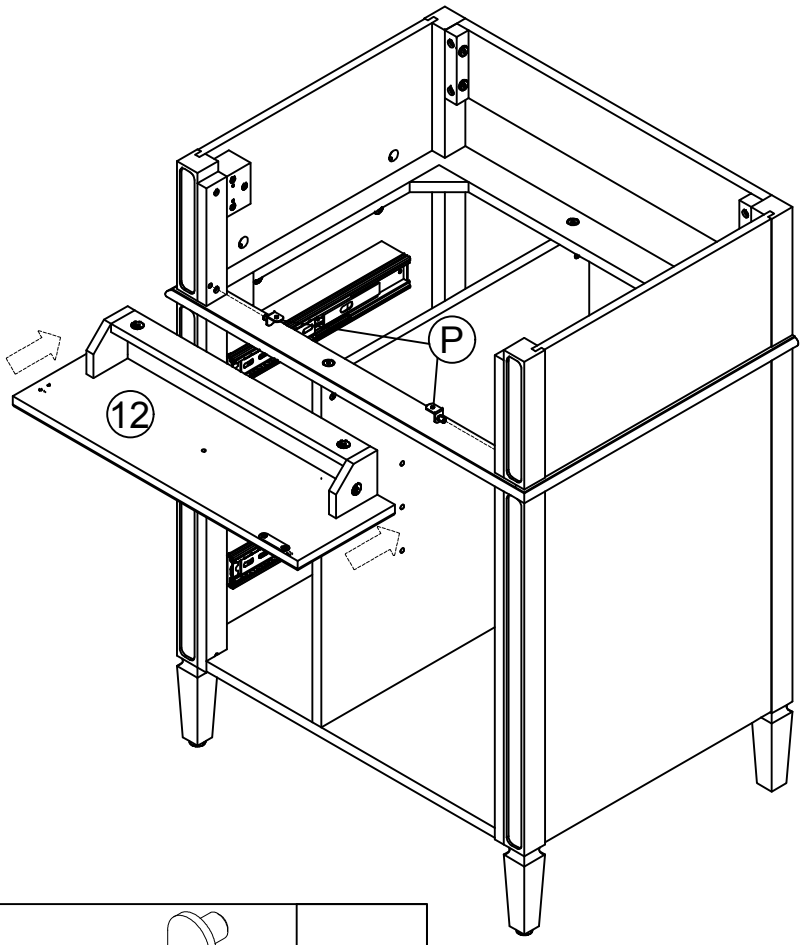


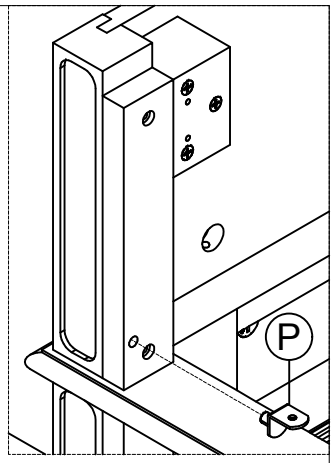

P	L 15MM		2PCS


STEP 18

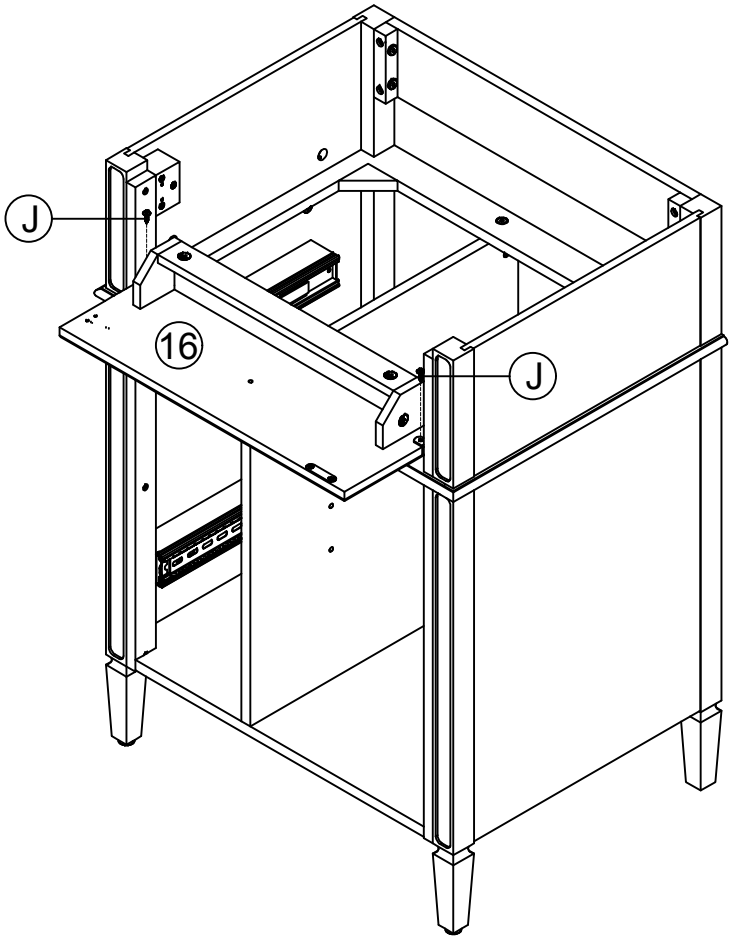


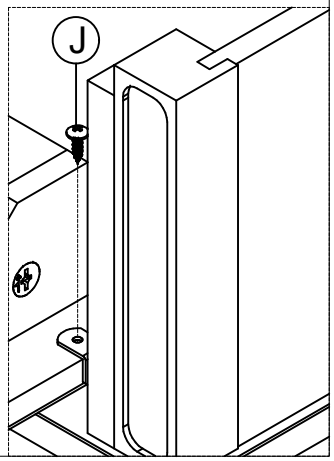


J	3.5*12MM		2PCS


STEP 19

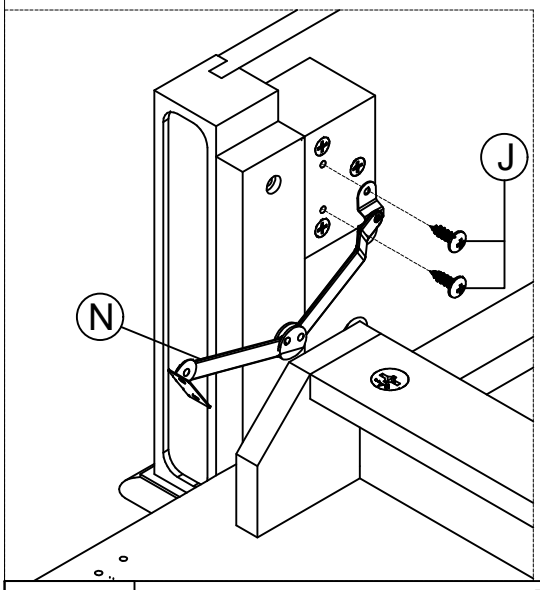


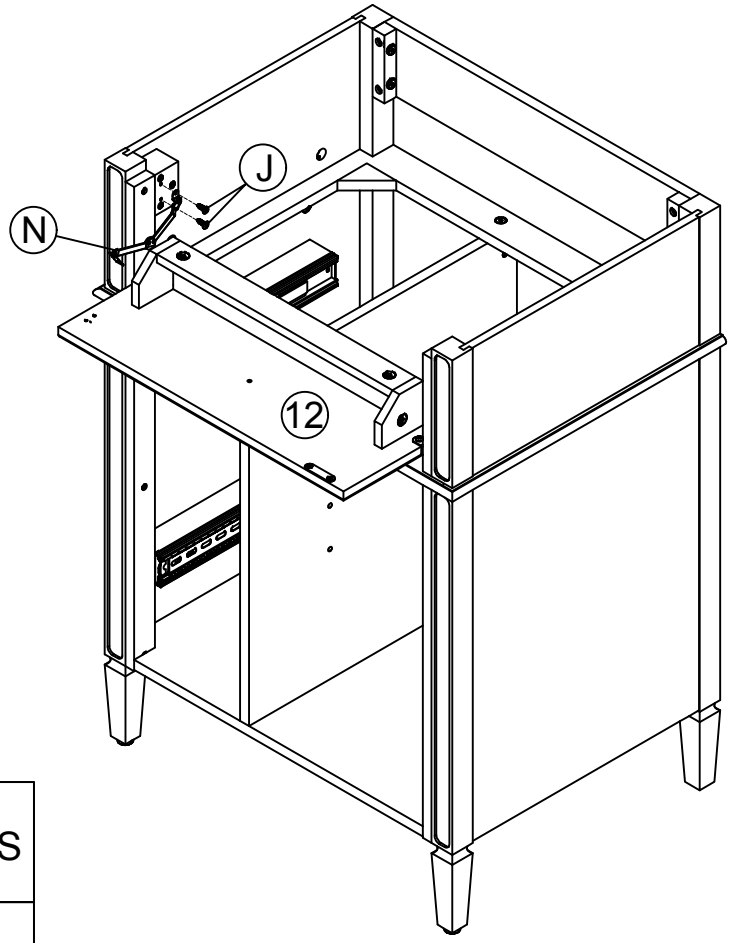

J	3.5*12MM		2PCS
N	HANDLE		1PC


STEP 20

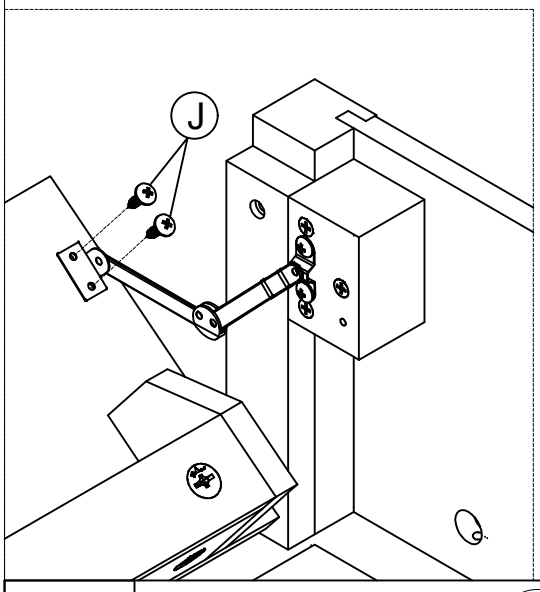


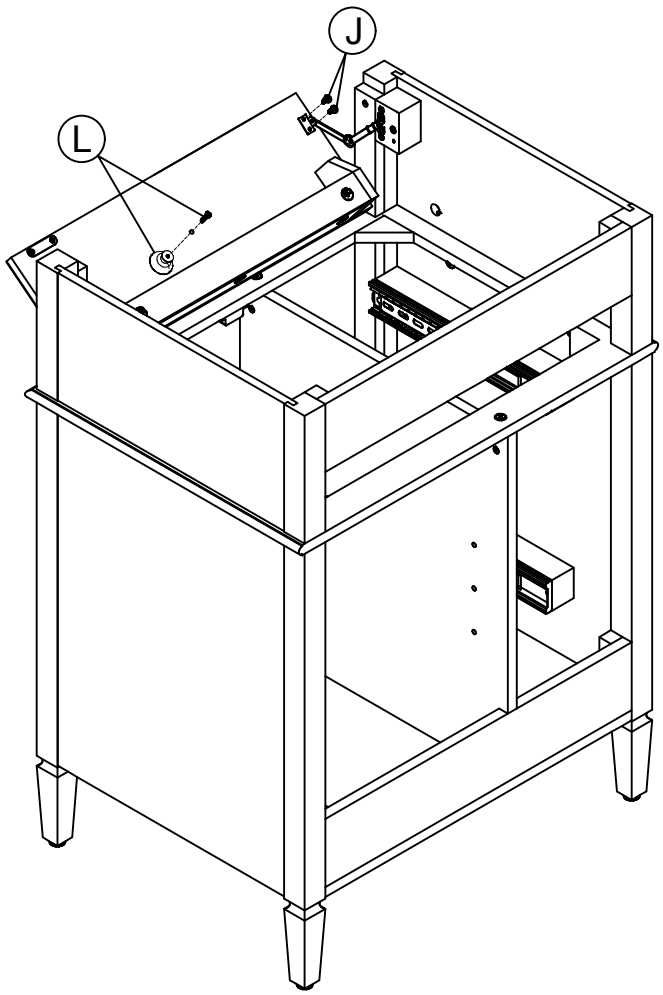

J	3.5*12MM		2PCS
L	M4*18MM		1SET


STEP 21

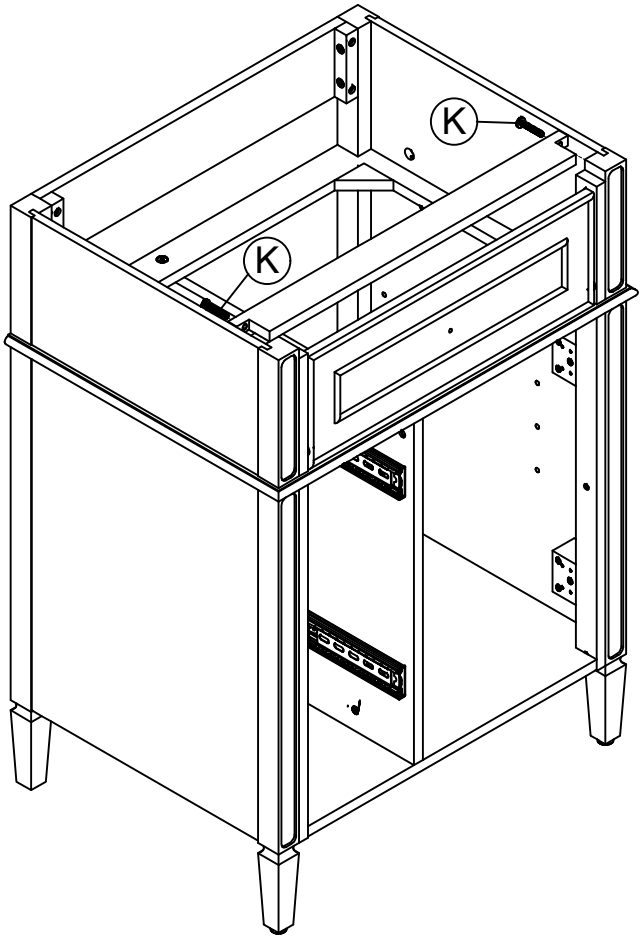


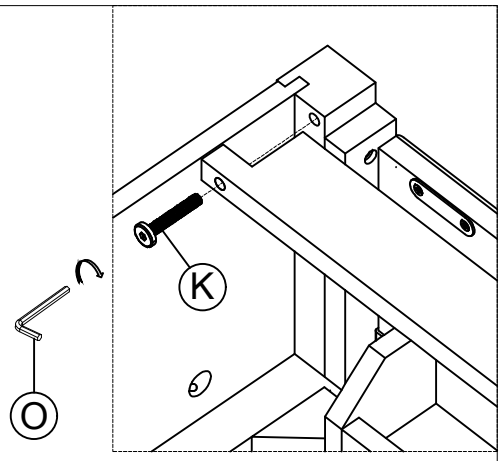

K	M6*30MM	2PCS	O	L4*58MM	1PC


STEP 22

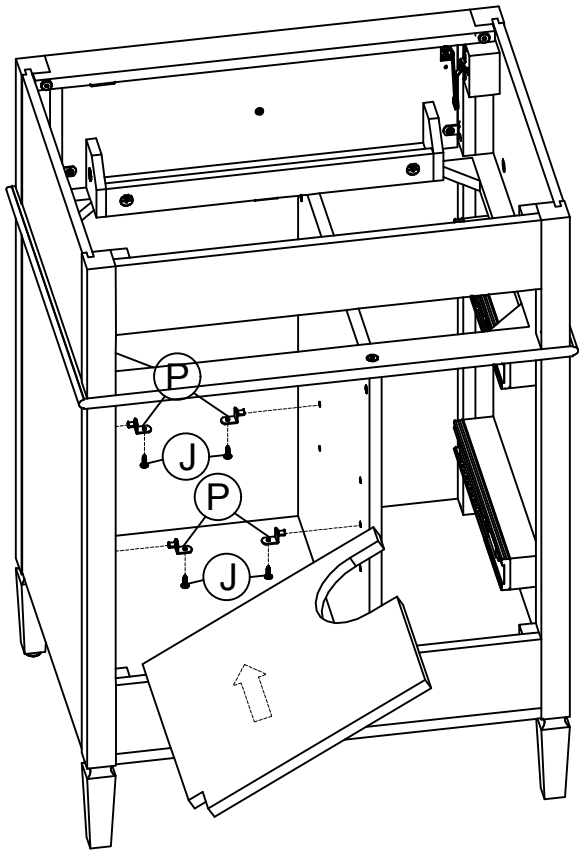


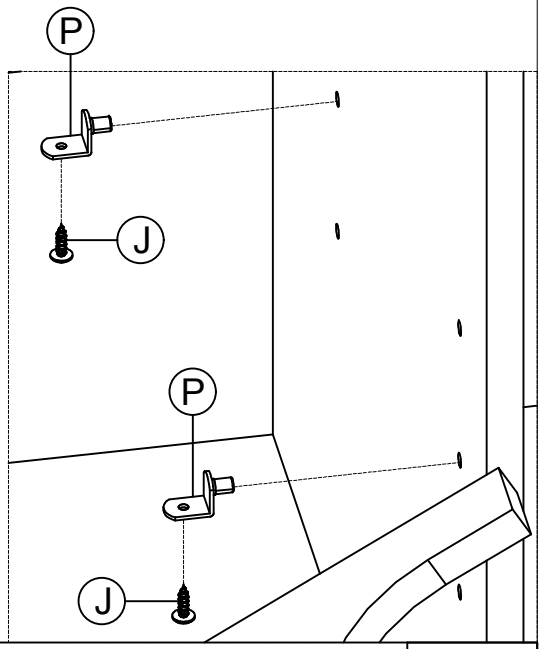


J	3.5*12MM	4PCS	P	L 15MM	4PCS


STEP 23

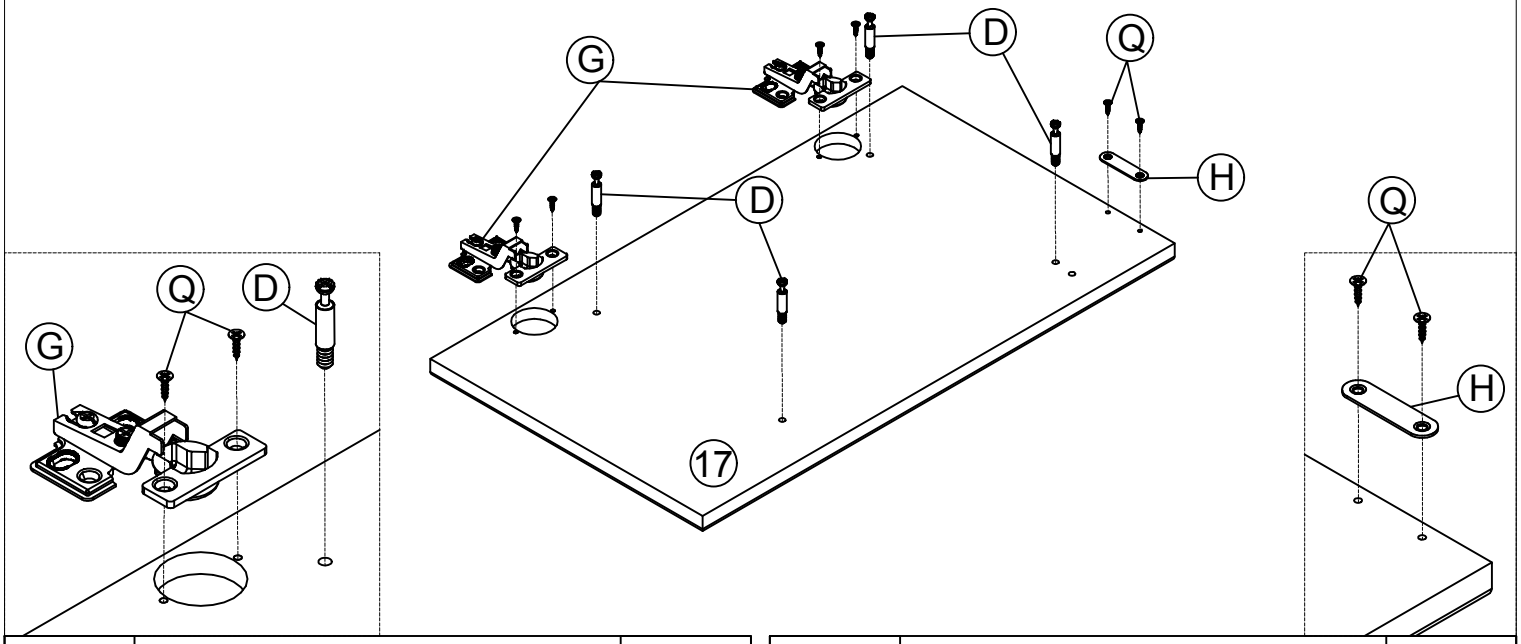

Q	3.5*12MM		6PCS
D	Ø5*35MM		4PCS

G	HINGES		2PCS
H	L 45MM		1PC


STEP 24

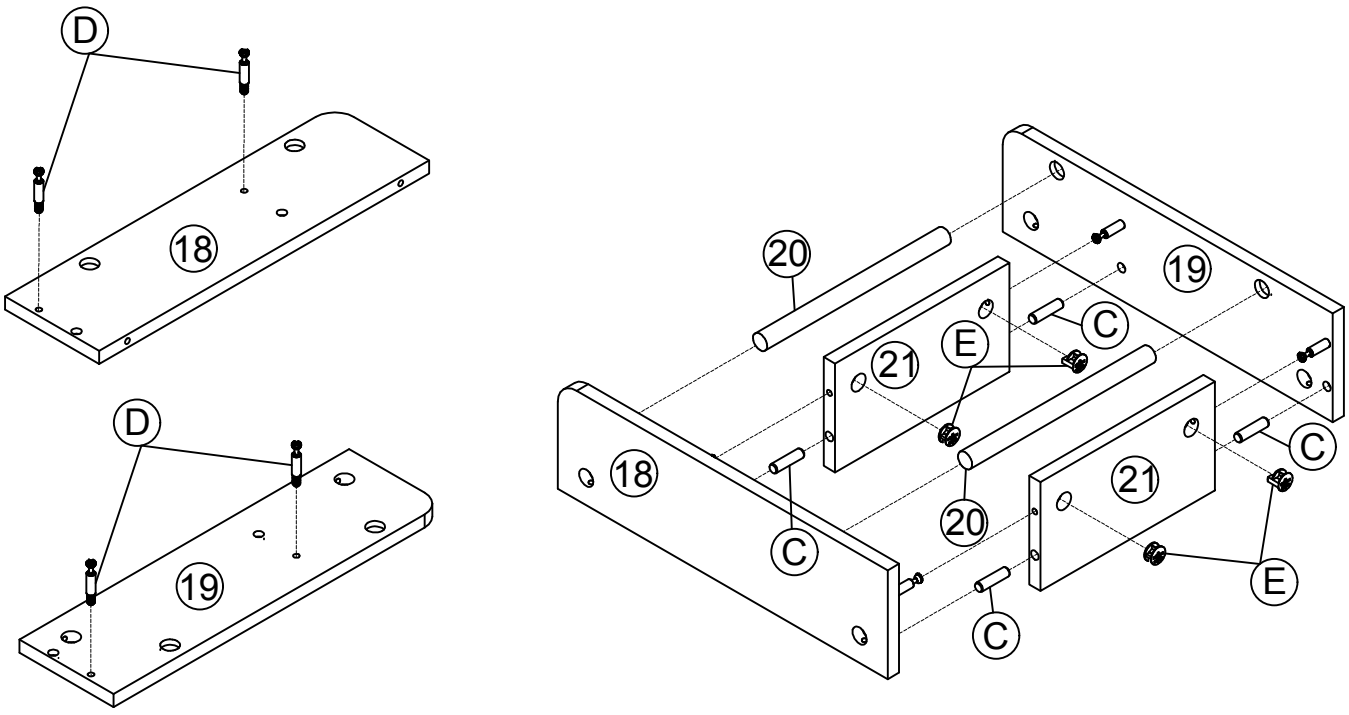

C	Ø 8 * 30MM		4PCS
D	Ø5*35MM		4PCS

E	Ø 15*10MM		4PCS


STEP 25

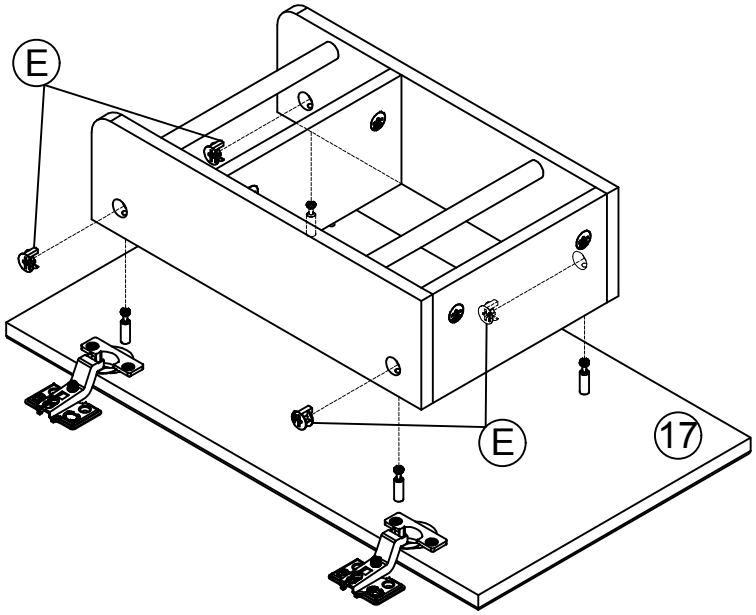



E	Ø 15*10MM		4PCS


STEP 26


Three-way adjustable hinge for perfectly aligned doors
1.TO ADJUST DOOR FORWARD OR BACKWARD.
2.TO ADJUST DOOR TO RIGHT ORTO LEFT.
3.TO ADJUST DOOR UP OR DOWN.

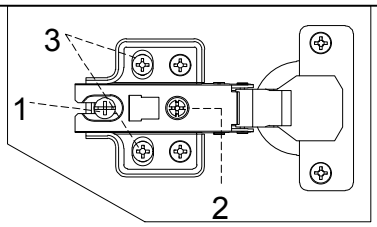


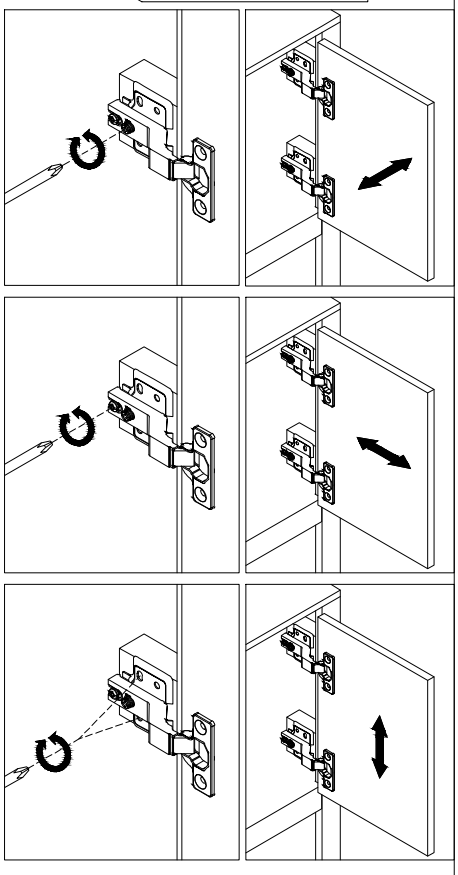

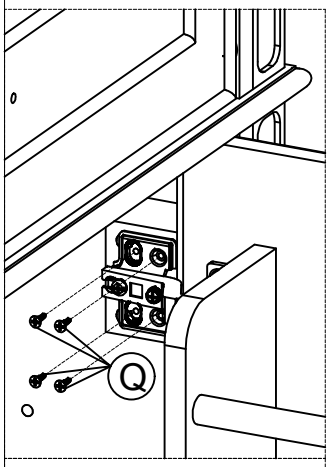


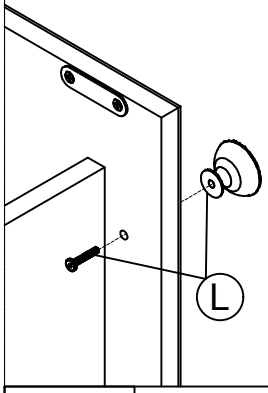


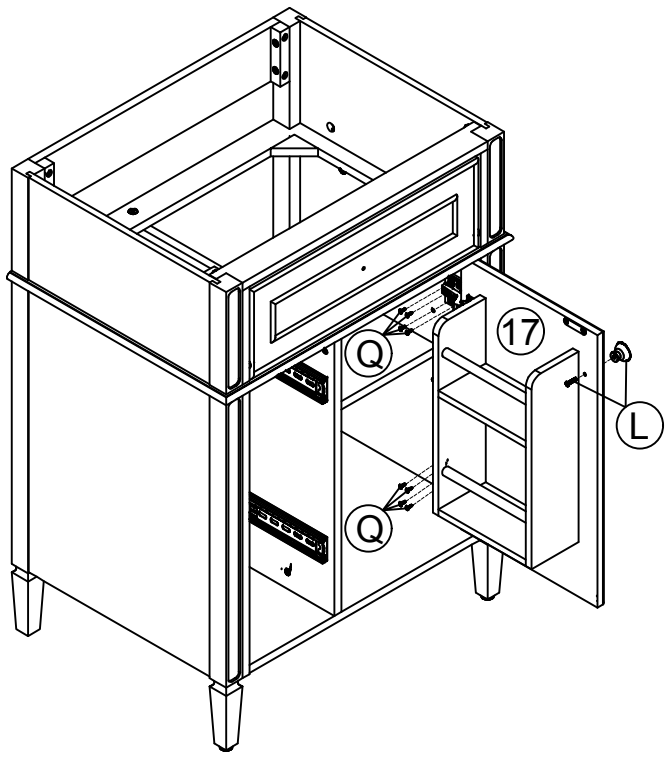


Q	3.5*12MM		8PCS	L	M4*18MM	 1SET

STEP 27

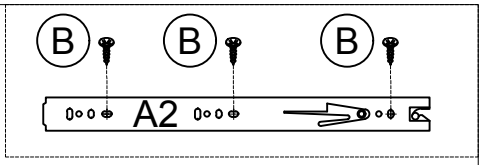

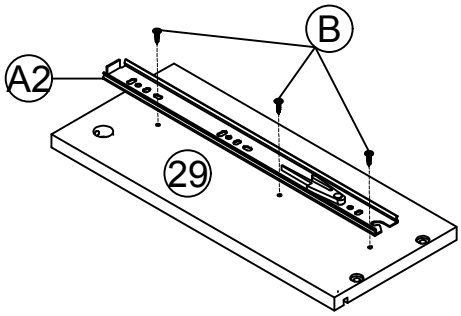


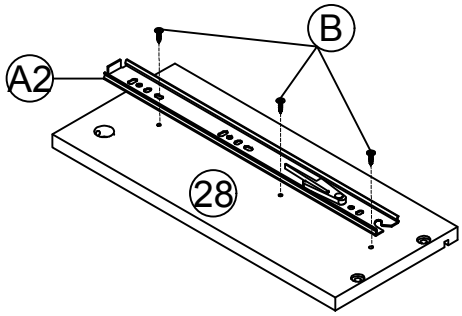


B	3.5*10MM		6PCS


A	A2 : D300MM		2PCS

STEP 28

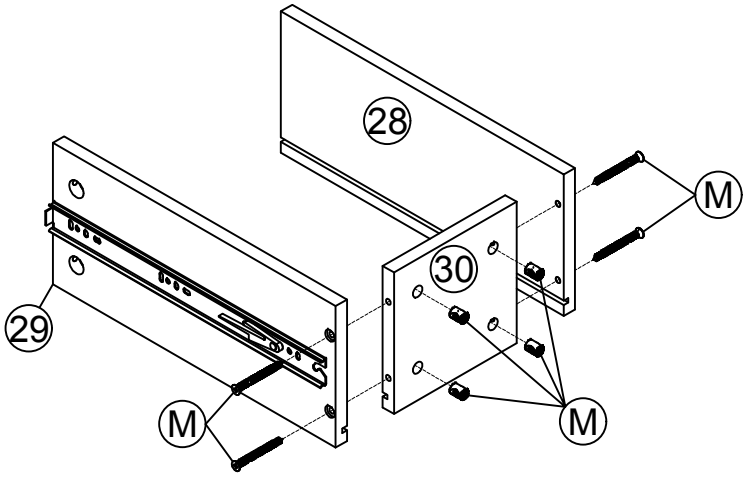


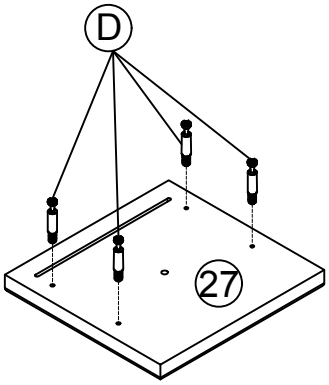

D	Ø5*35MM		4PCS


M	M4*50MM		4SETS


STEP 29

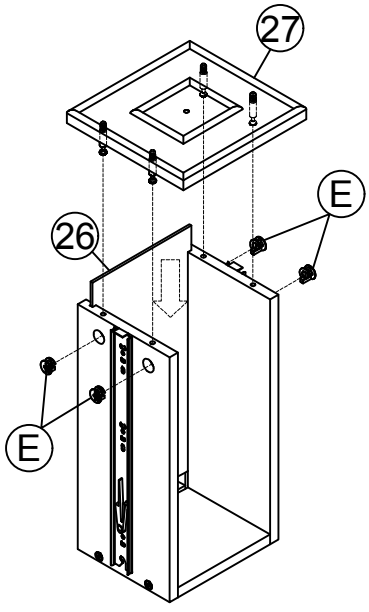


E	Ø 15*10MM		4PCS

STEP 30

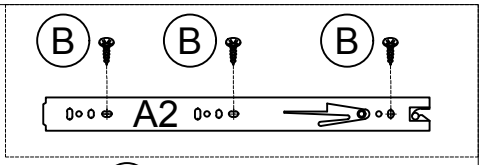

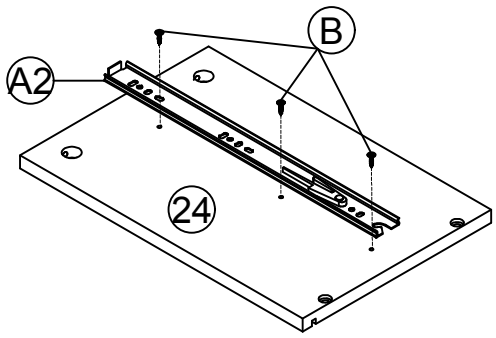


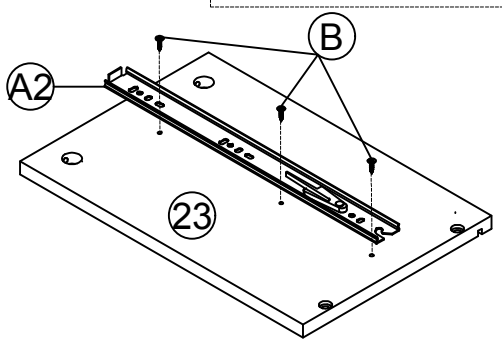


B	3.5*10MM		6PCS


A	A2 : D300MM		2PCS

STEP 31

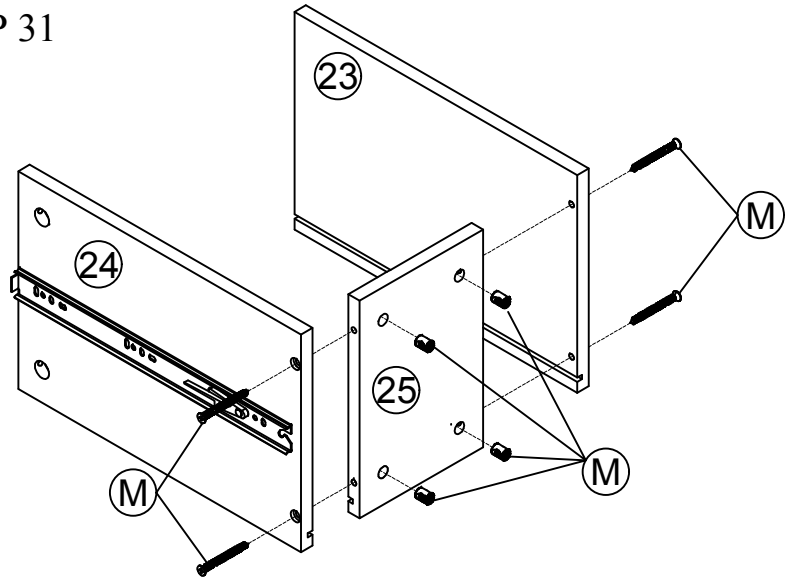


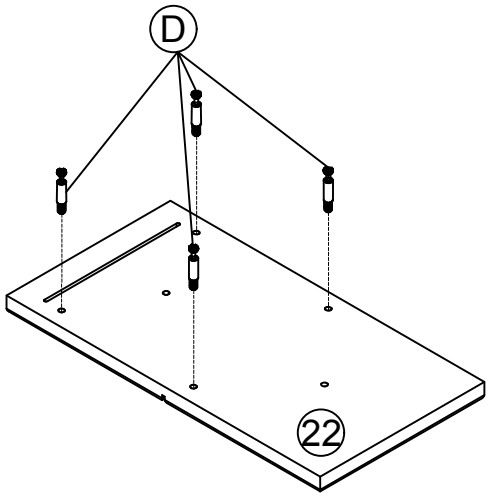

D	Ø5*35MM		4PCS


M	M4*50MM		4SETS


STEP 32

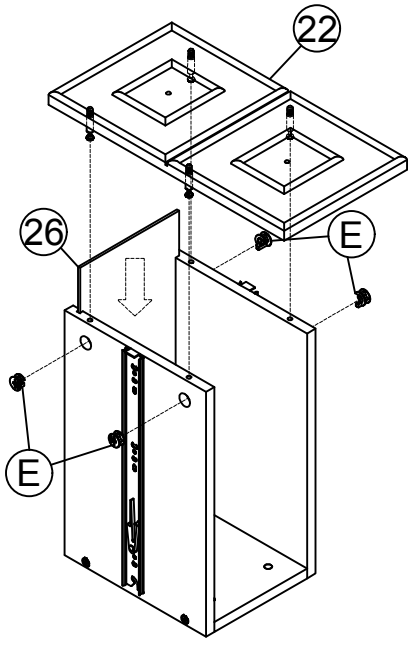



E	Ø 15*10MM		4PCS

STEP 33

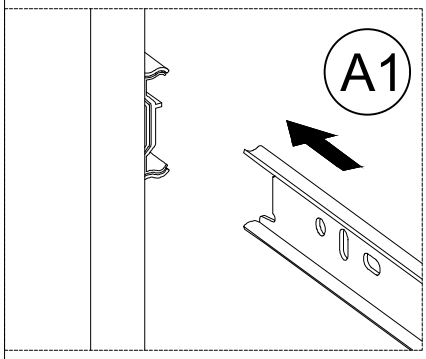


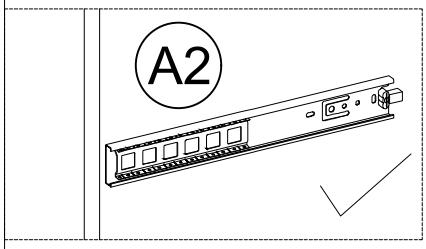

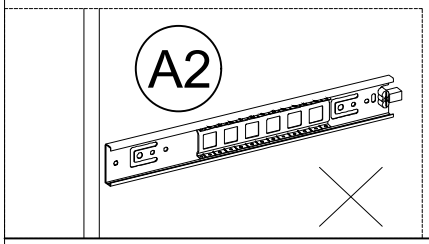

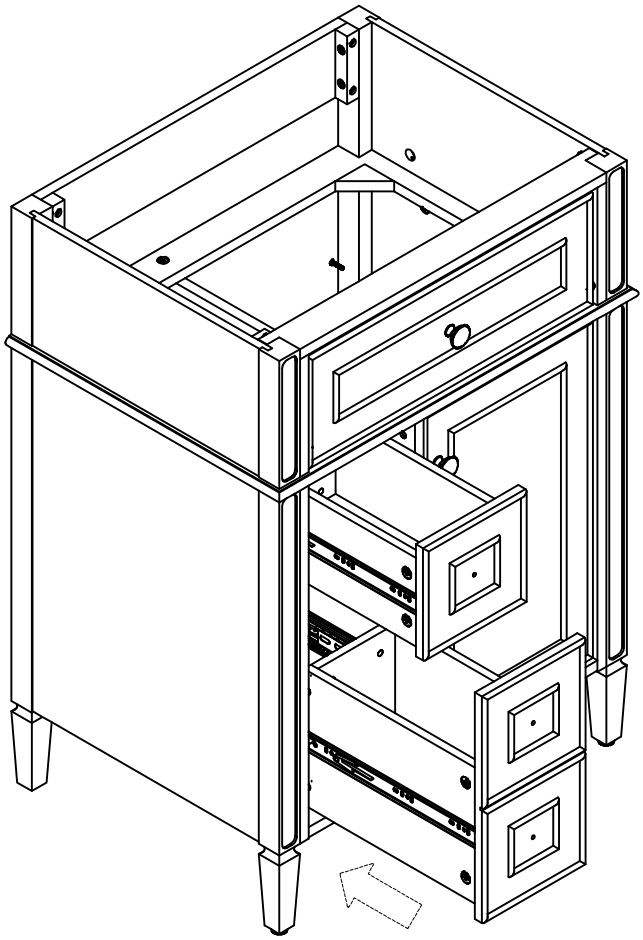


STEP 34

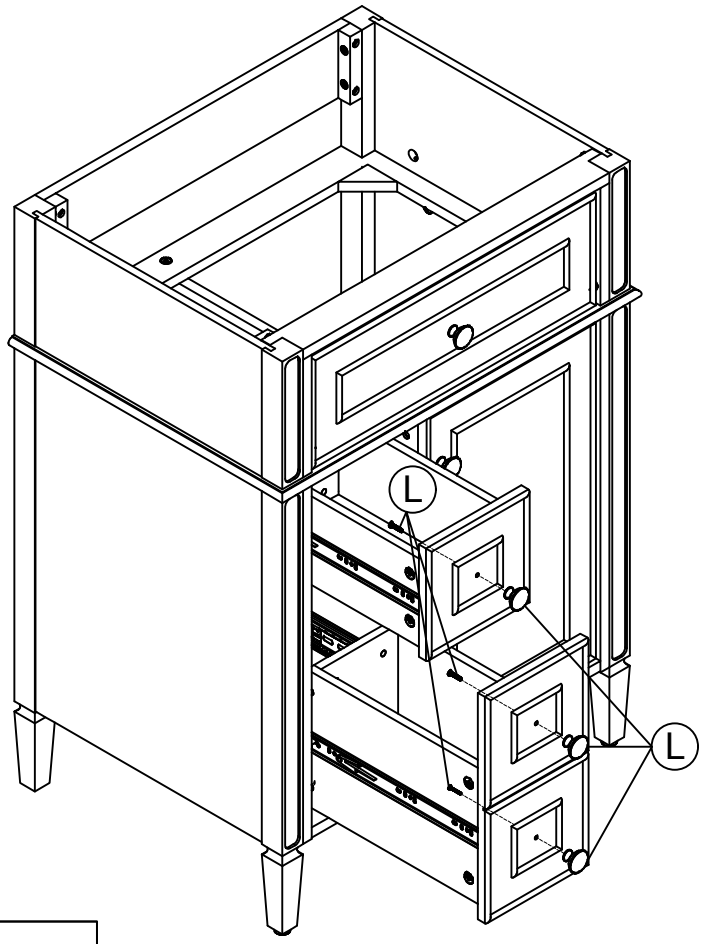


L	M4*18MM		3SETS

STEP 35

To install the Top (1) to the vanity (2).
Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

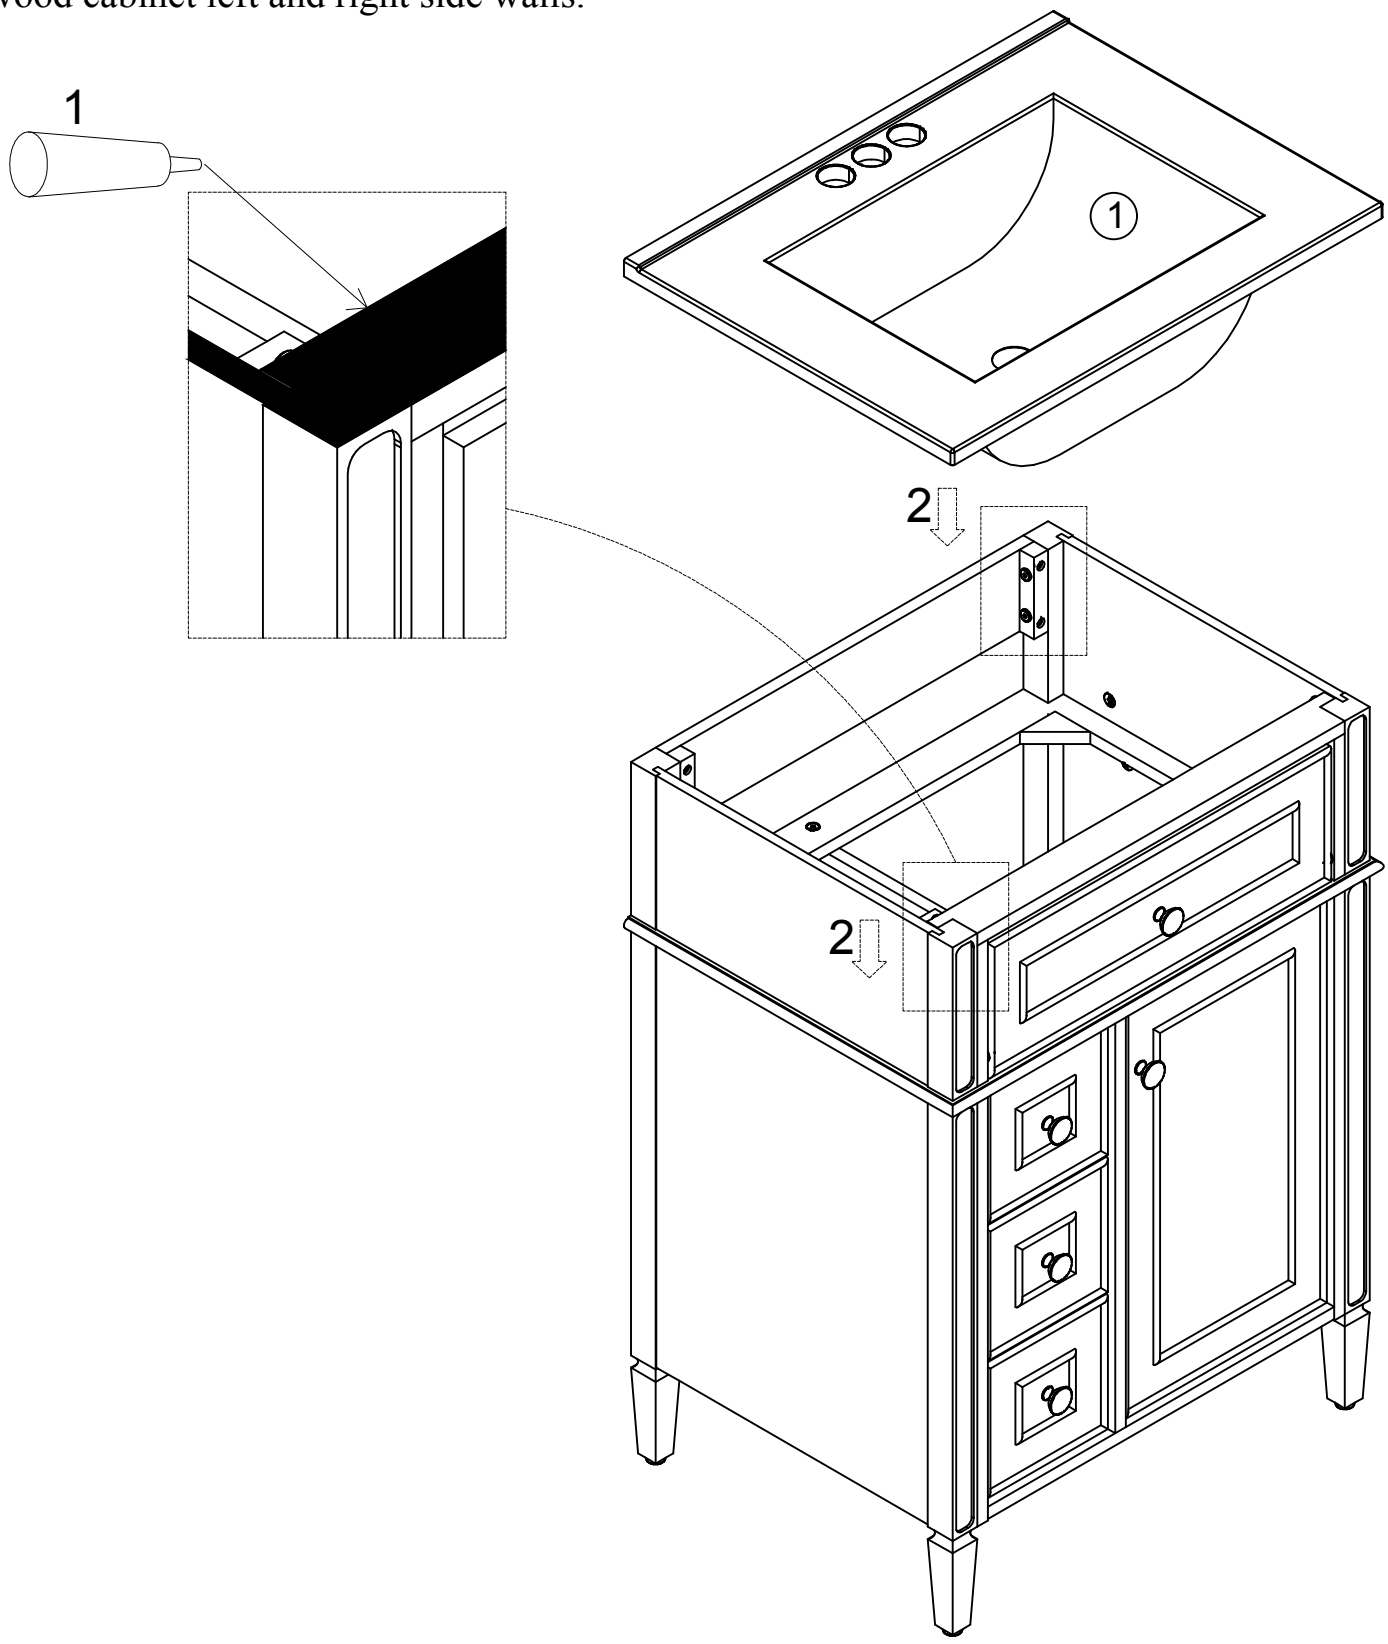


STEP 36

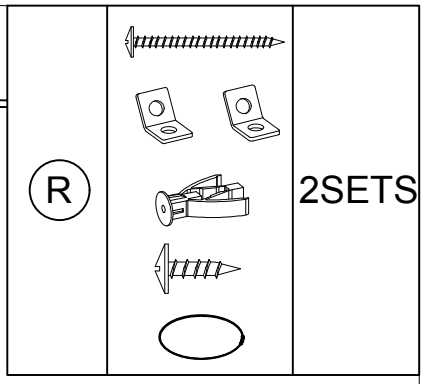


Rotate counterclockwise to increase the length of Floor Leveler, and raise that corner. Rotate clockwise to lower that corner.
Tournez dans le sens inverse des aiguilles d'une montre pour augmenter la longueur du niveleur et relever le coin correspondant.
Tournez dans le sens des aiguilles d'une montre pour l'abaisser.

HINGE ADJUSTMENTS

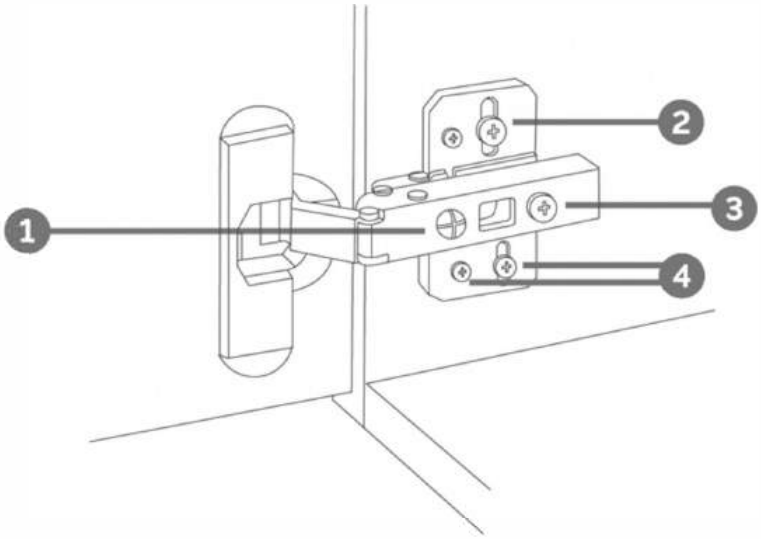


1 Sideways / Tilt adjustment

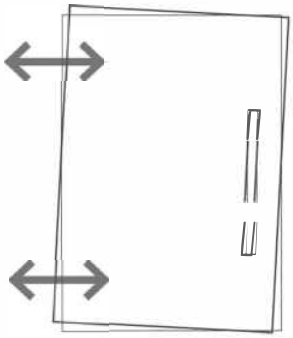


Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

2 4 Height adjustment

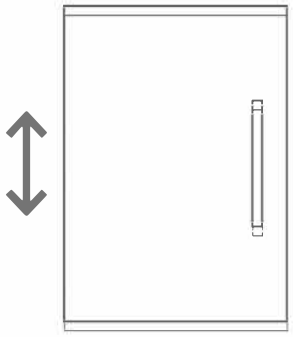

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

3 Forward and back adjustment

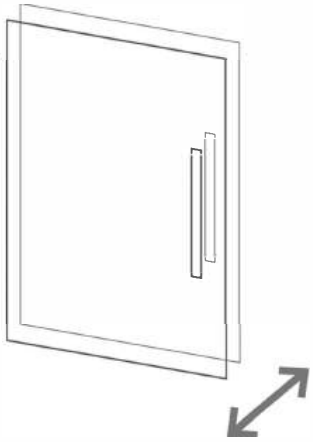

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet