




Product Installation Instructions

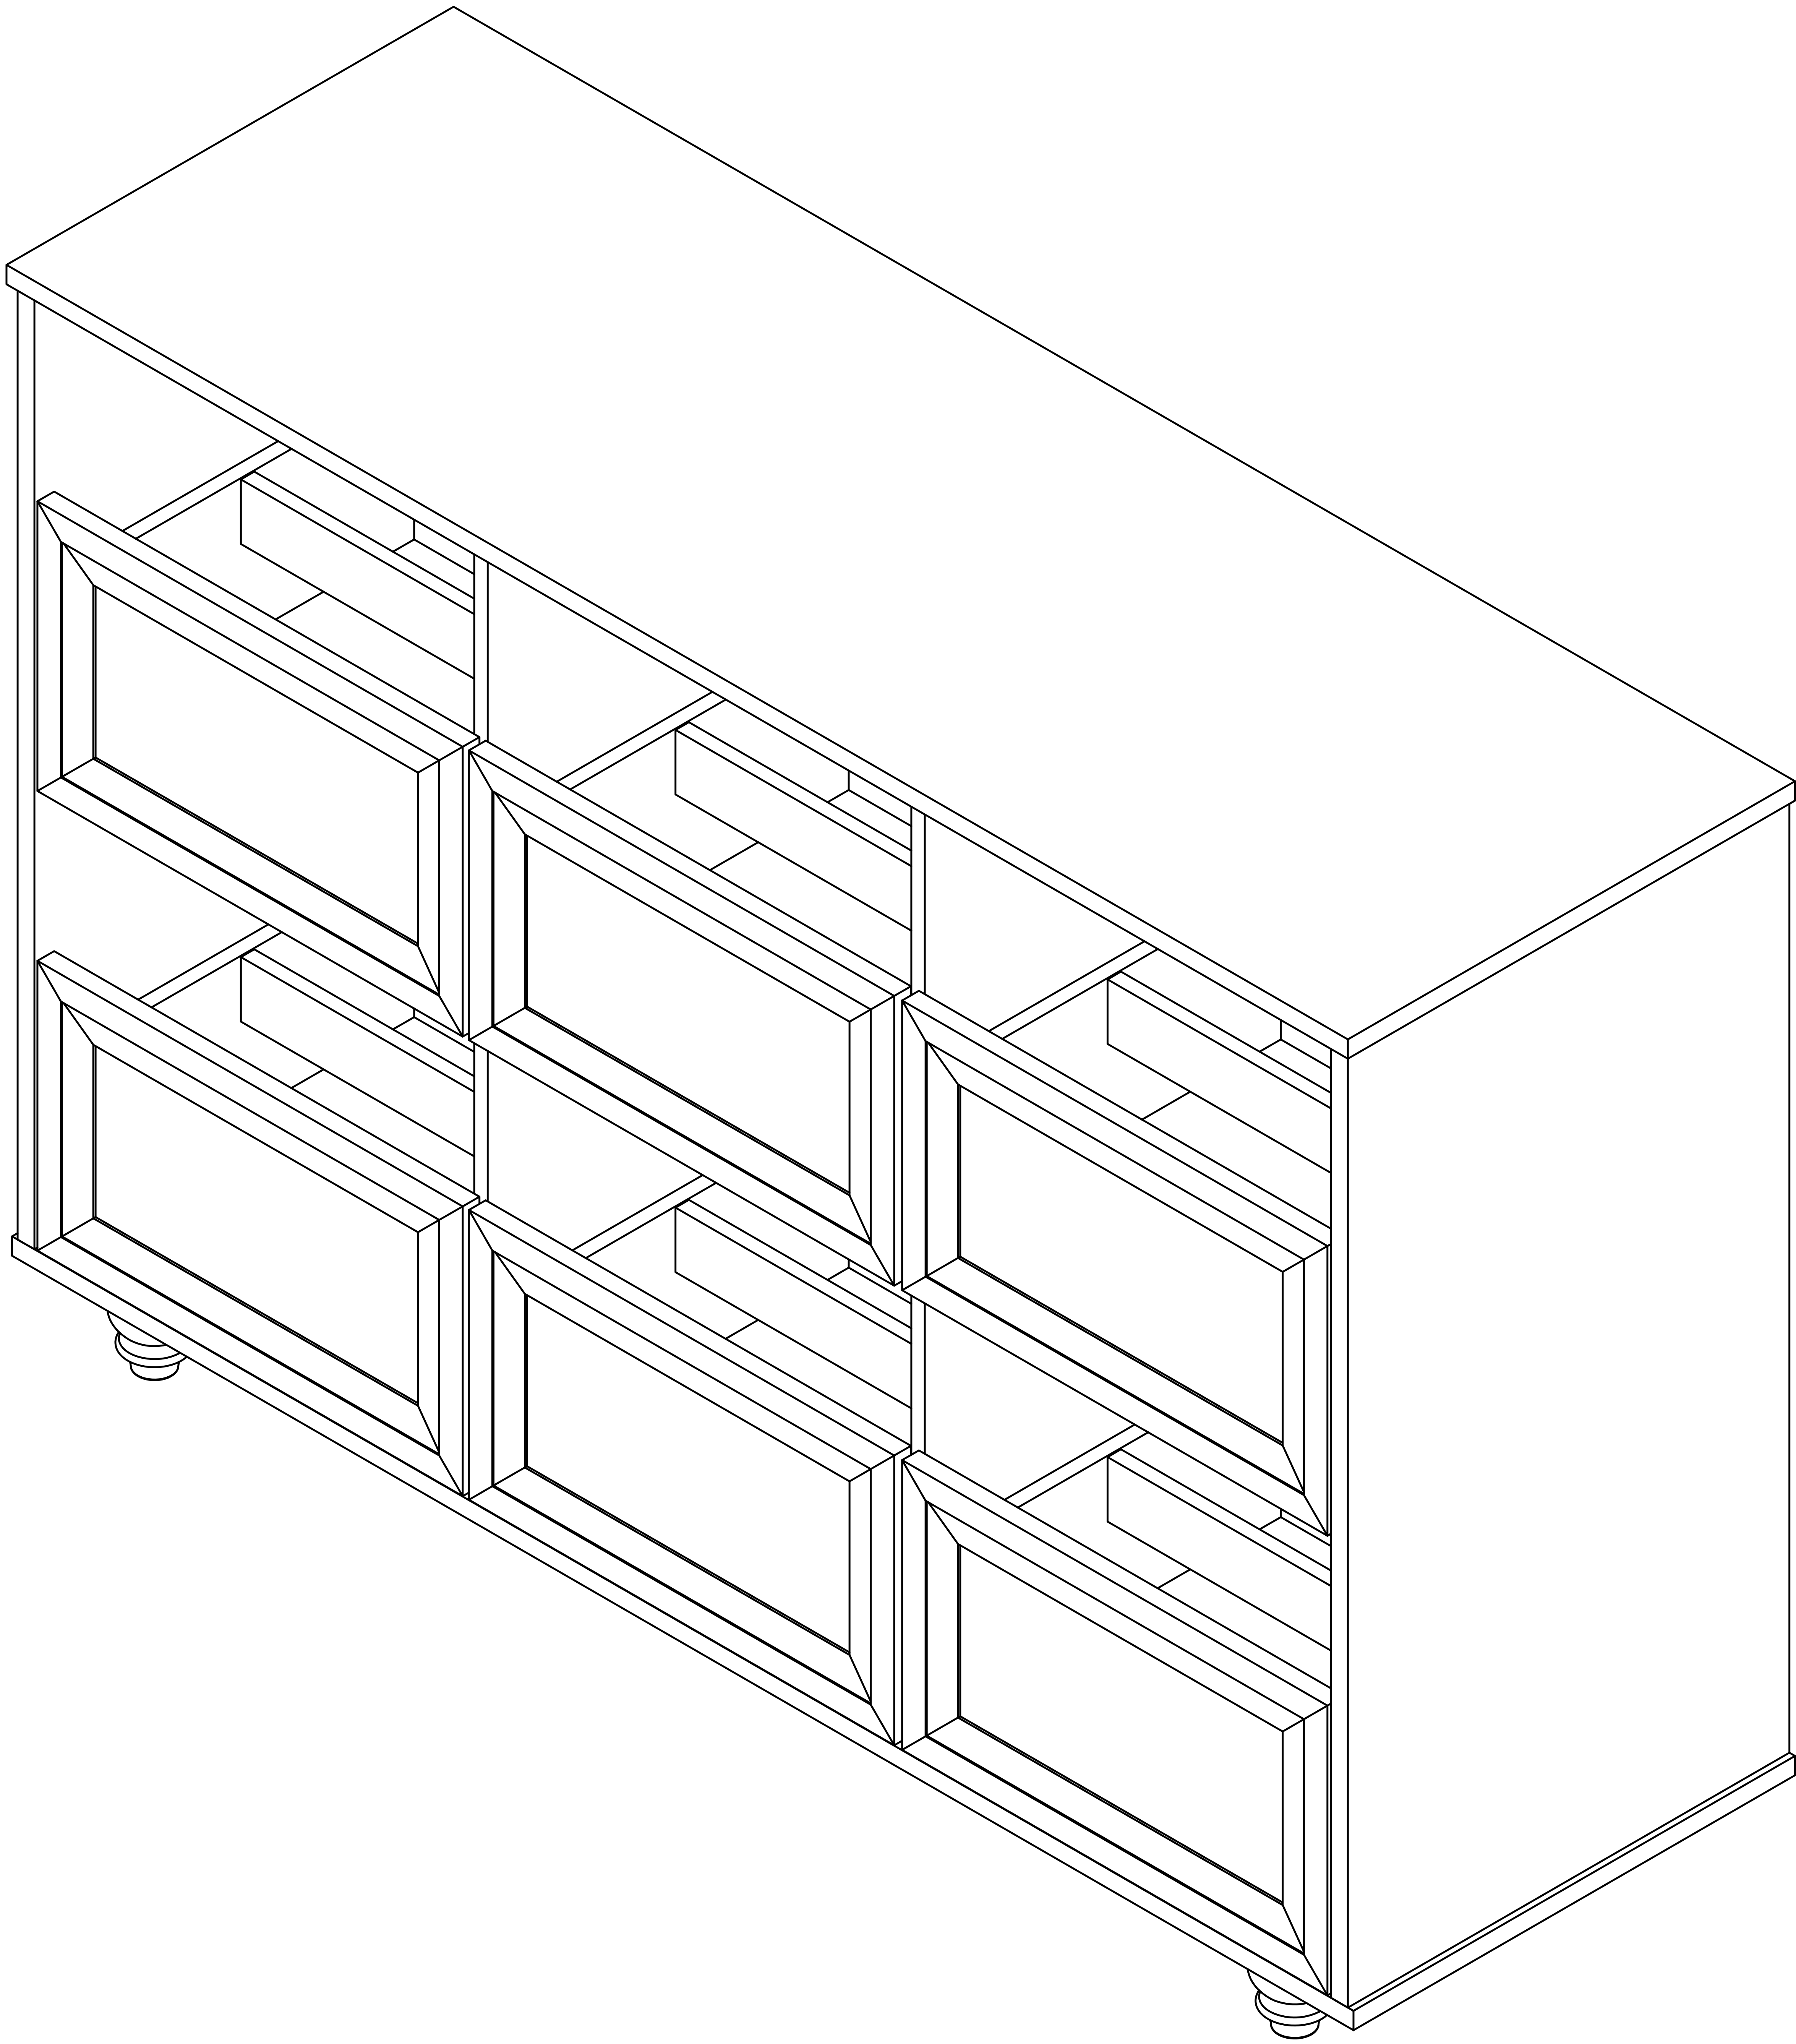


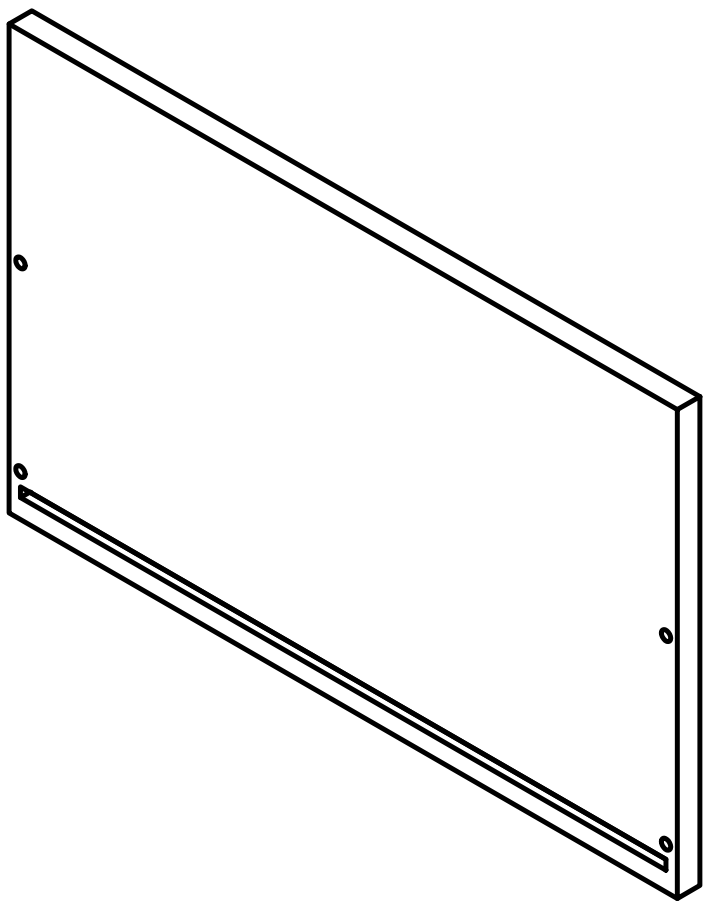


A x6

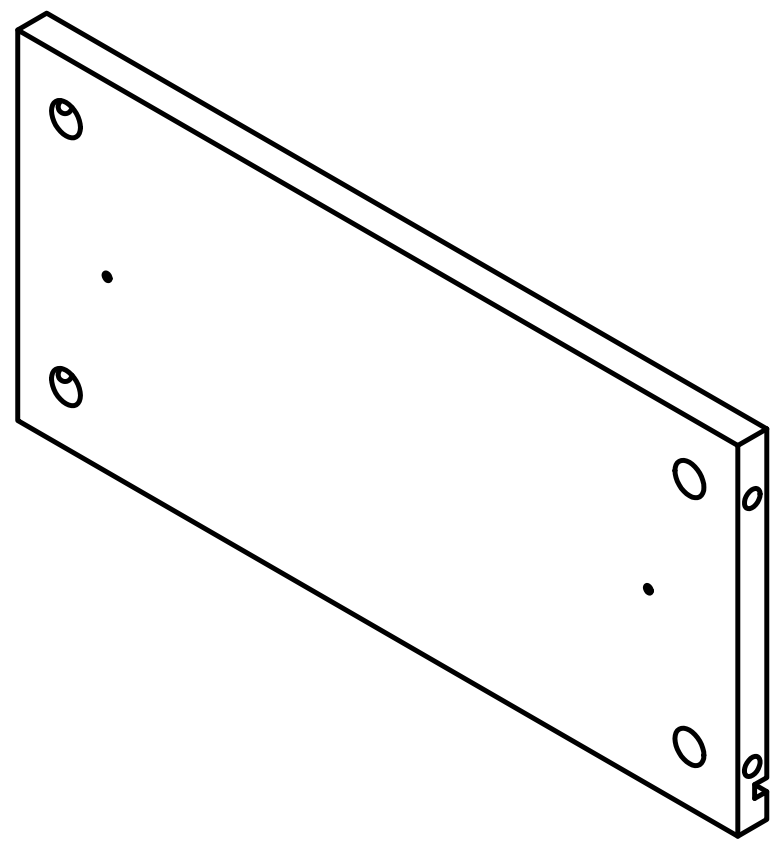


Bx12

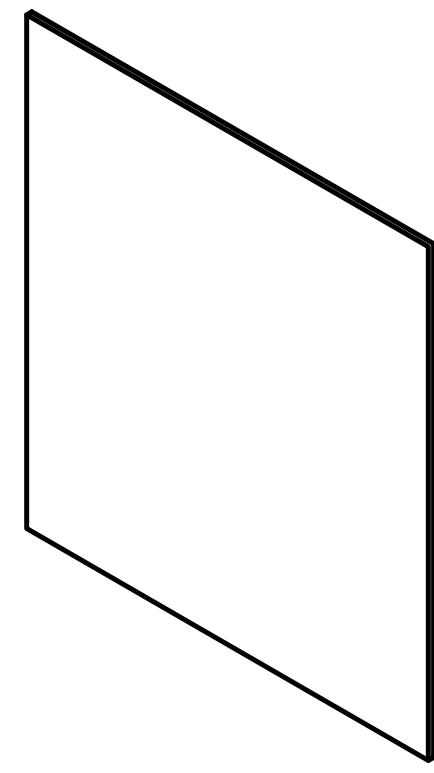


C x6

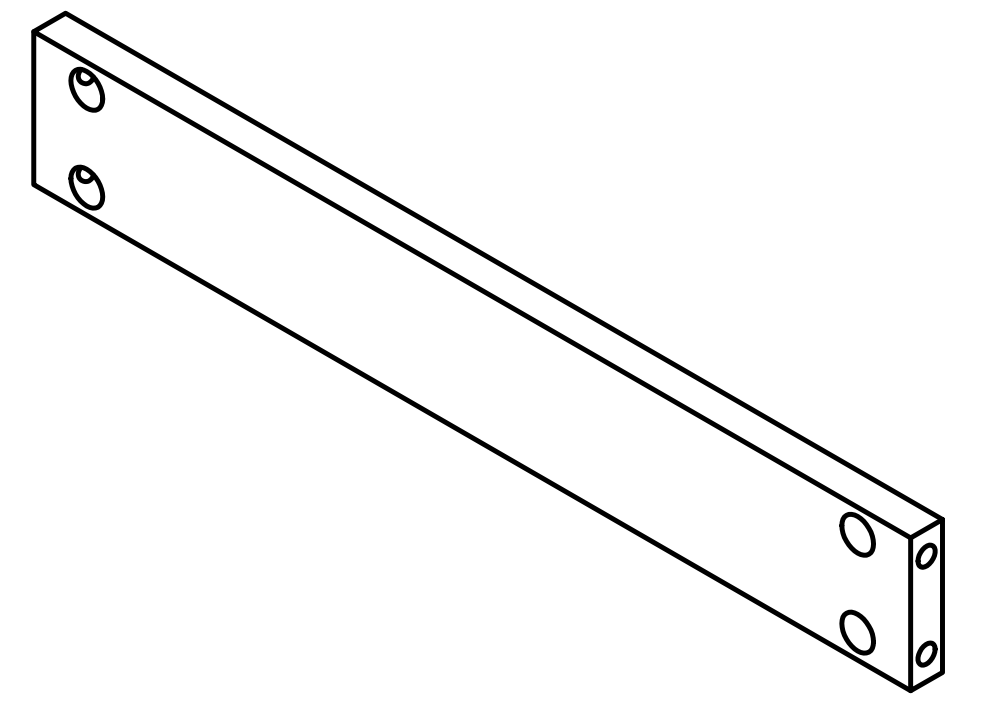


D x6

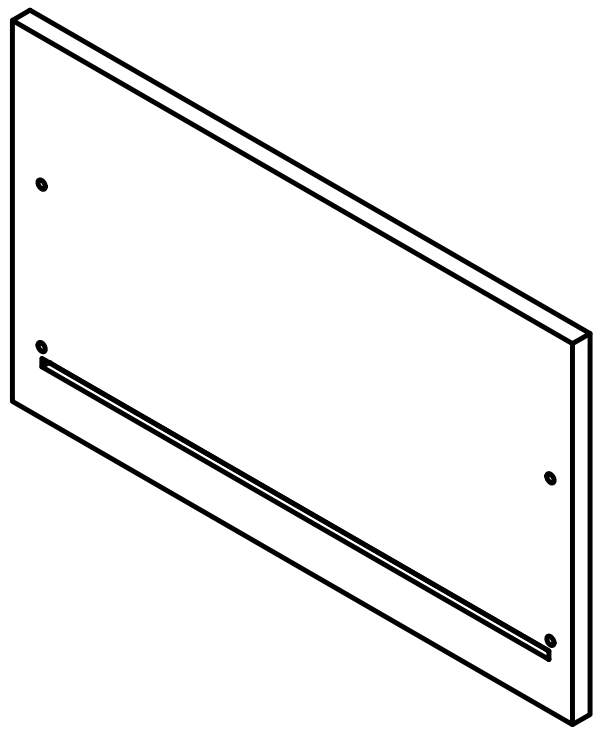


E x2

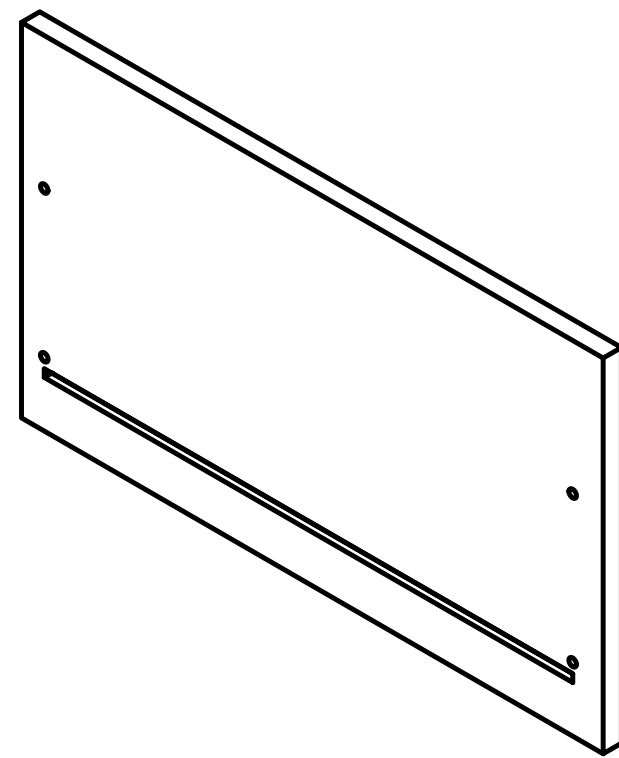


F x2

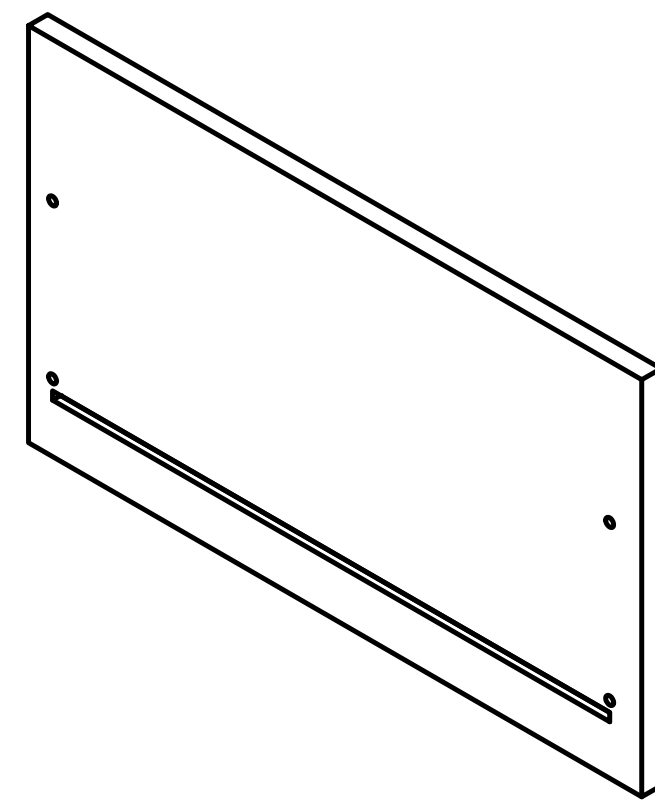


G x2

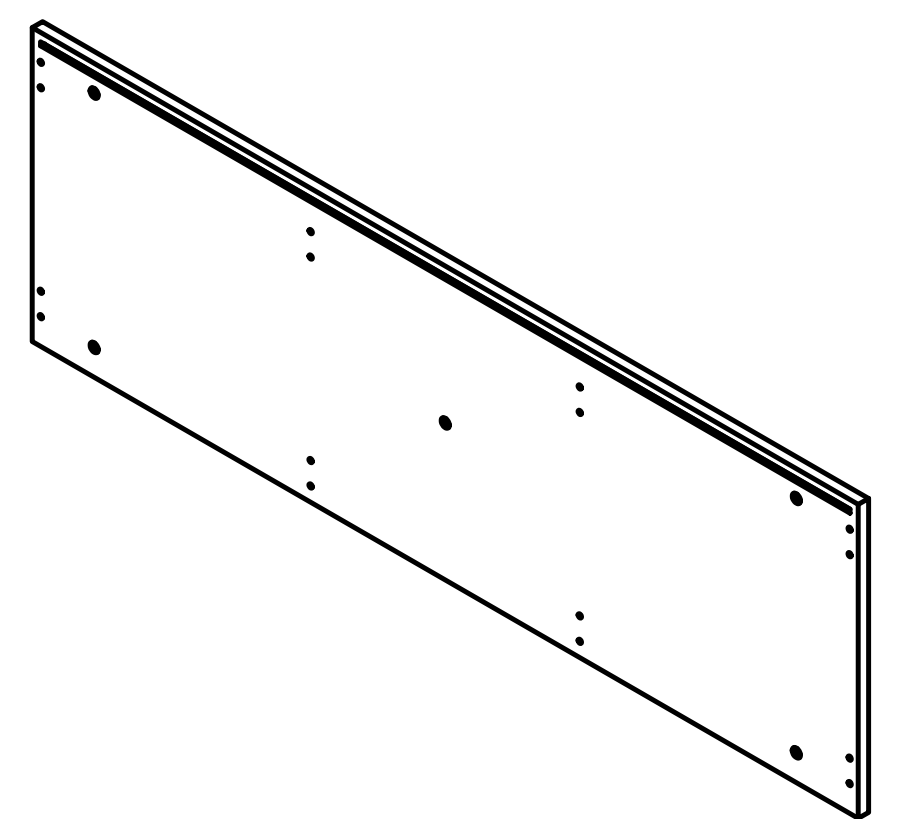


H x1

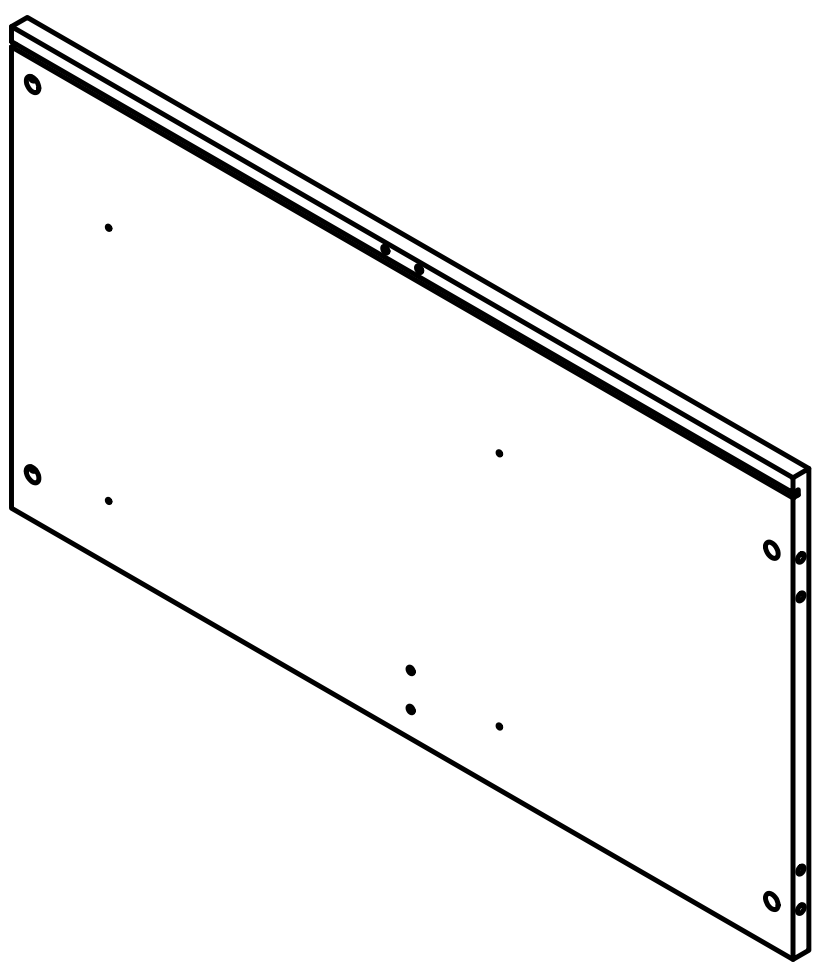


J x1

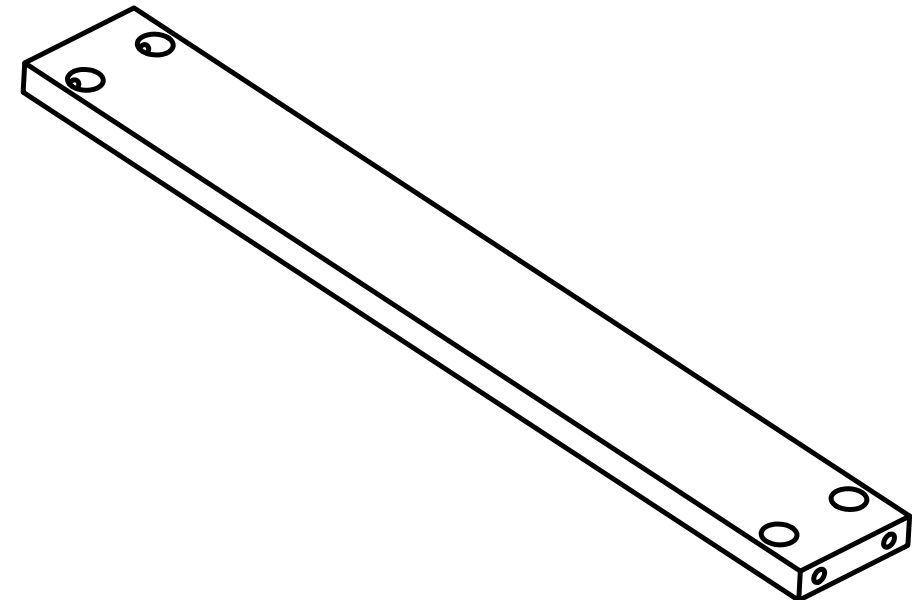


K x2

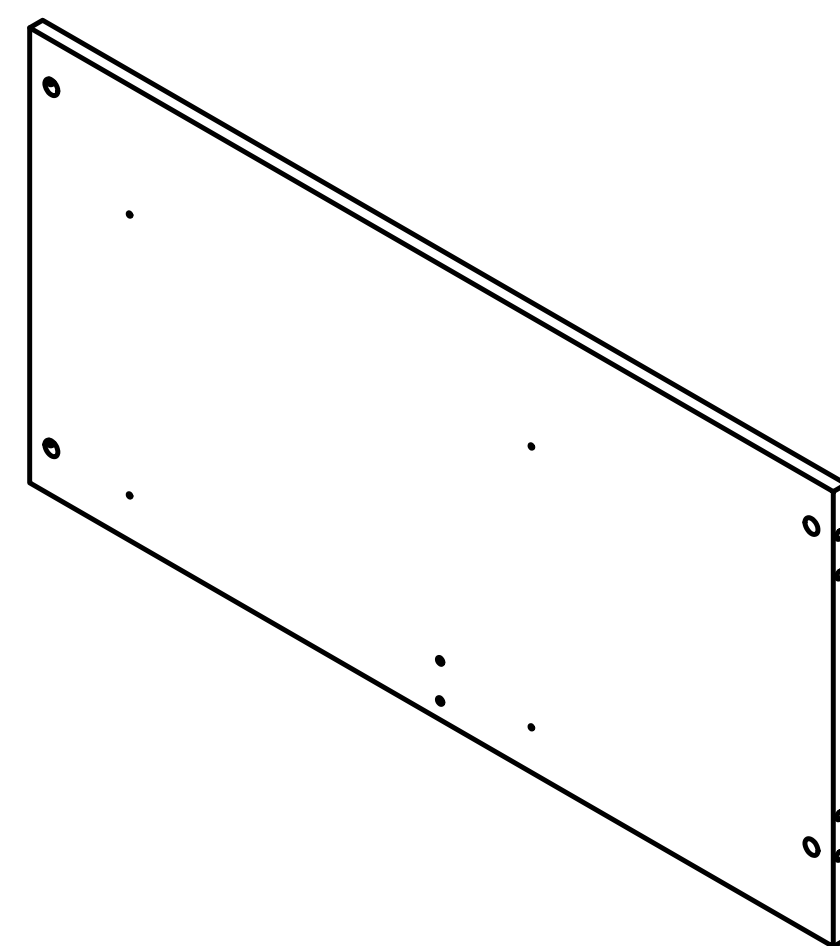


L x1

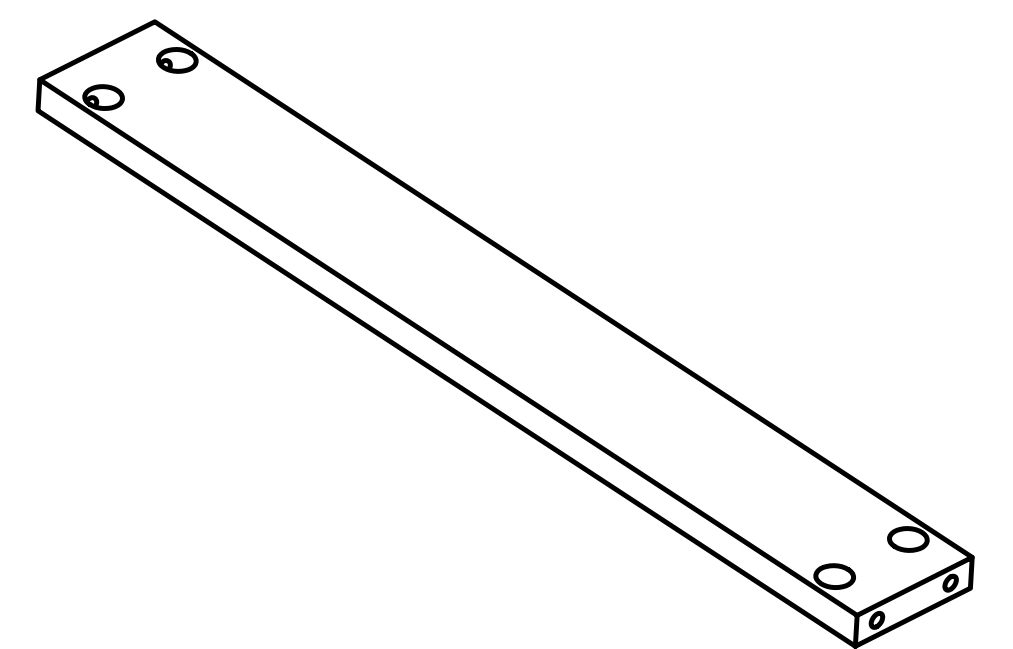


Mx1

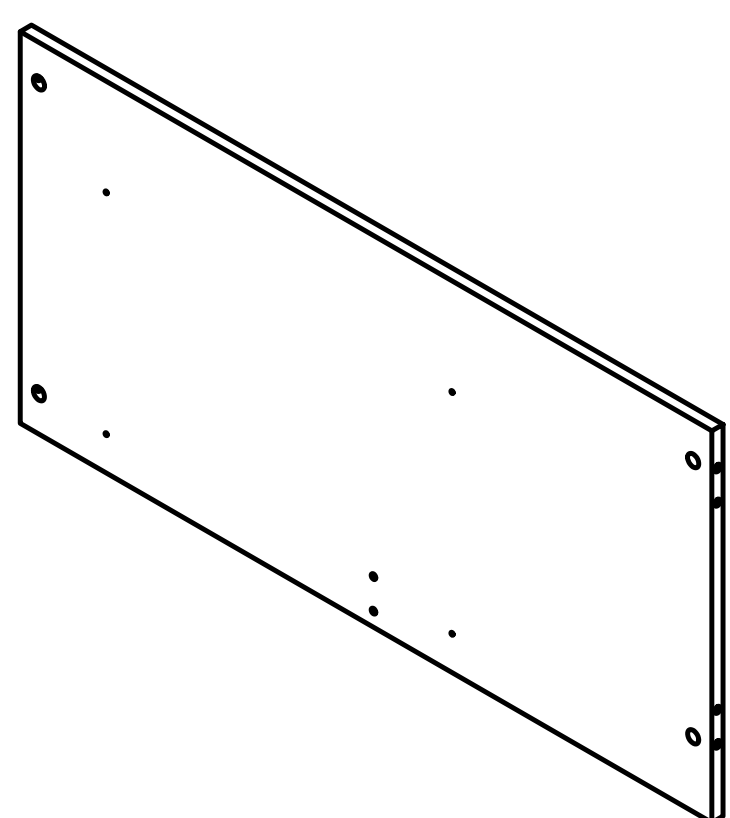


N x1

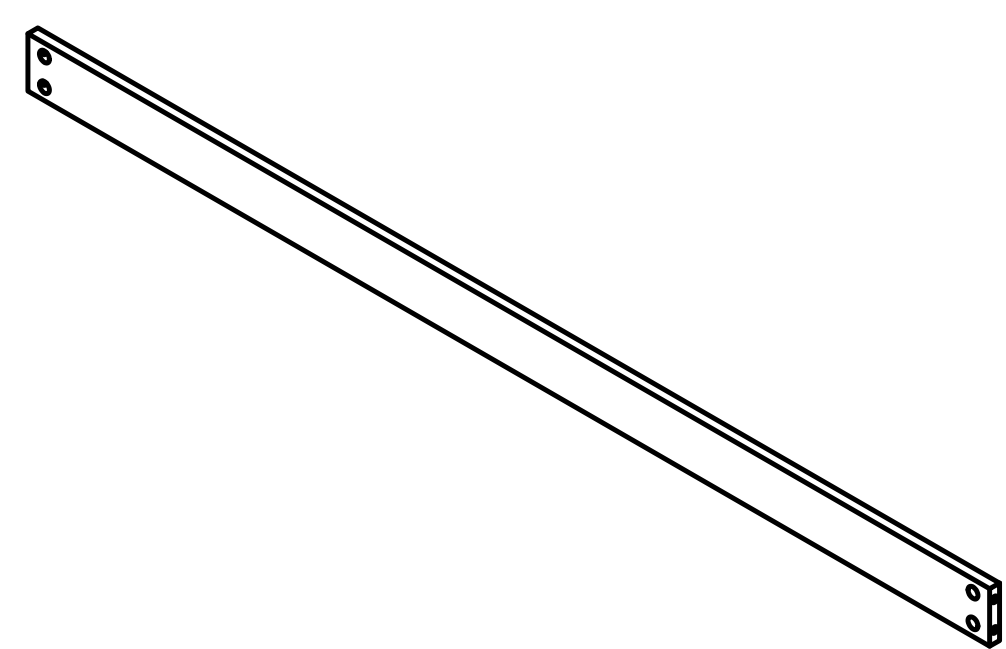


Ox1

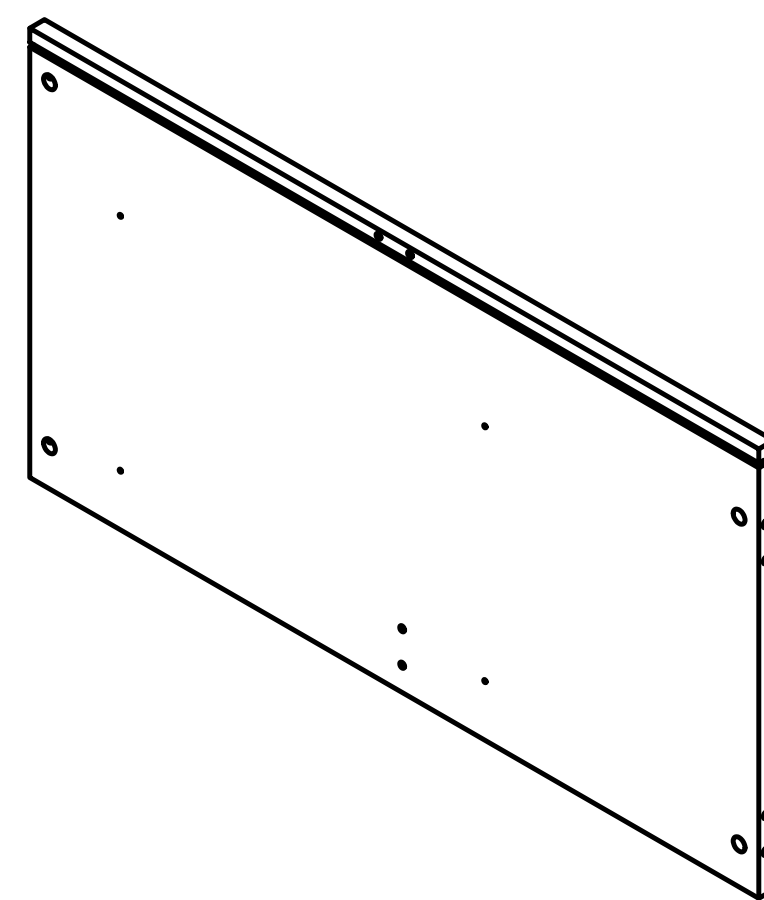


P x1













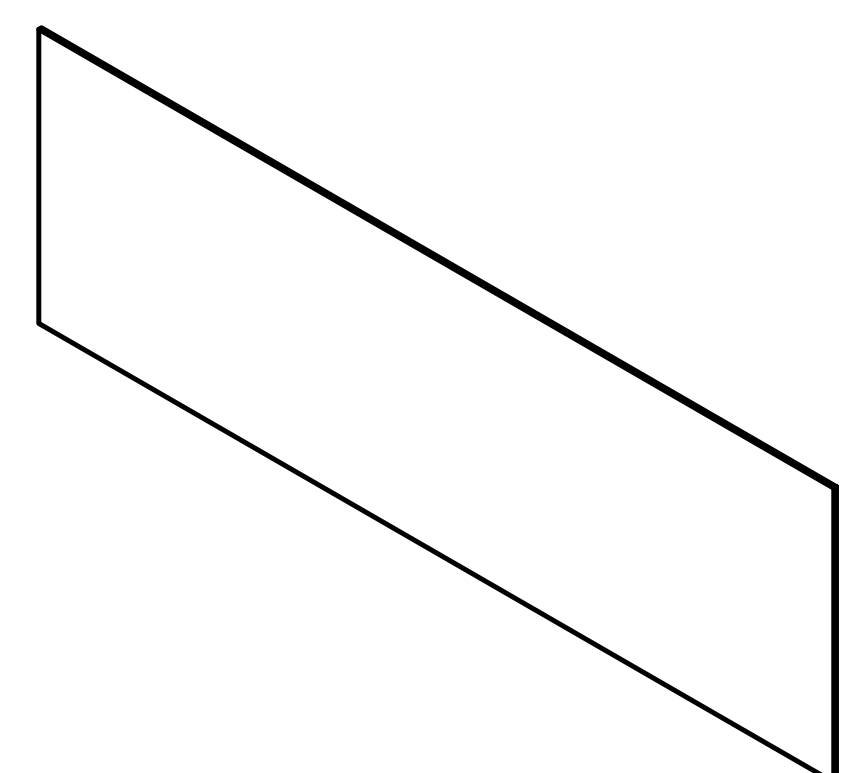


Qx2

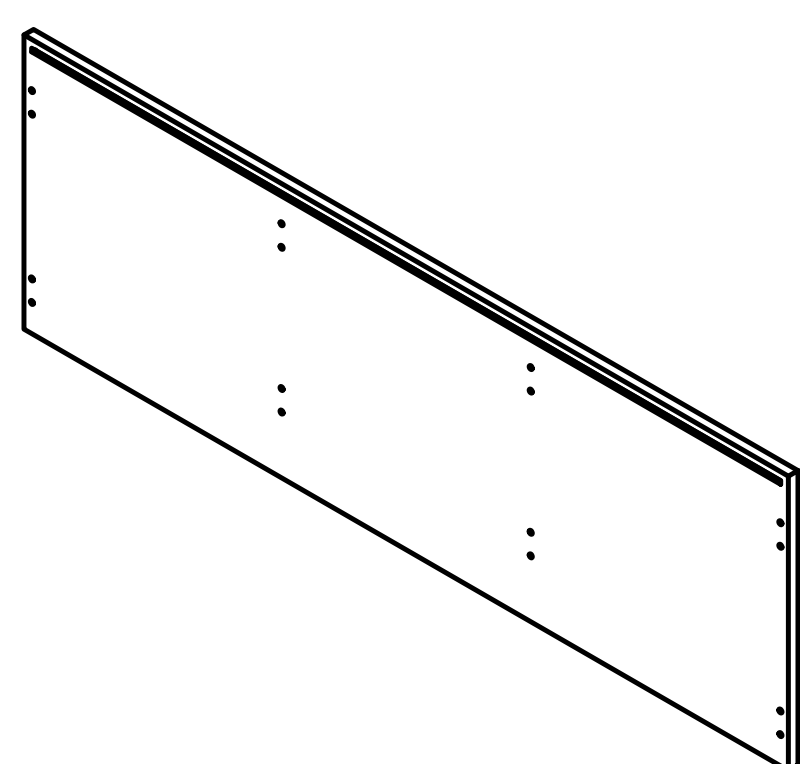


R x1

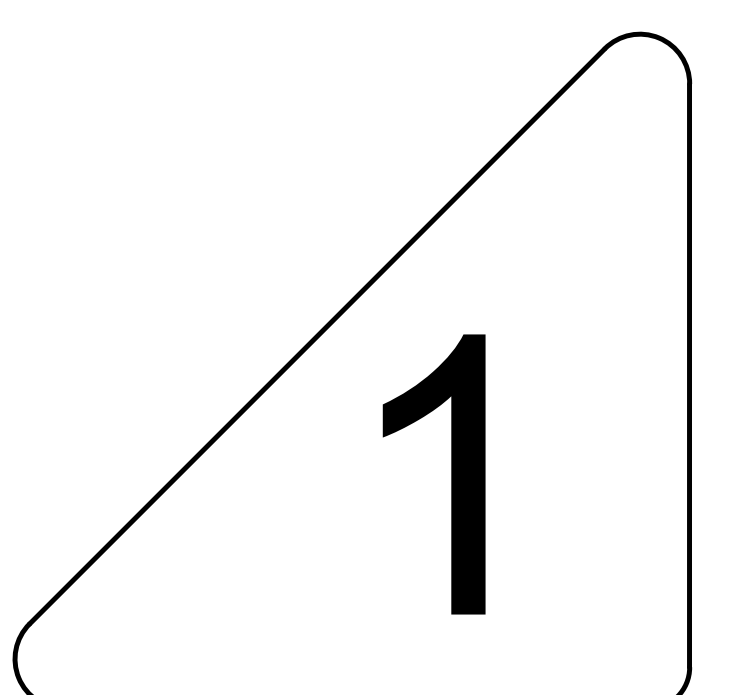

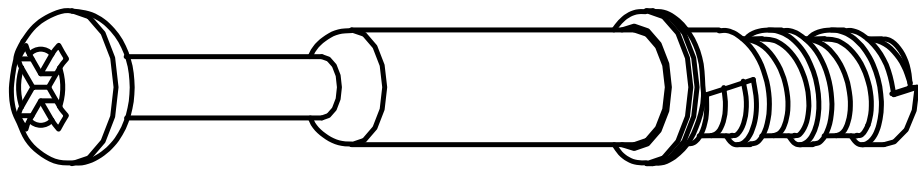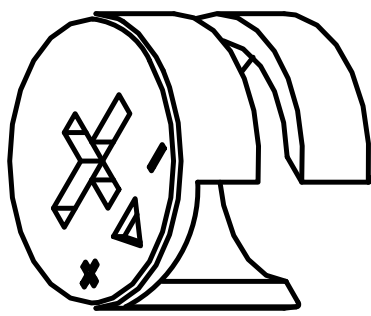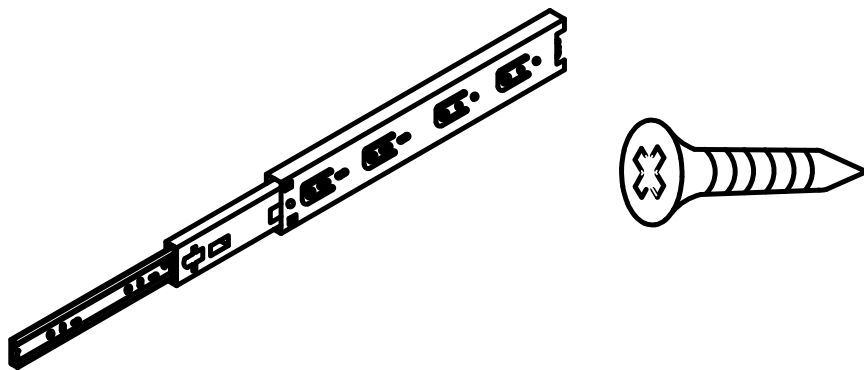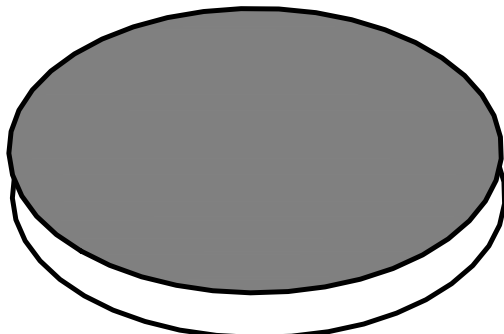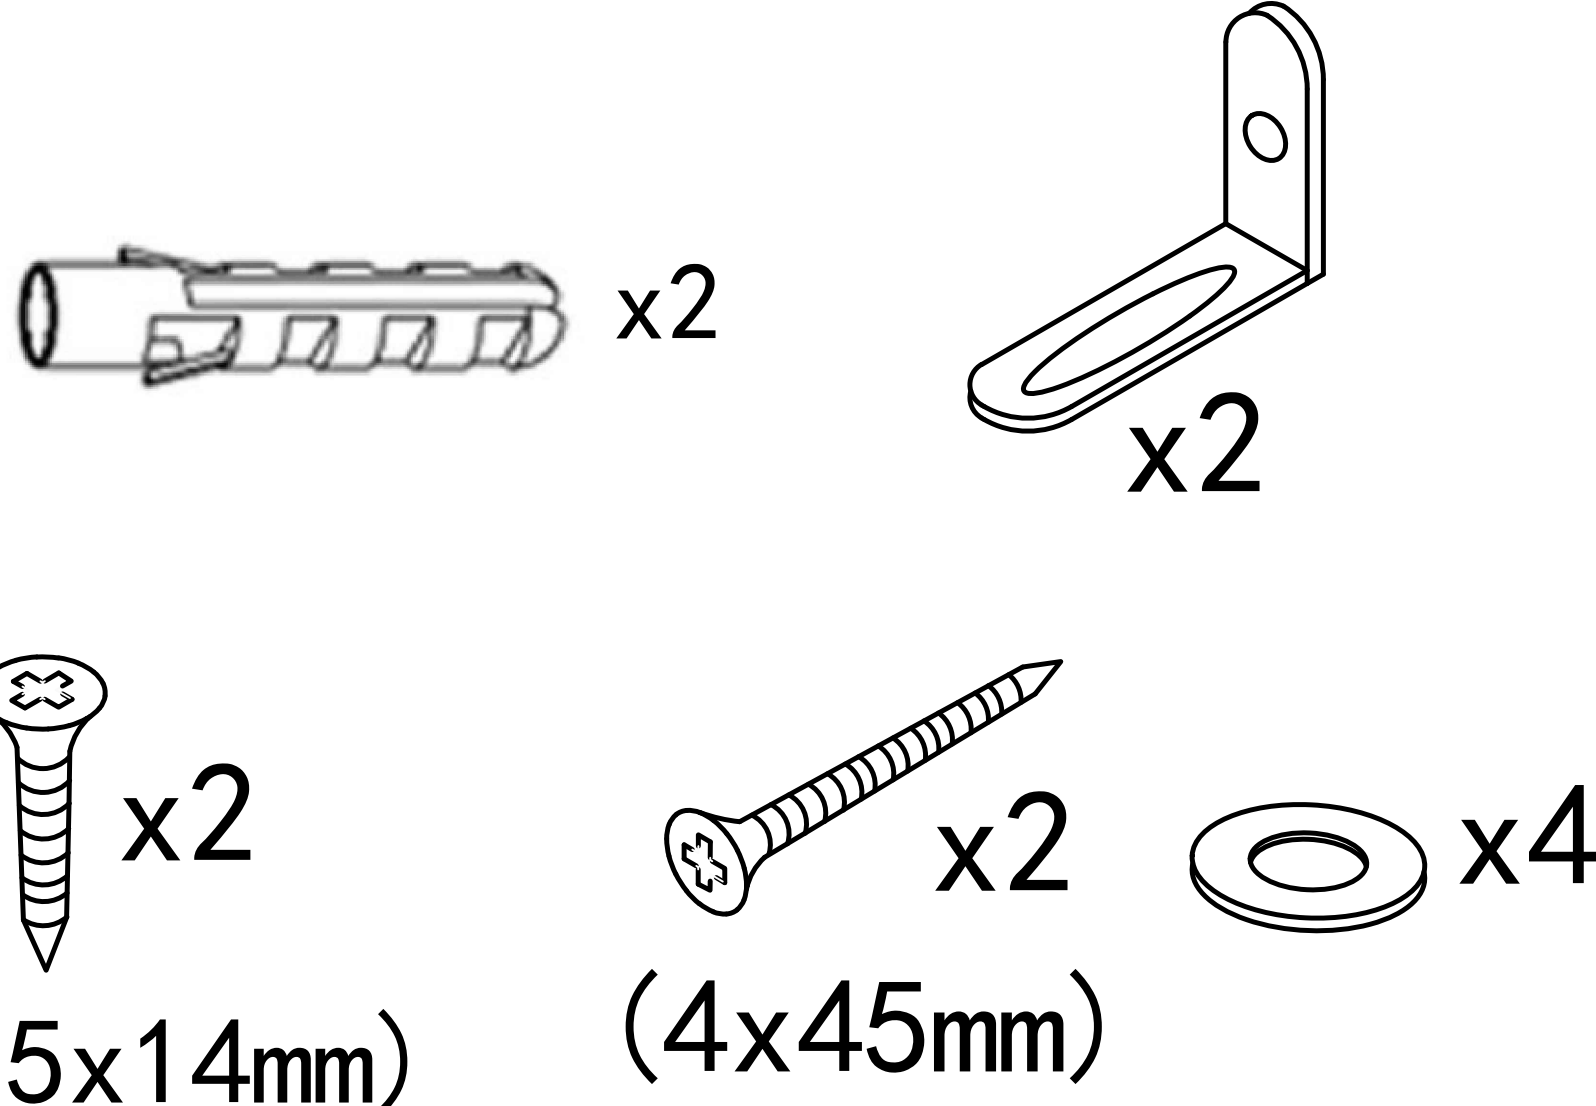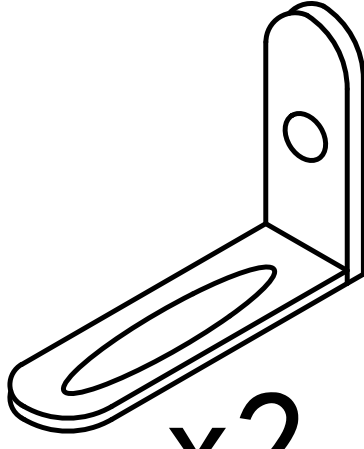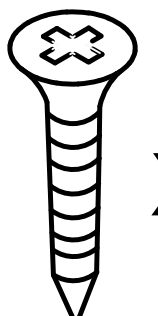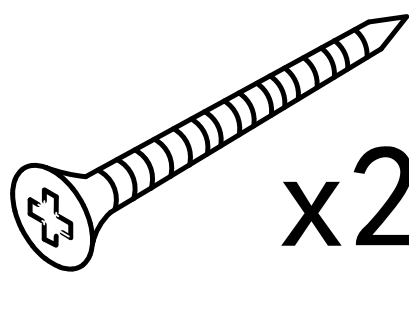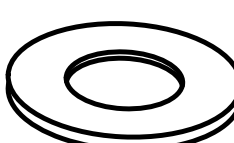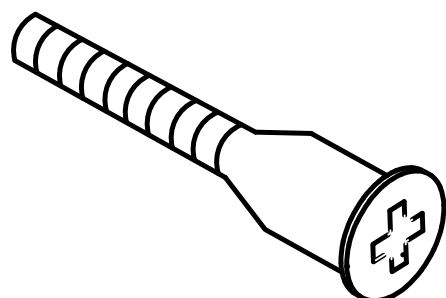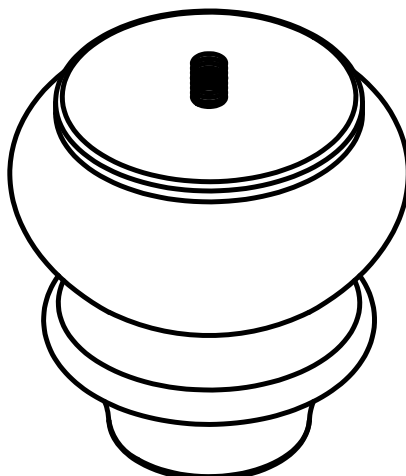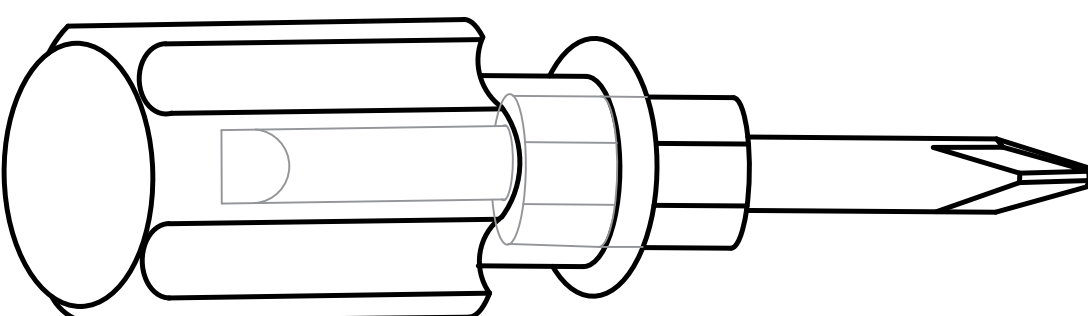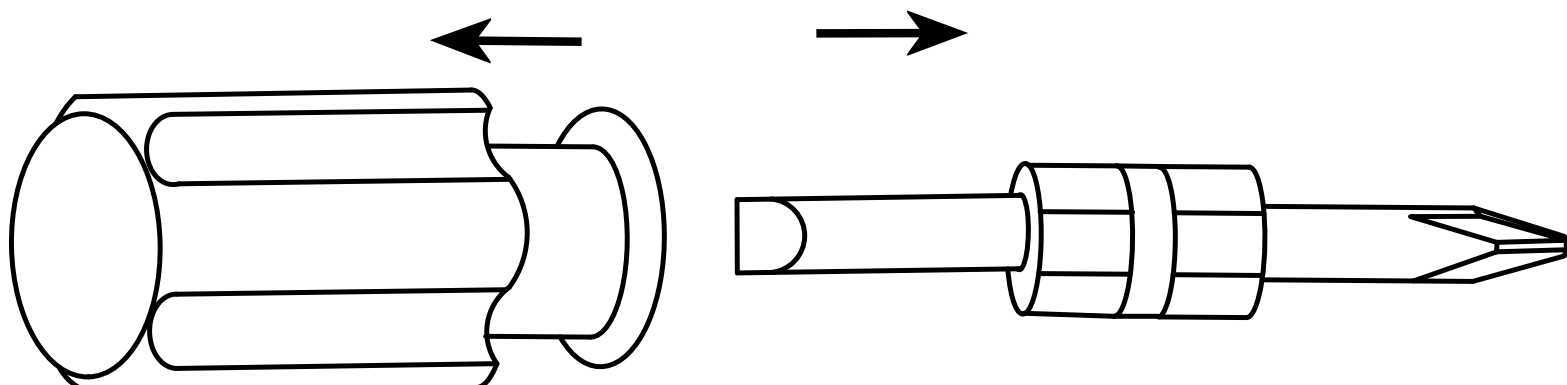
Accessories list			
1		Two In One Screw (6x28mm)	100pcs +10pcs
2		Two In One Nut (10x12mm)	100pcs +10pcs
3		Wood Chipping (6x30mm)	16pcs +1pcs
4		Guide rails & screws (3x12mm) 29cm	60pcs +12pcs 12pcs
5		Non-slip pads (φ12x2mm)	6pcs +1pcs
6		Fixing Clip & Screw (3x16mm)	12pcs +1pcs
7	  x2  x2  x2 (3.5x14mm)  x2 (4x45mm)  x4	Anti Fall Hardware	1pcs
8		Screw (5x40mm)	4pcs +1pcs
I		wooden foot	6pcs
 1pcs  Double-head screwdriver, use as required 2			

Product structure decomposition

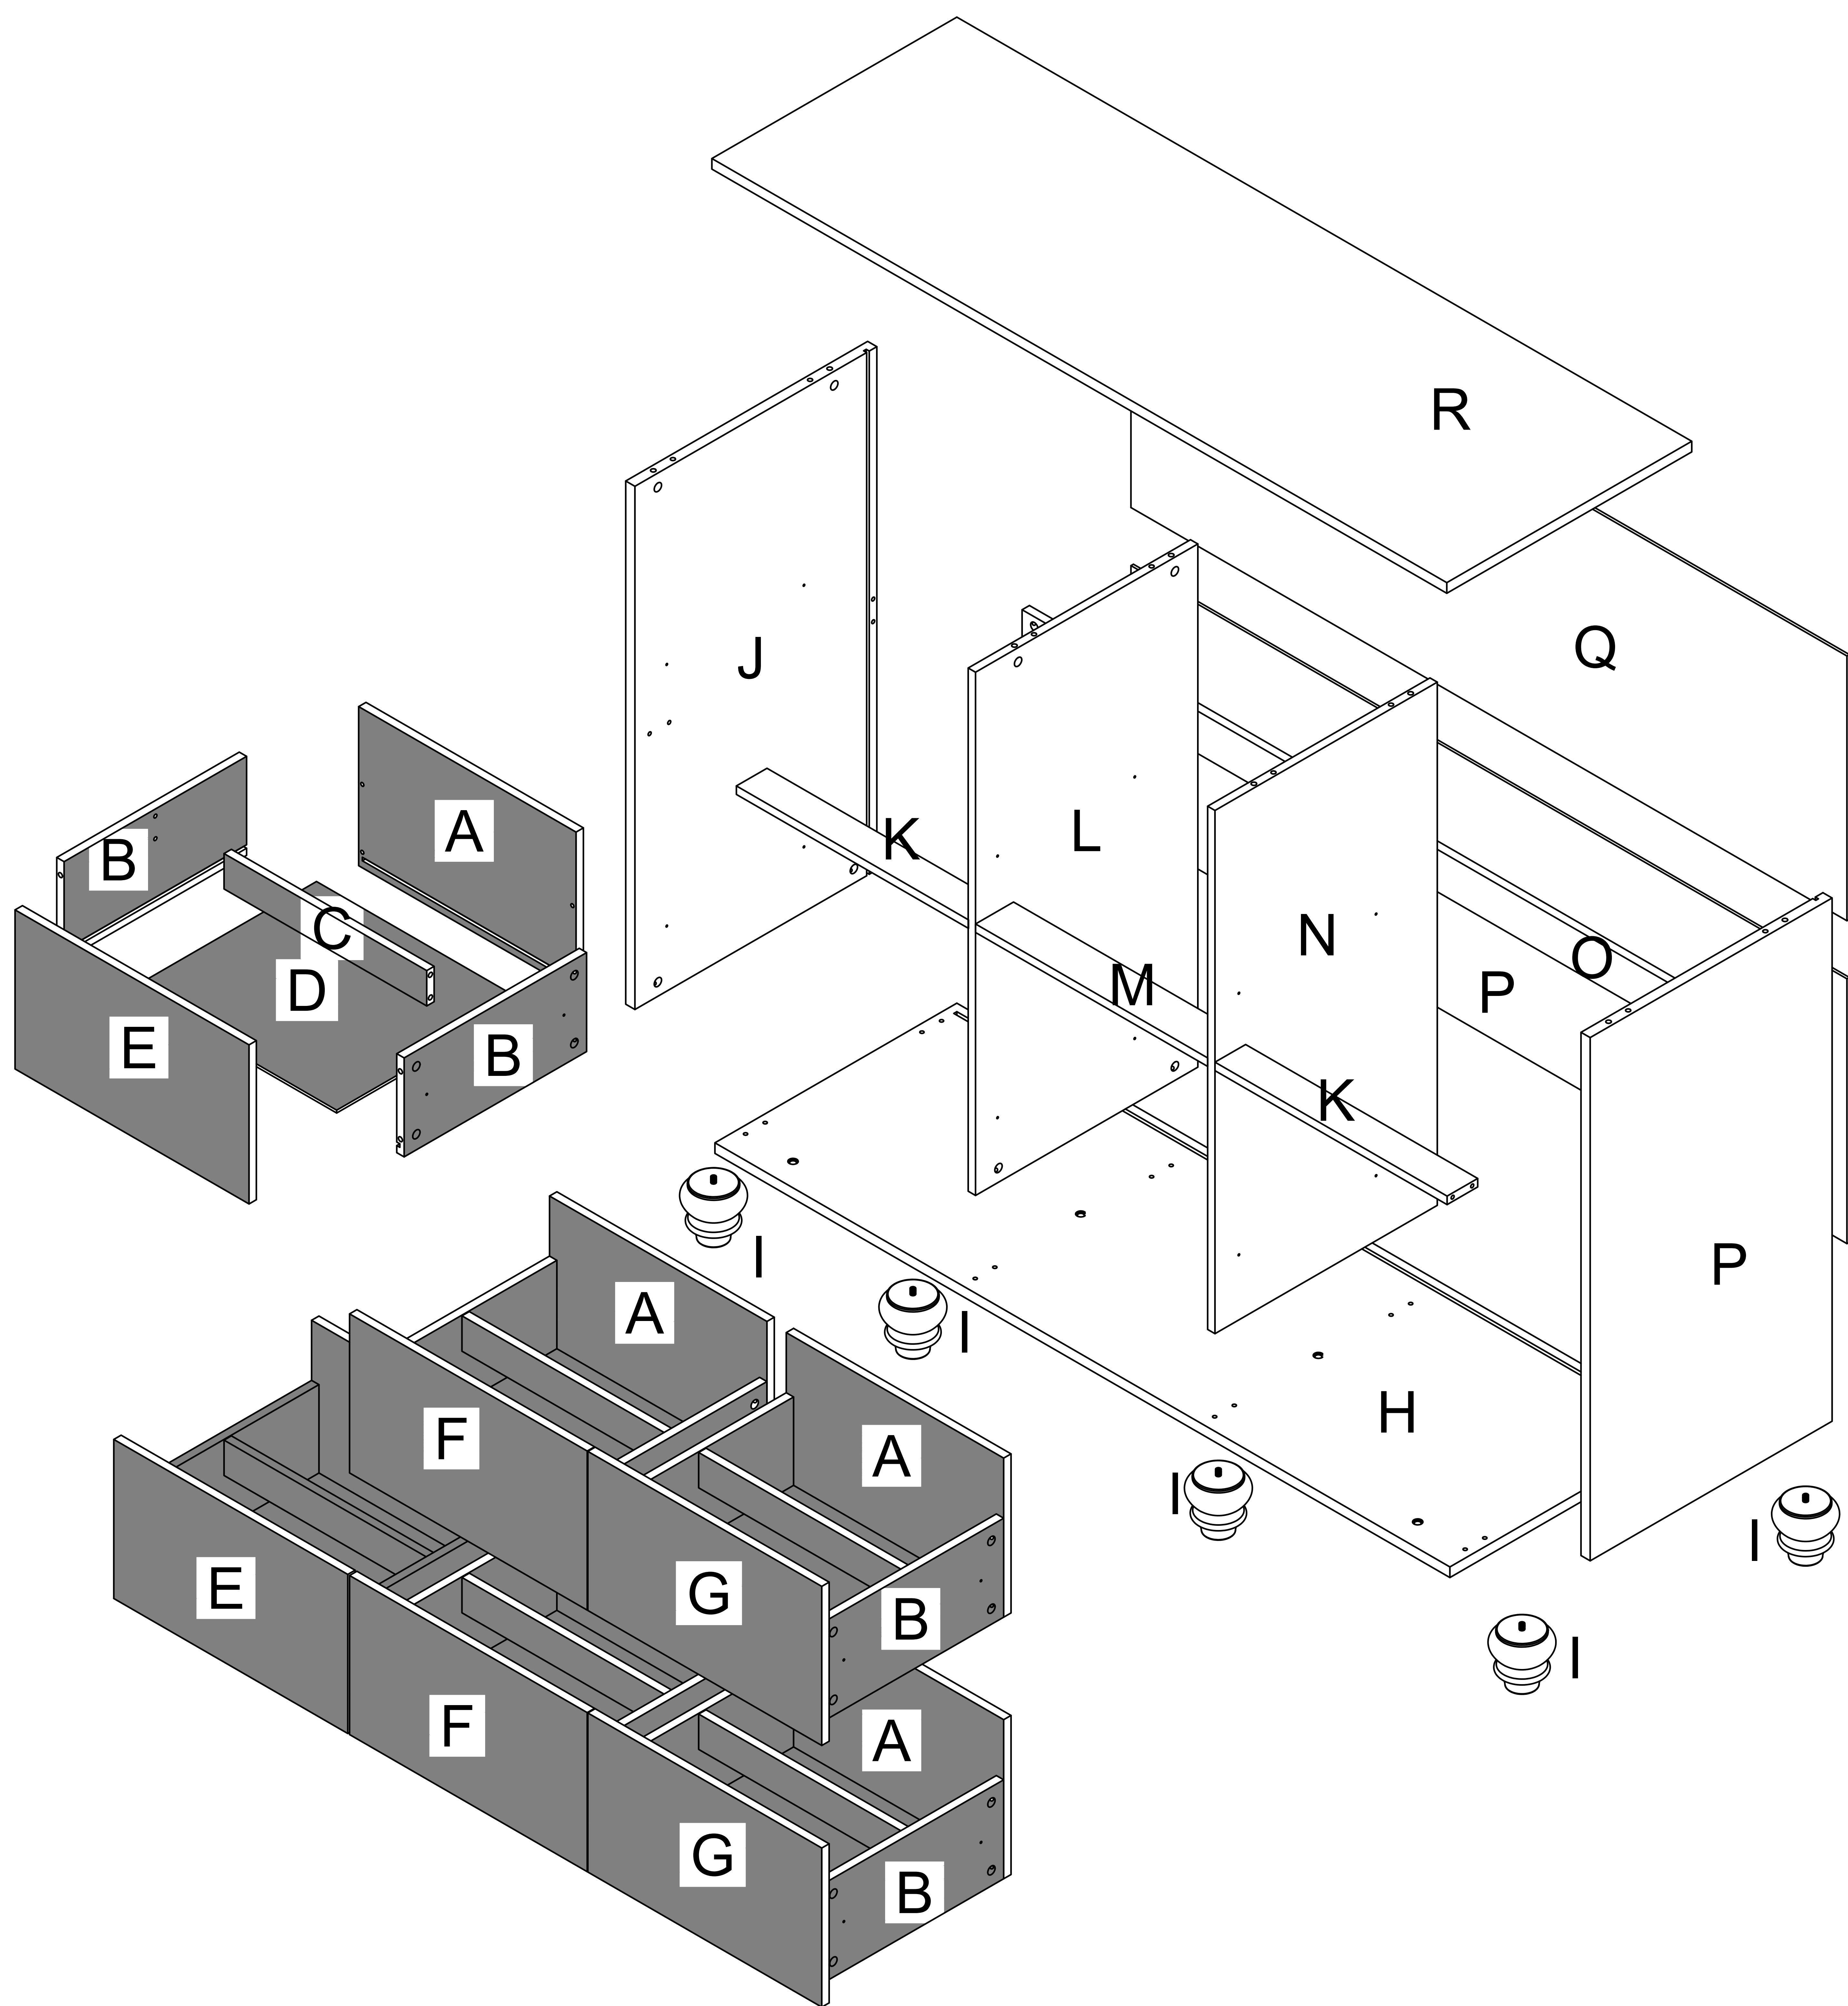


Use parts ① and ②




Step1

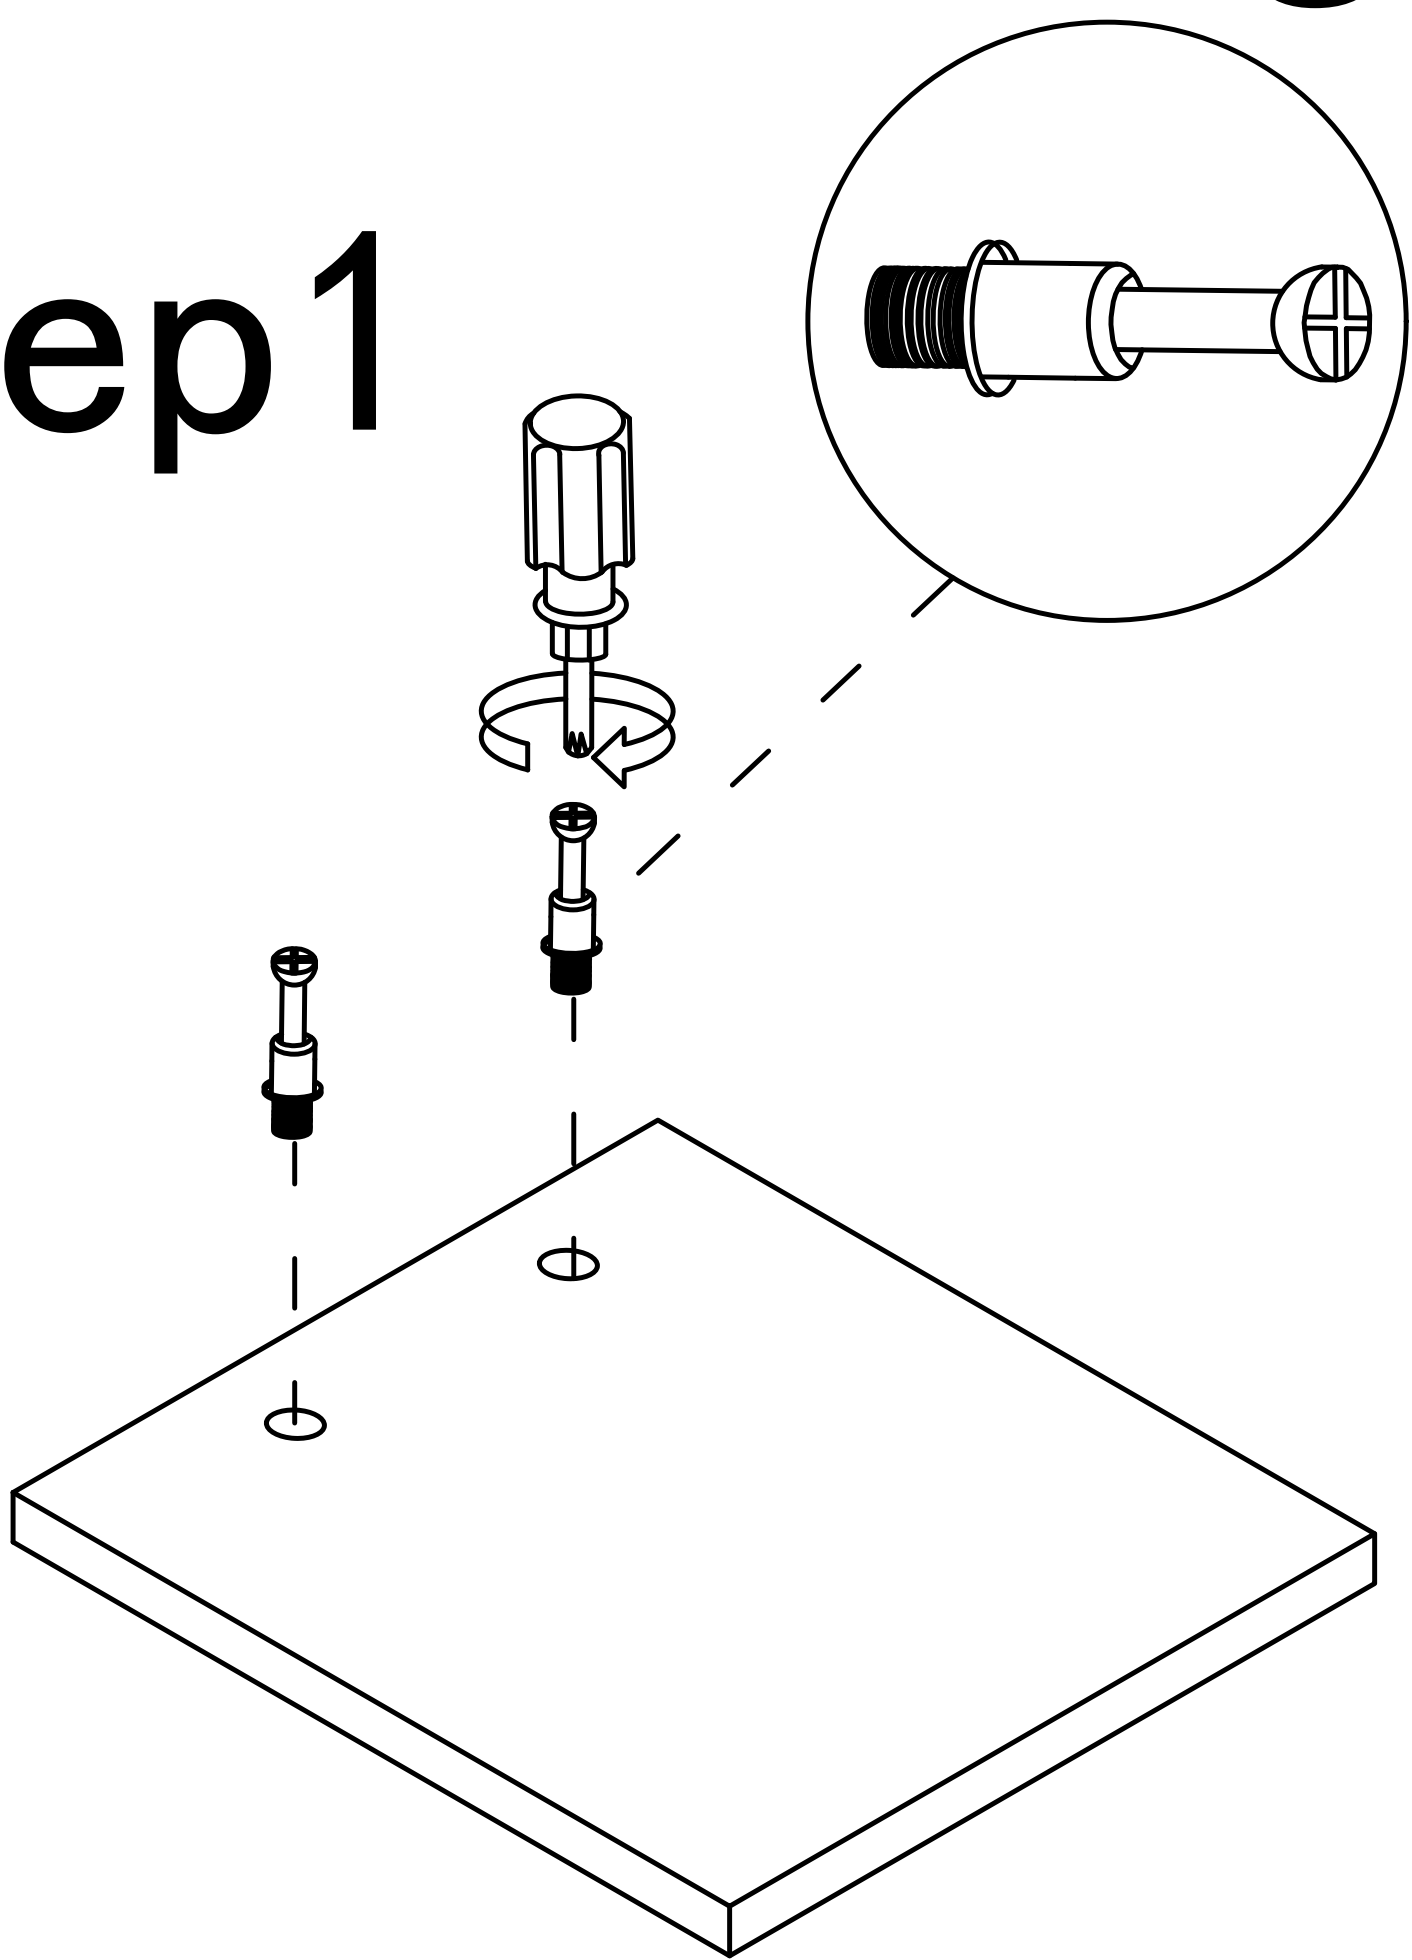

Step2

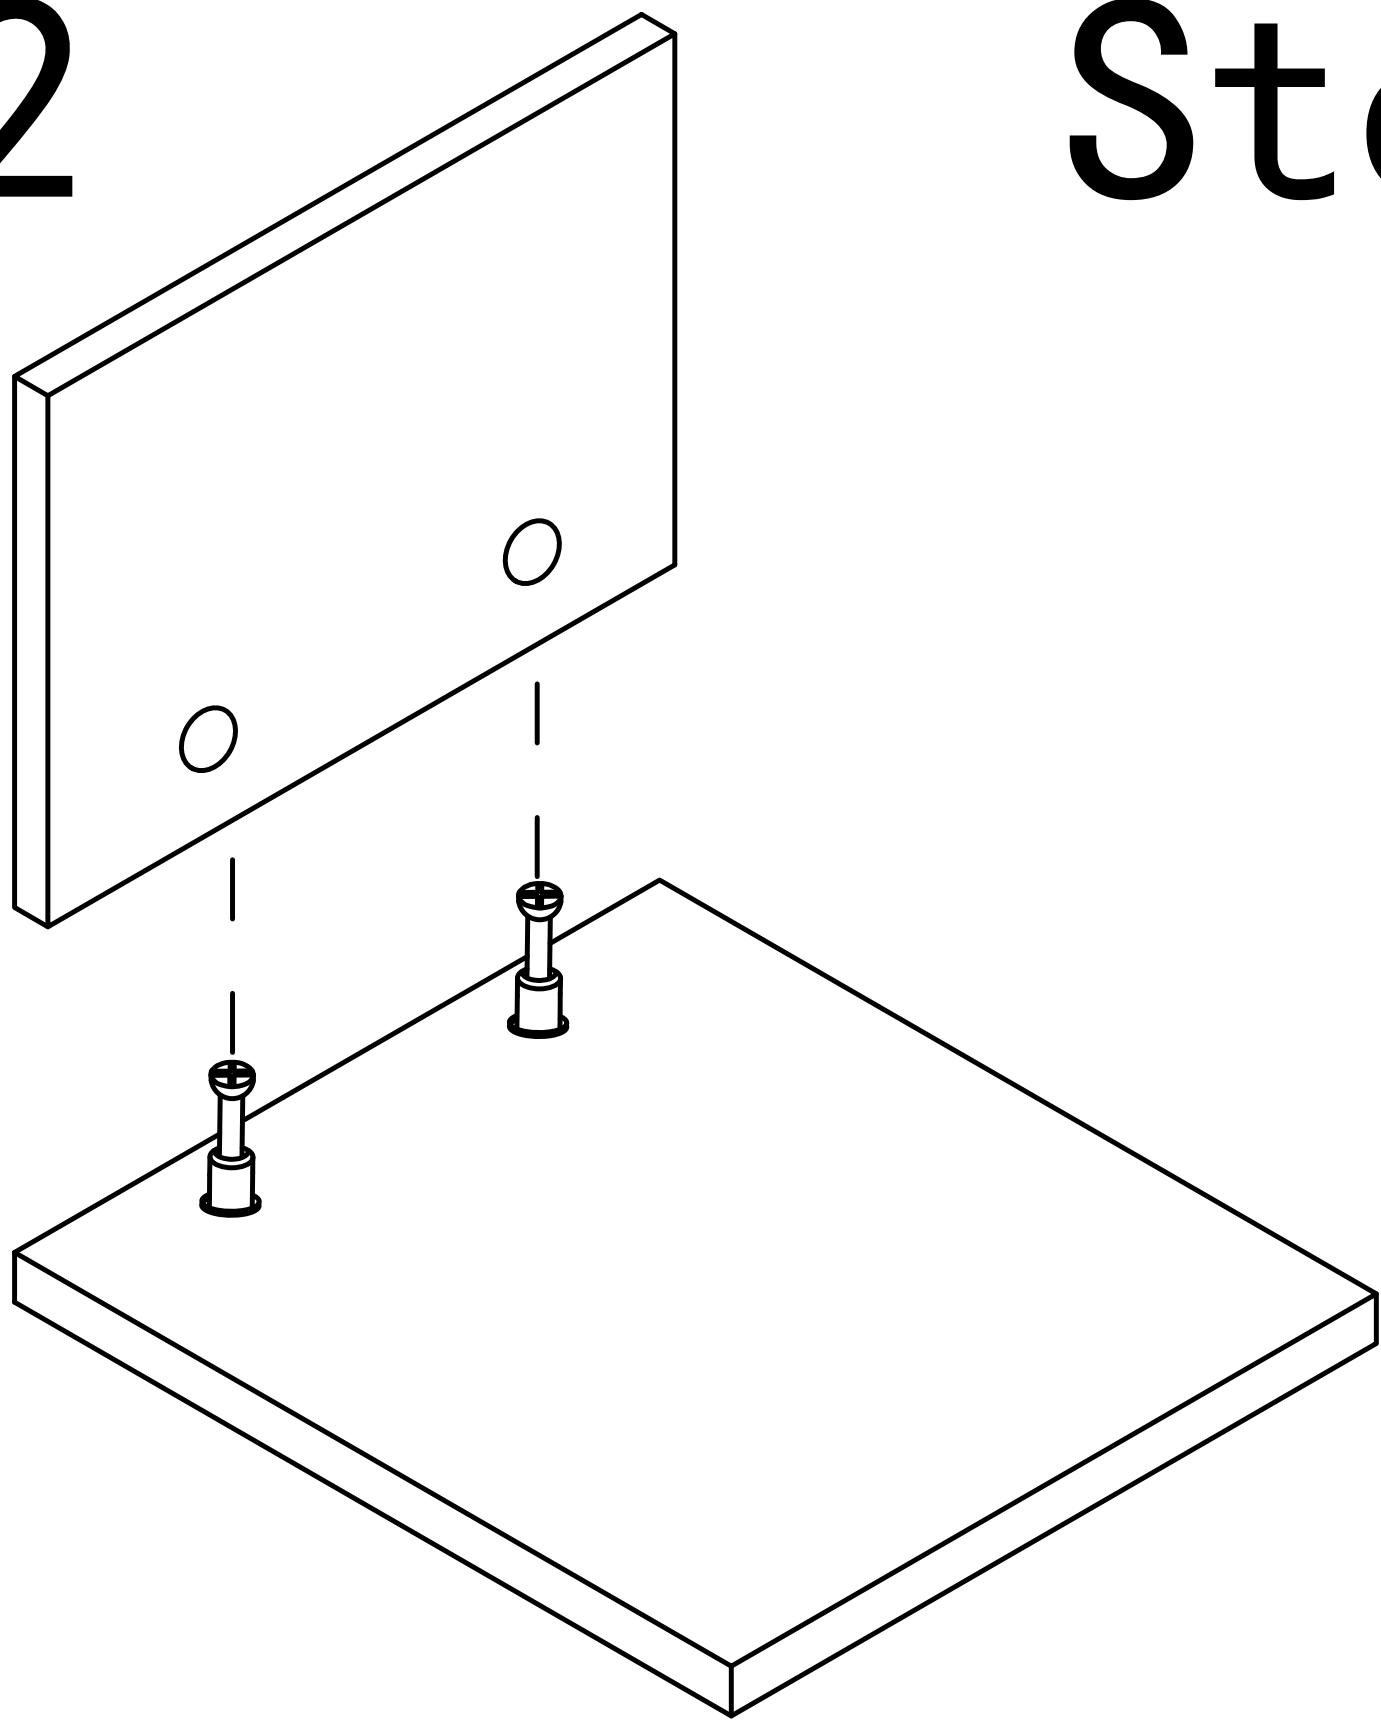



Step3

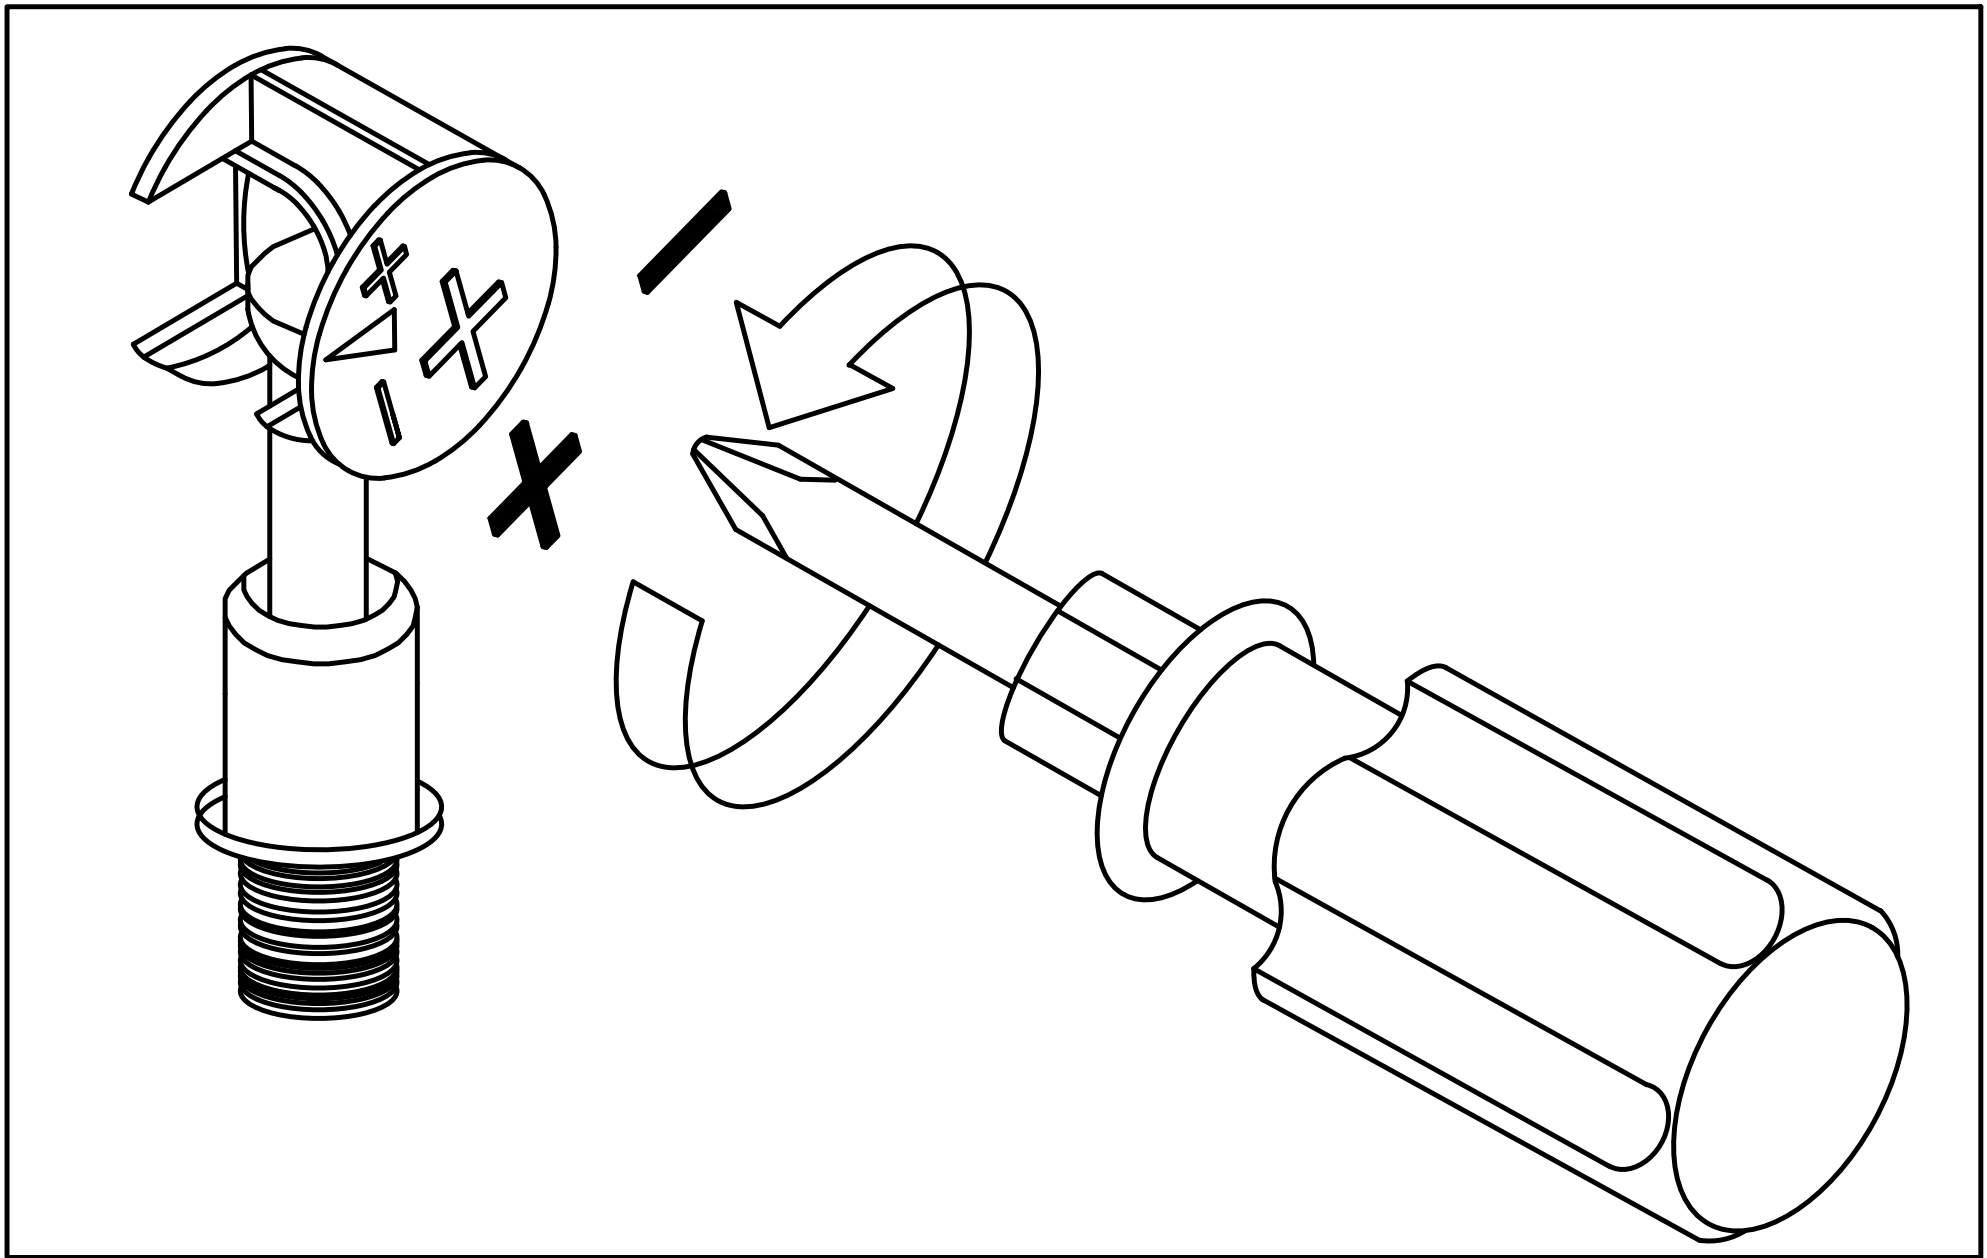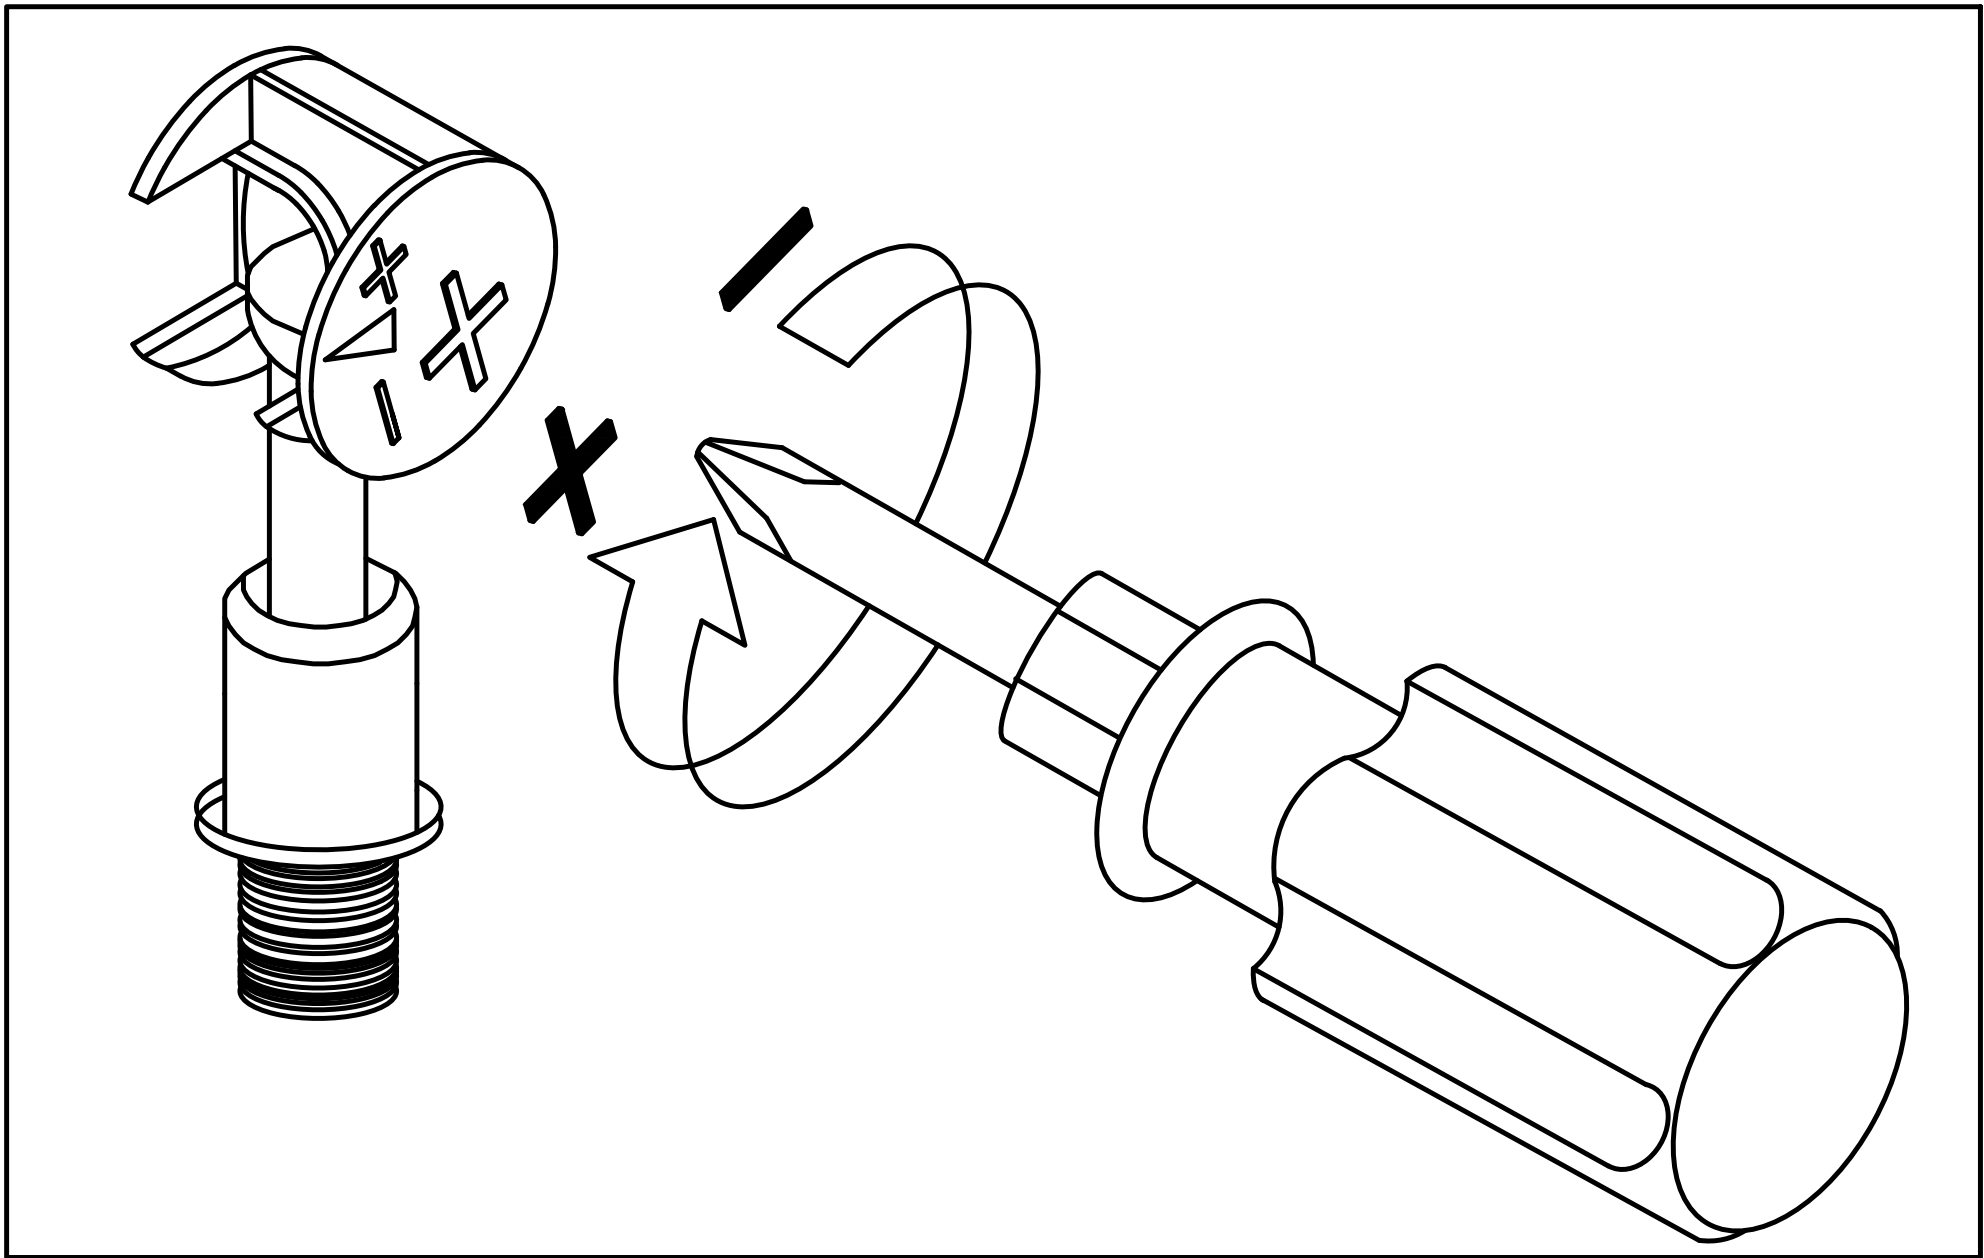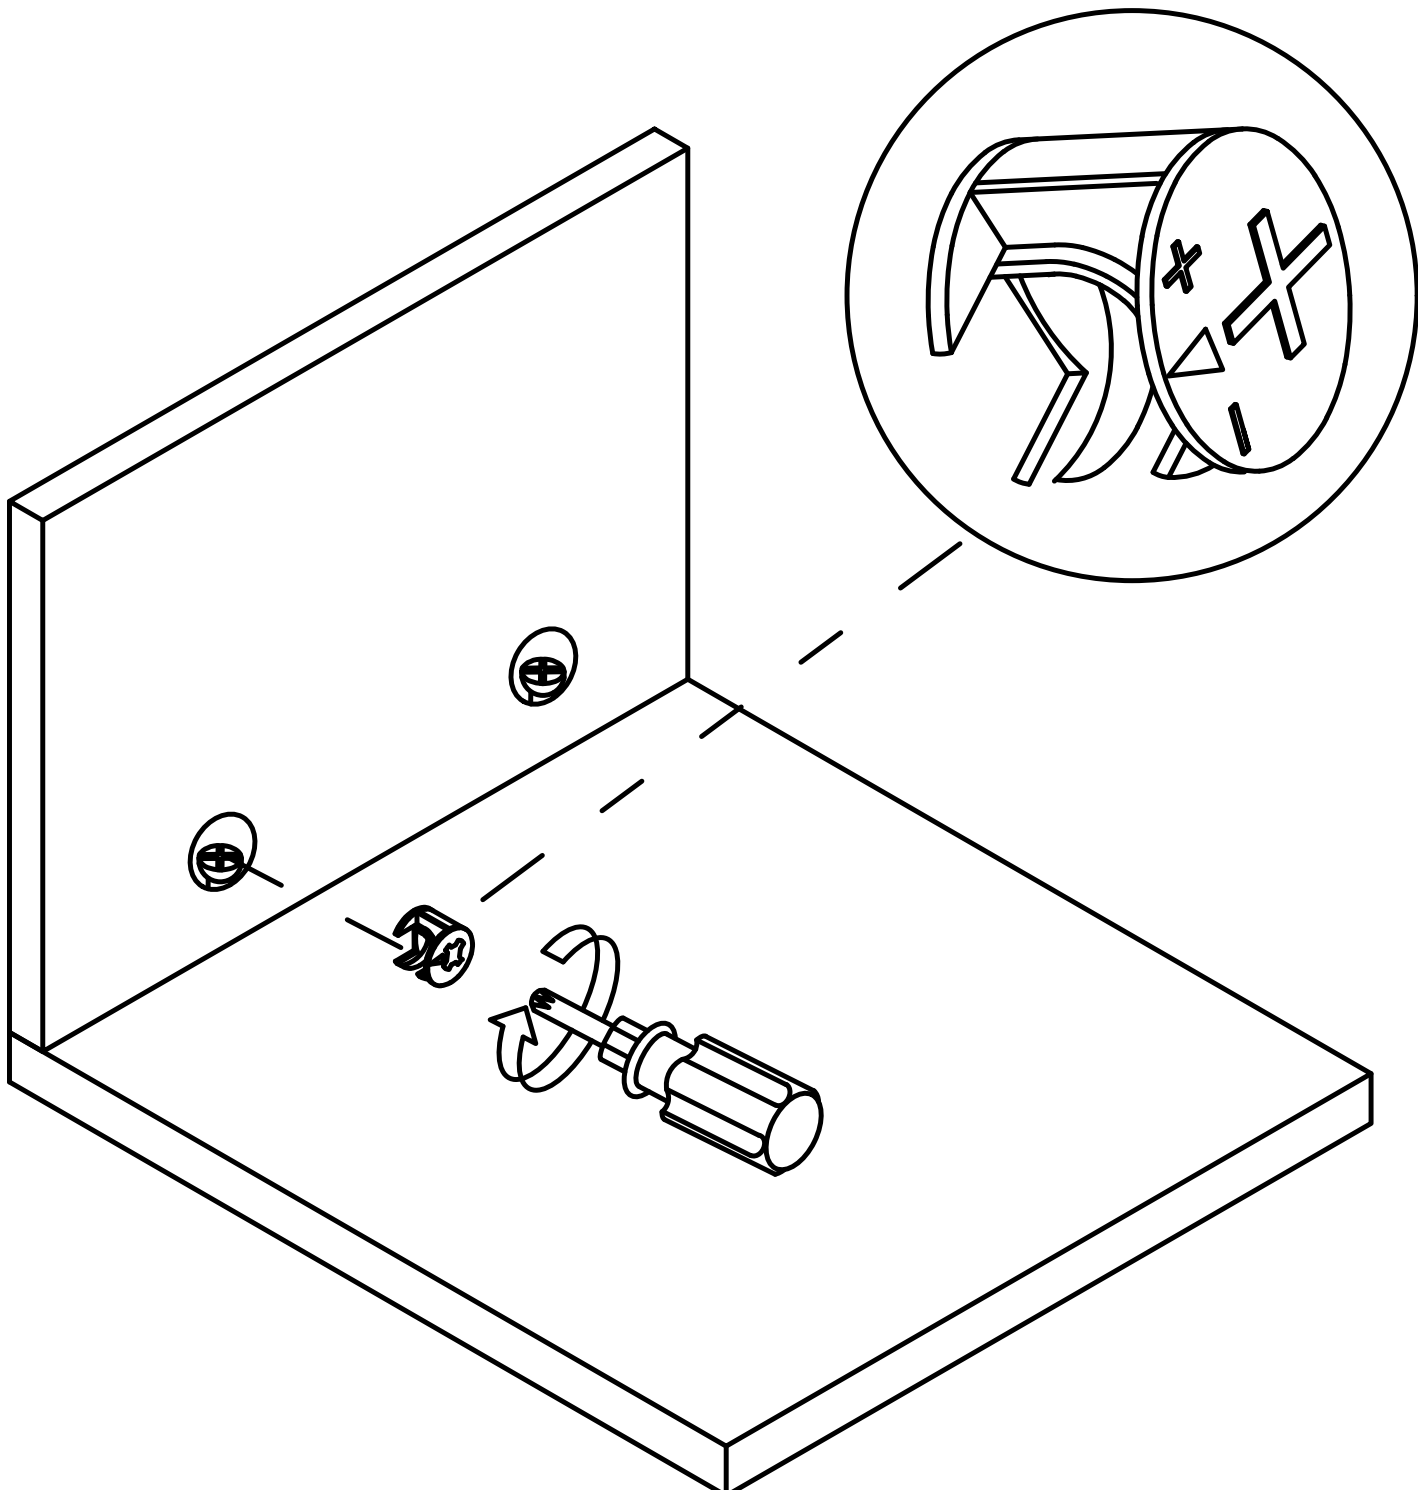



Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

Step 1

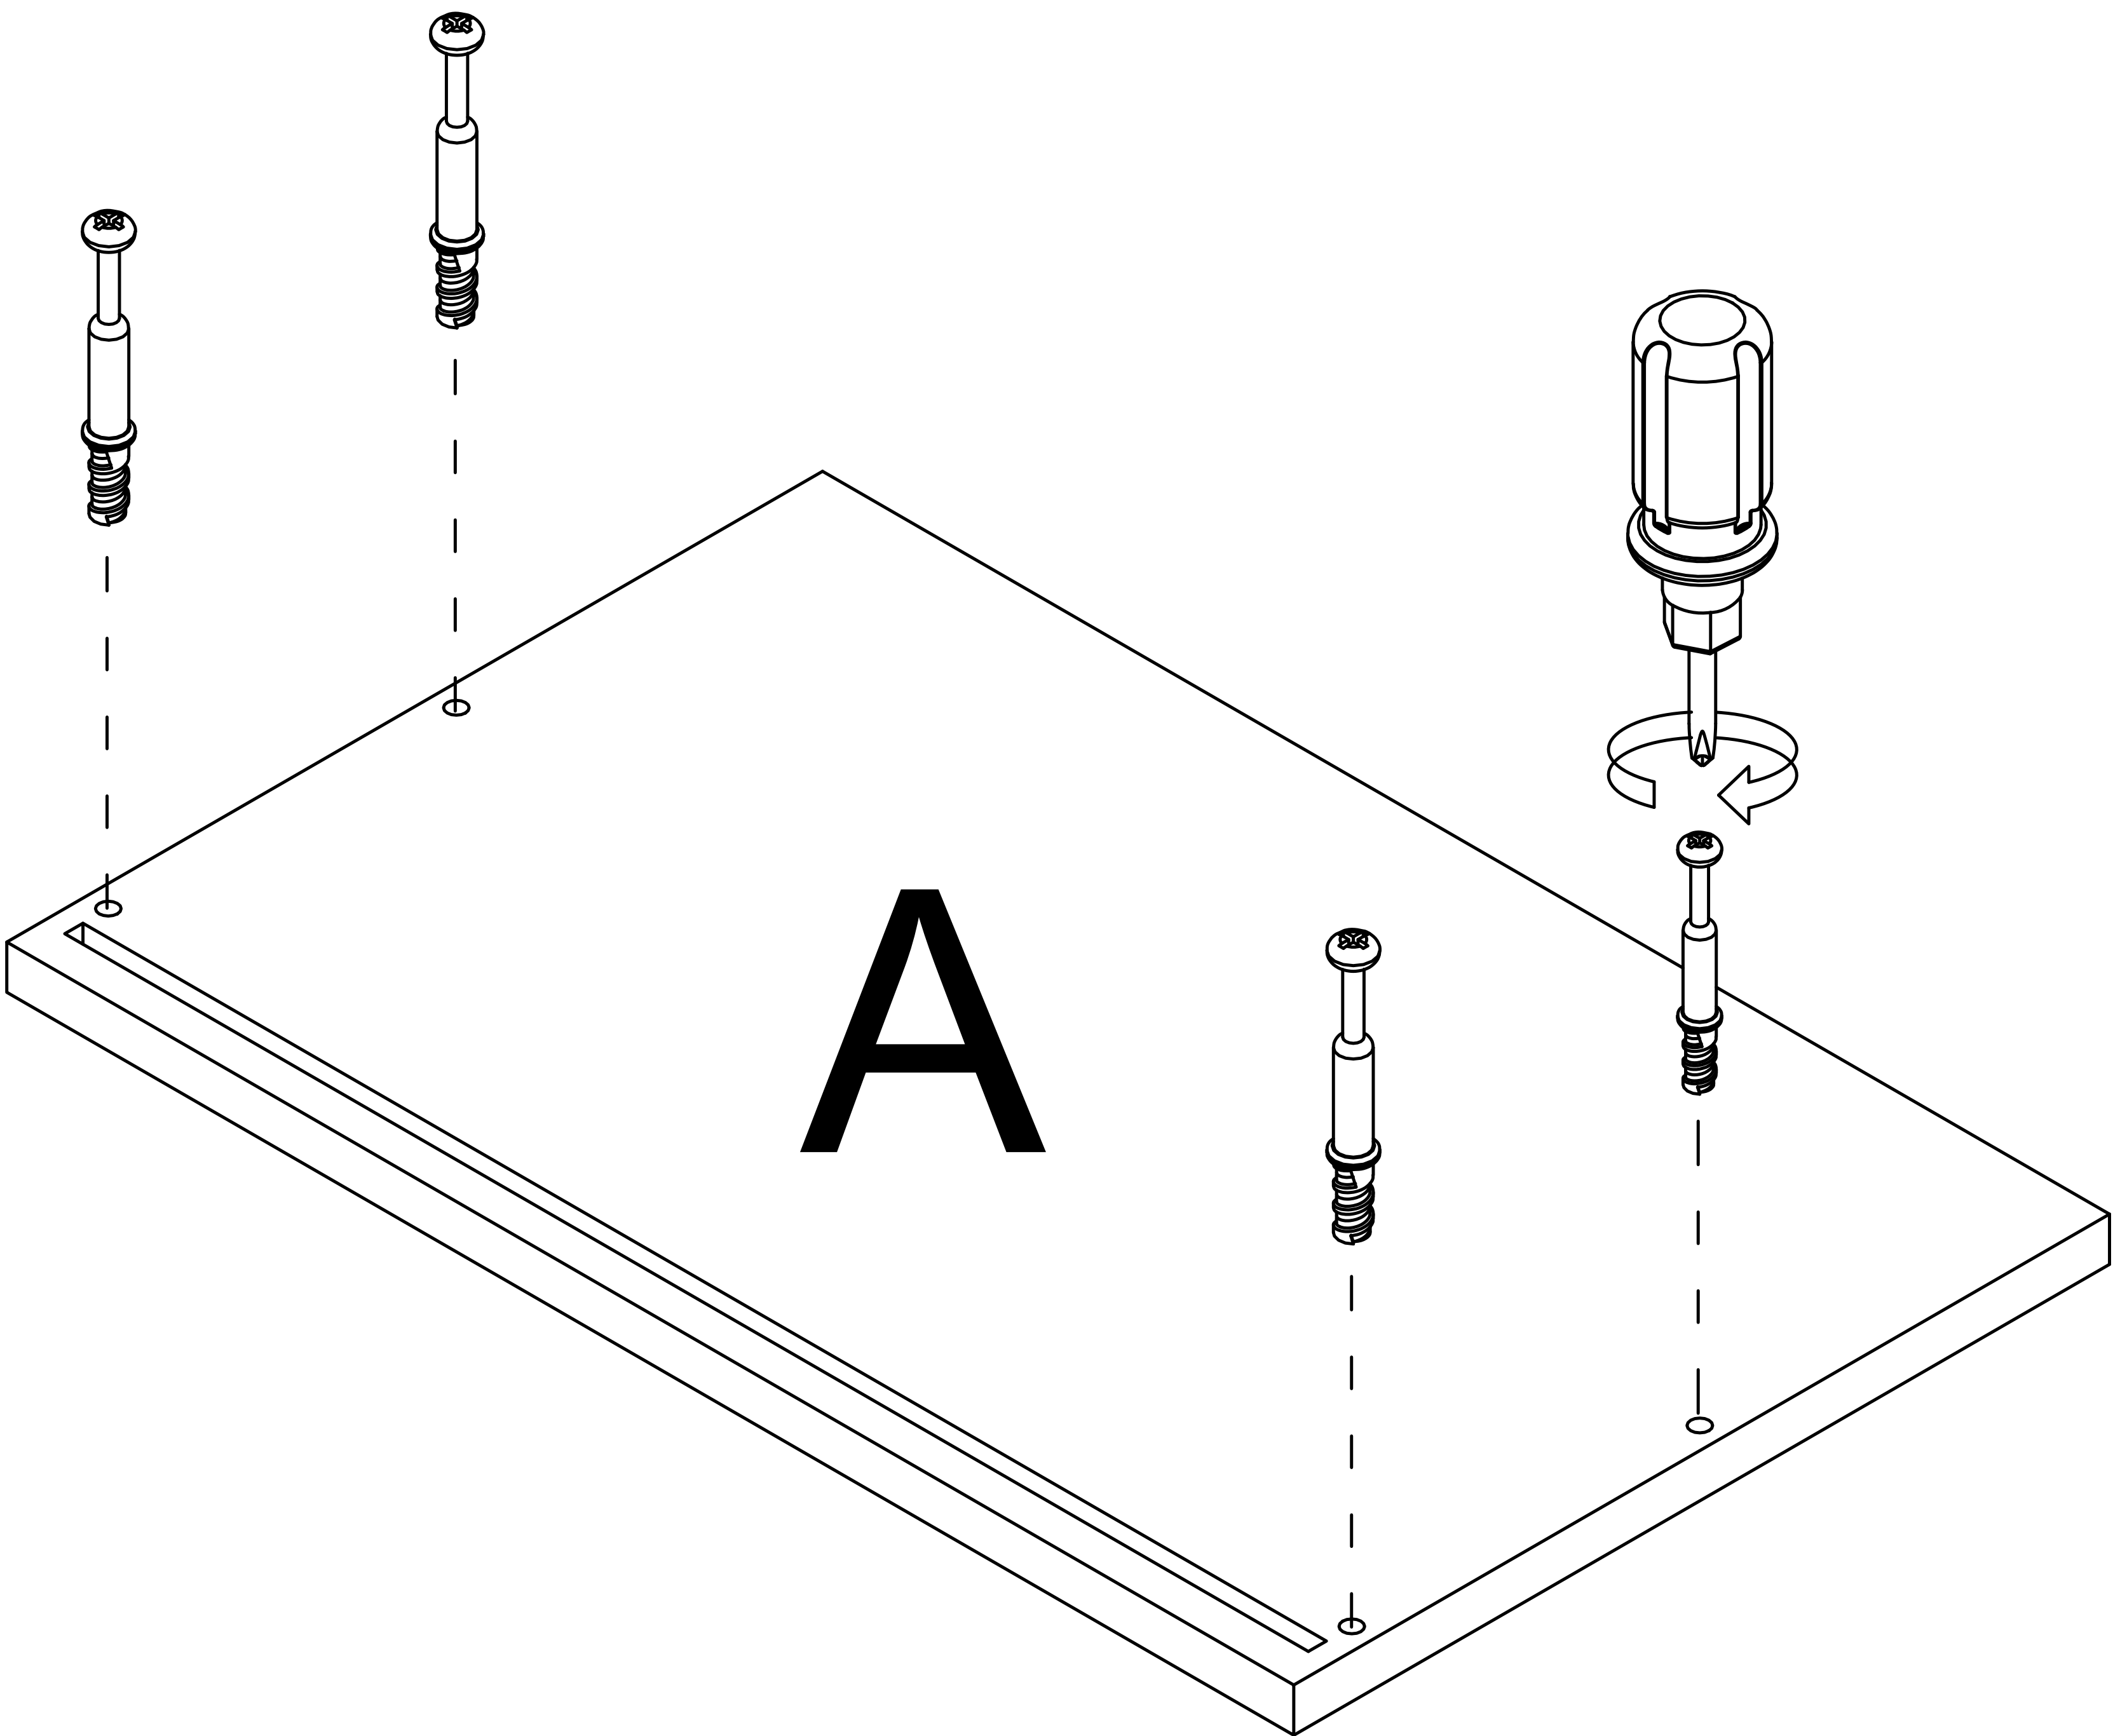
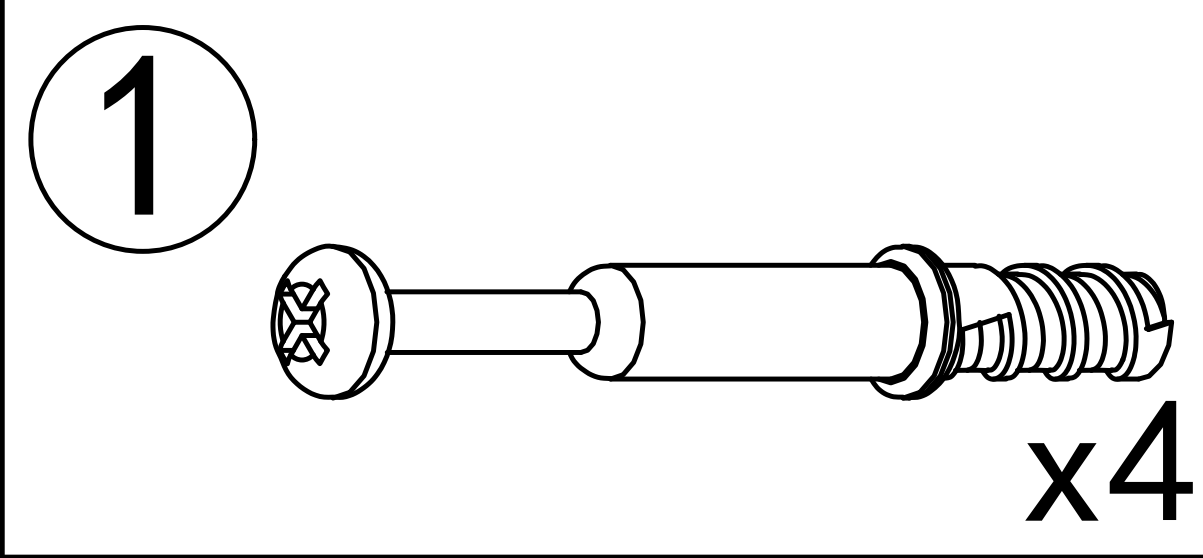


Step 2

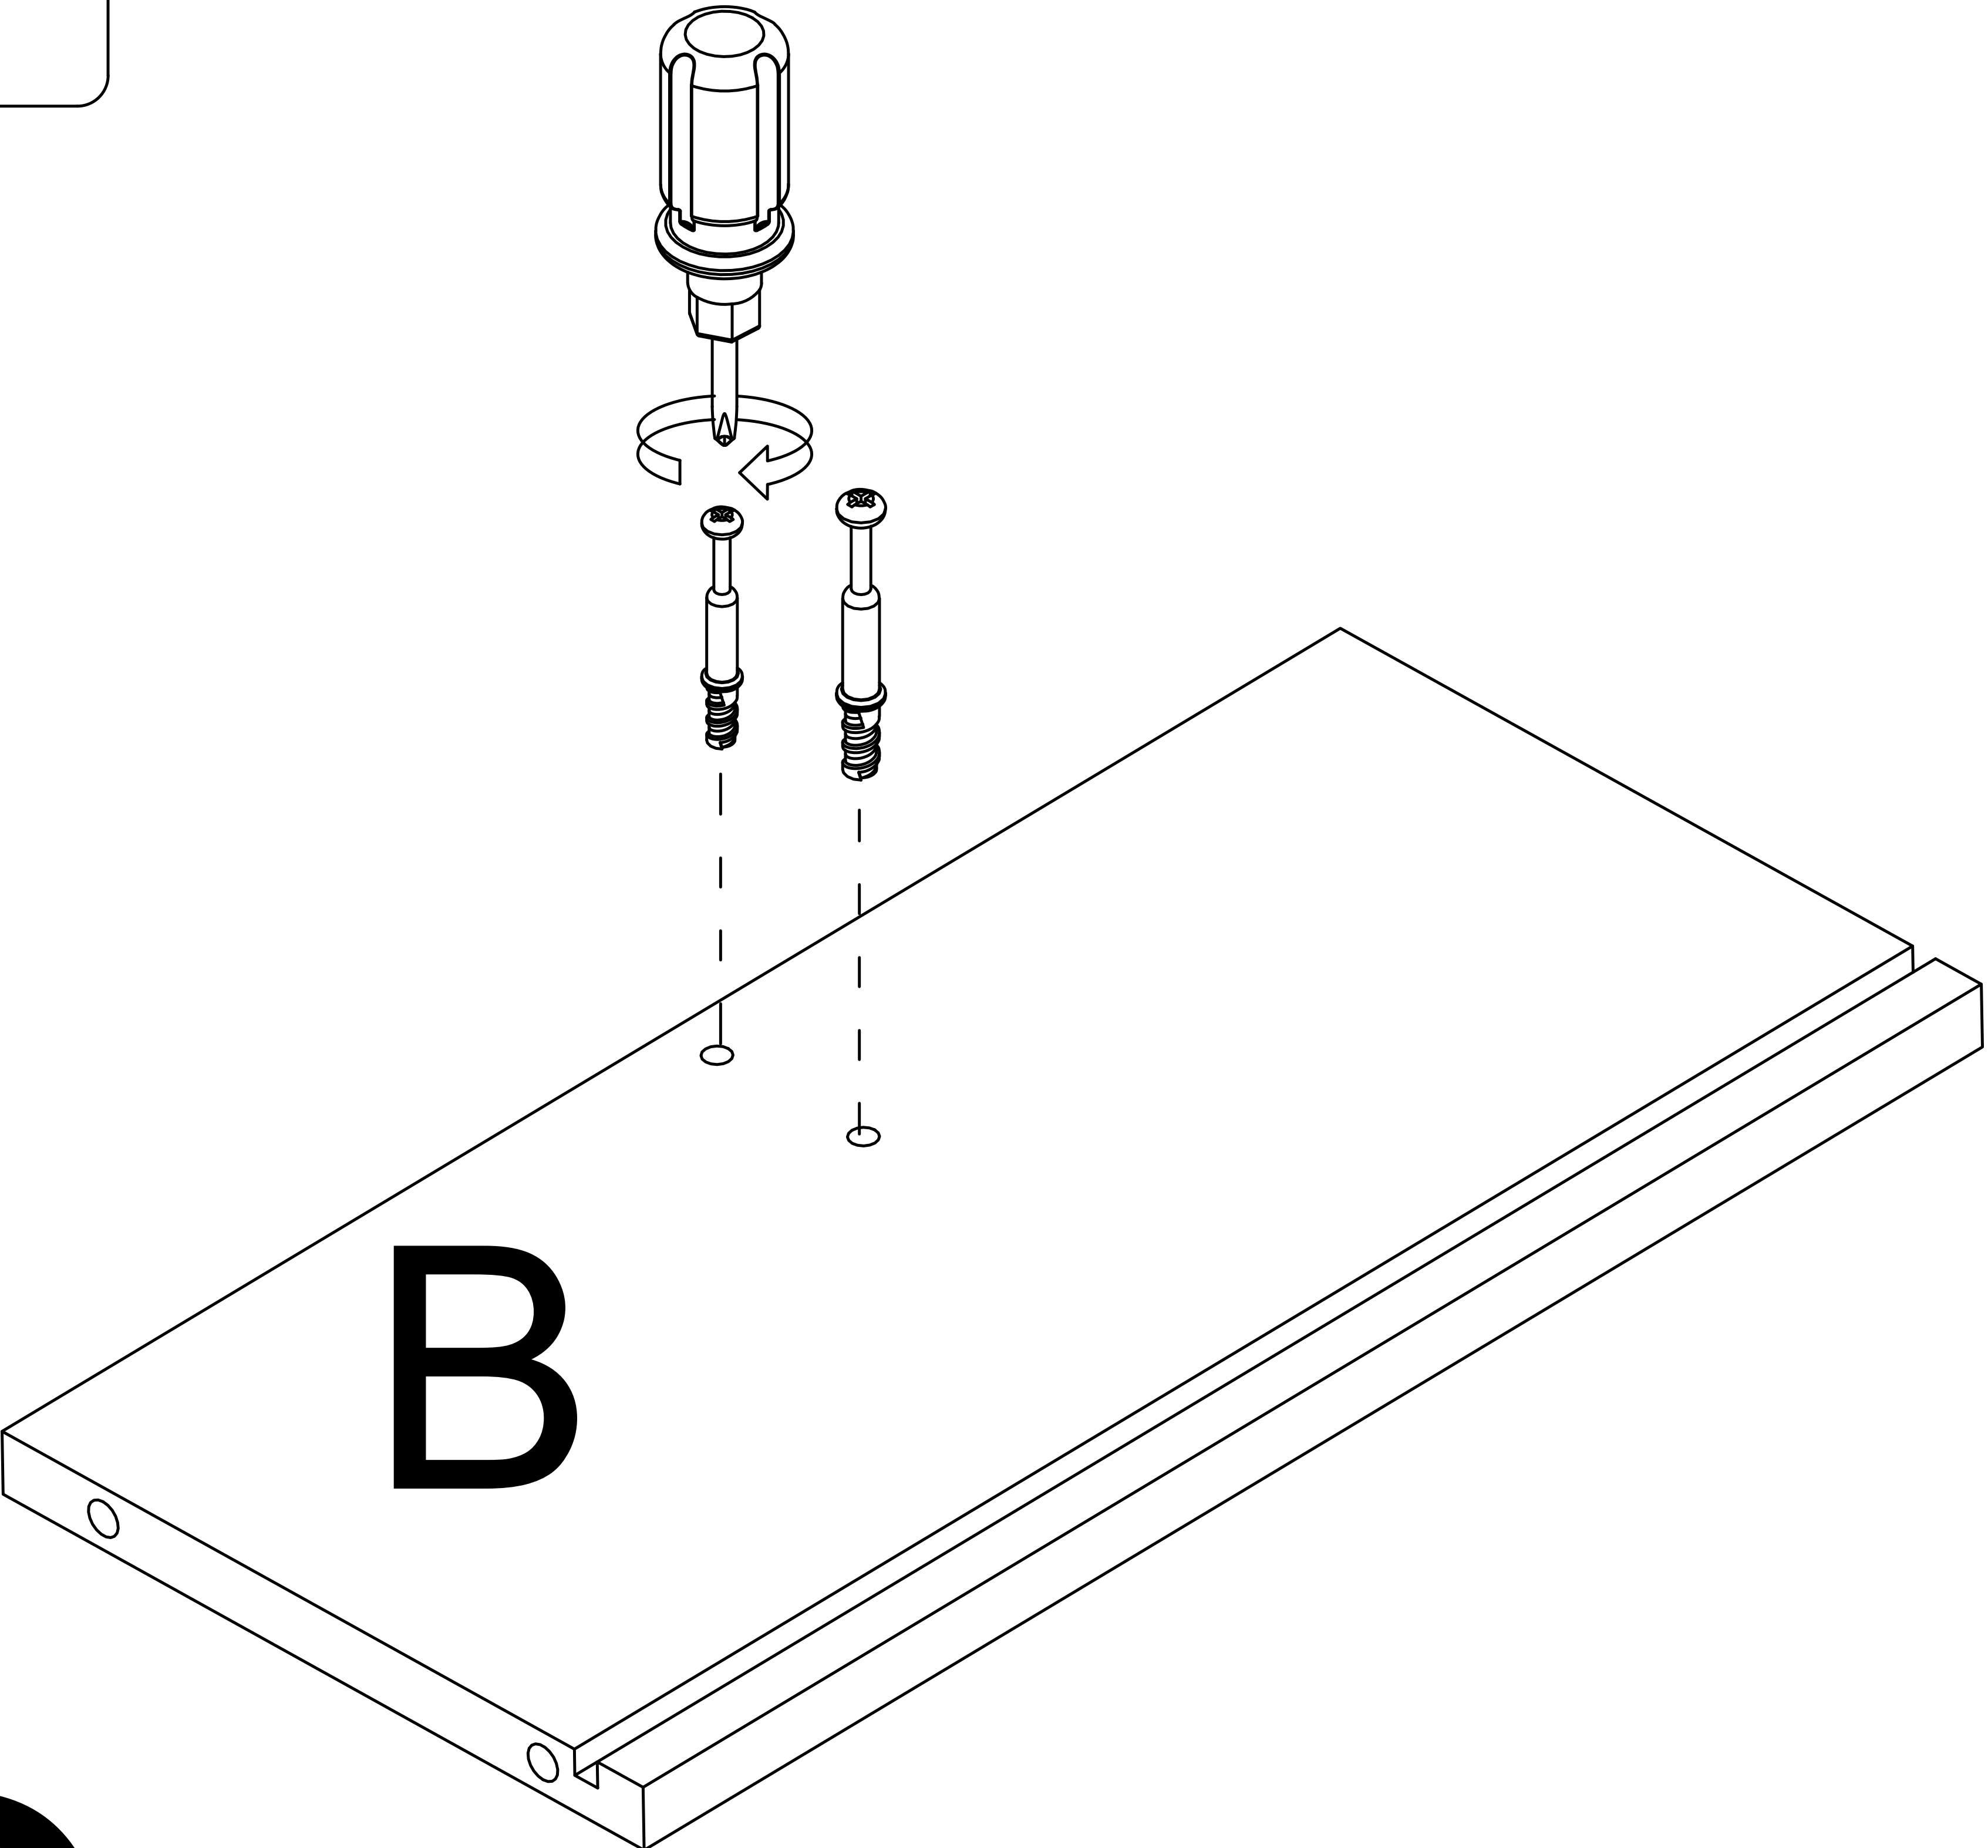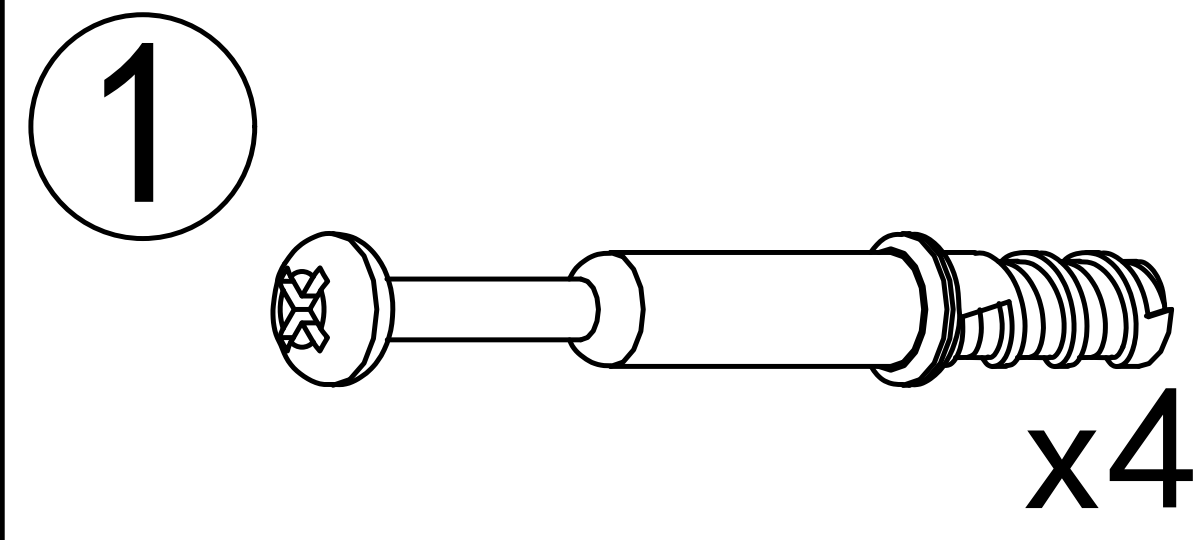


x 2



Step 3

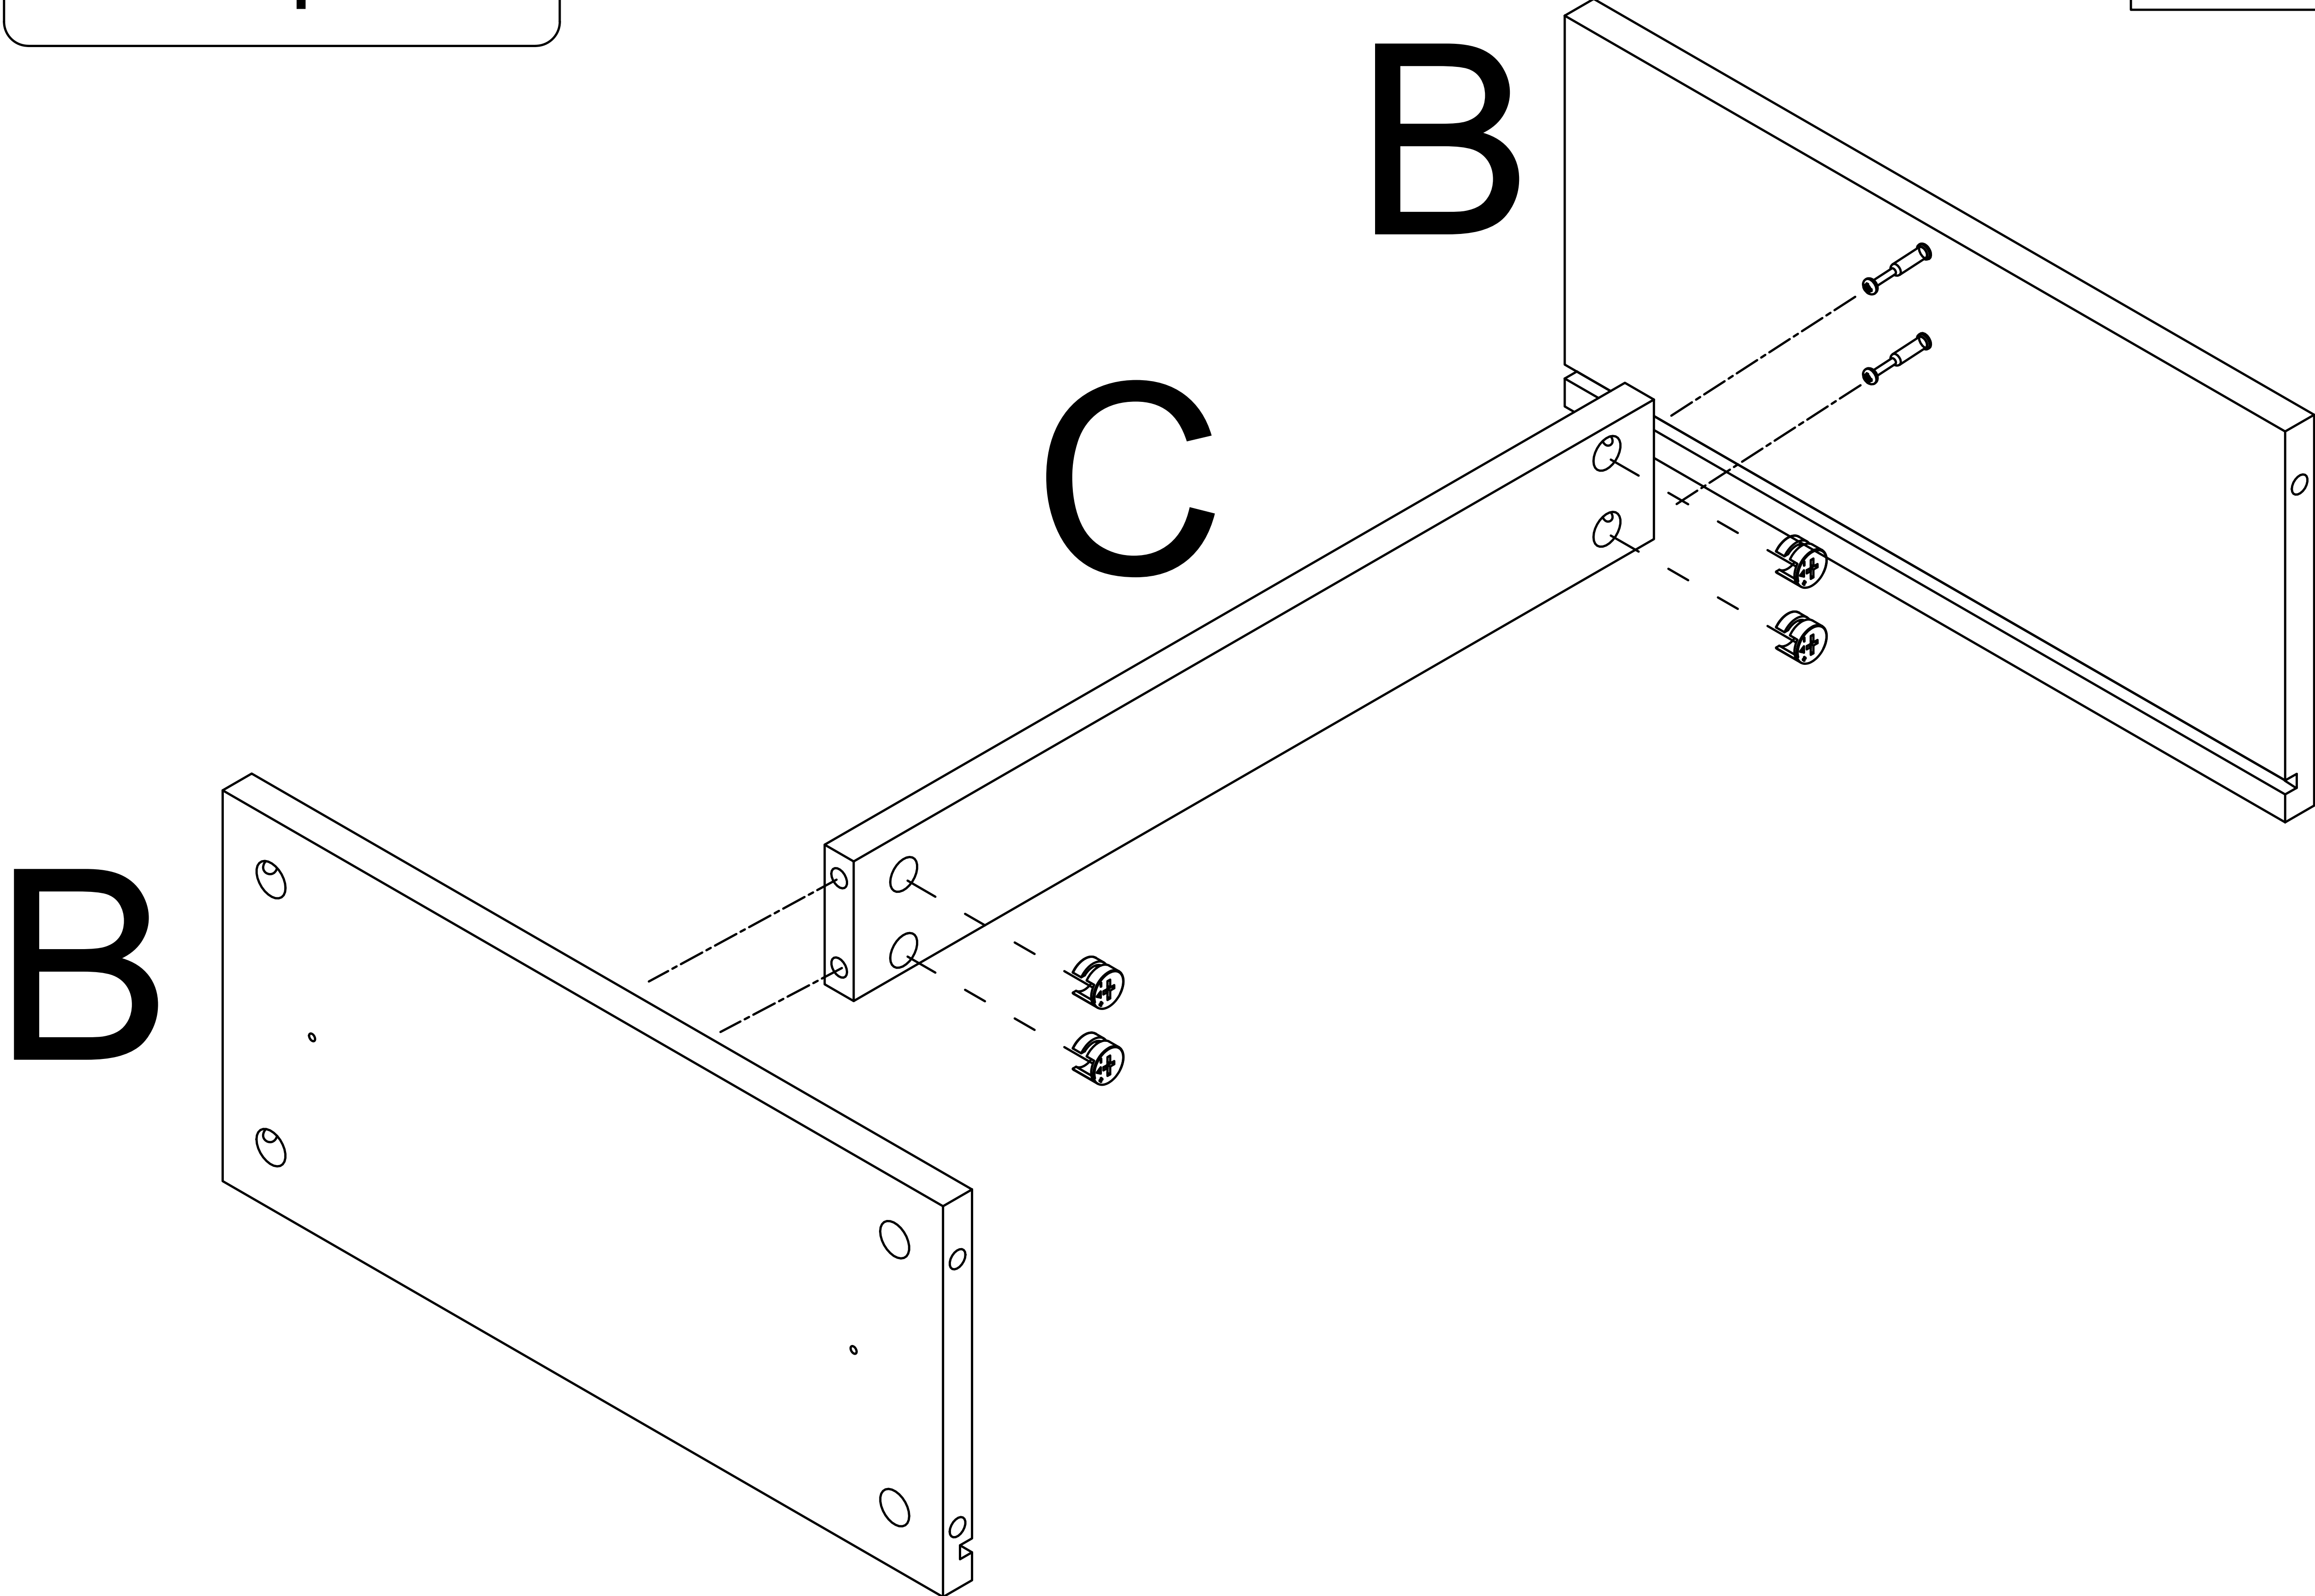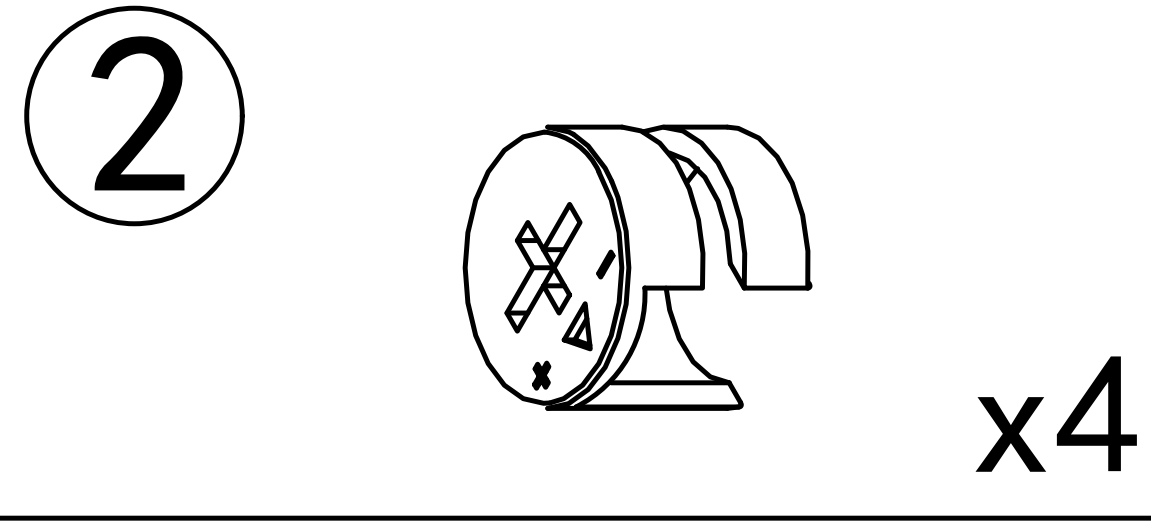


Step 4

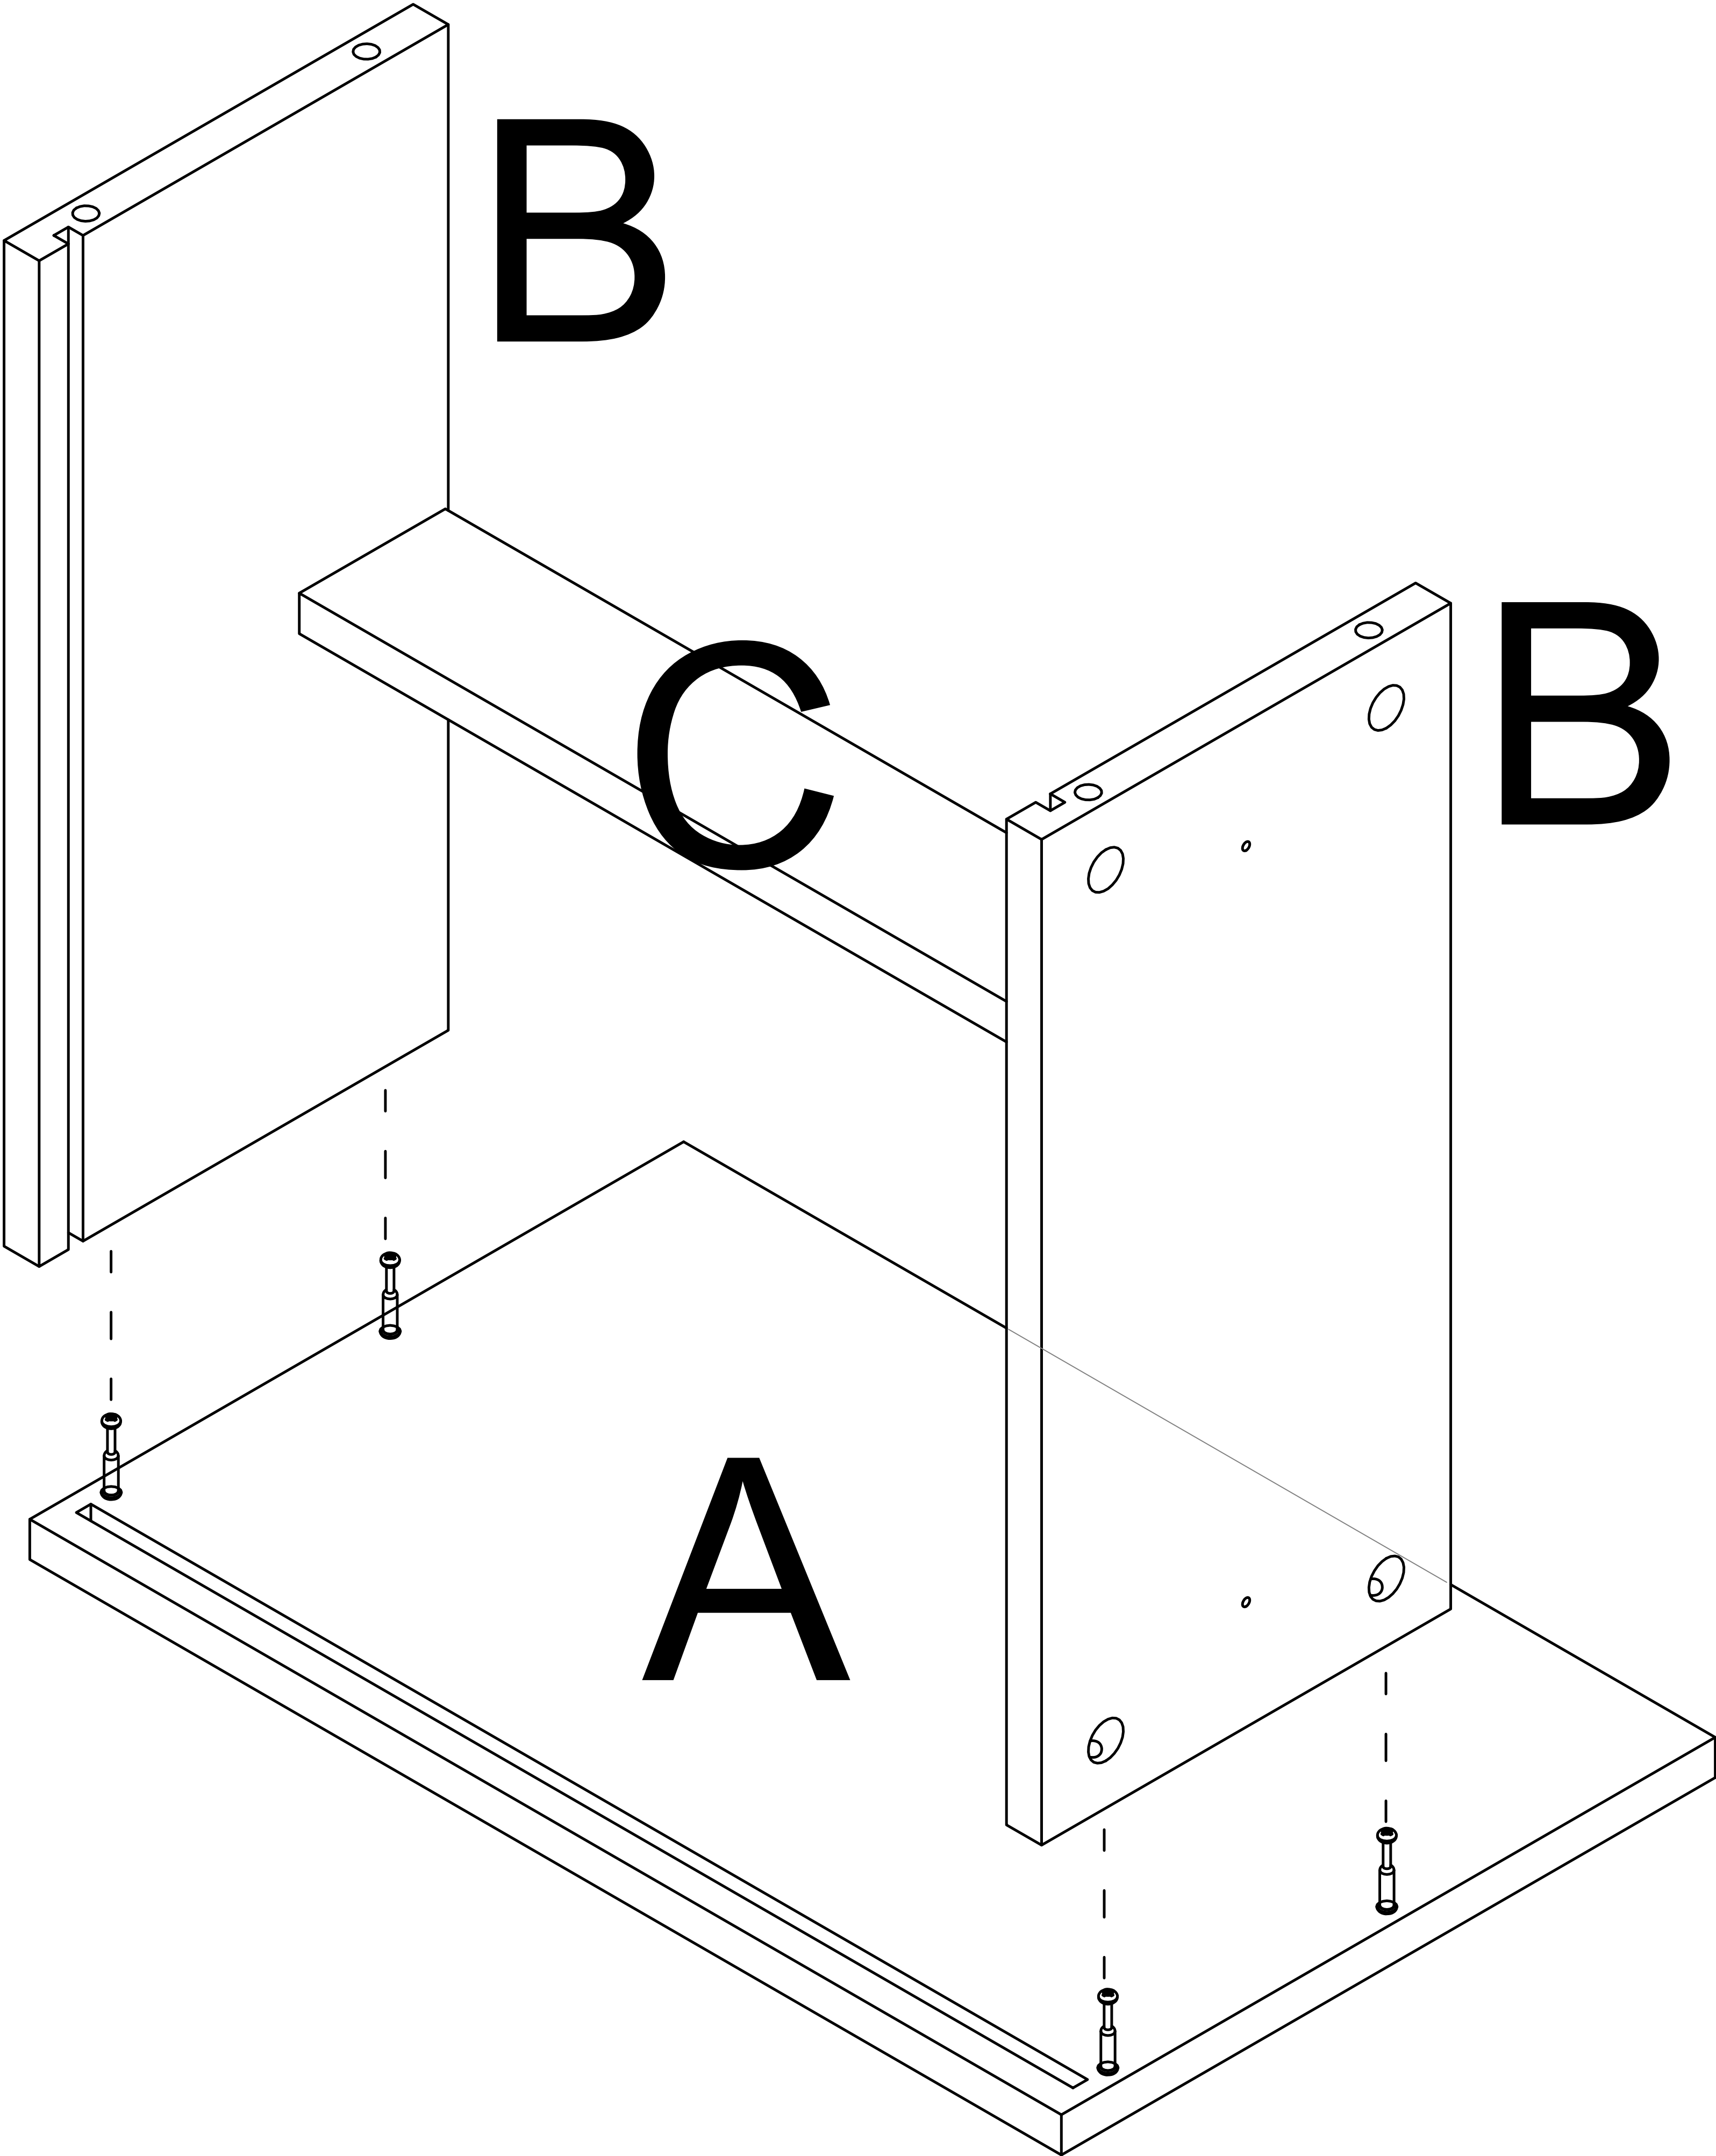

Step 5

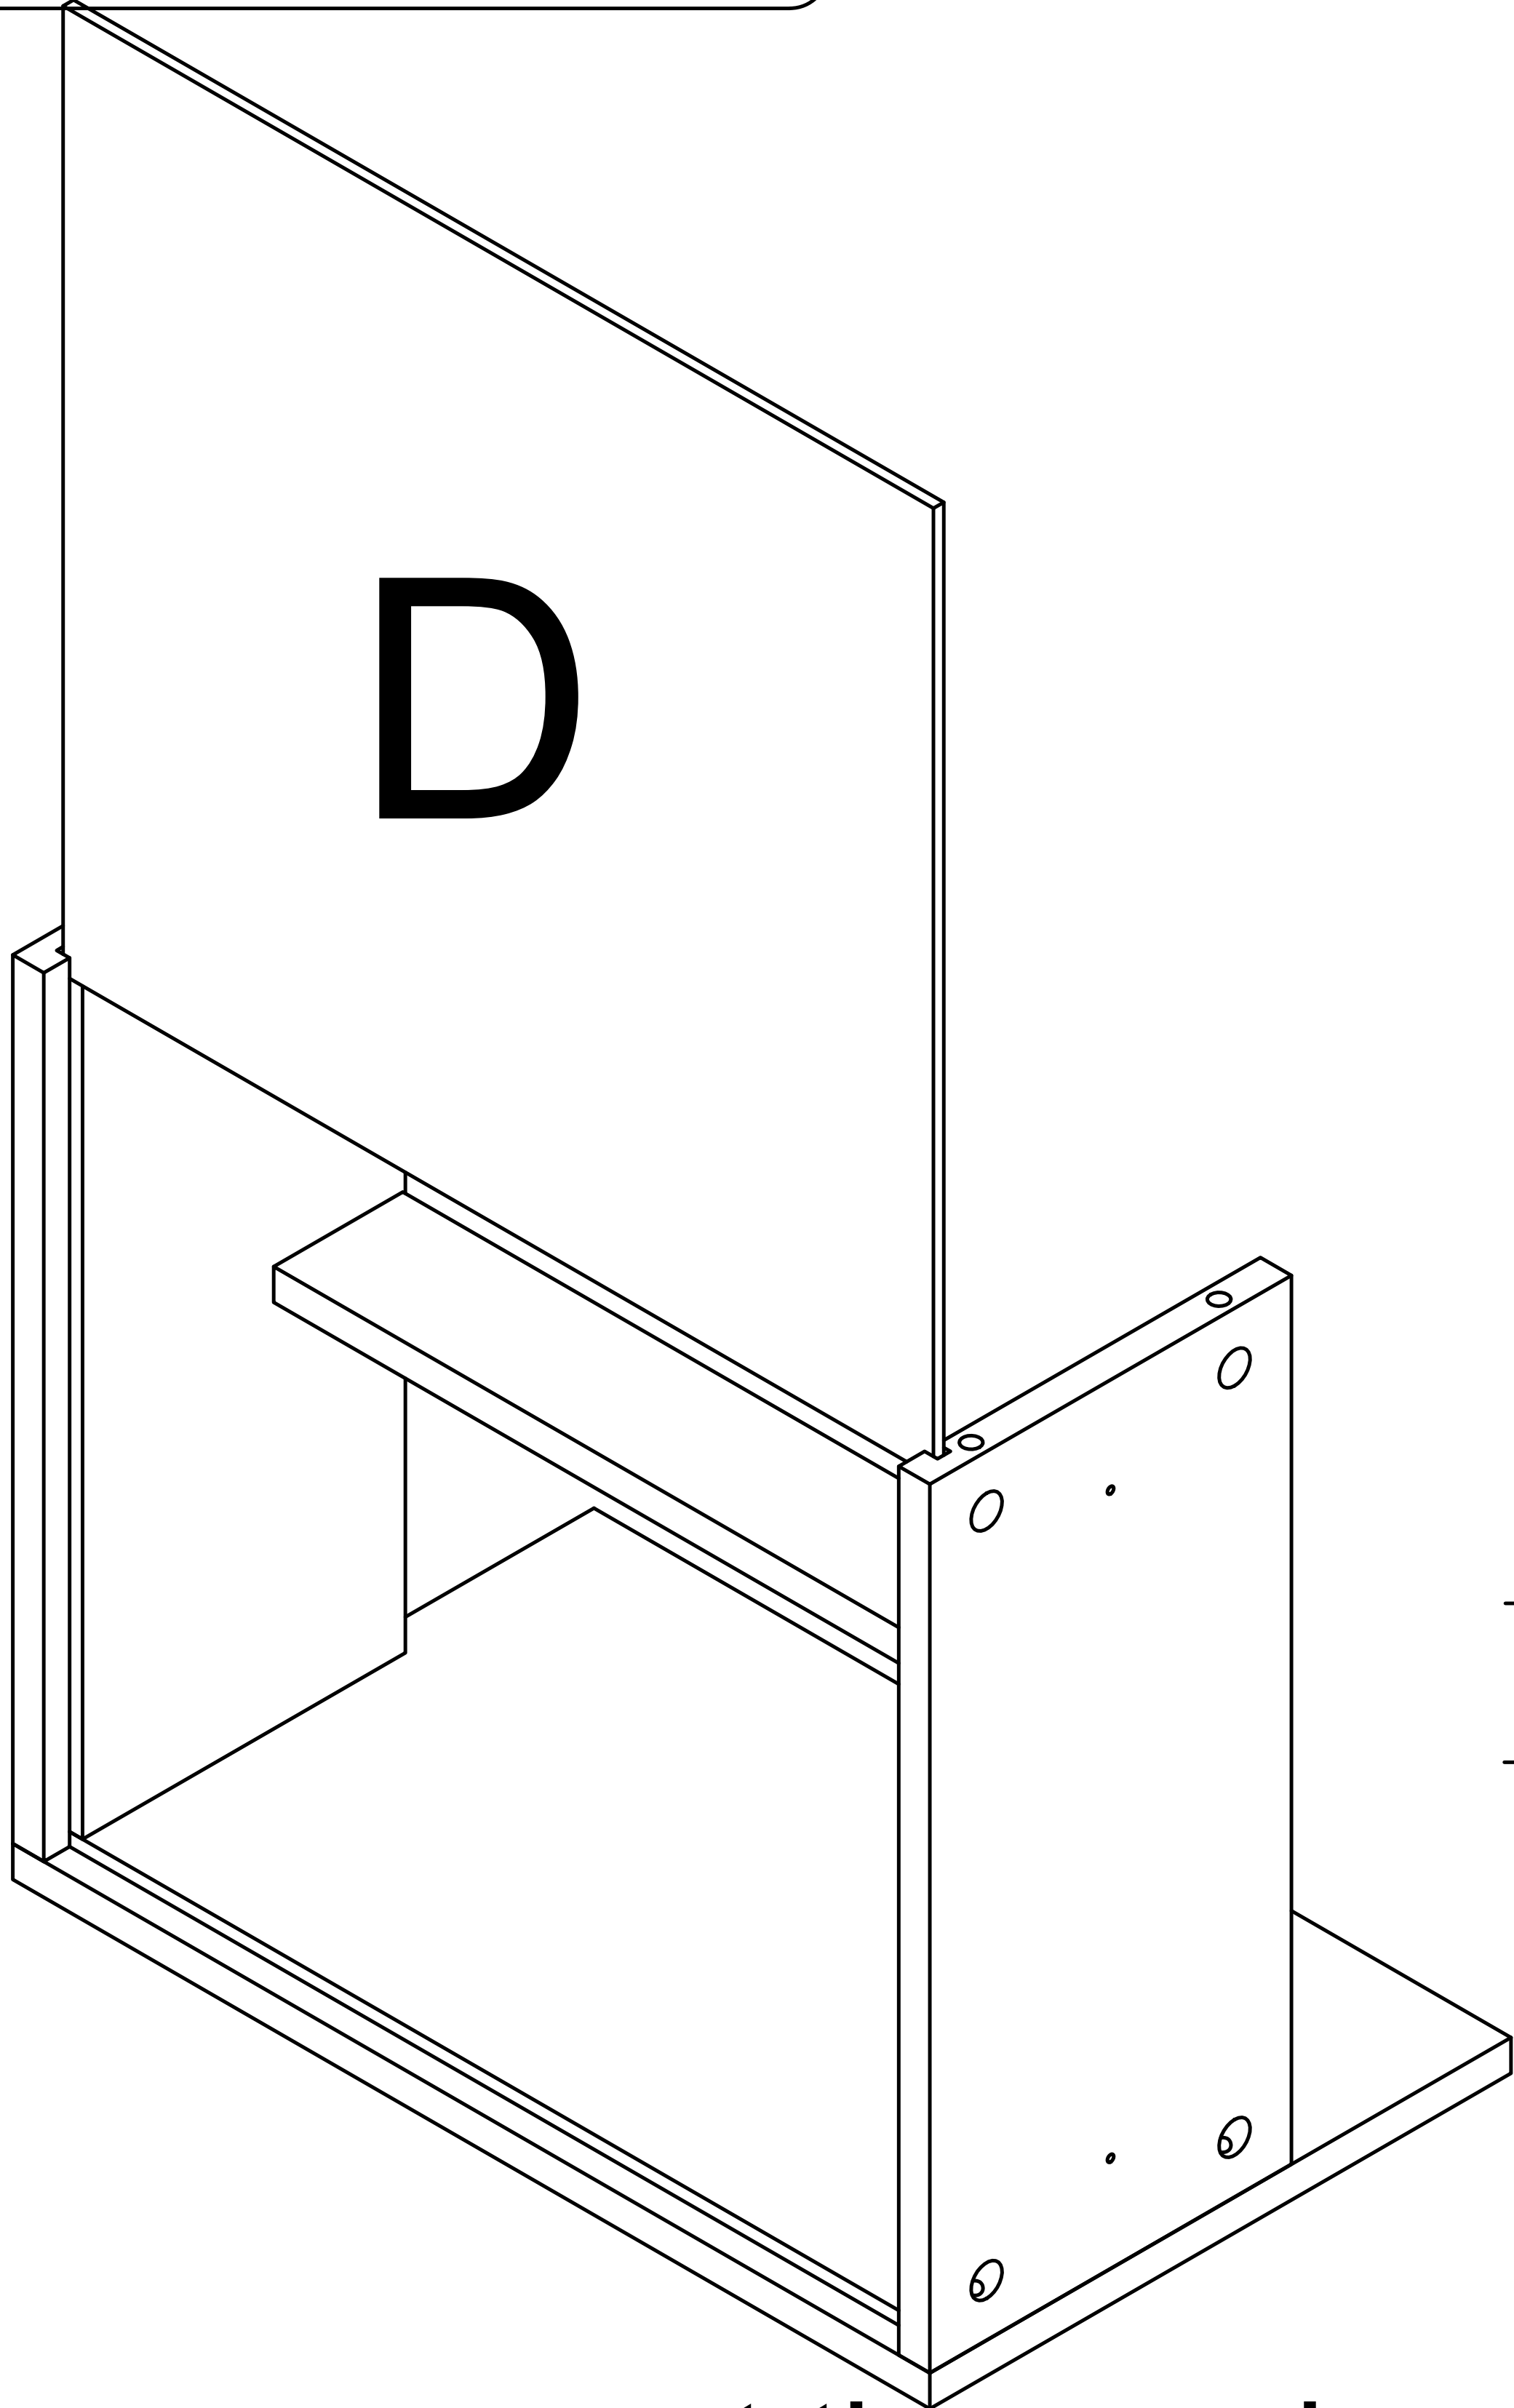
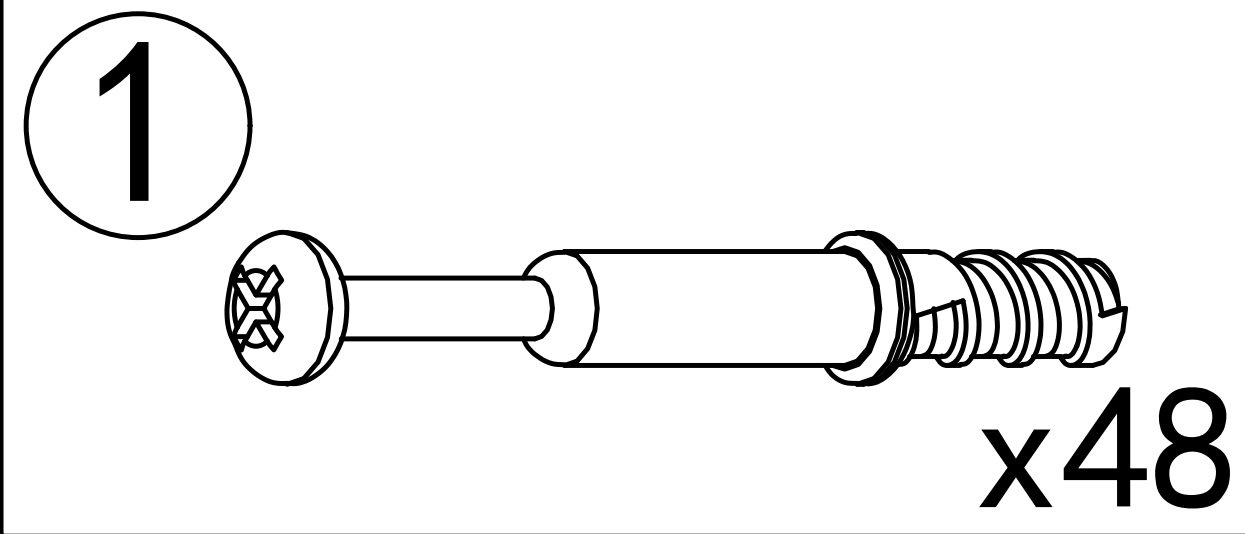


x6

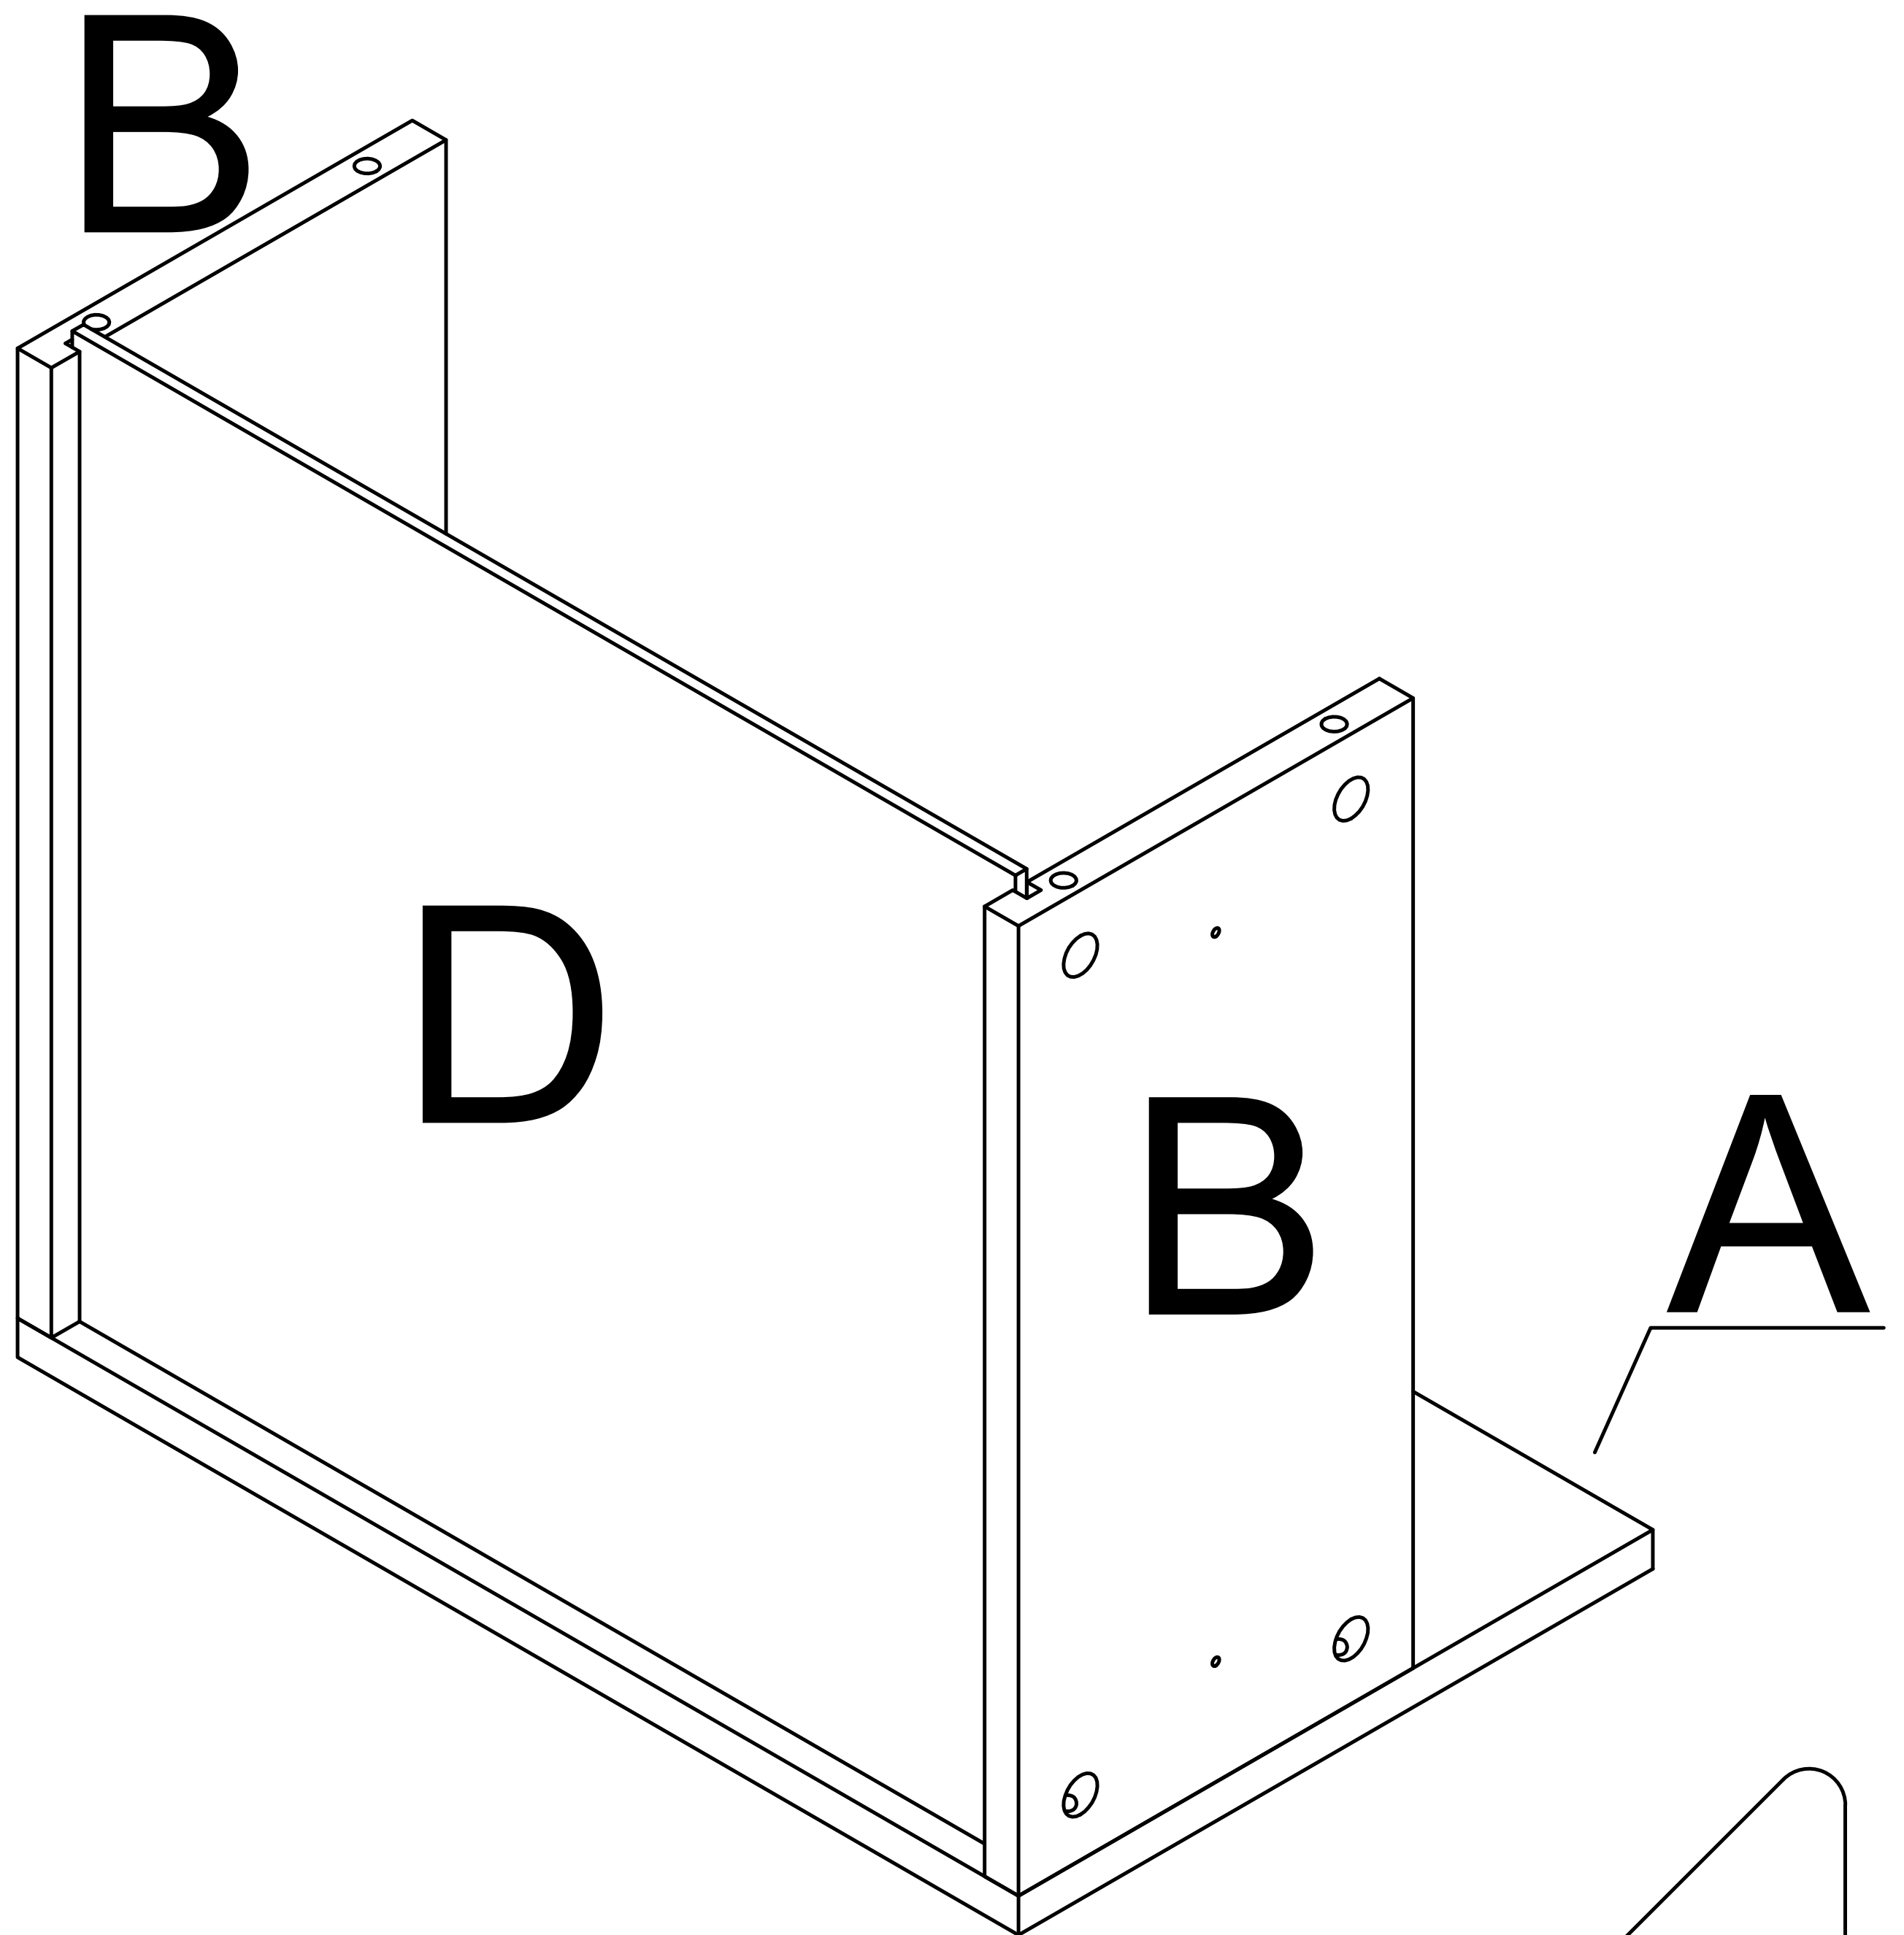

You can repeat the previous steps to obtain 6 identical drawers.


Step 6

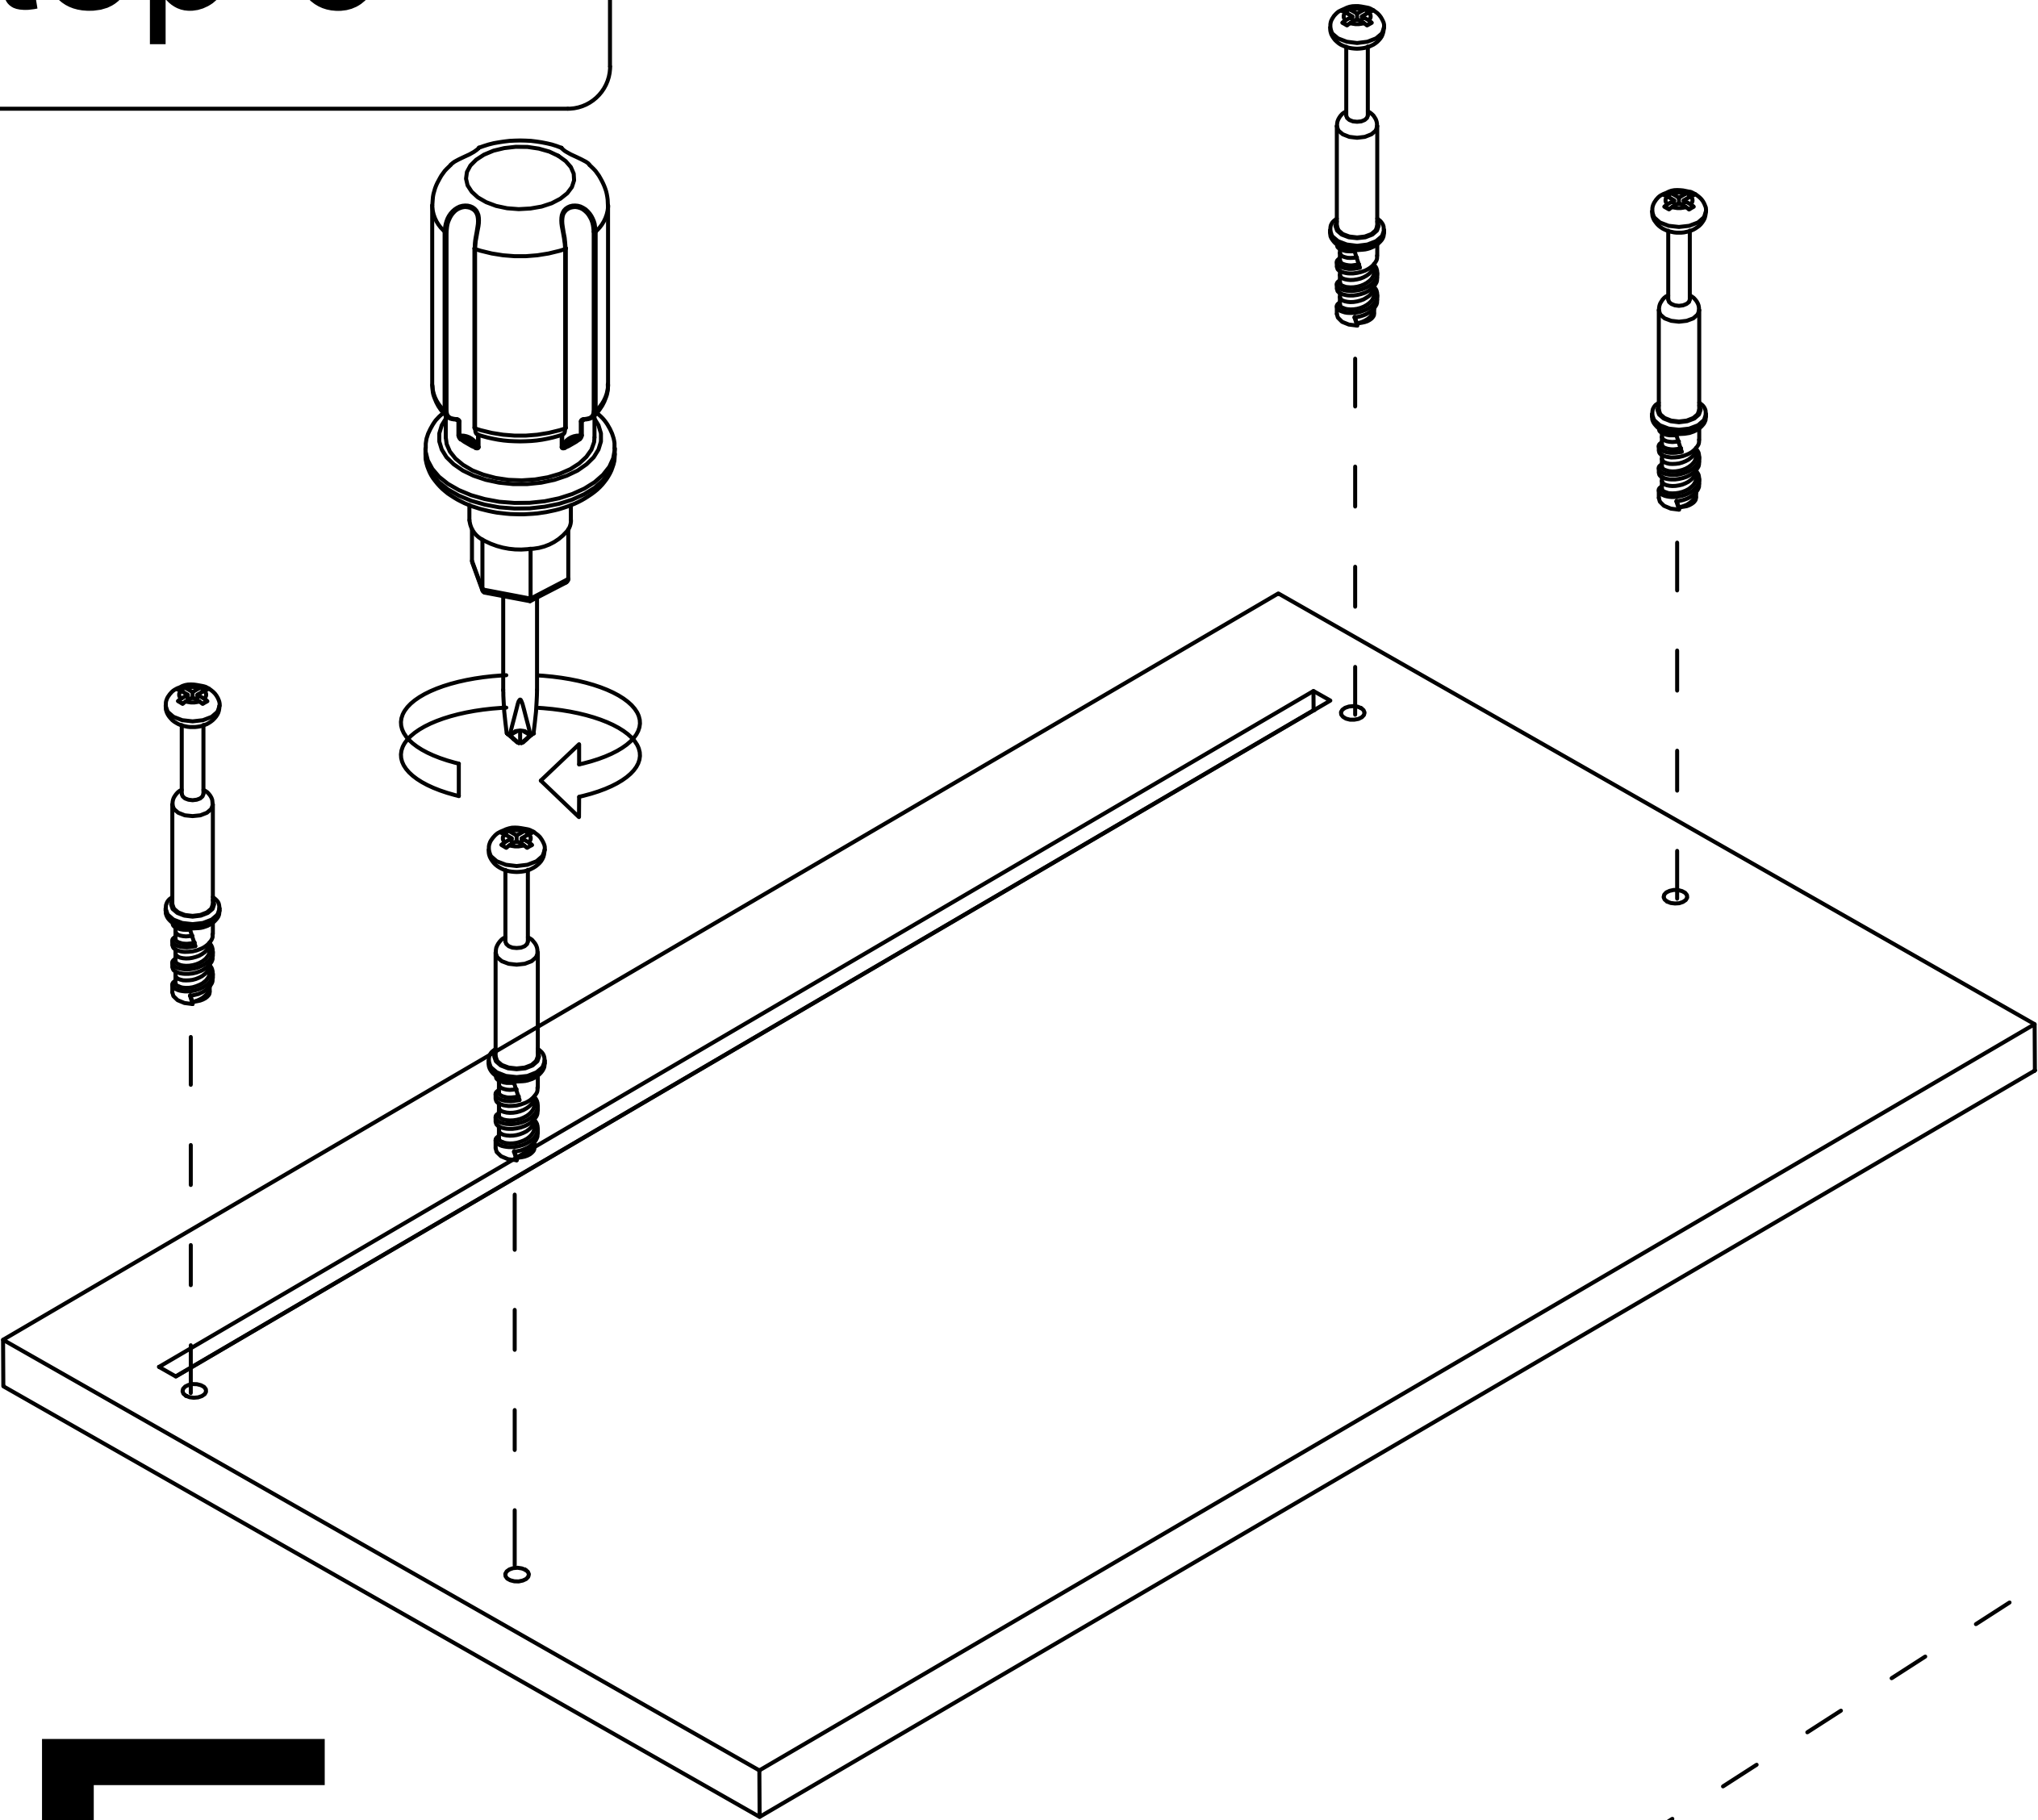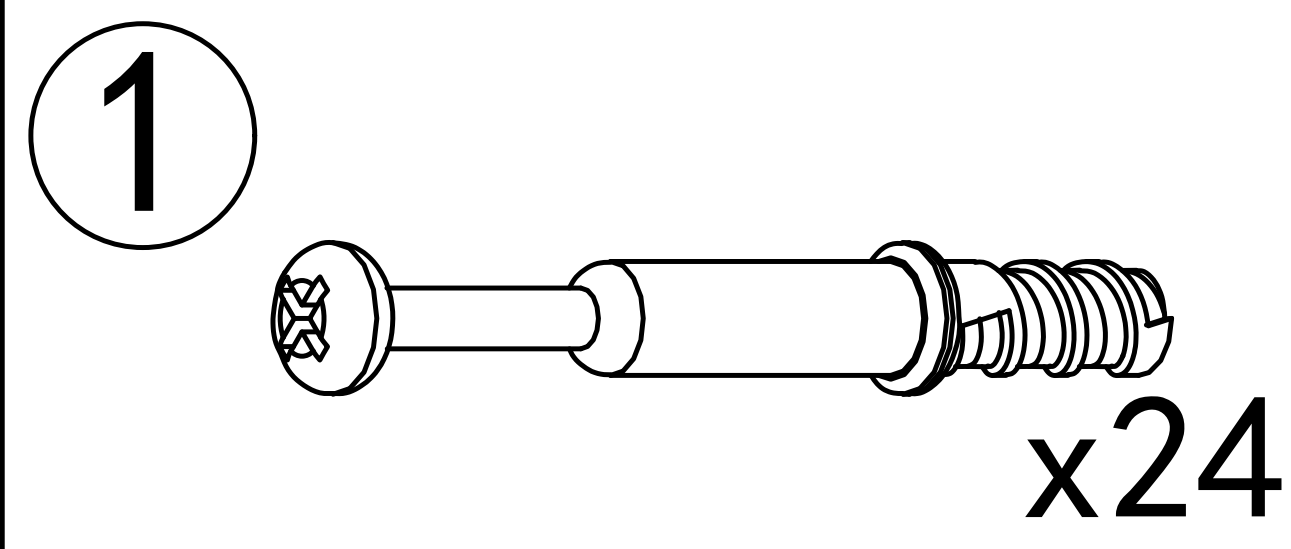


E

x2

F

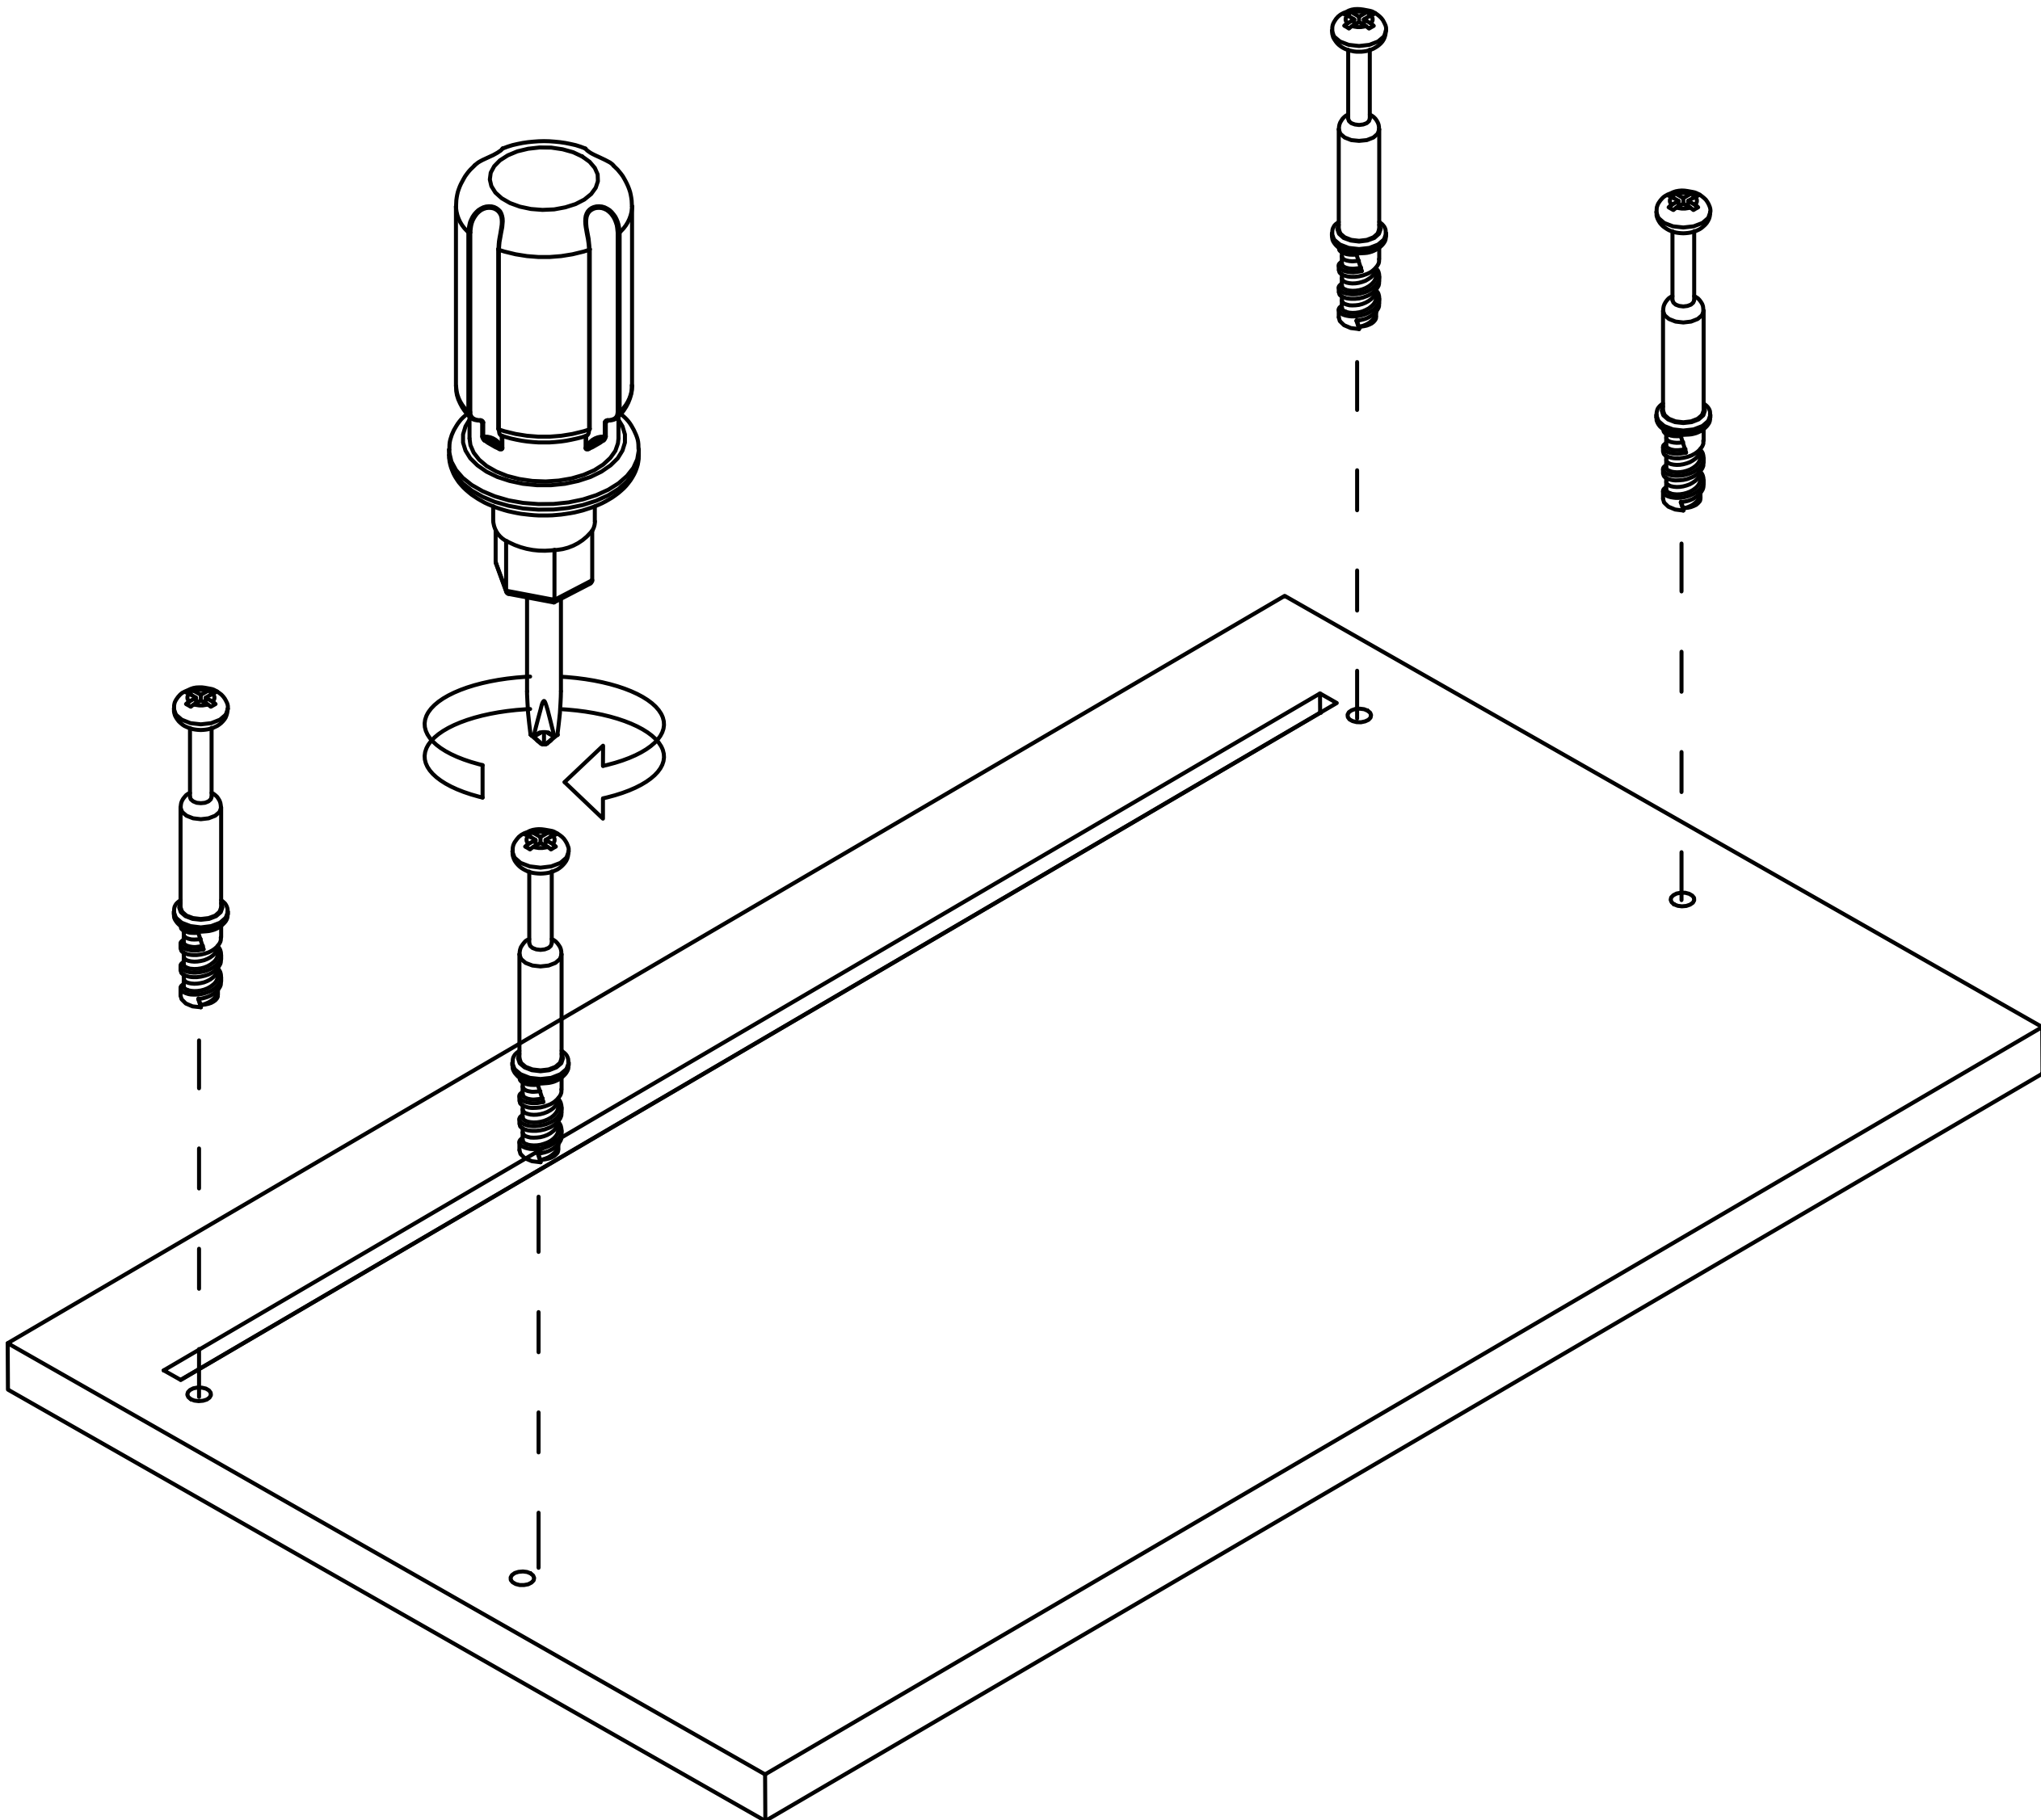


G

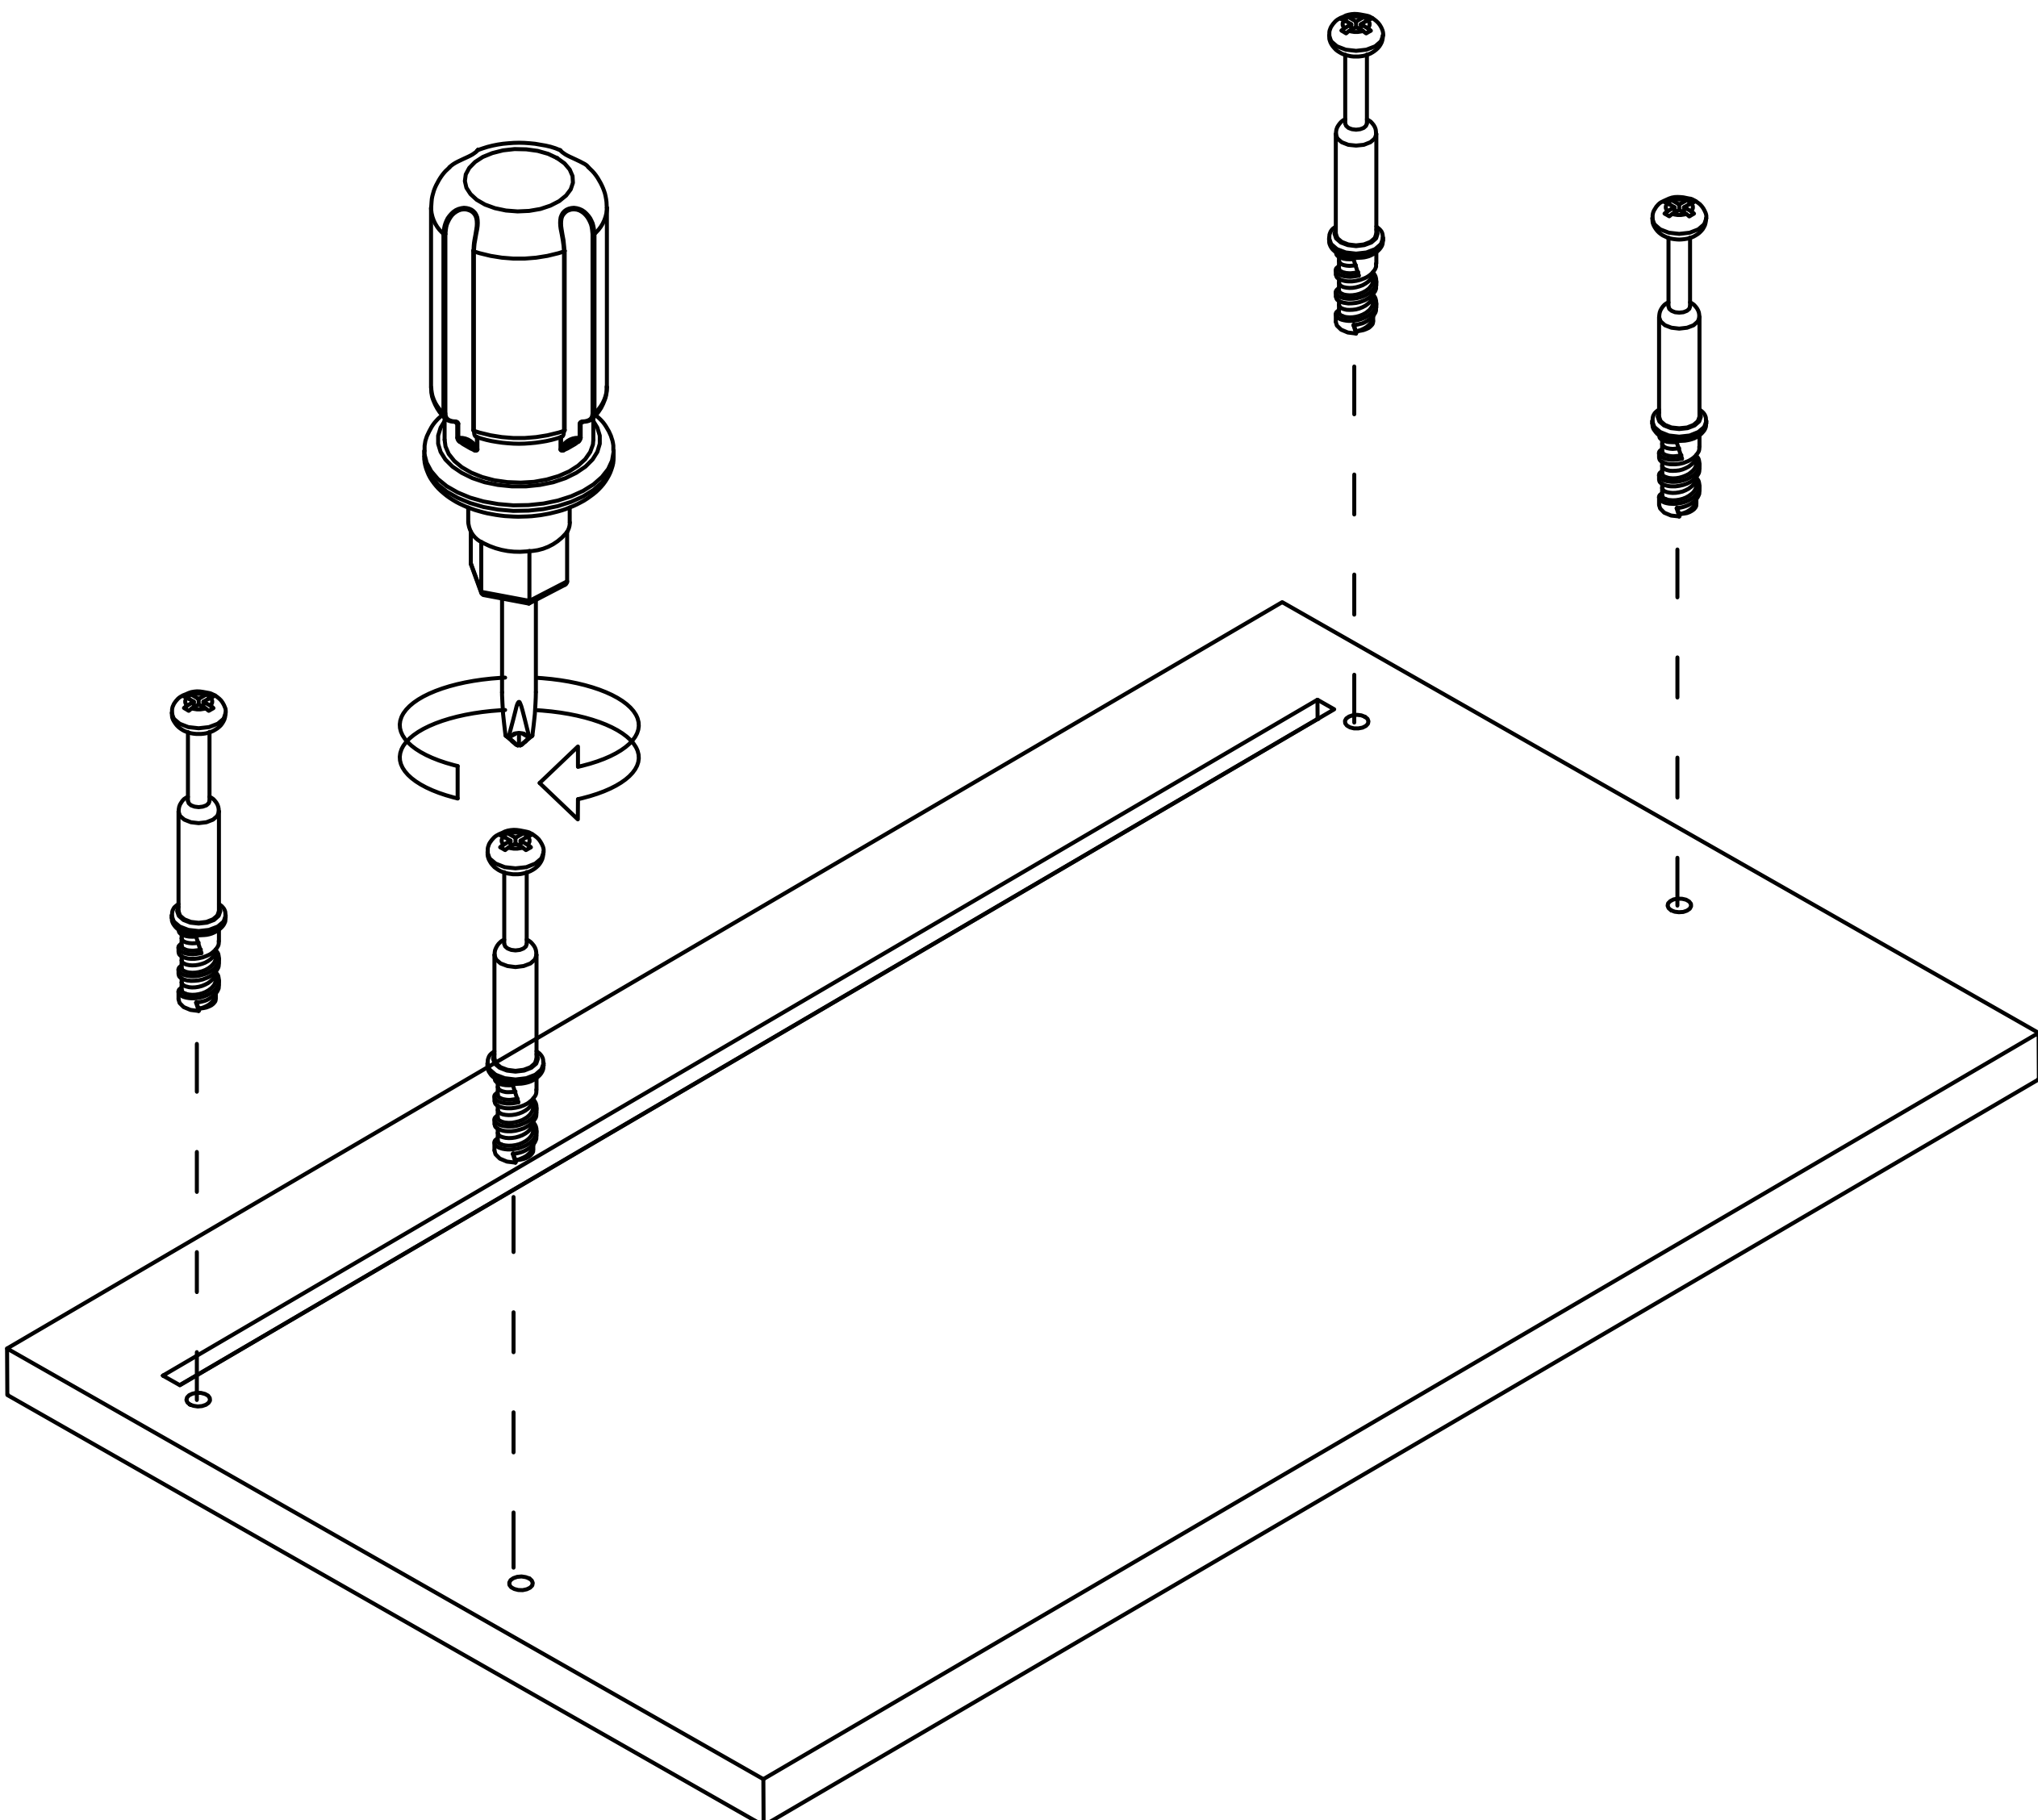


Step 7


2

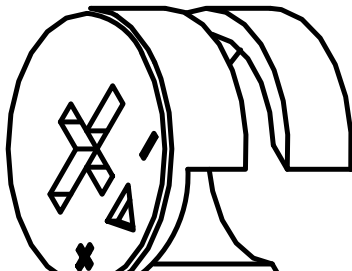

x68

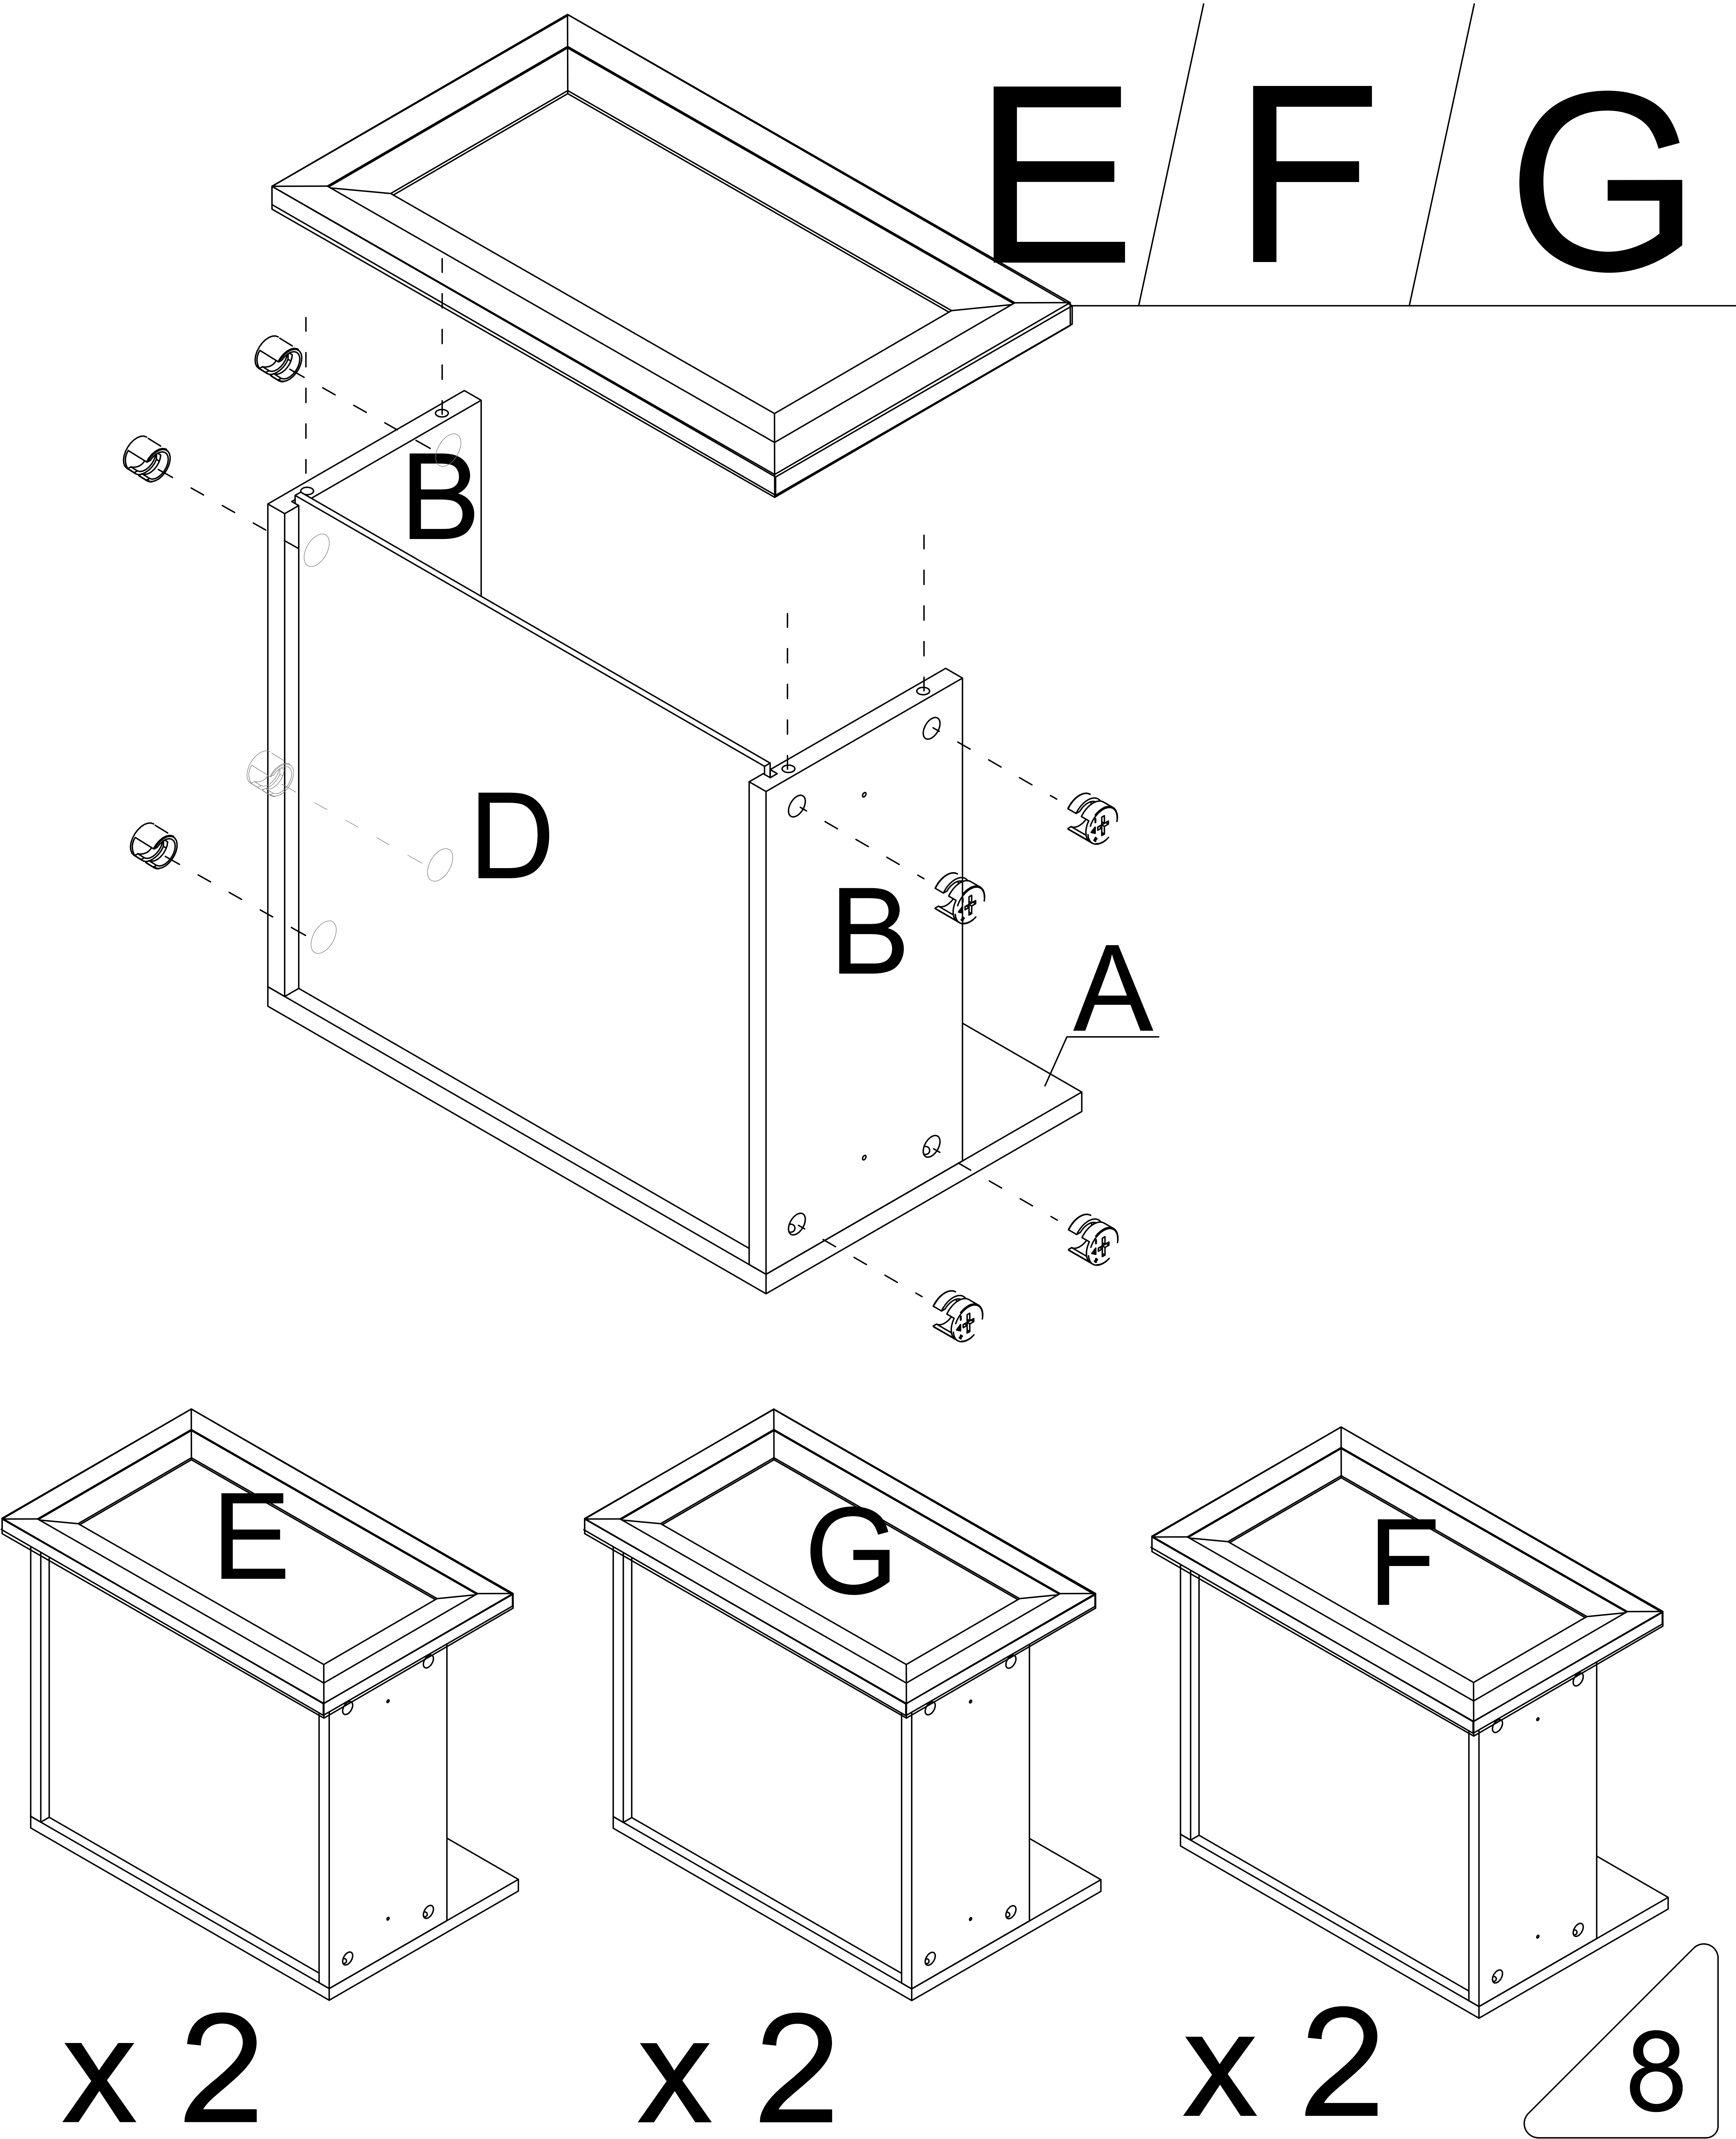


Drawer rail breakdown diagram

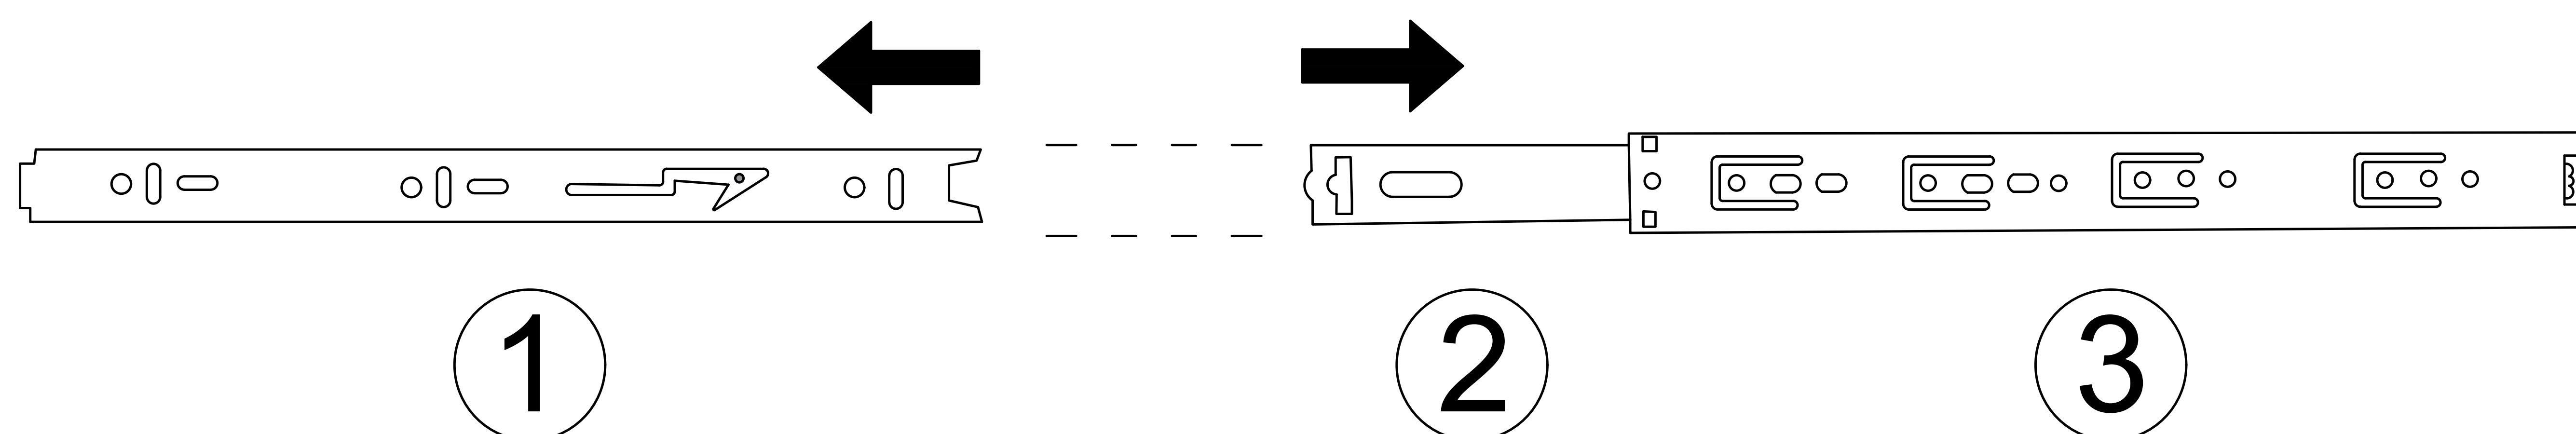


① Dismantle the schematic diagram

Step 1 : Pull the rails apart

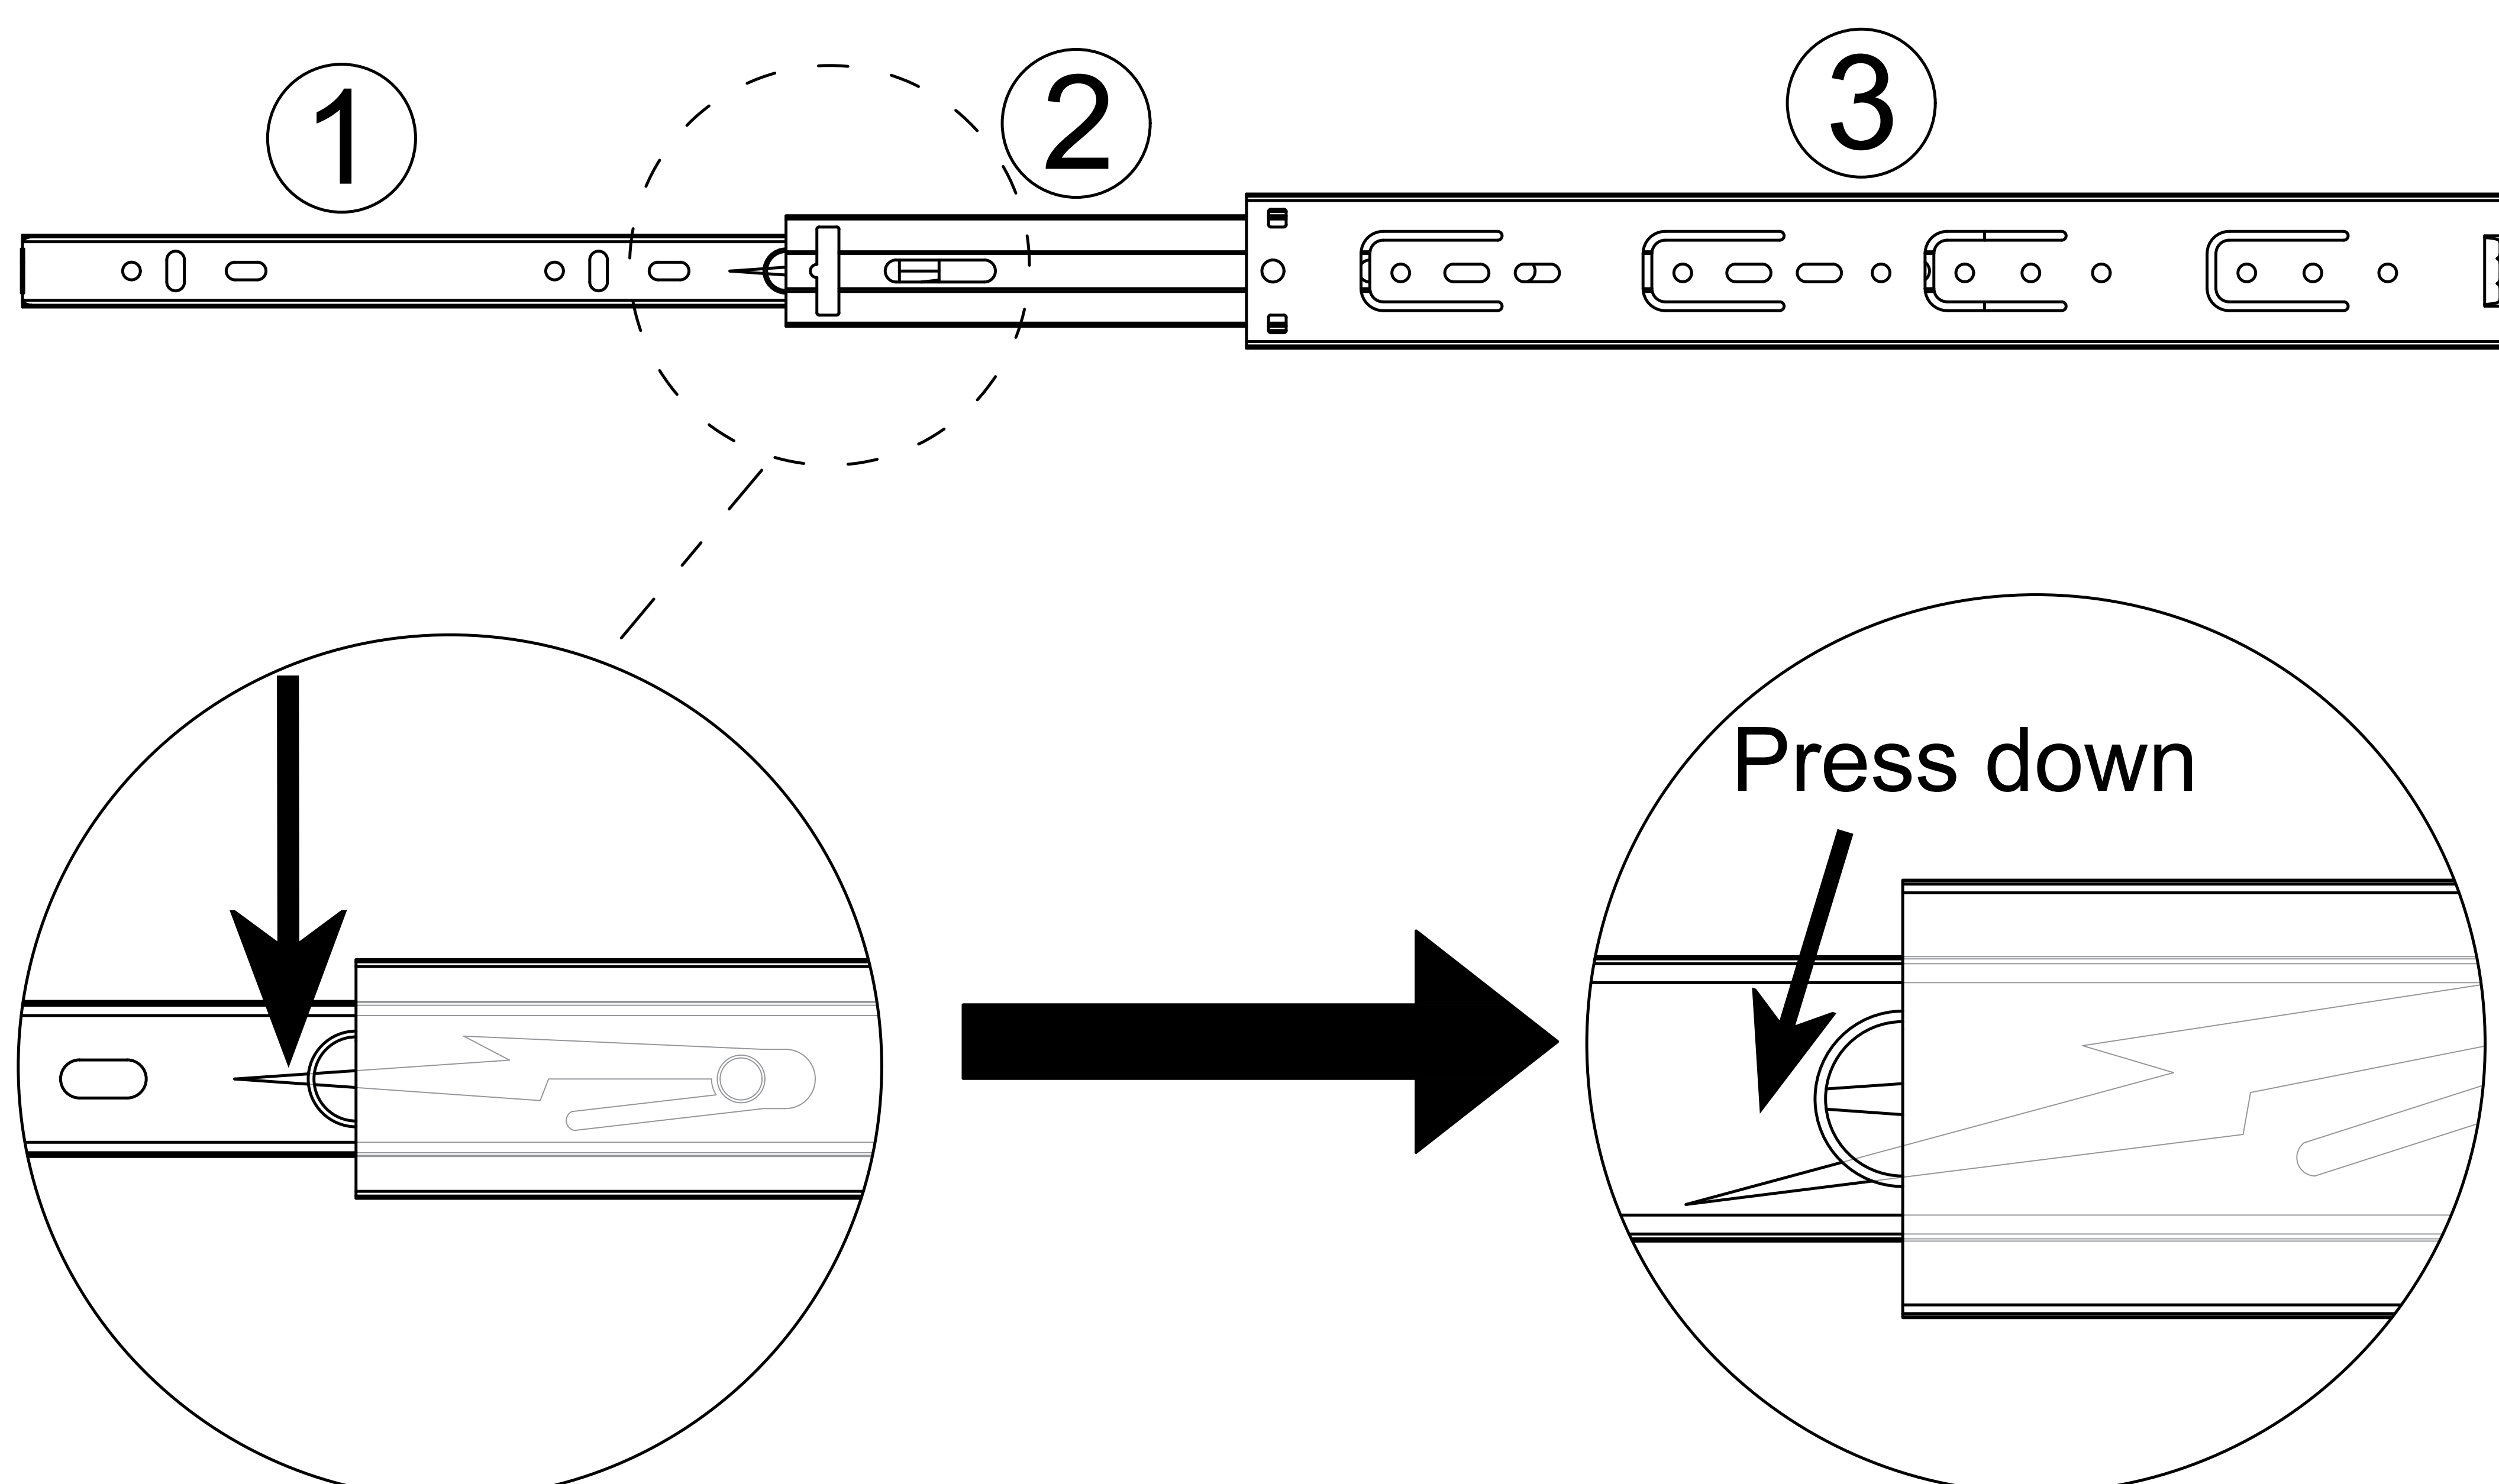


Step 2 : Press the nylon button and pull out ①.


Drawer rail decomposition completed schematic diagram

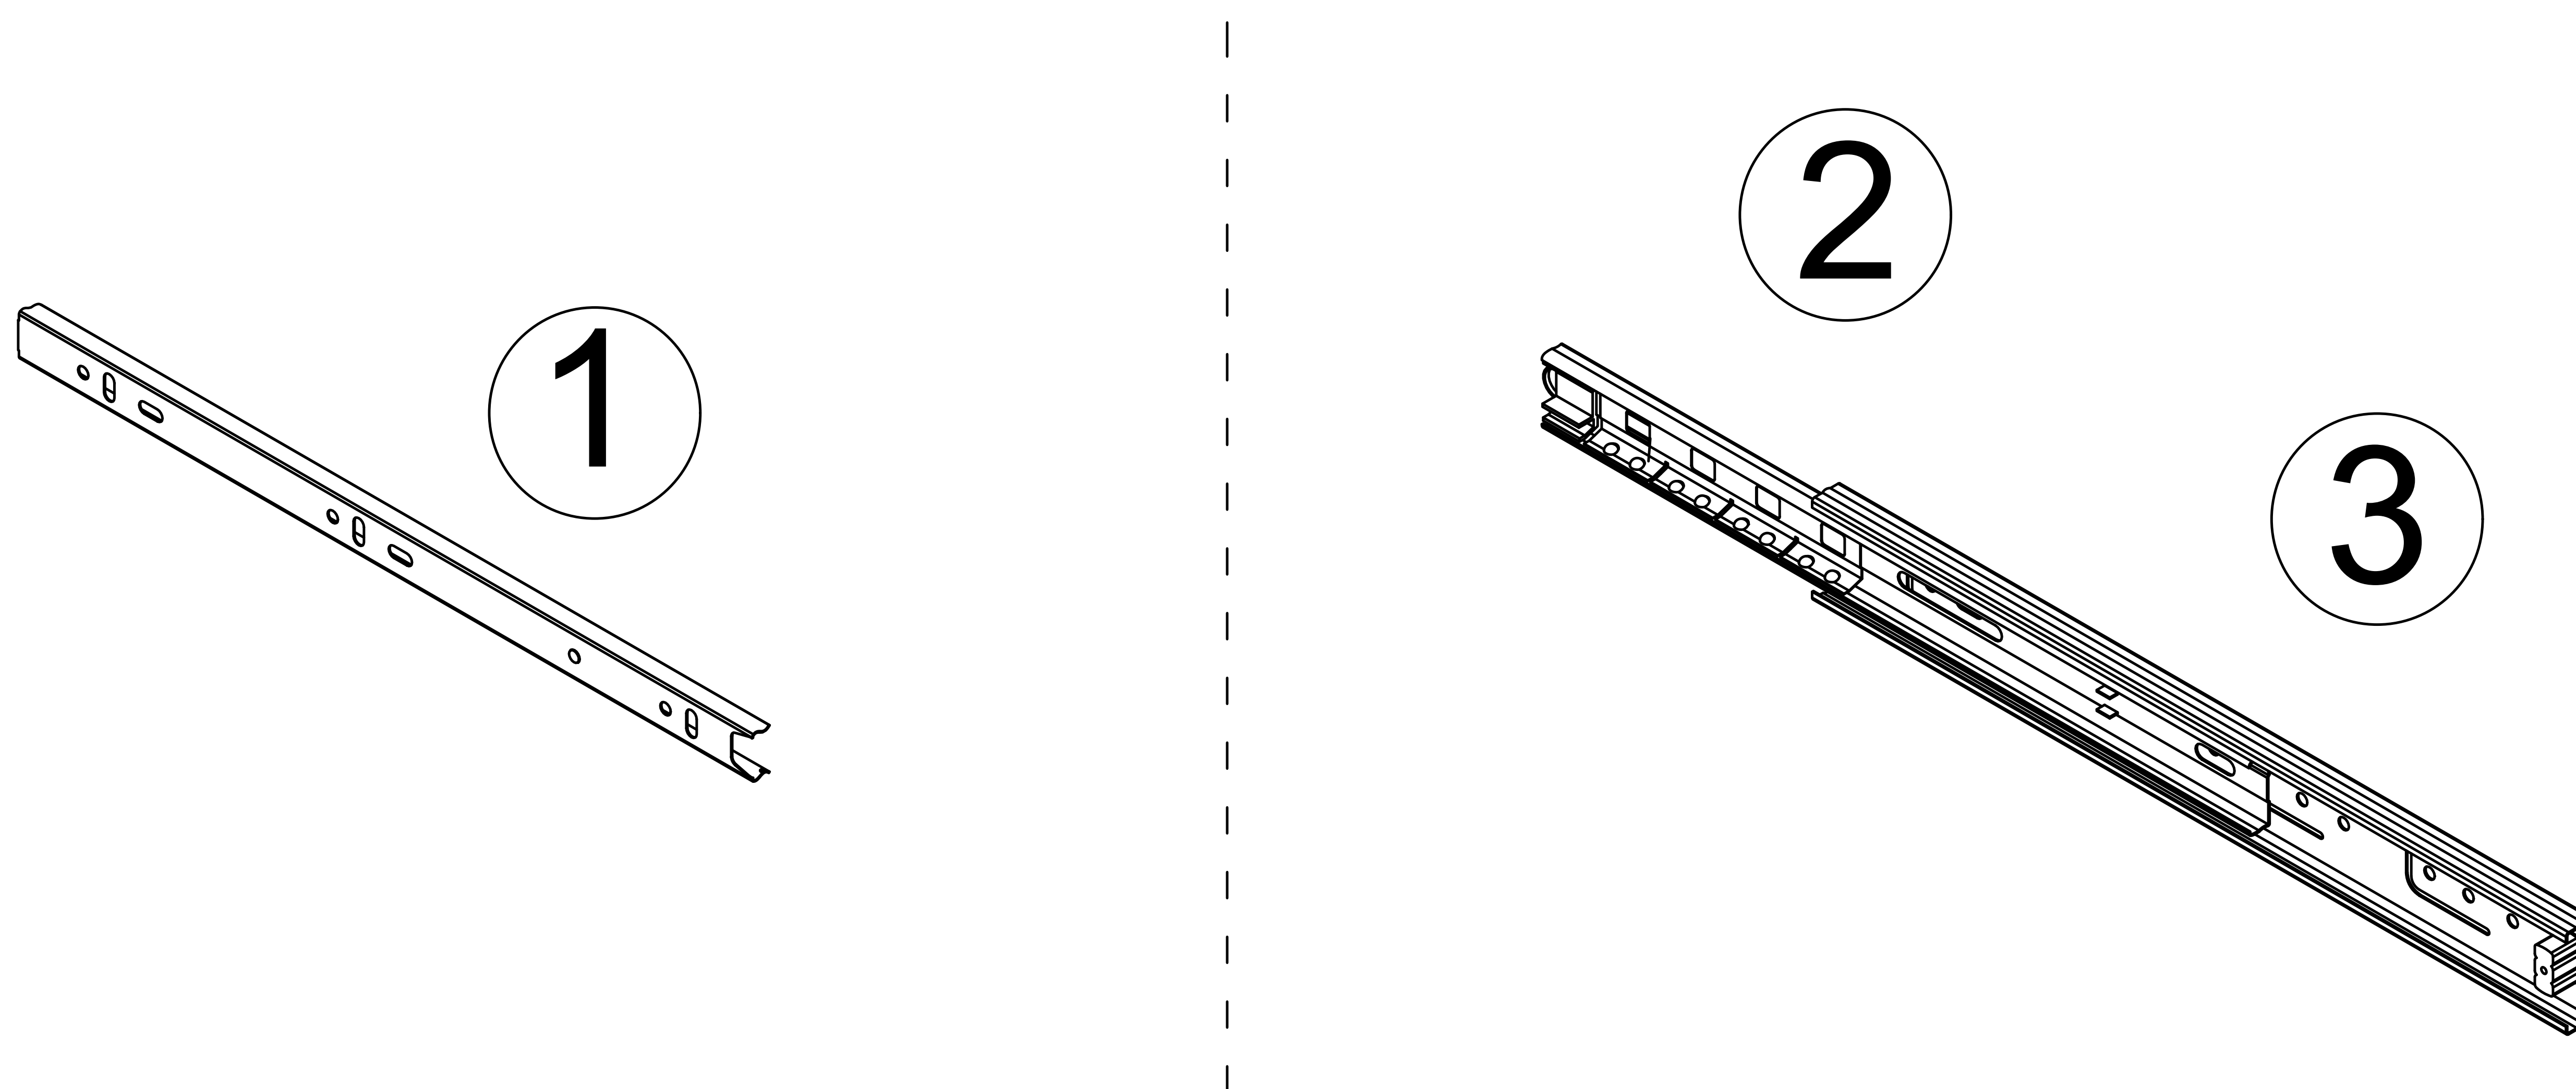



Step 8

4

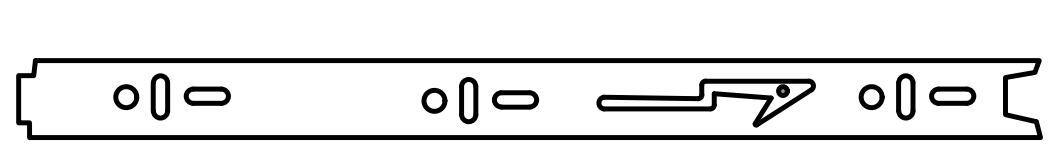 x12

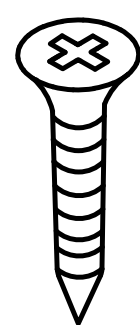


x24

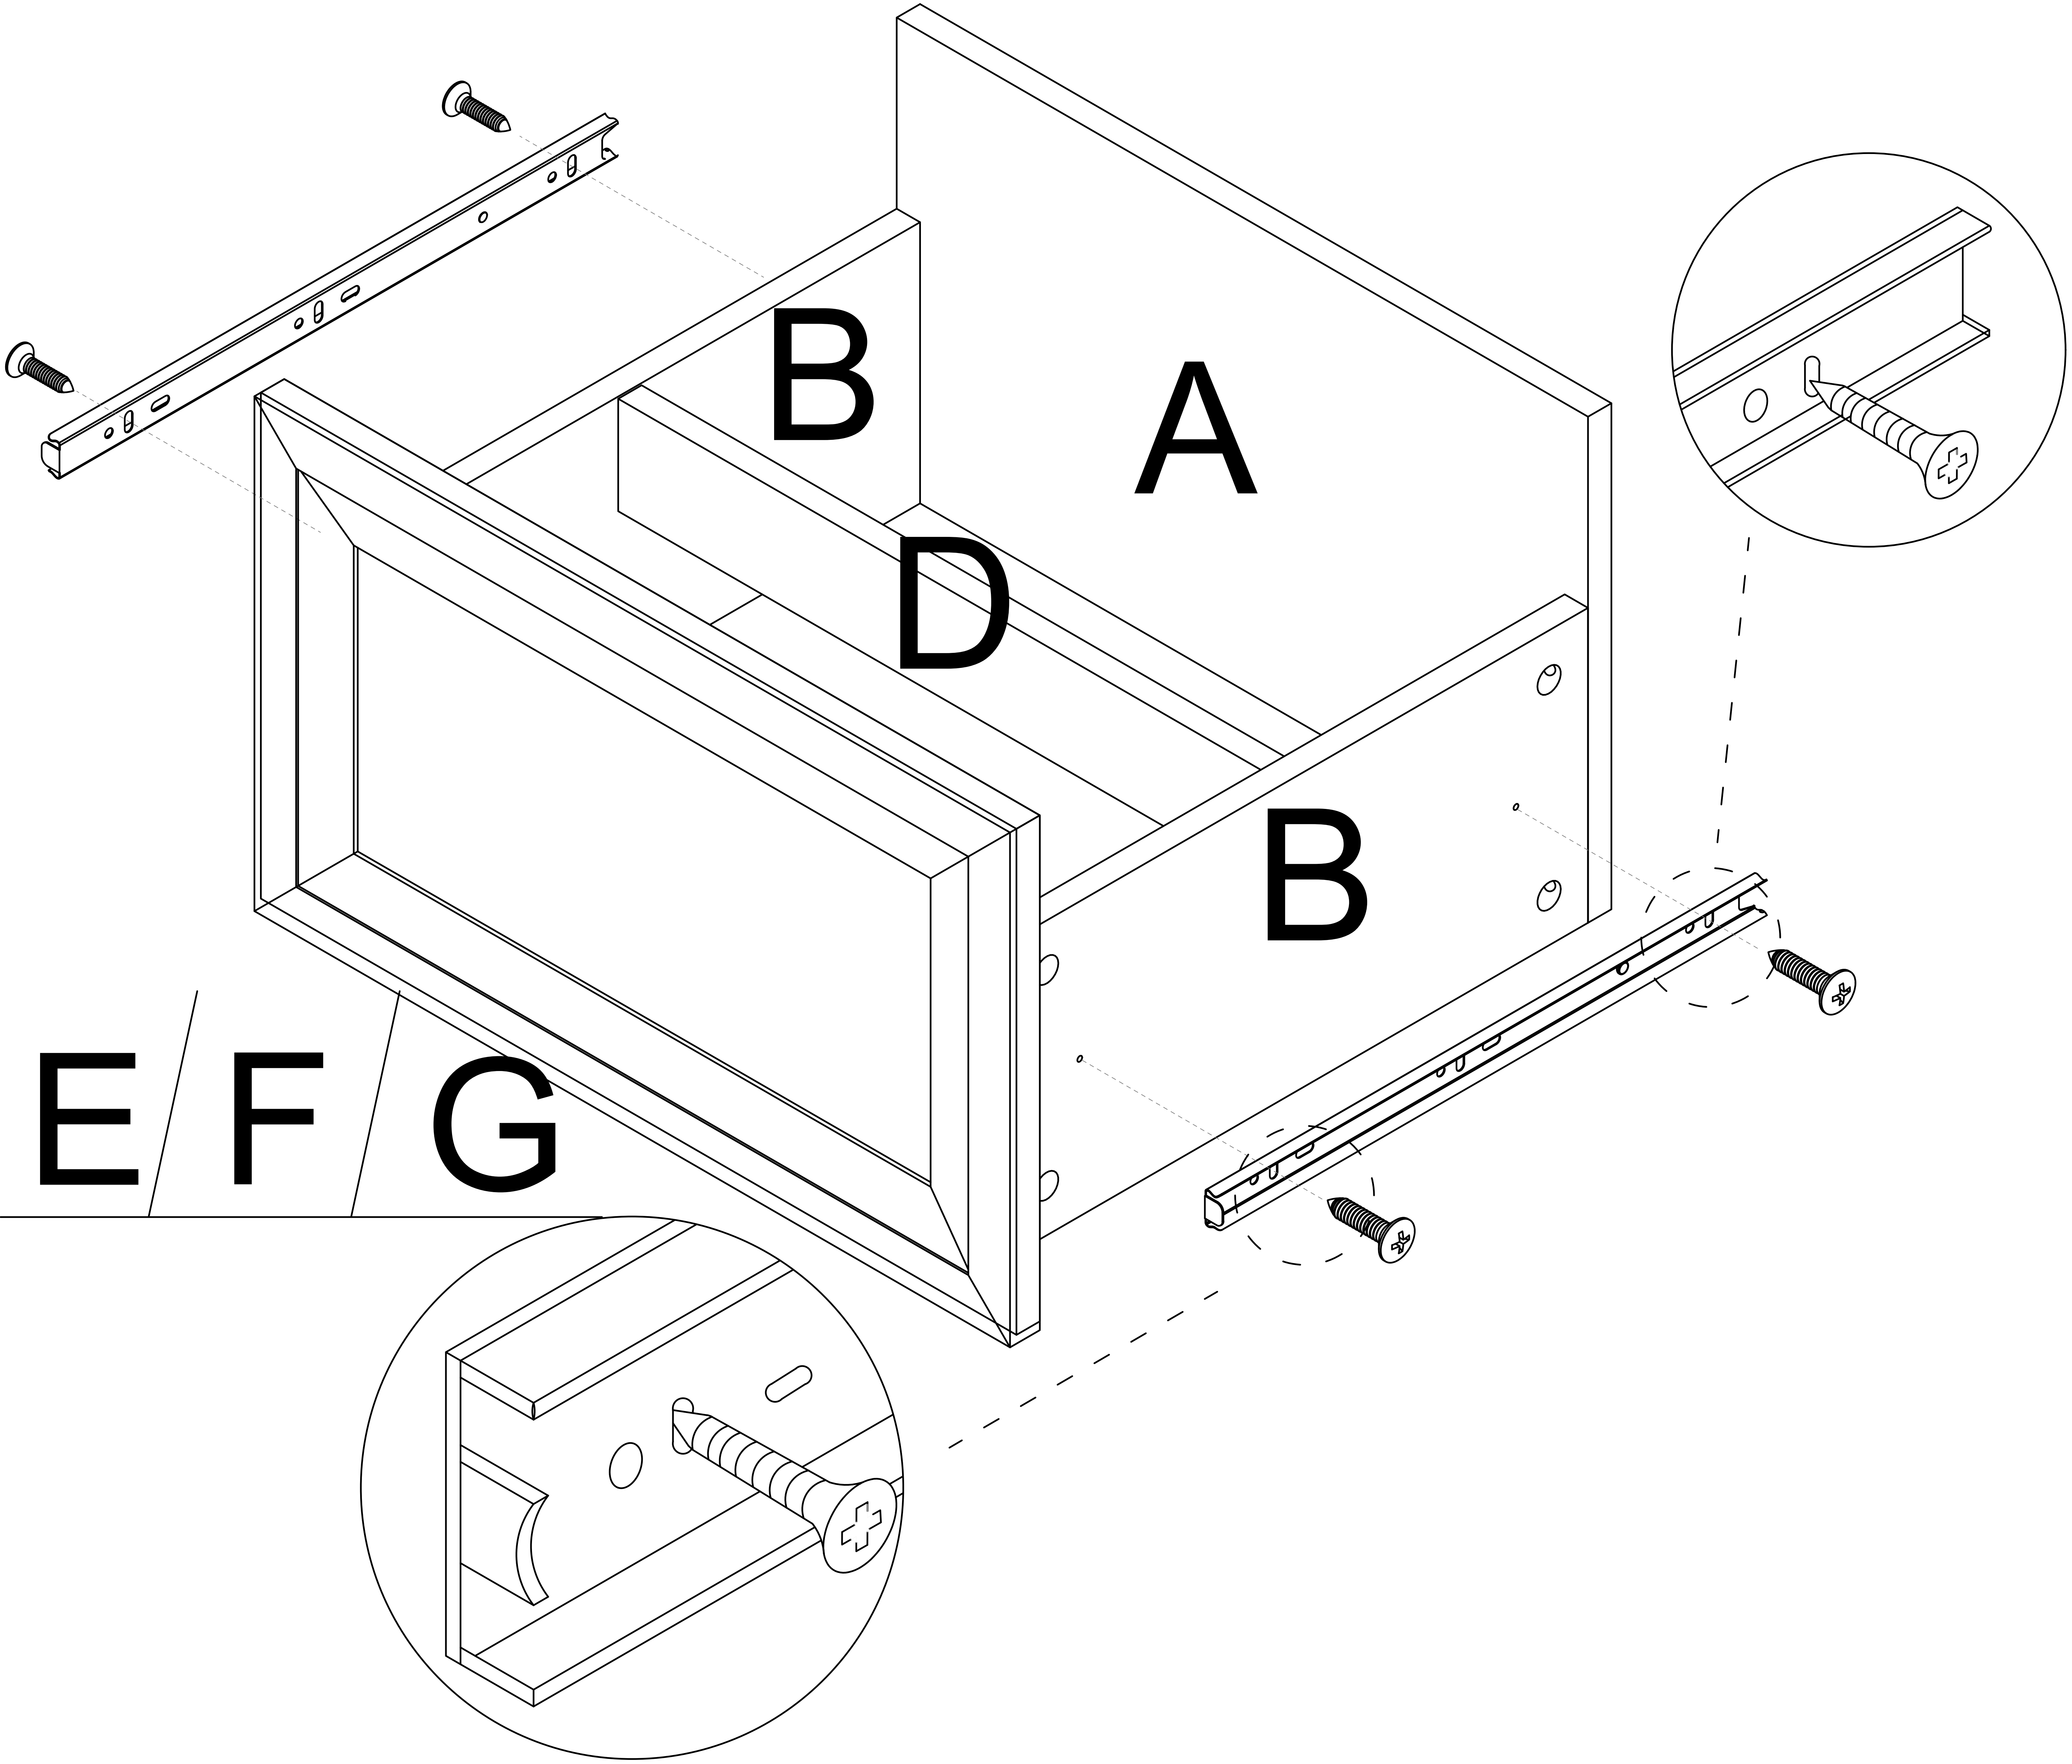
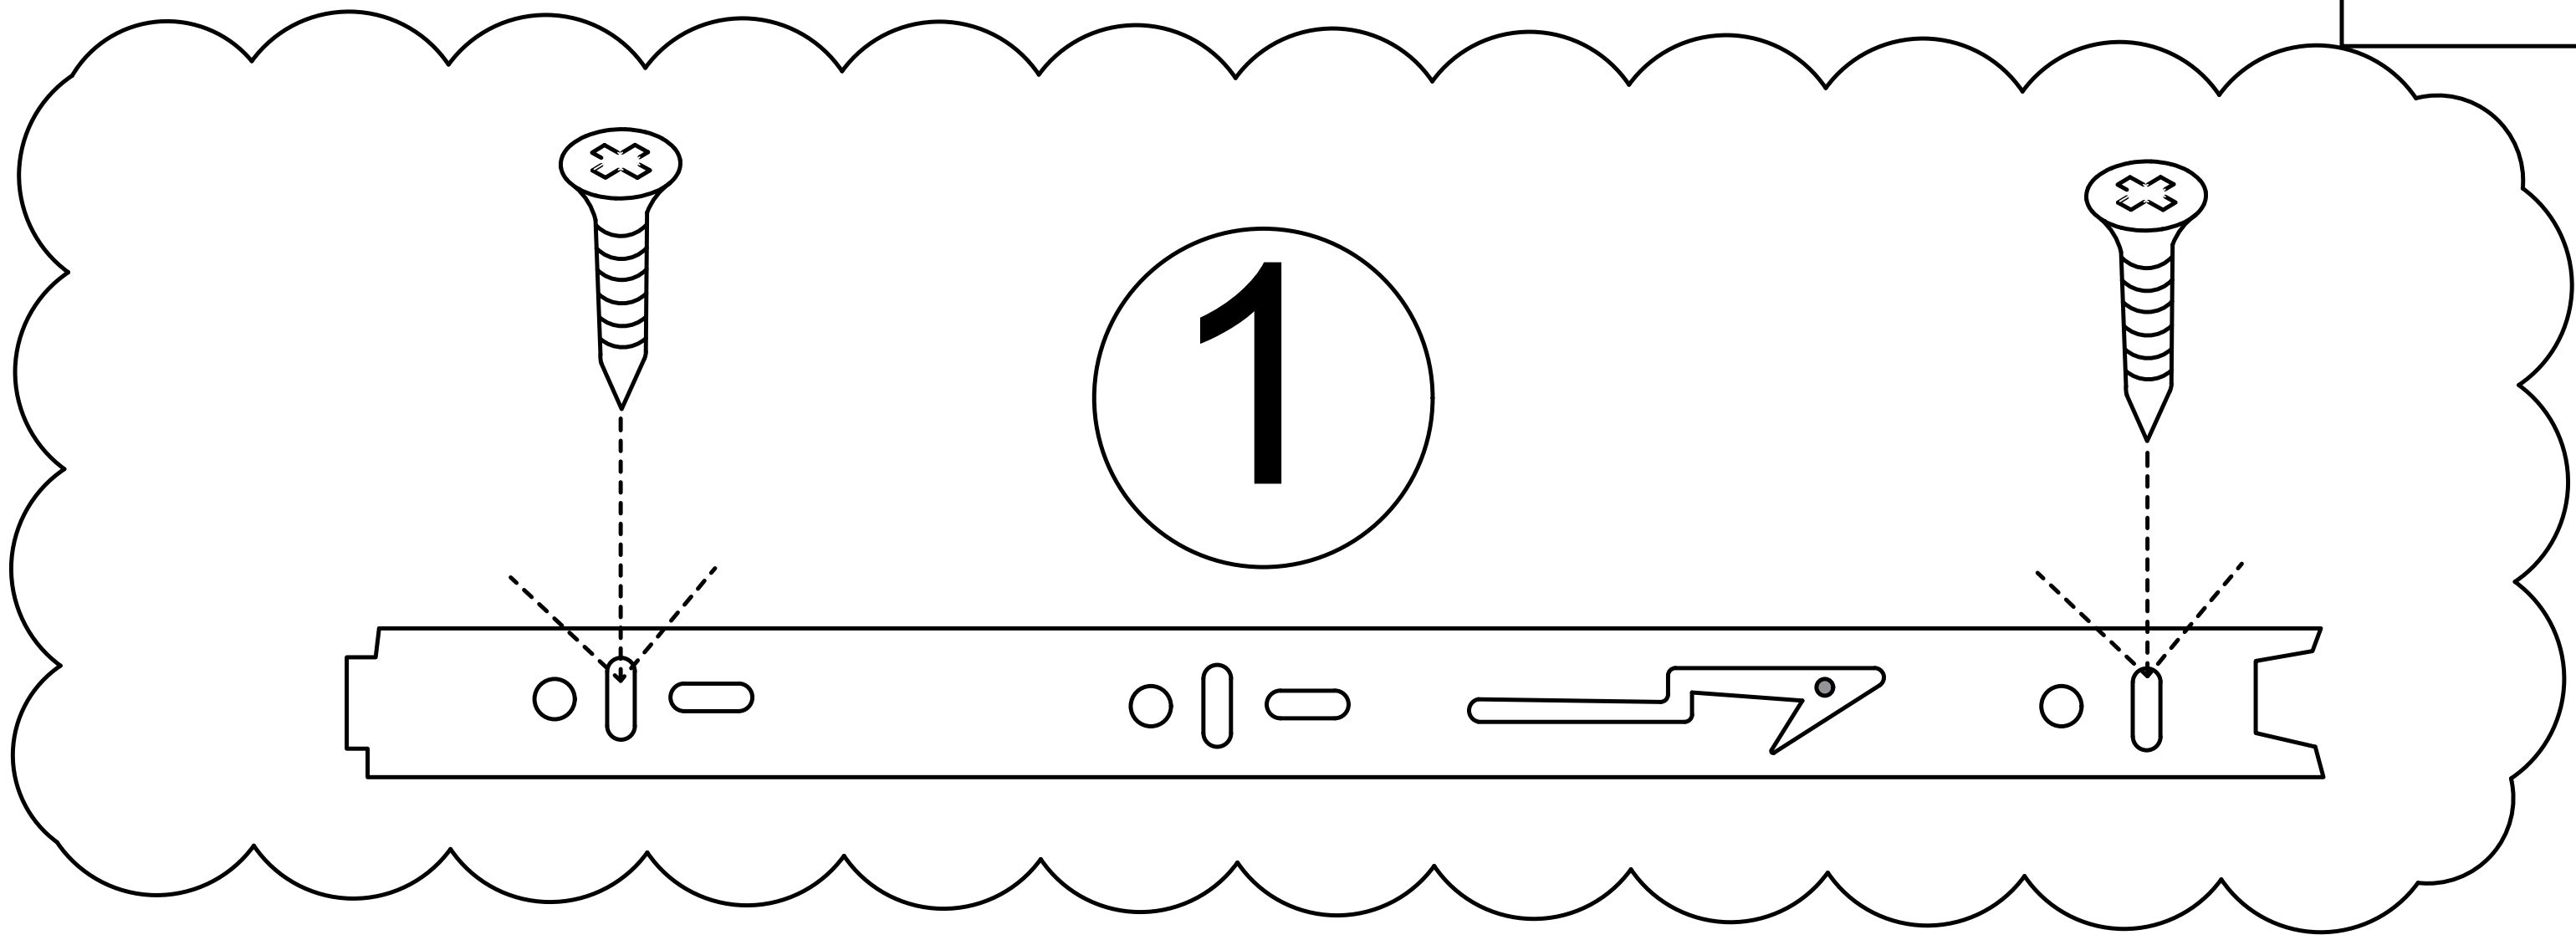


You can repeat the previous steps to obtain 6 identical drawers.

Product structure decomposition


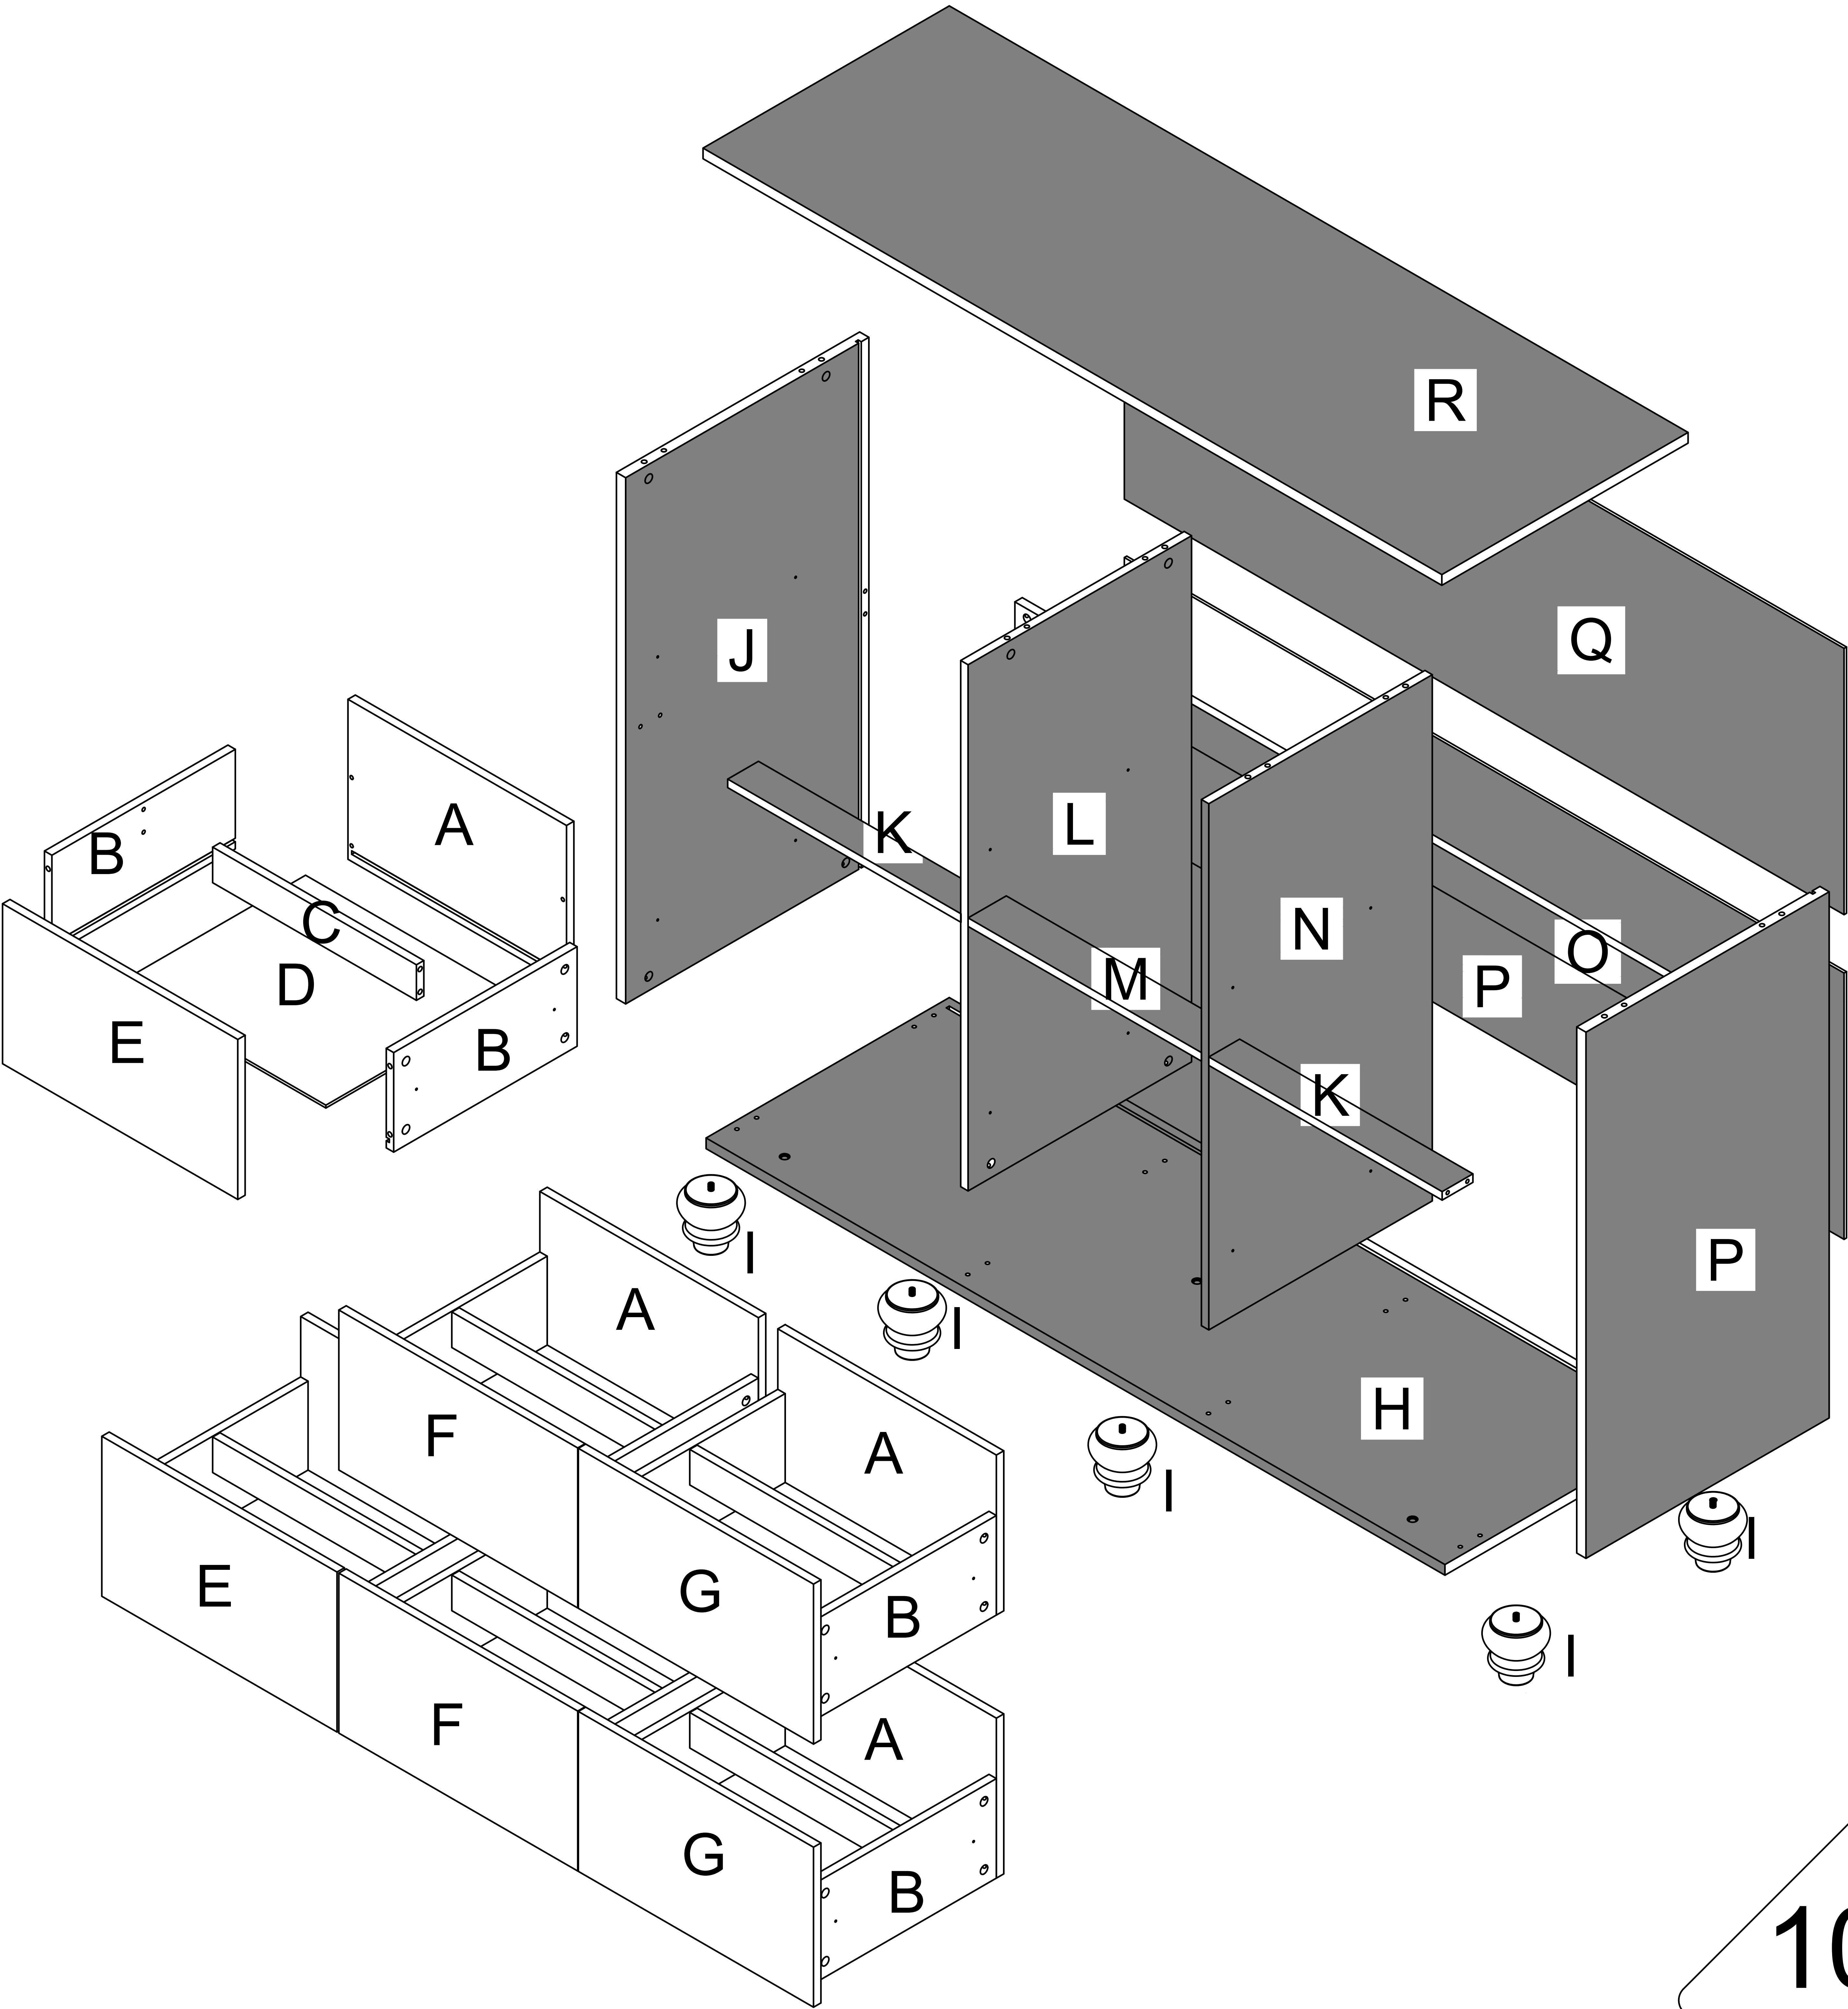


Step 9

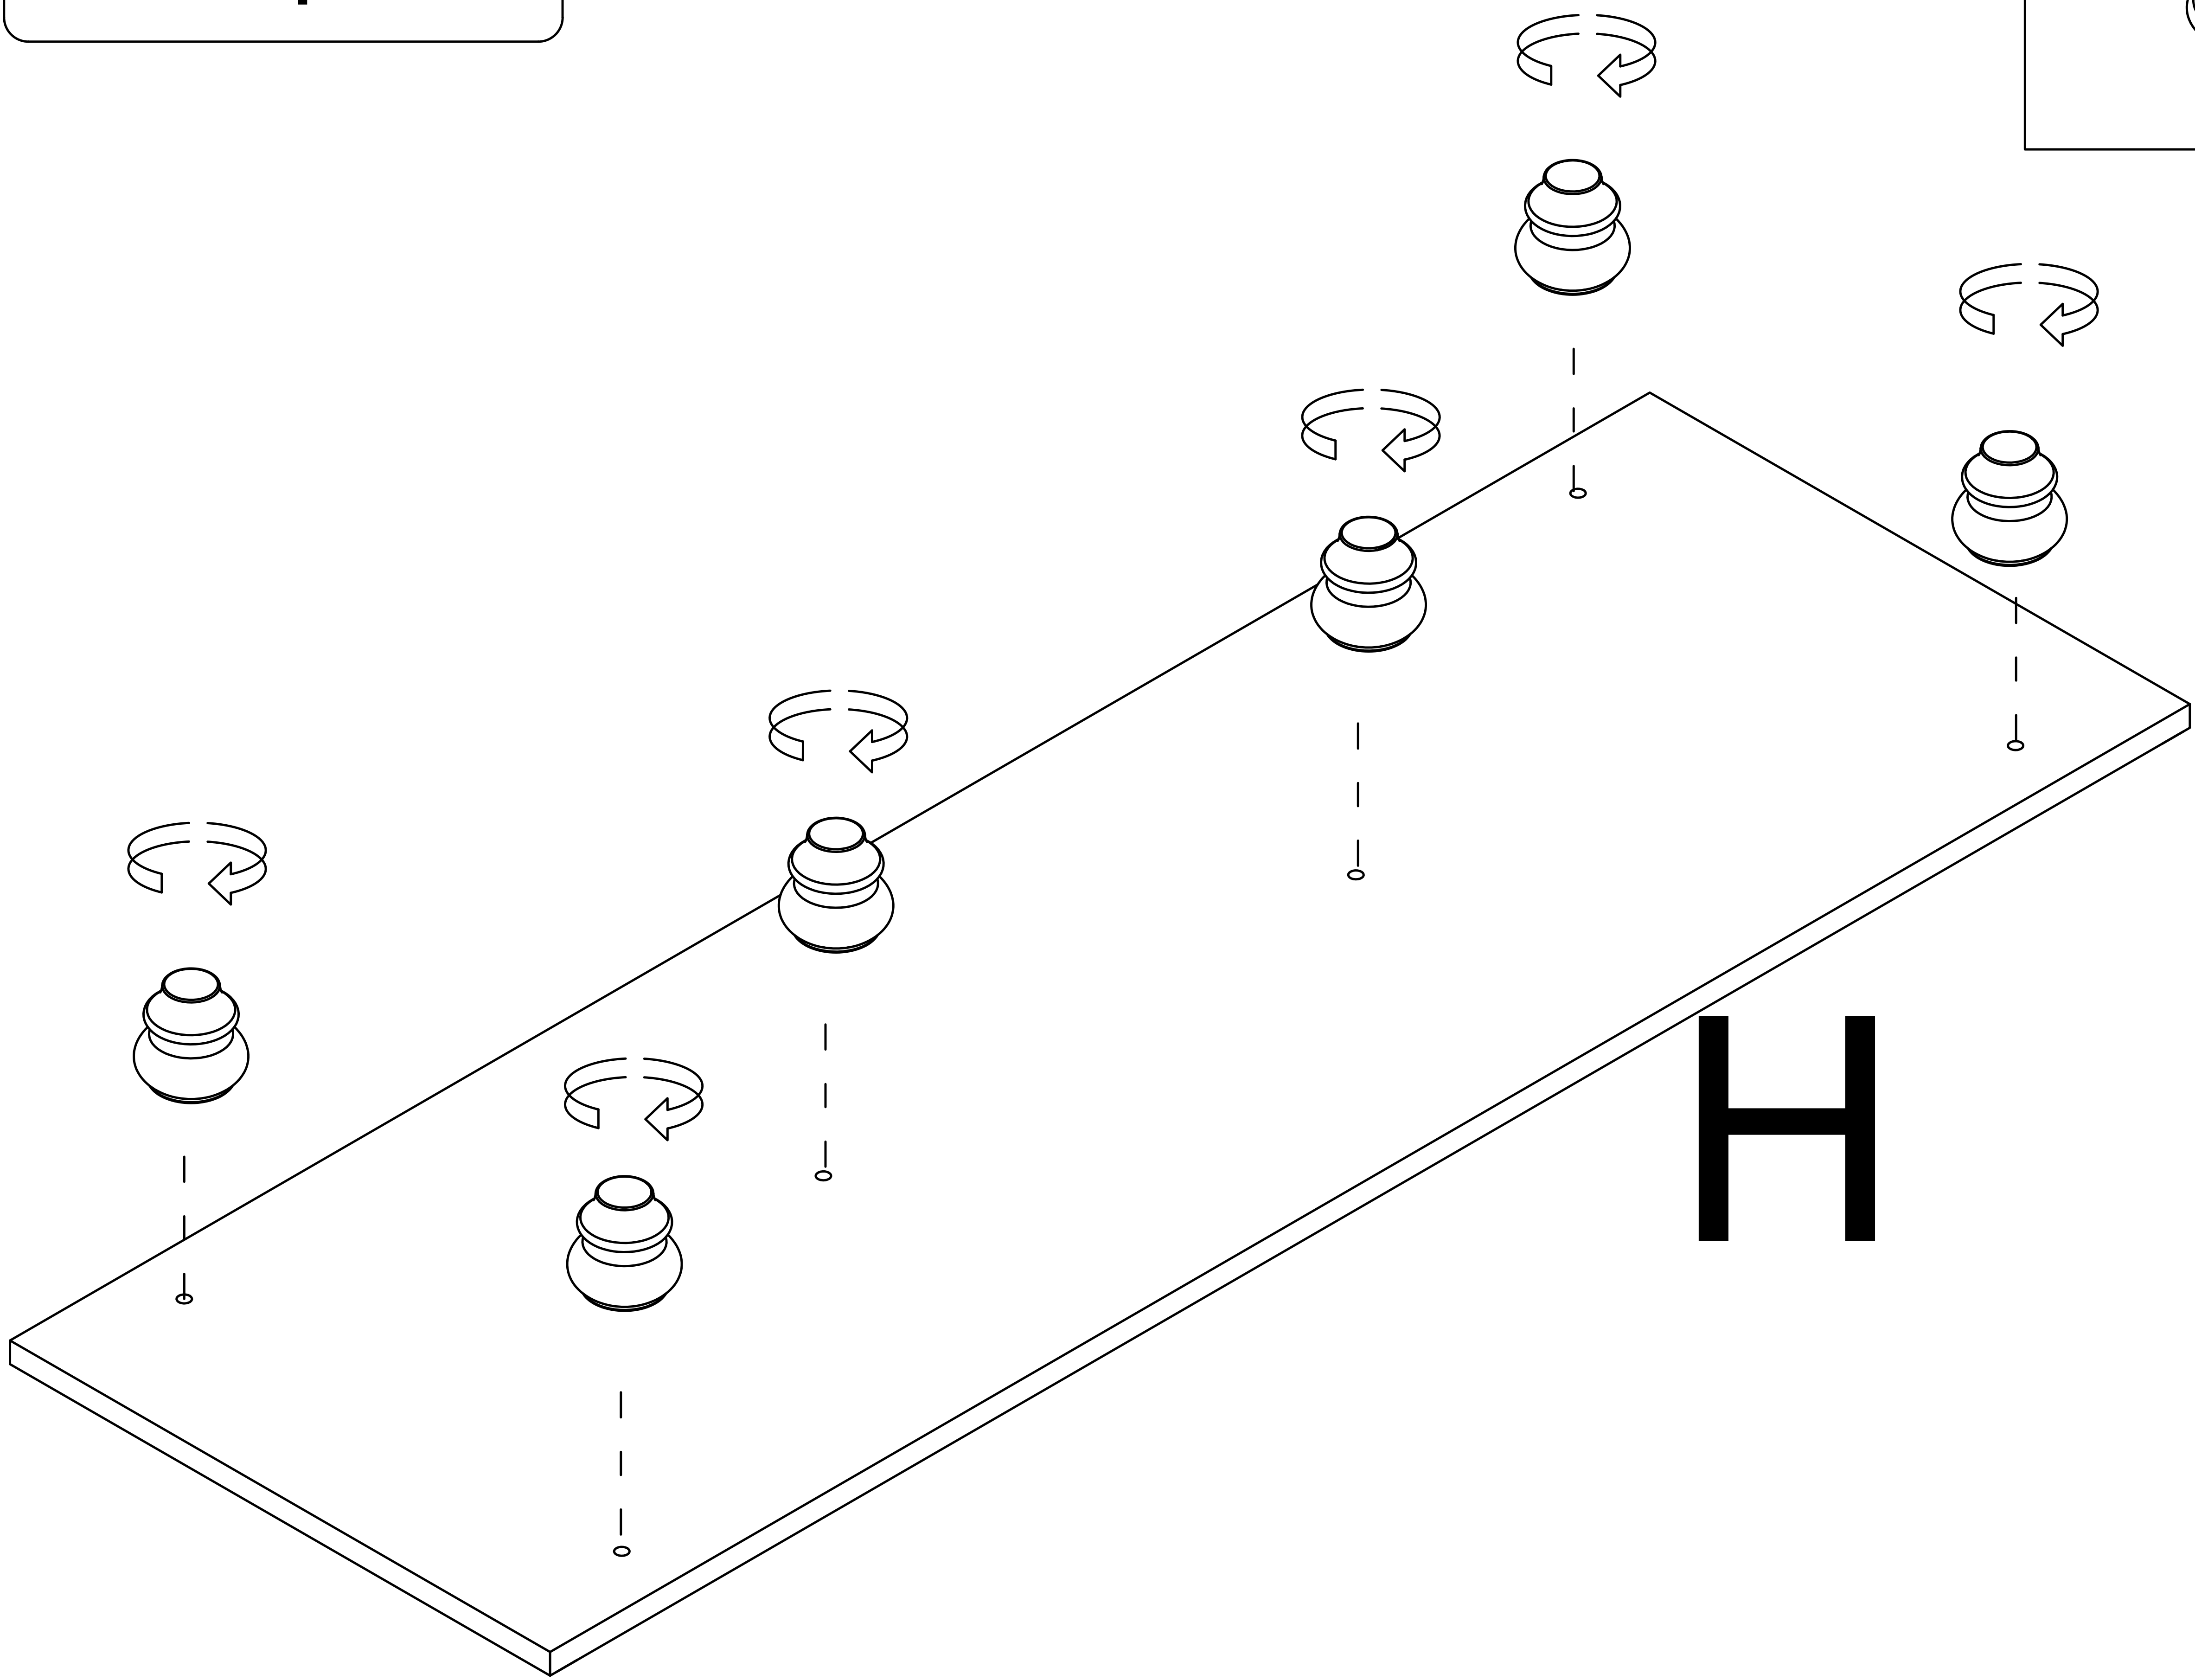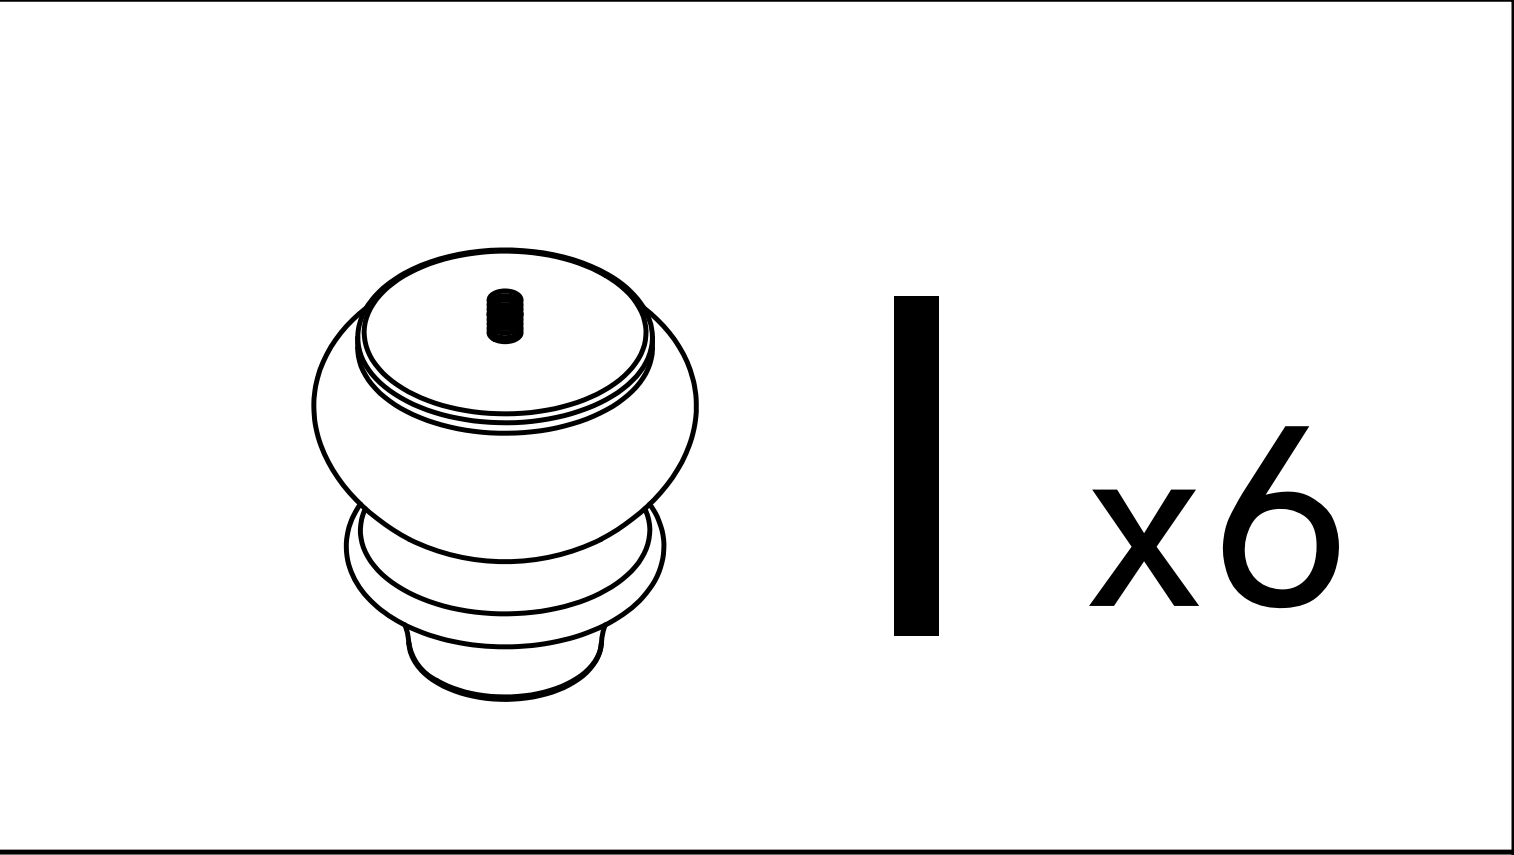



Step 10

Tear off release paper and stick the black foot pad on the board

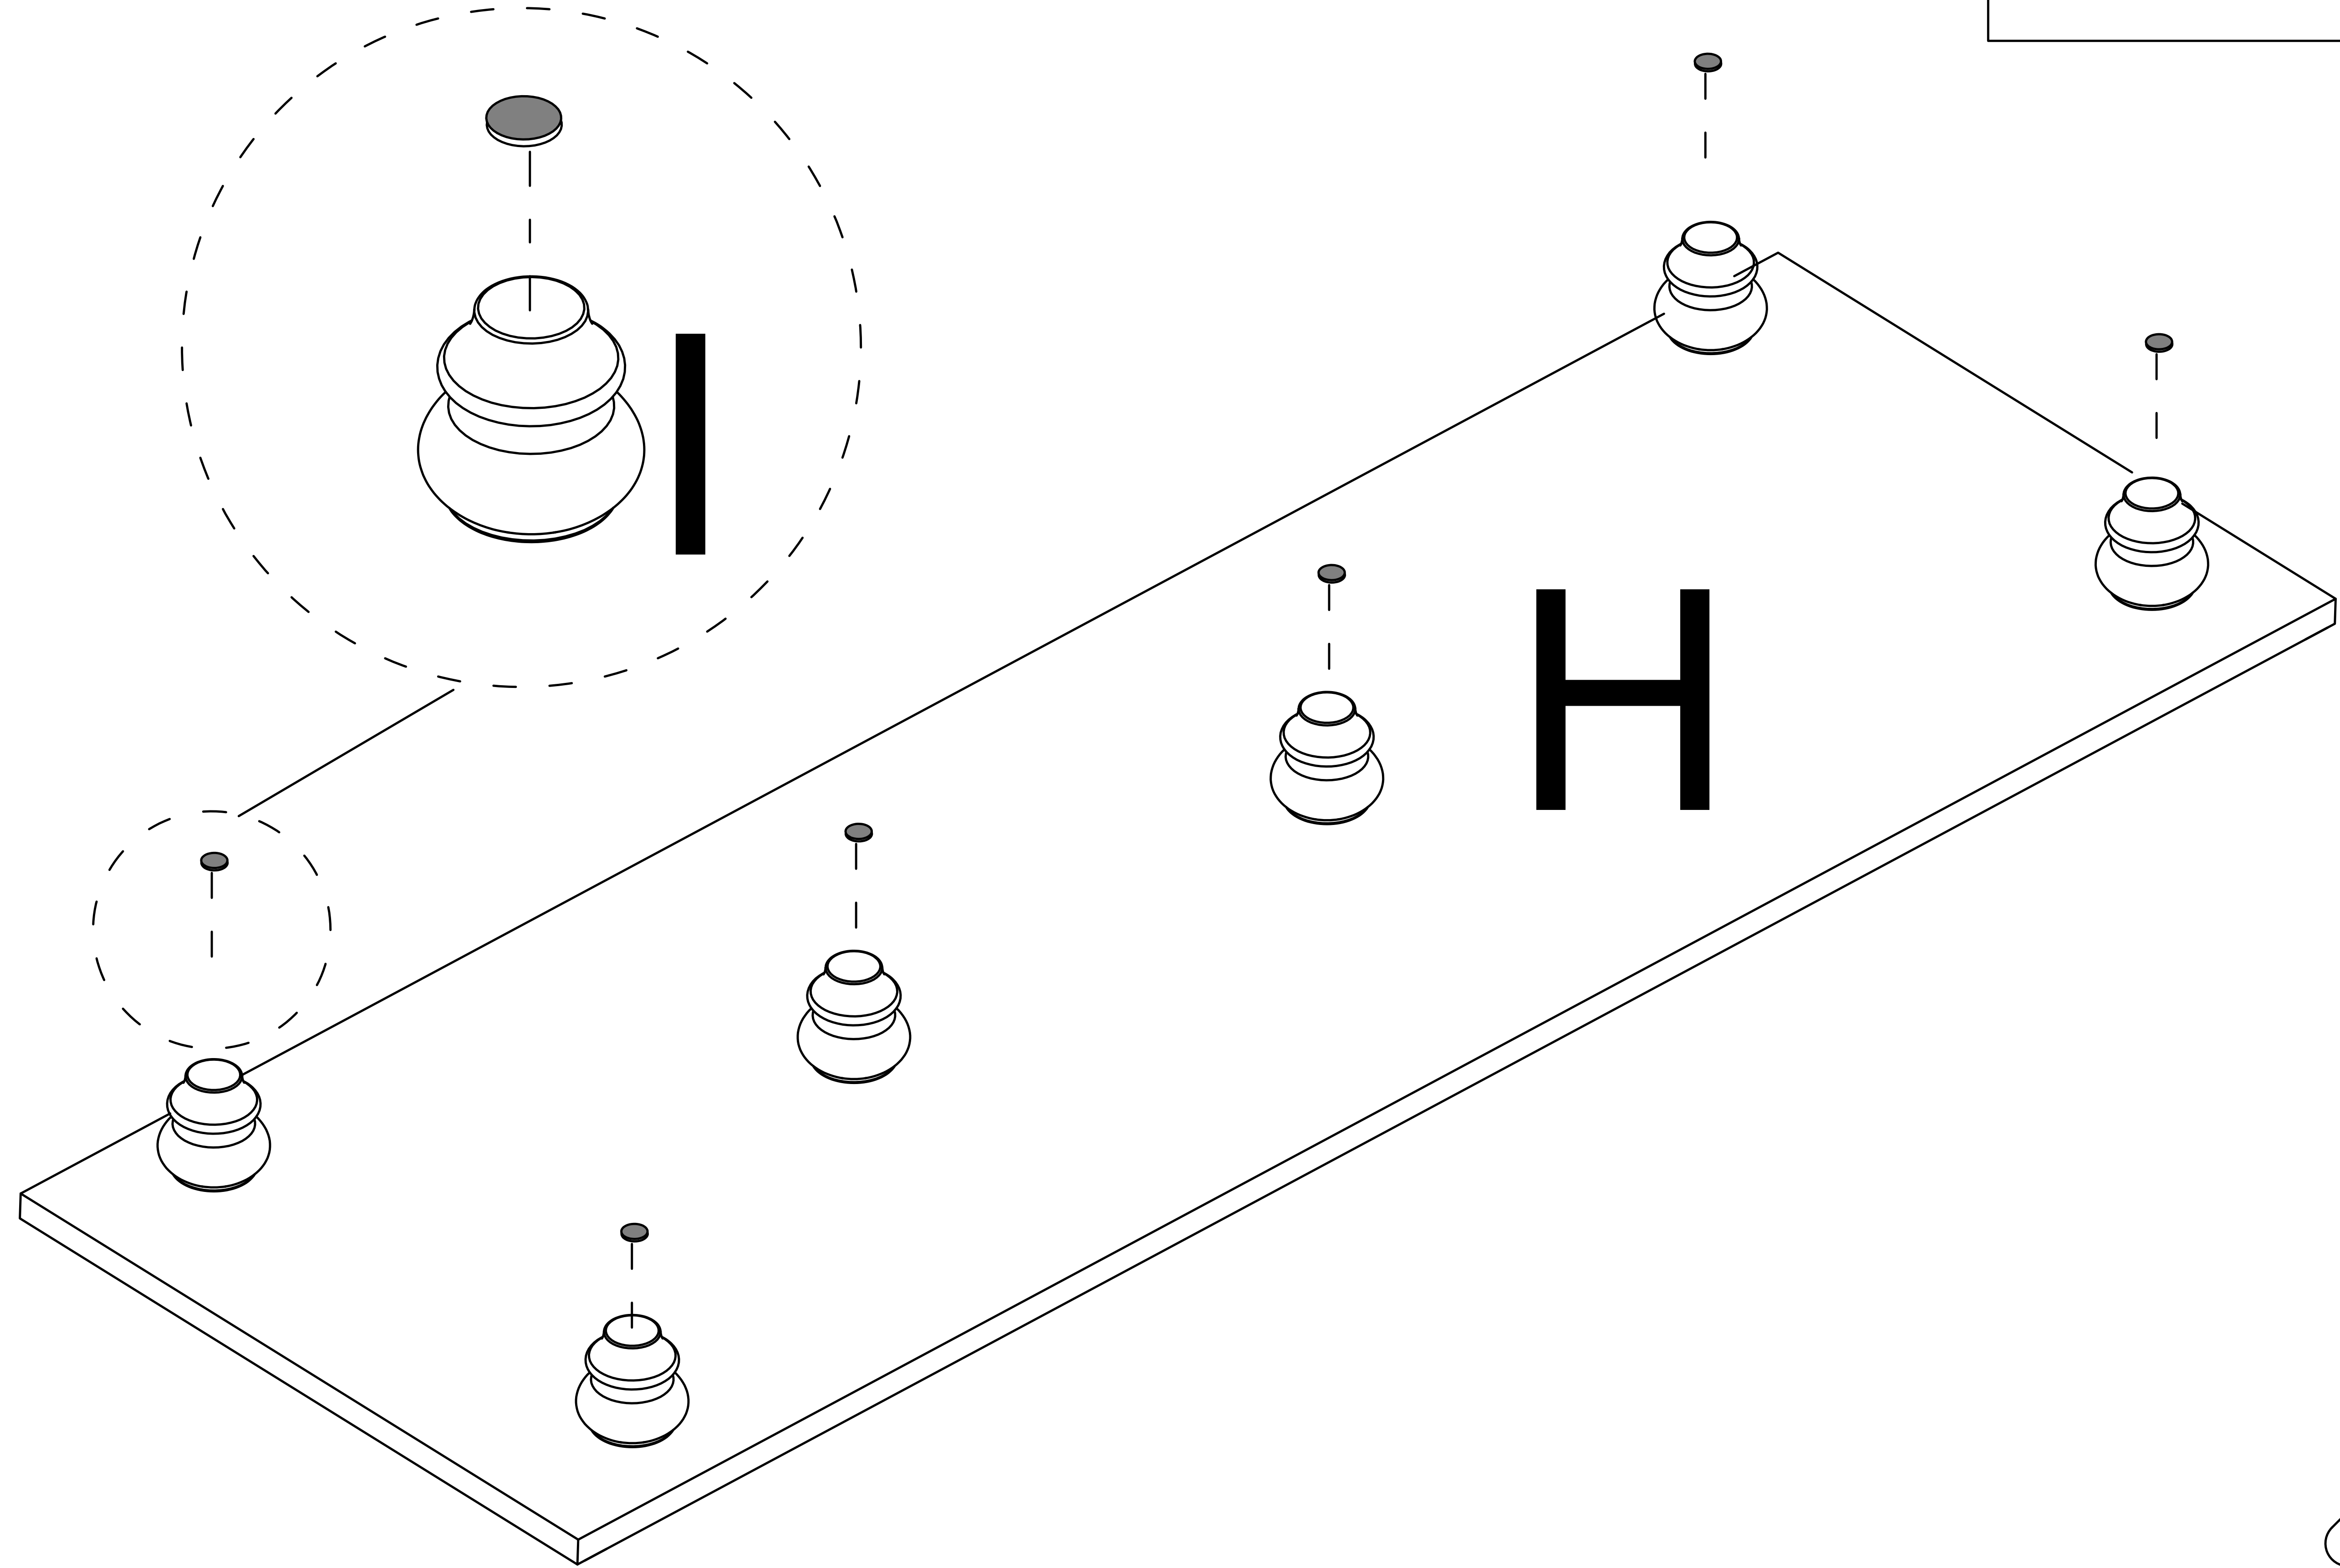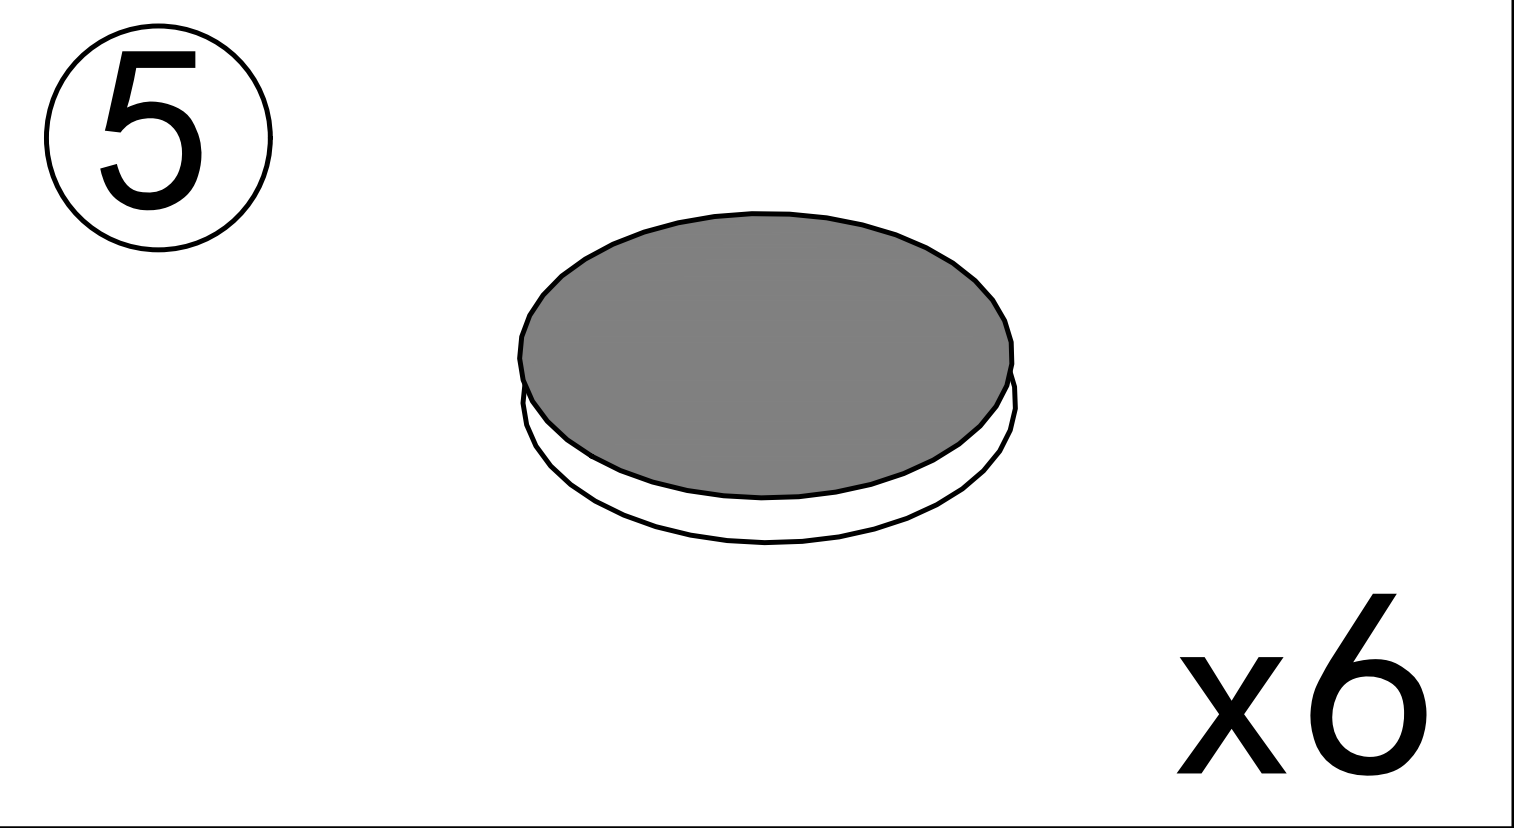




Step 11



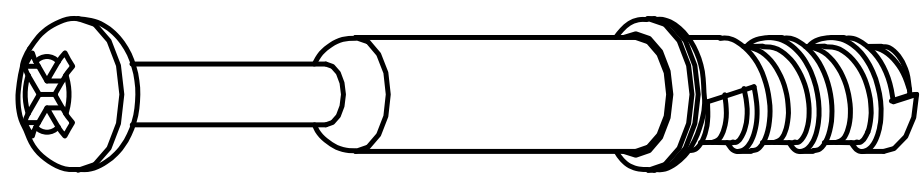
1  x8

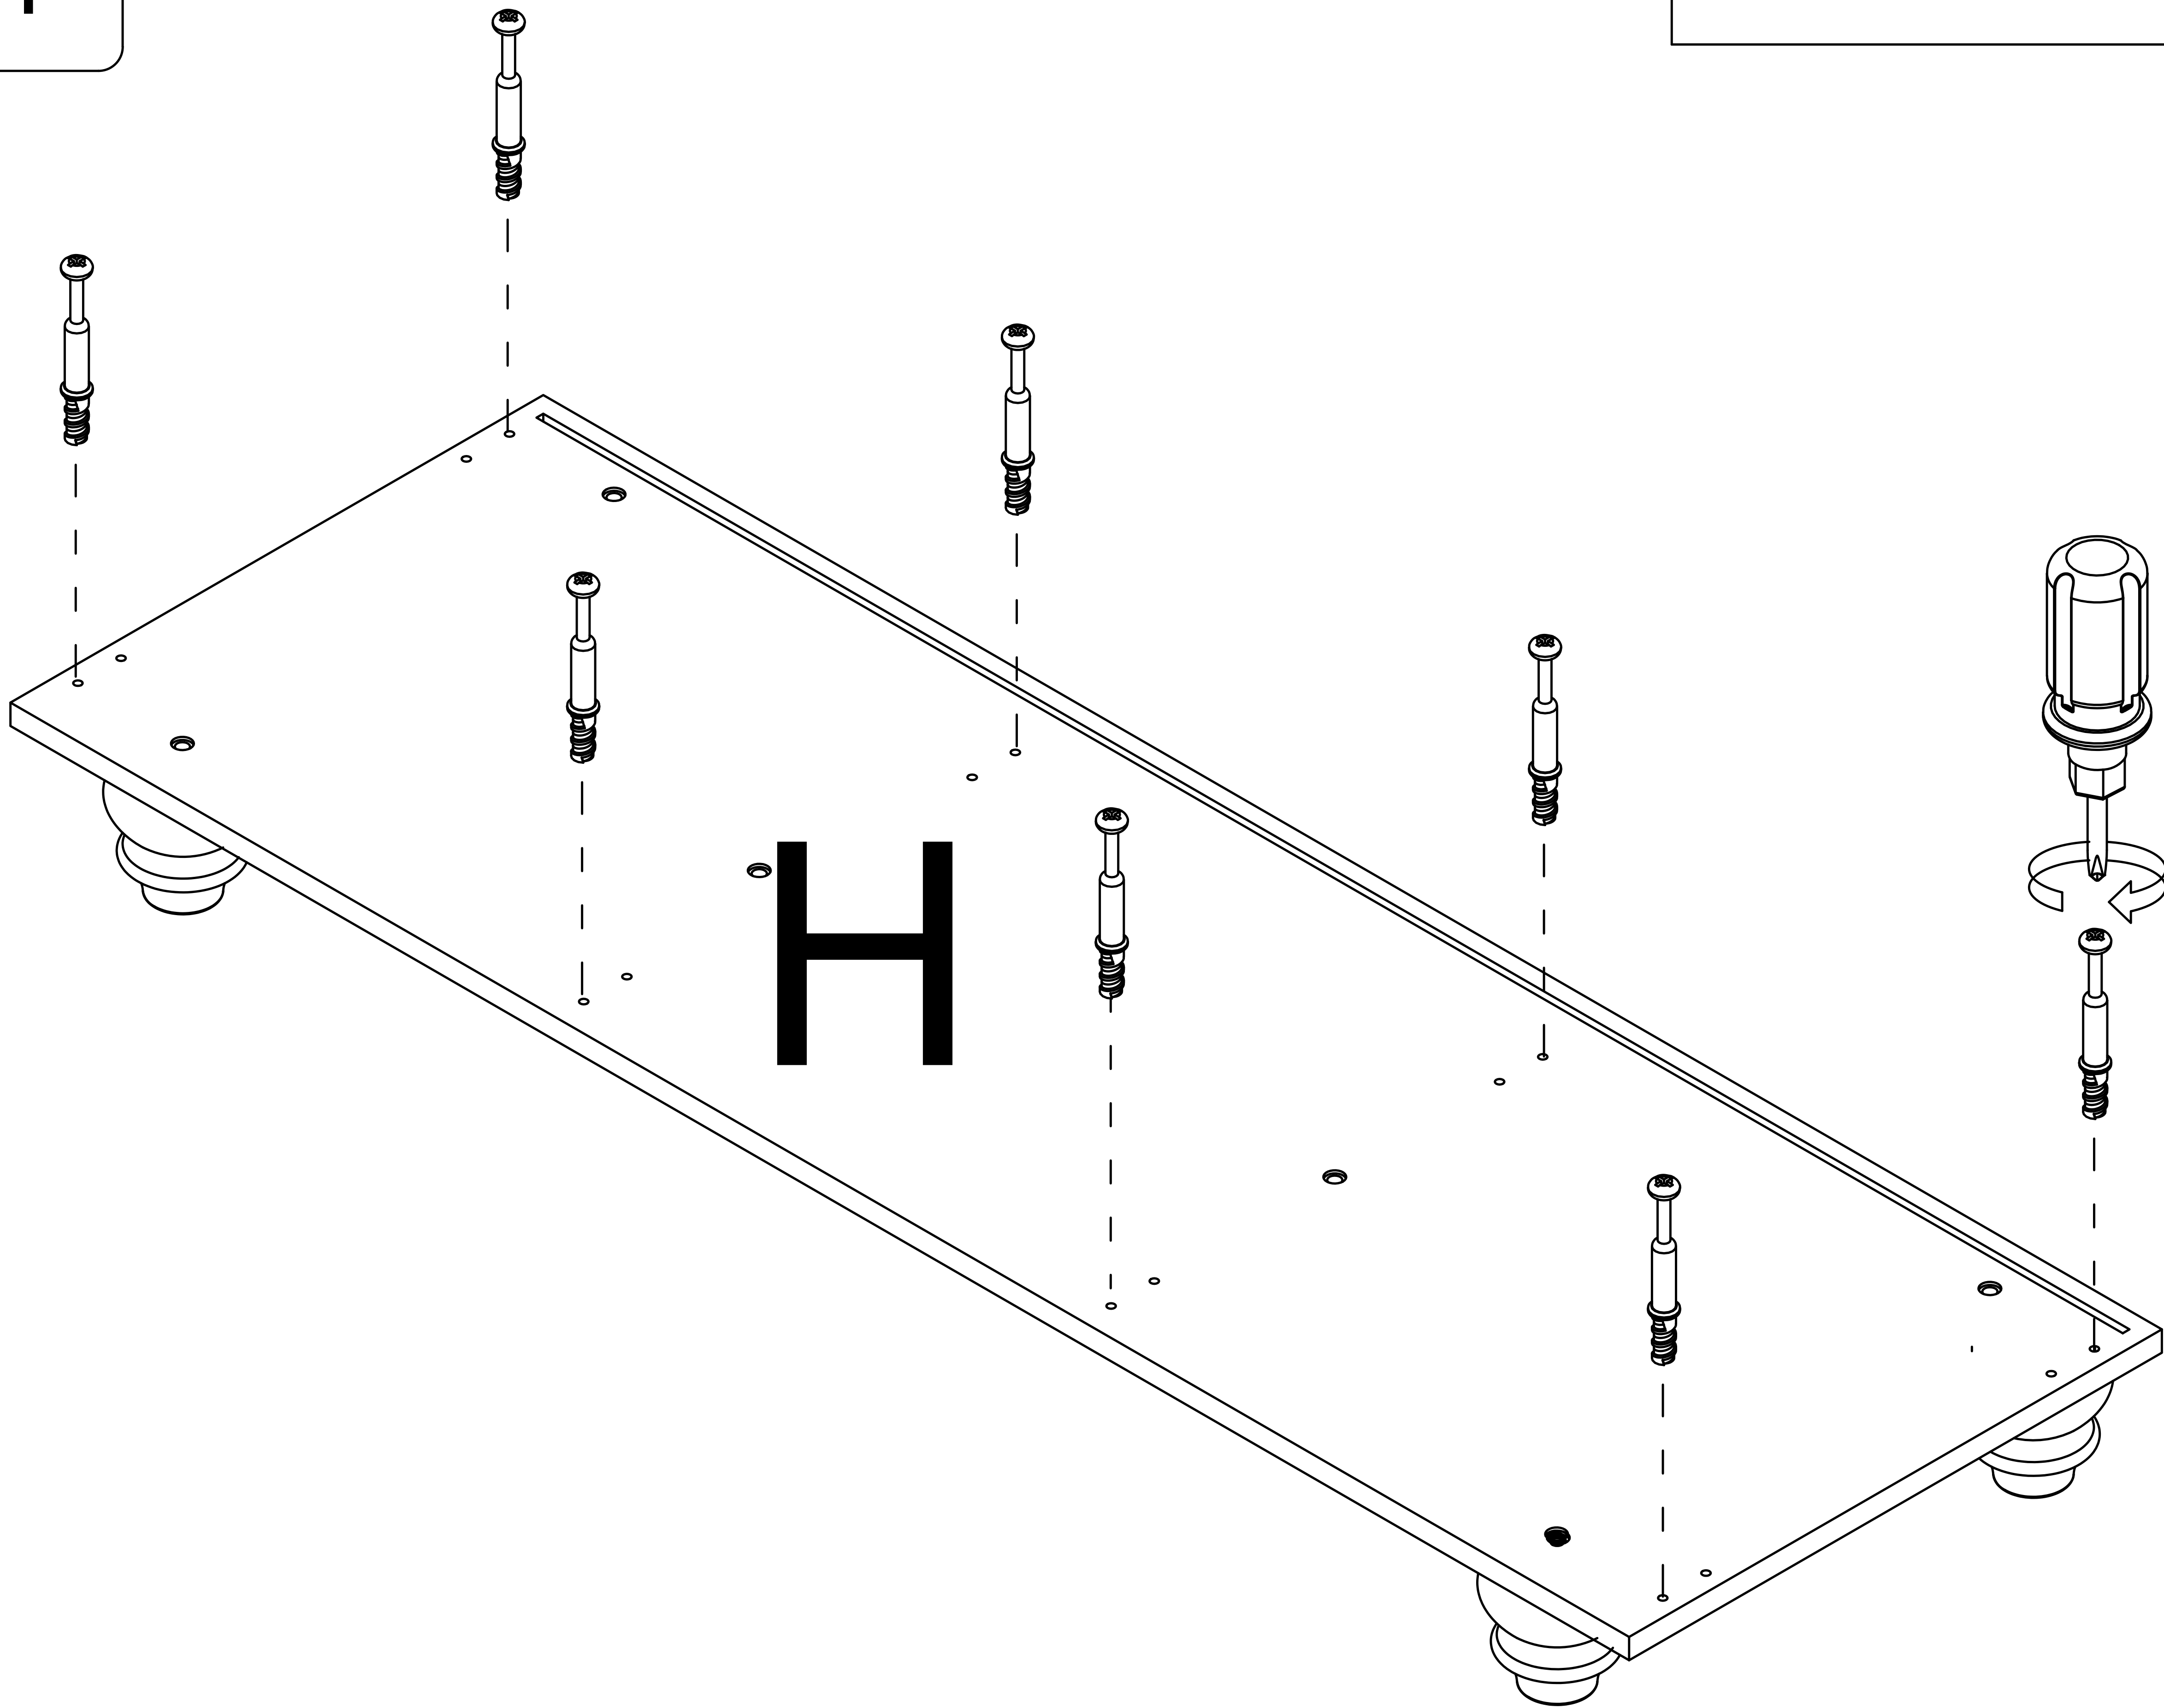


Step 12

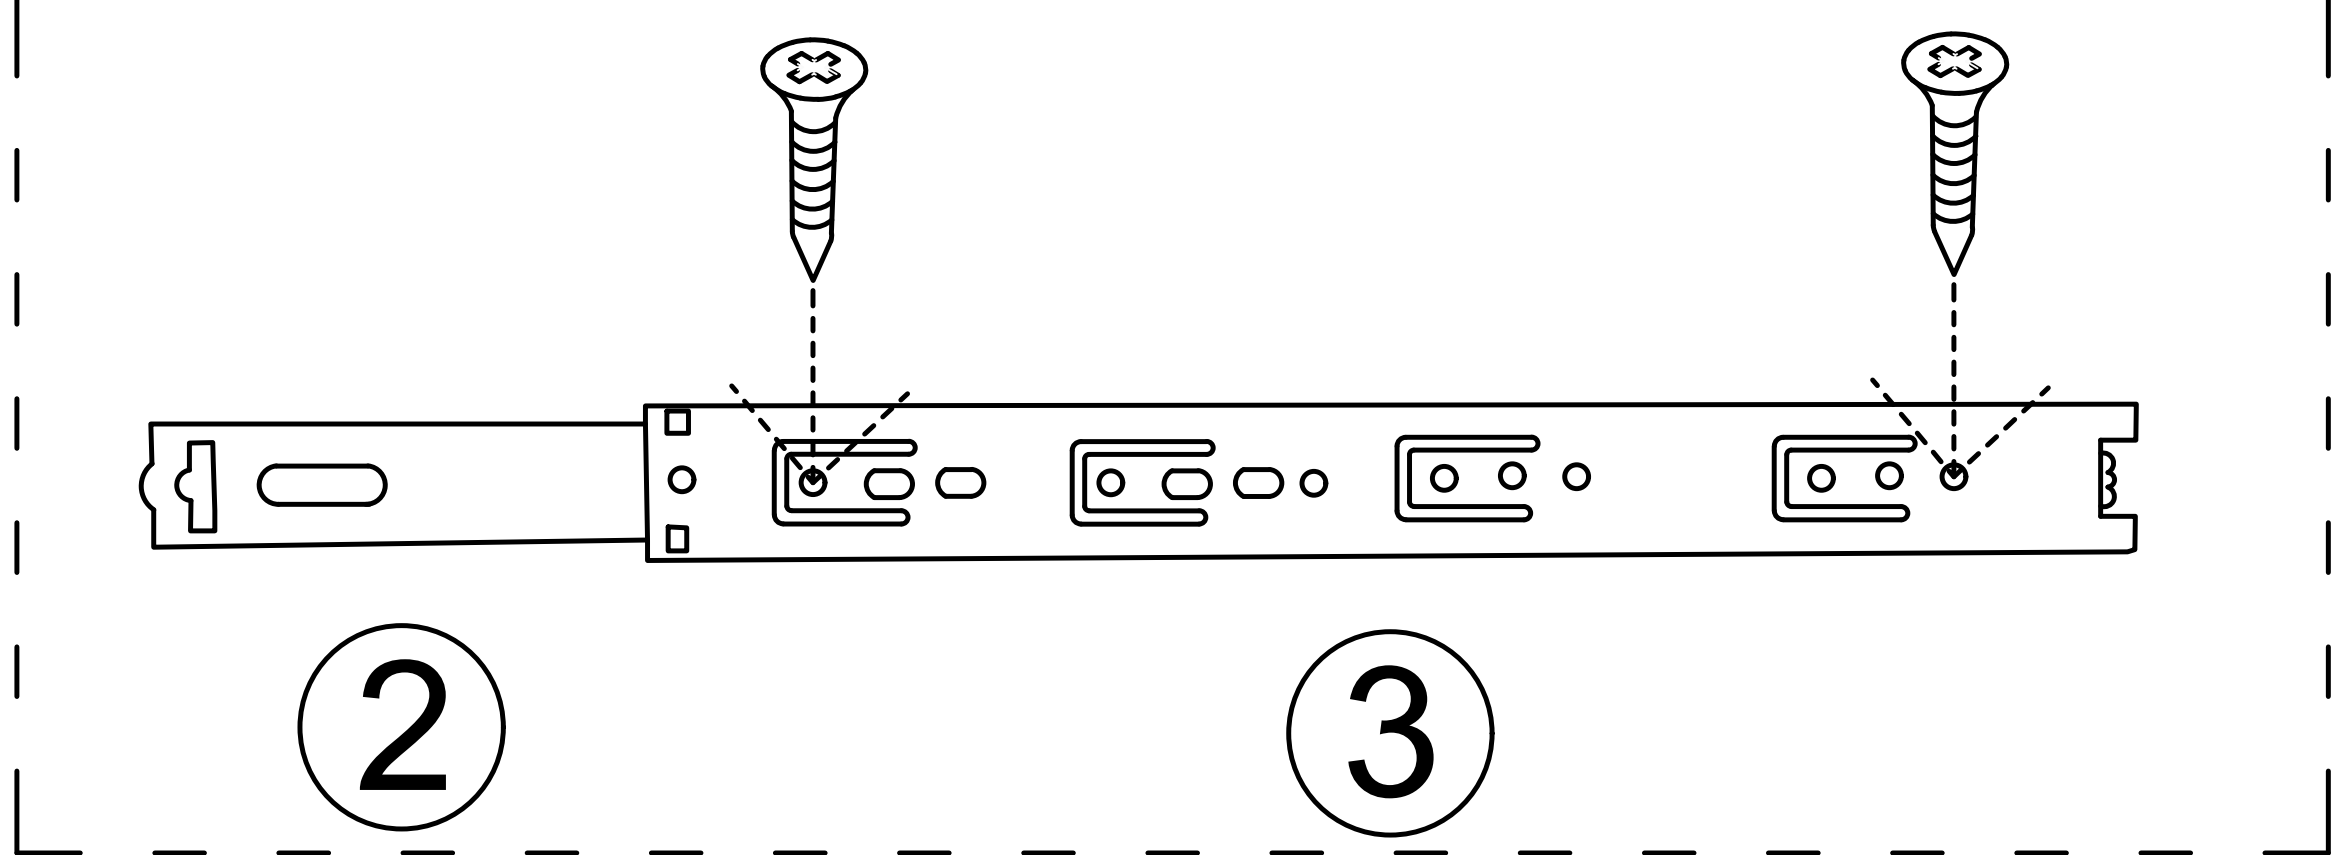

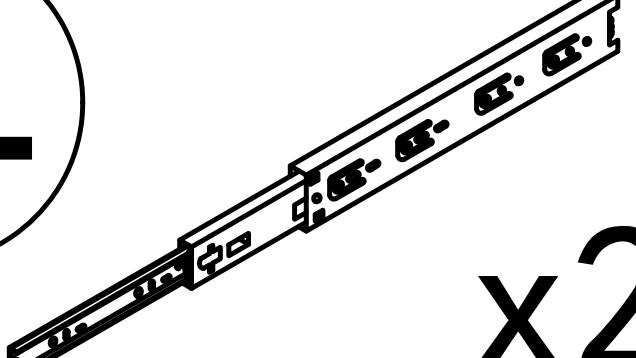
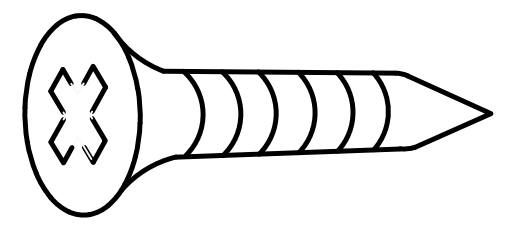
4  x2  x4

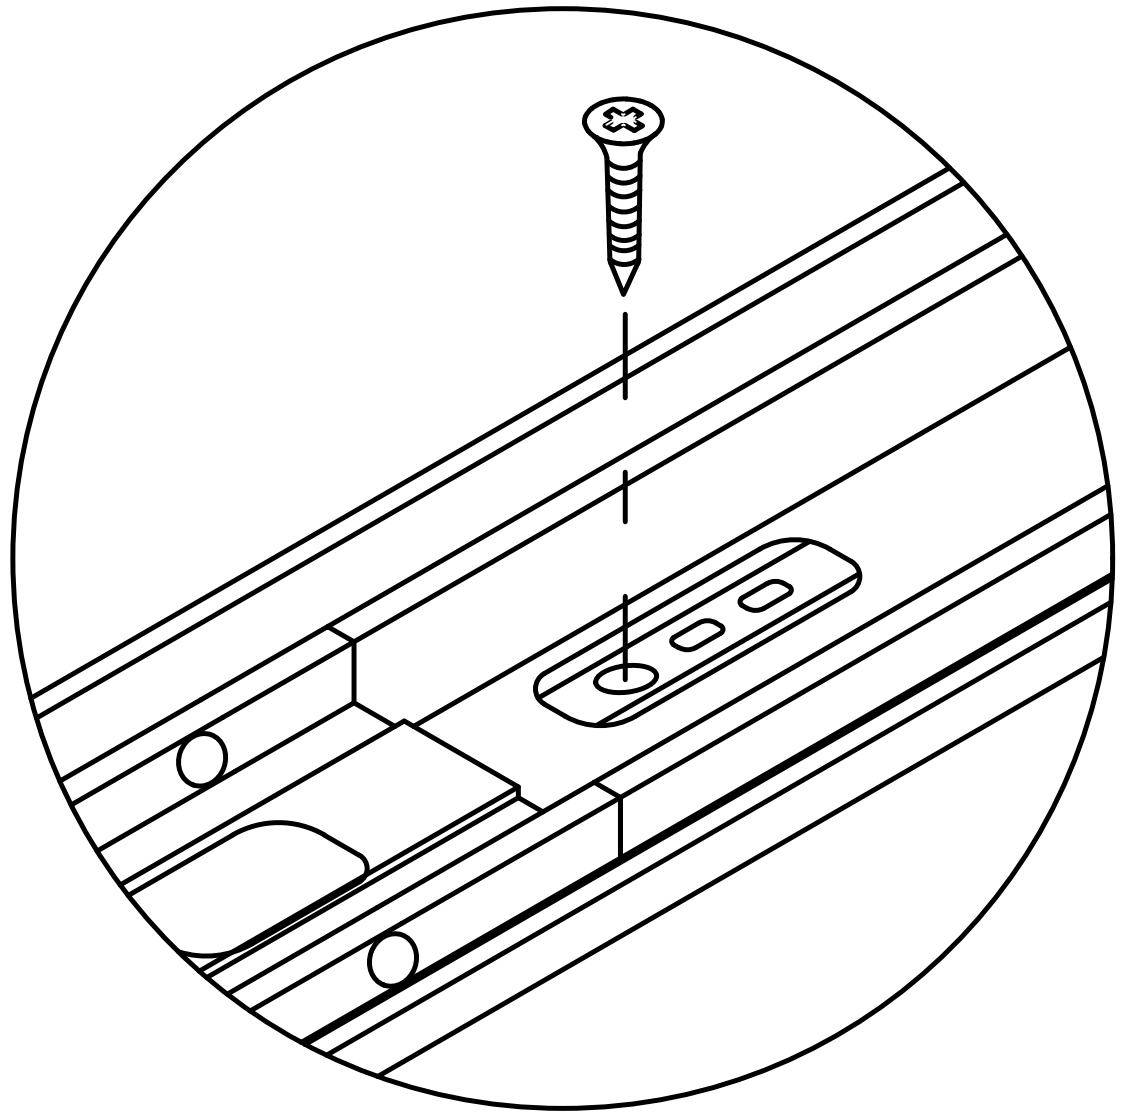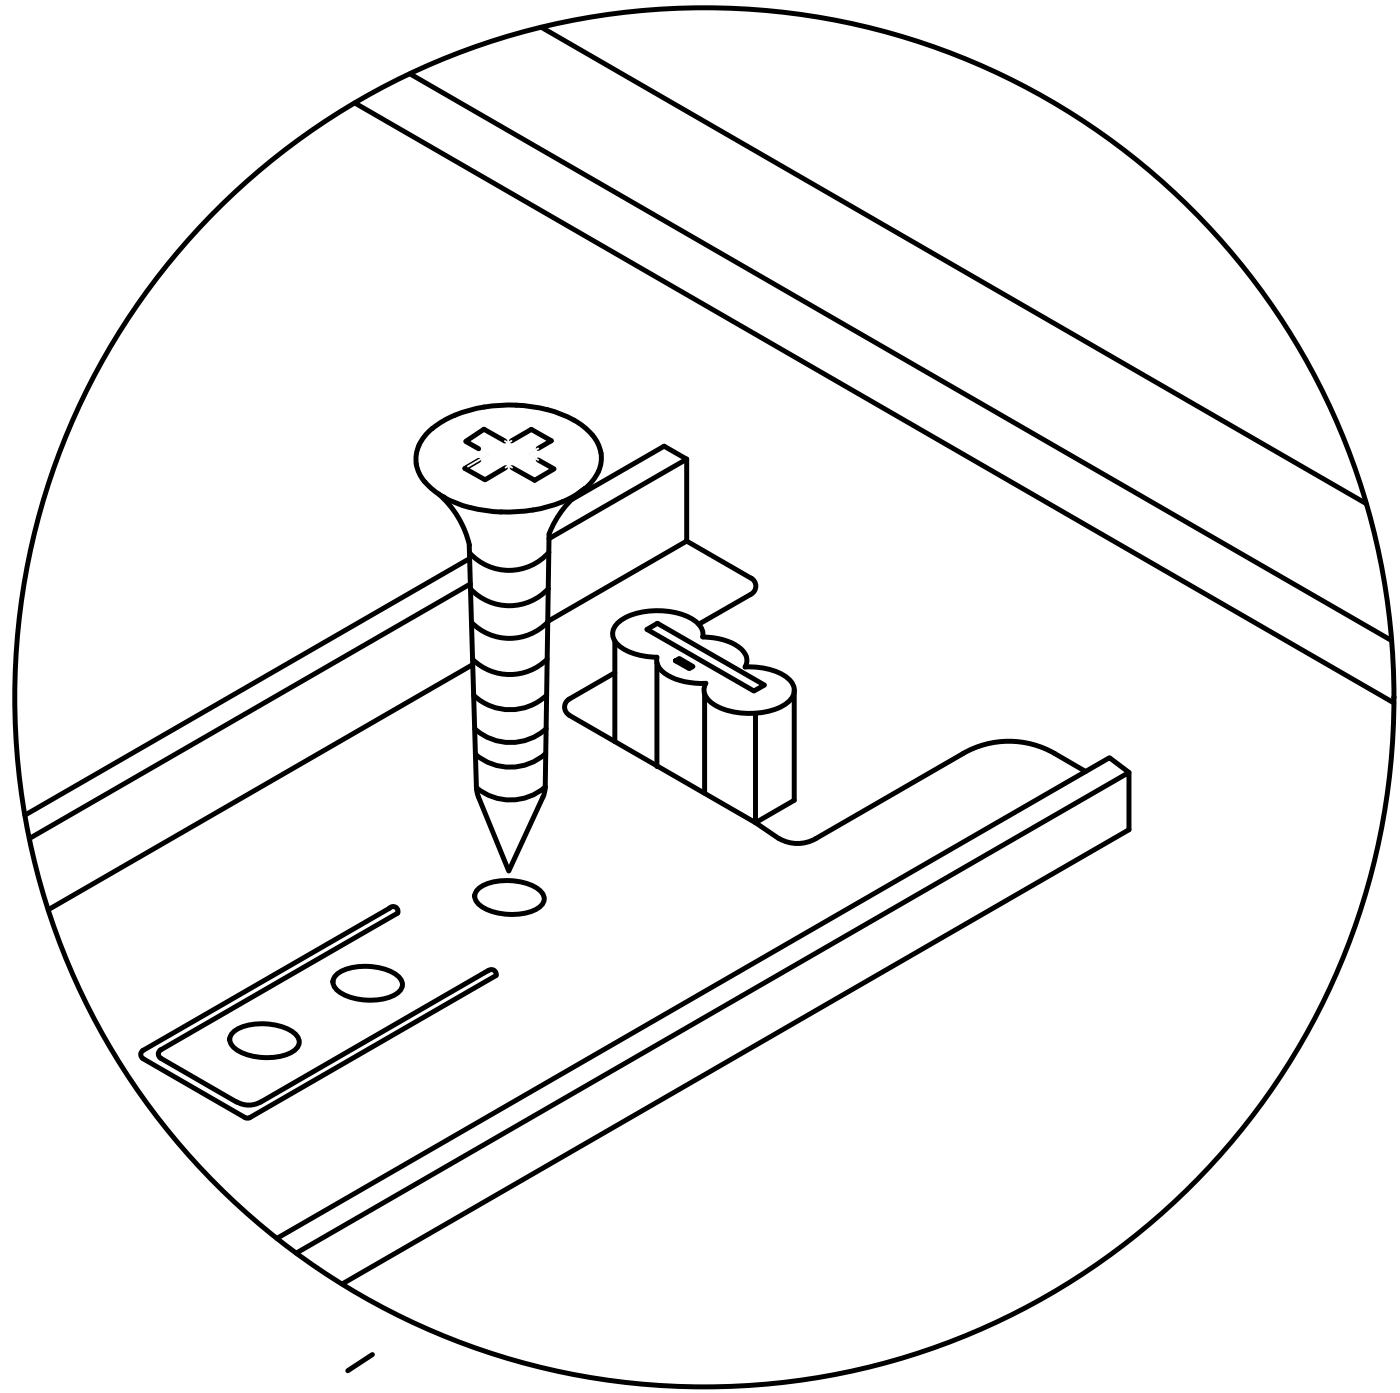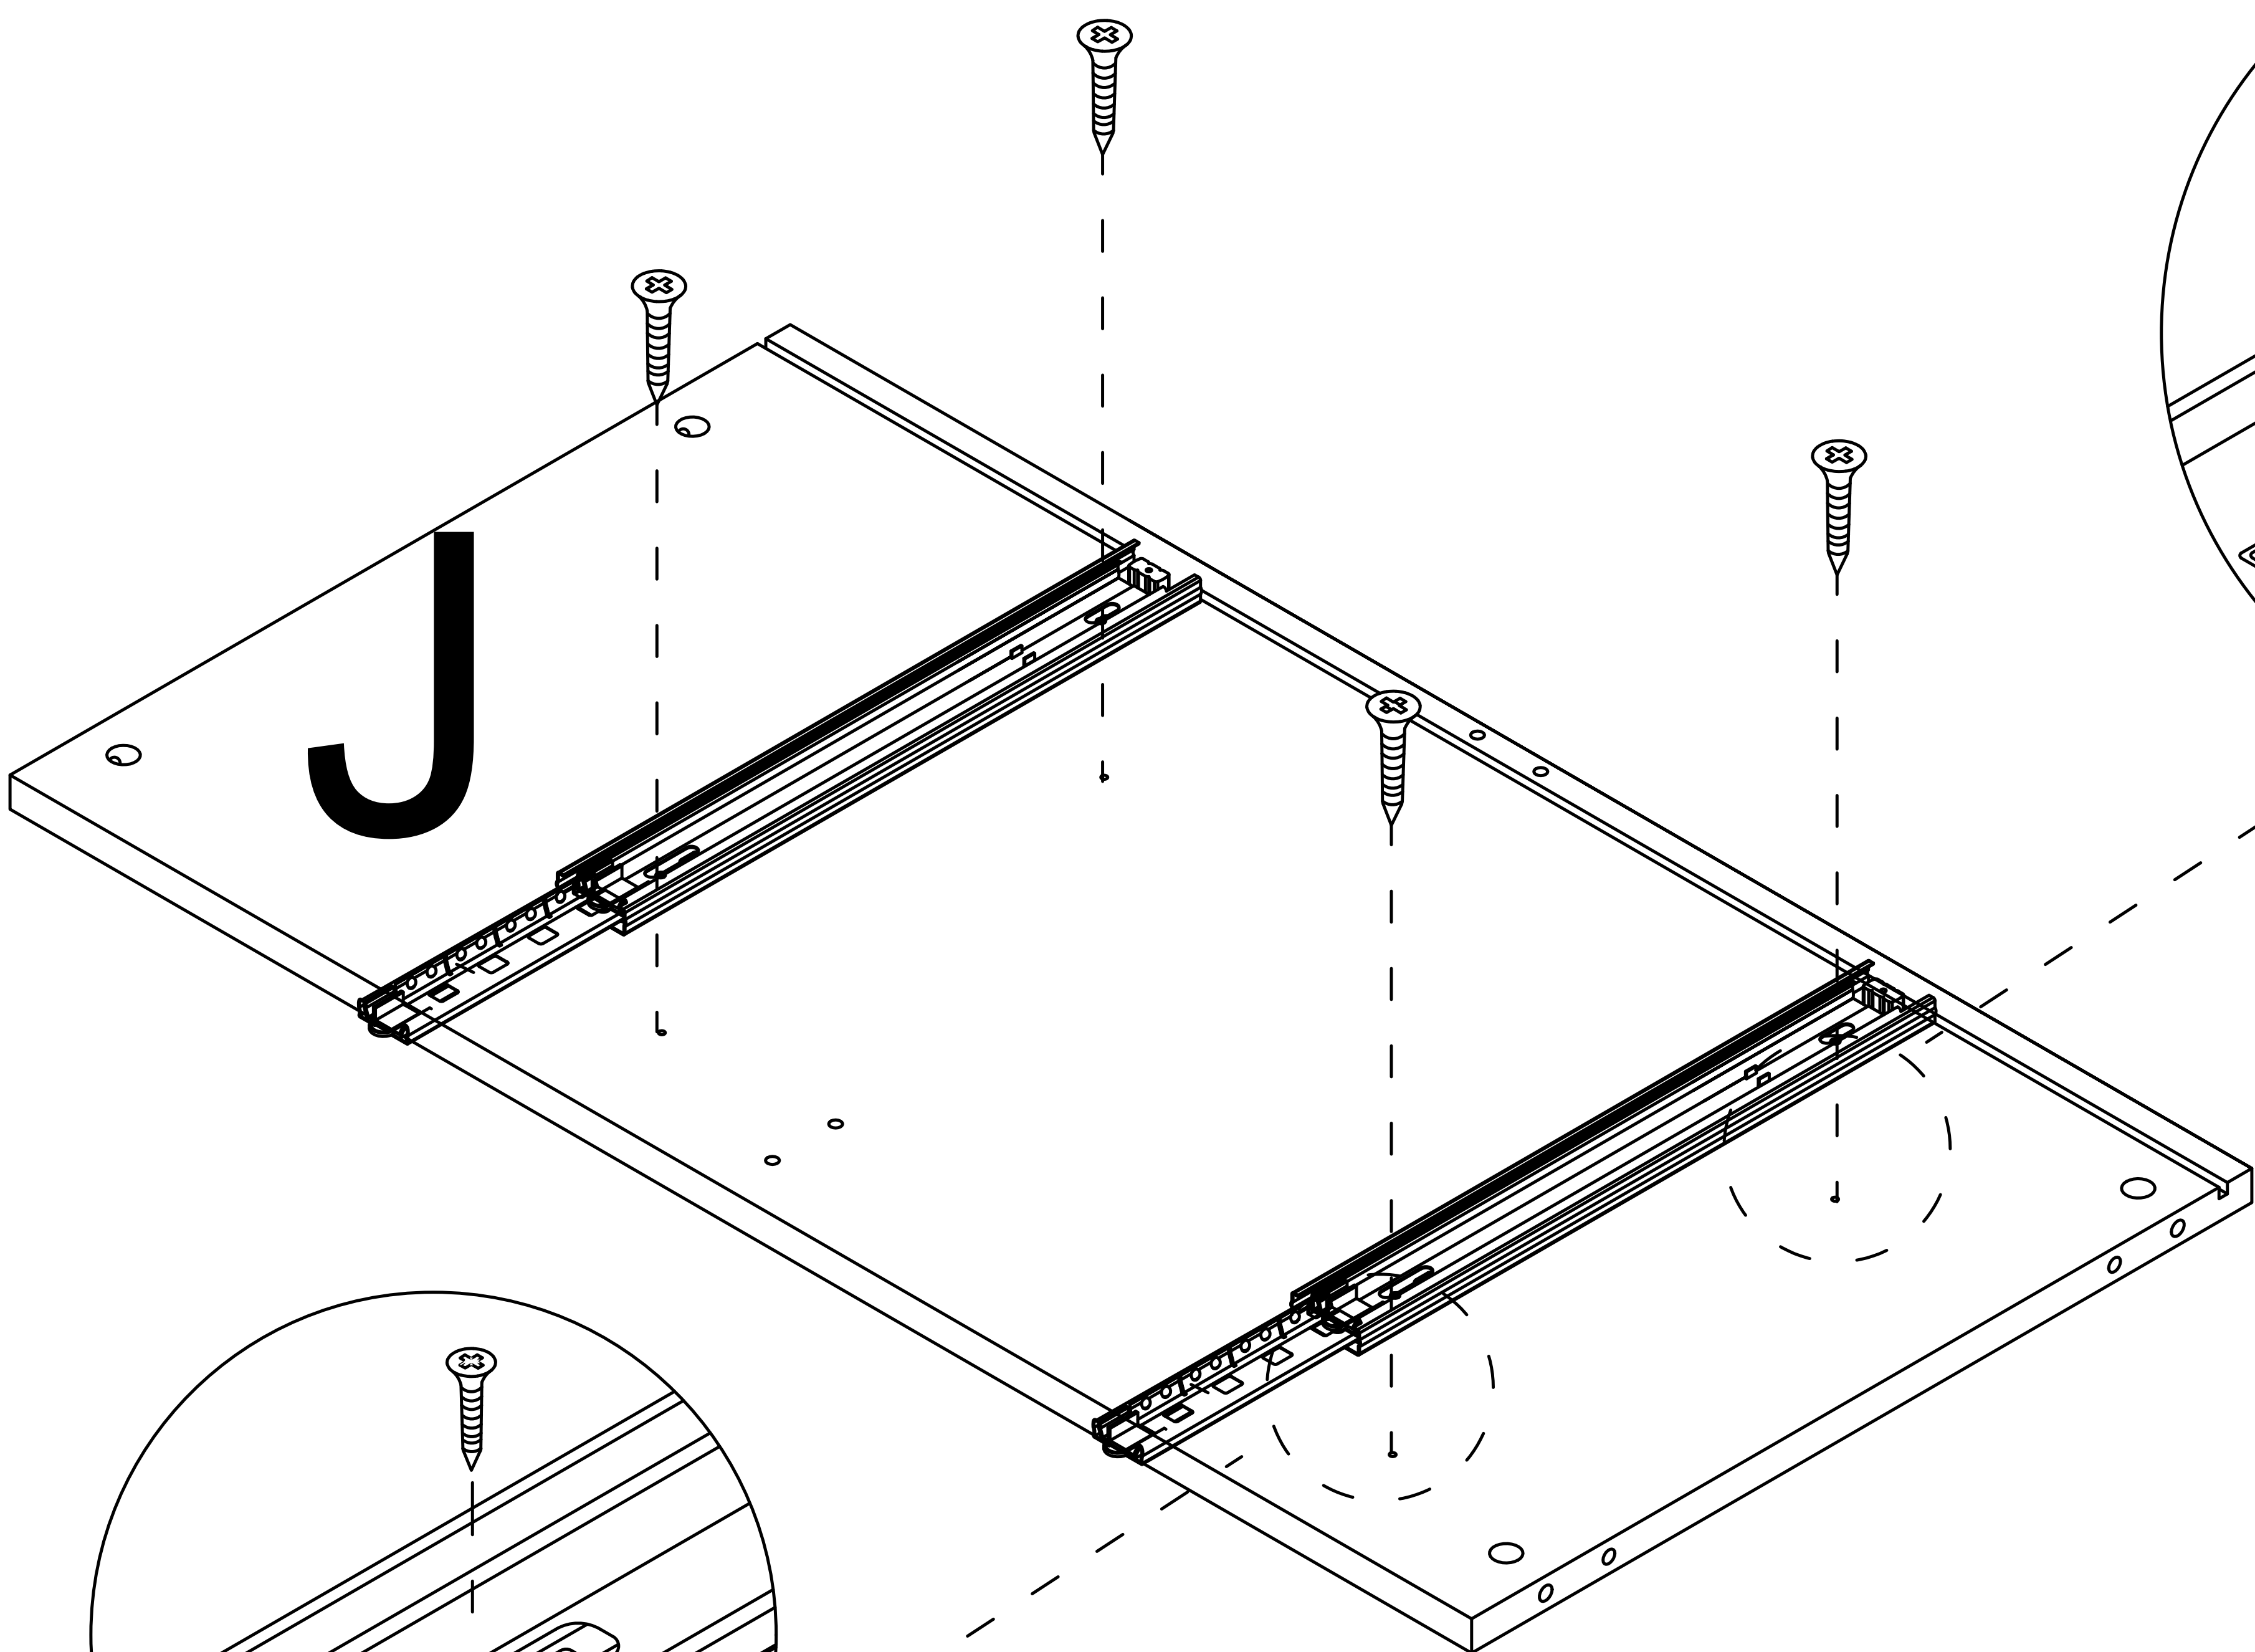

Step 13

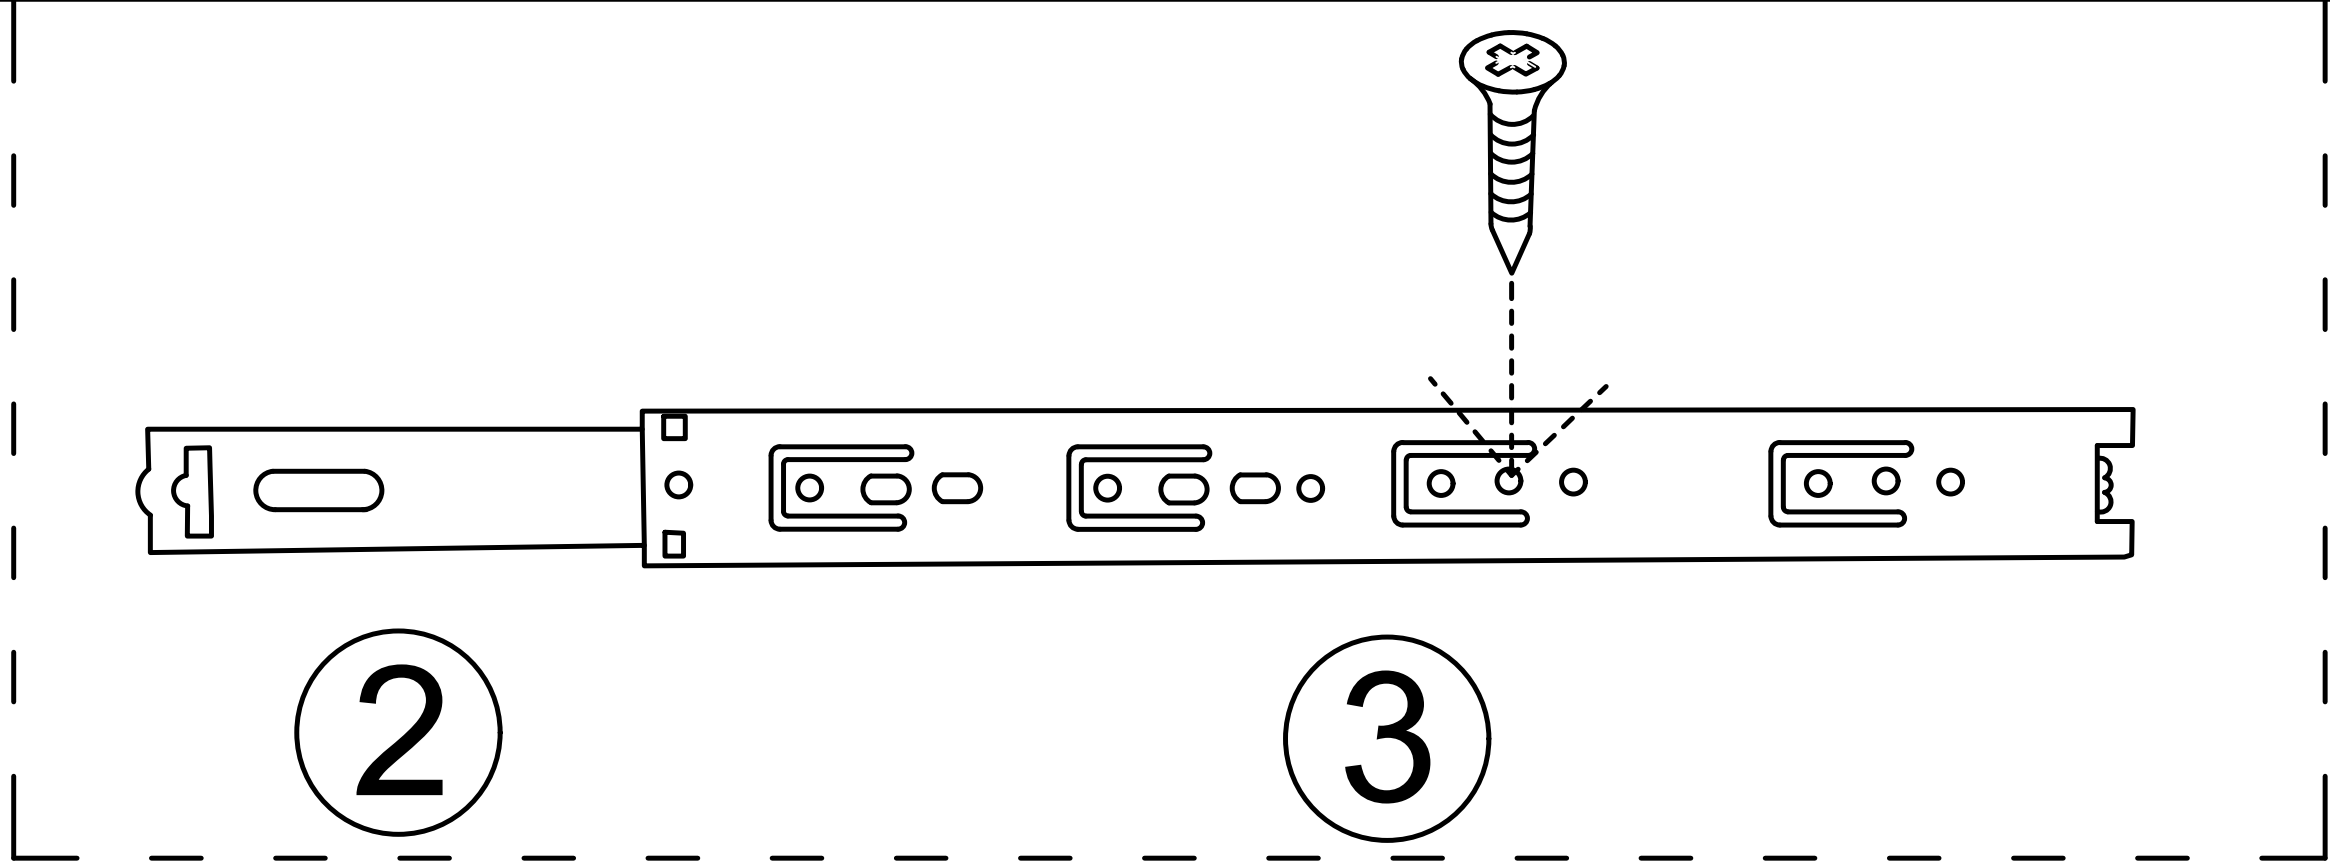



4

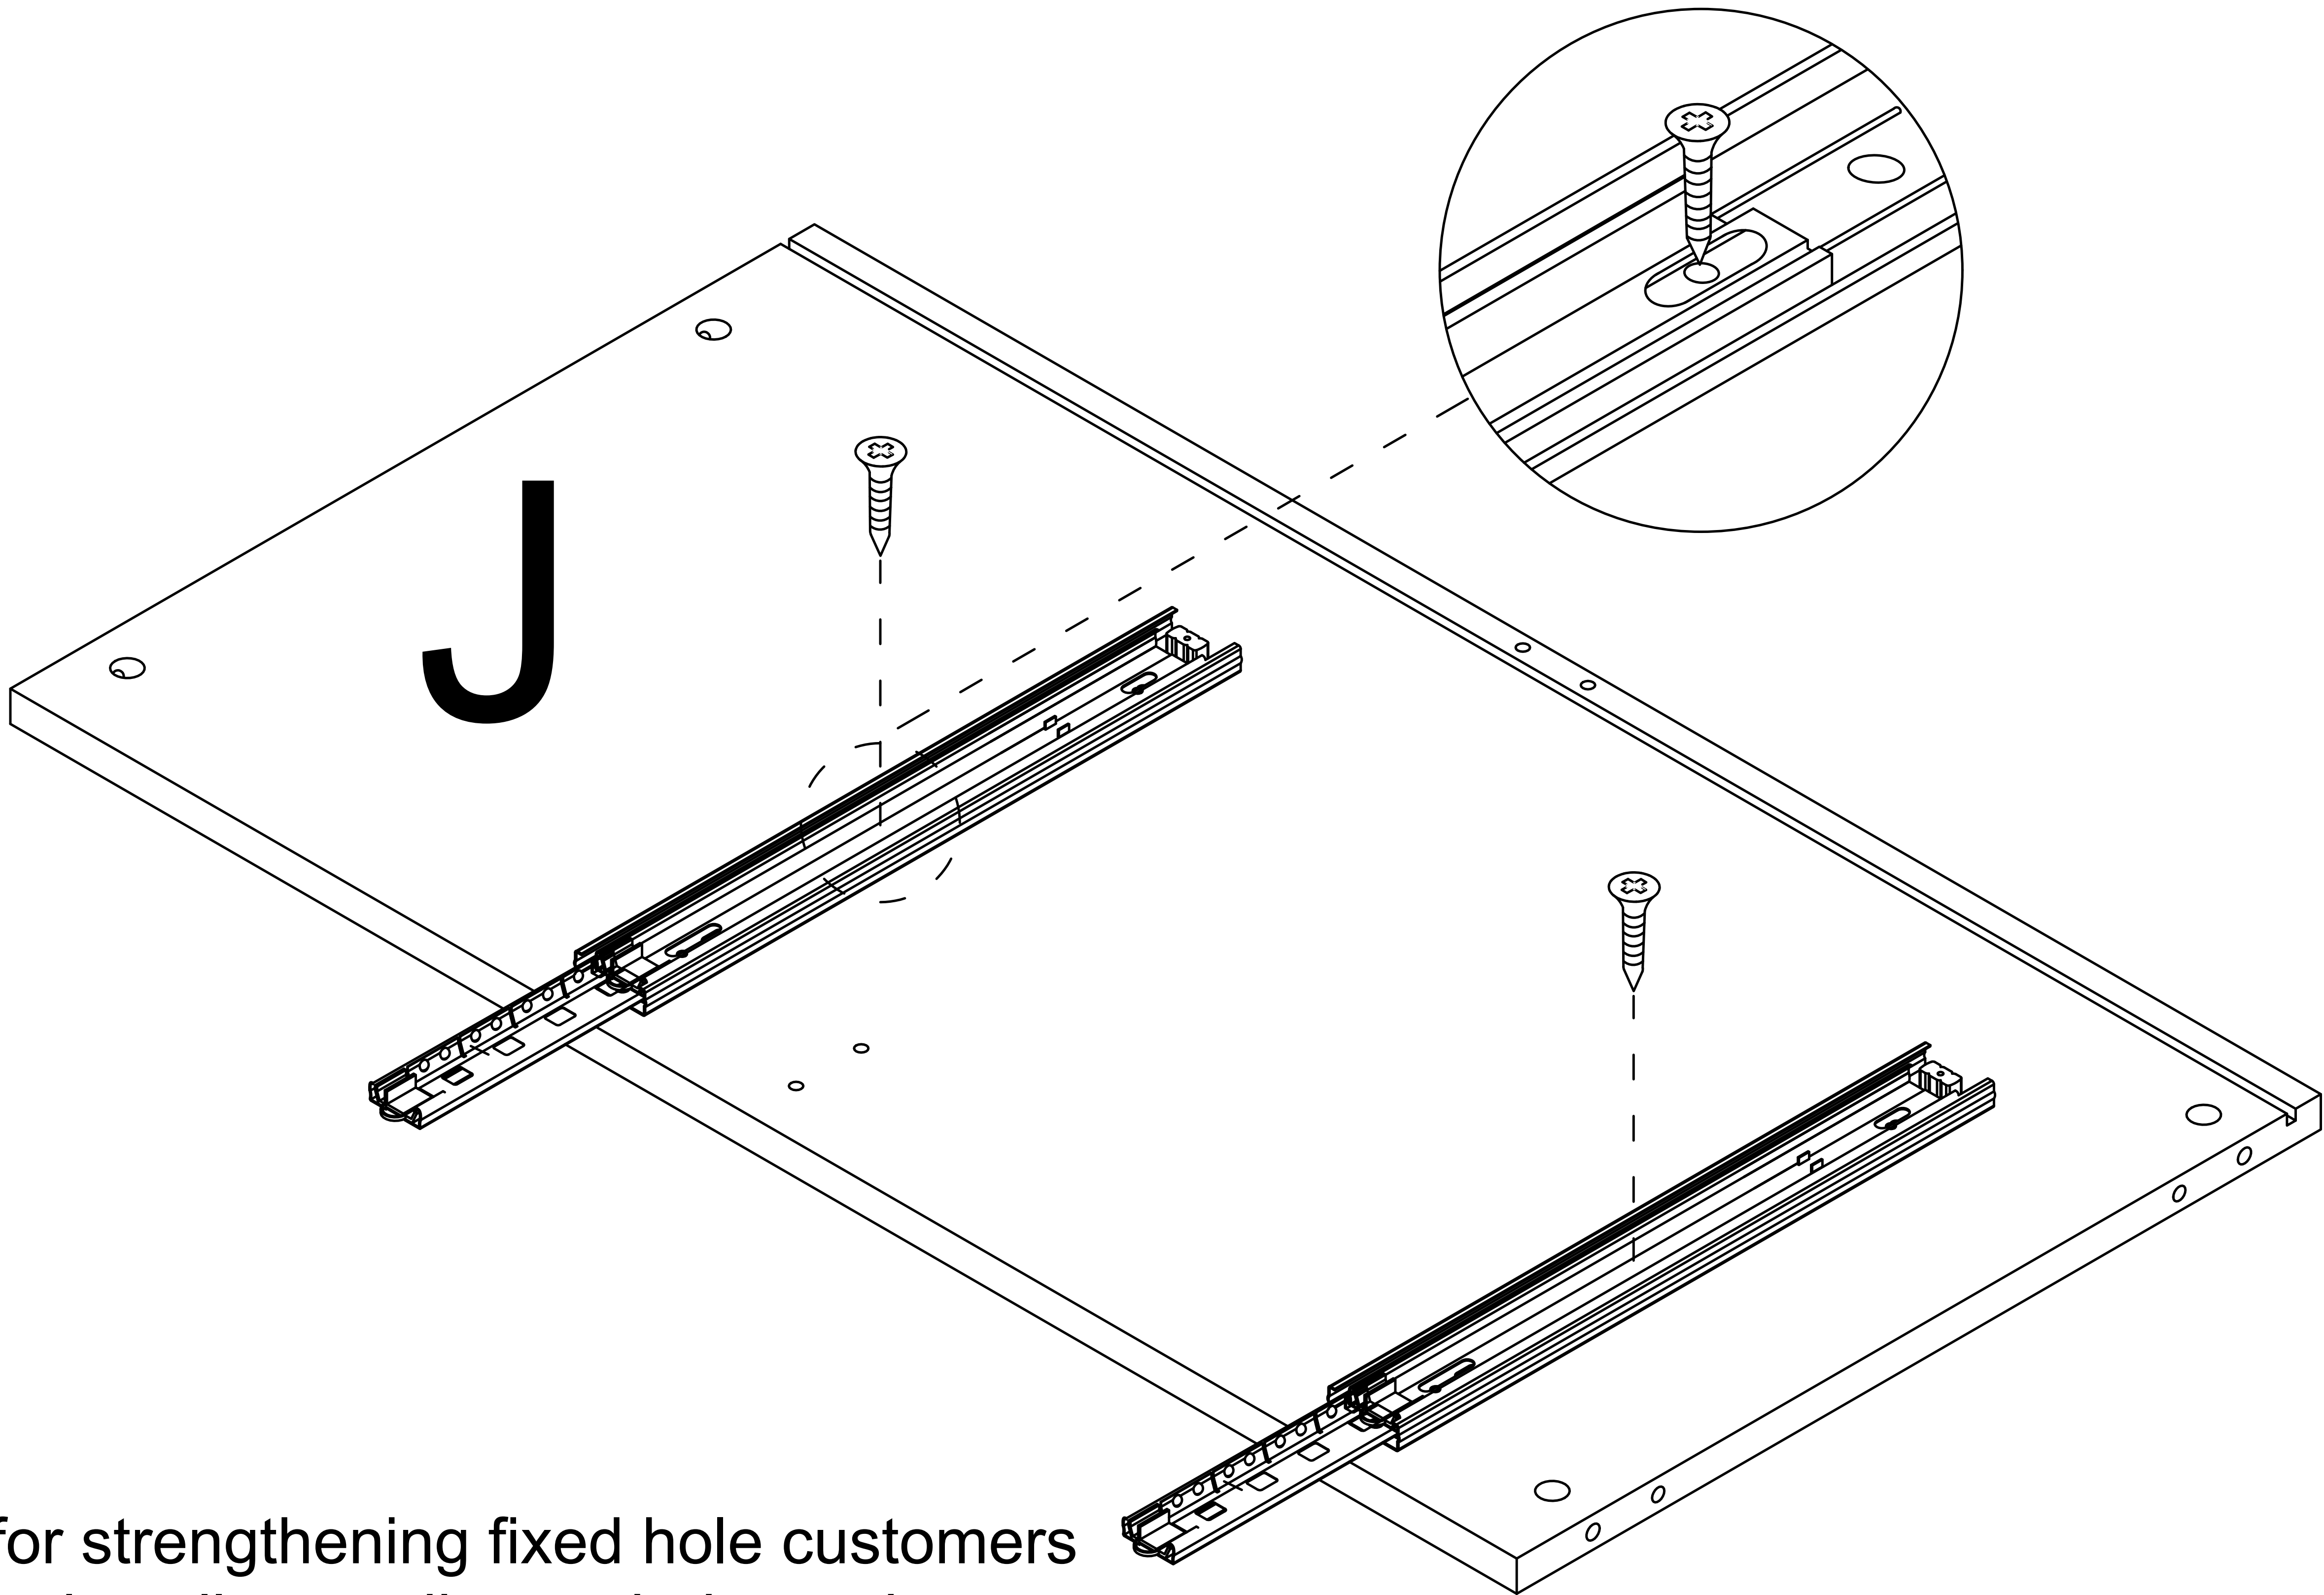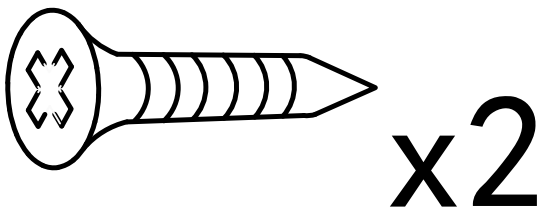

This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 14

1

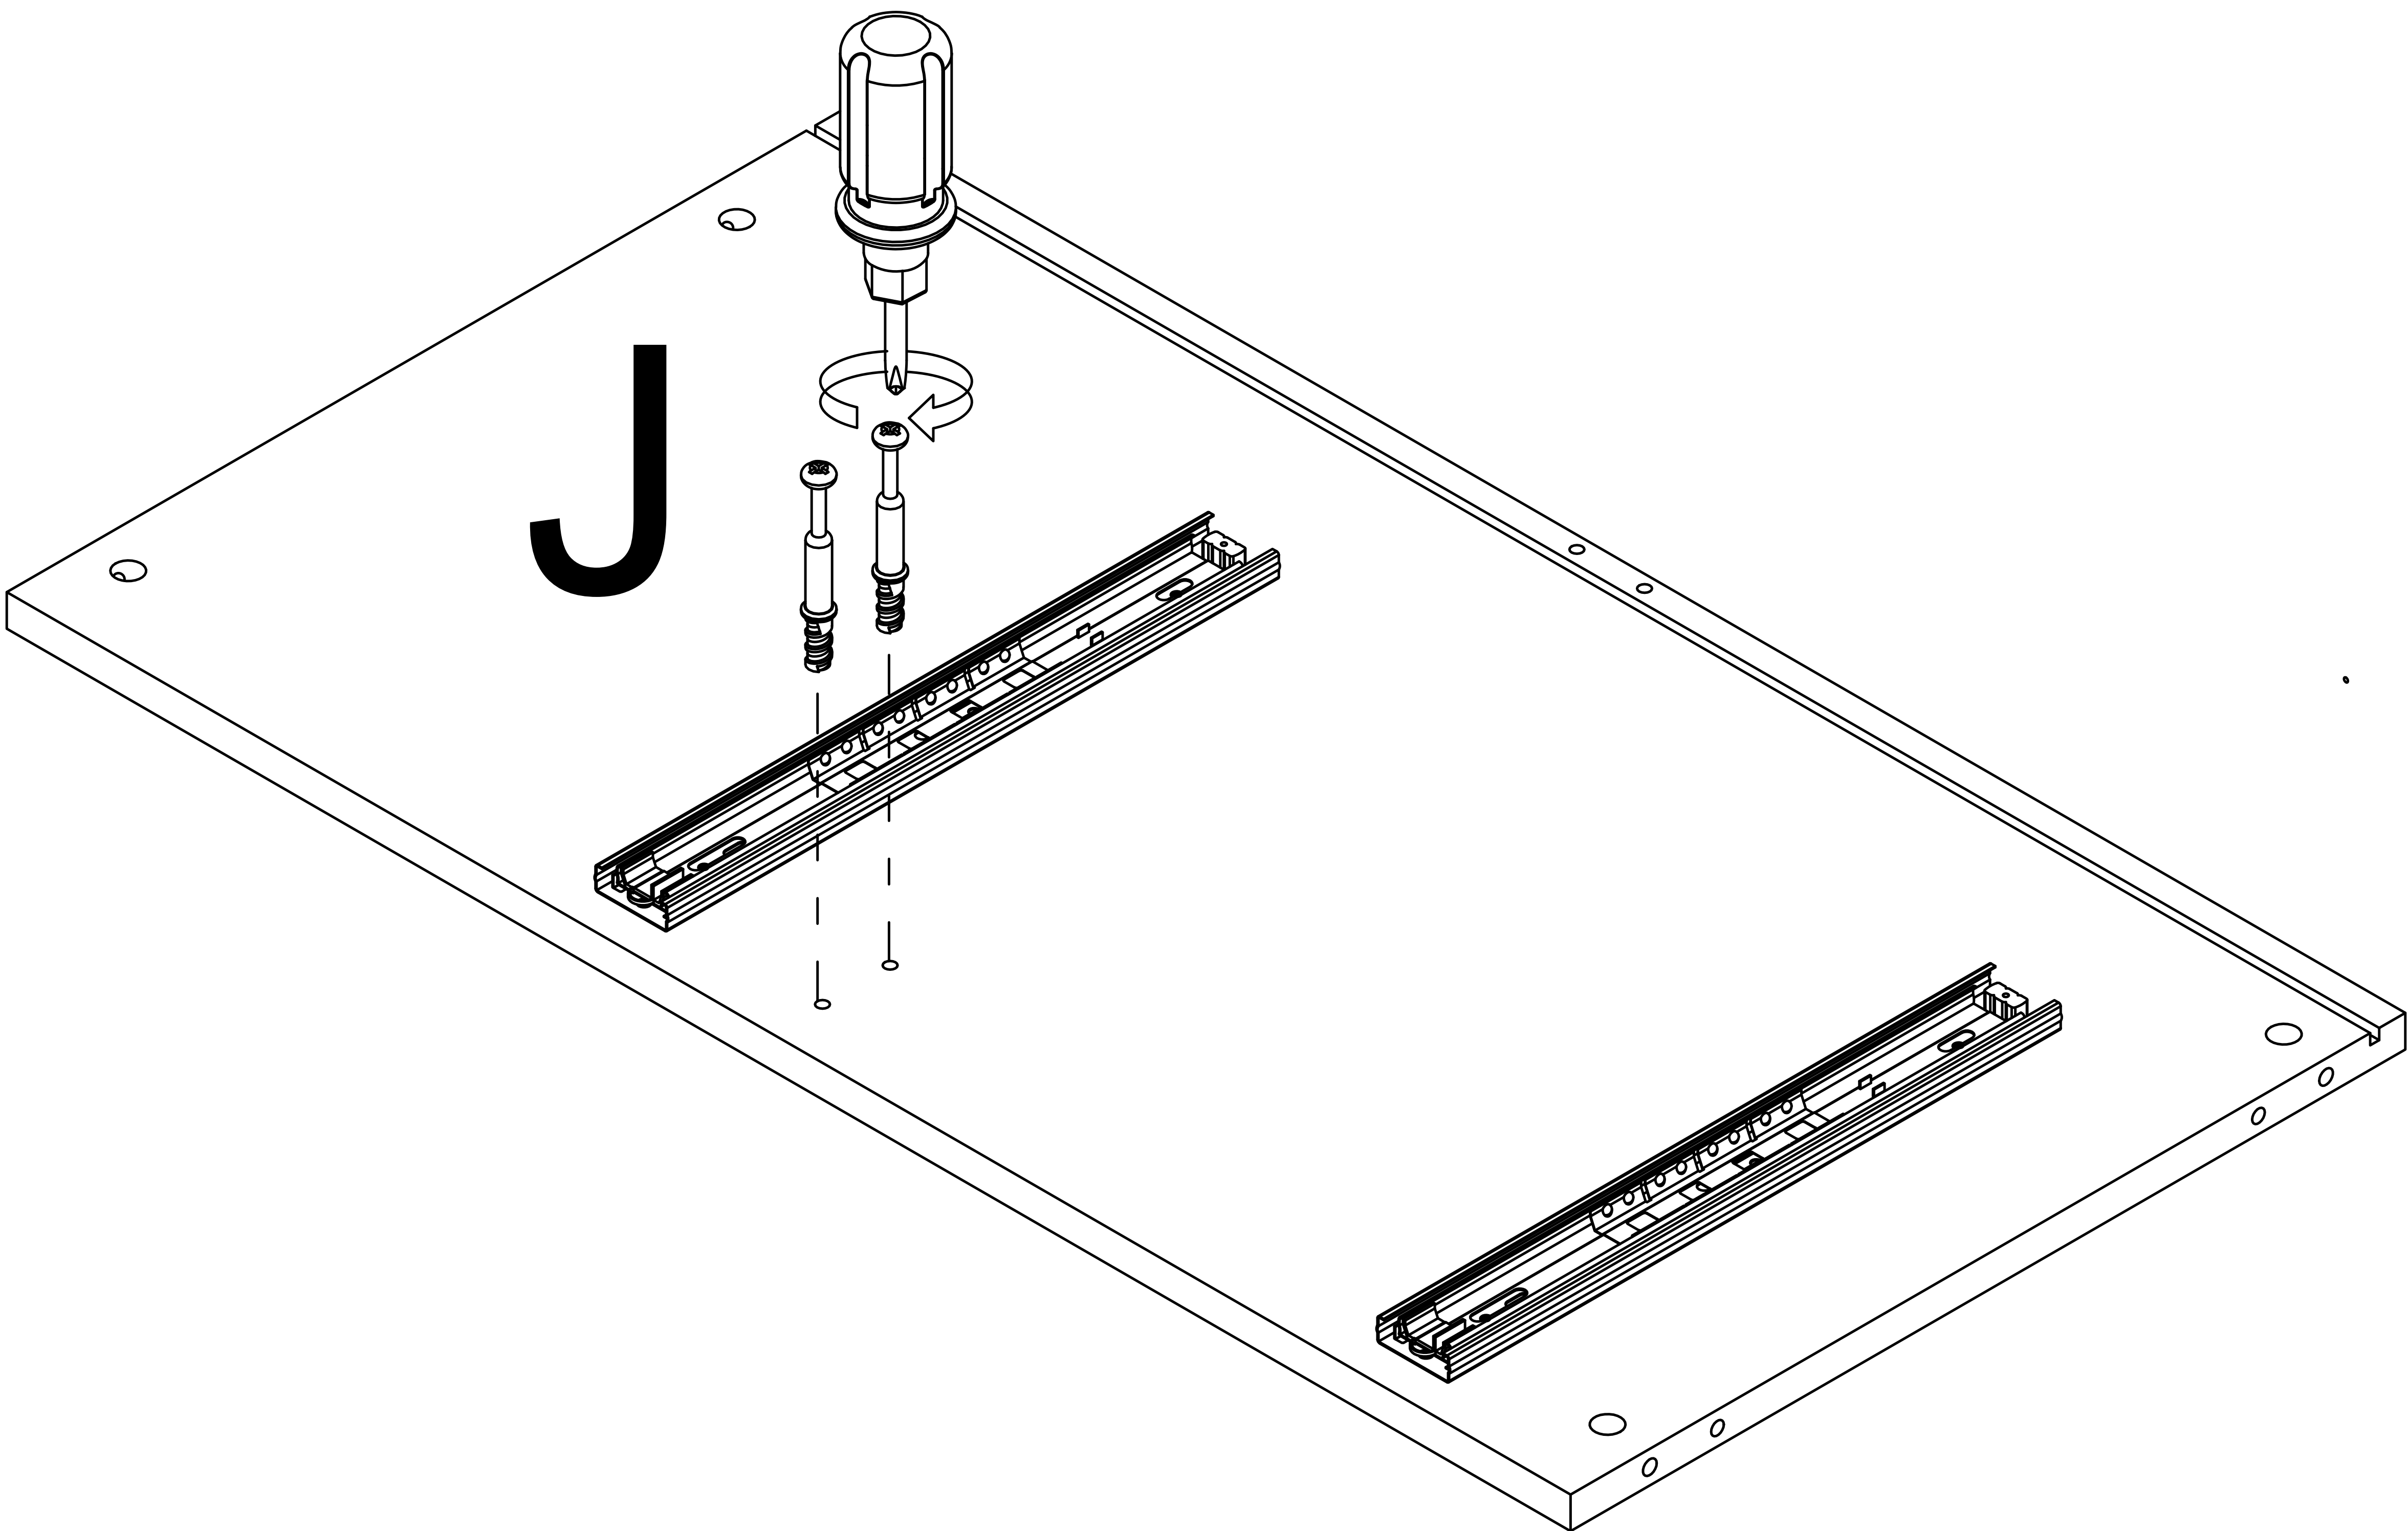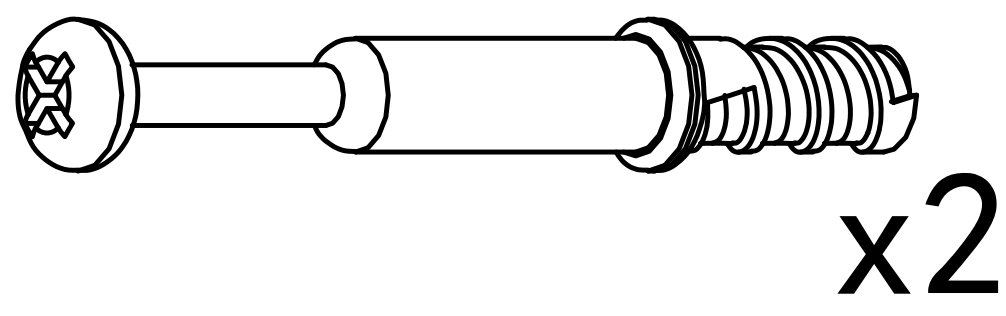


Step 15

8

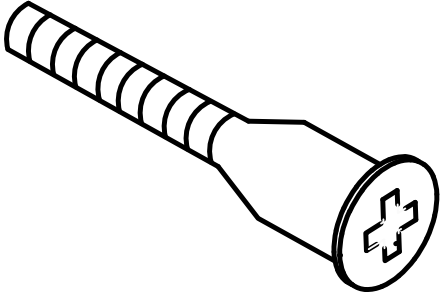


x2

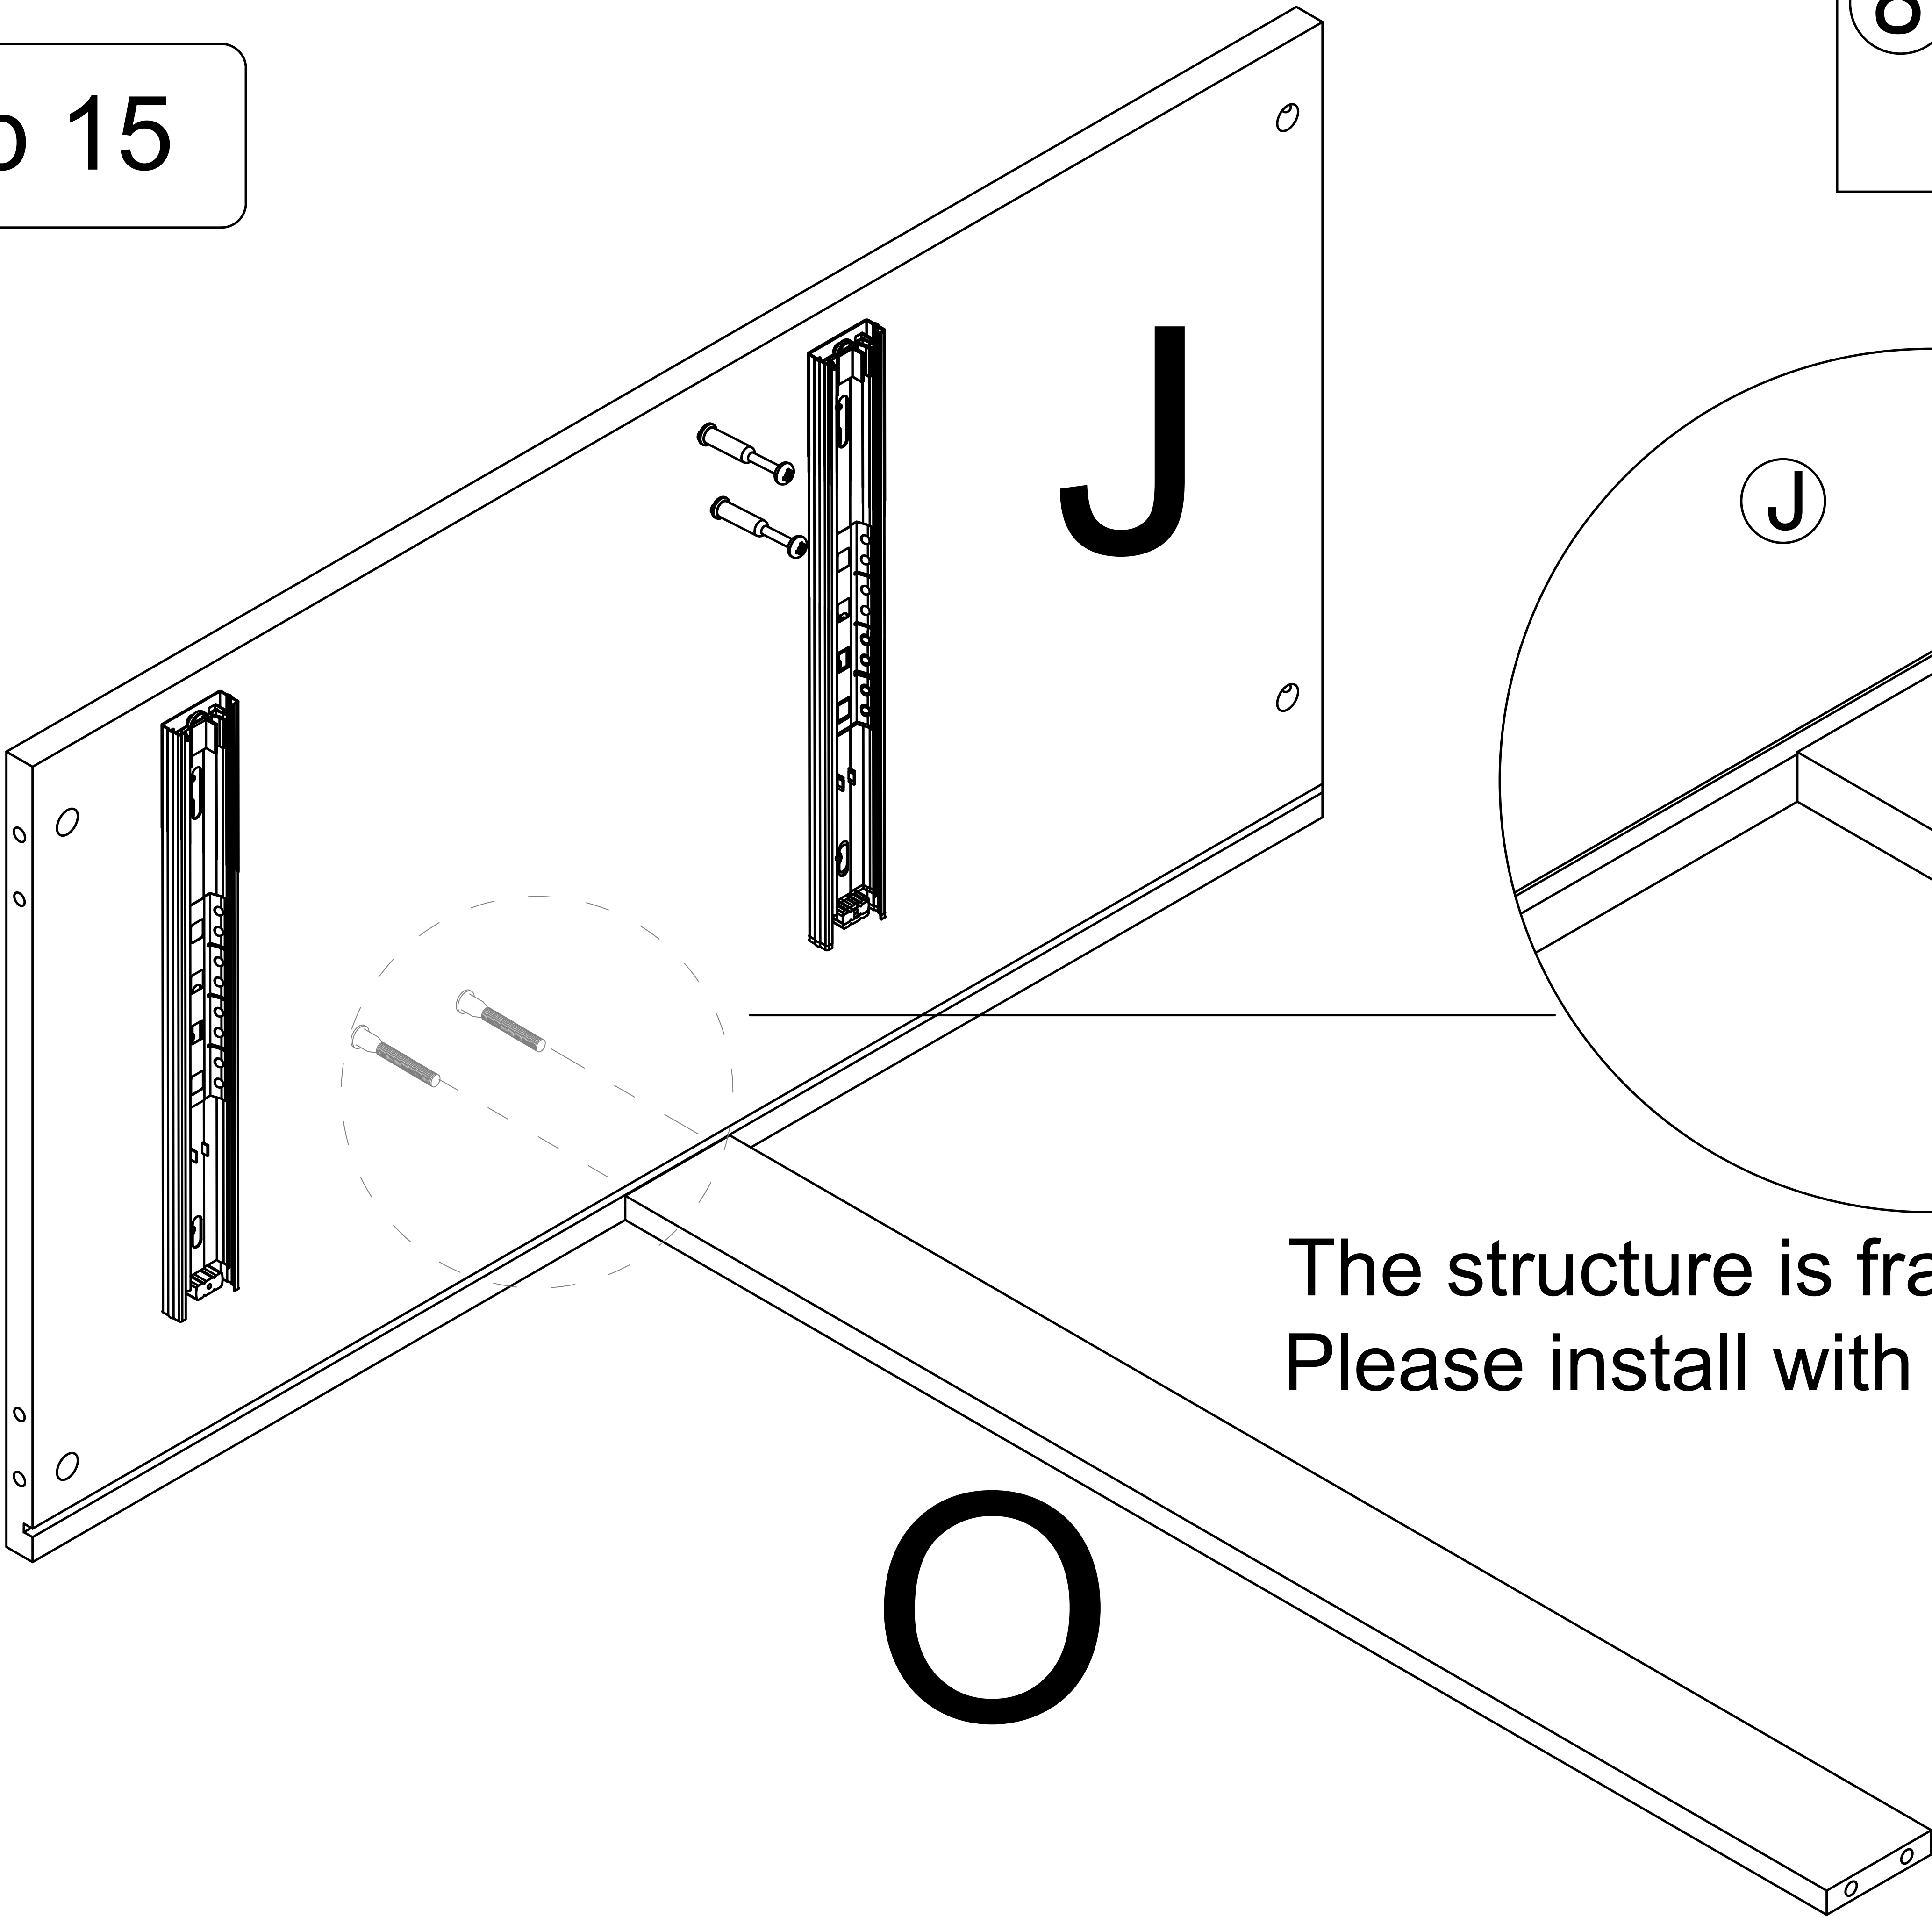


The structure is fragile.
Please install with extreme care.

Step 16






2

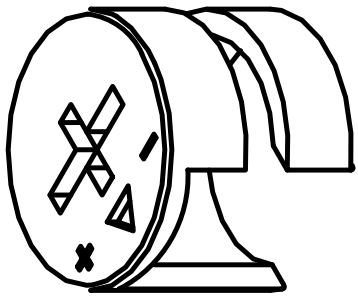





x2

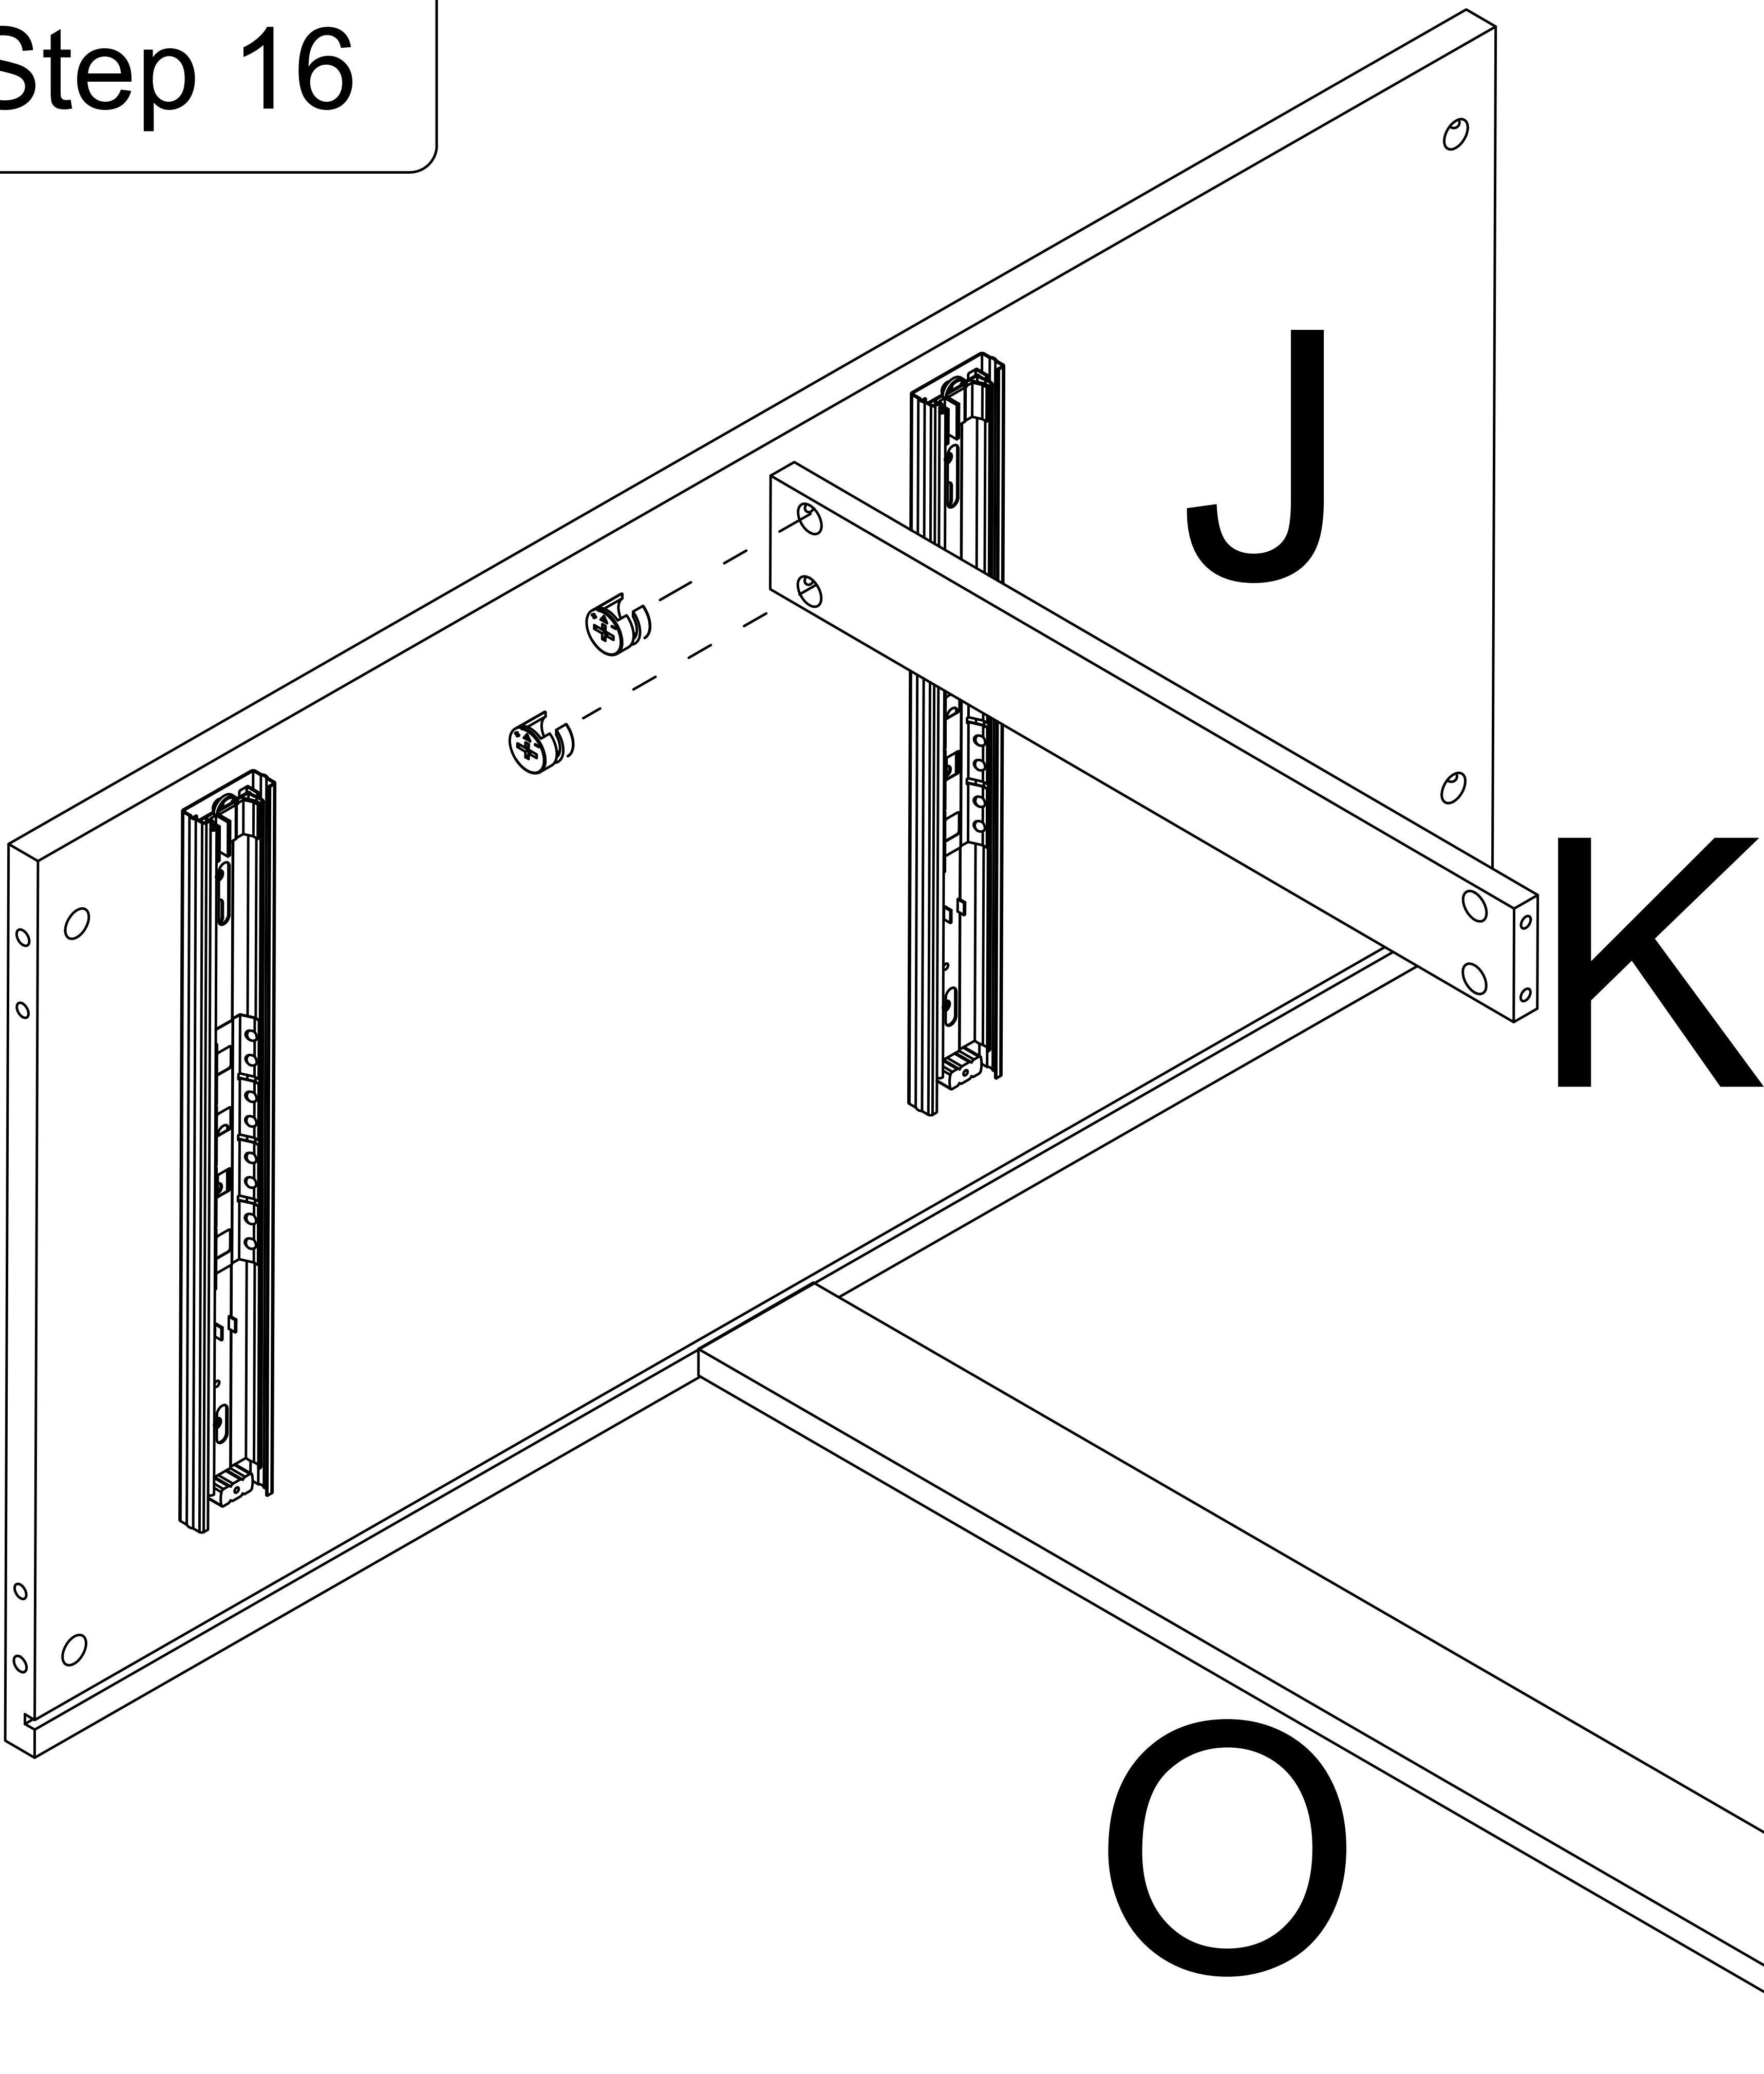

Step 17

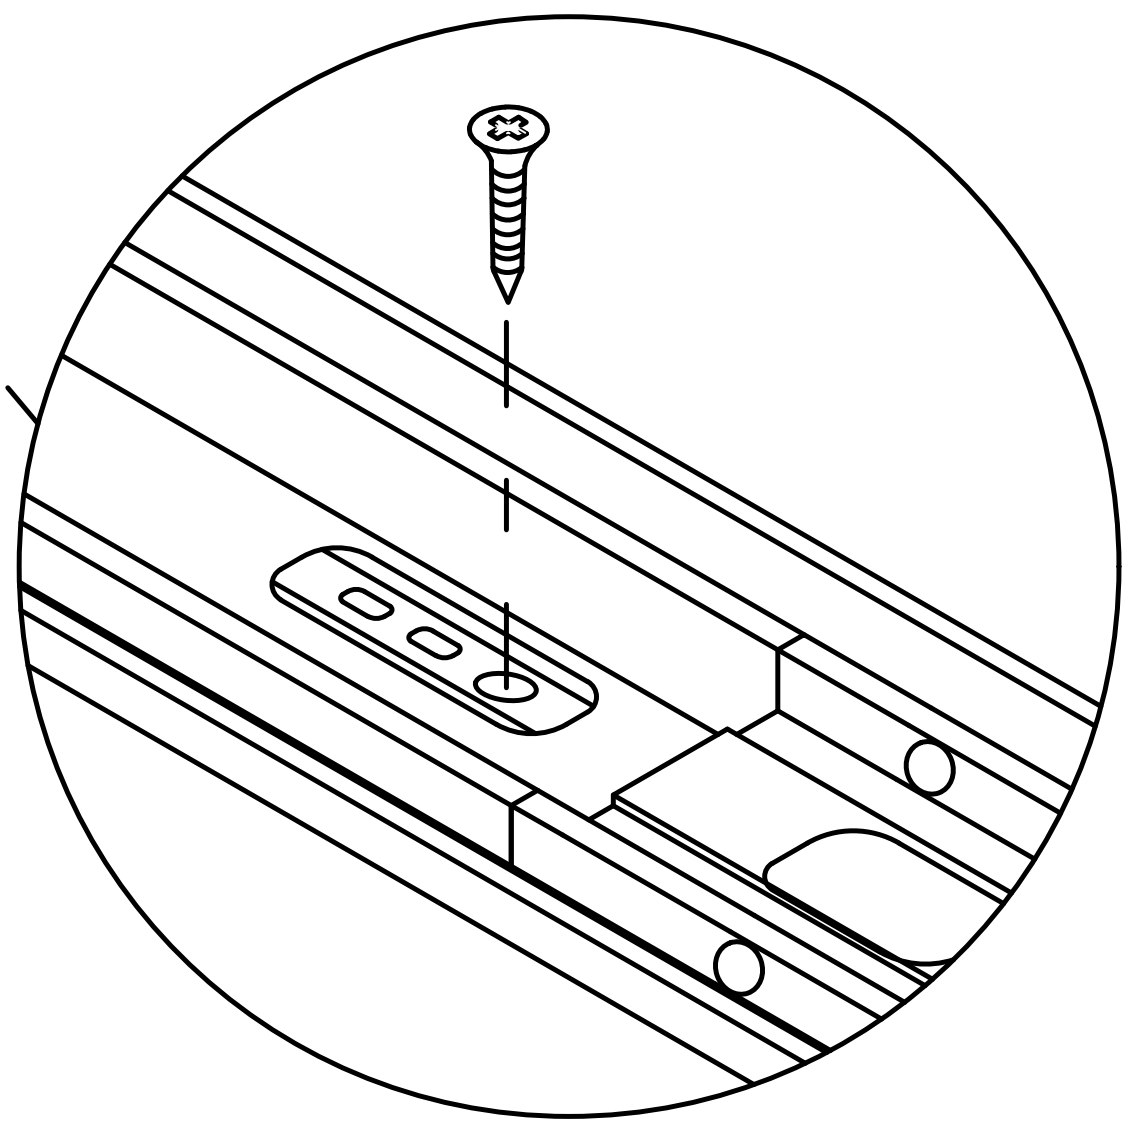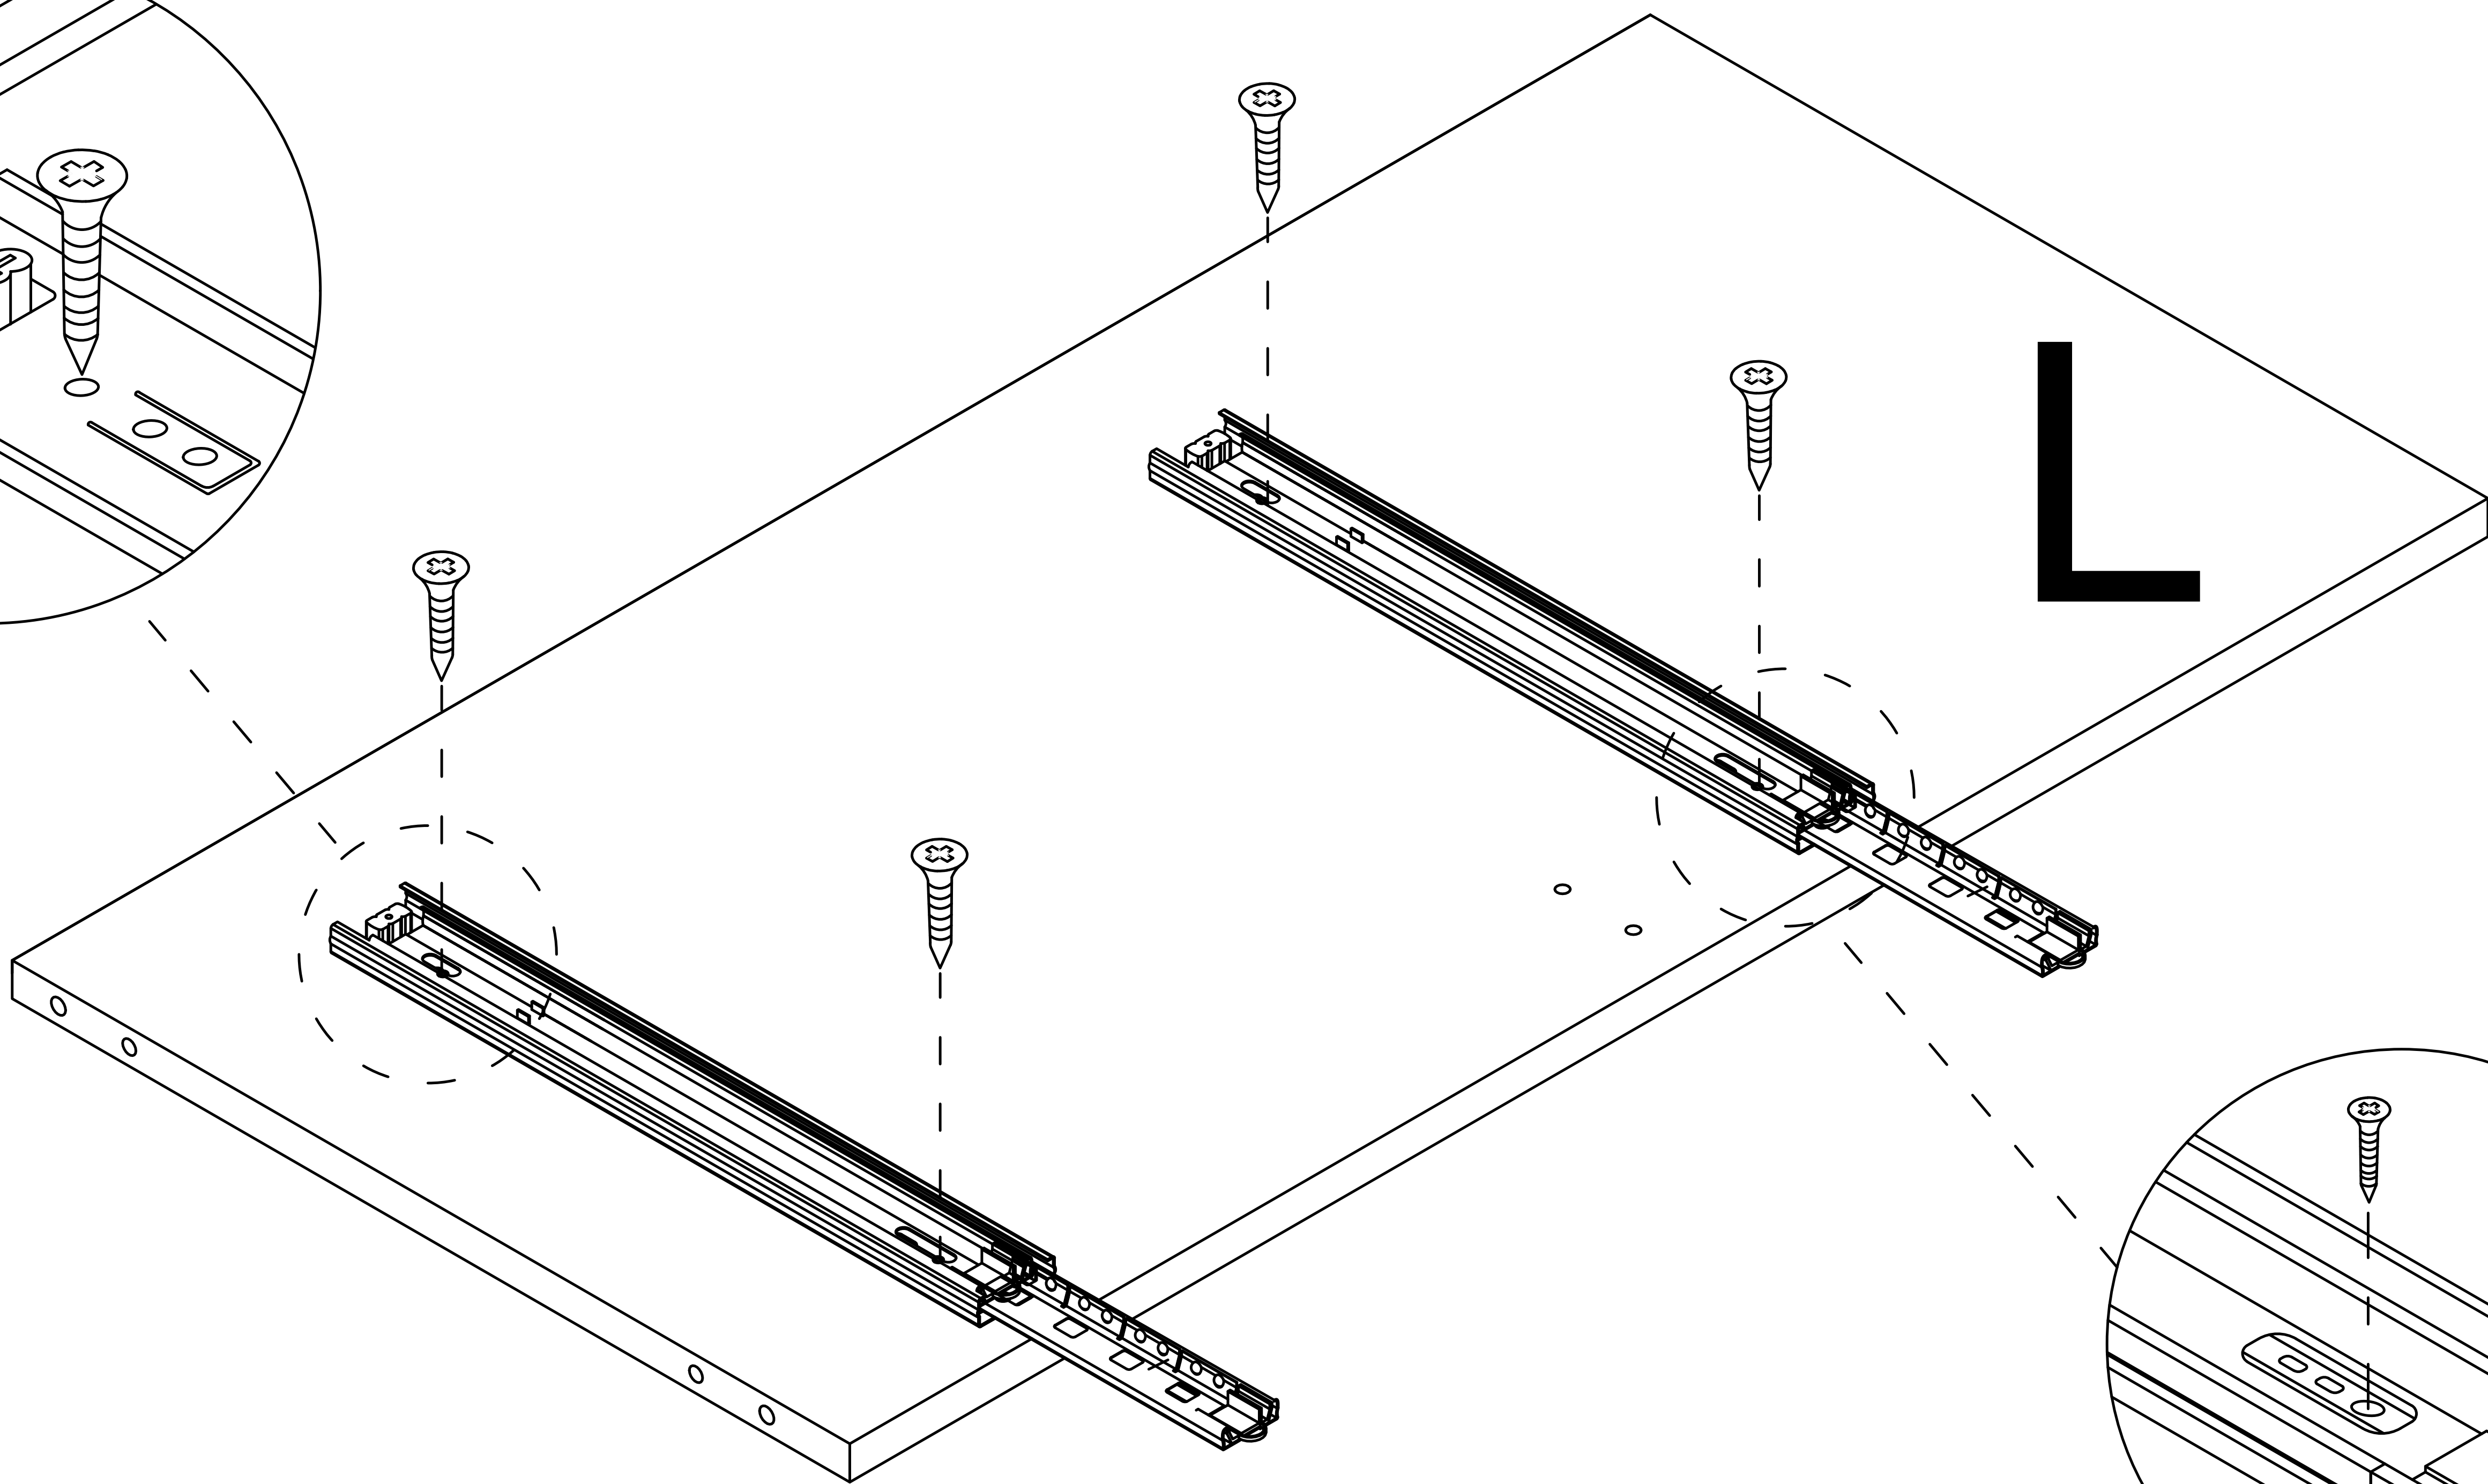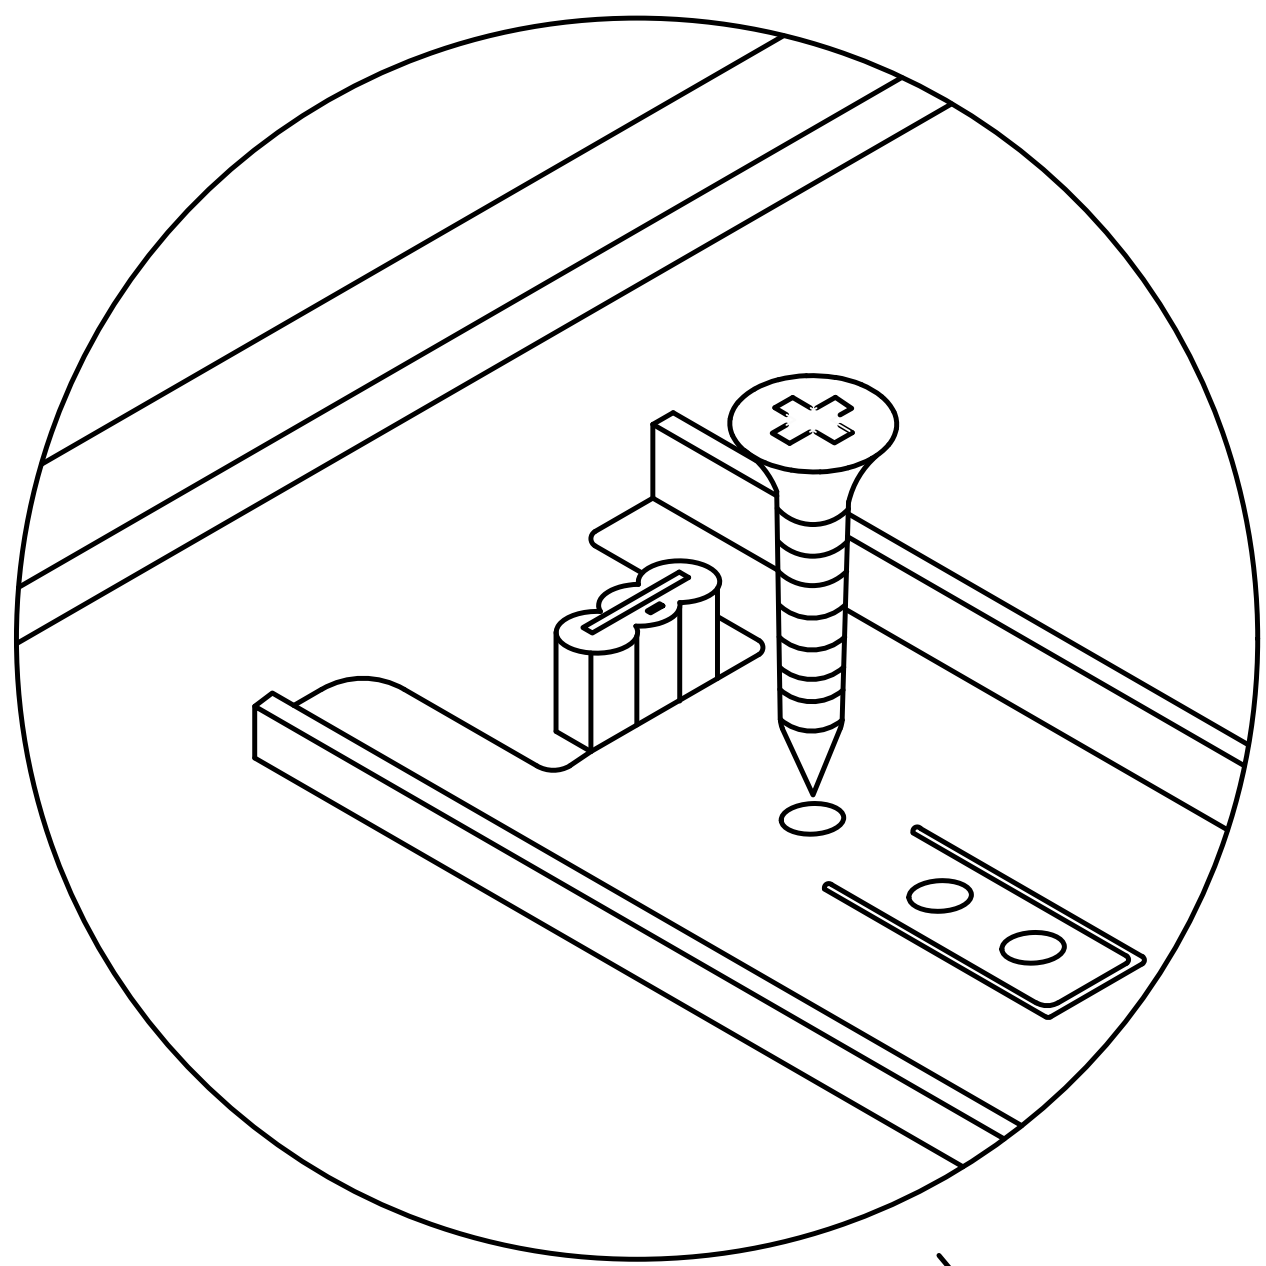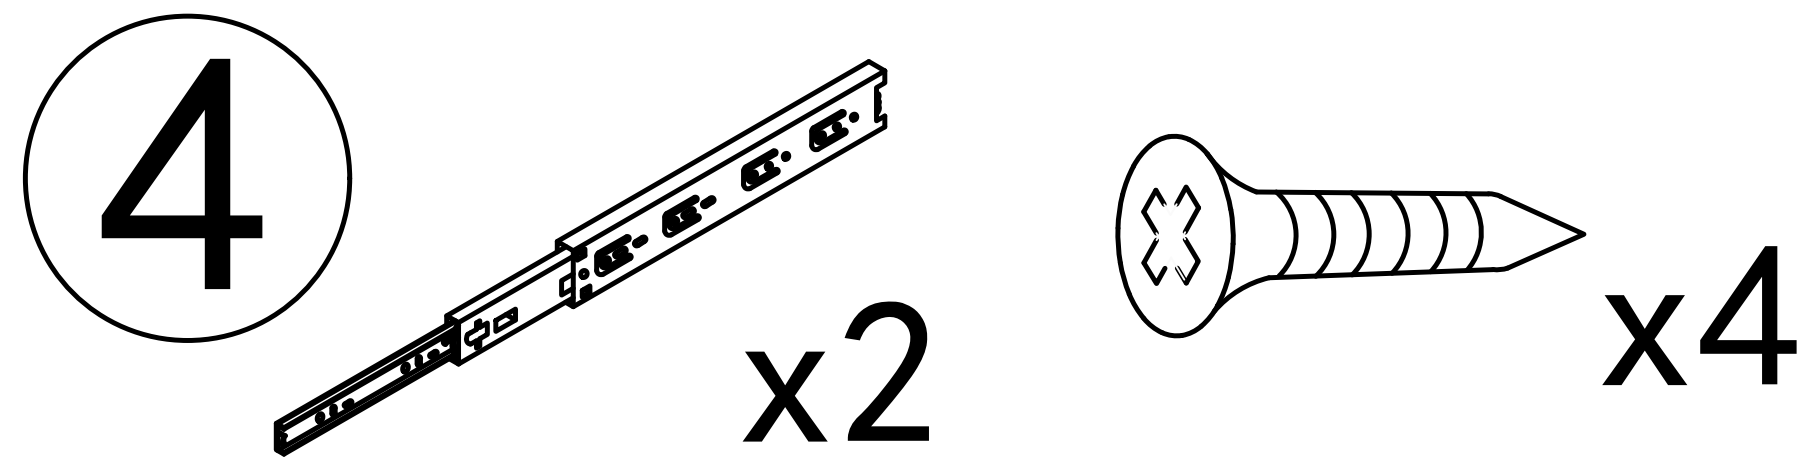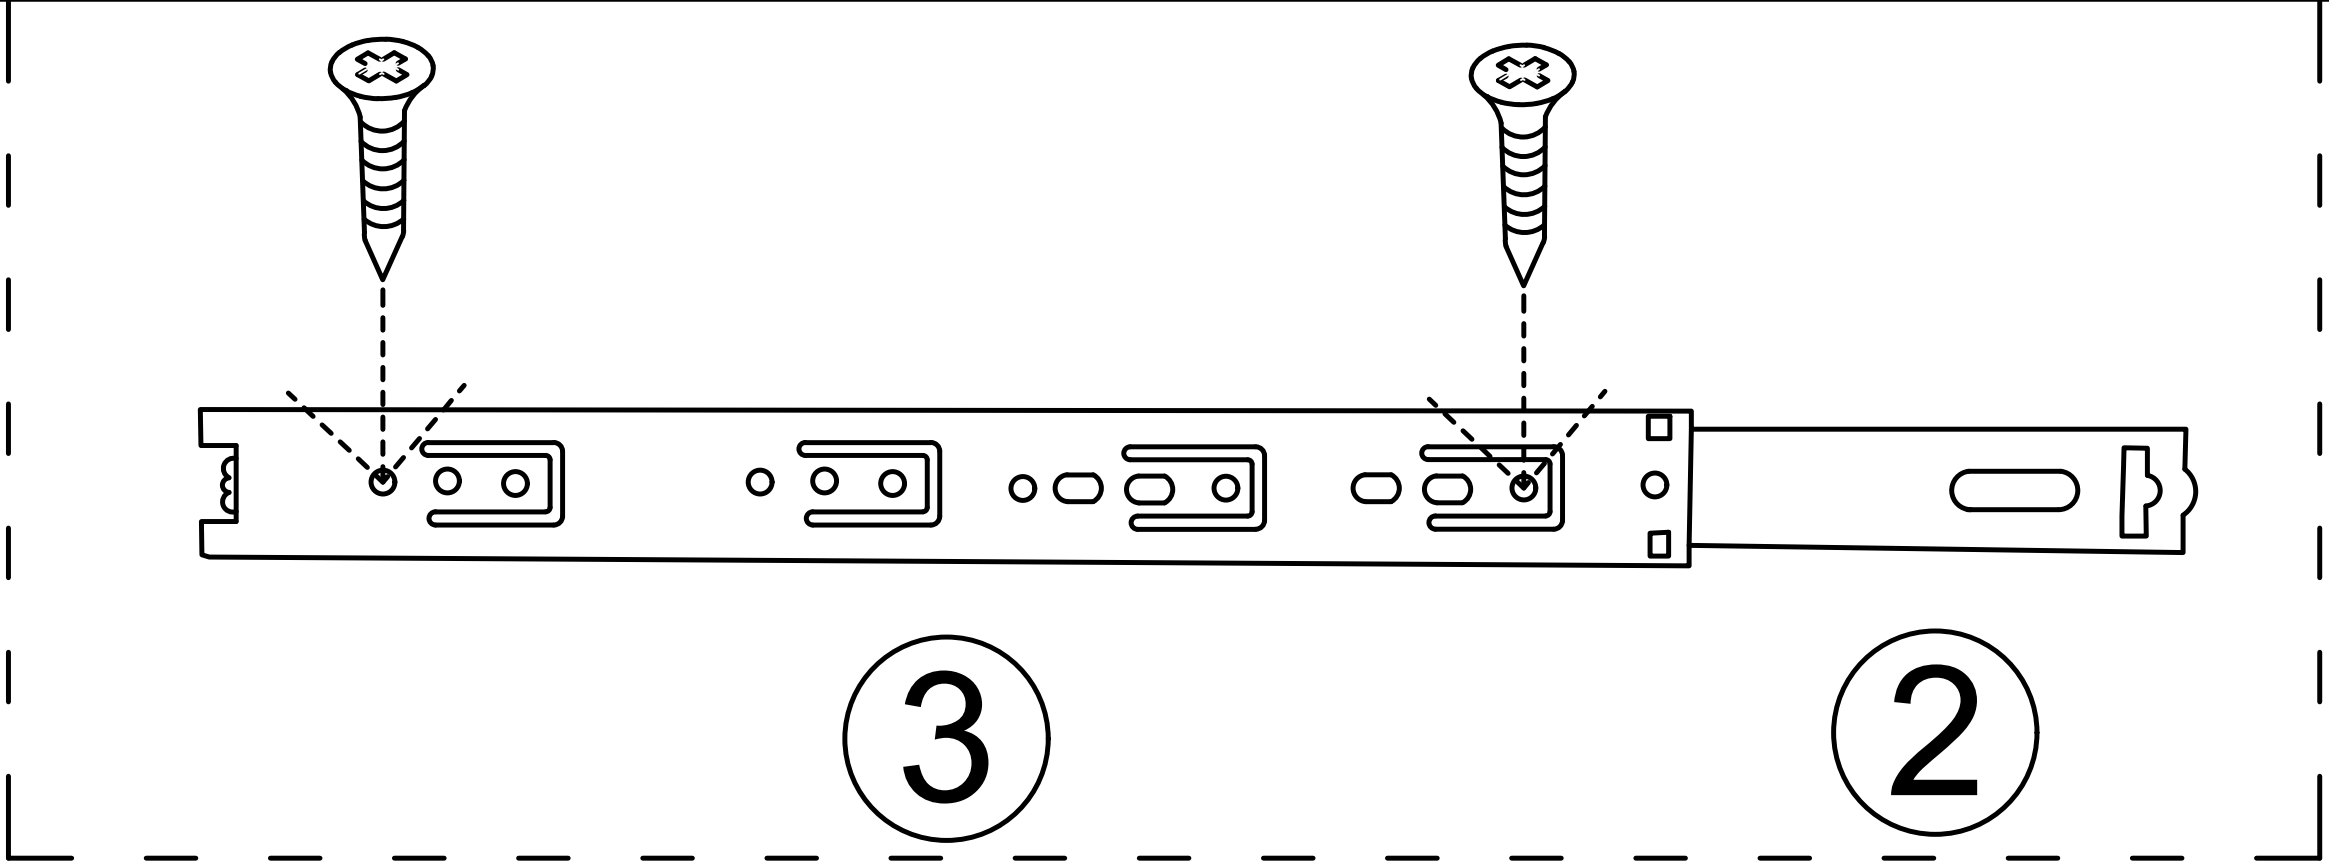



Step 18

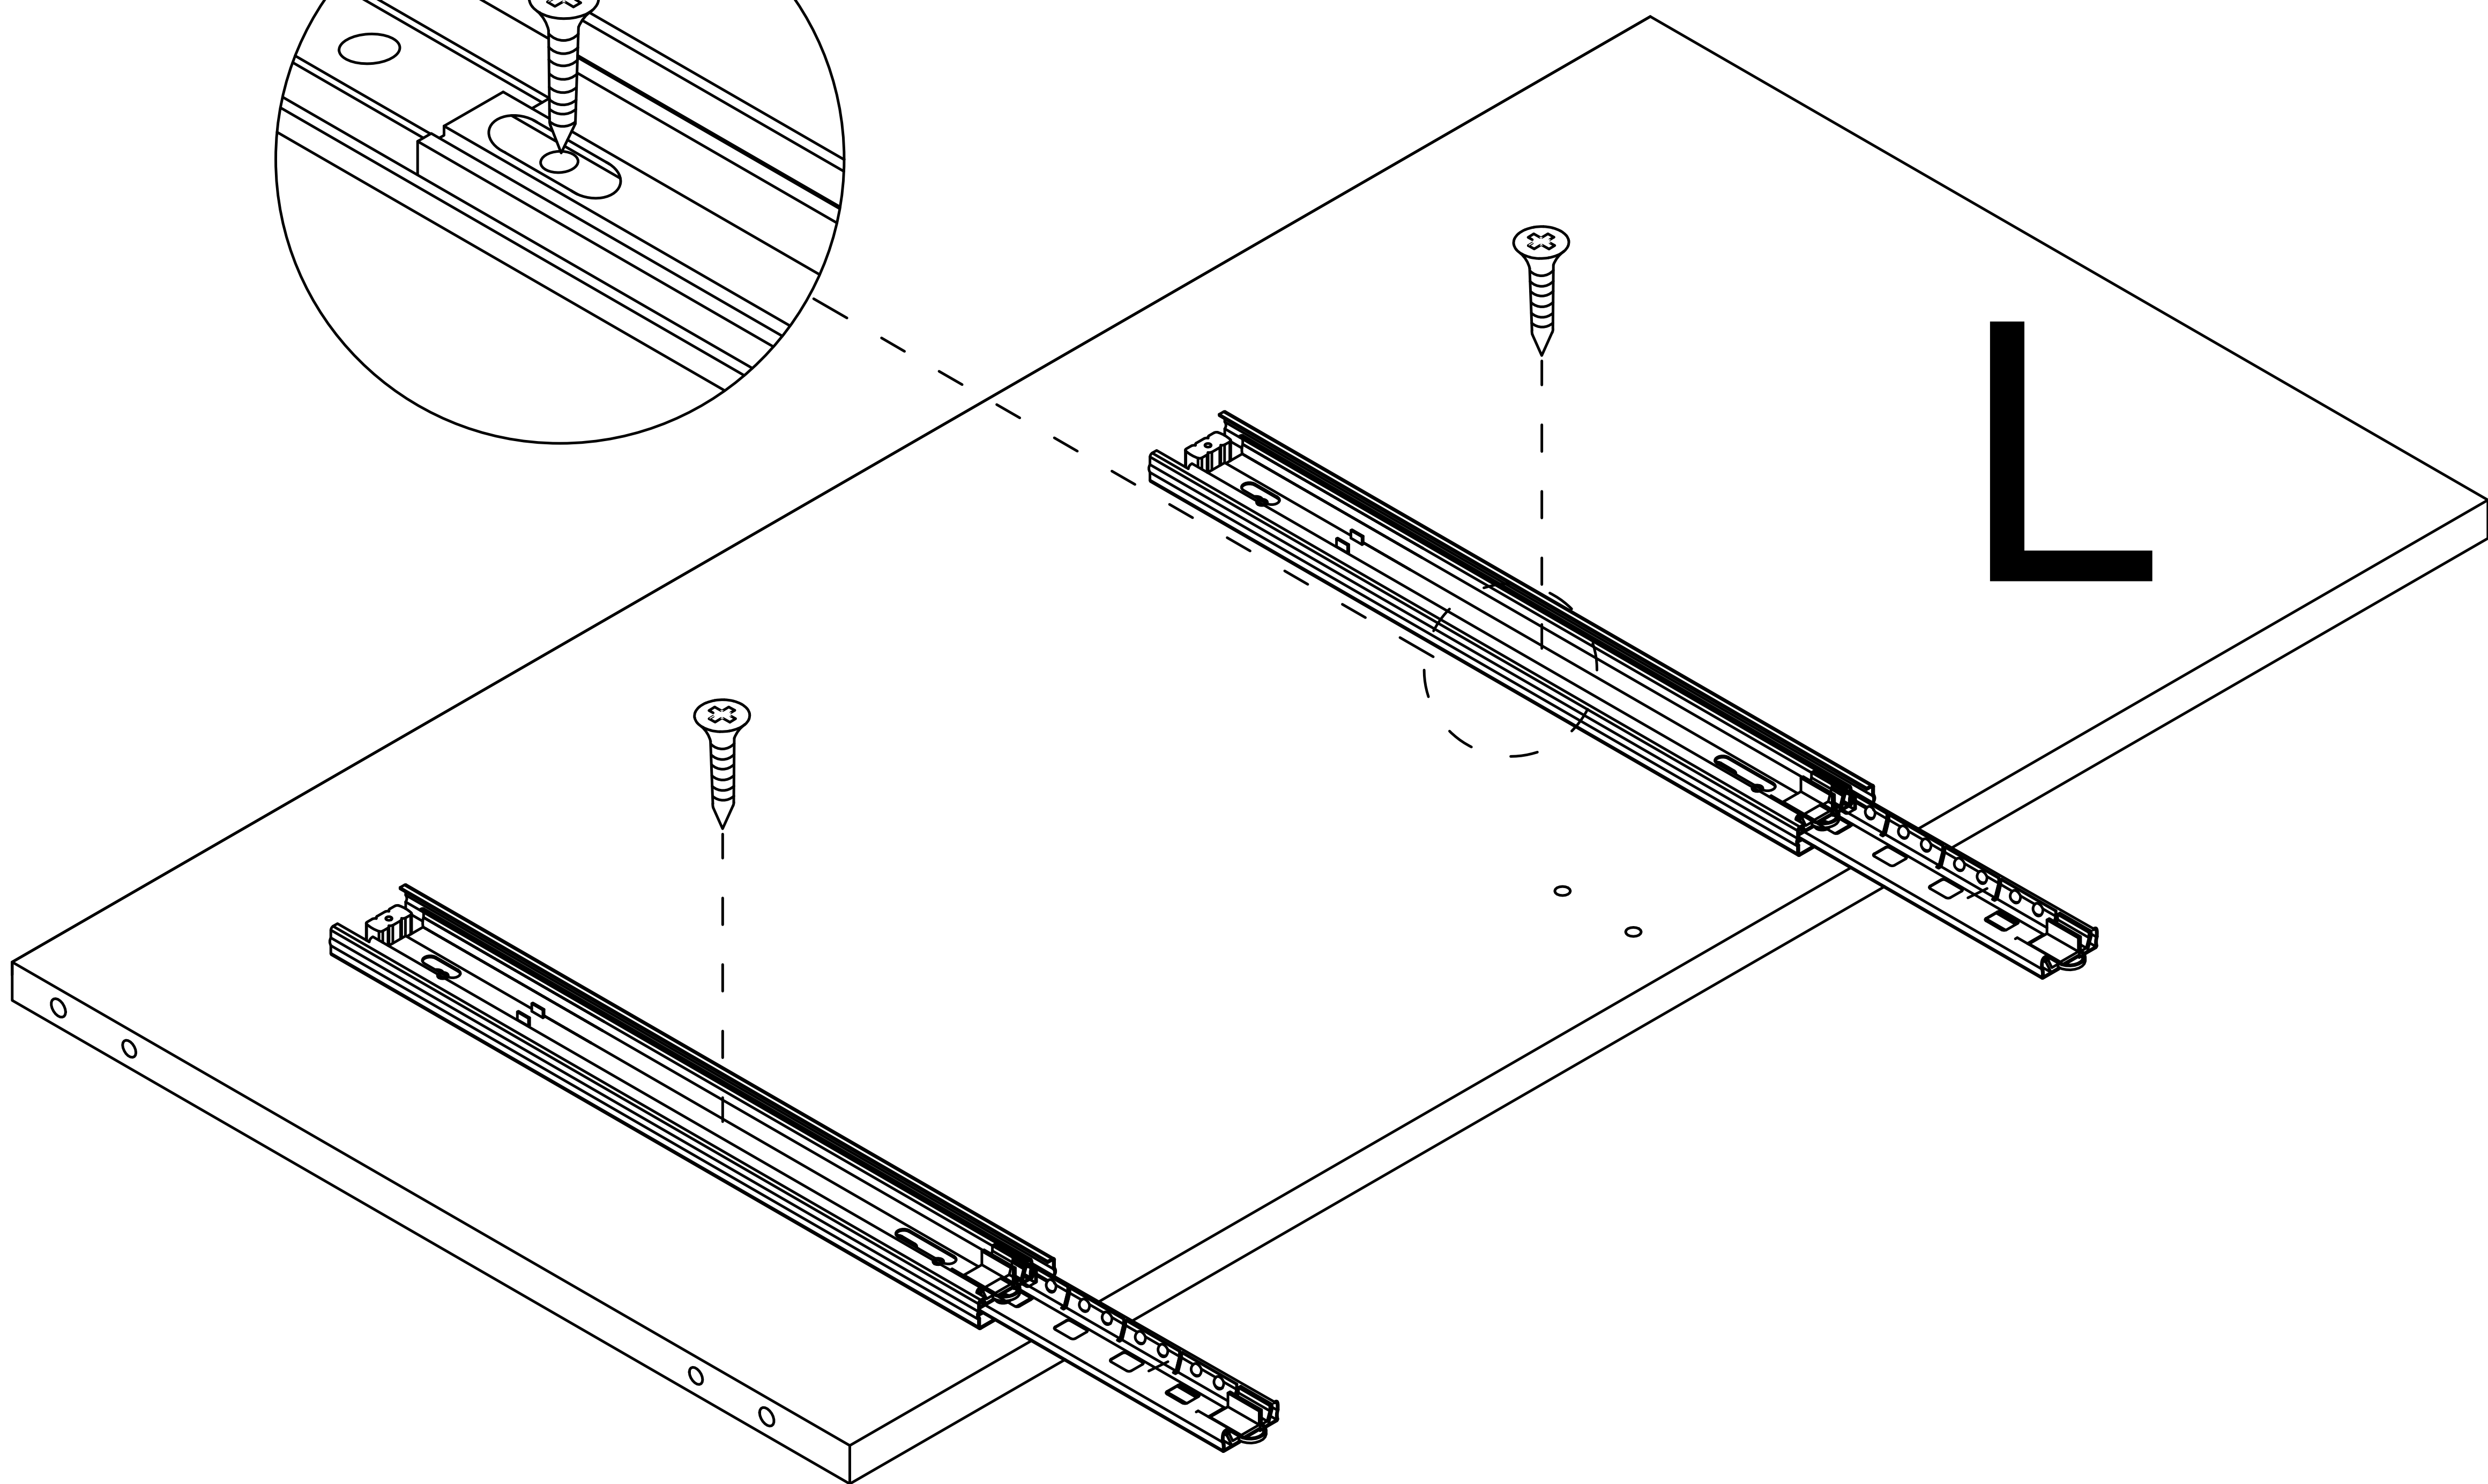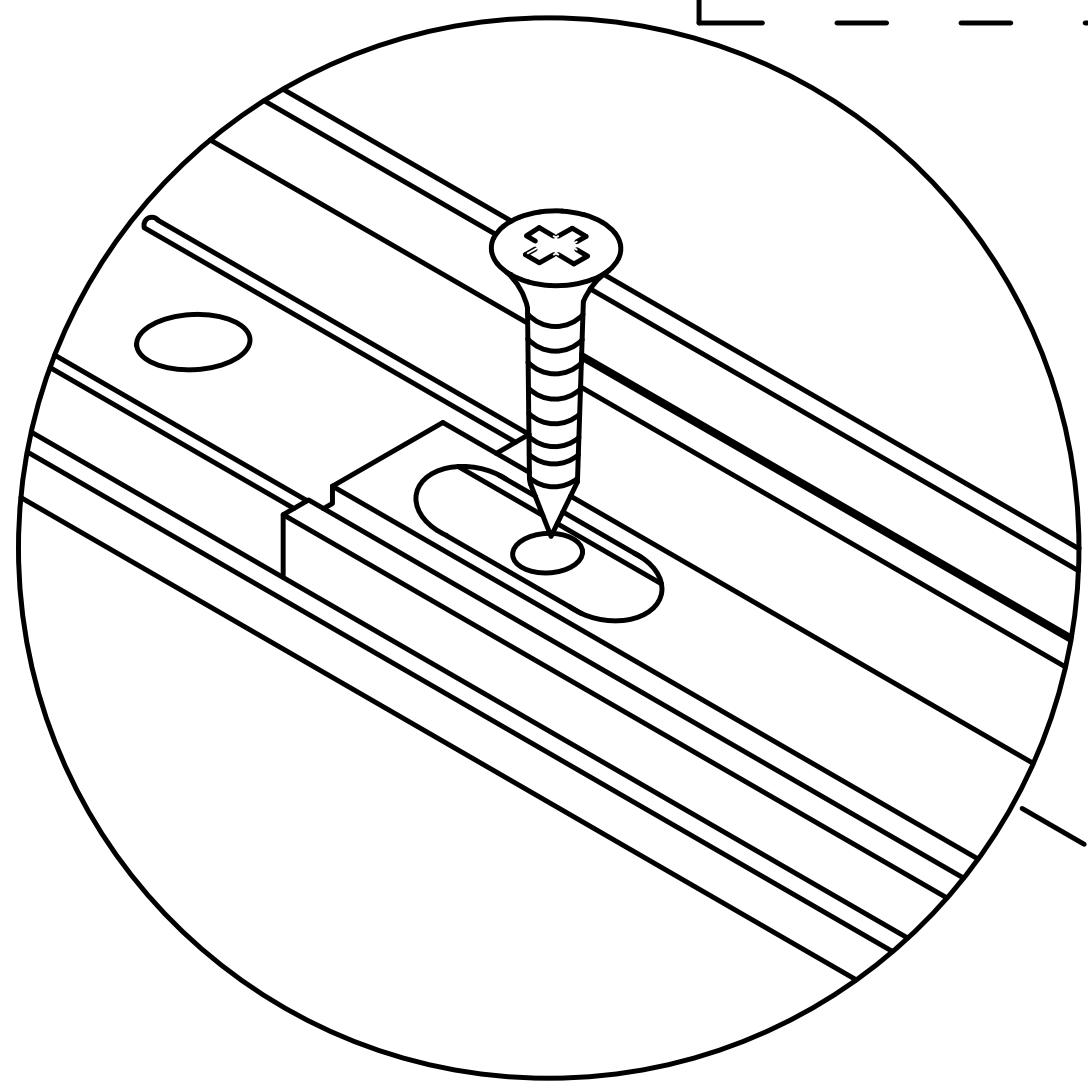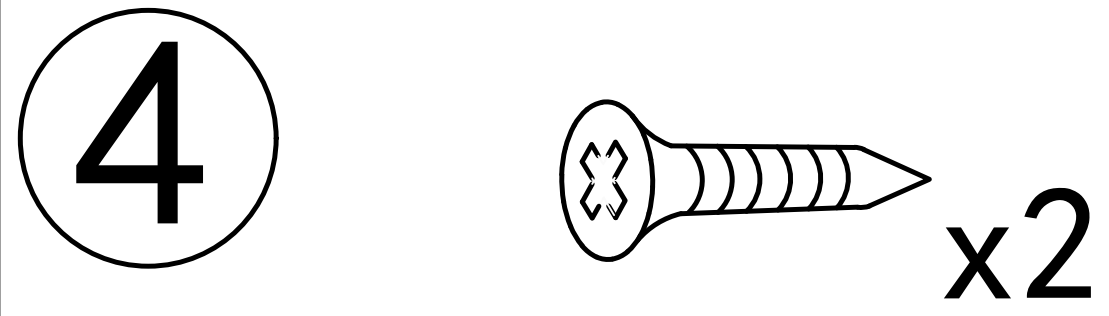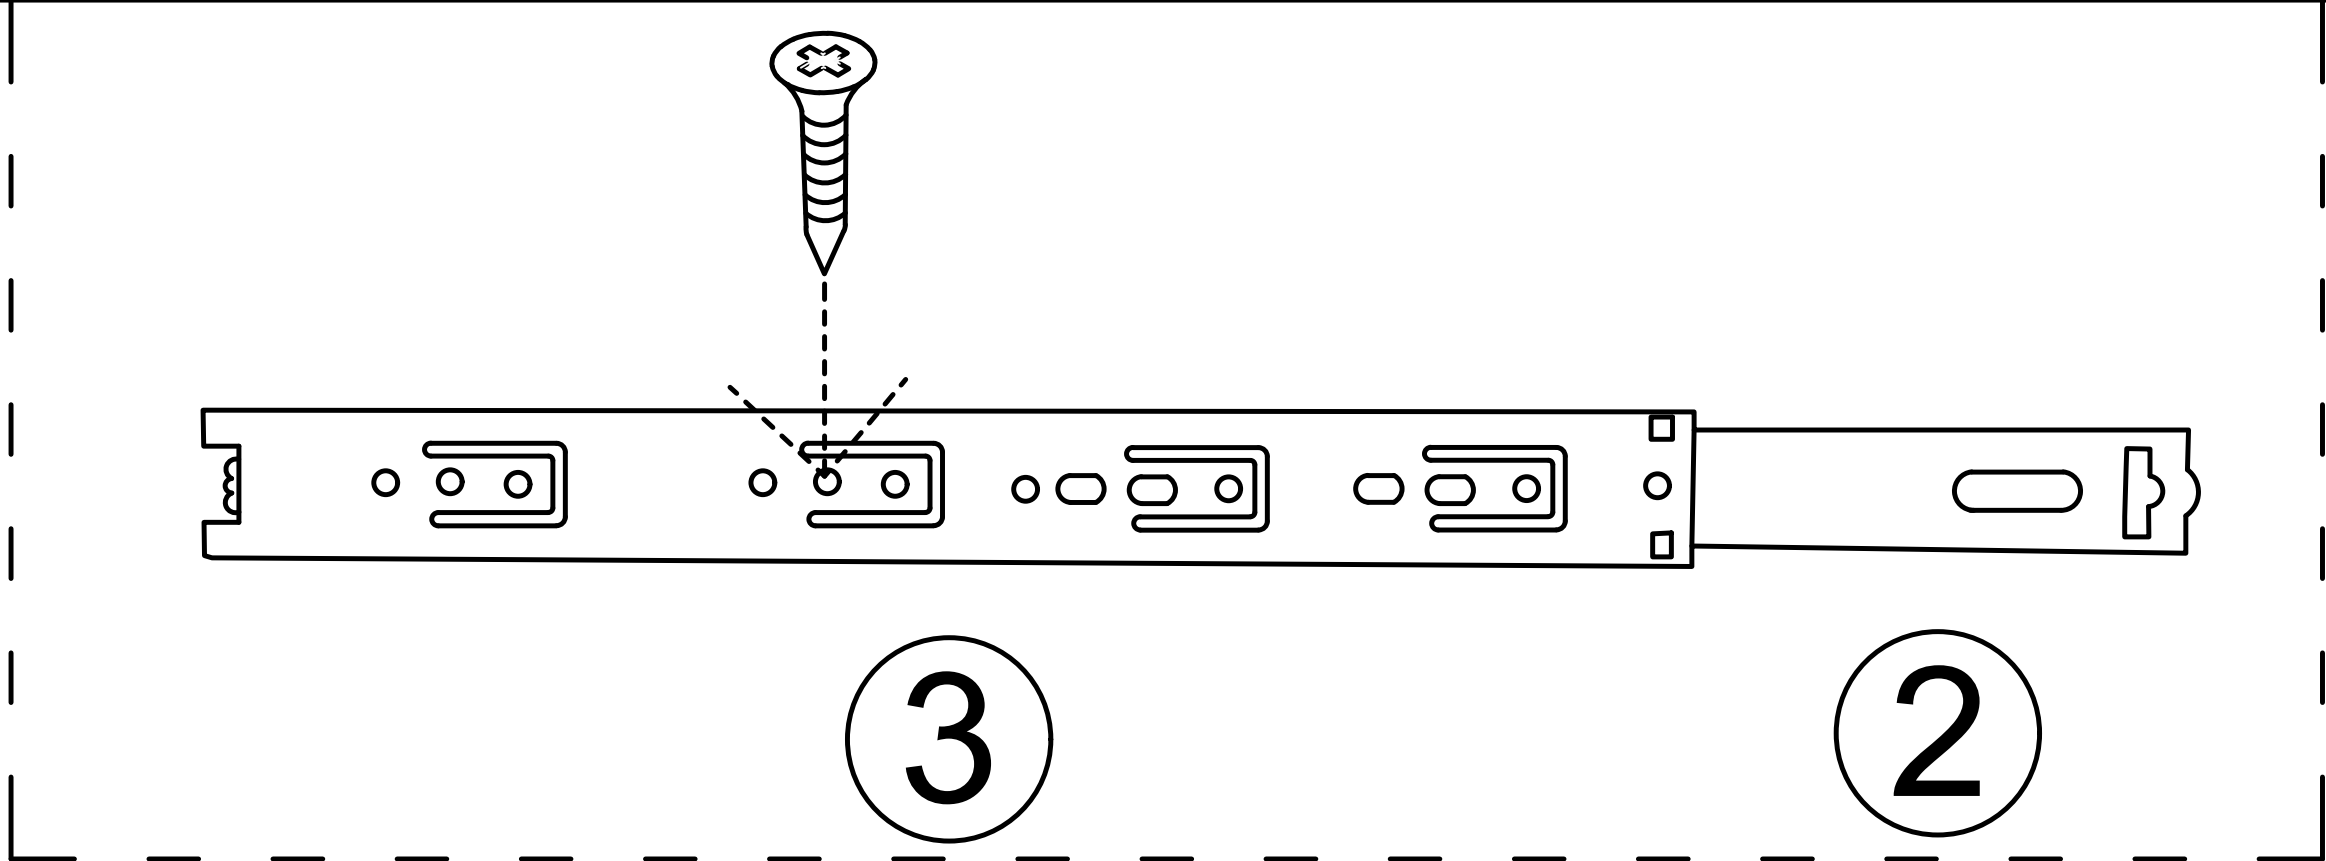

Step 19


1

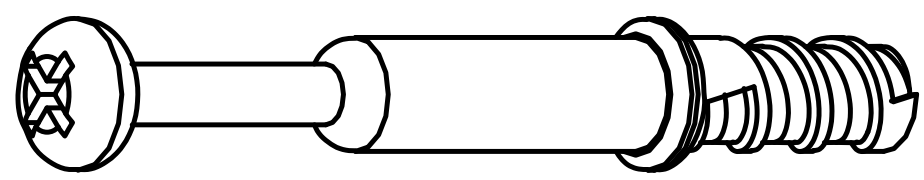
x2

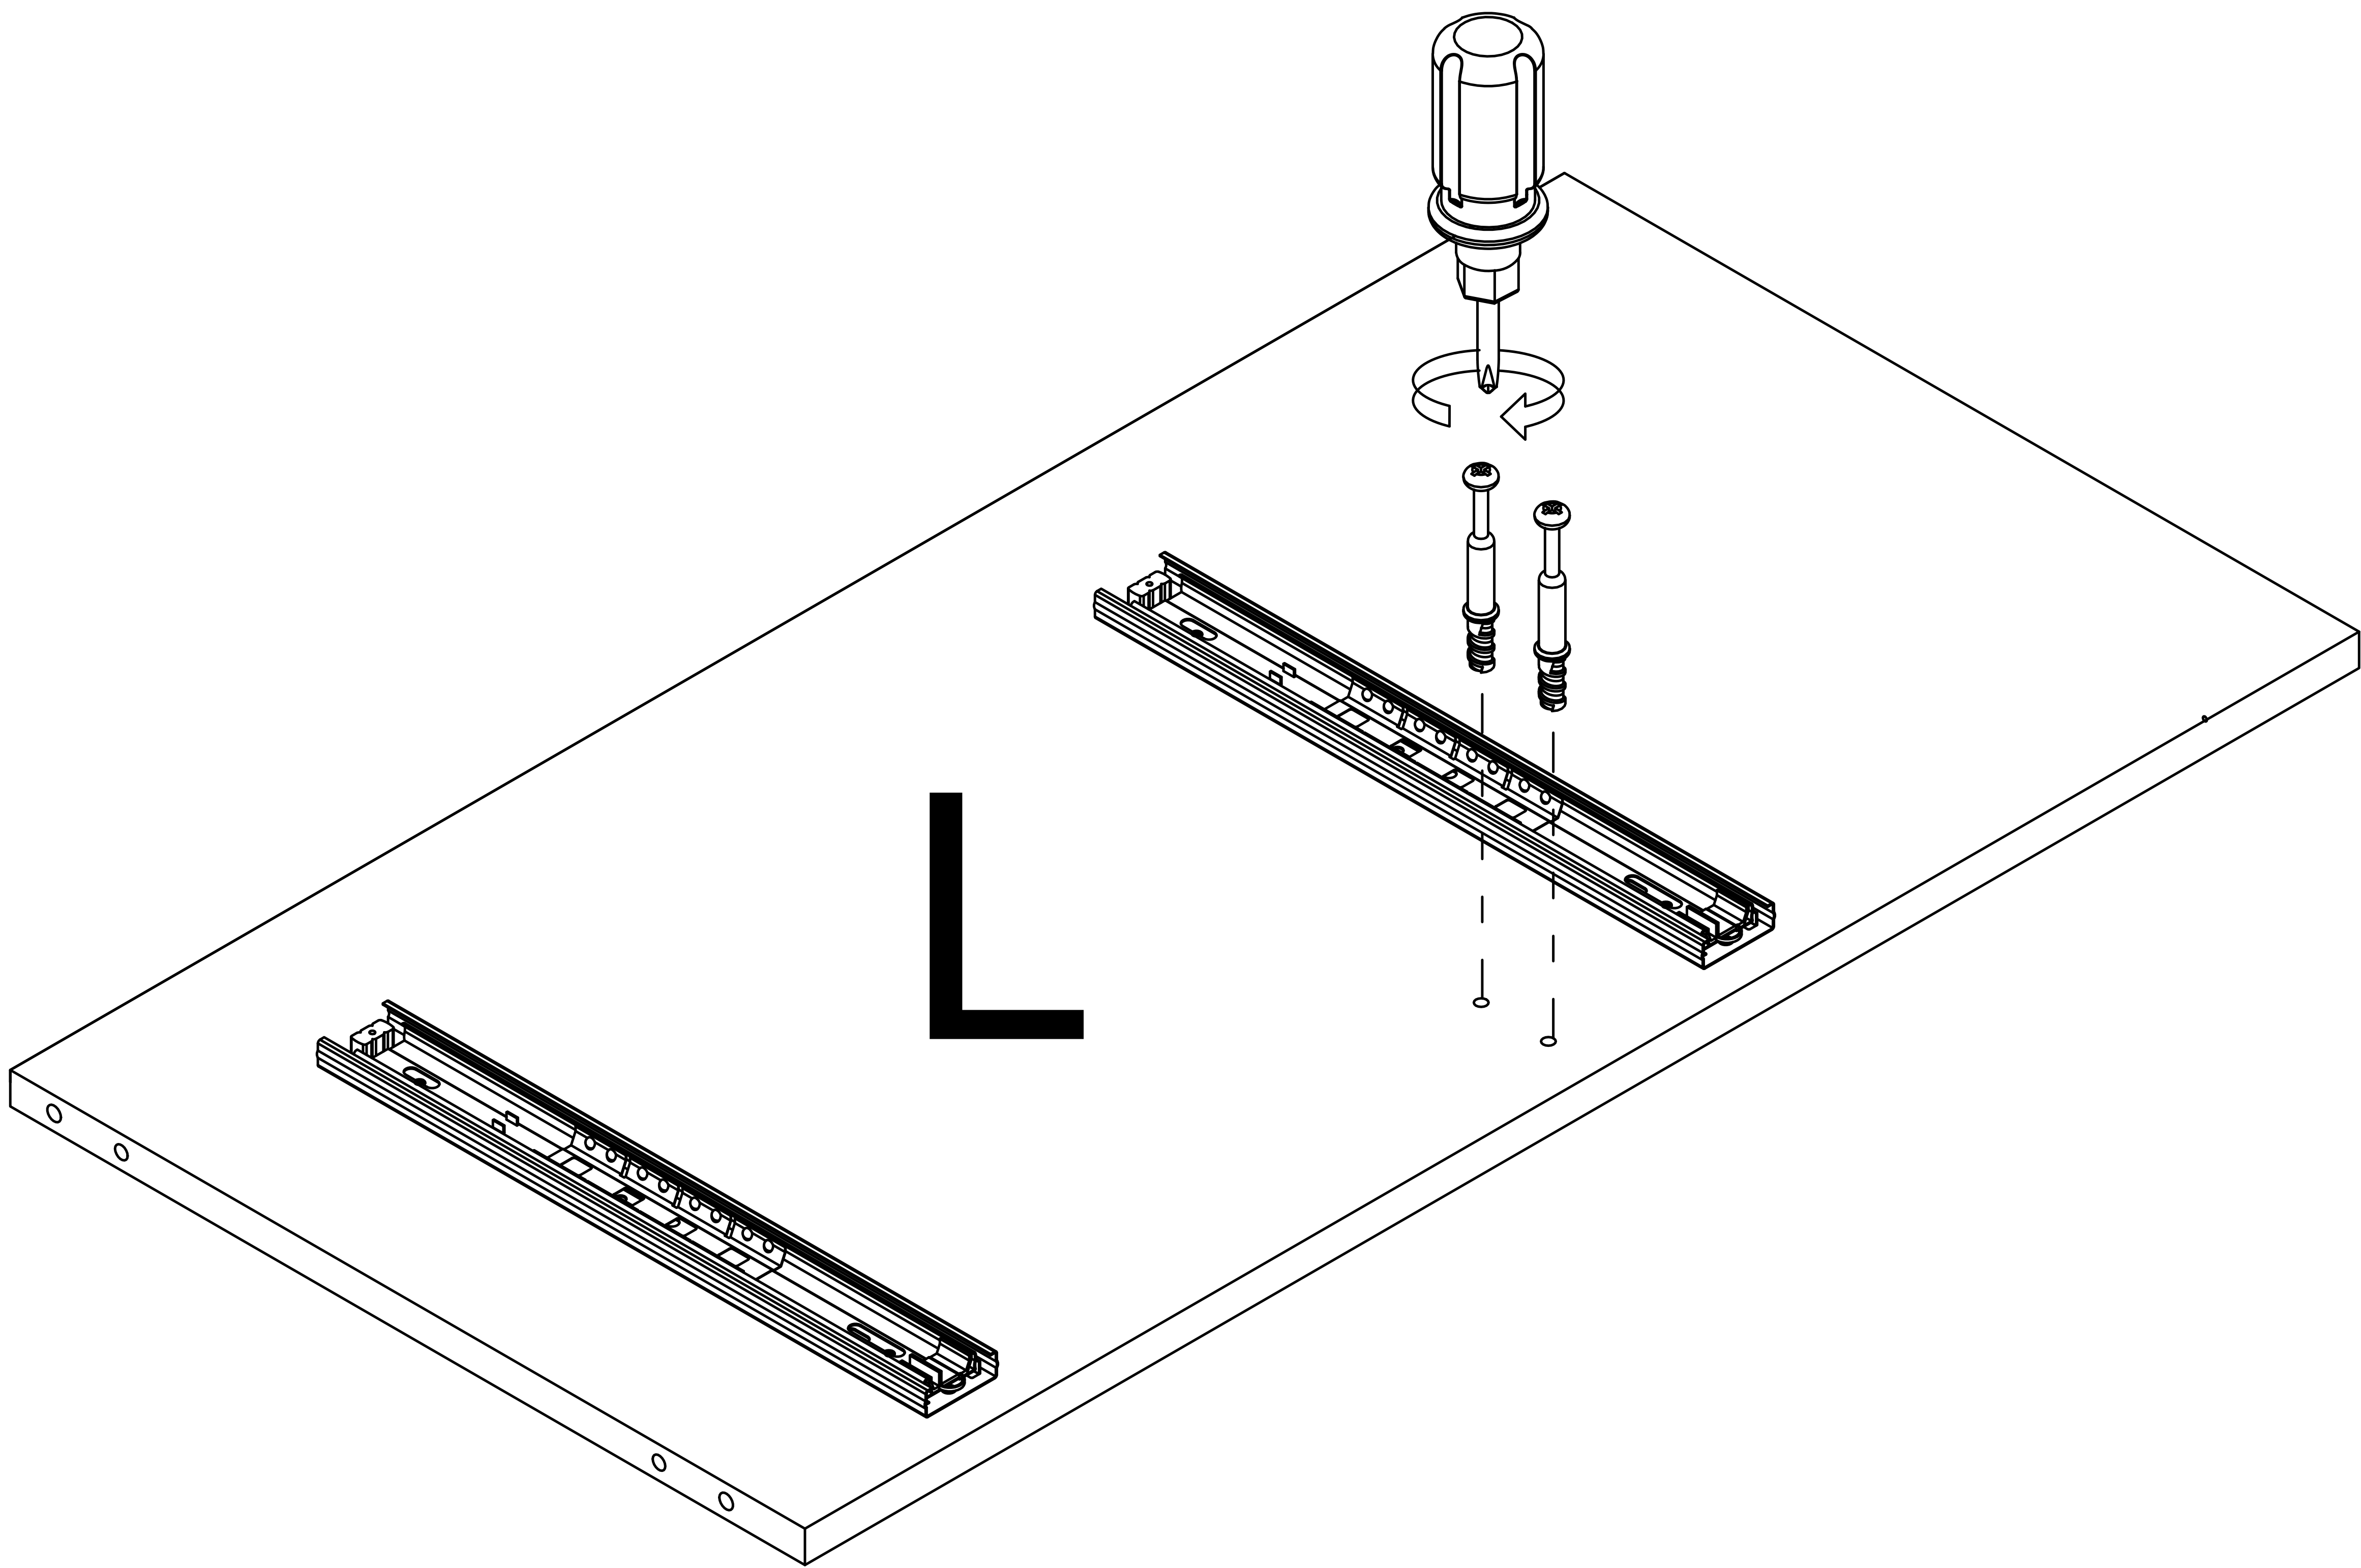

Step 20


2

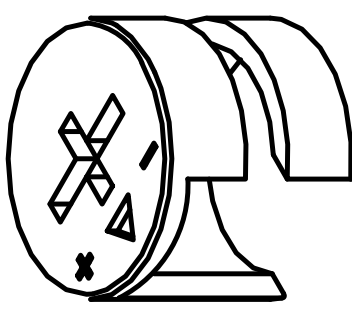x2

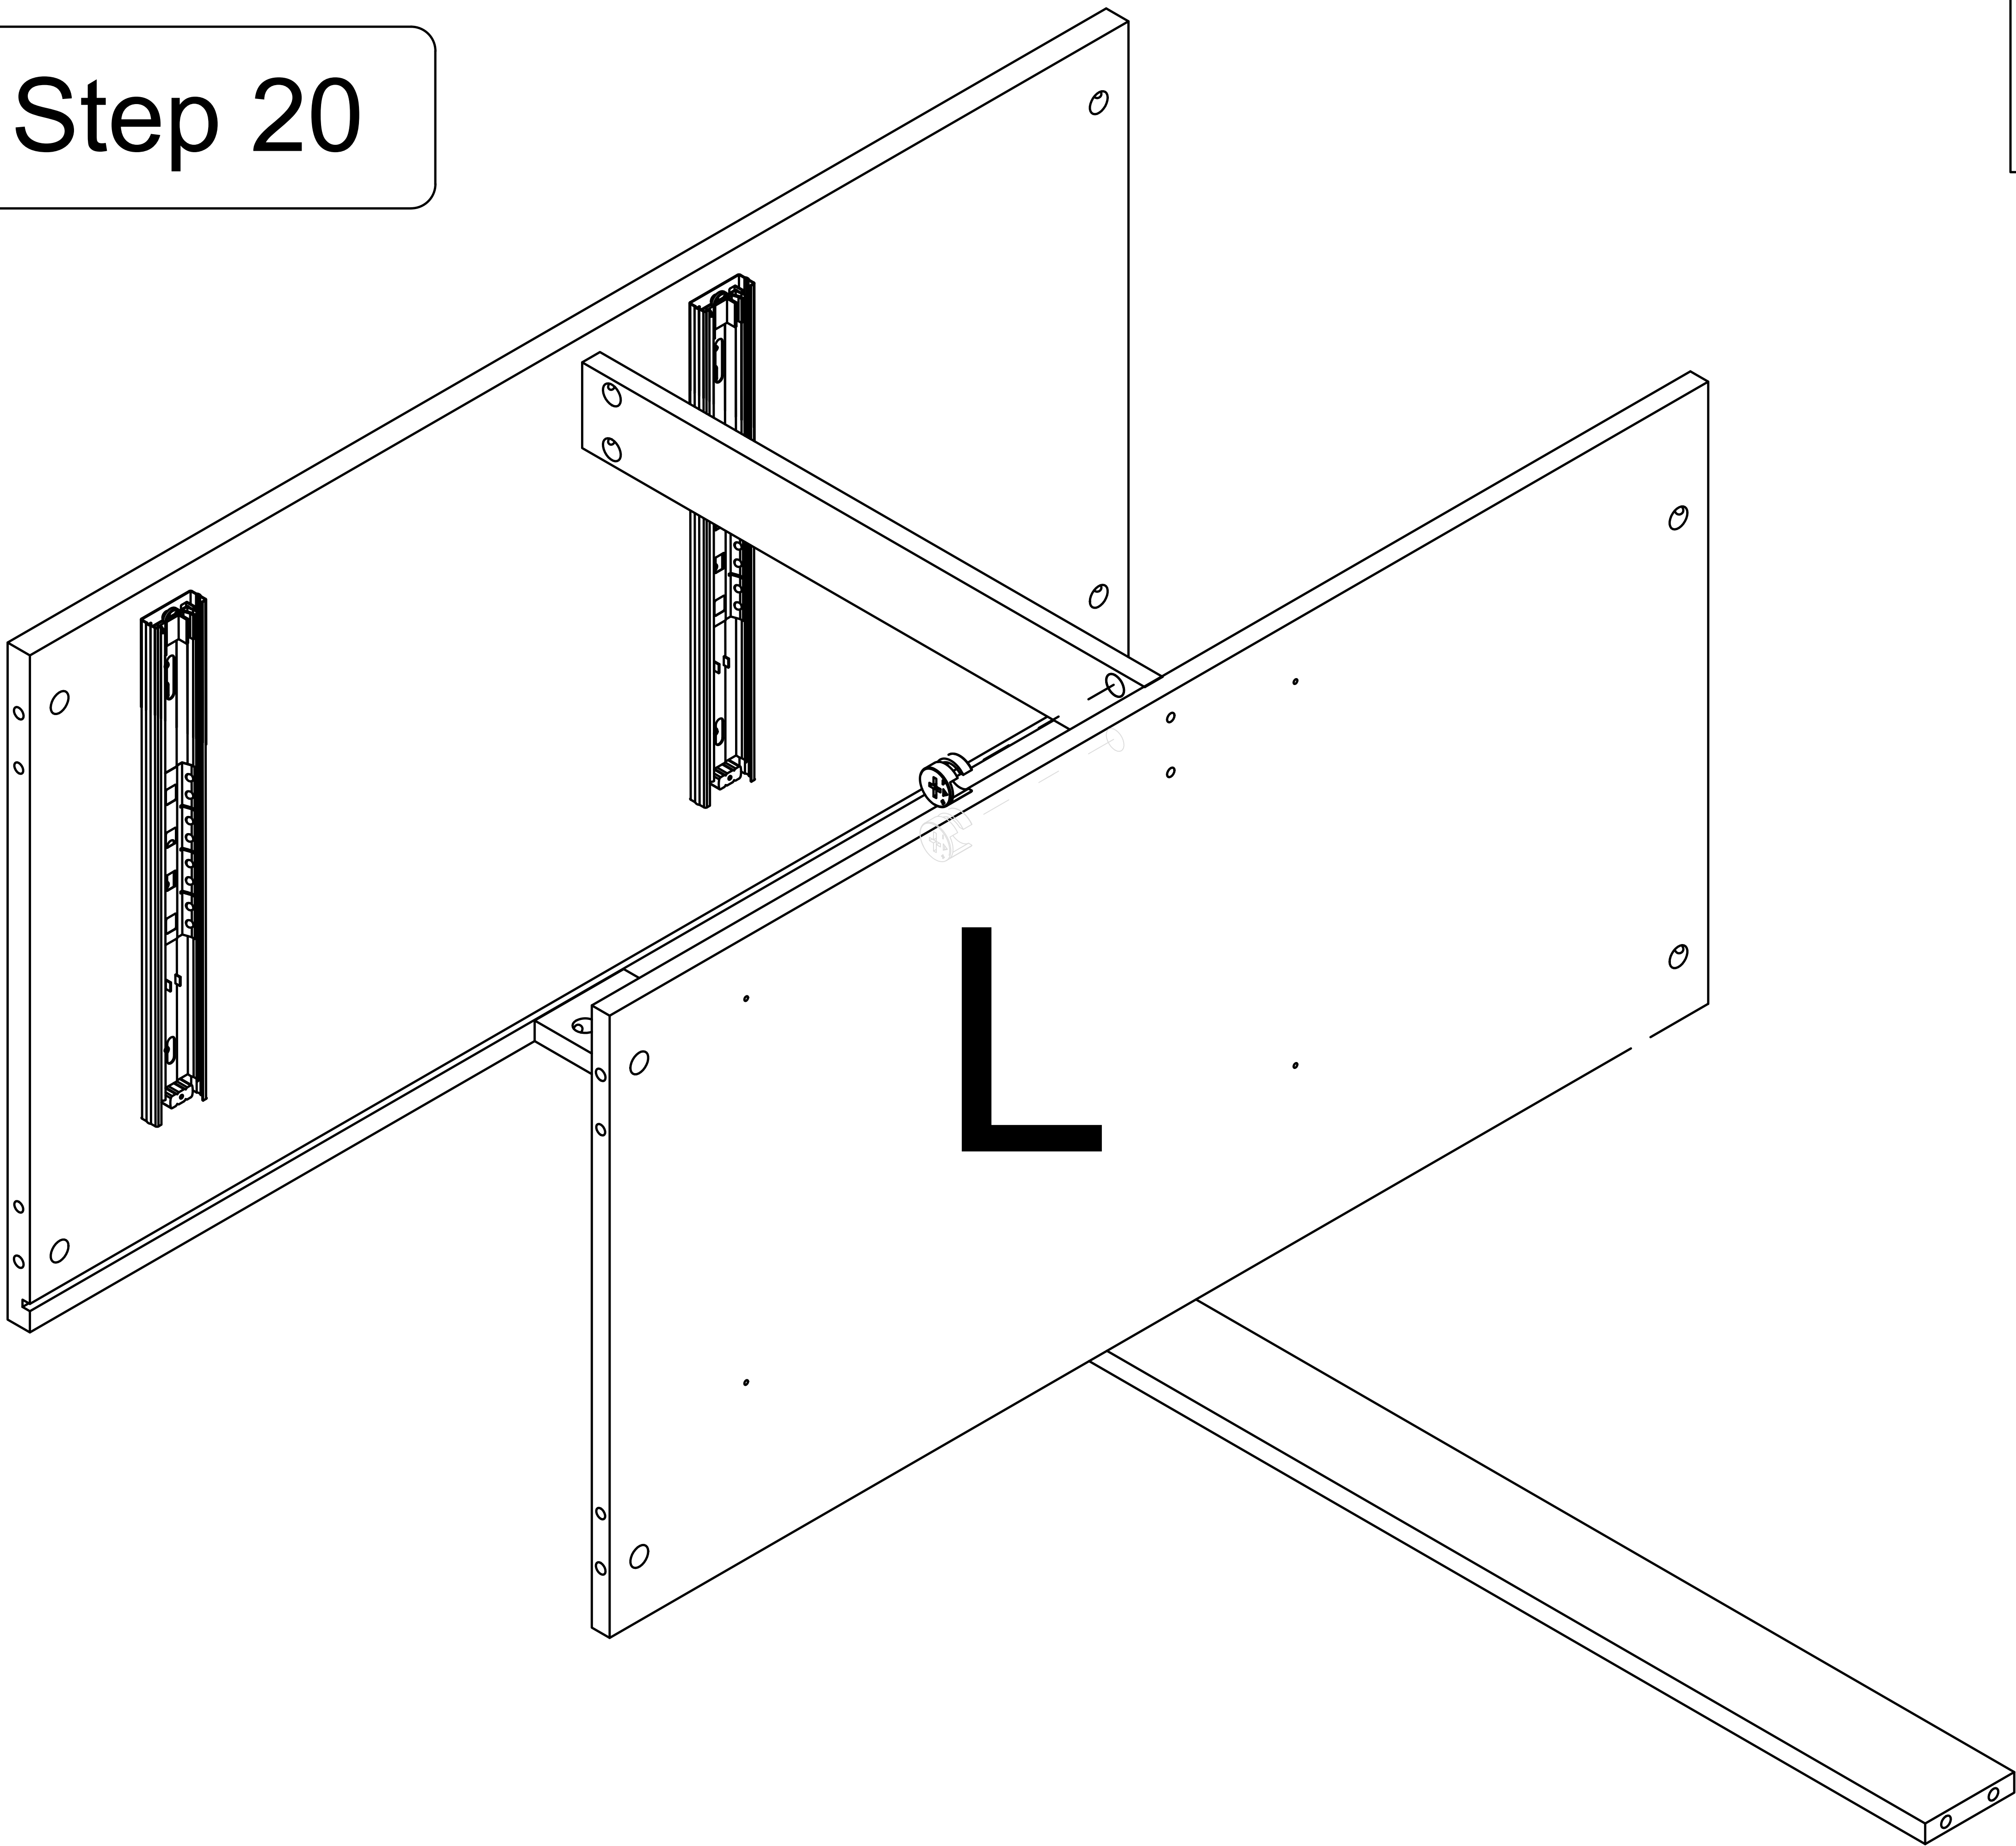


Step 21

1

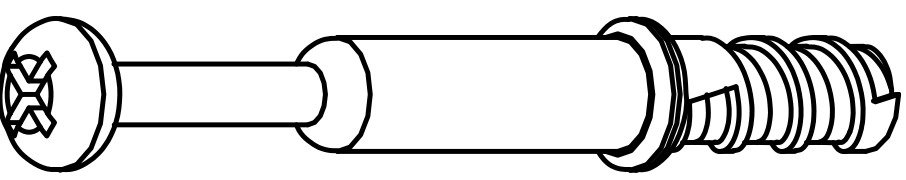


x2

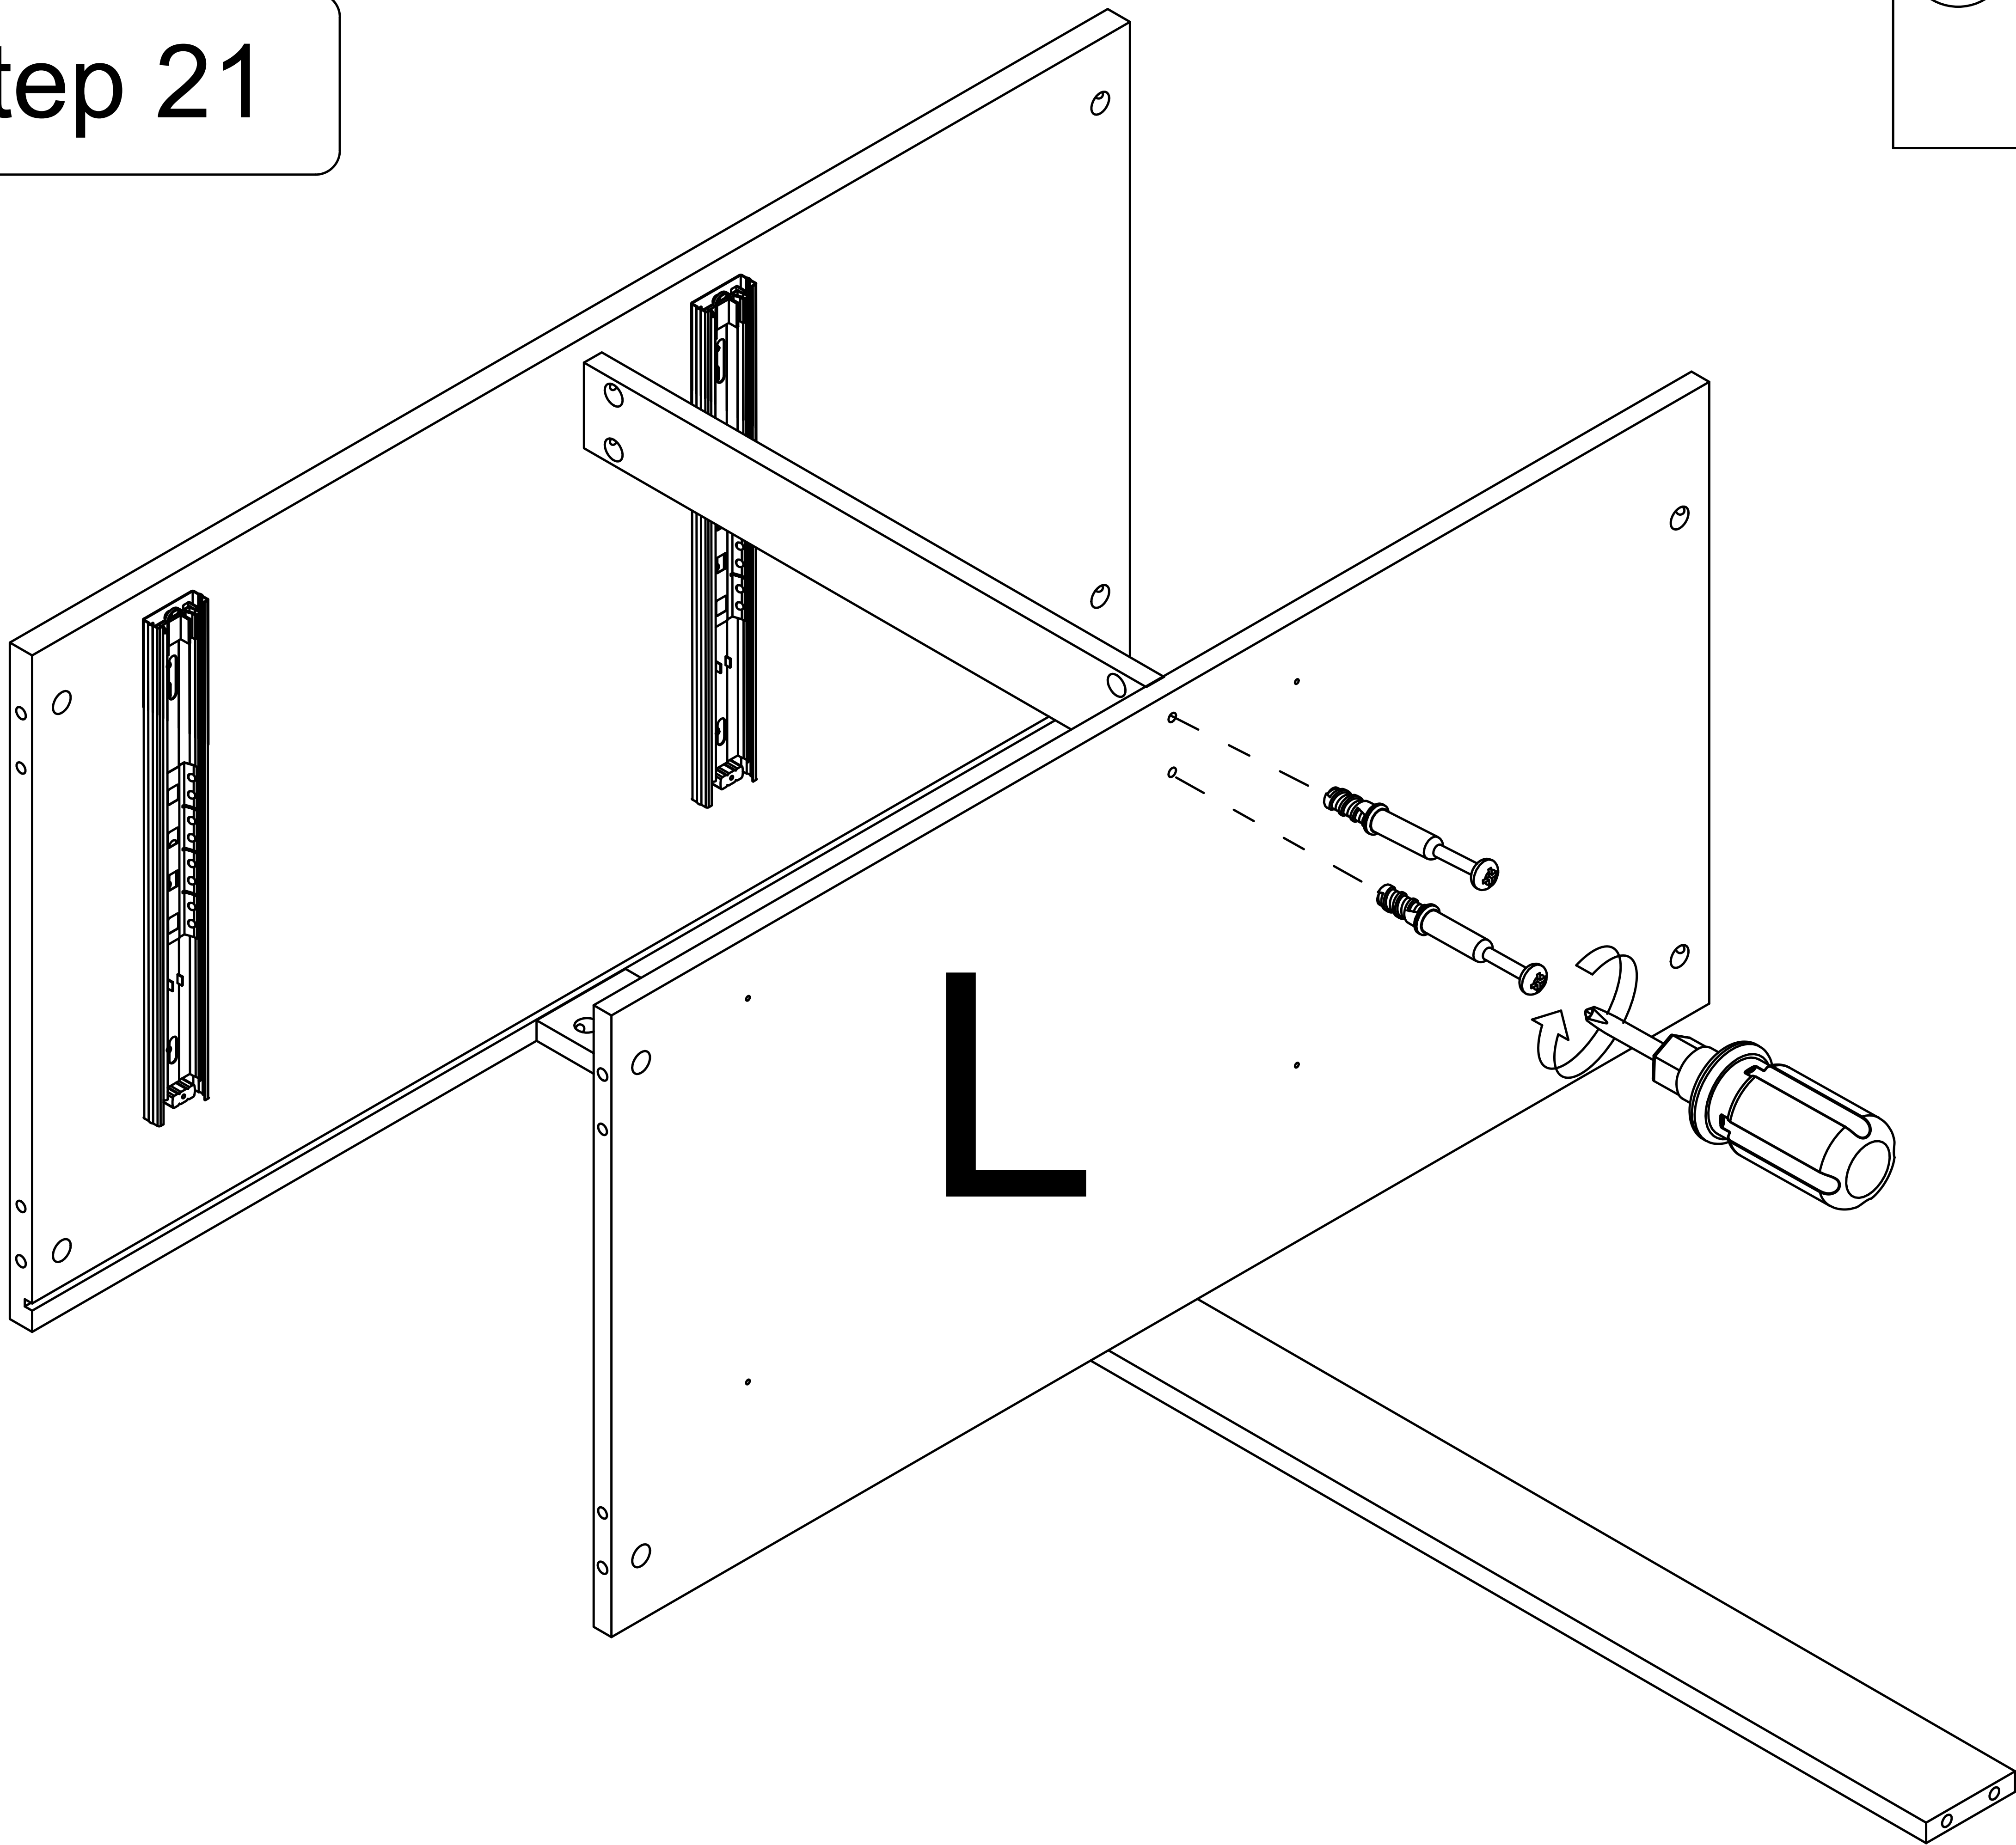


Step 22






2

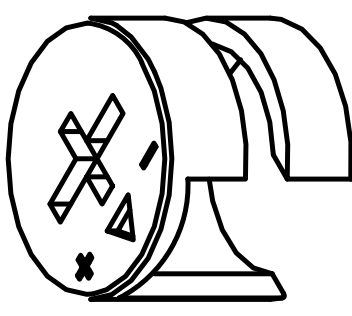





x2

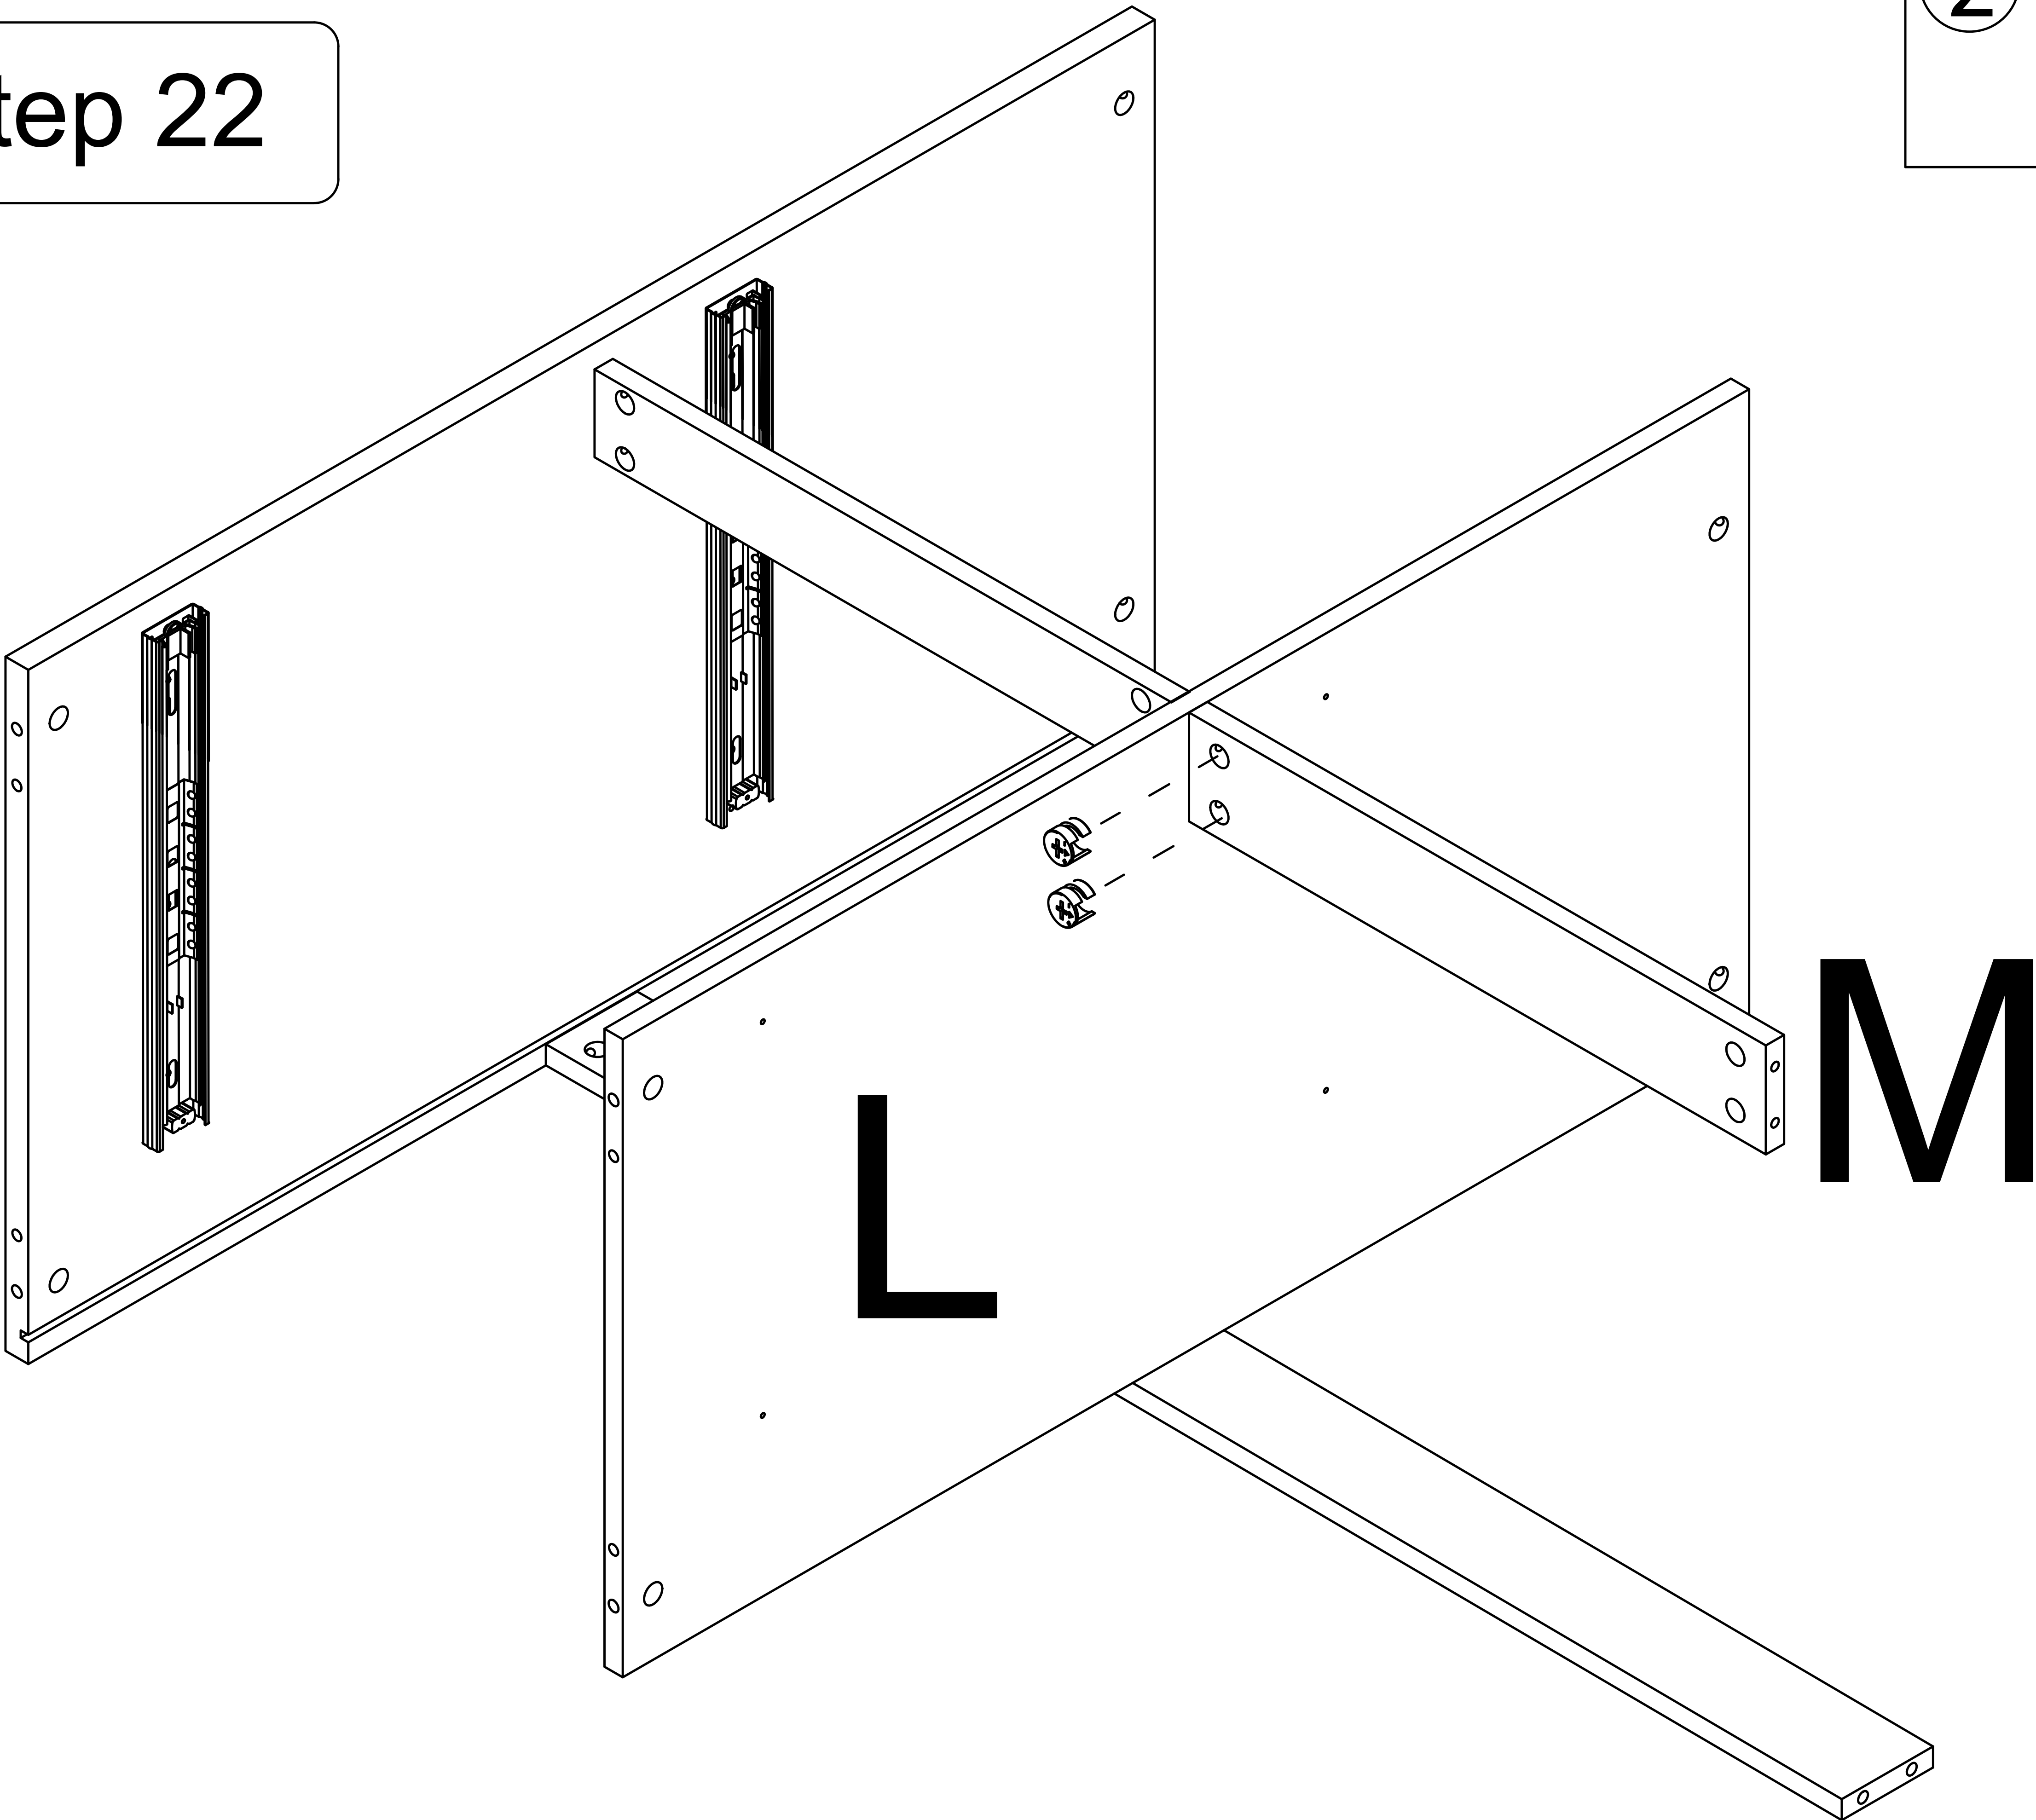



Step 23

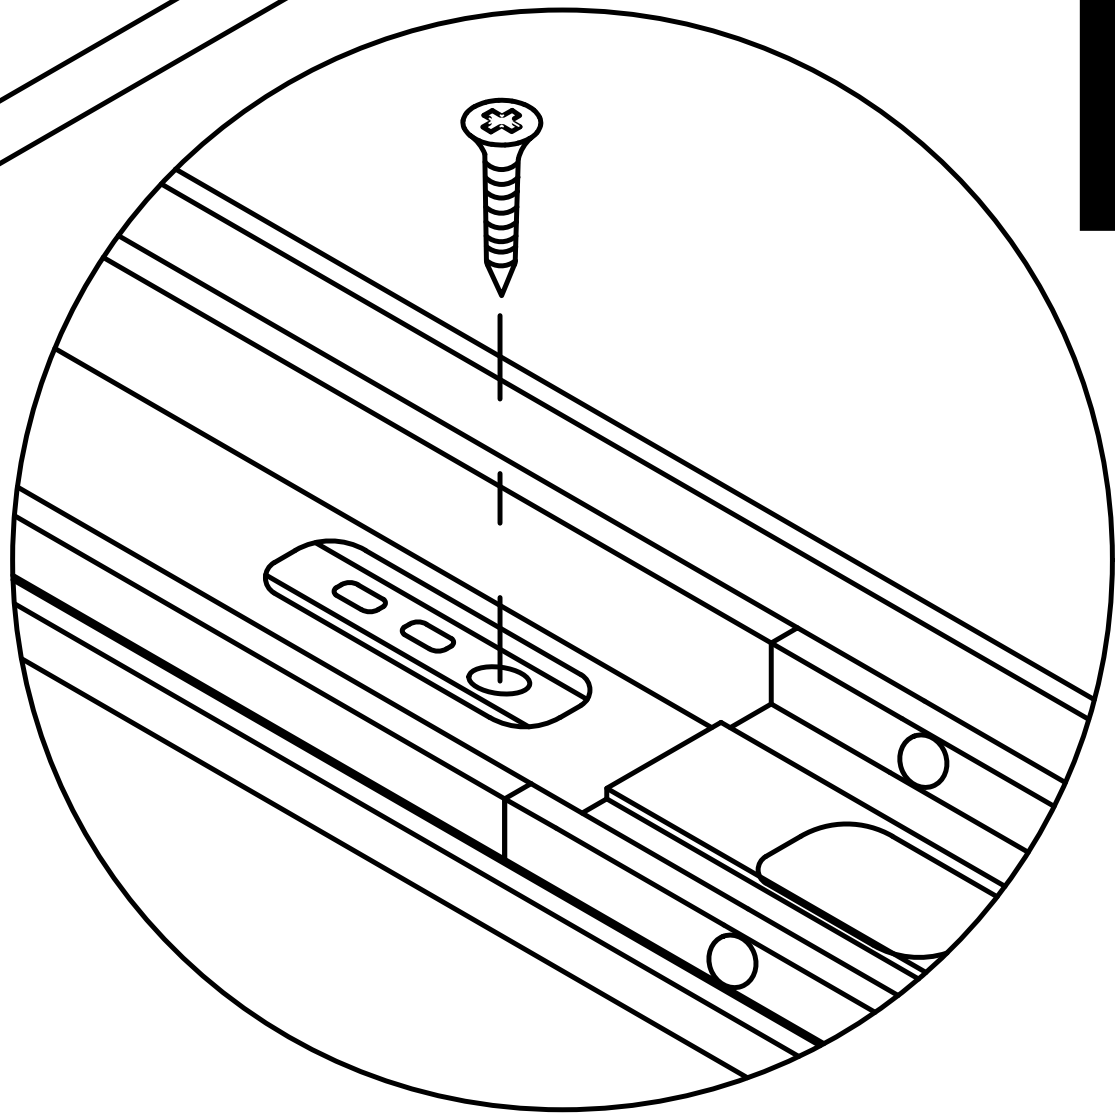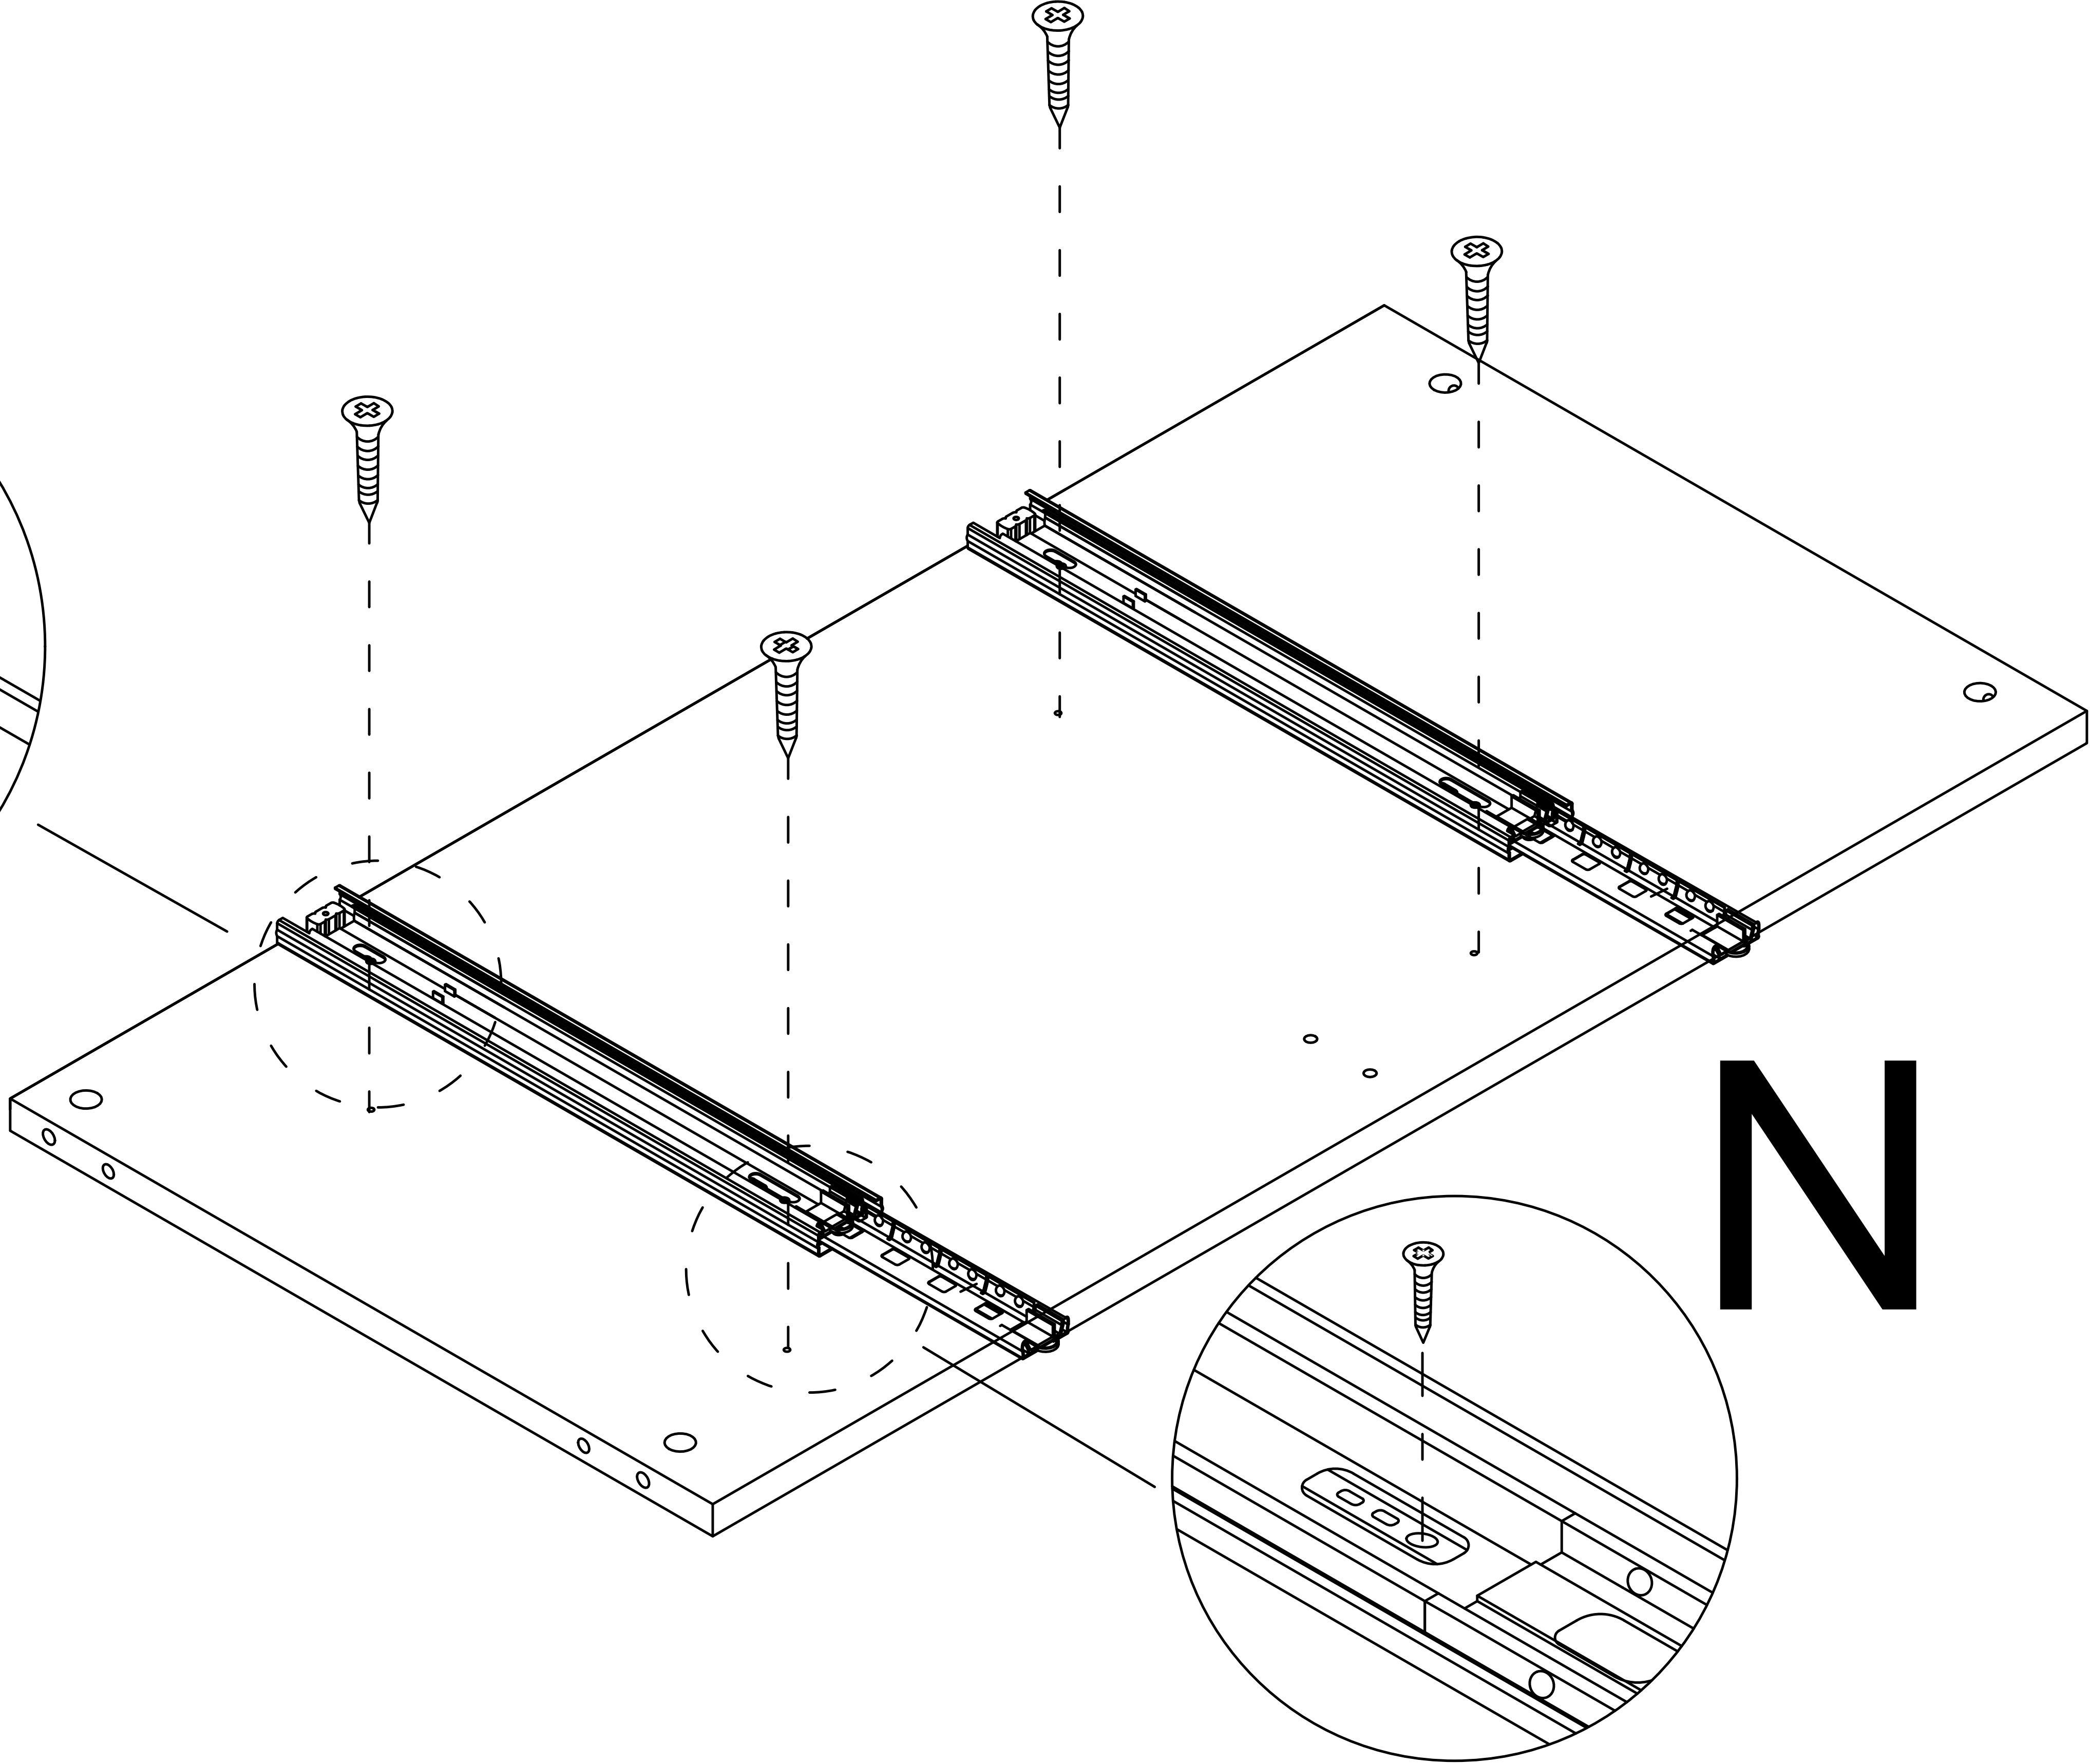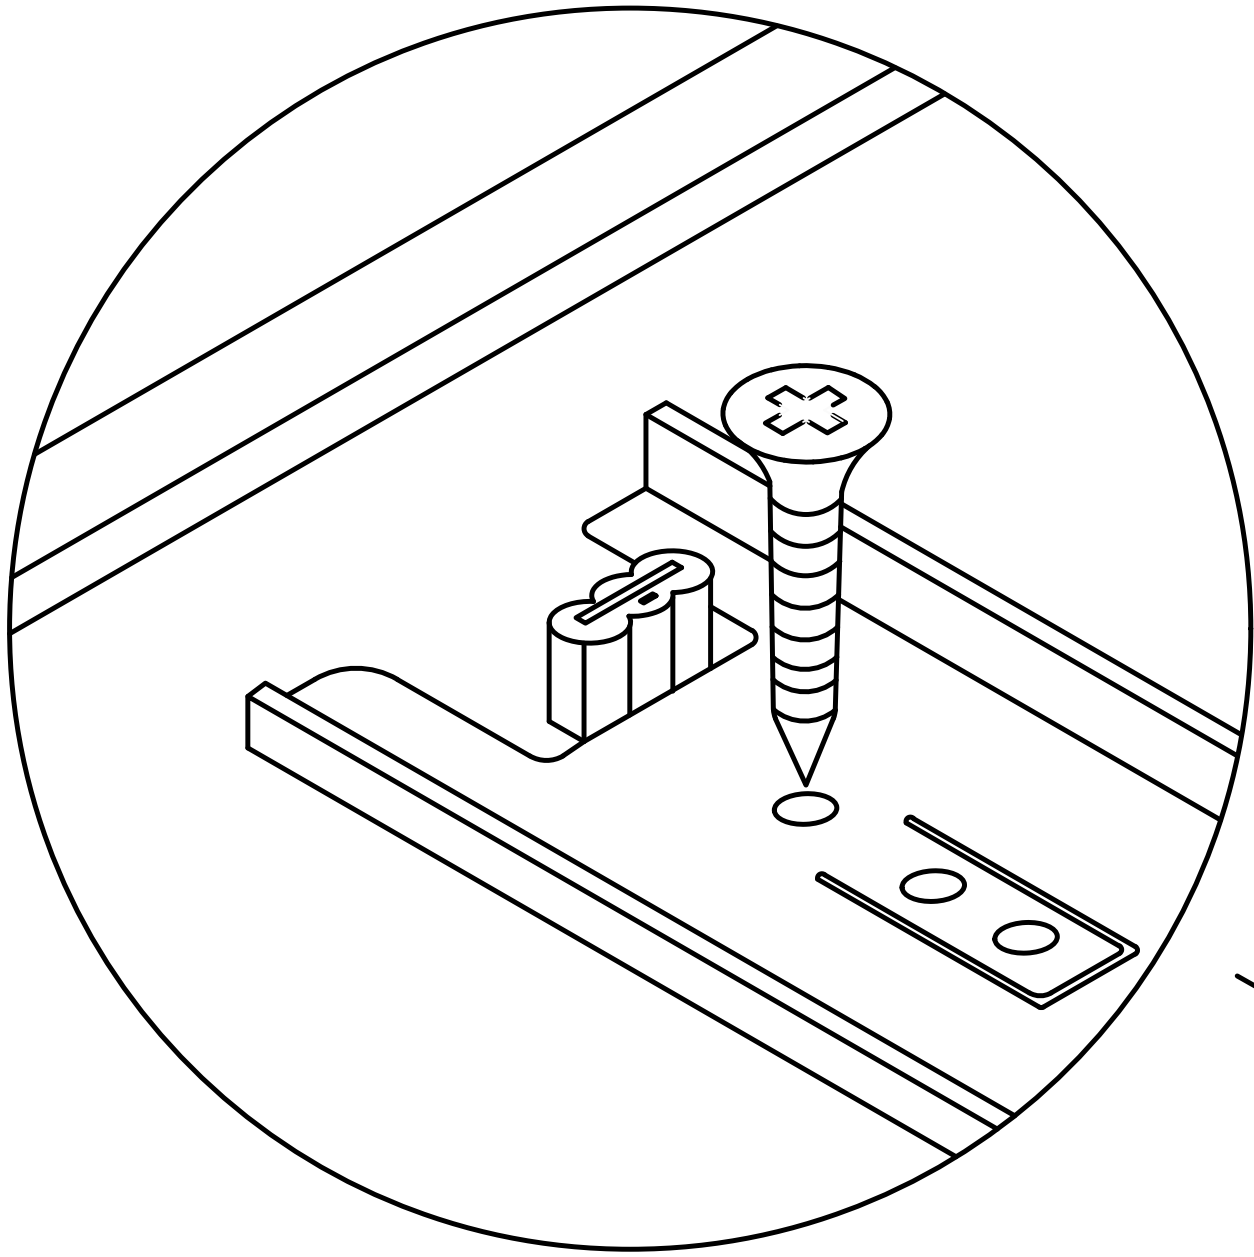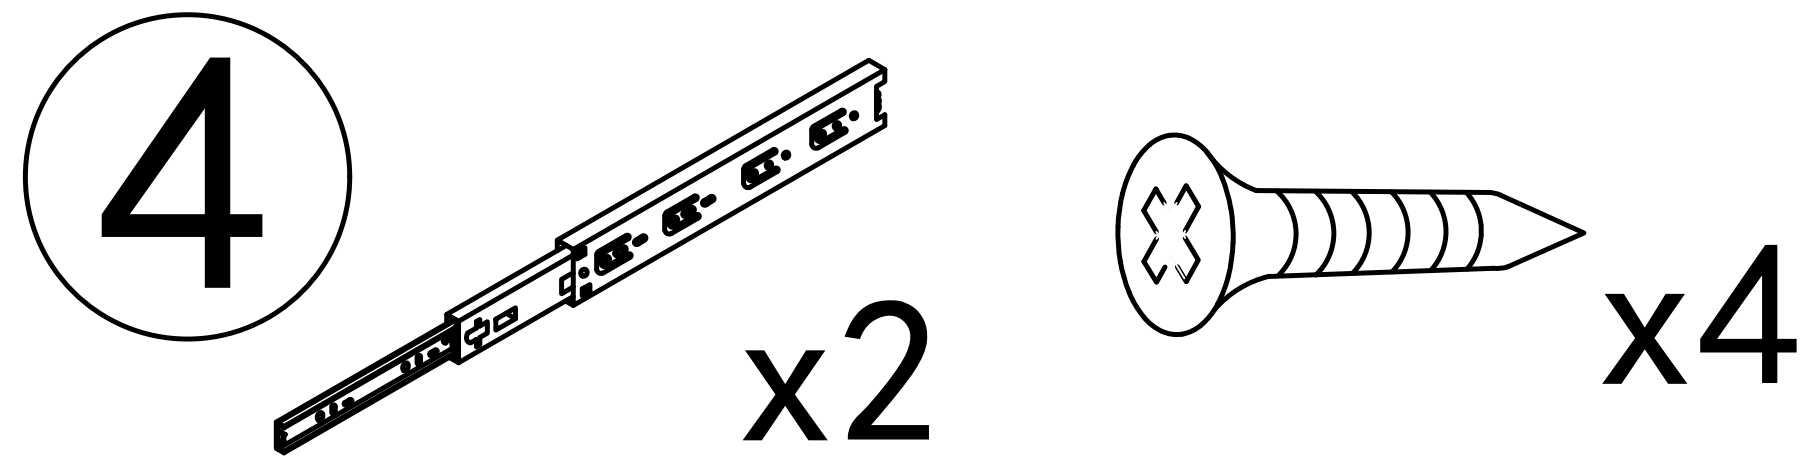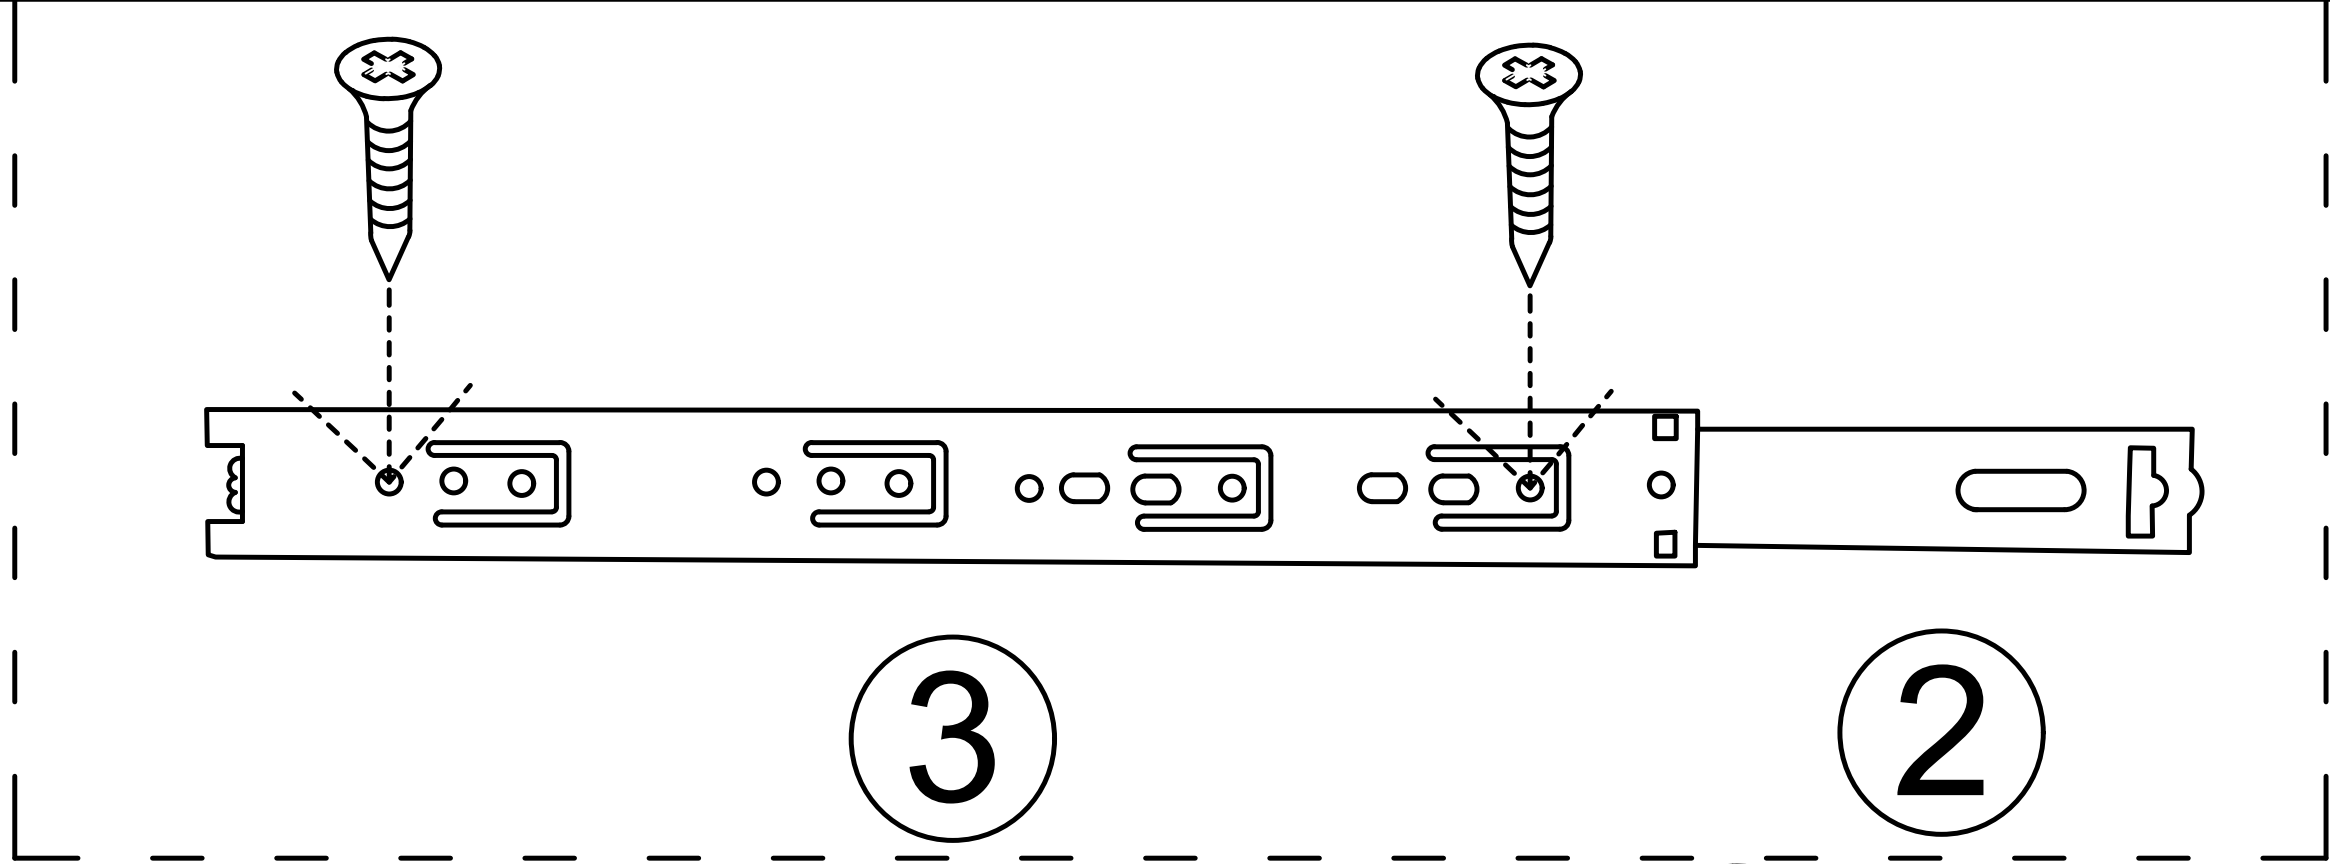



Step 24

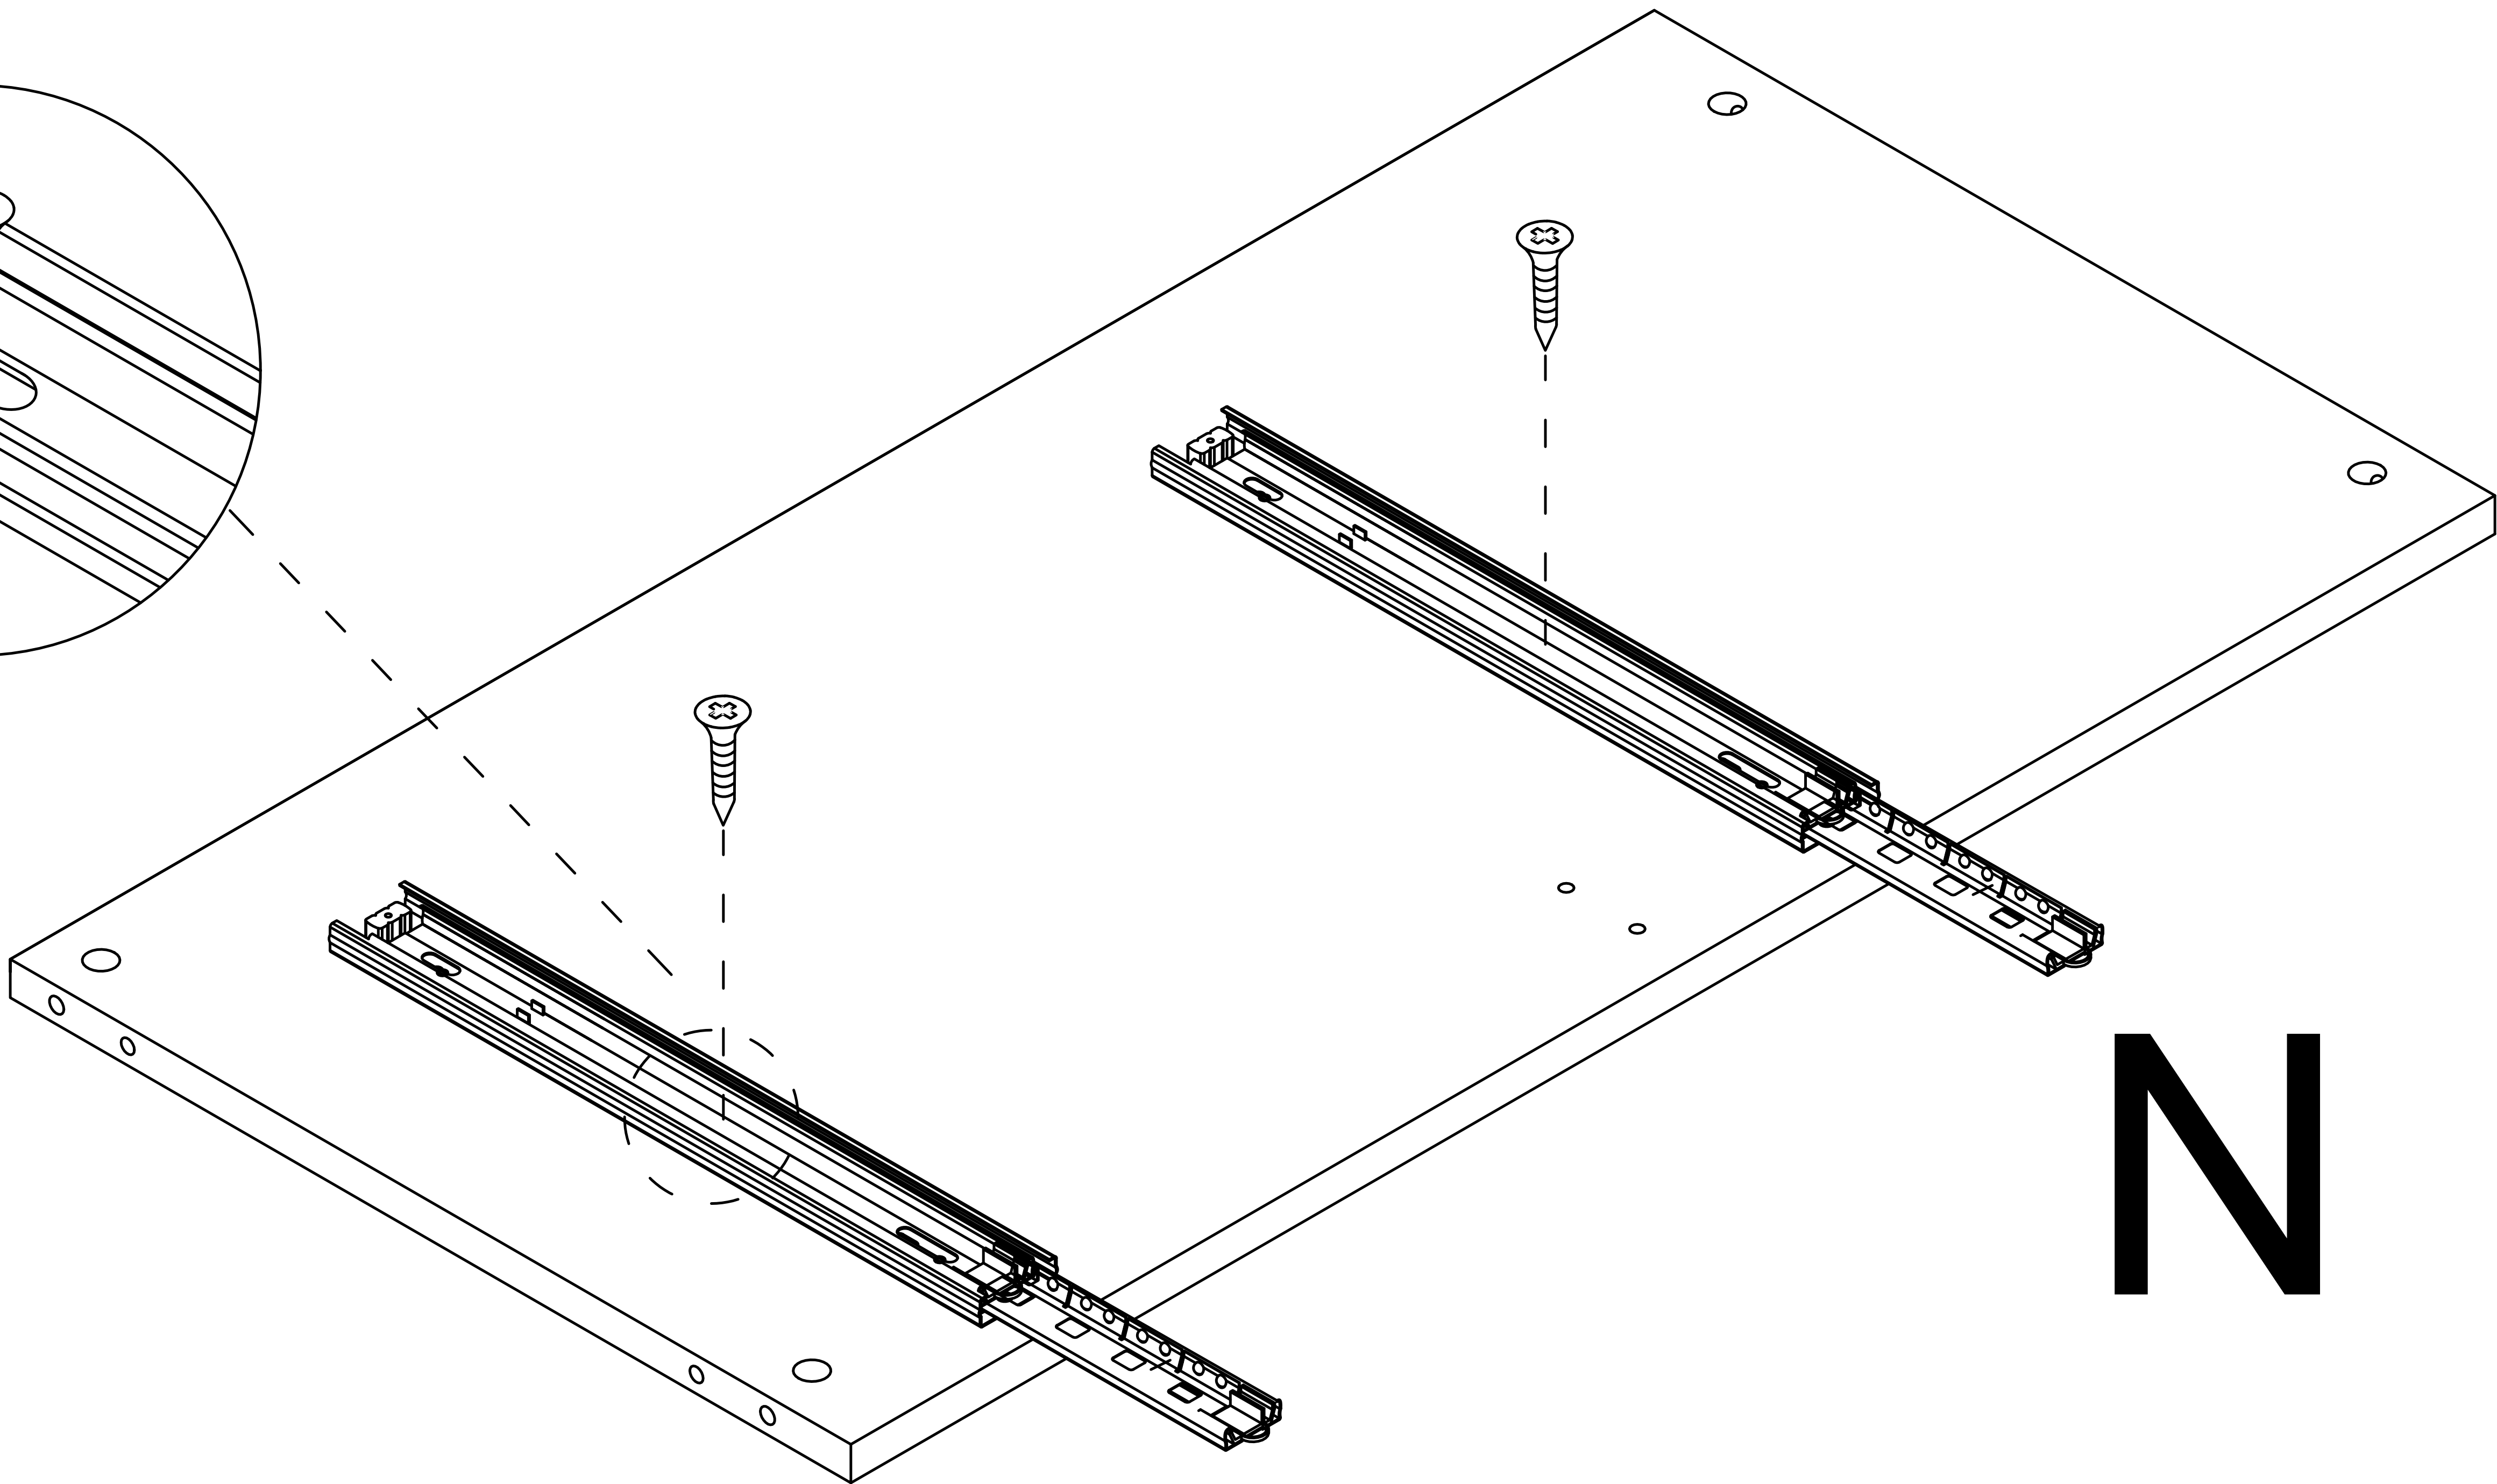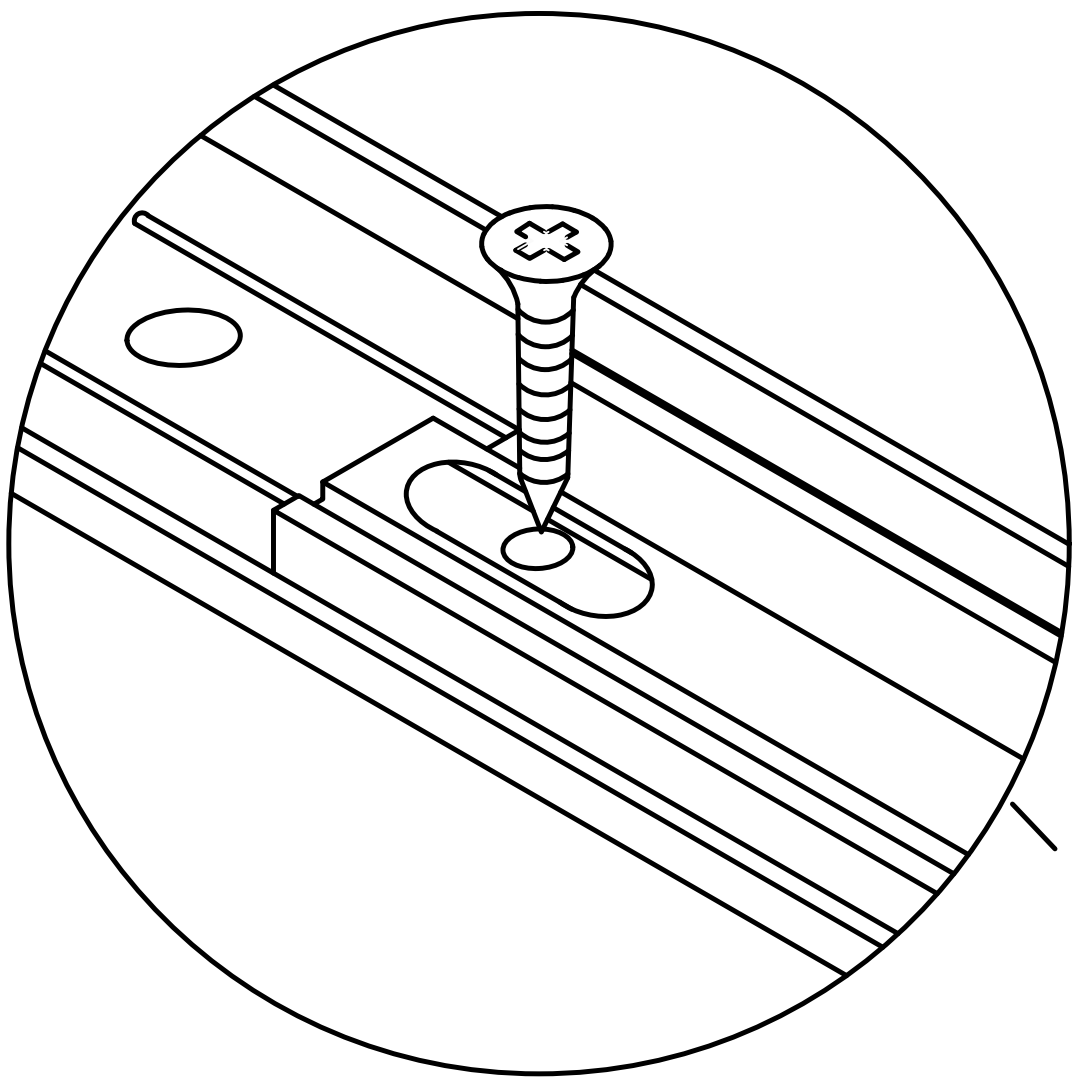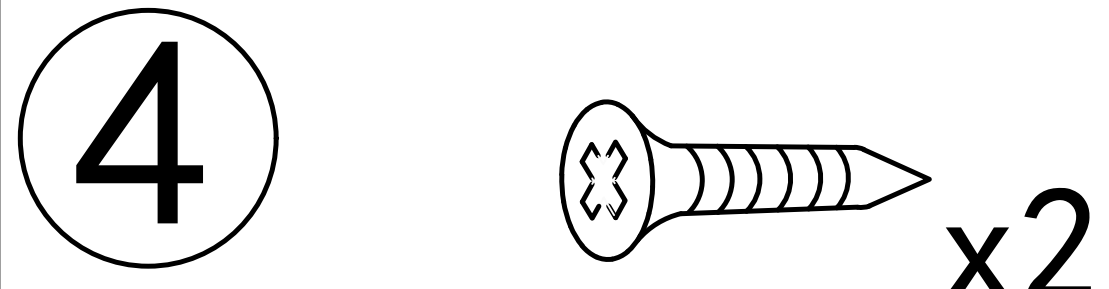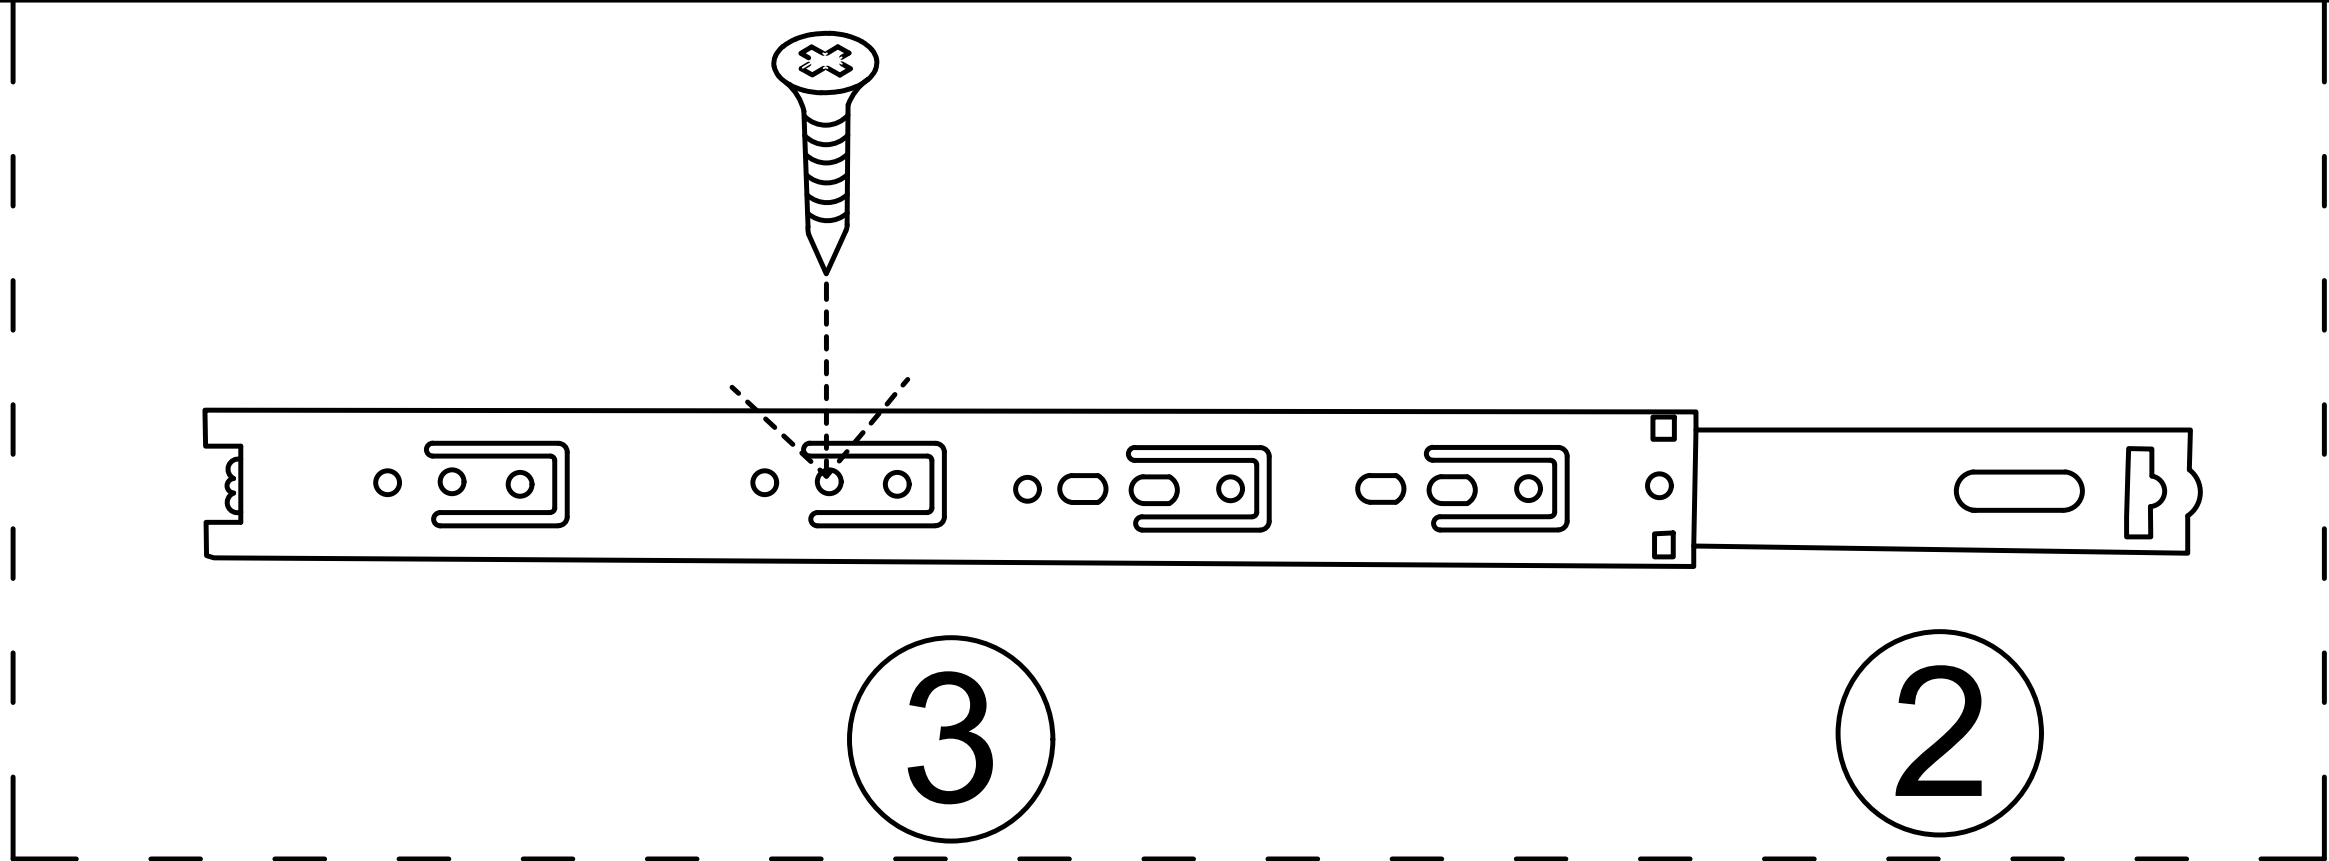


Step 25

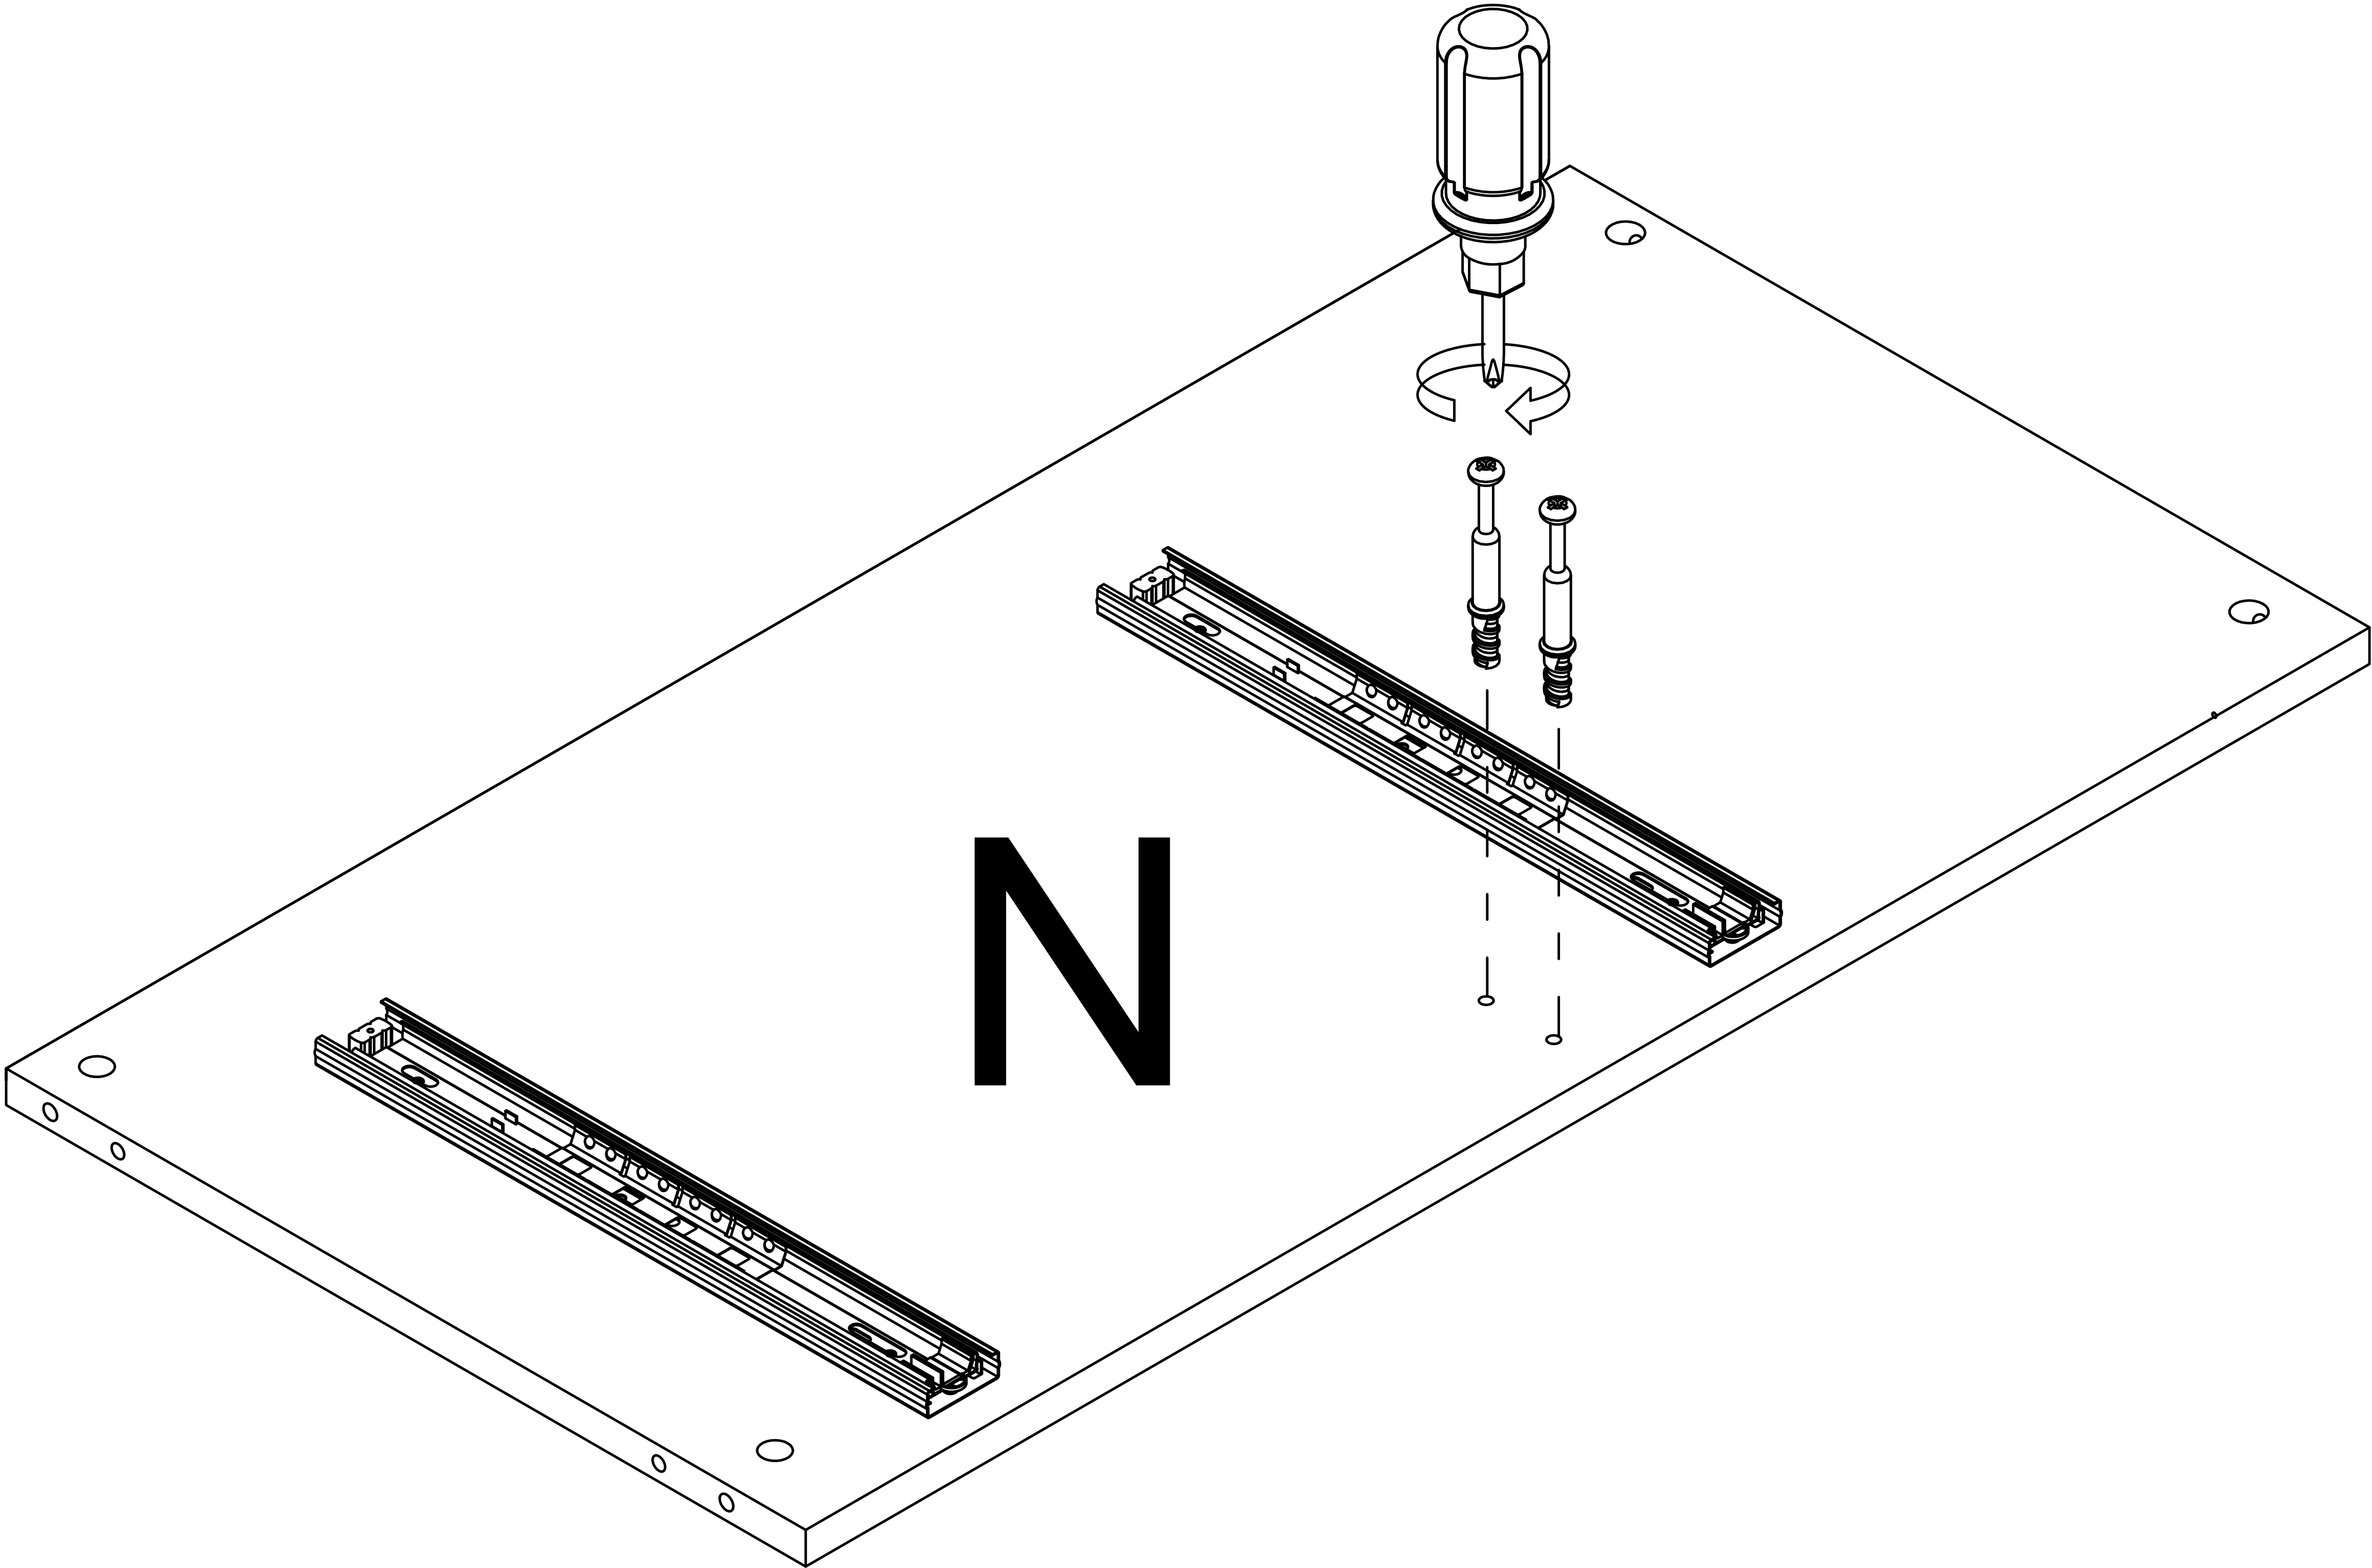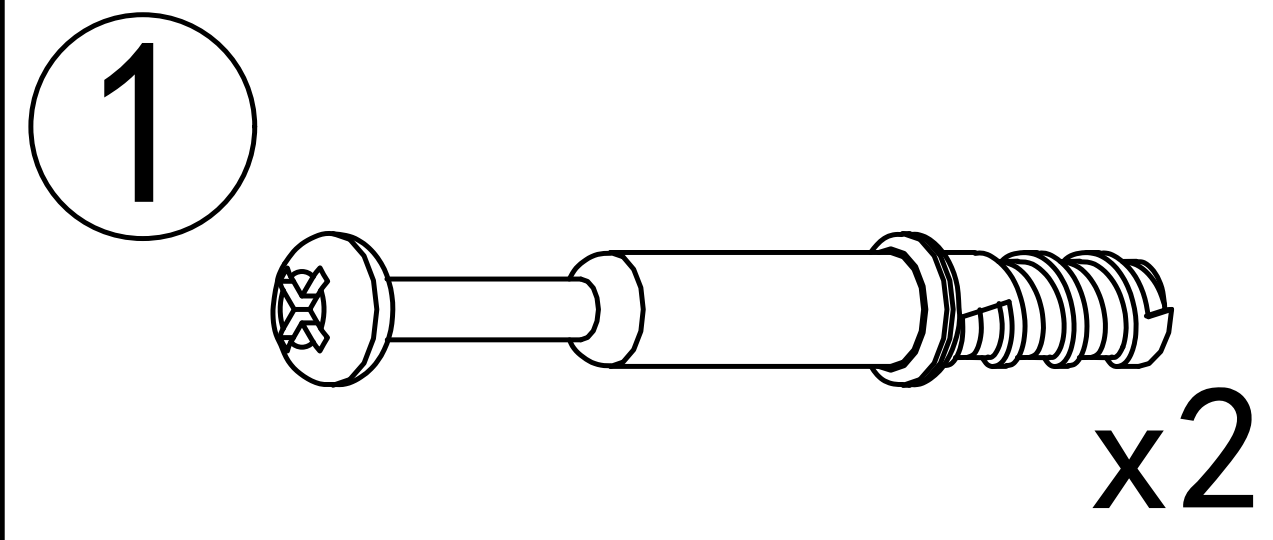


Step 26

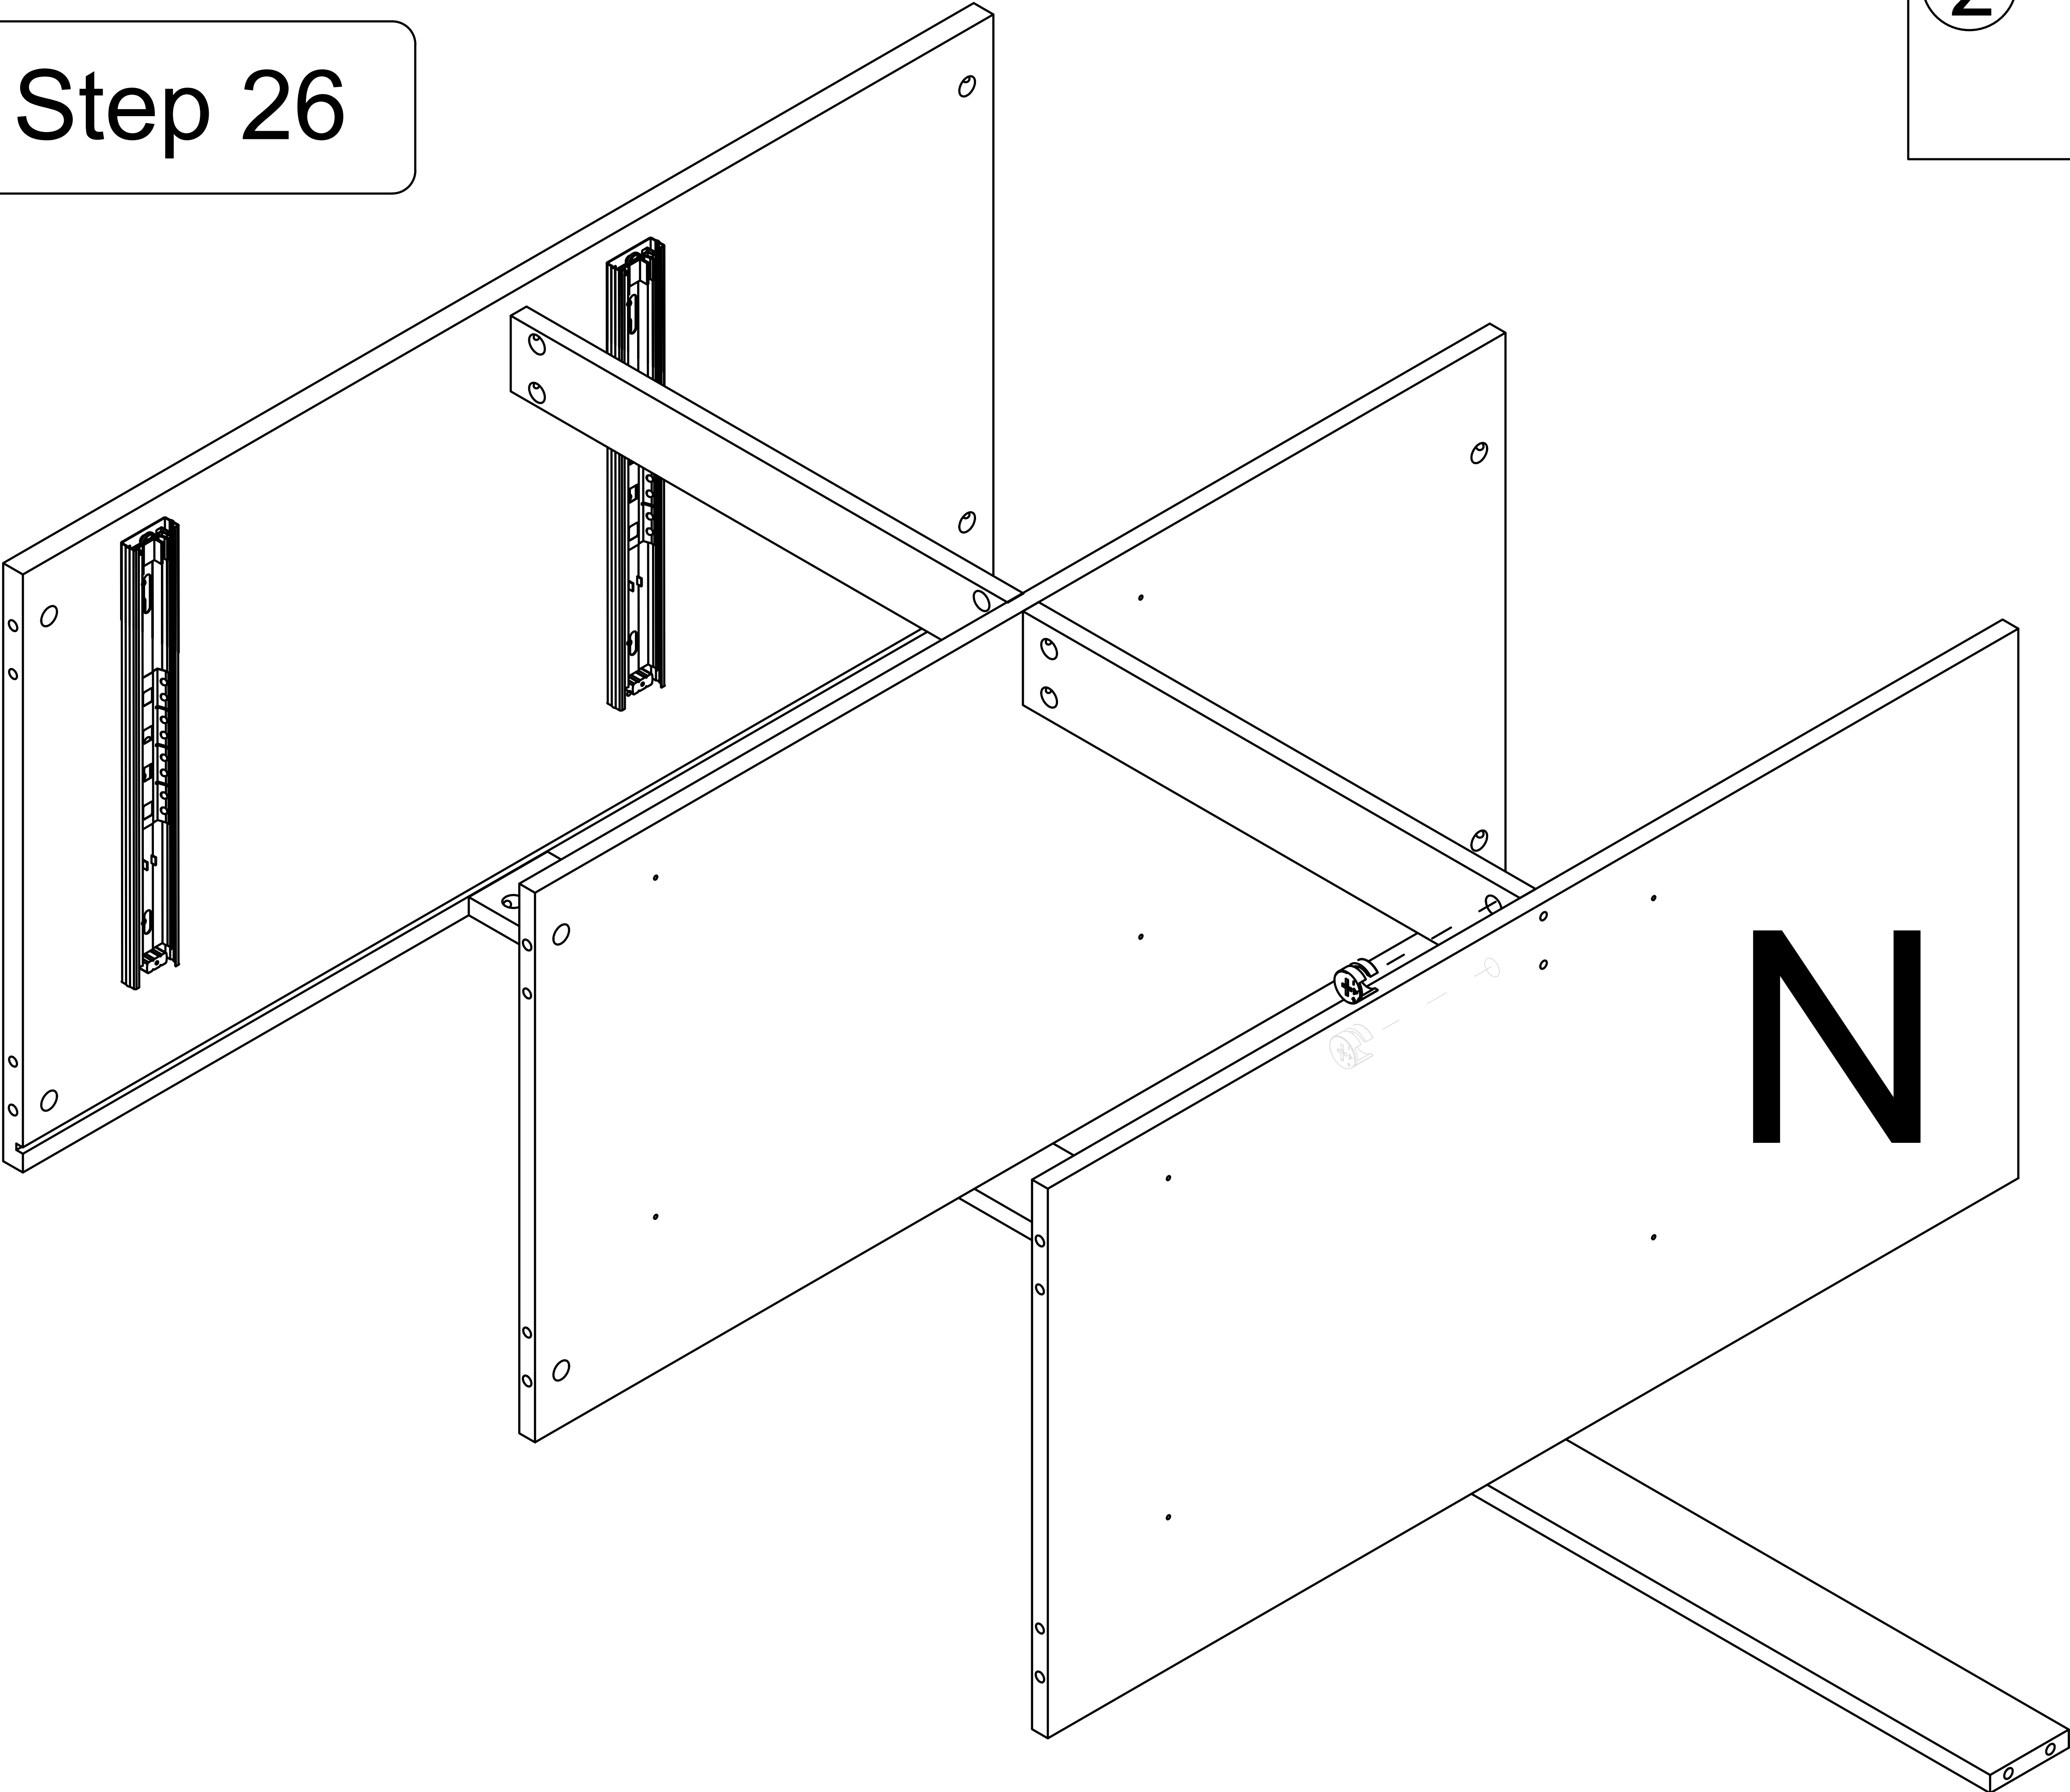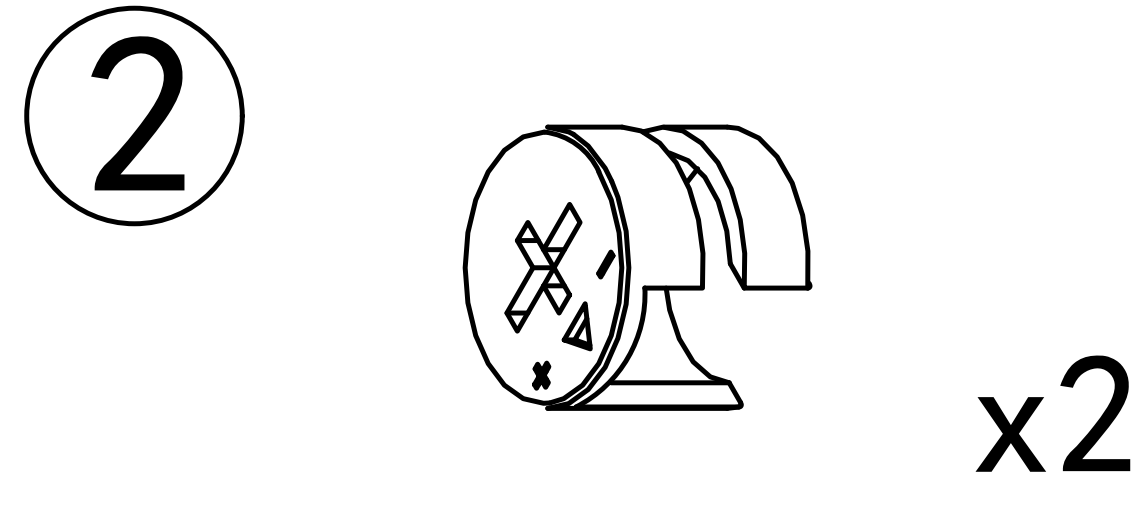



Step 27

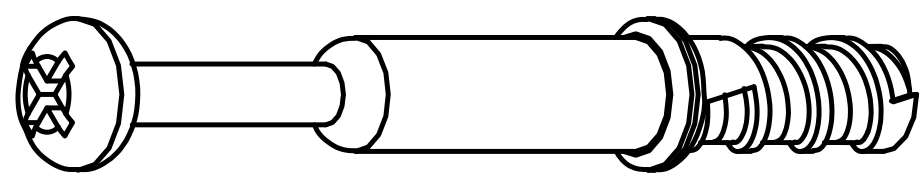1  x2





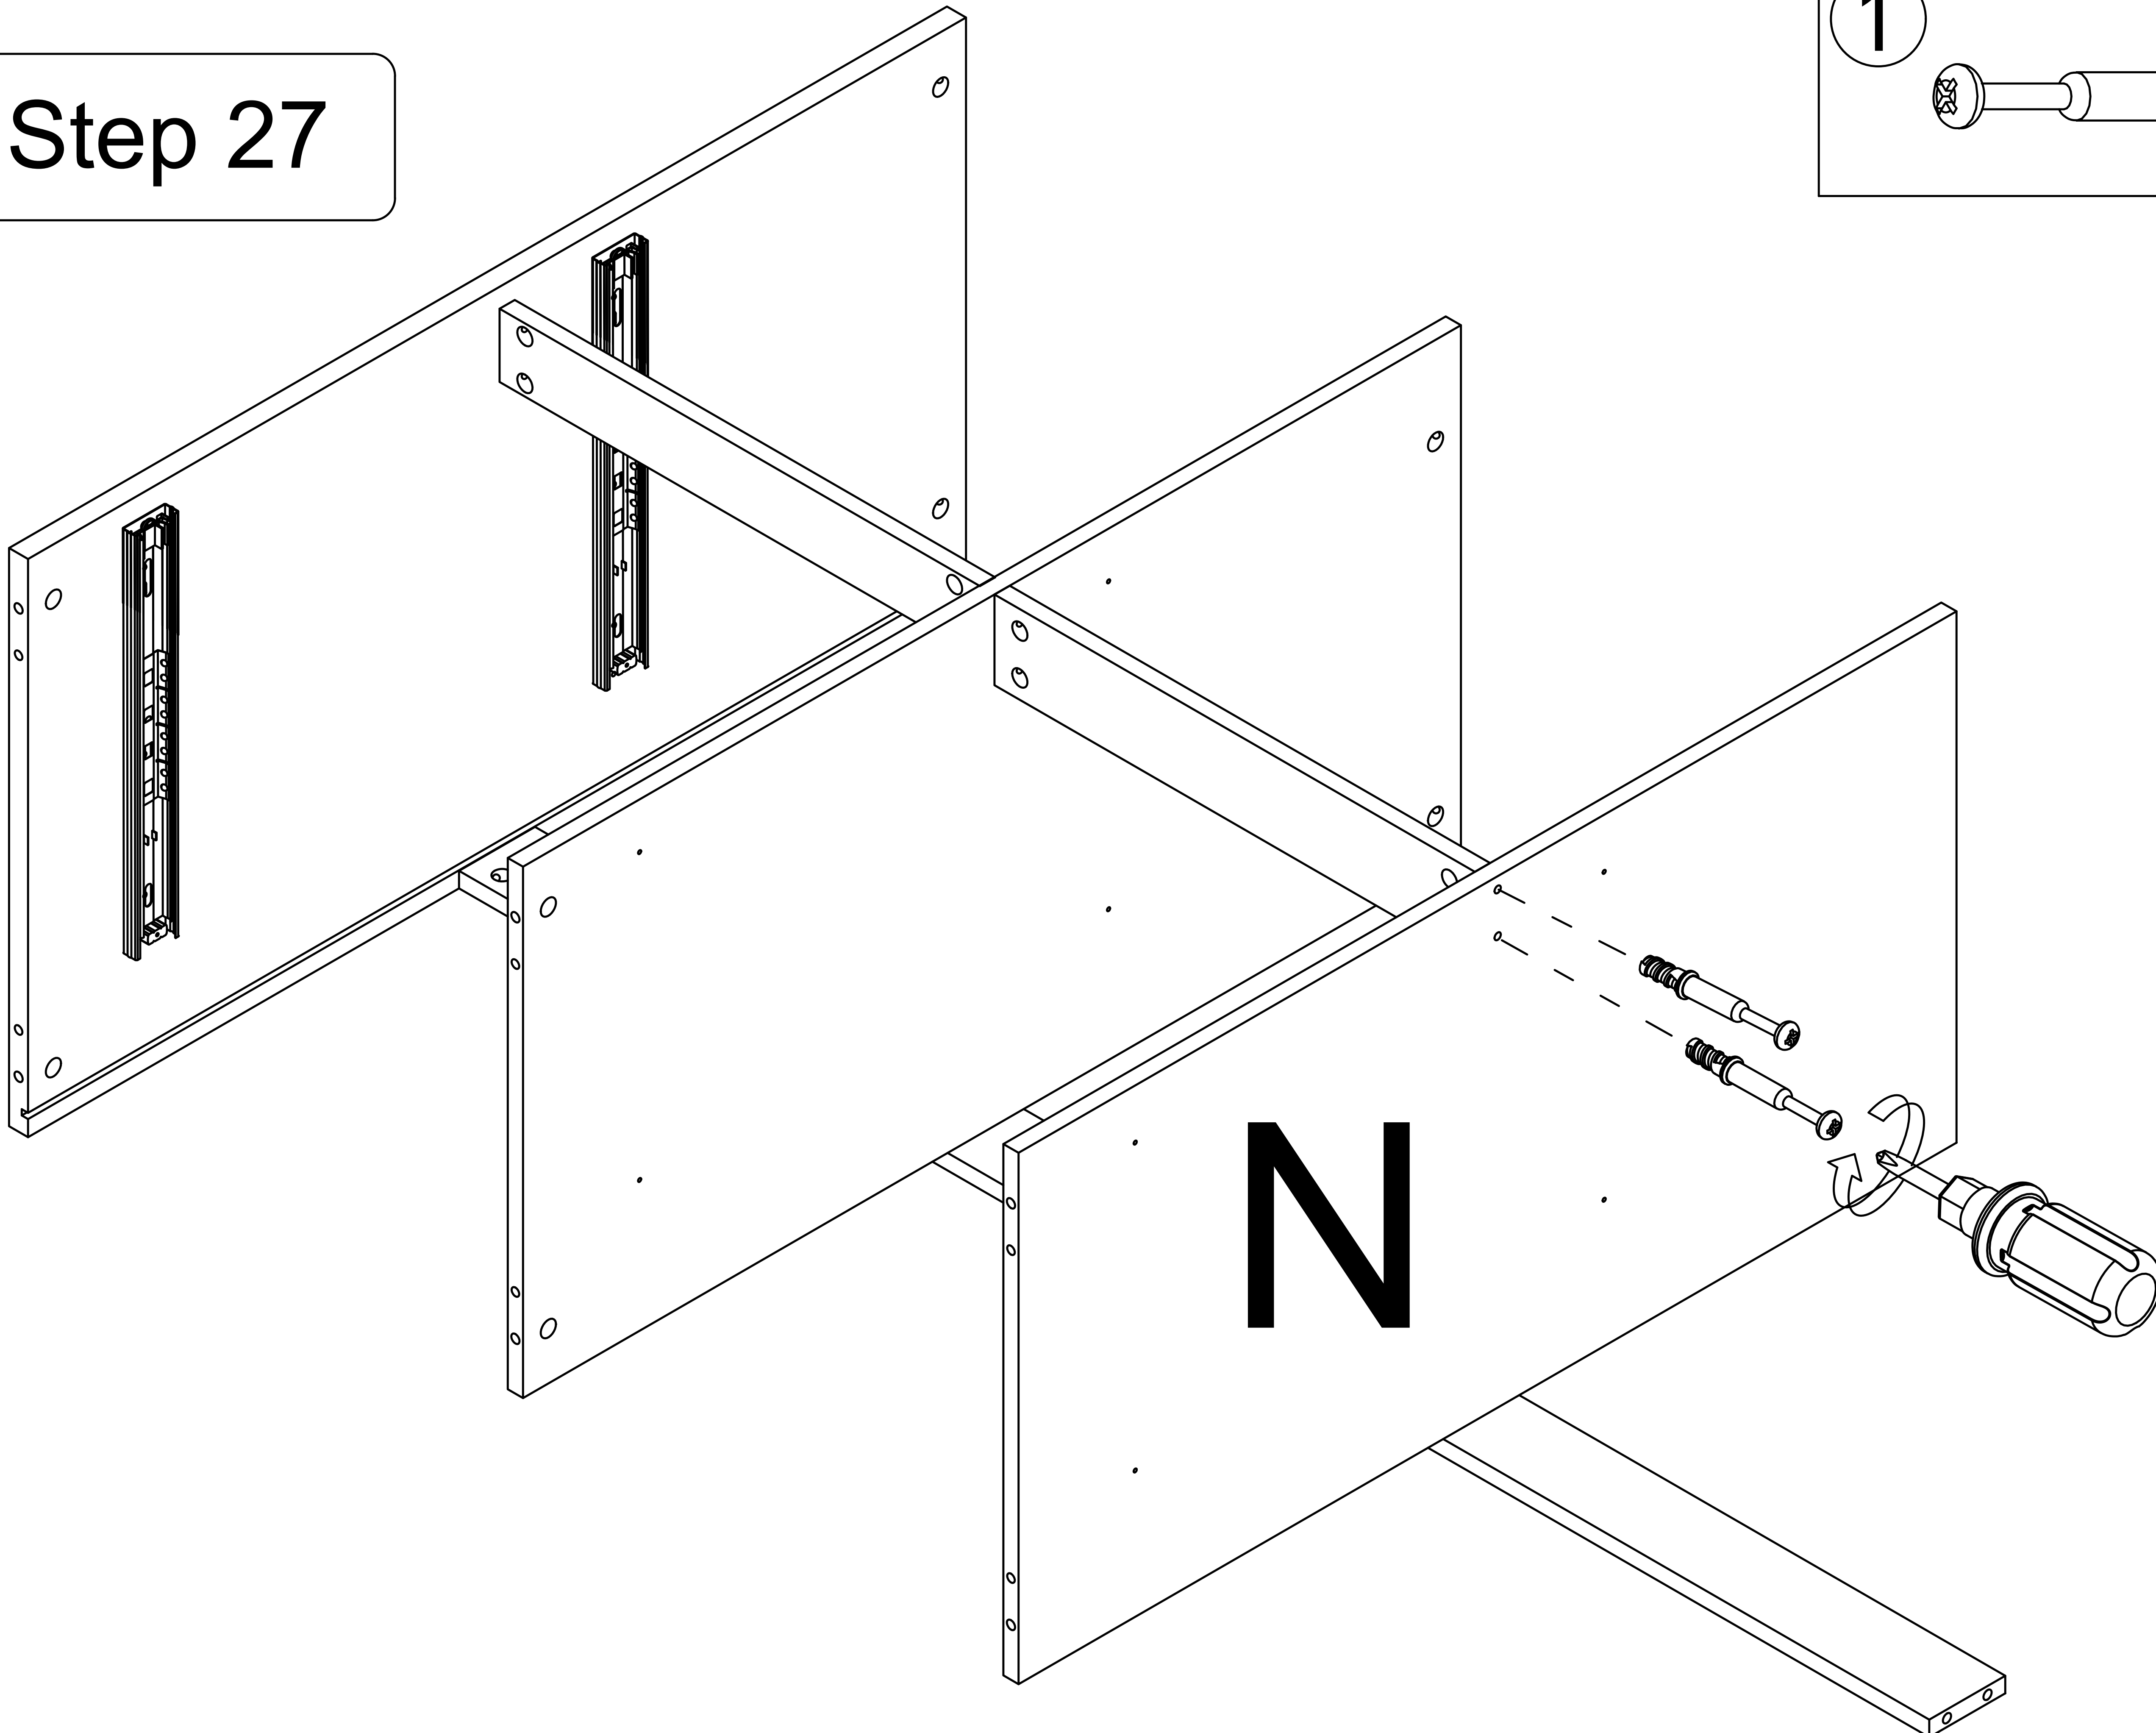


Step 28

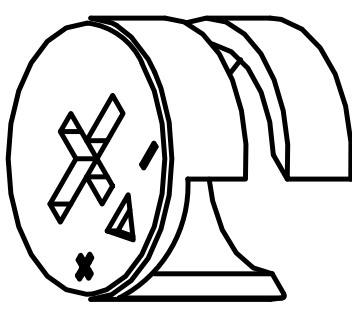
2  x2

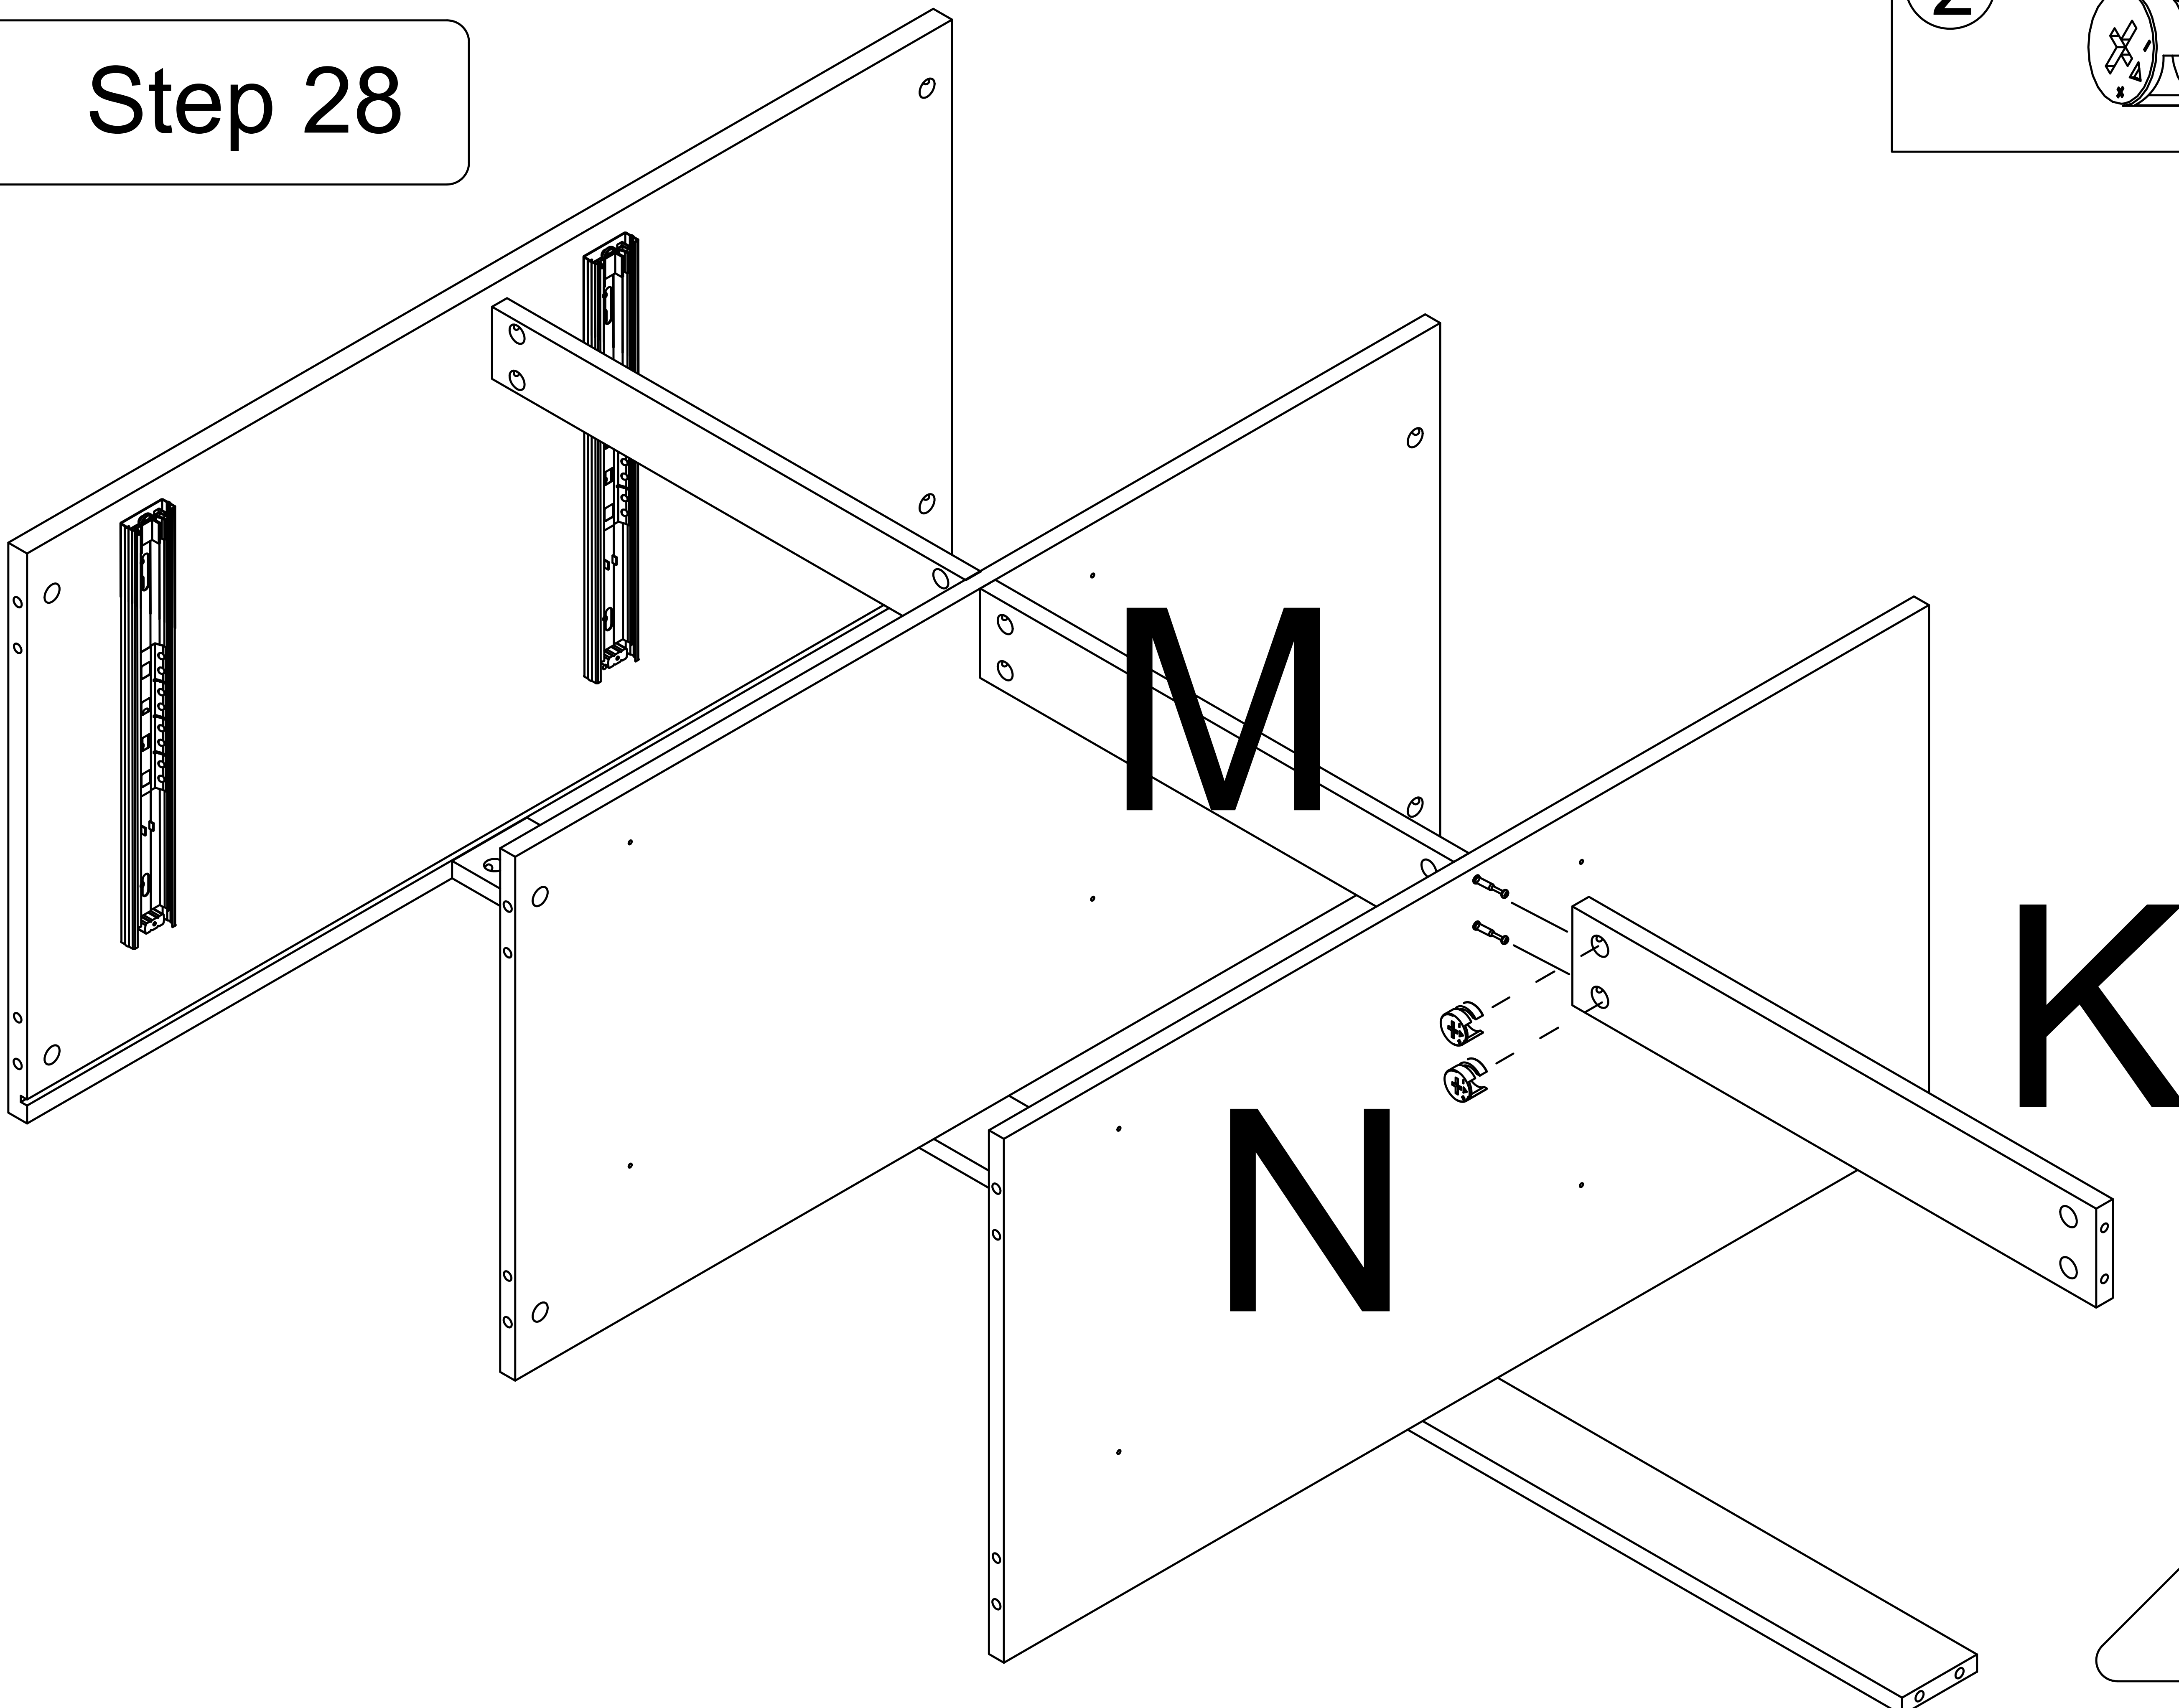



Step 29

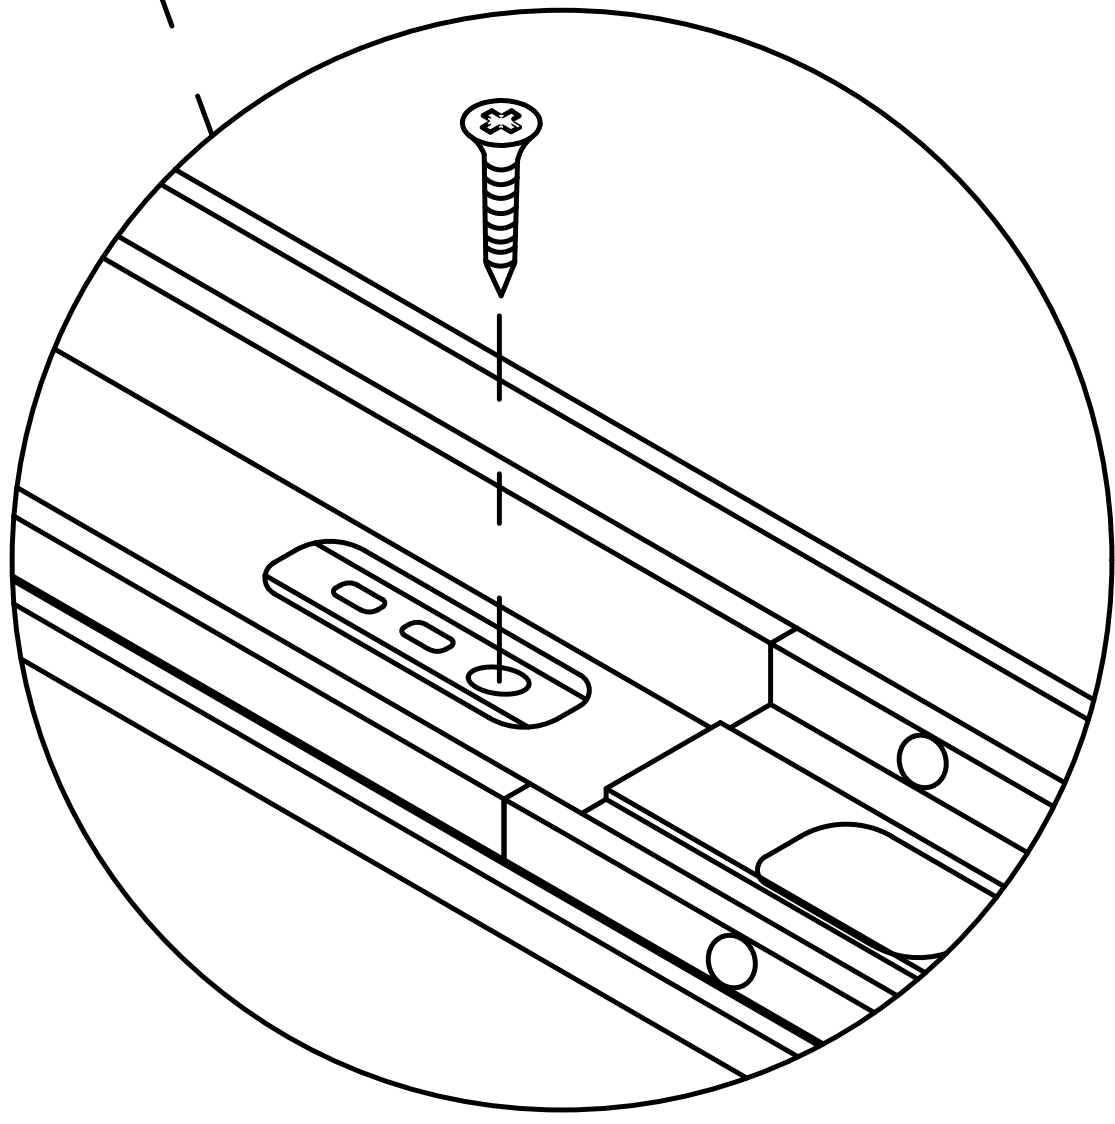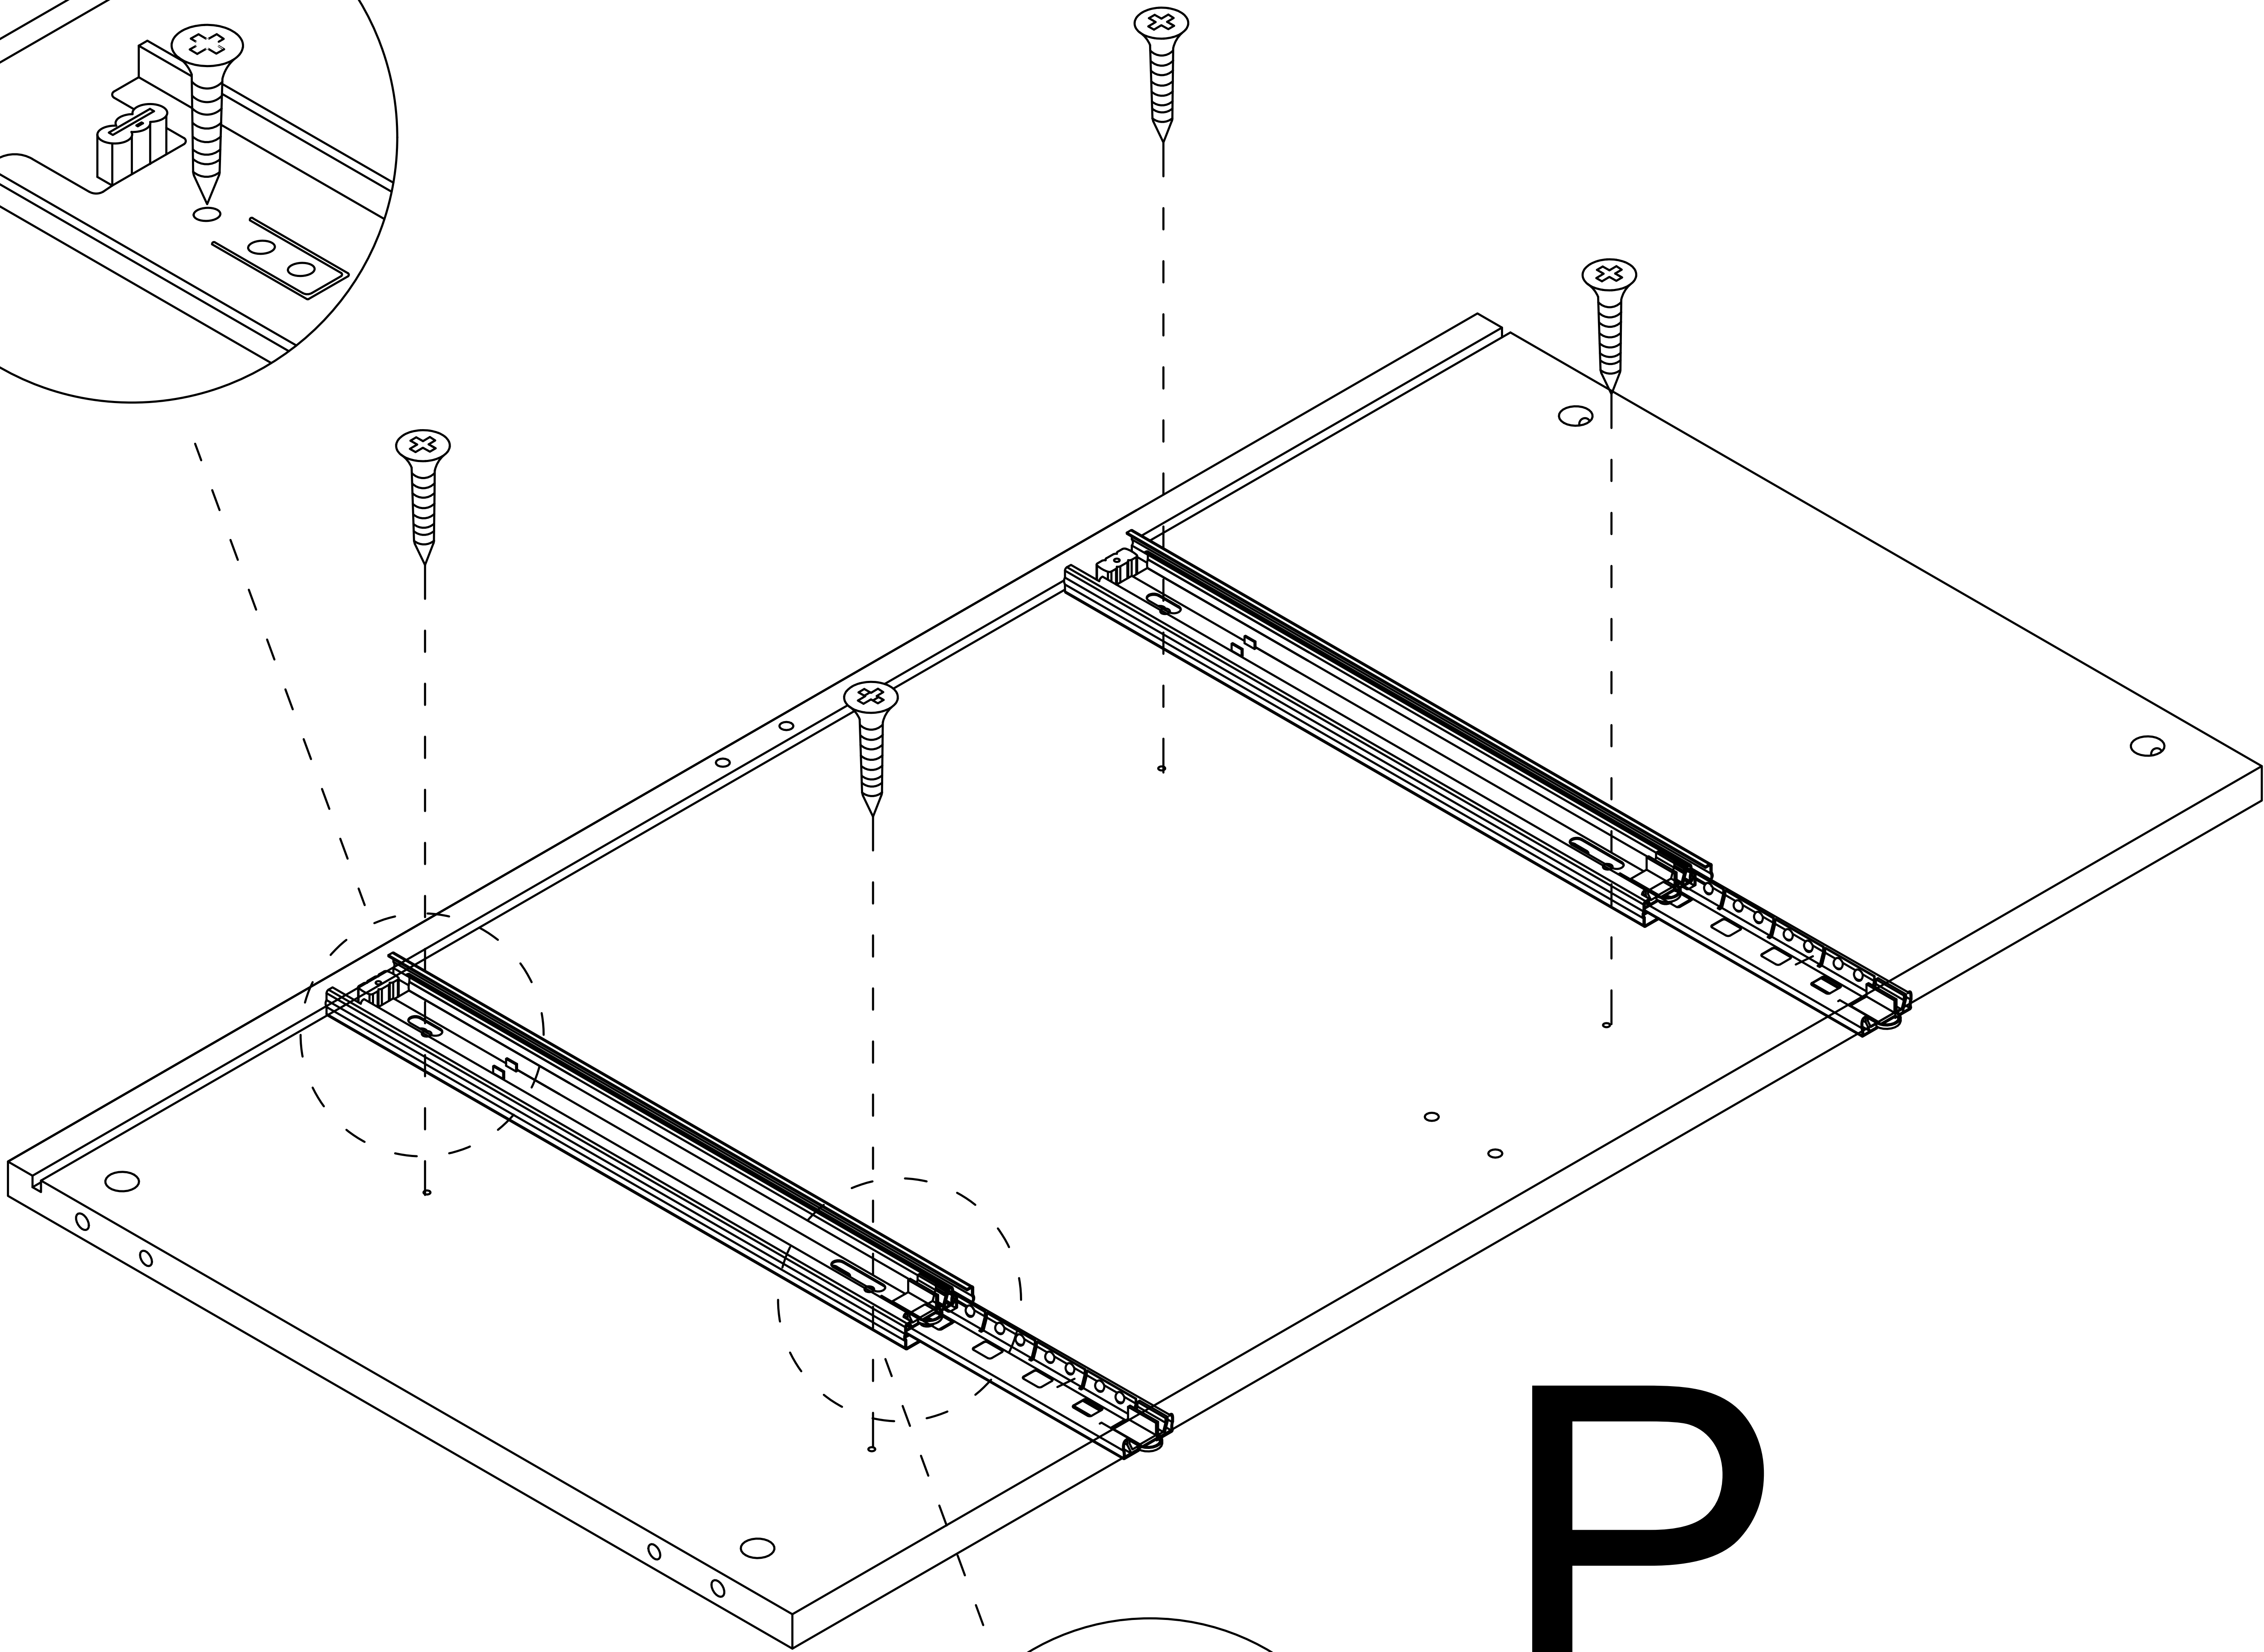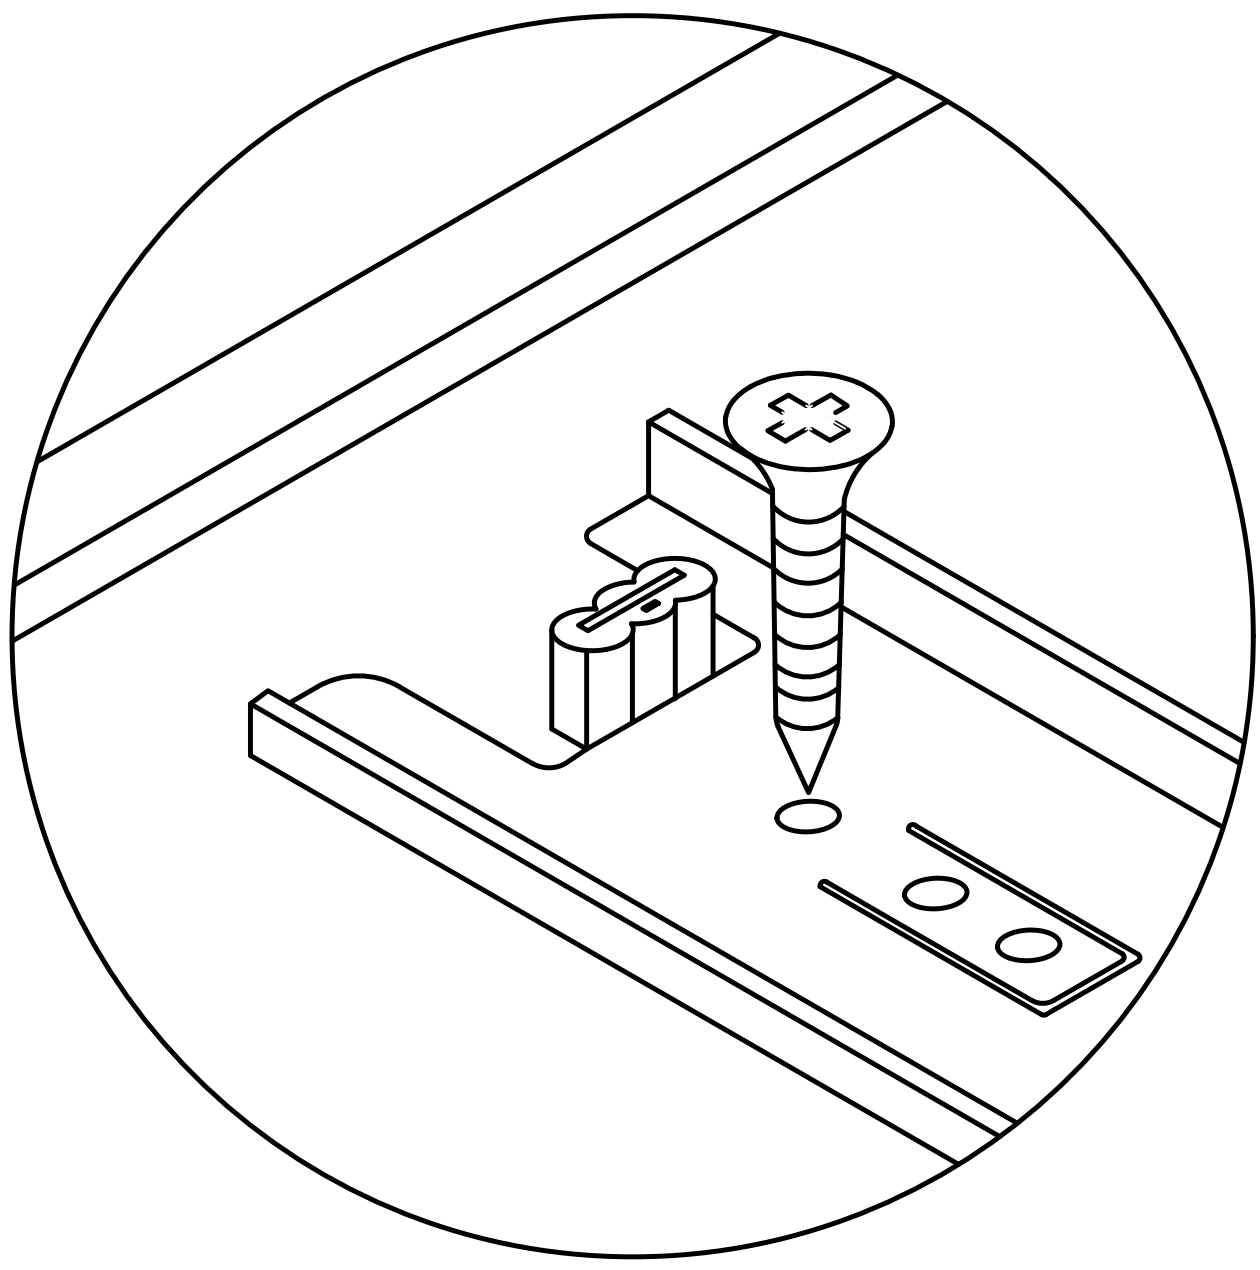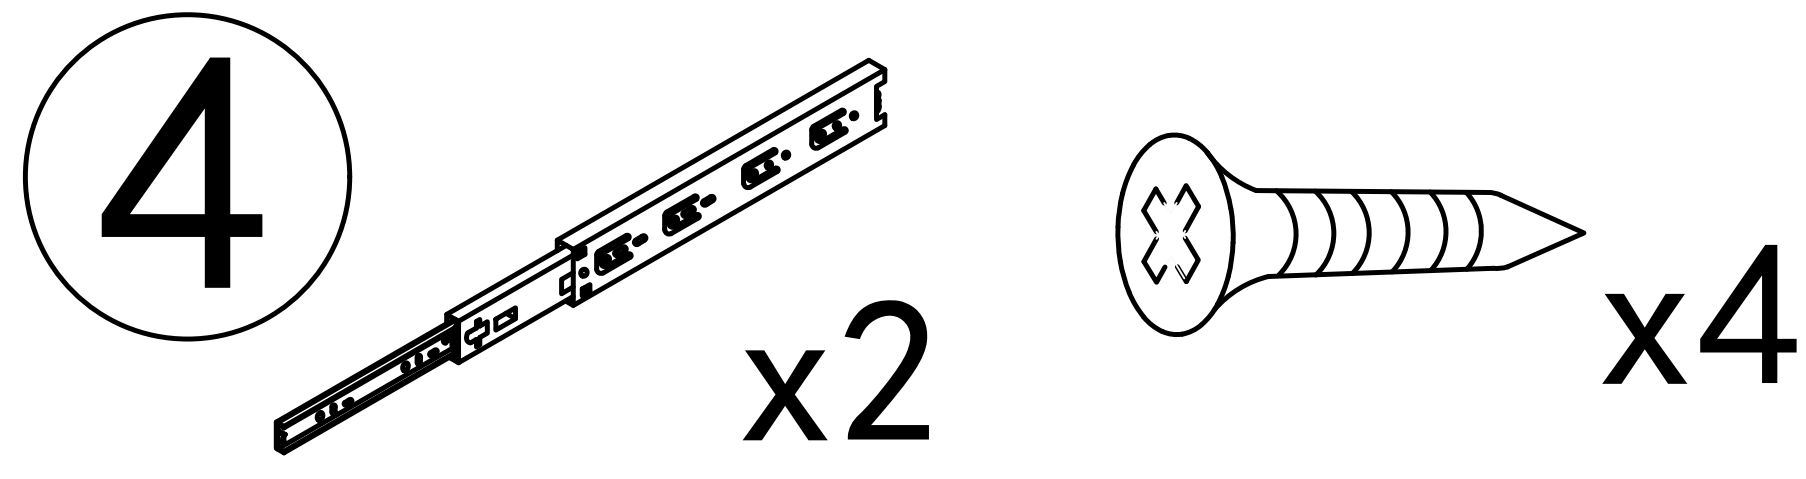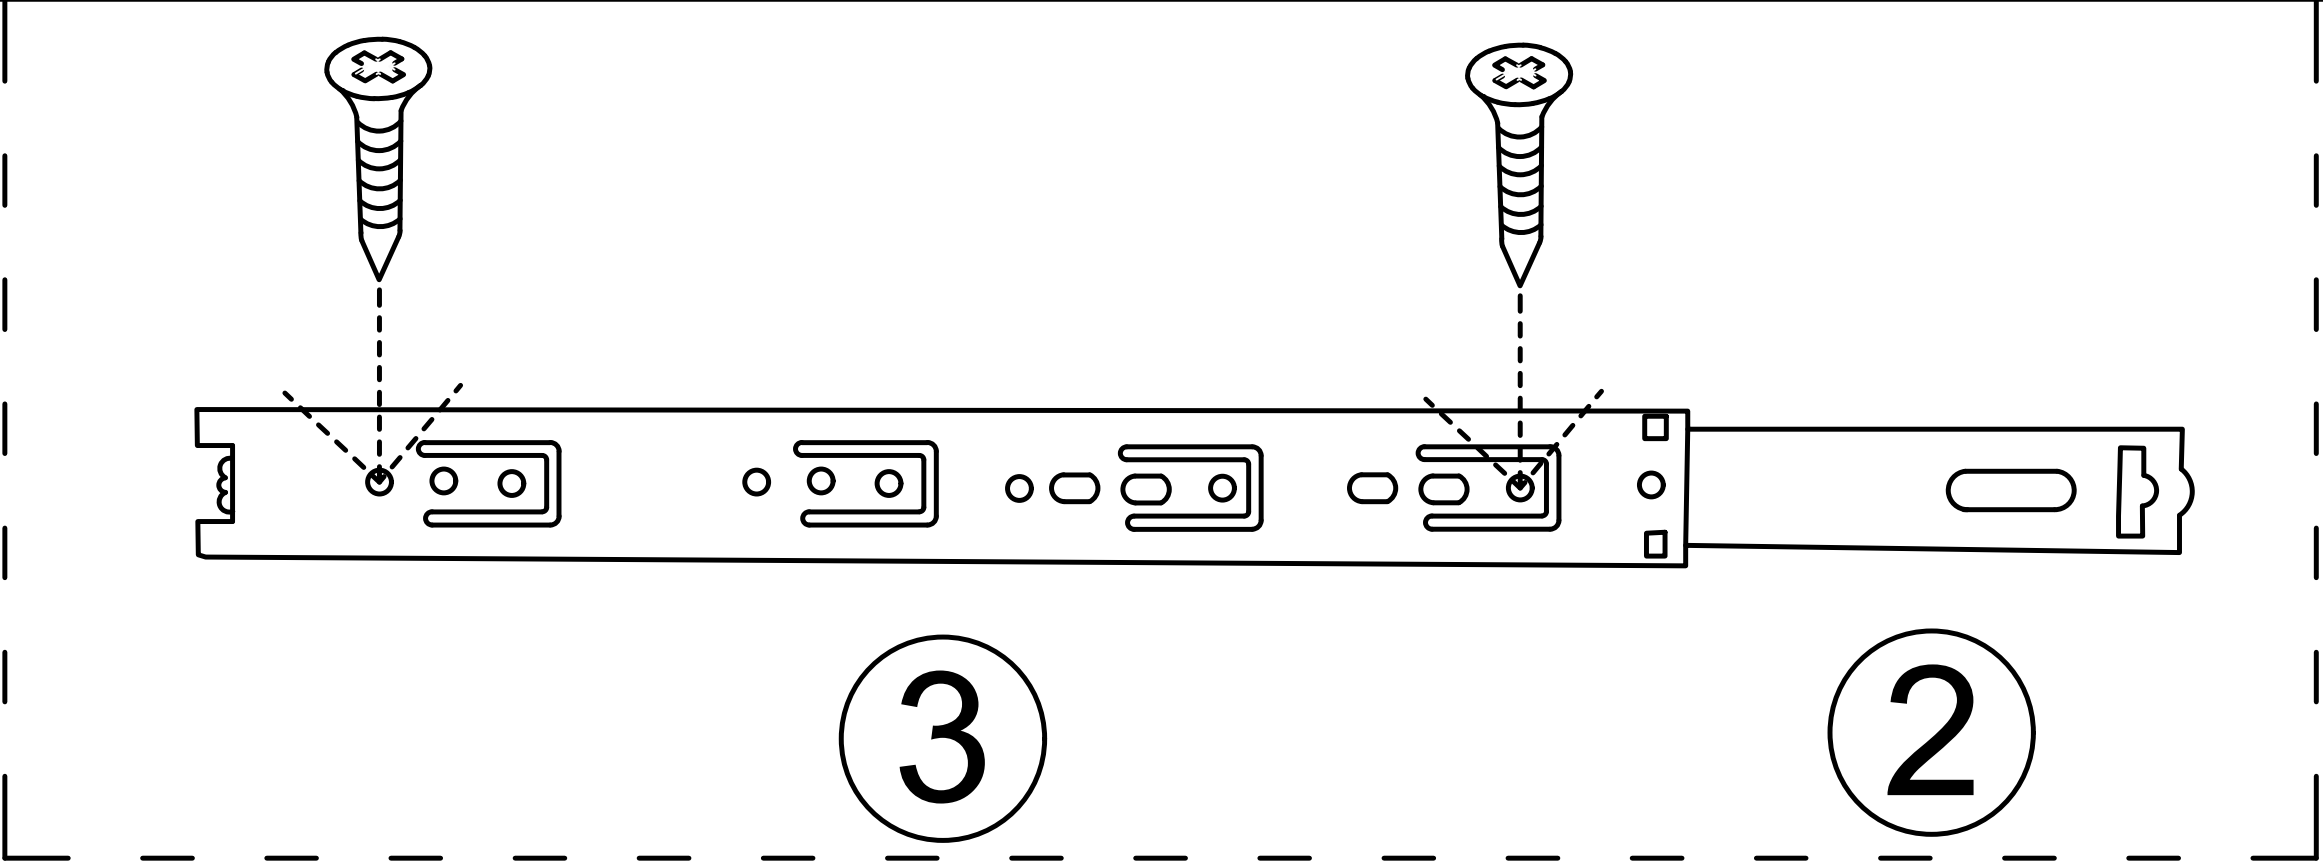

Step 30

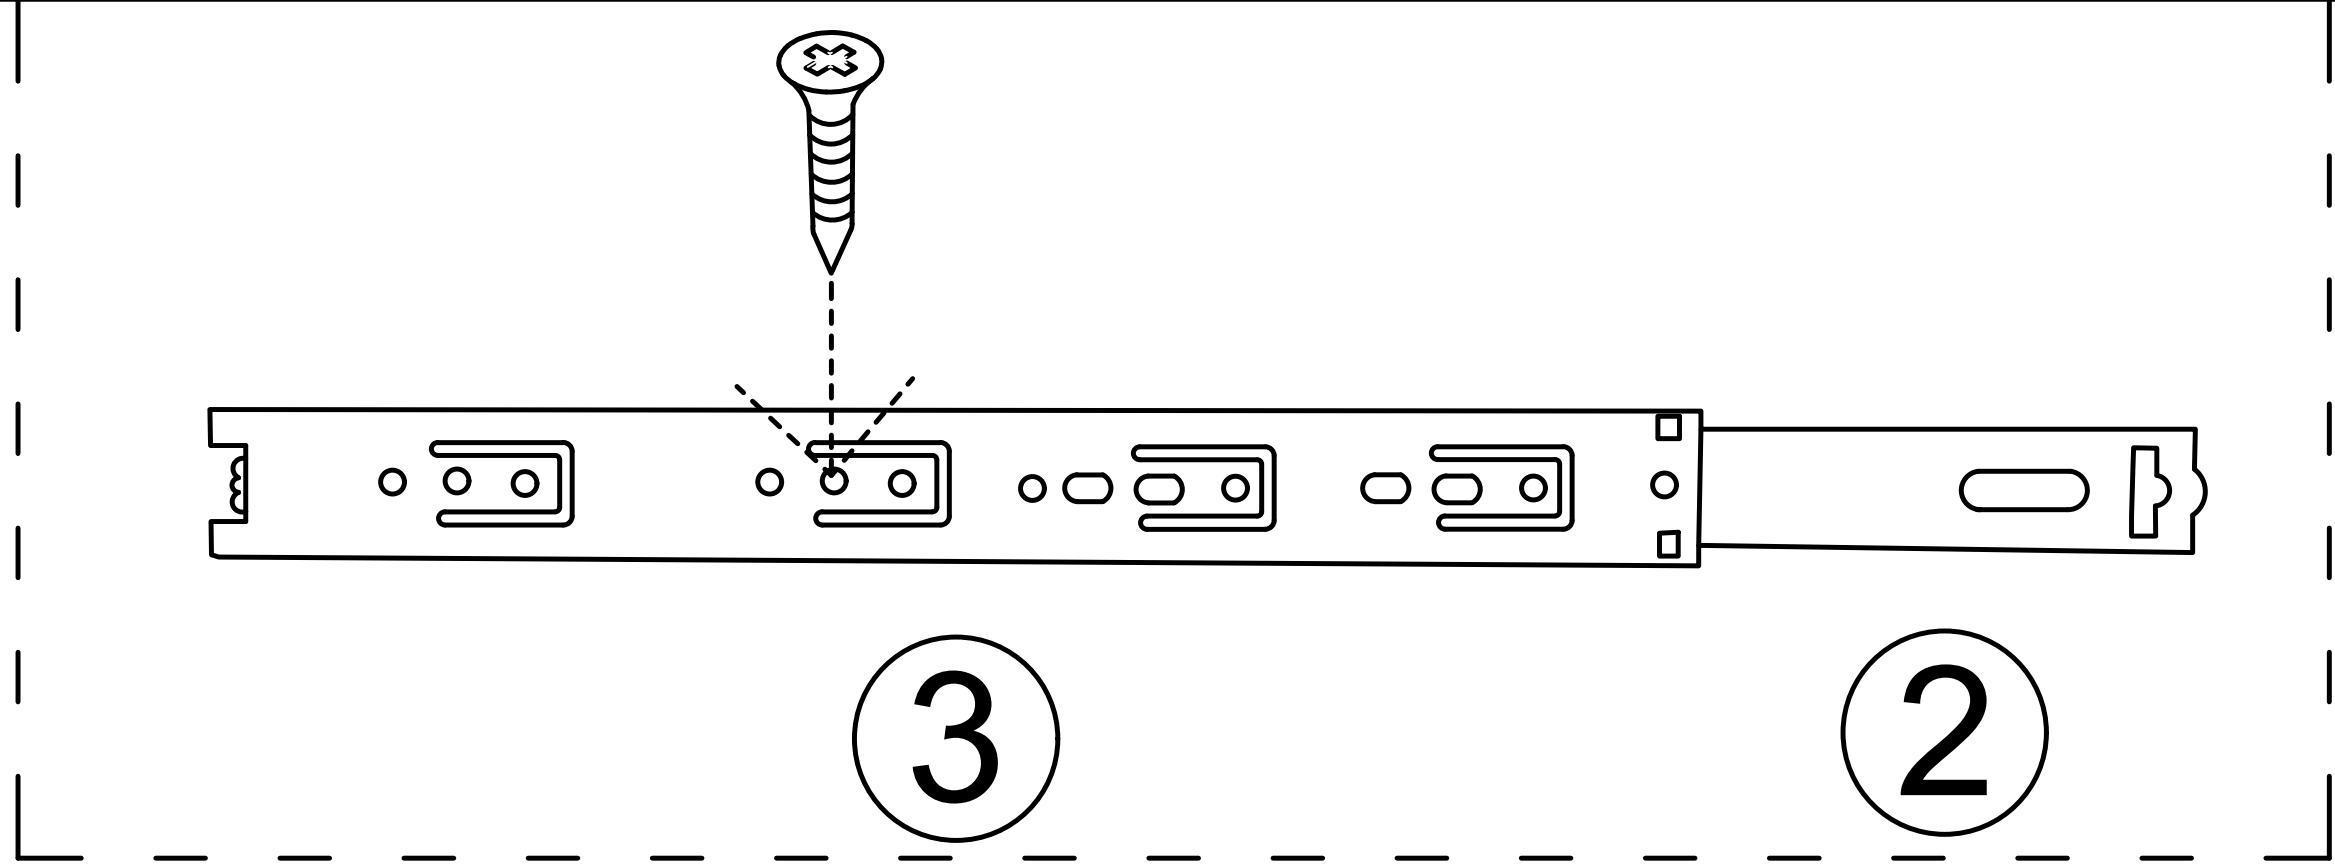



4

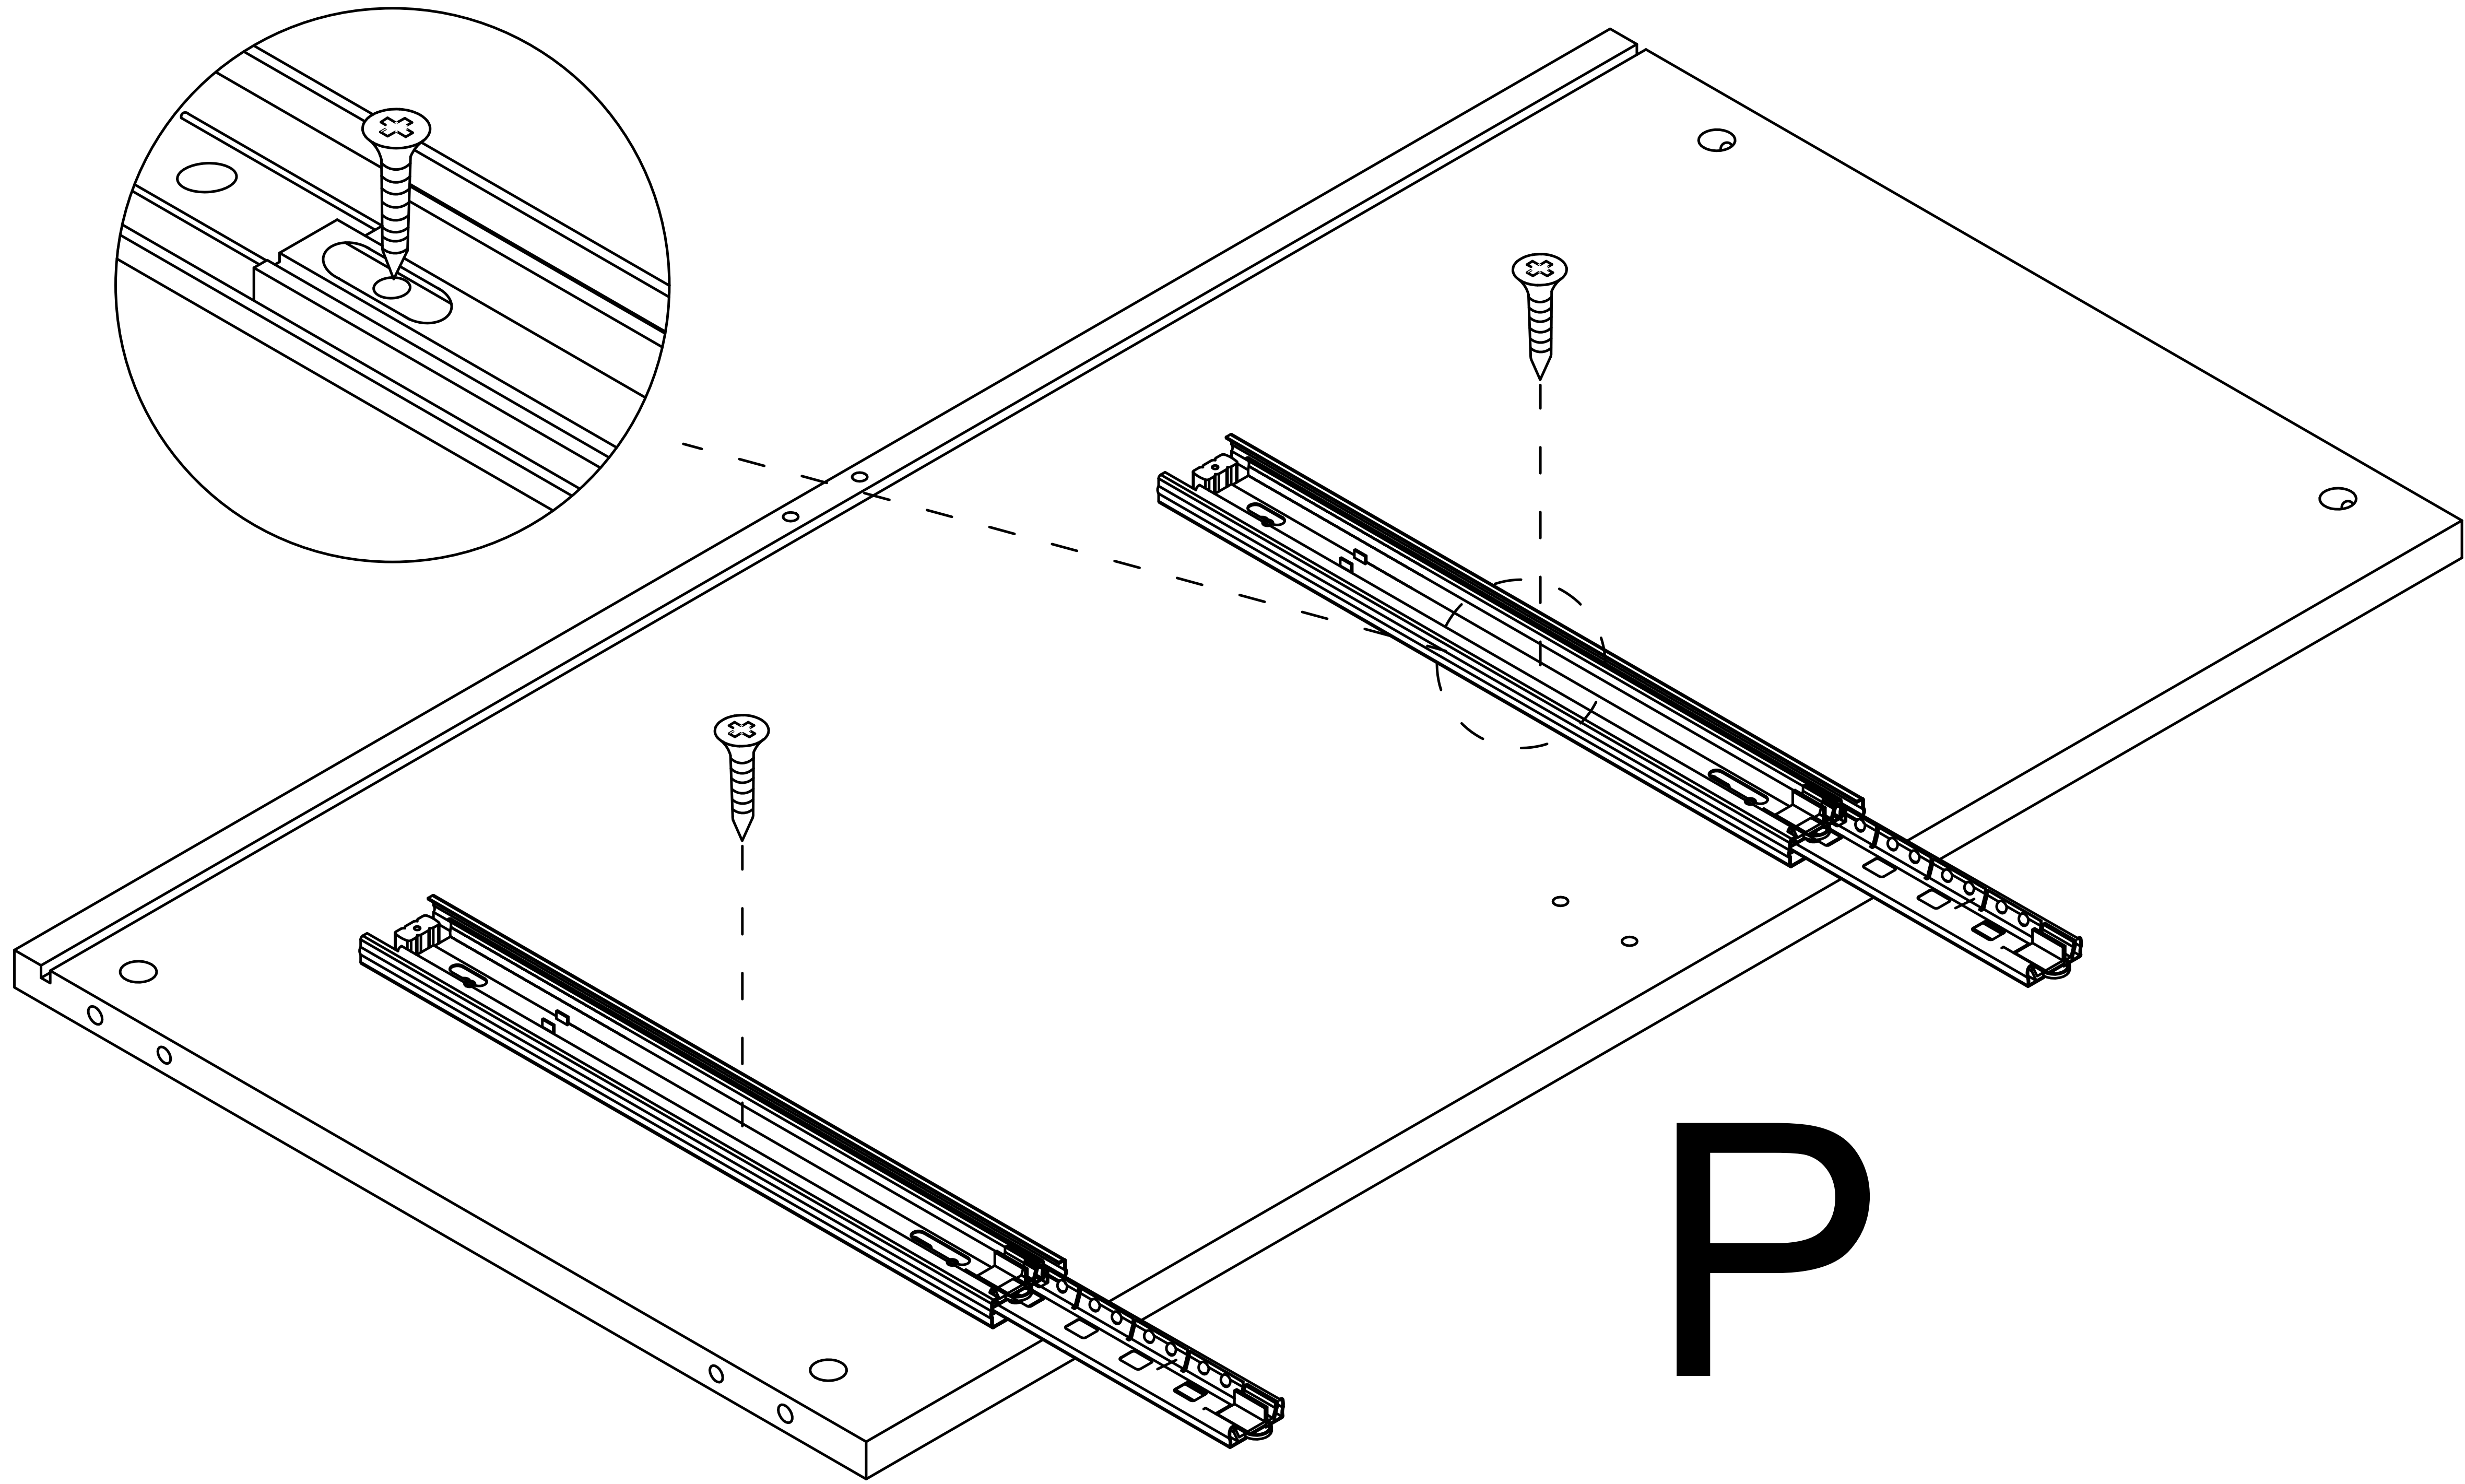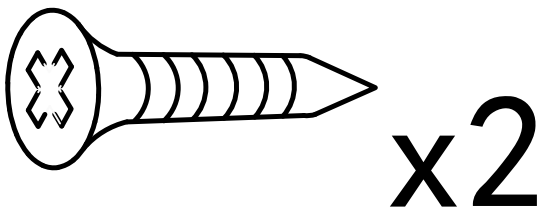

P

Step 31


1

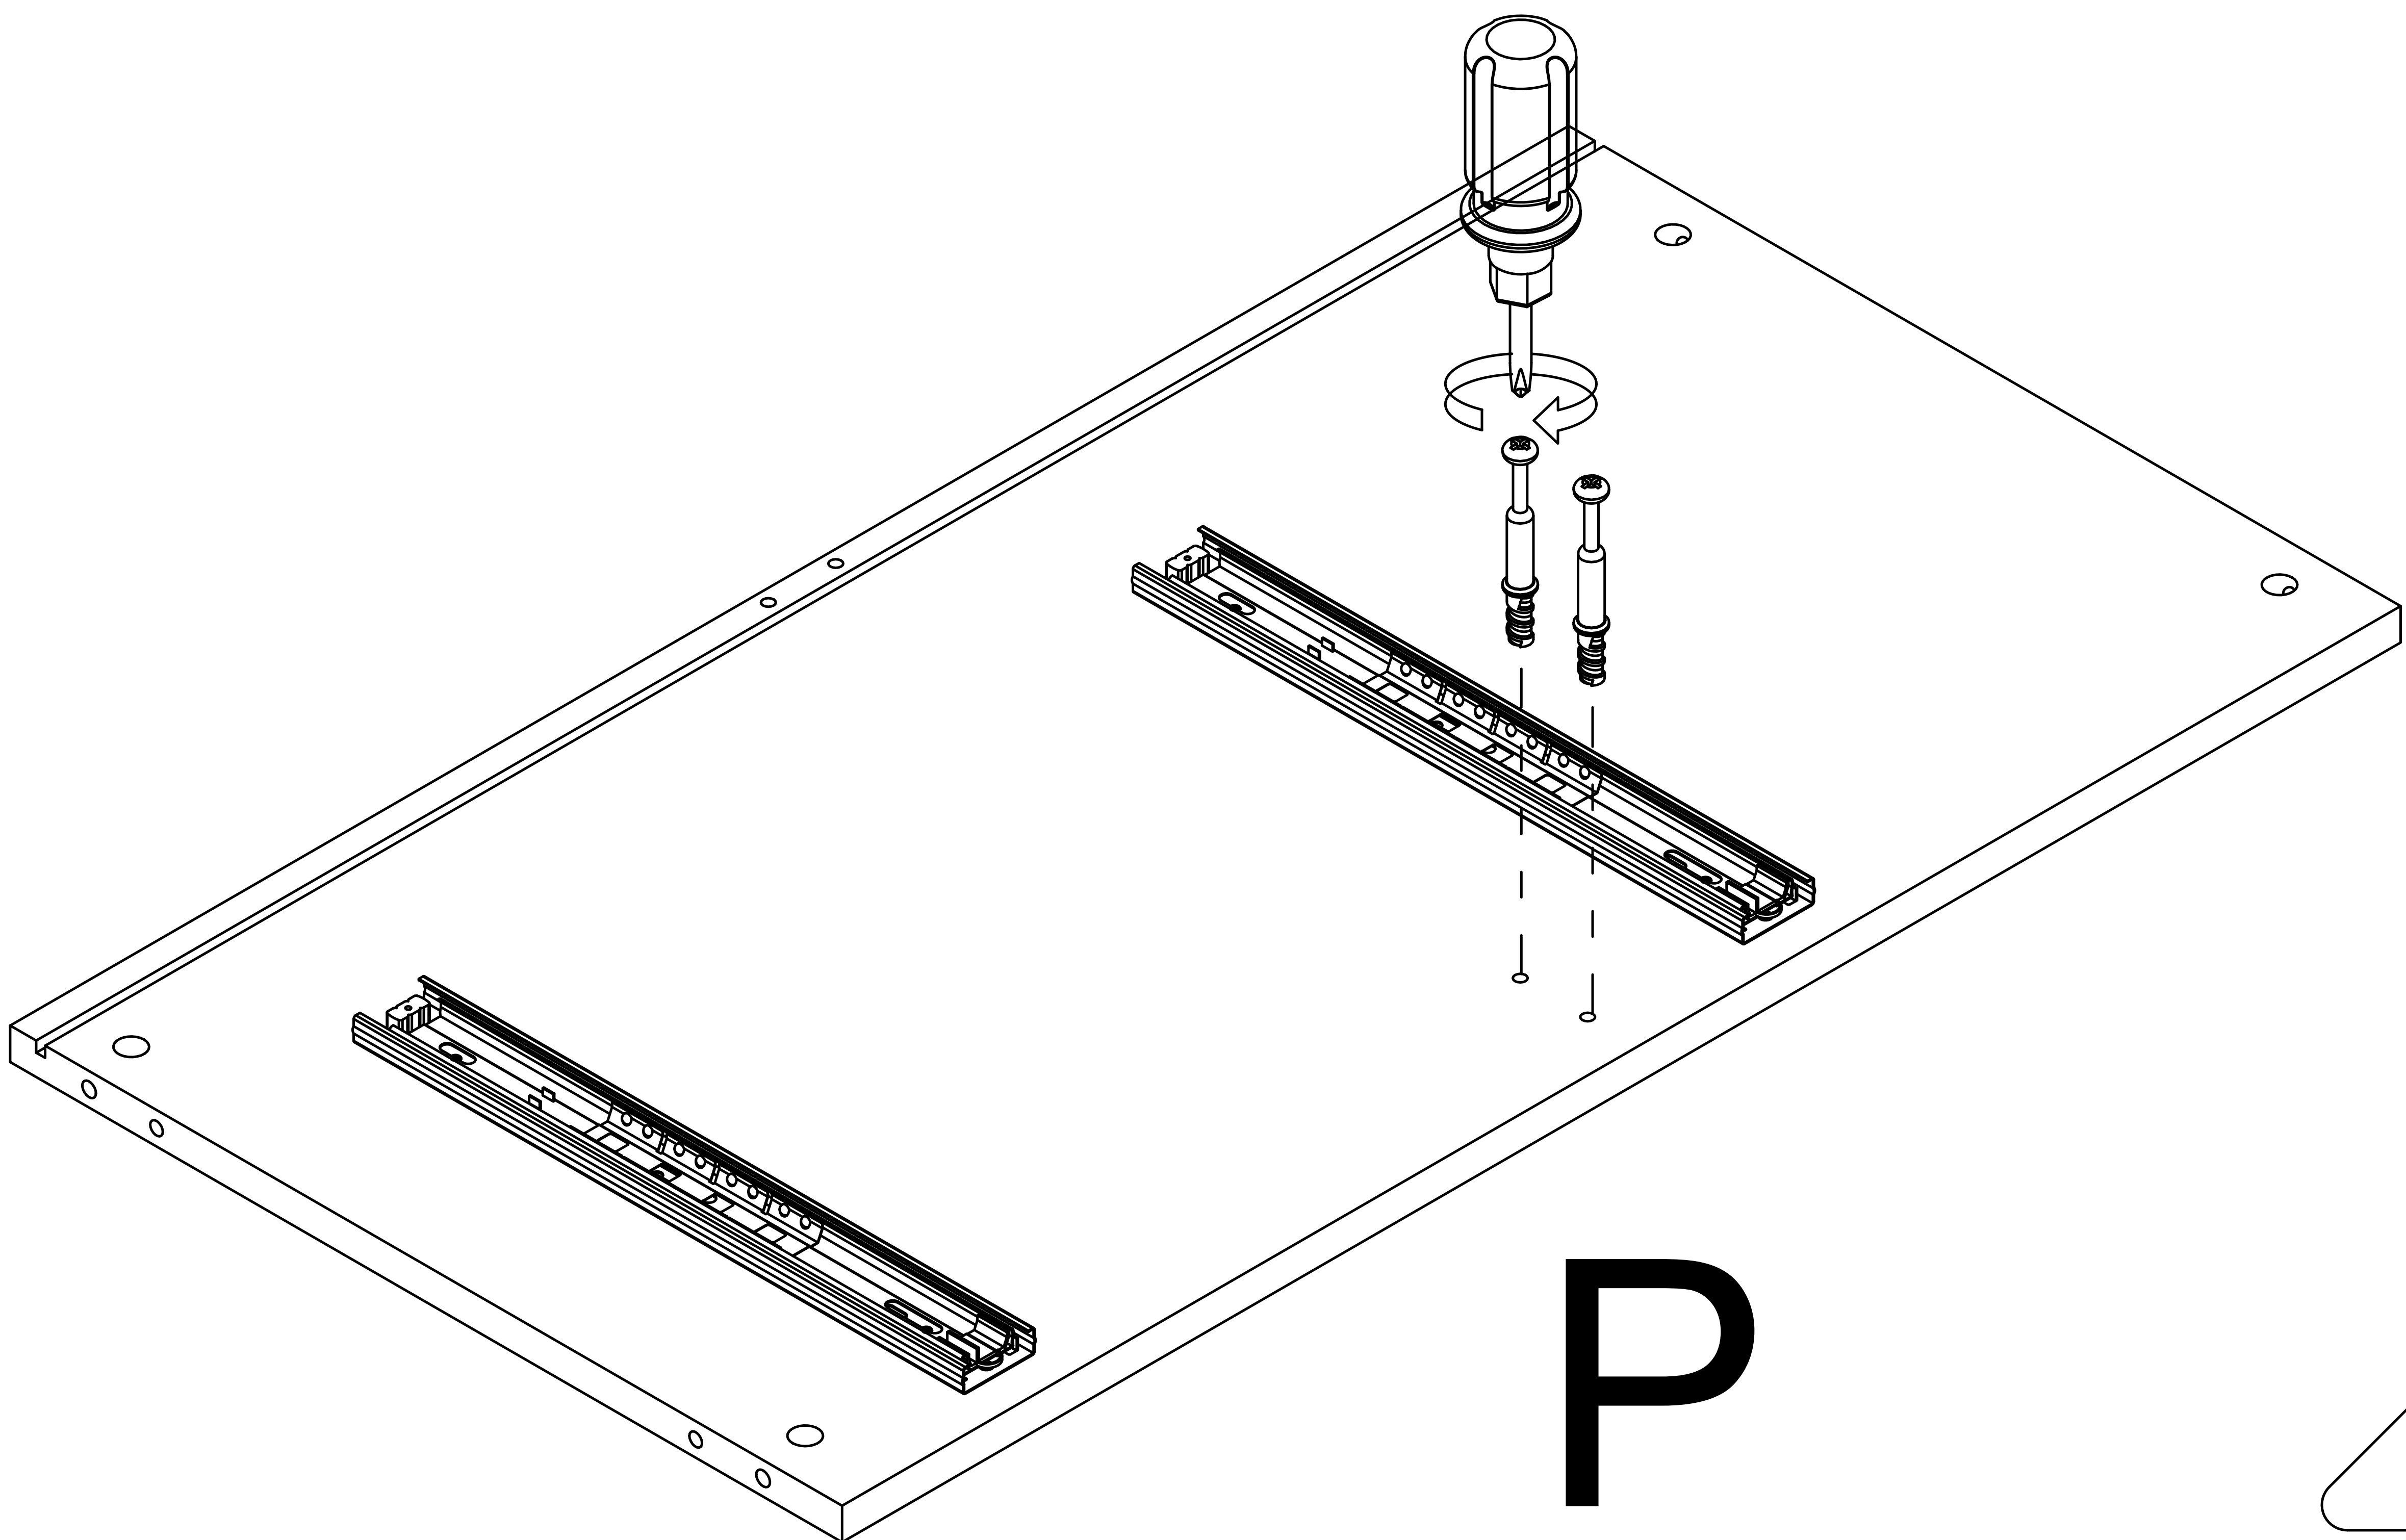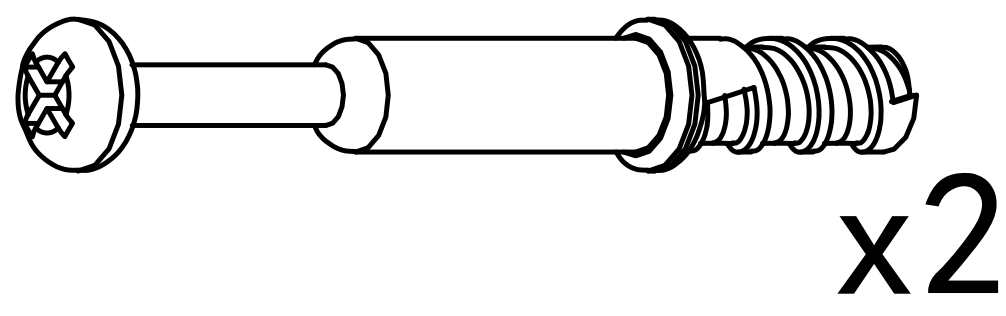


P

Step 32


- 2

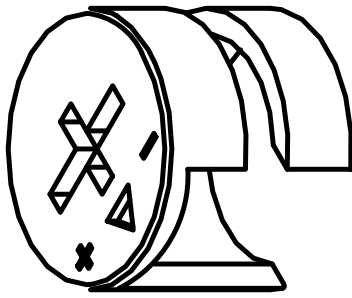

x2
- 8

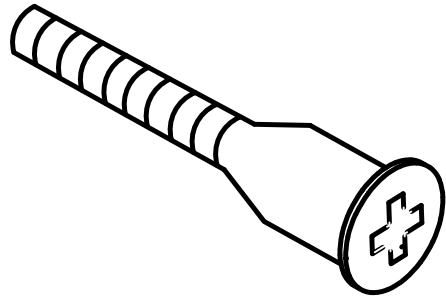

x2

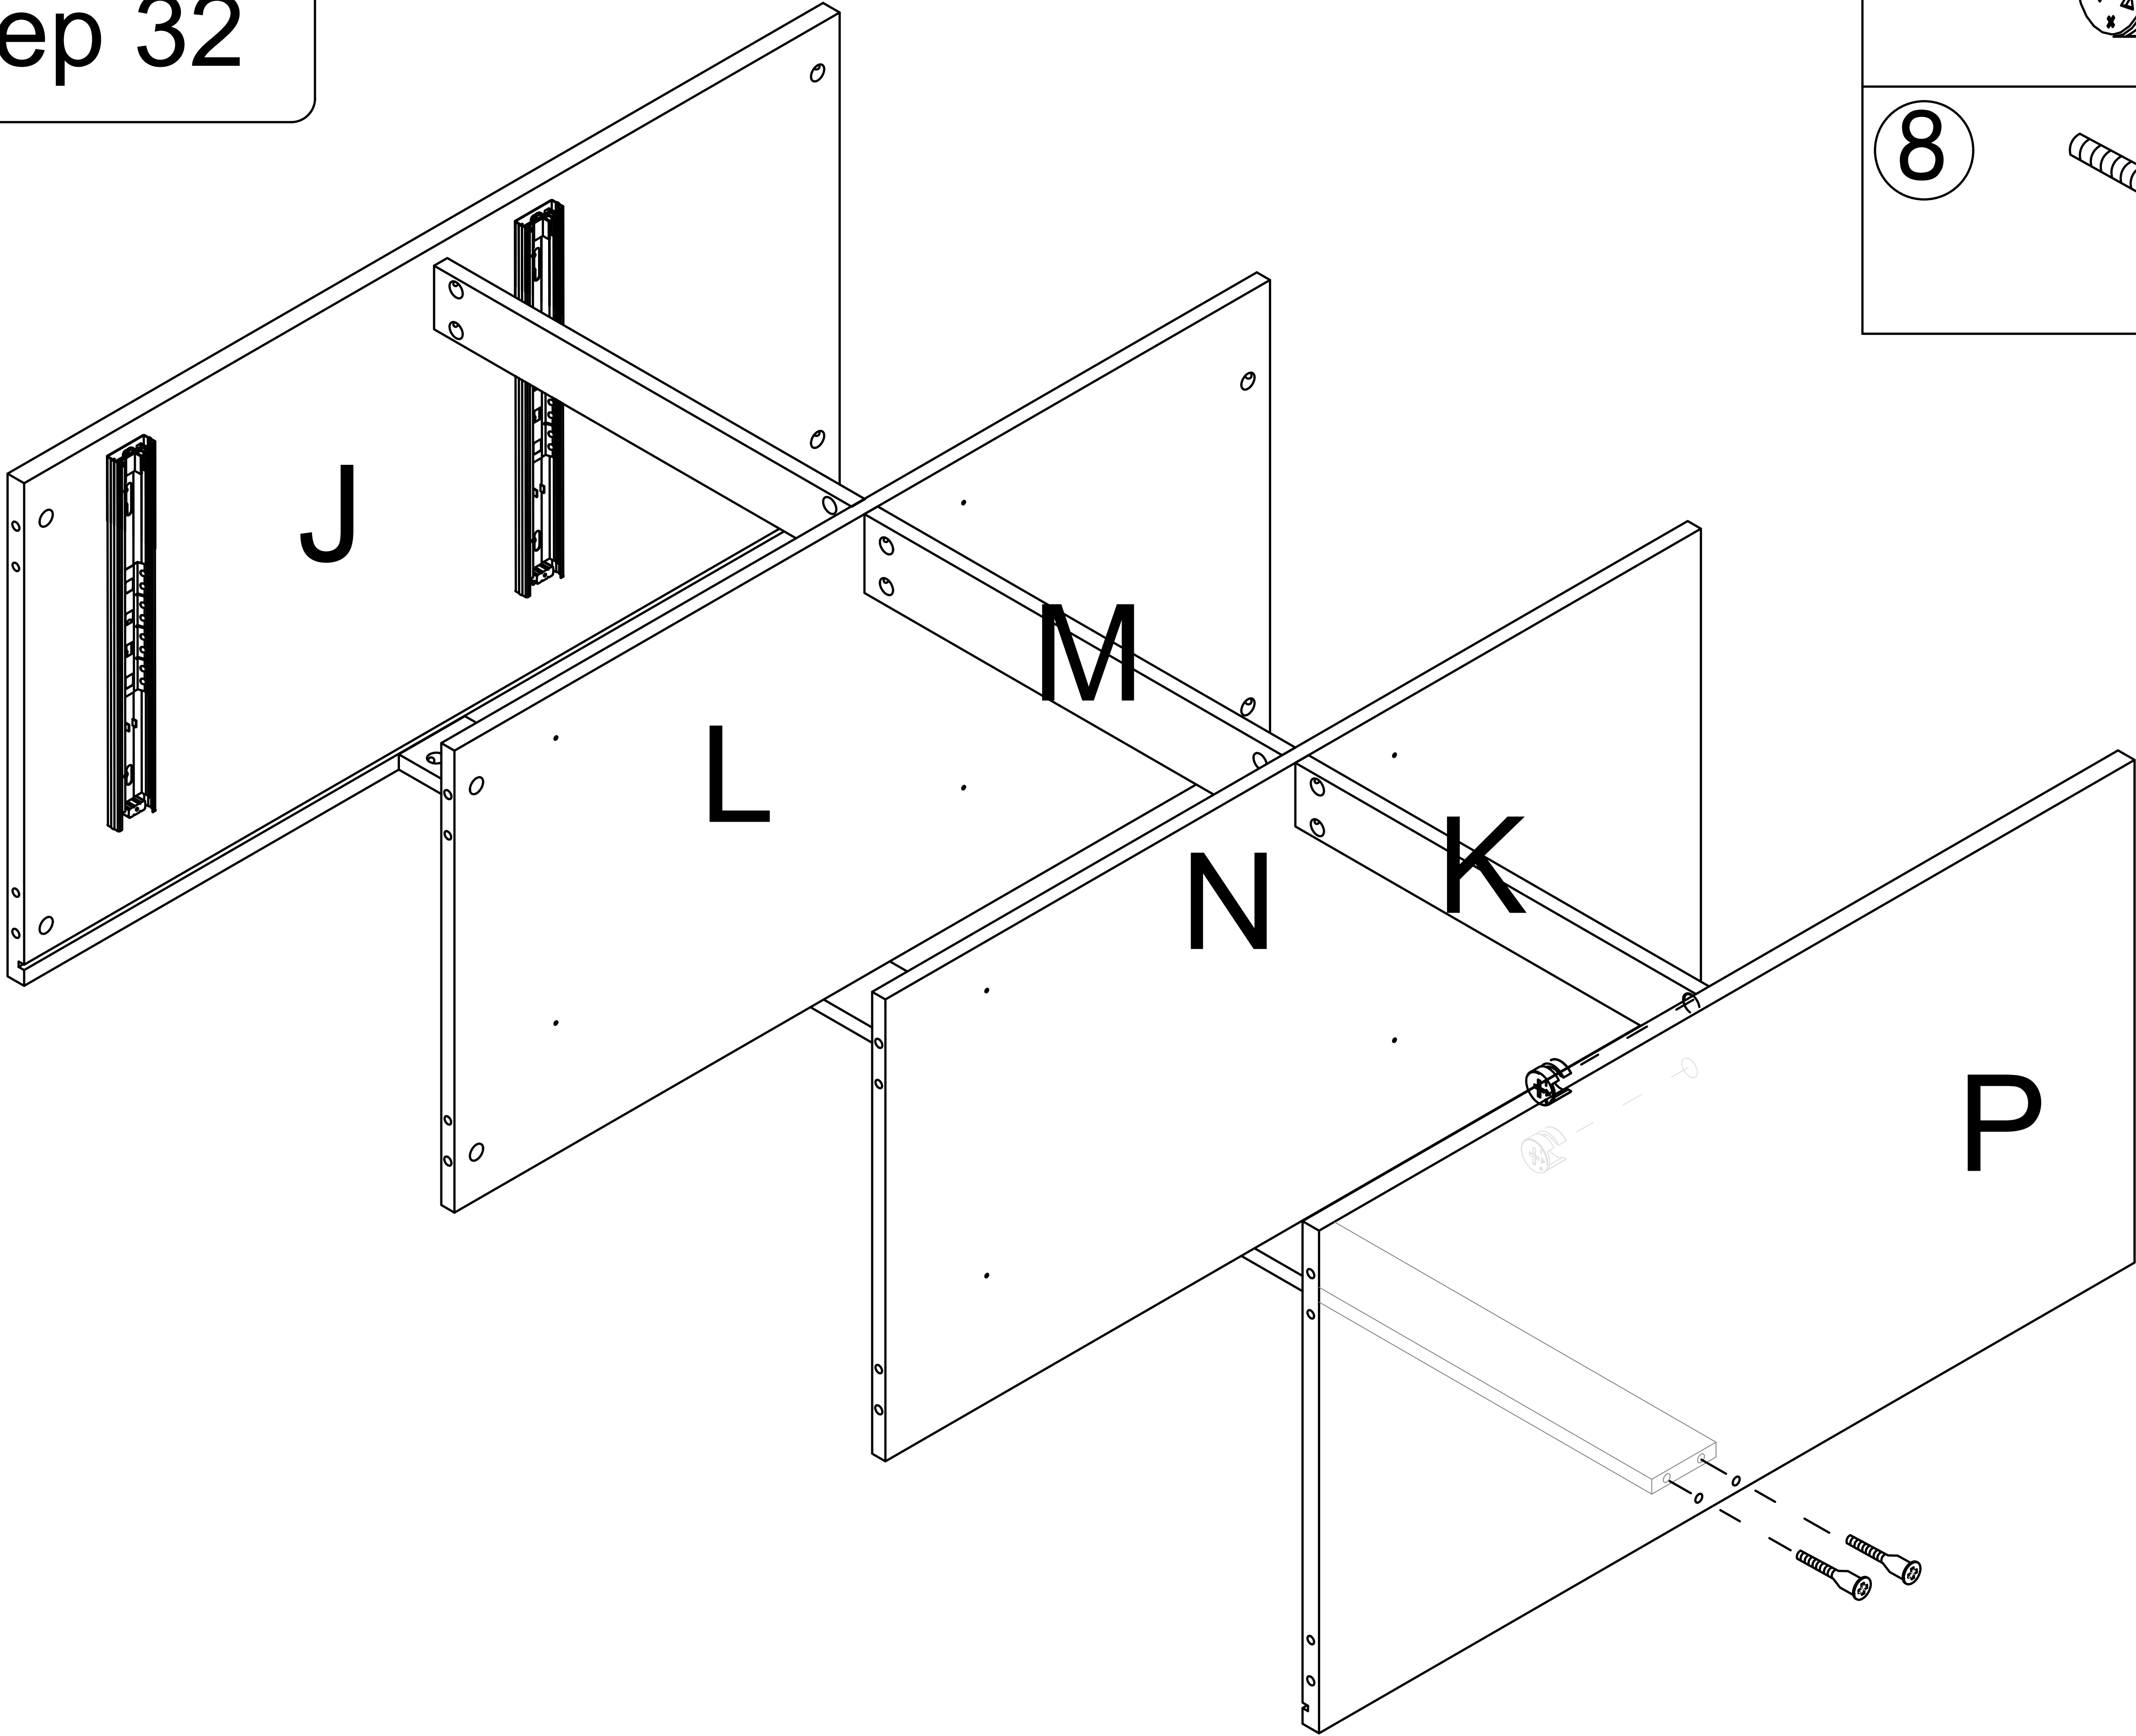


Step 33

- 3




x8

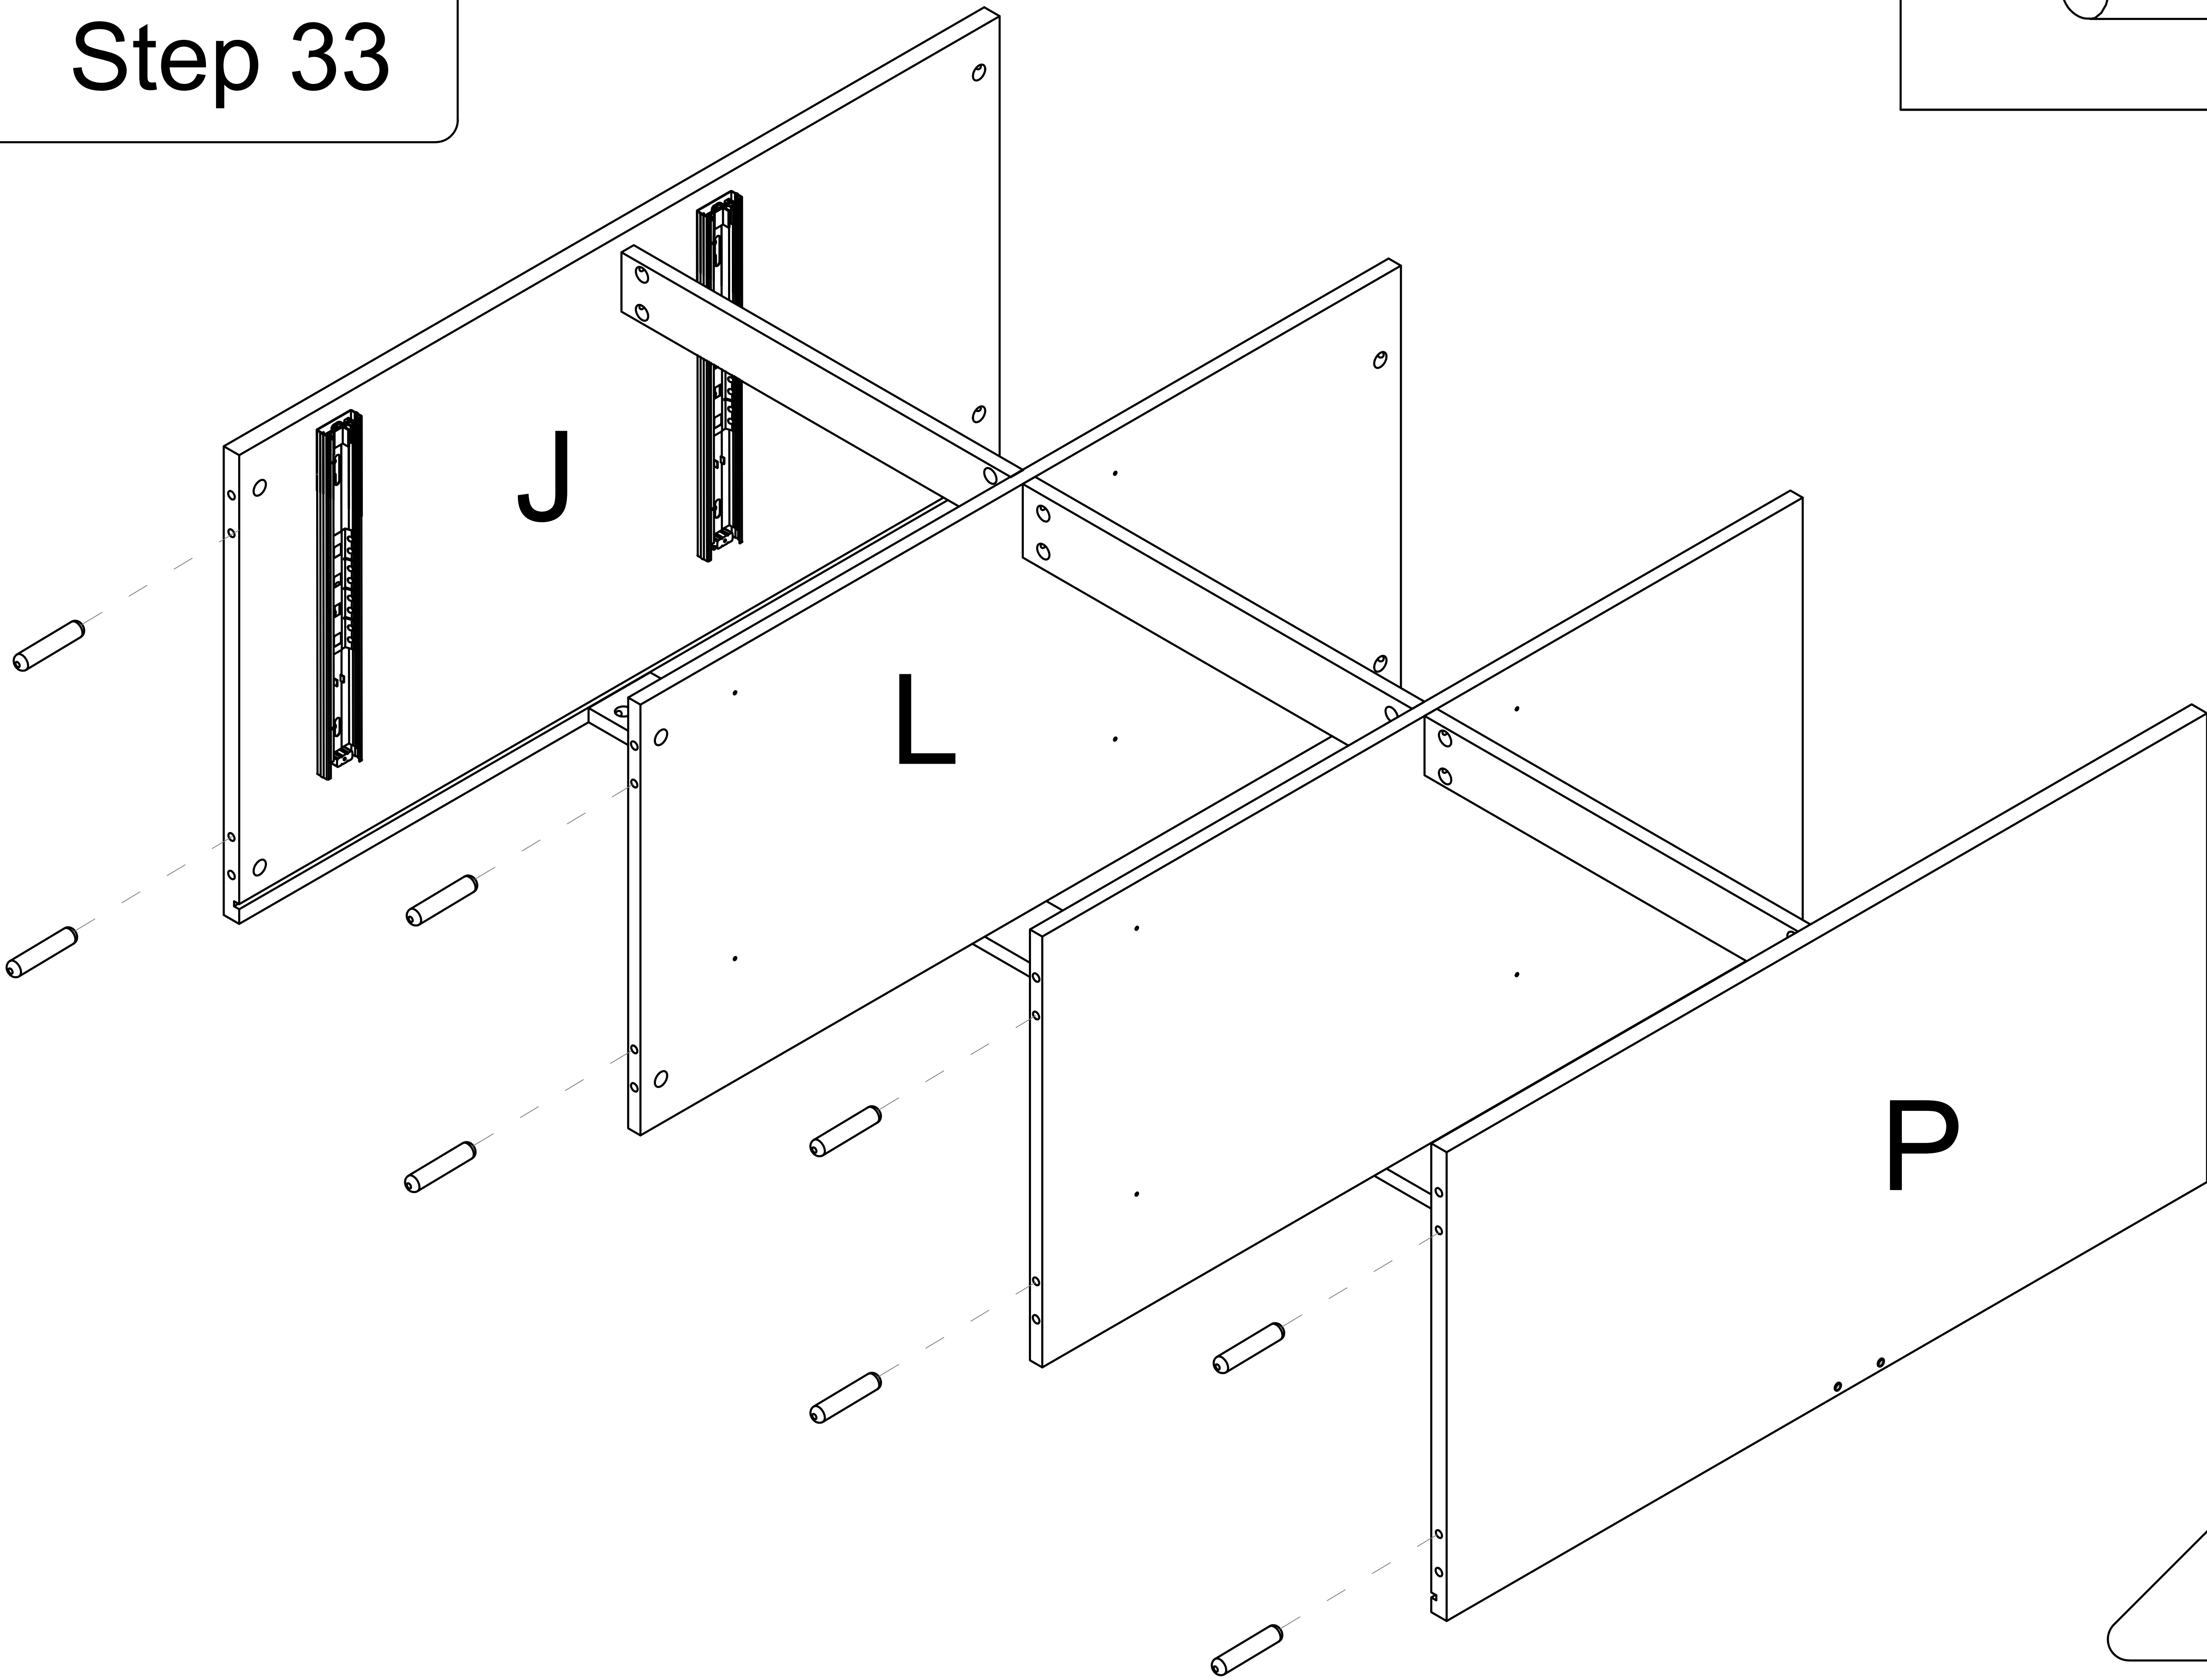


Step 34


2

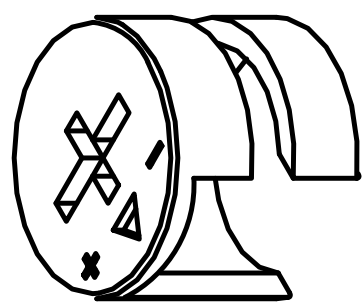


x8

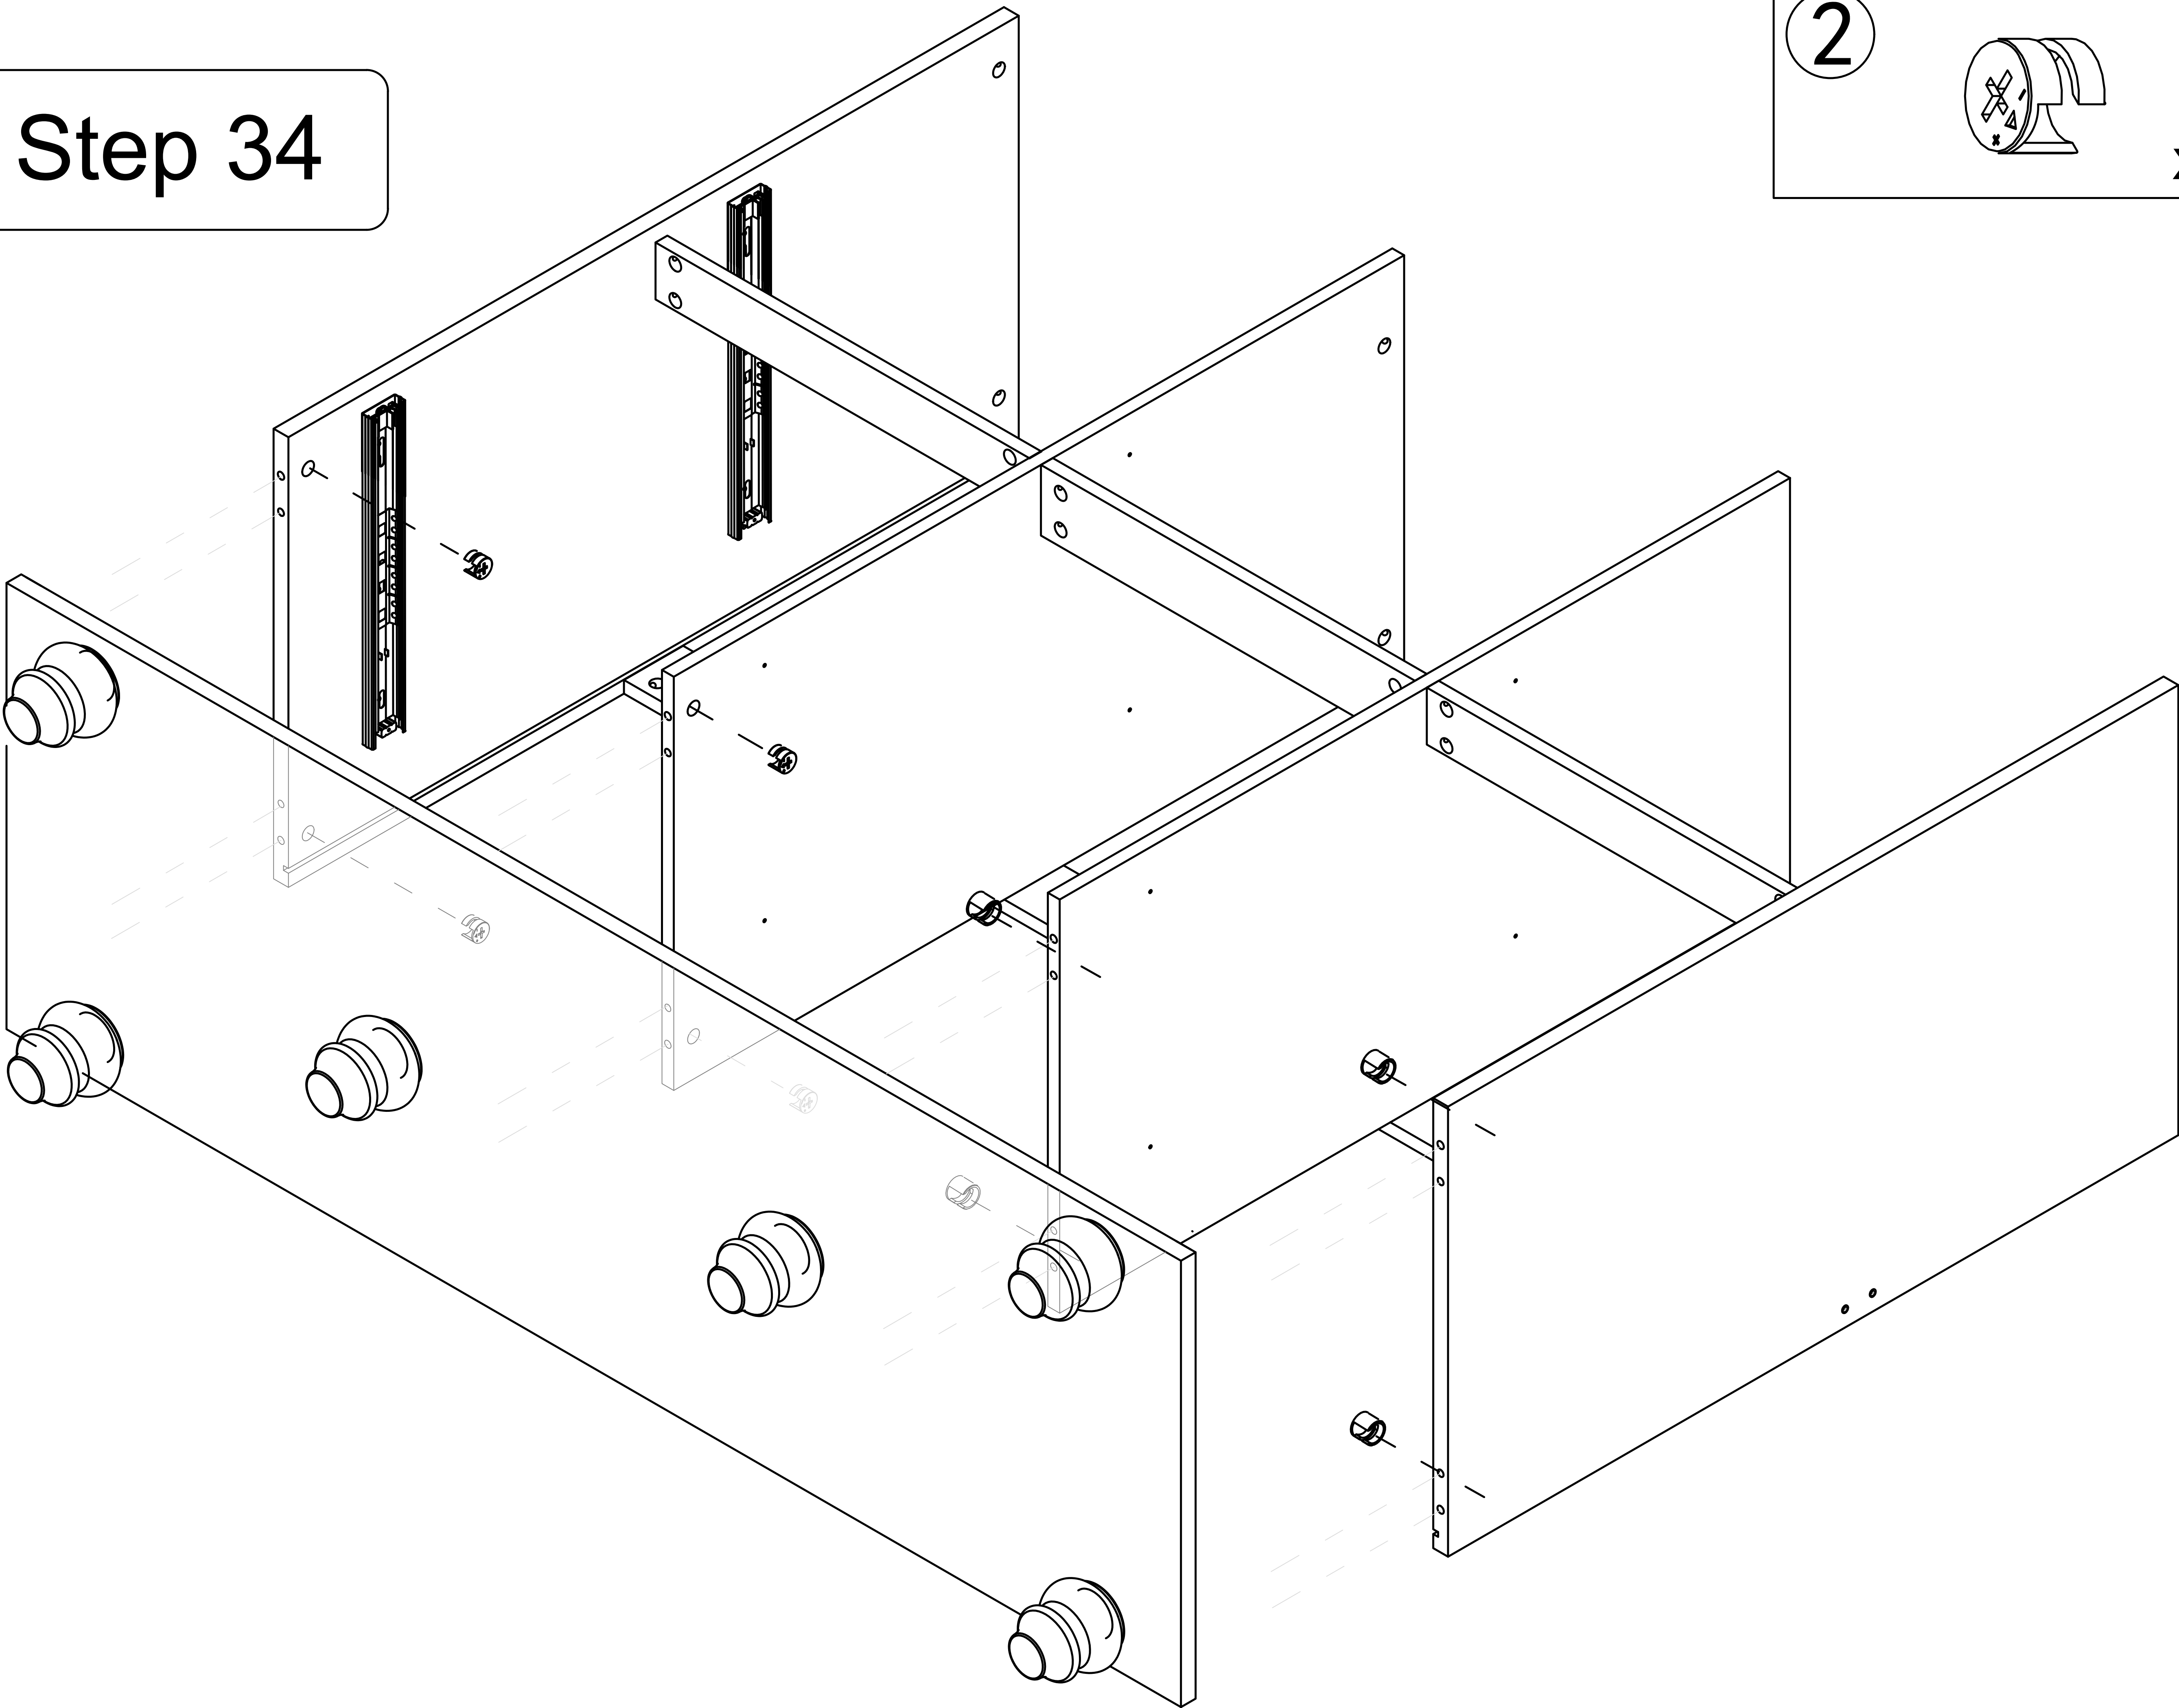

Step 35

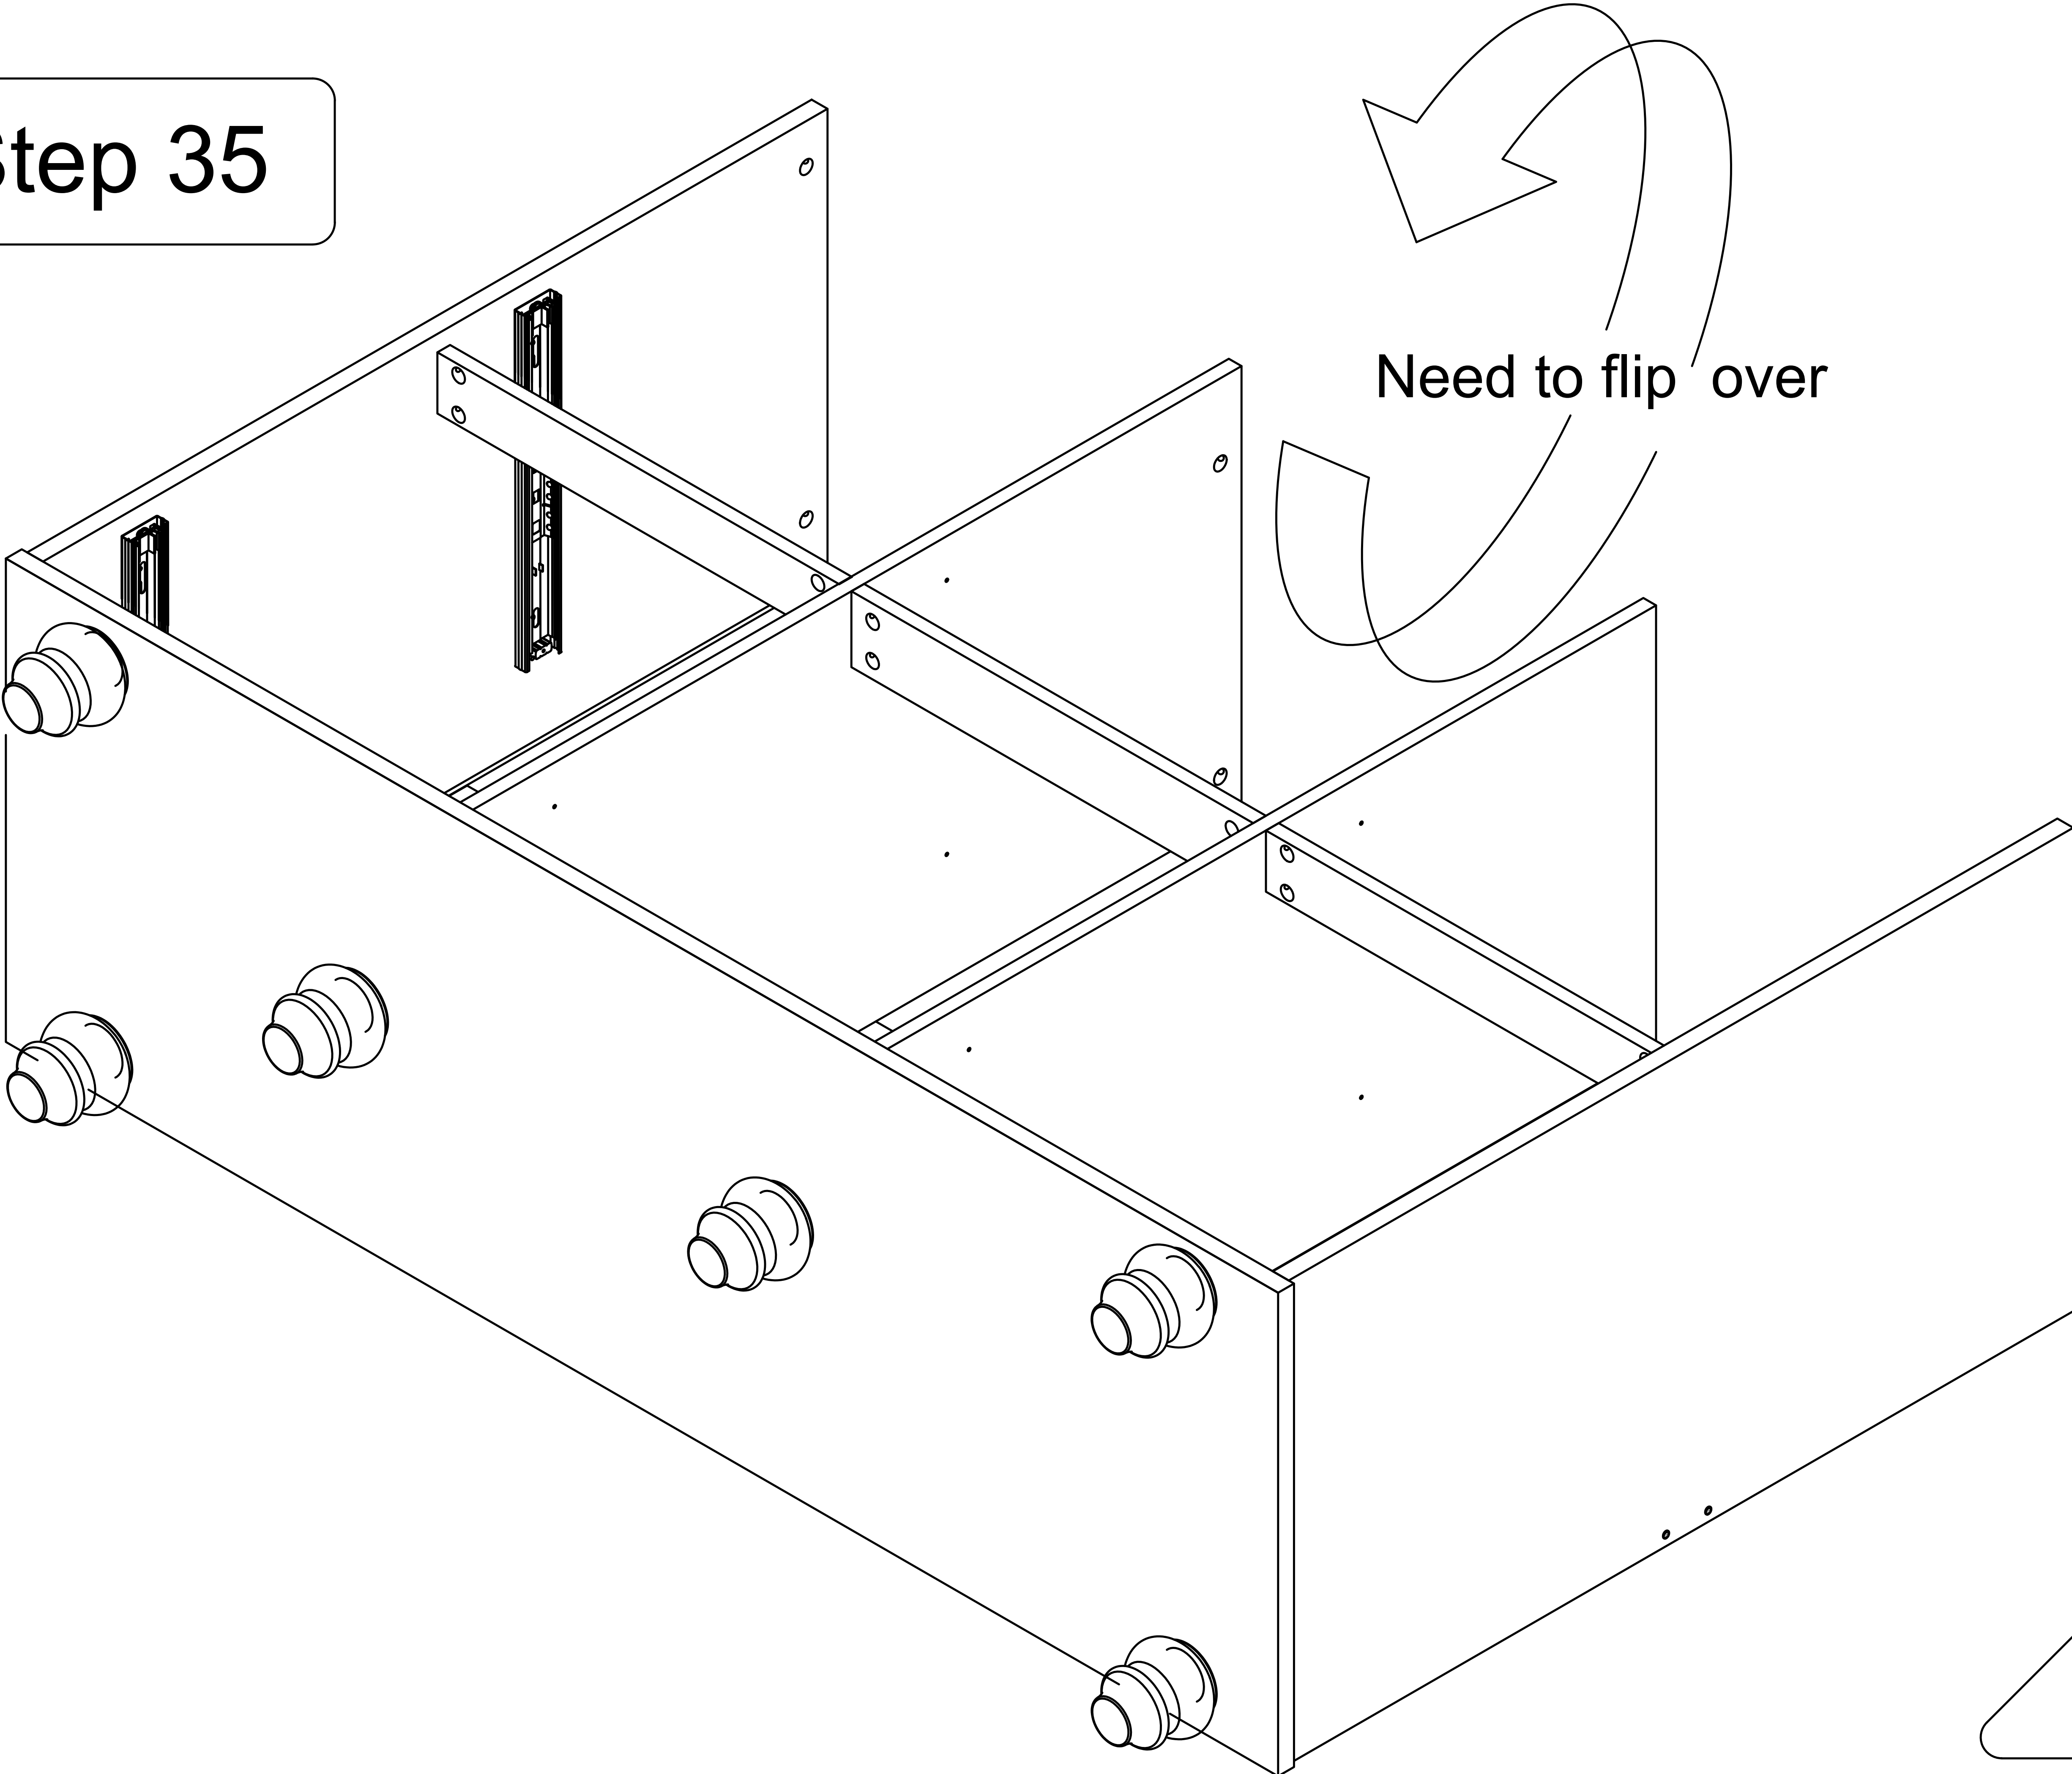

Step 36

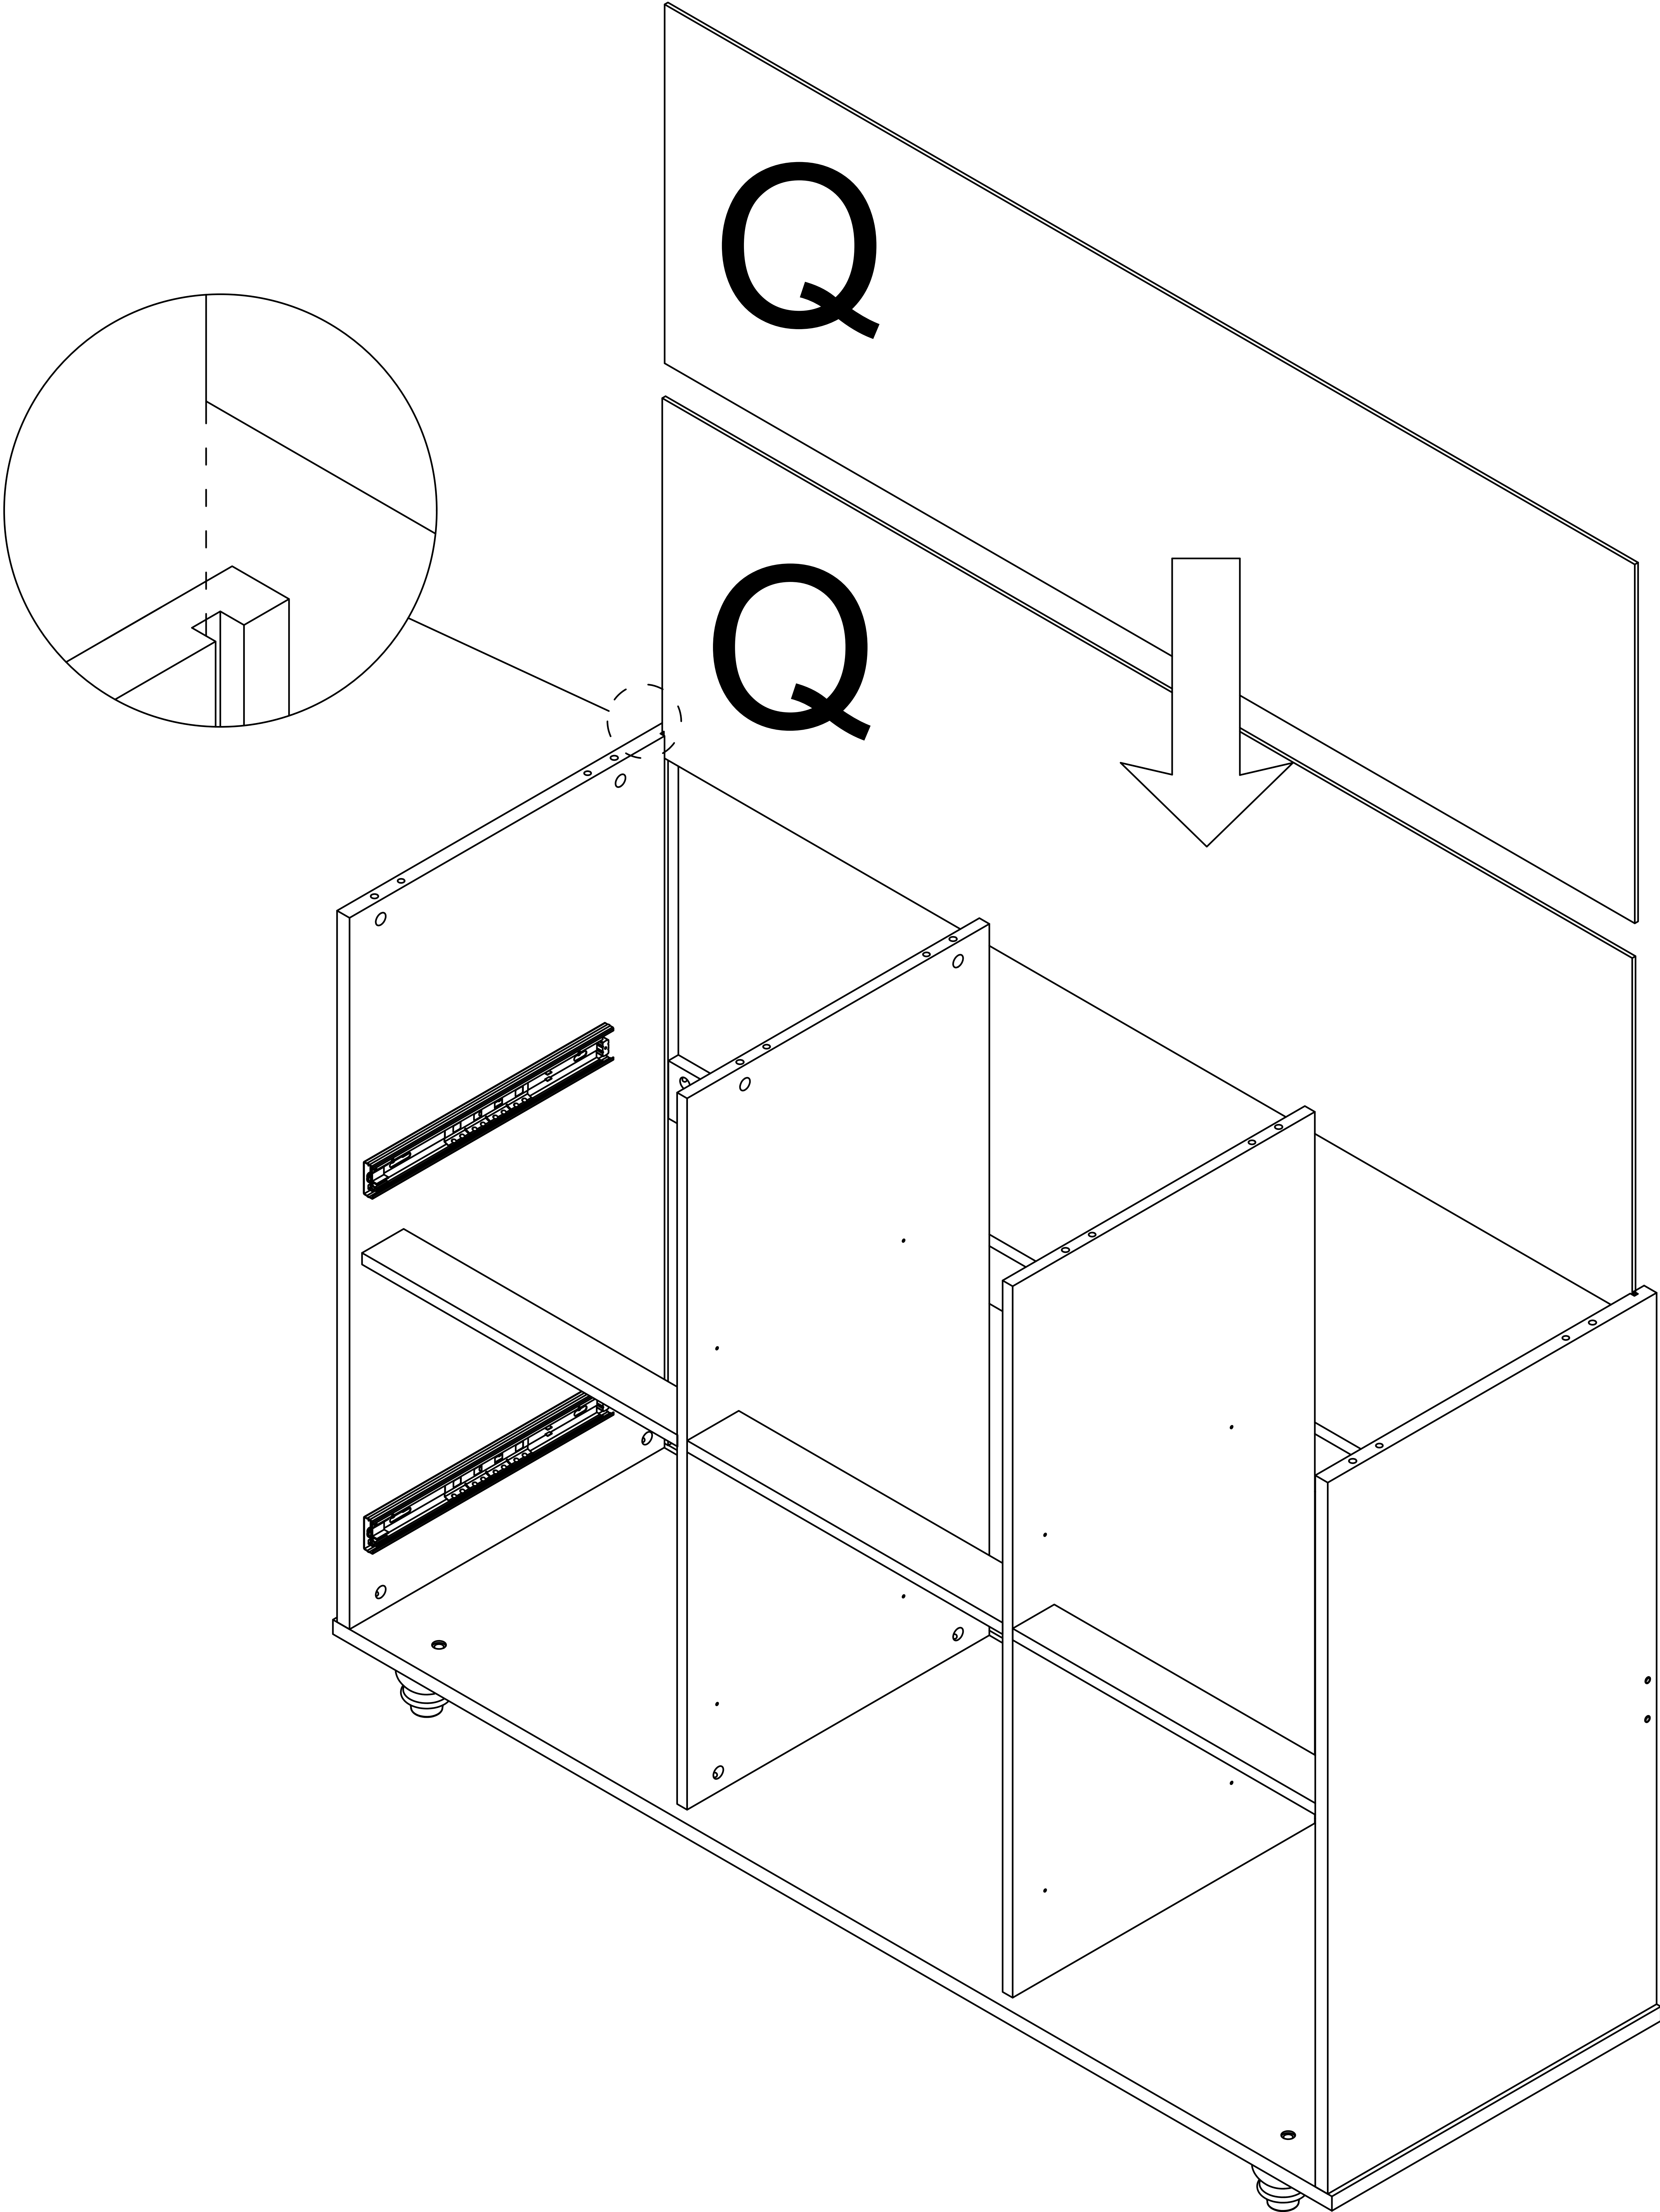


Step 37

3




x8

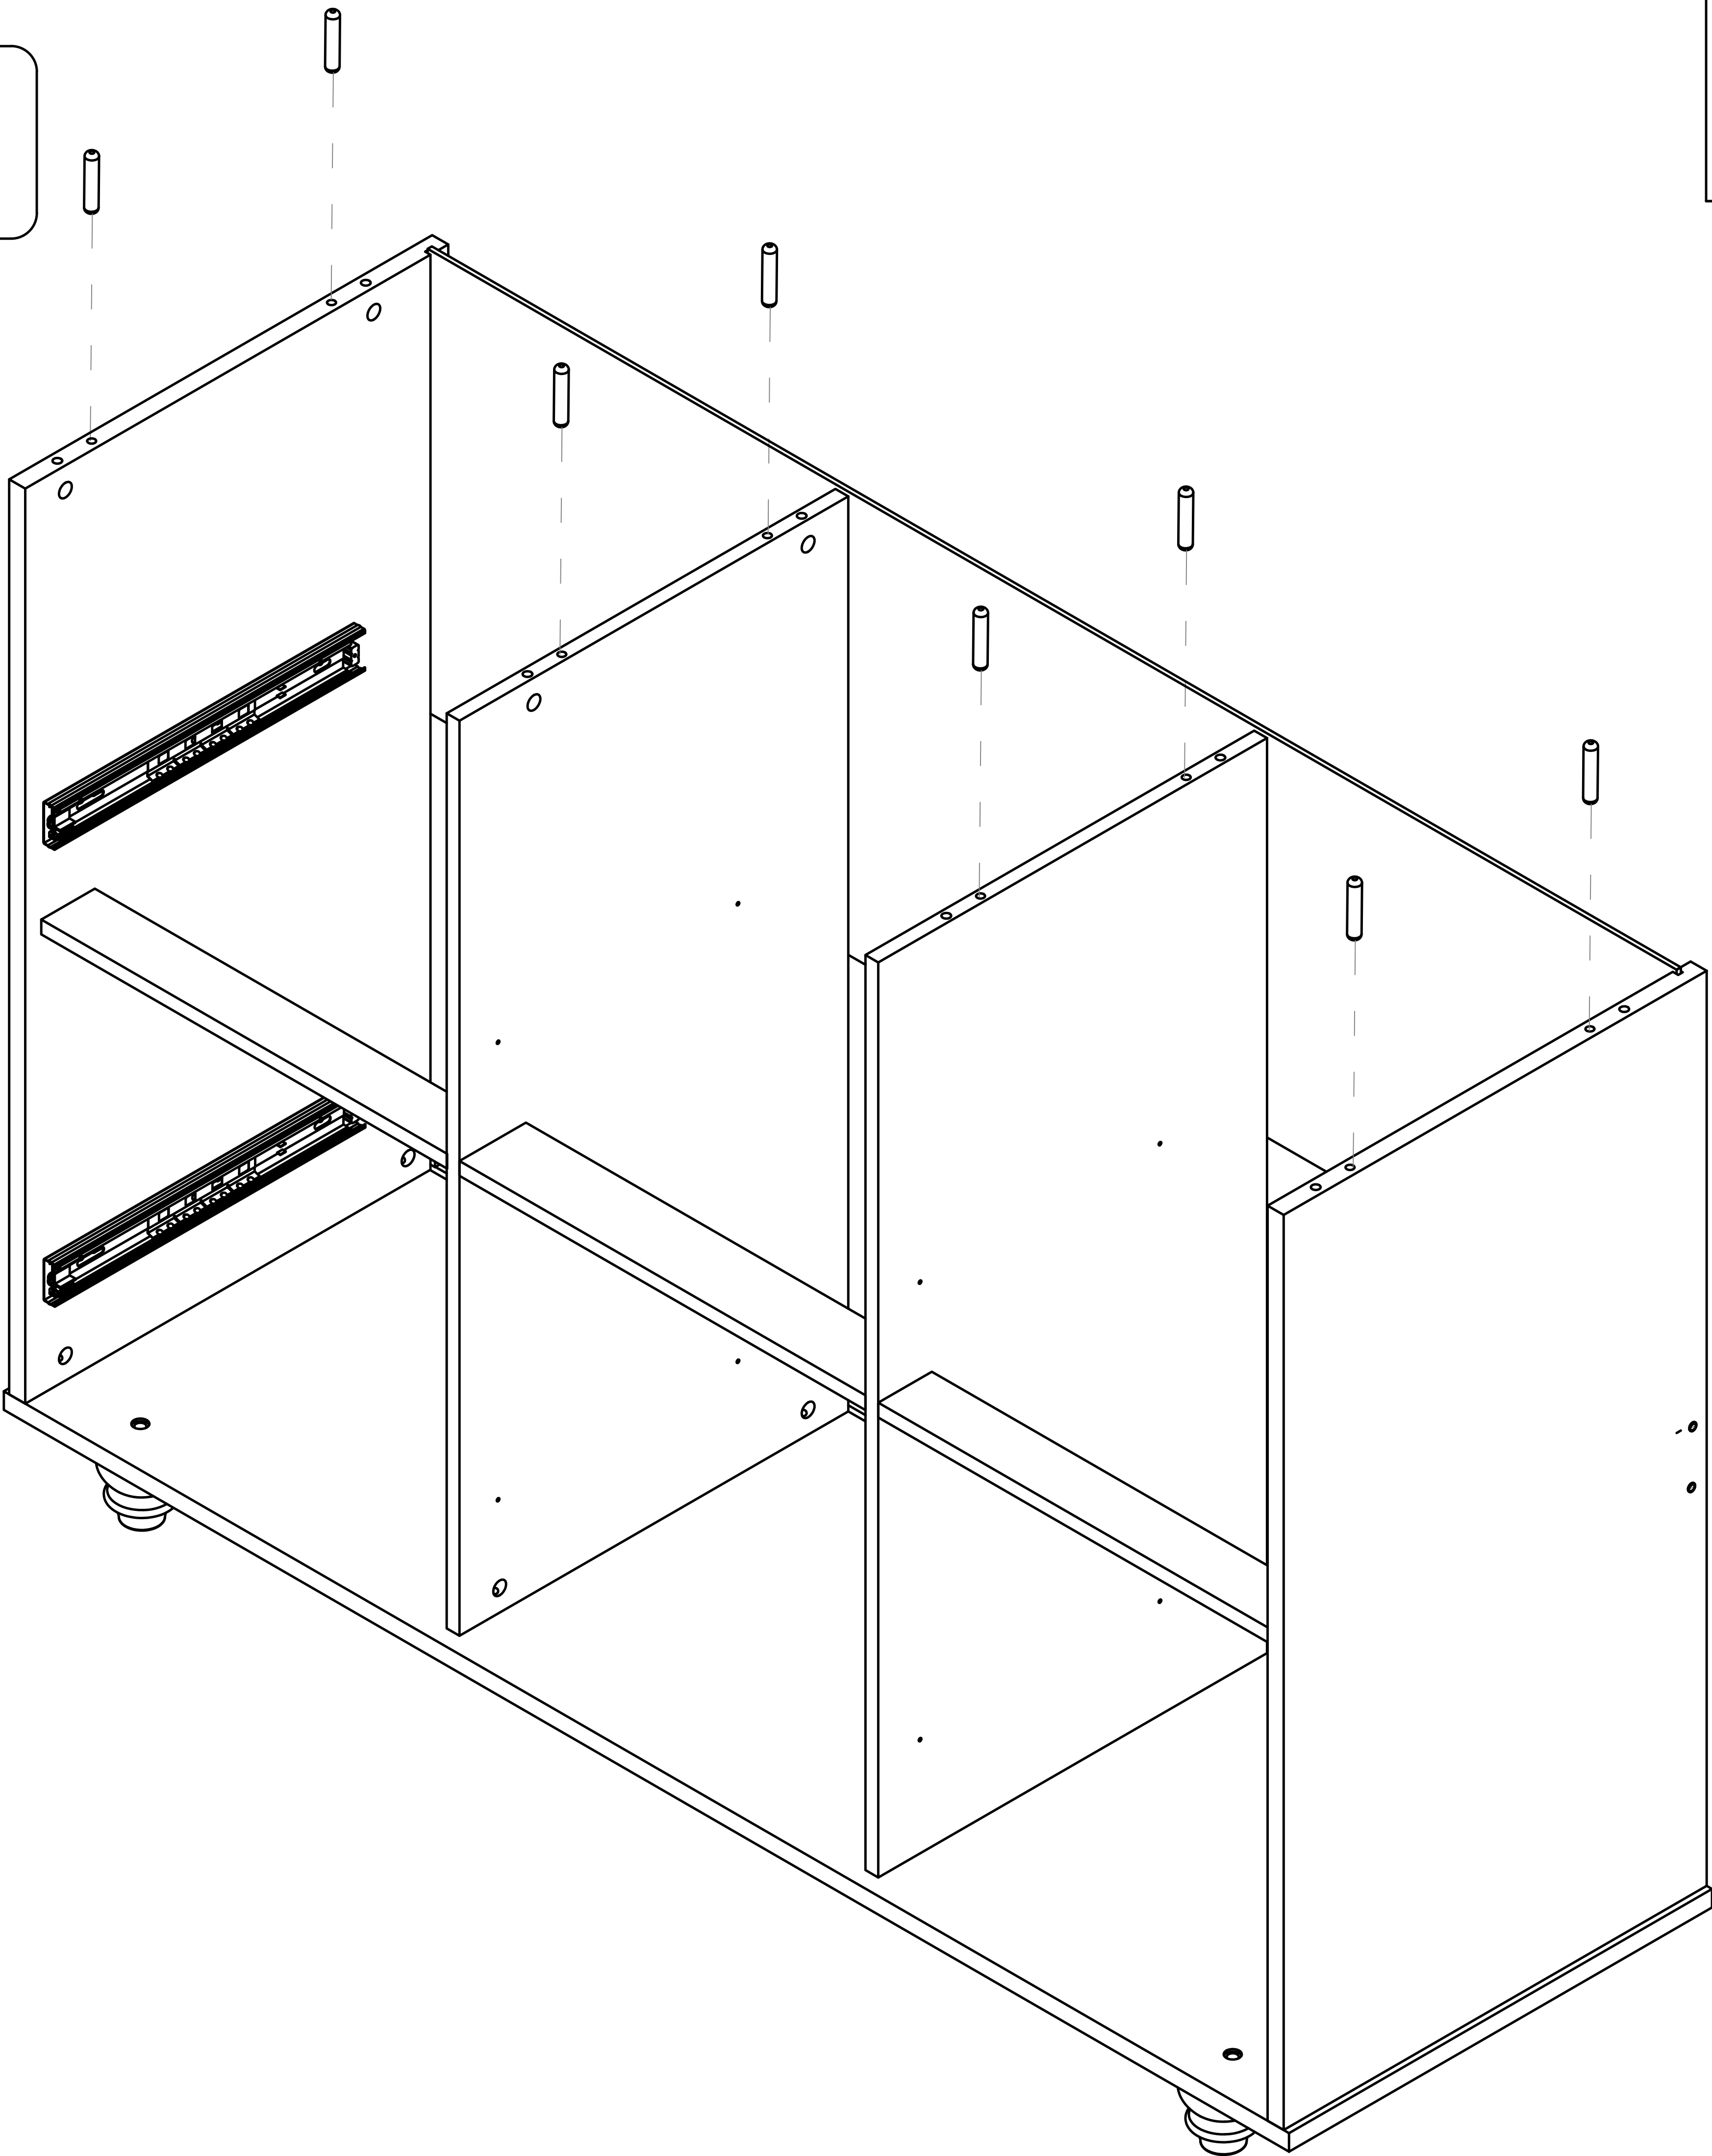

Step 38

1

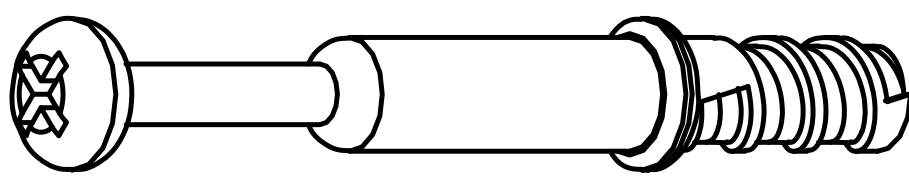


x8




Step 39



2

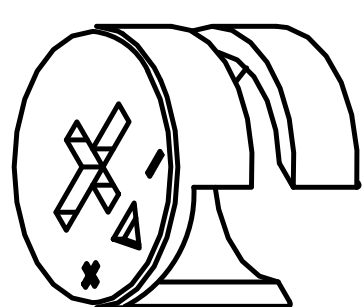


x8

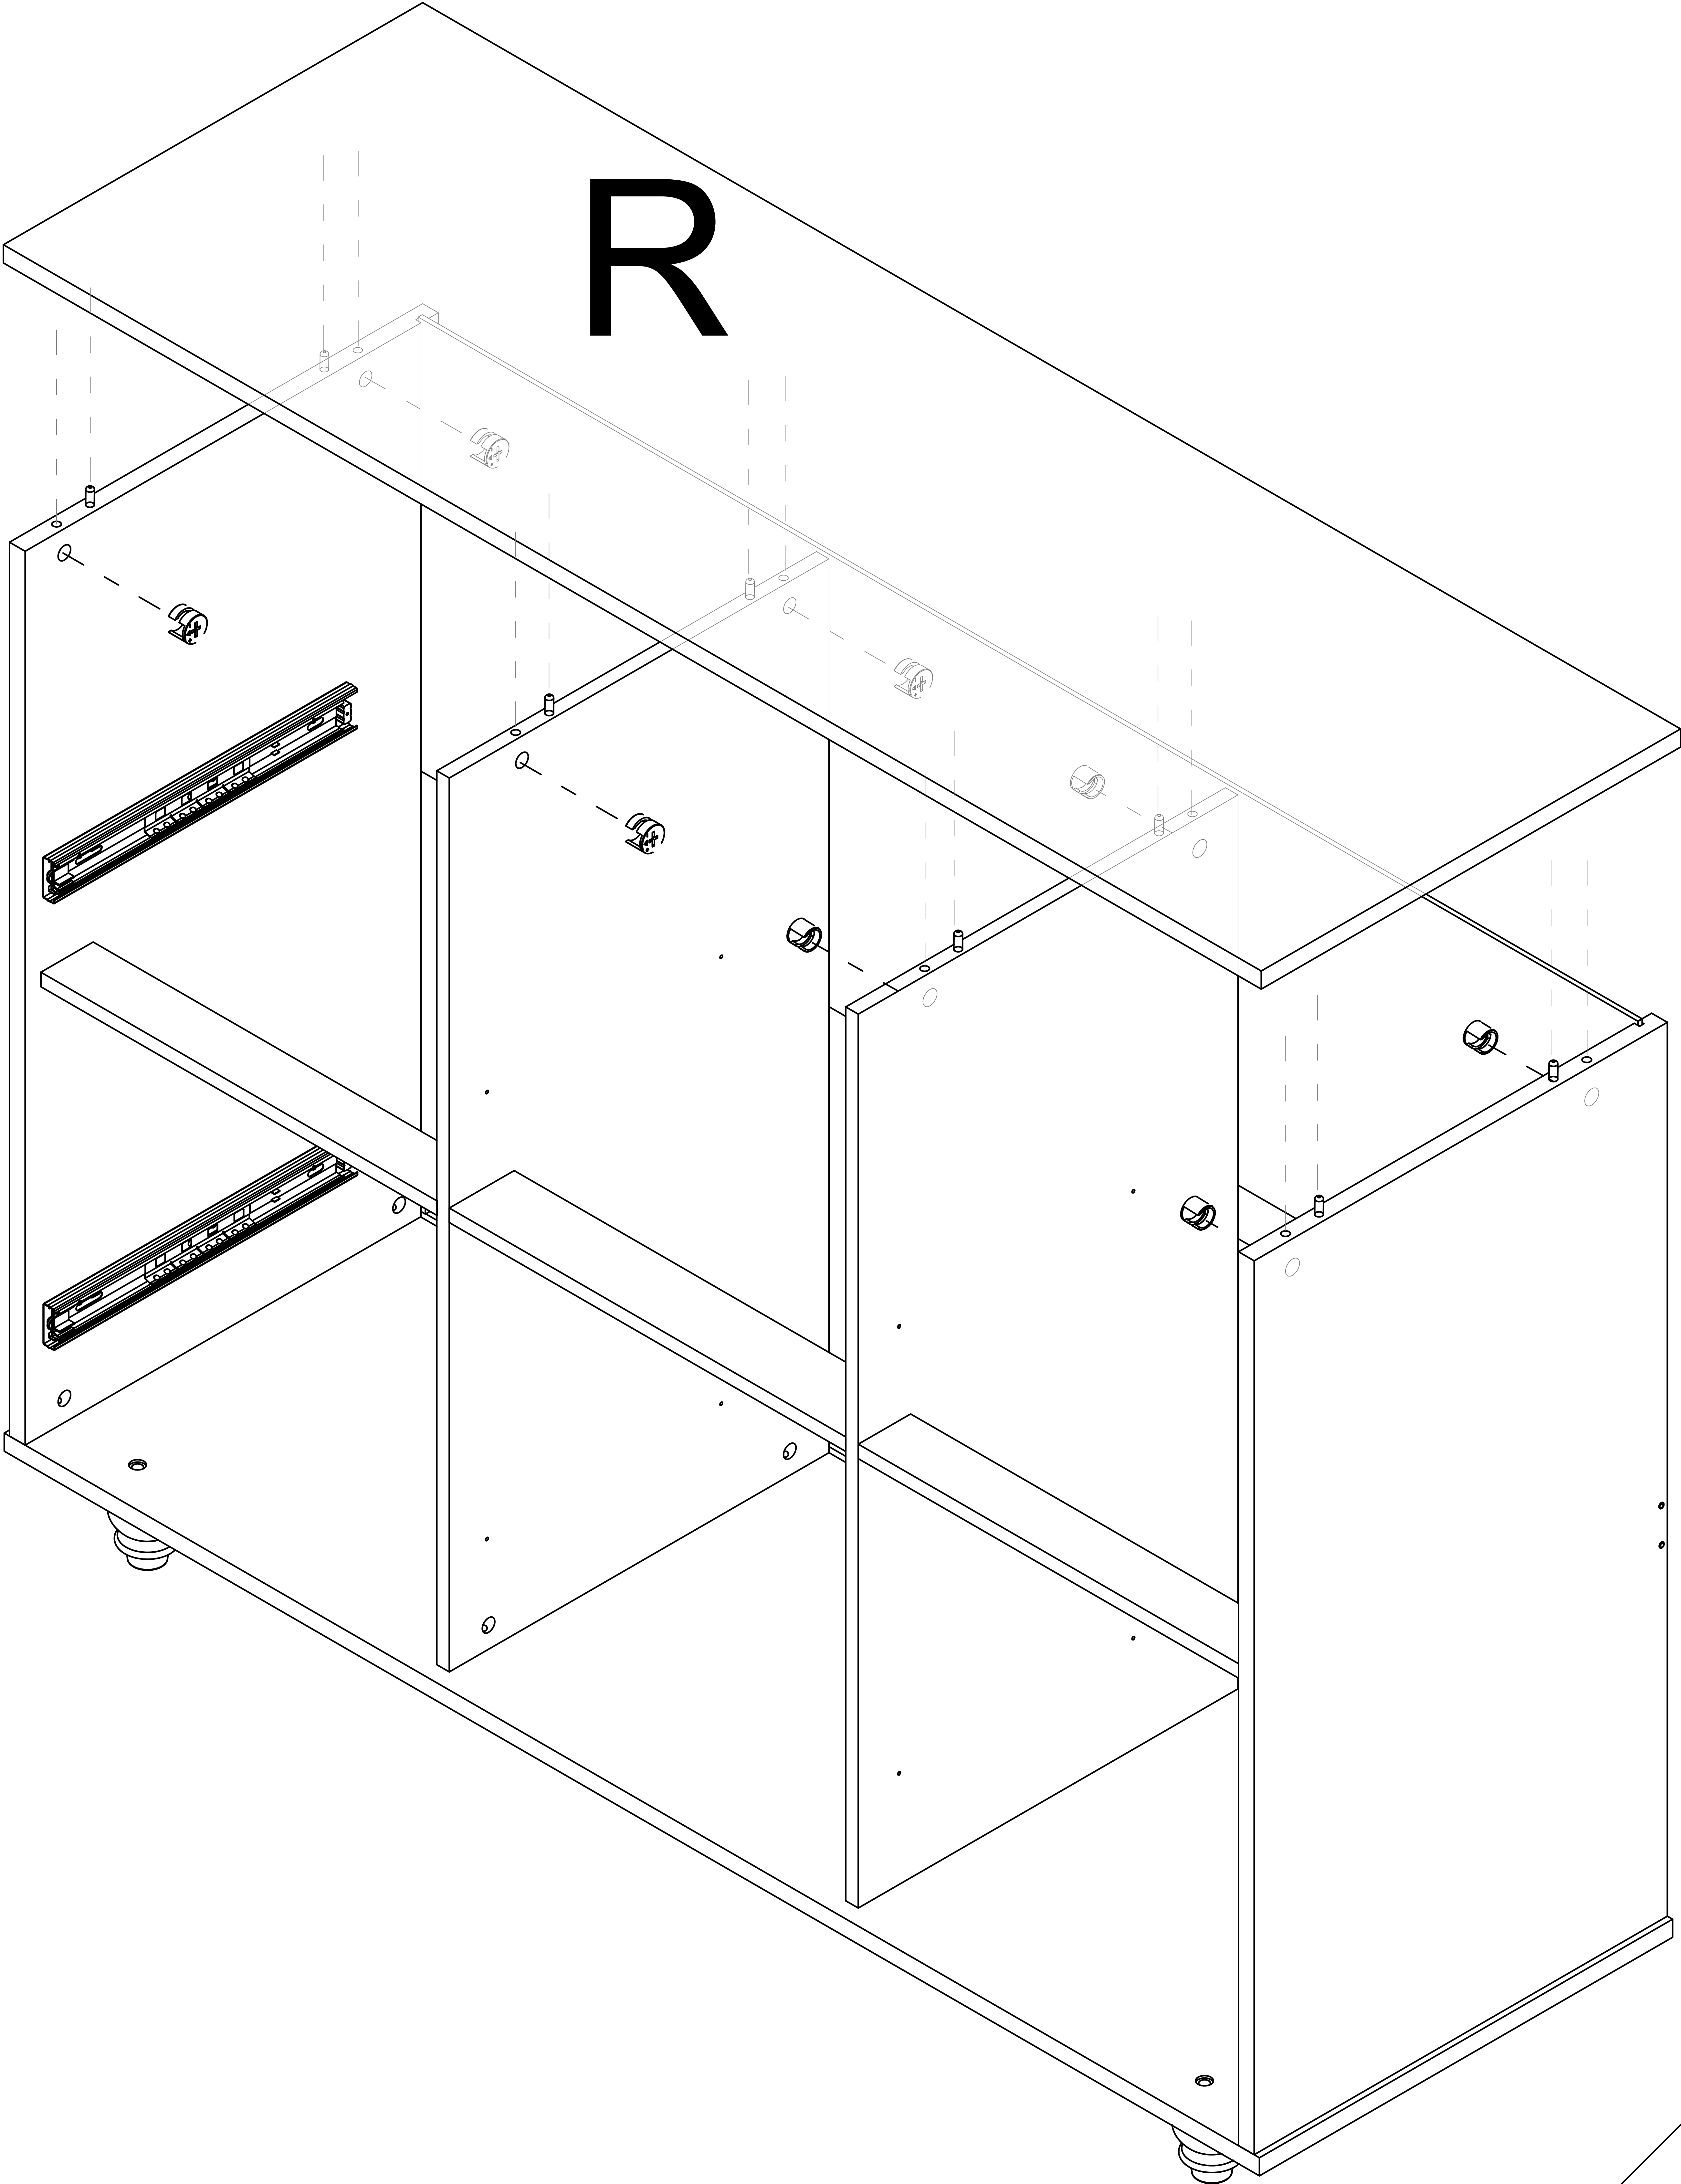



Step 40

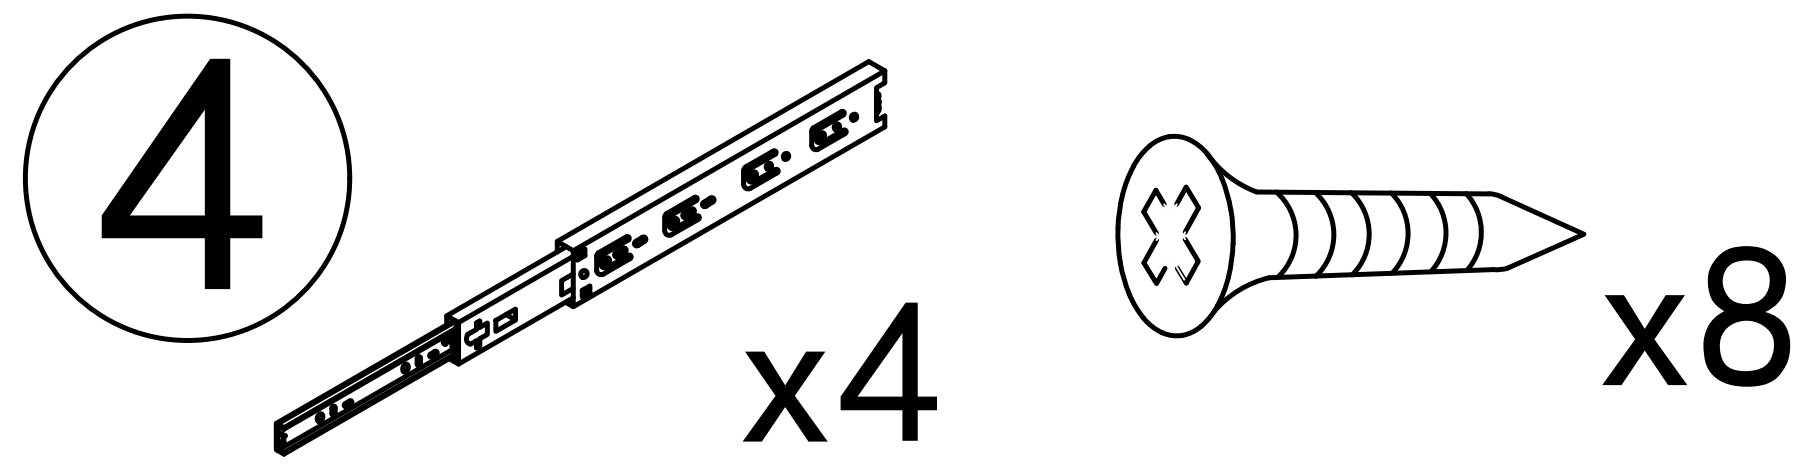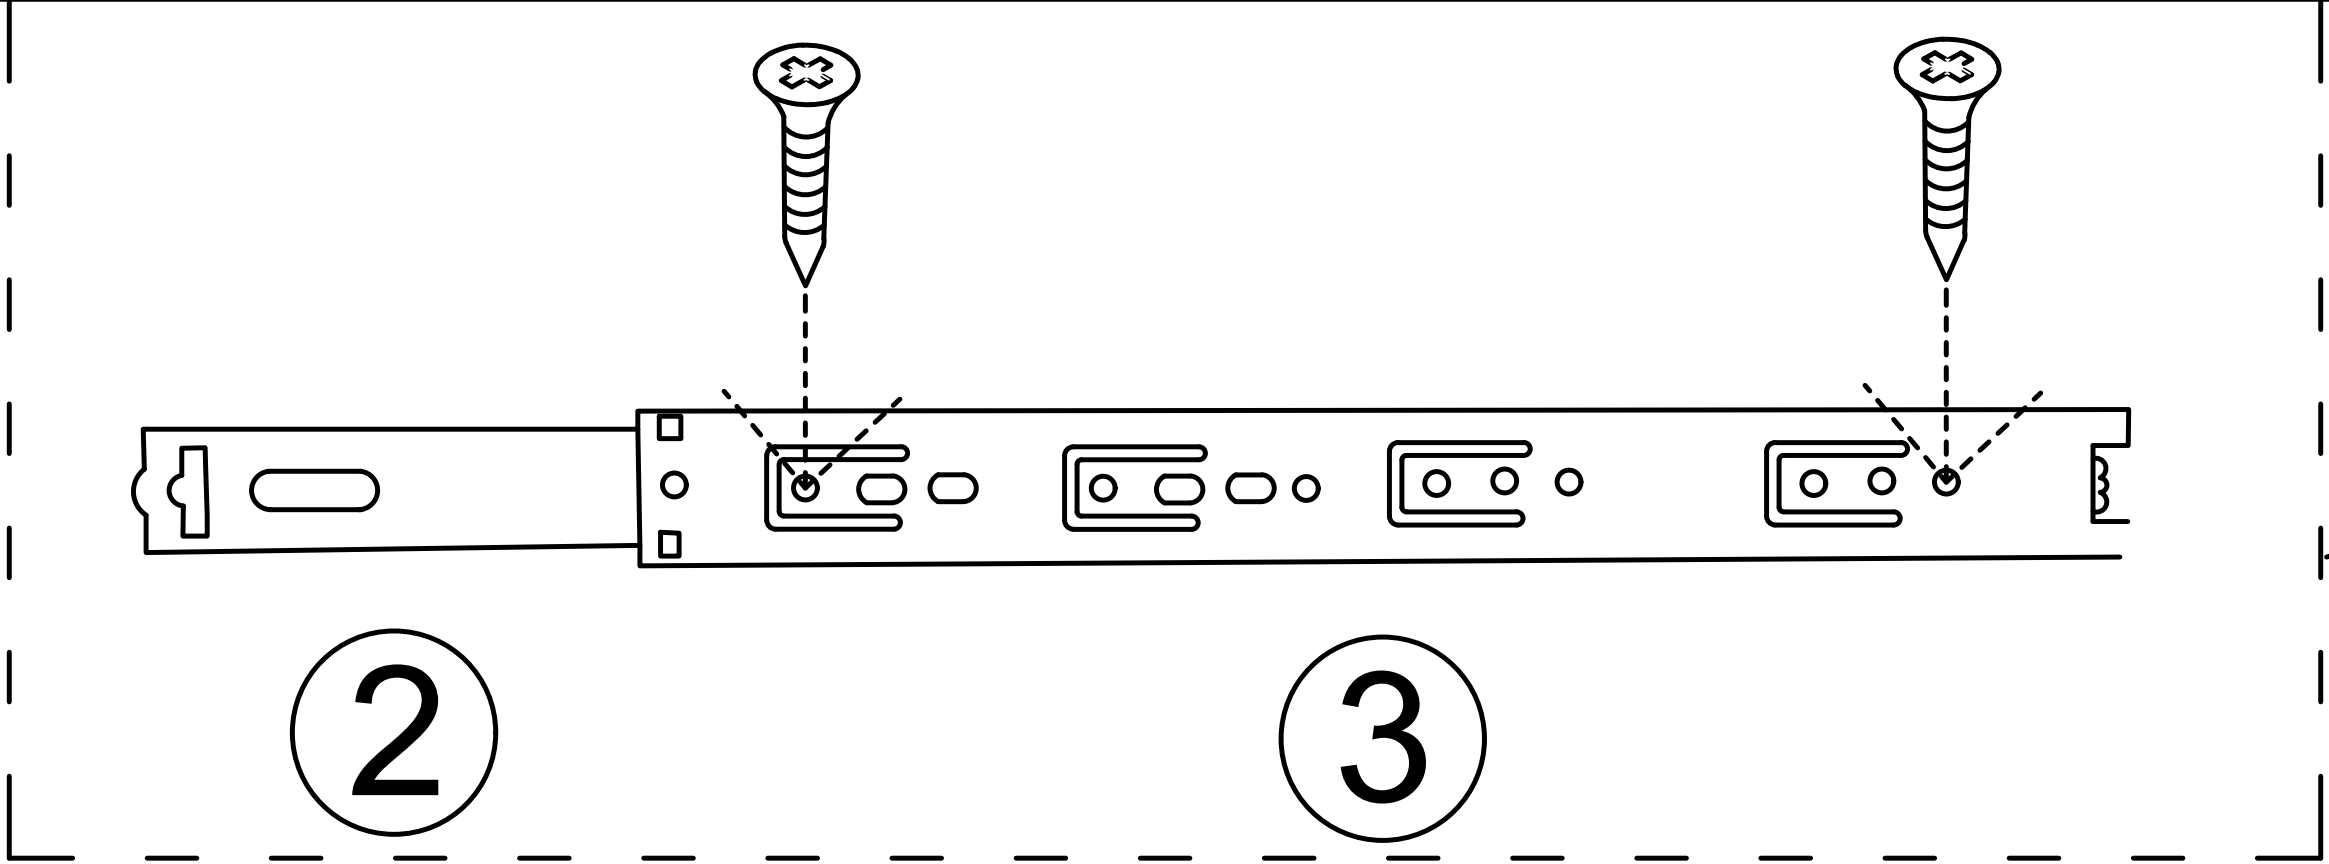



Step 41

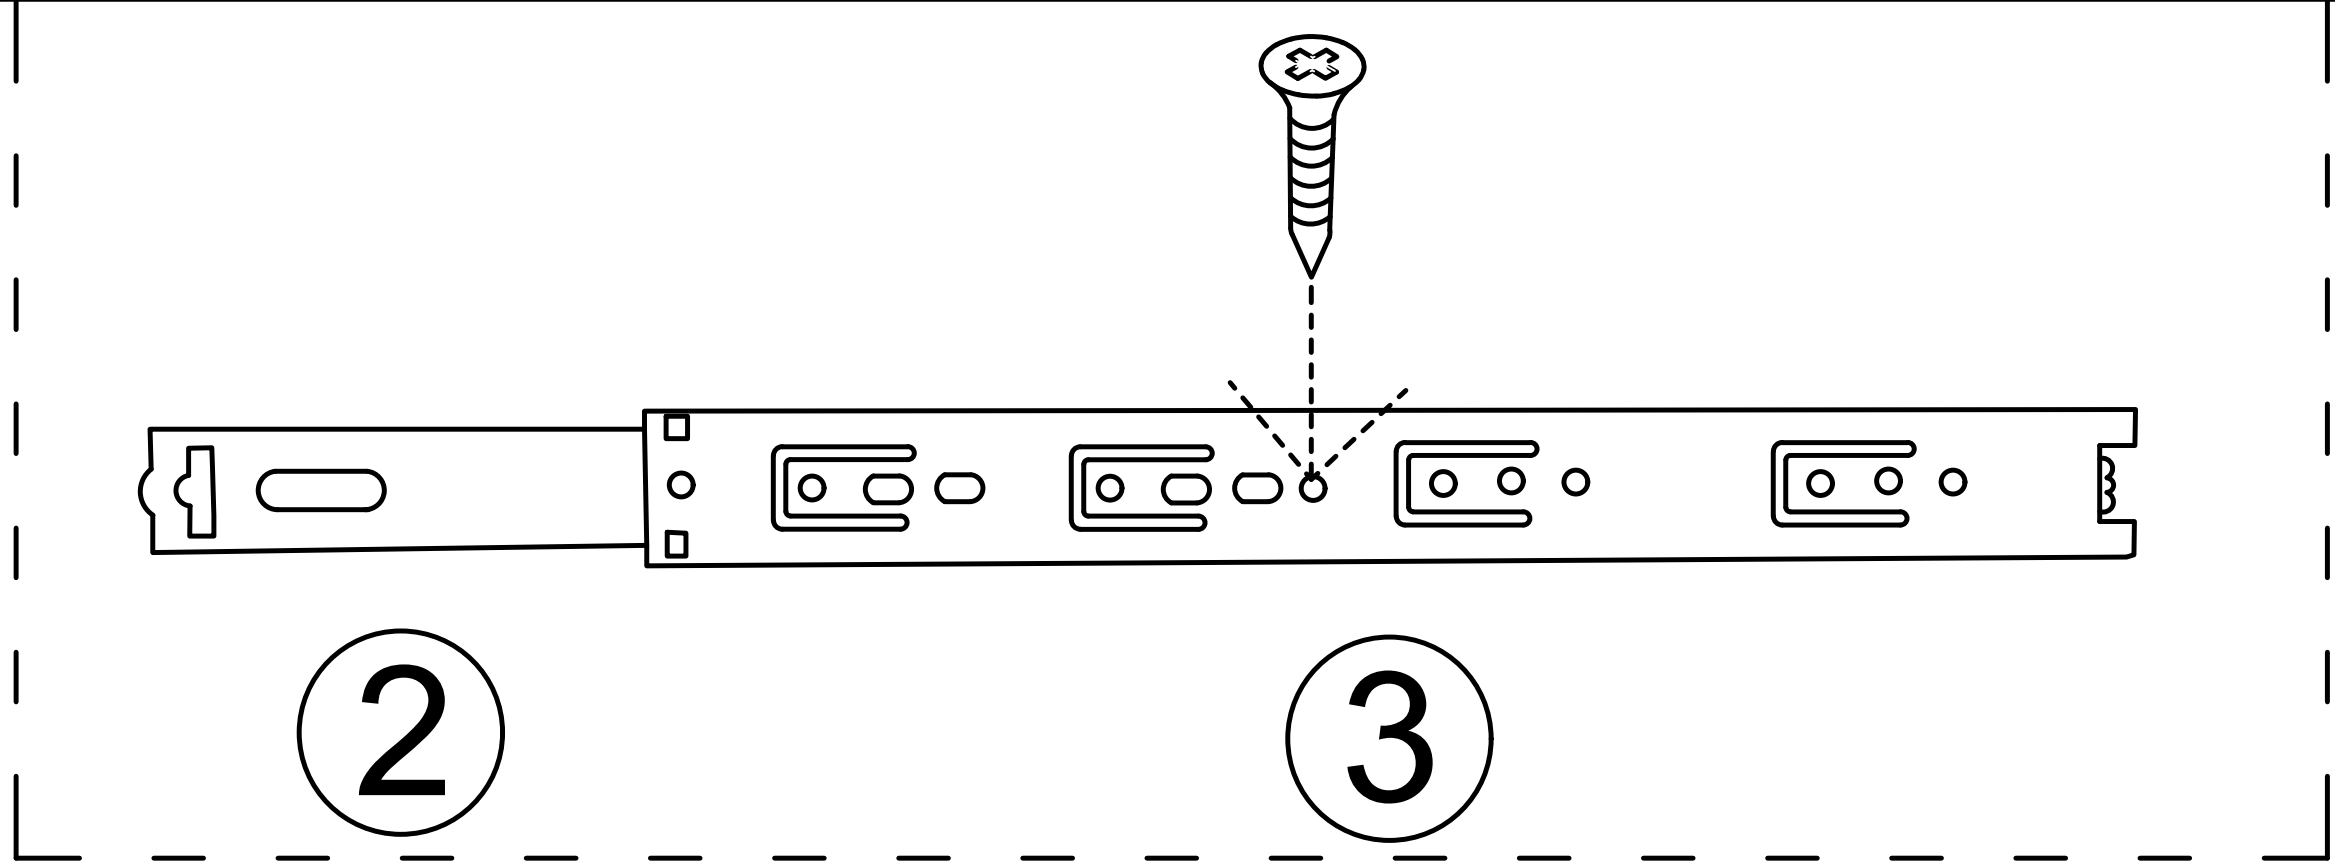

4

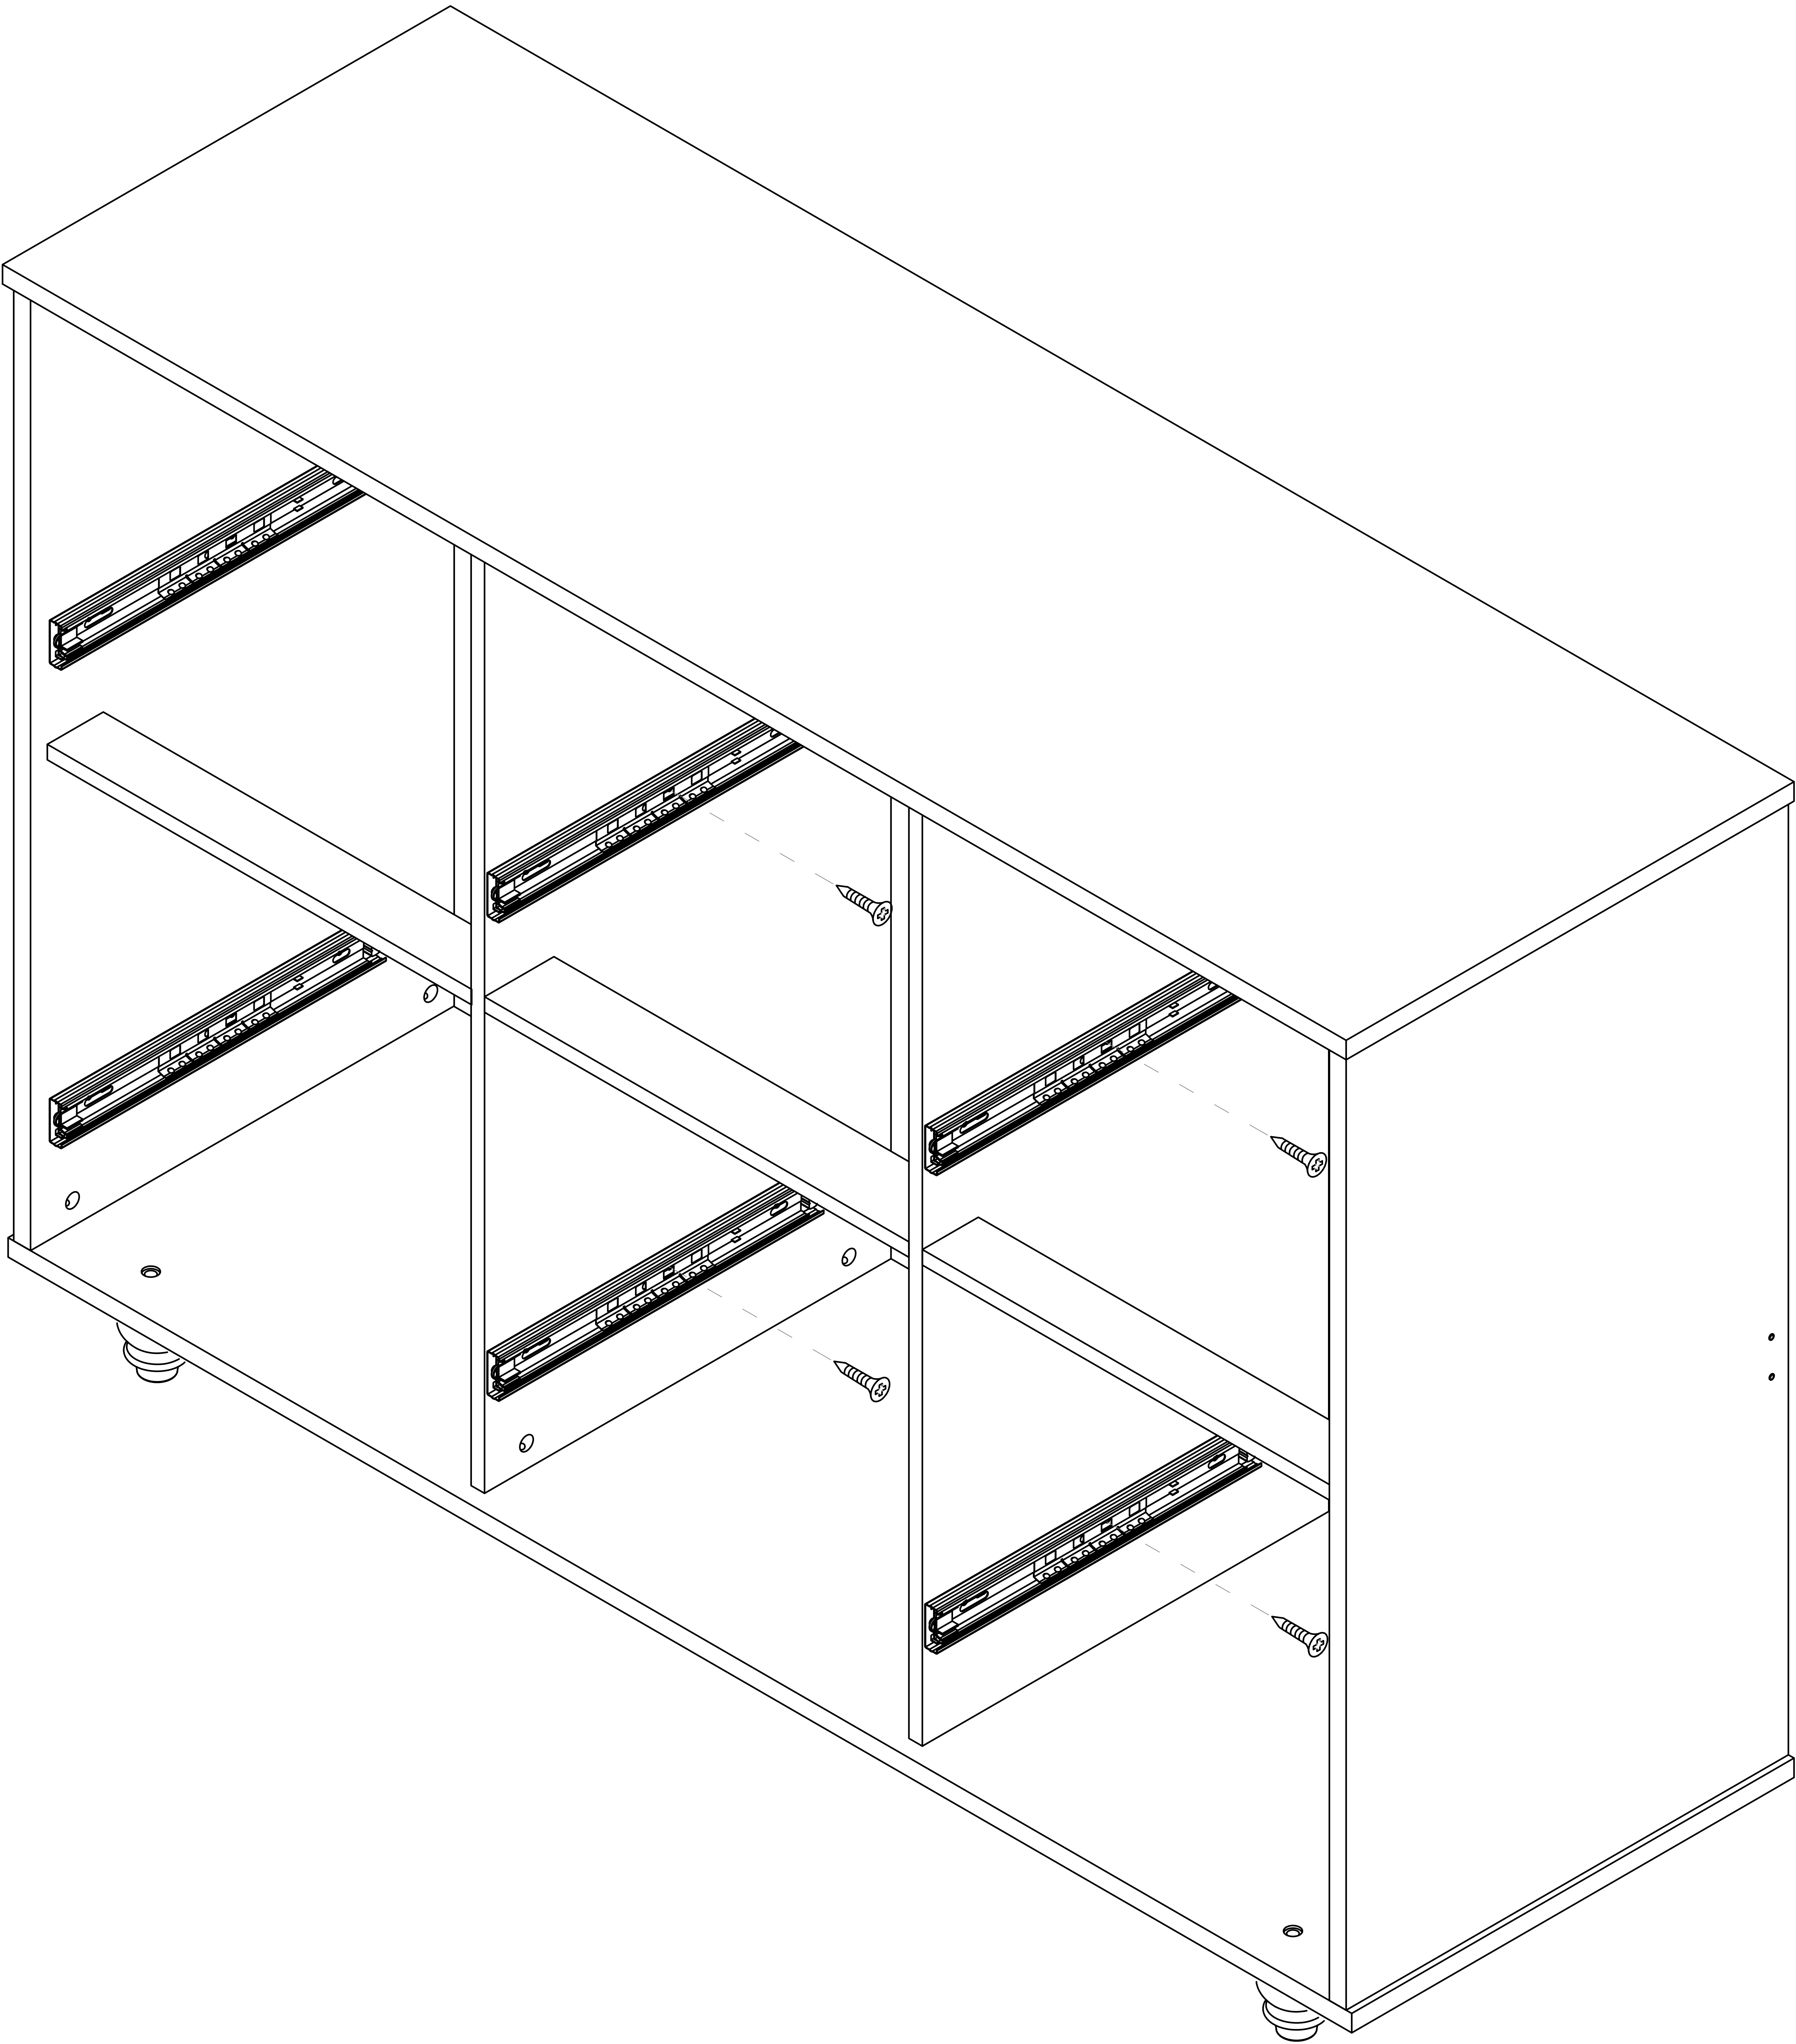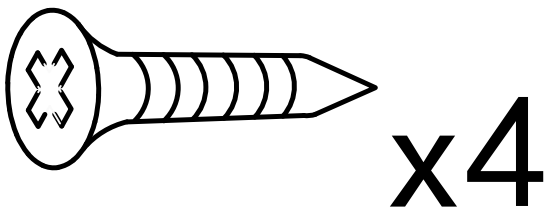


Step 42

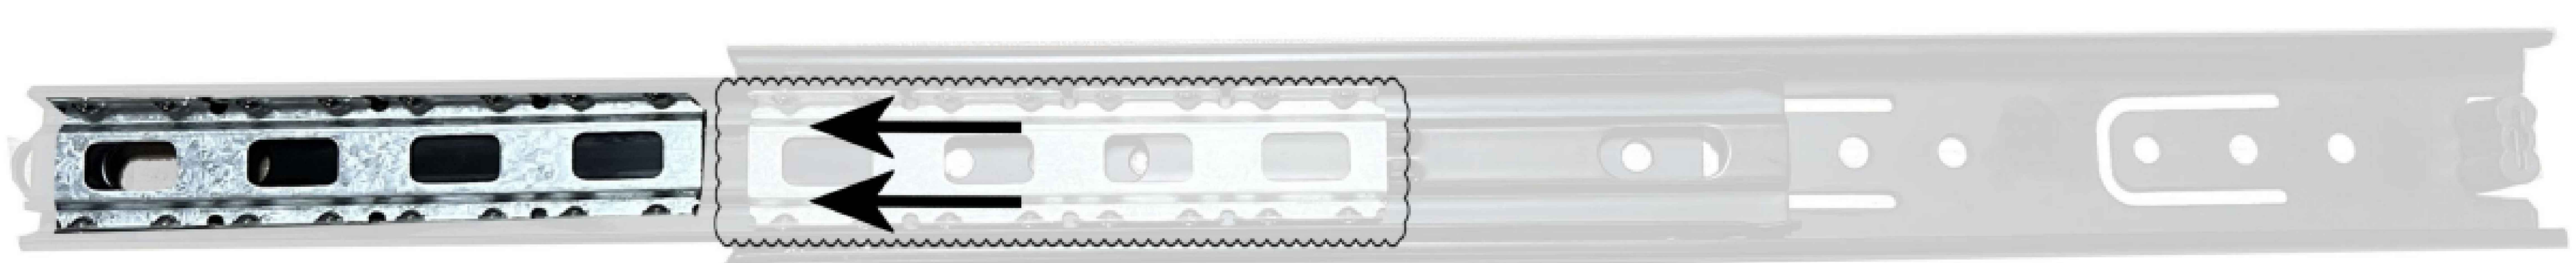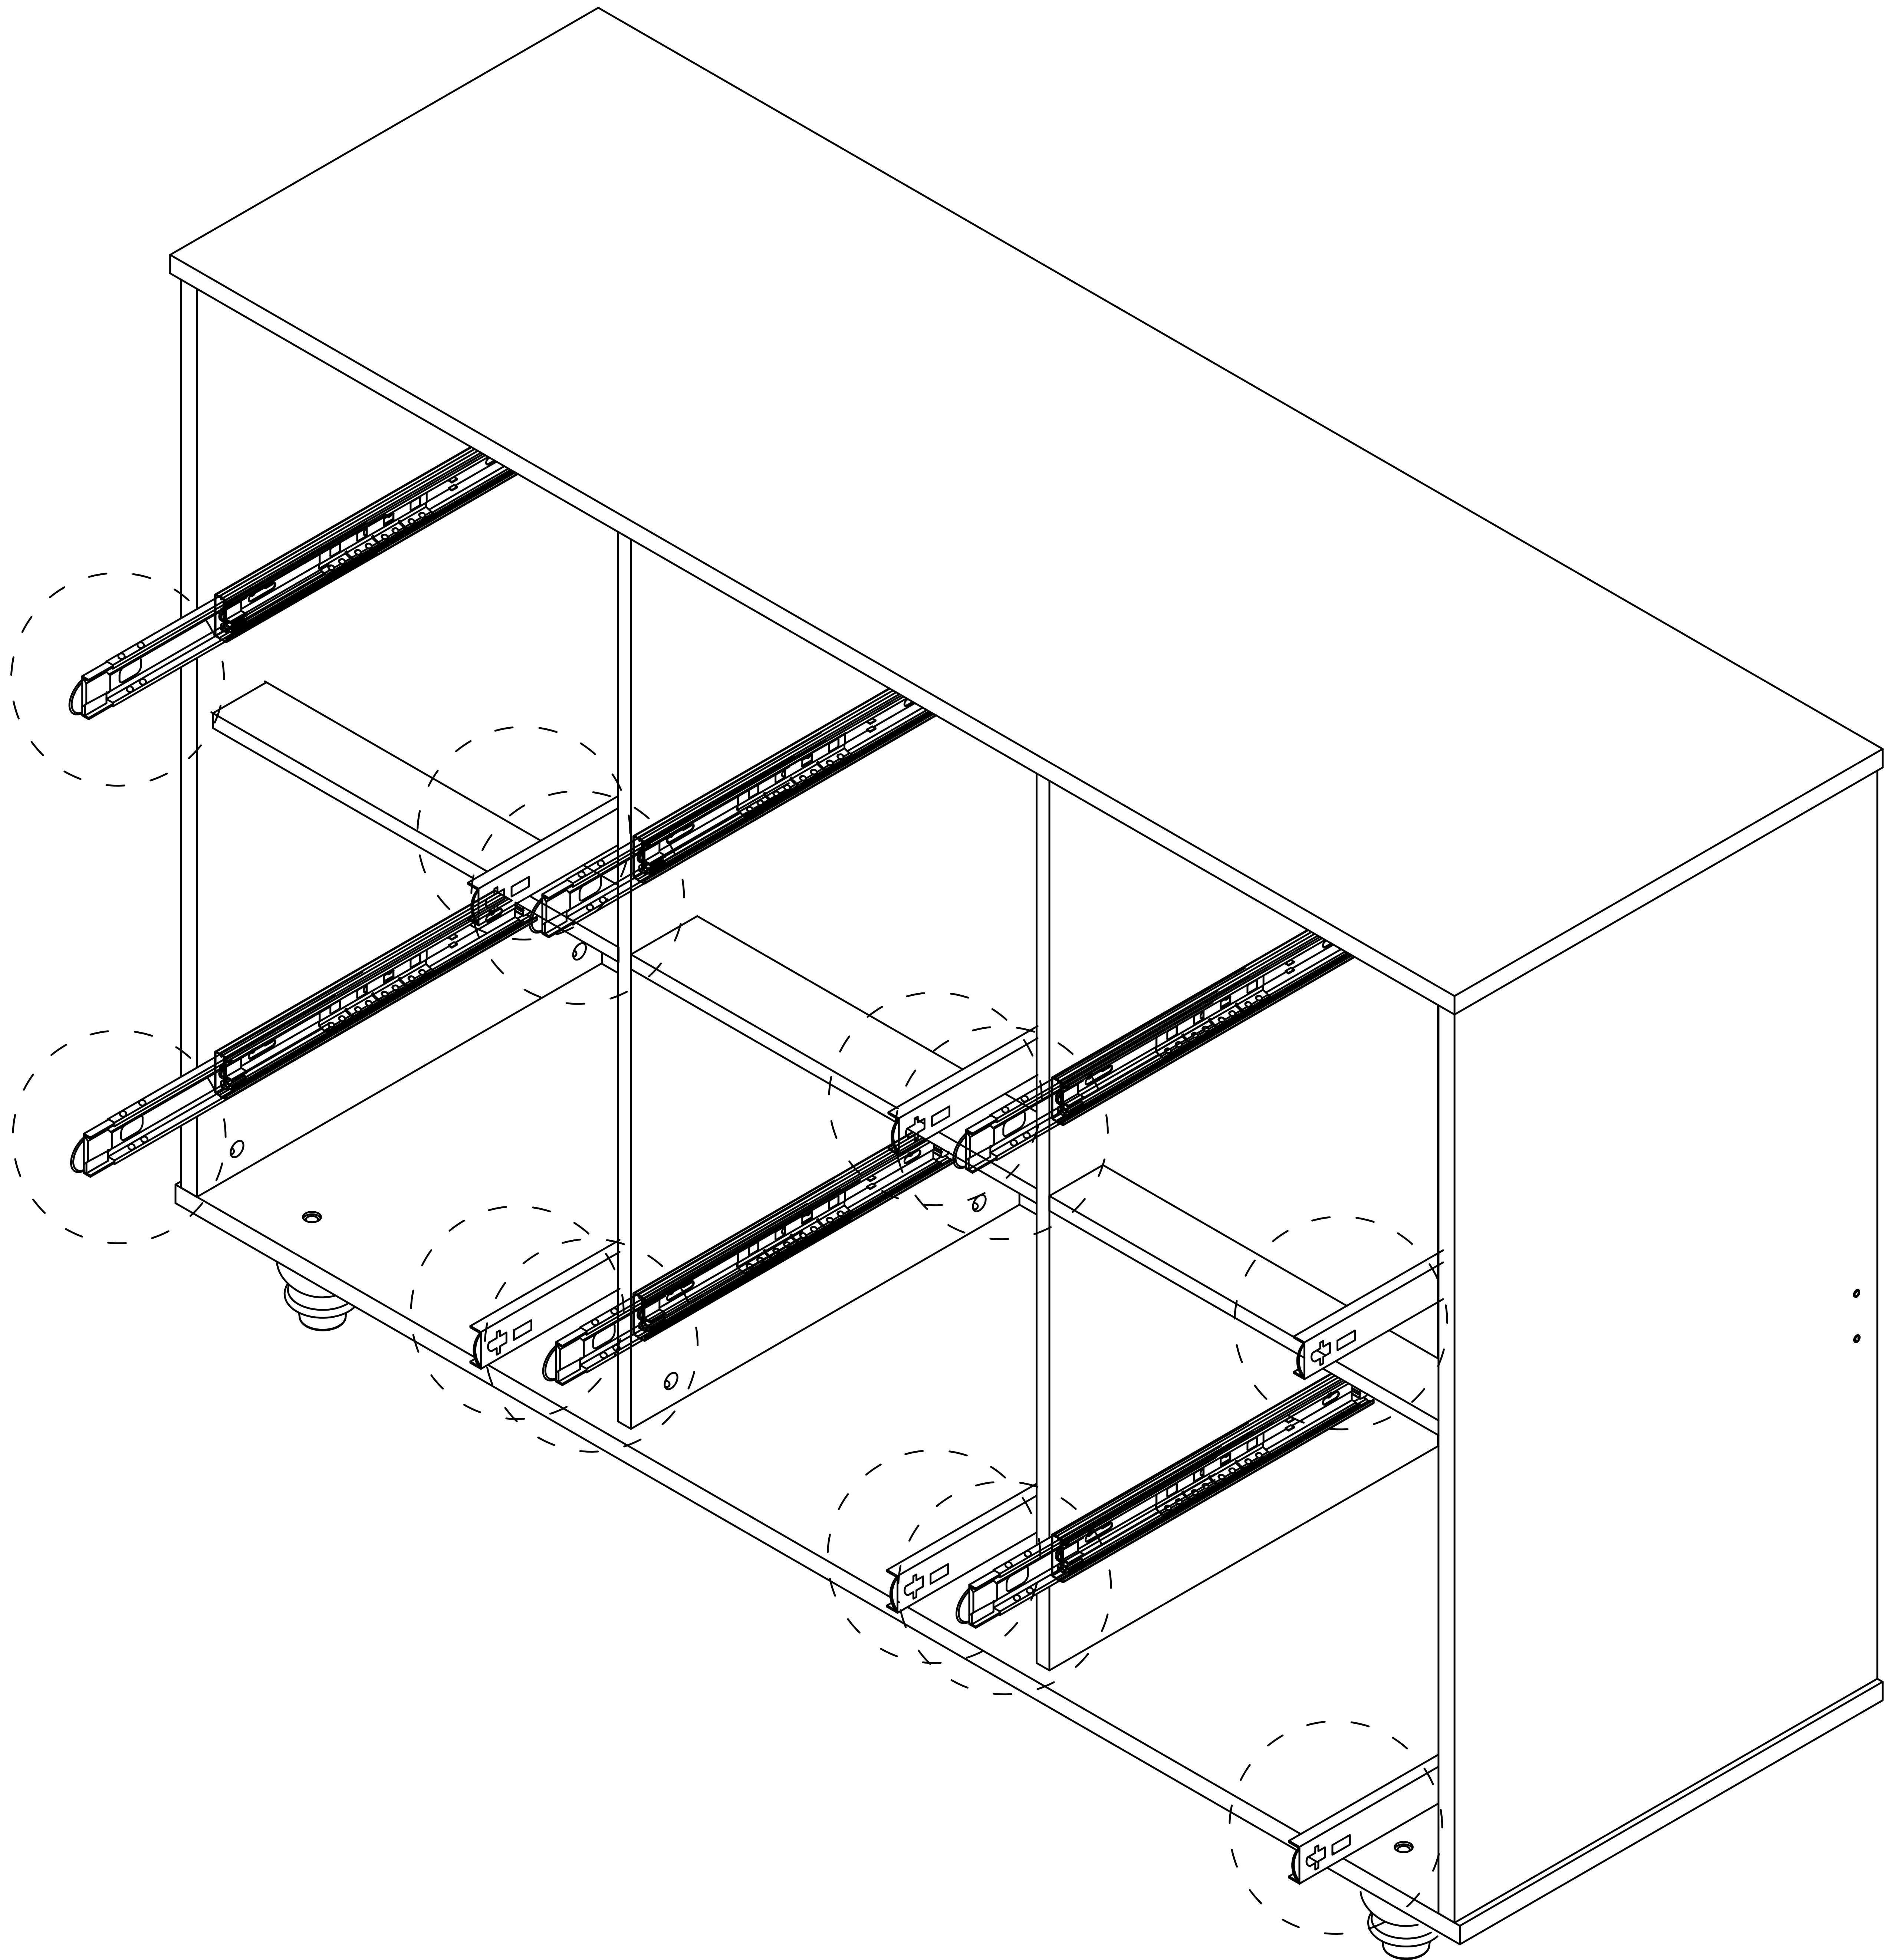

As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.





Step 43

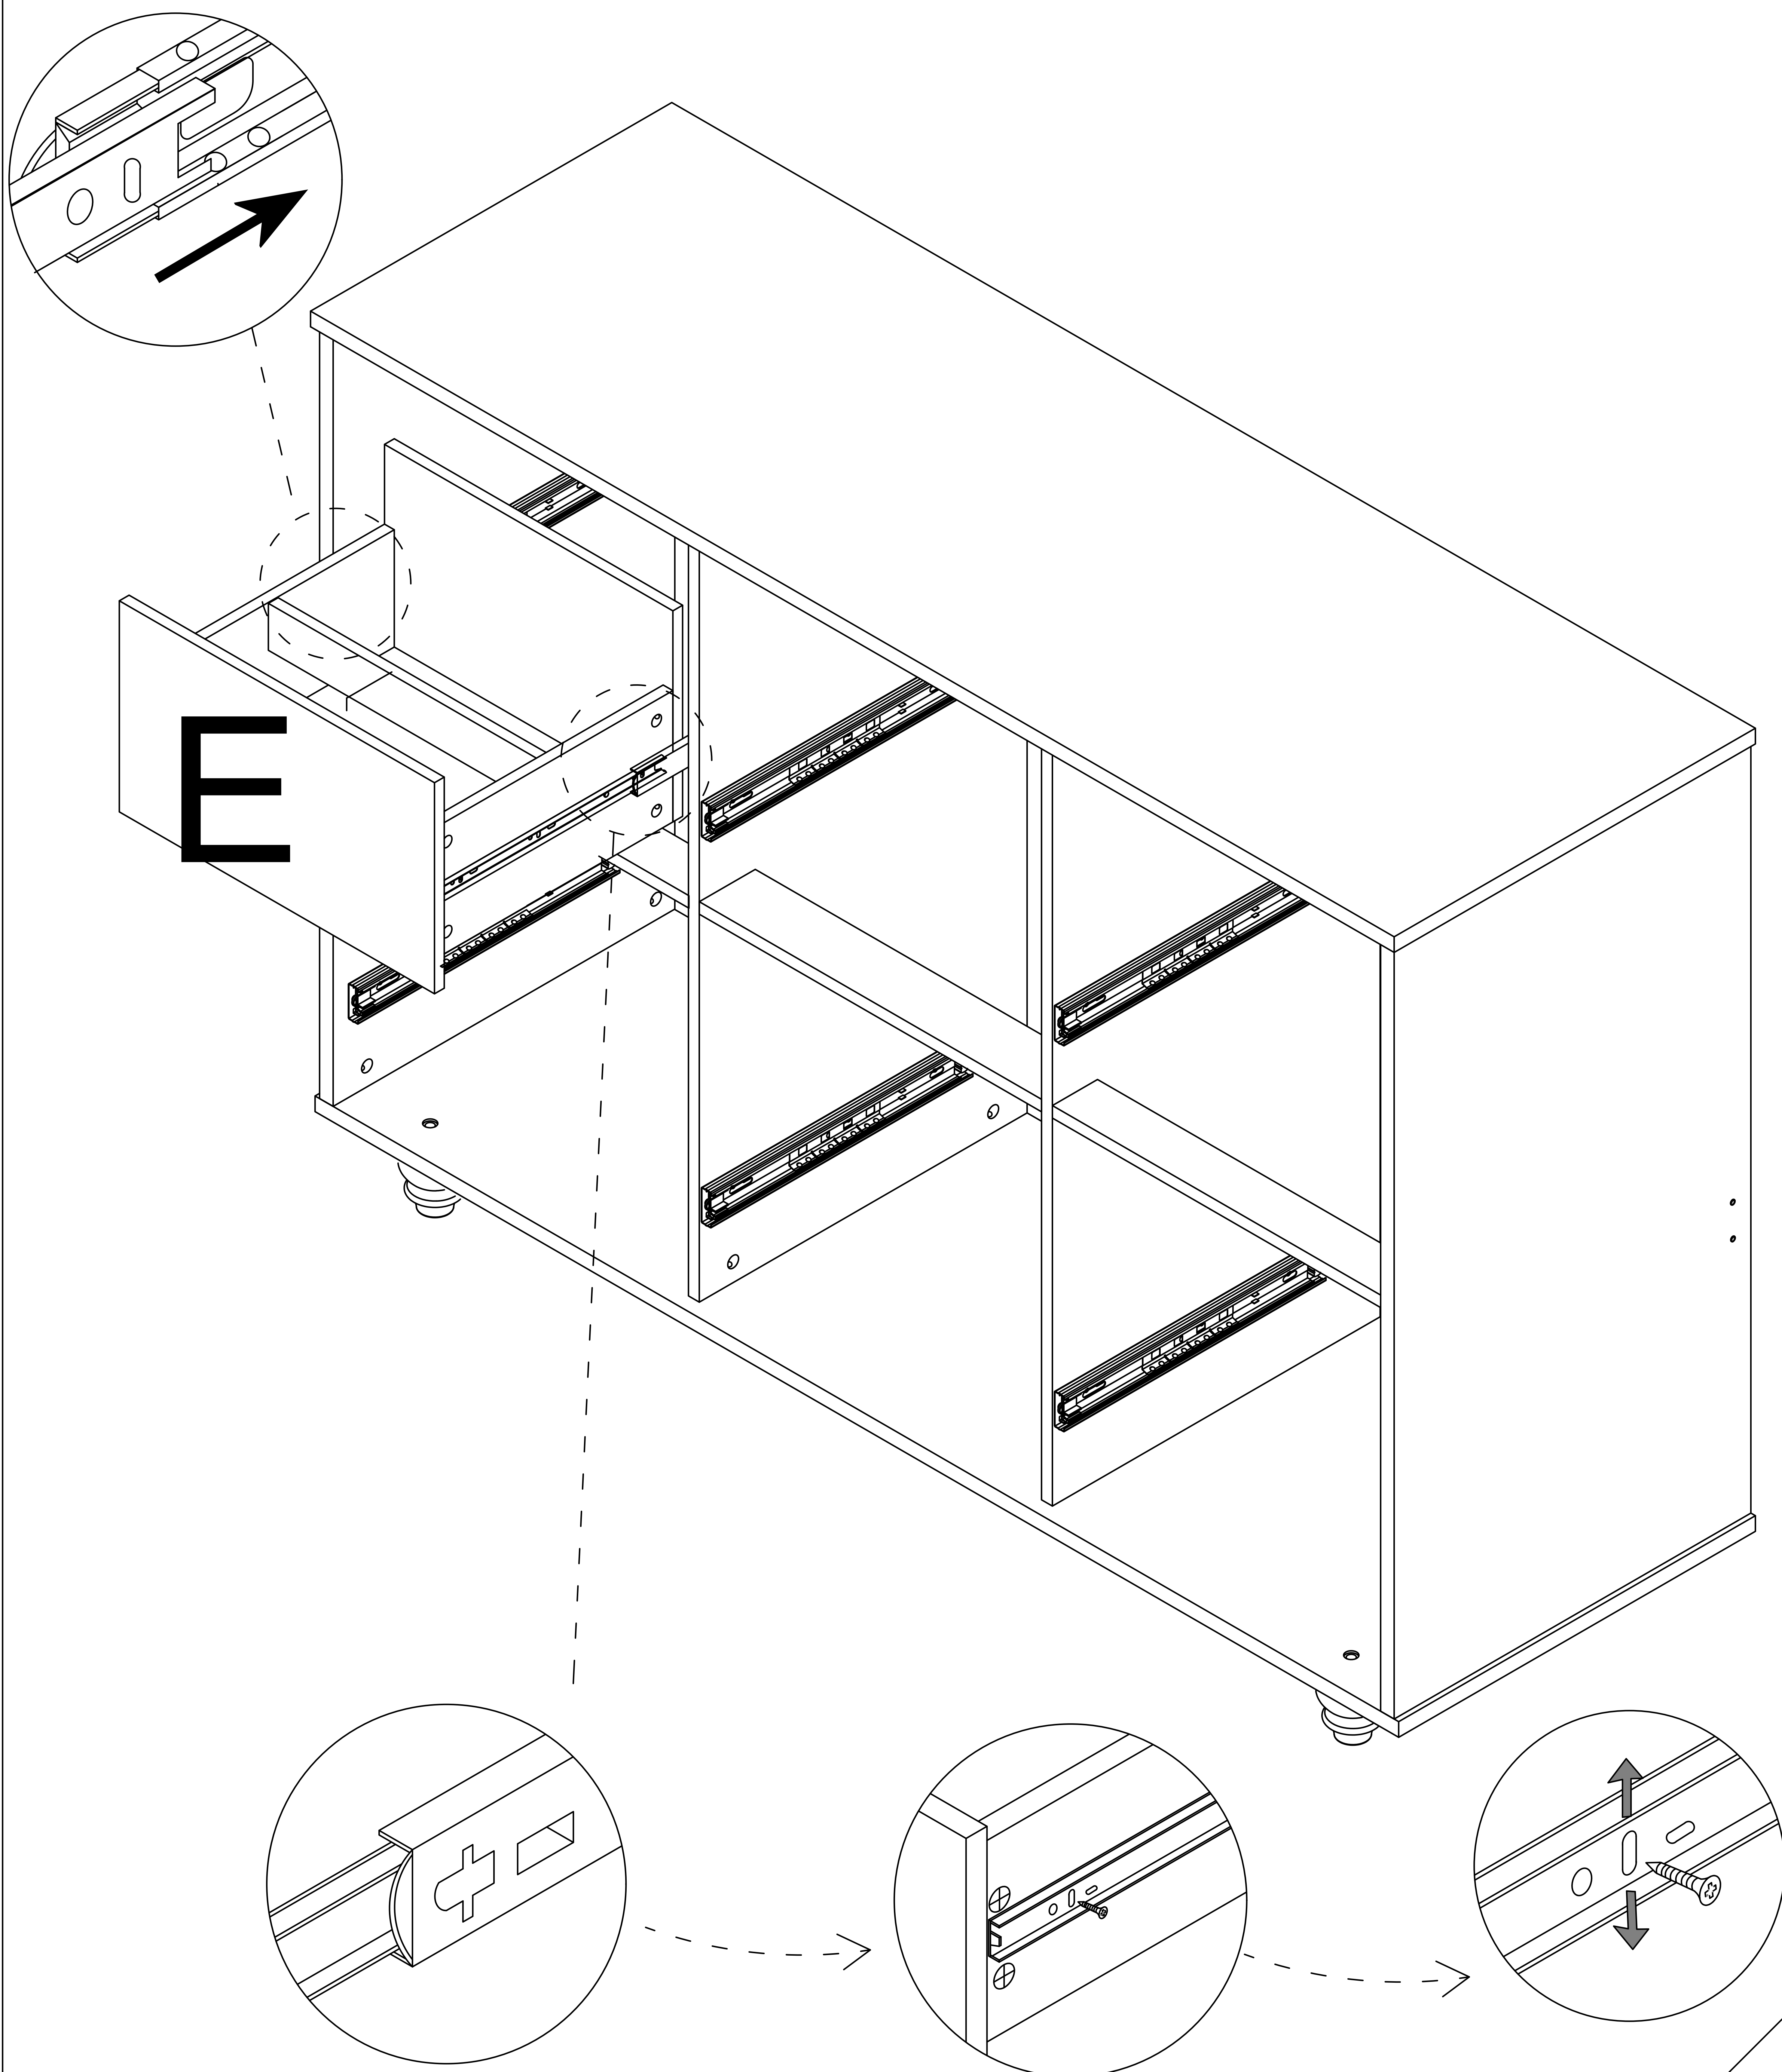

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 44


Install drawers according to matching numbers

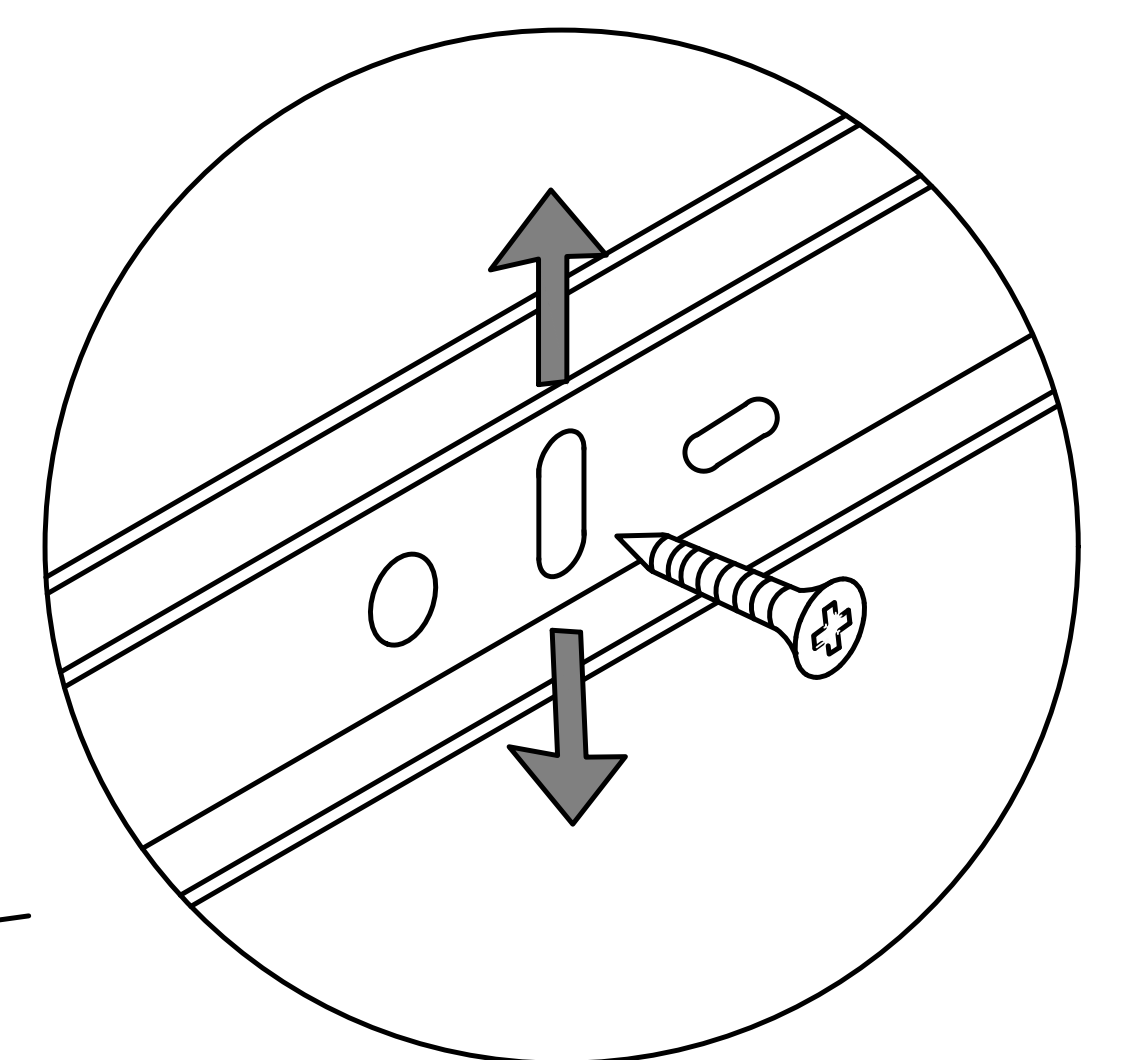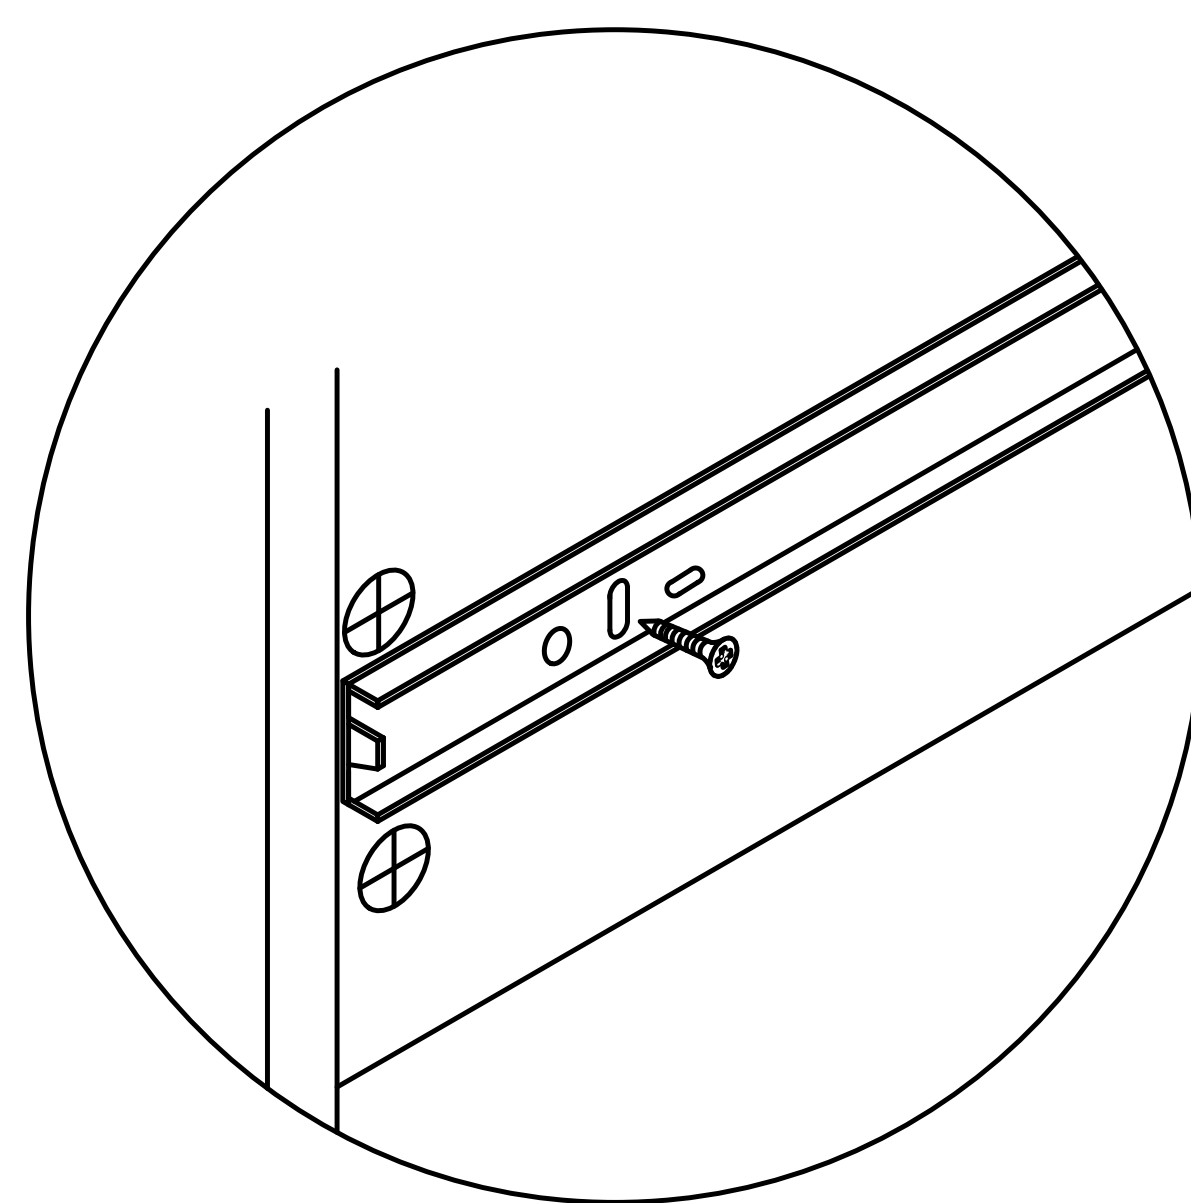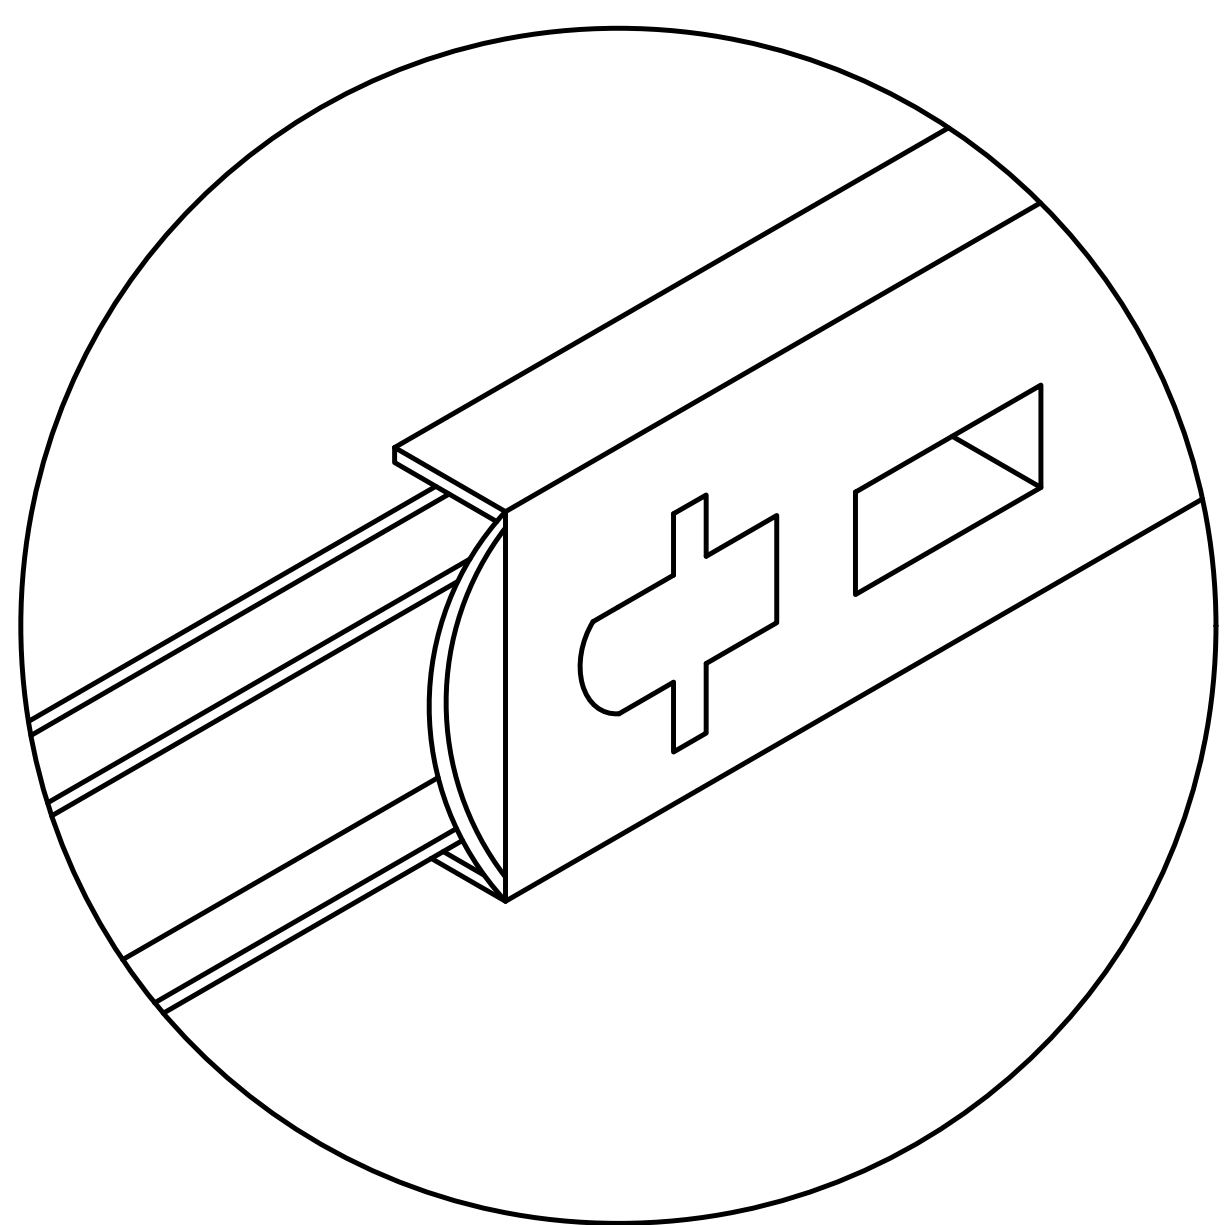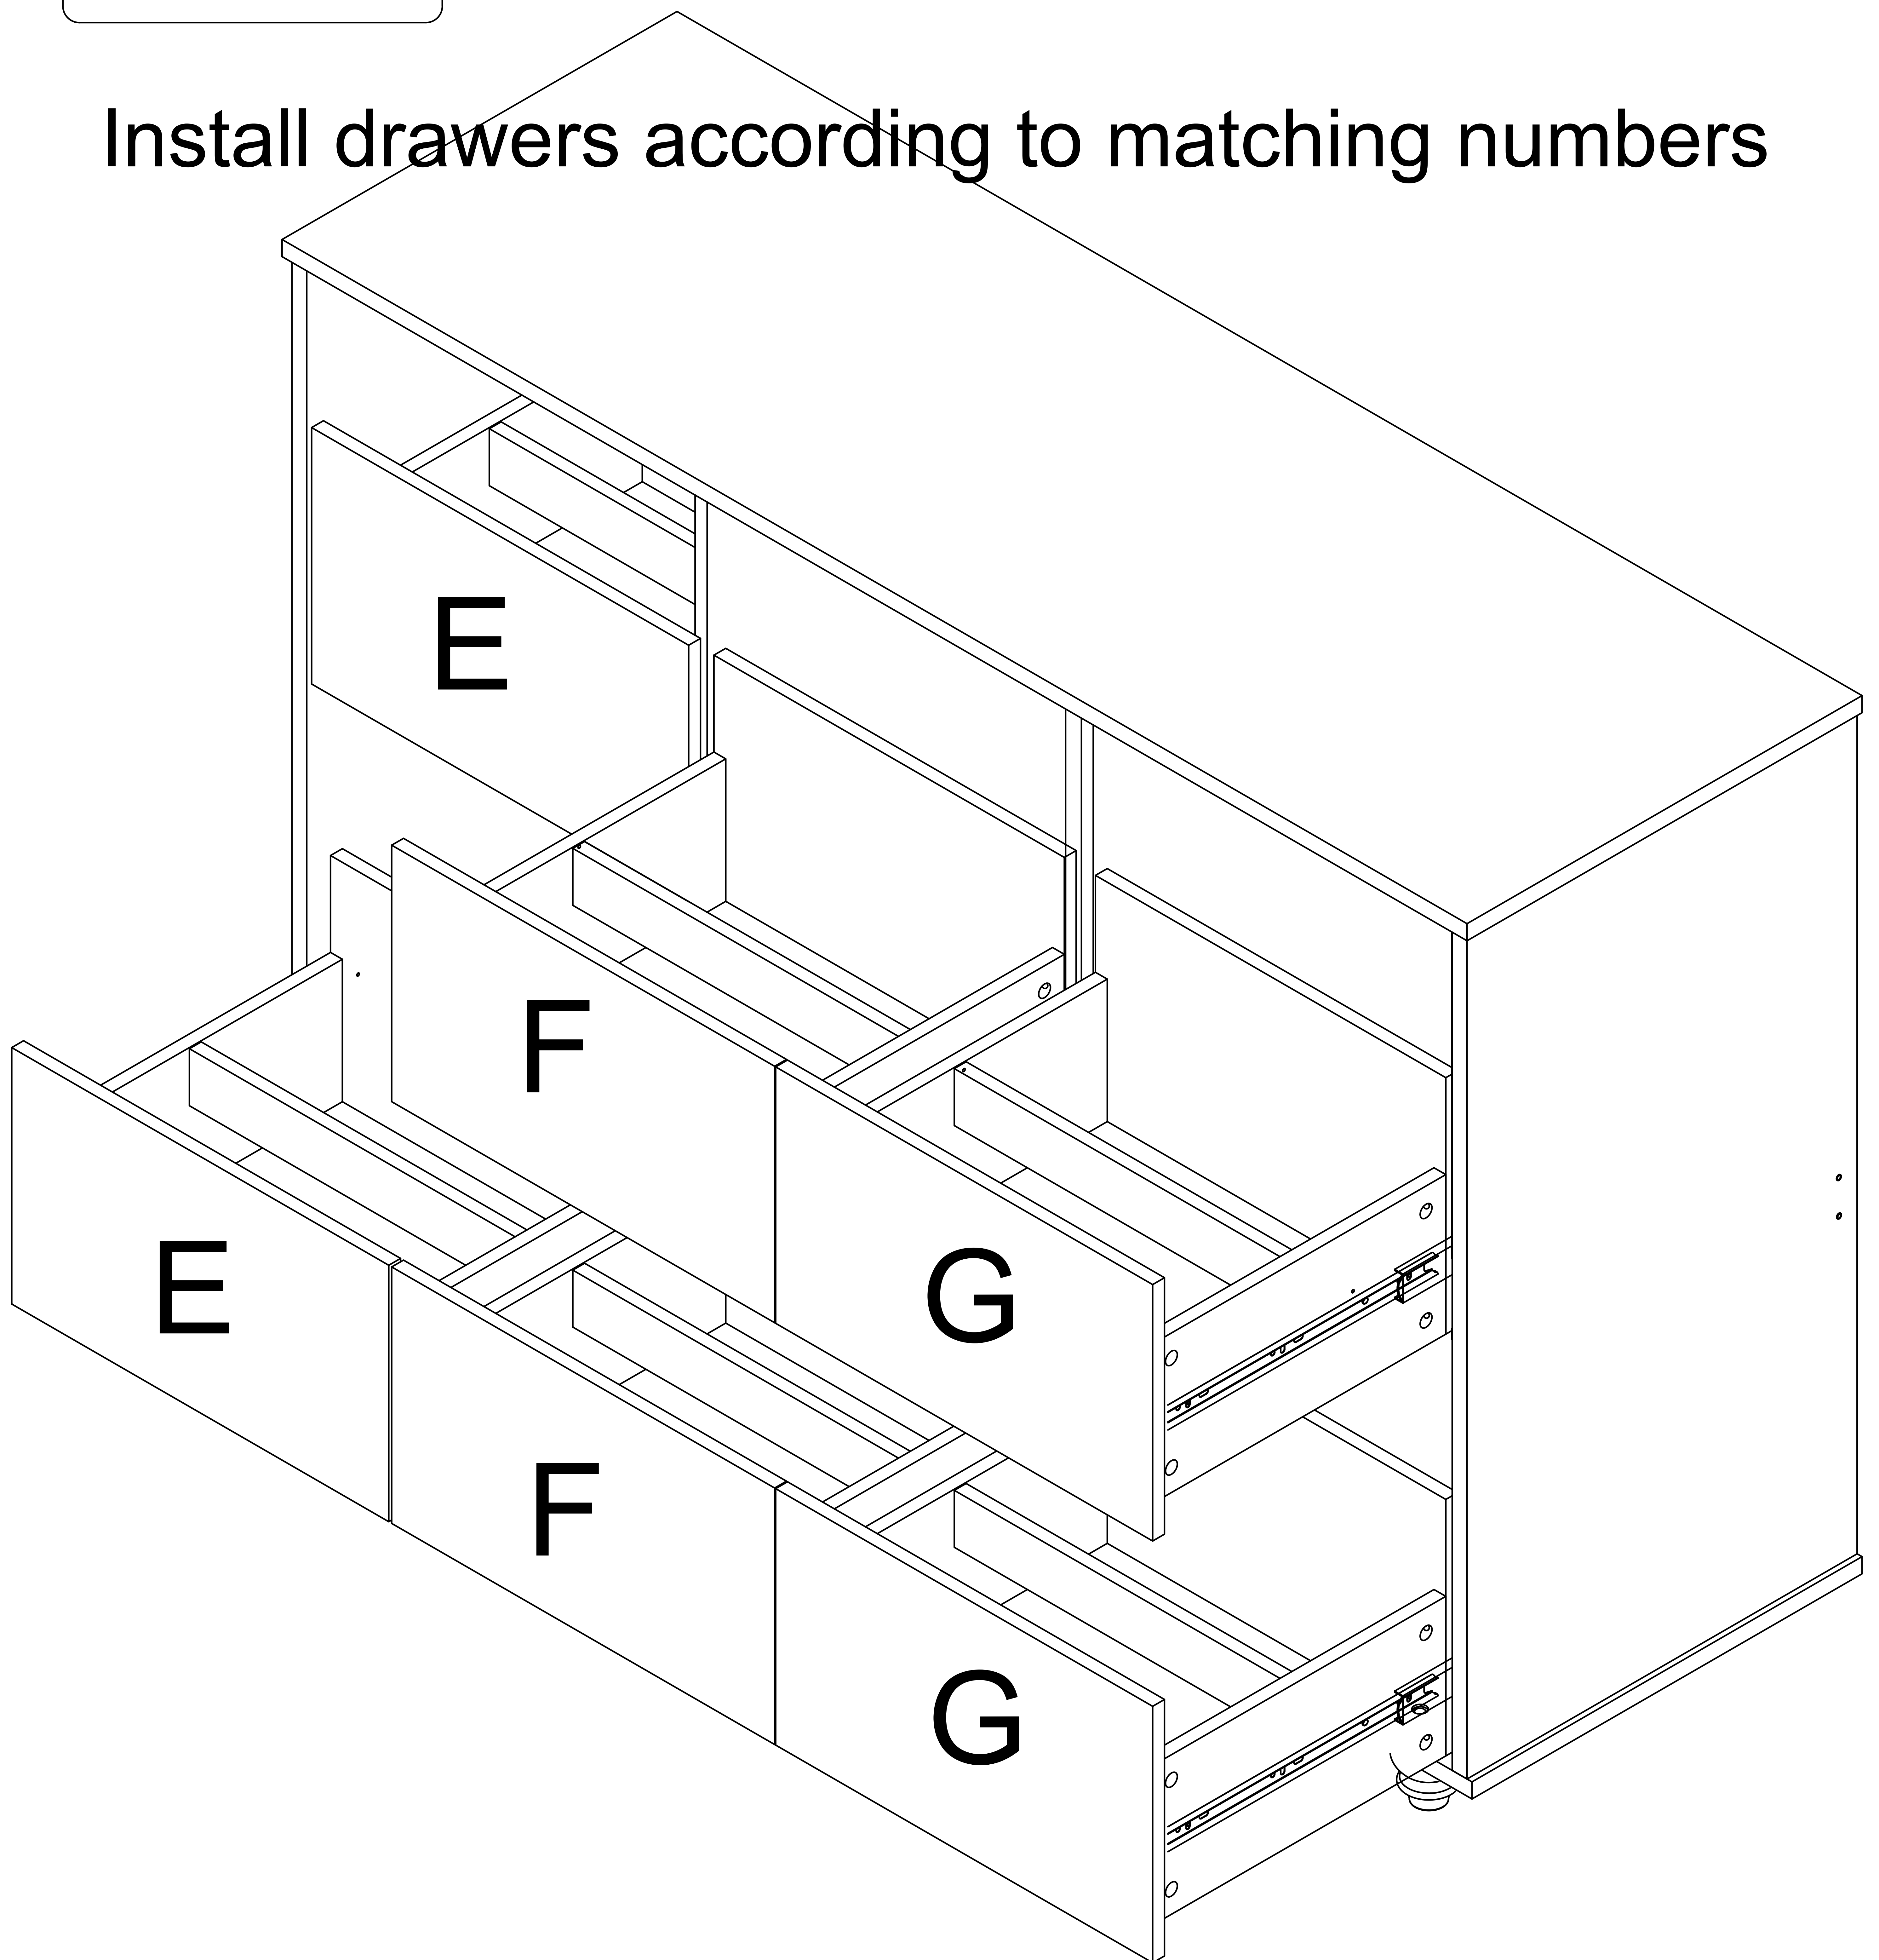


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 45

6

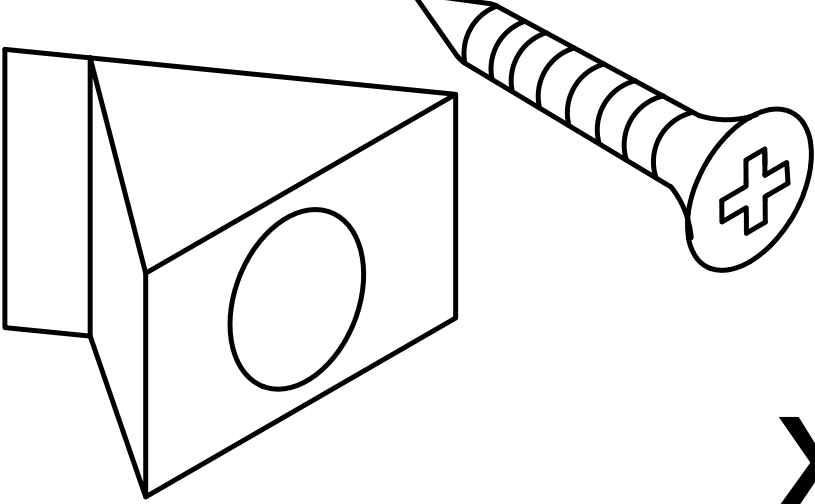


x12

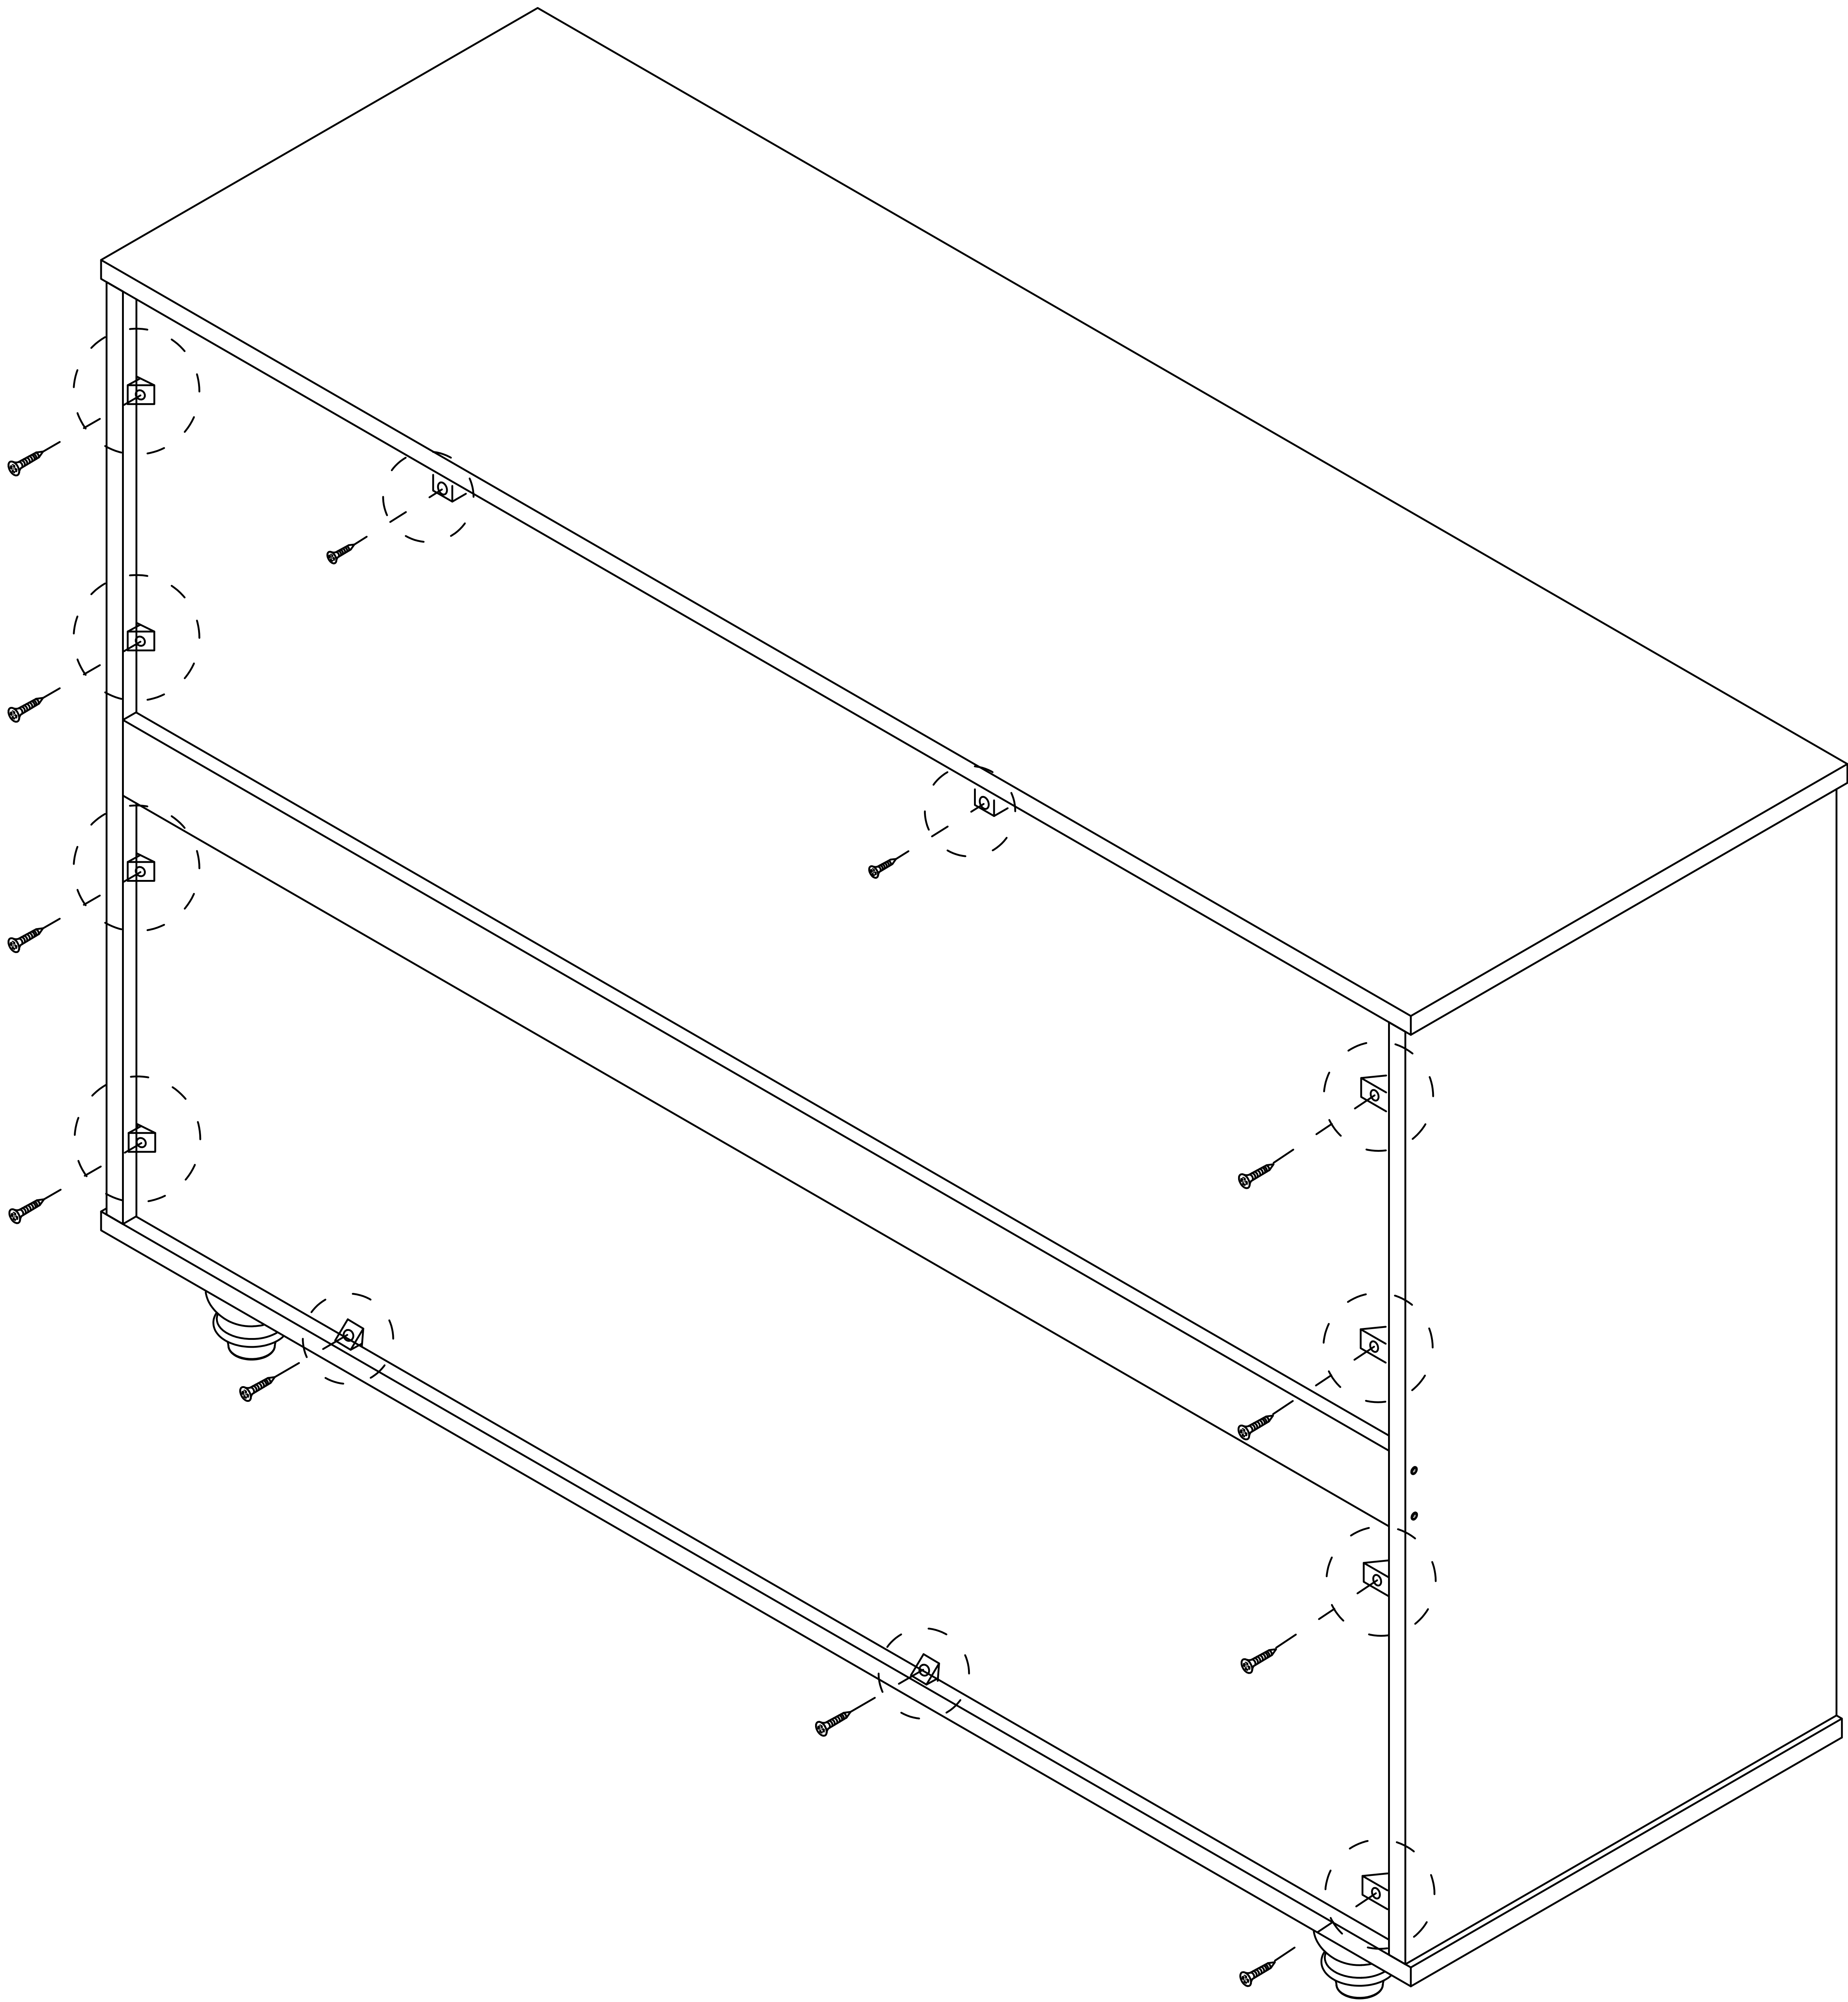



Step 46


Install as required

7


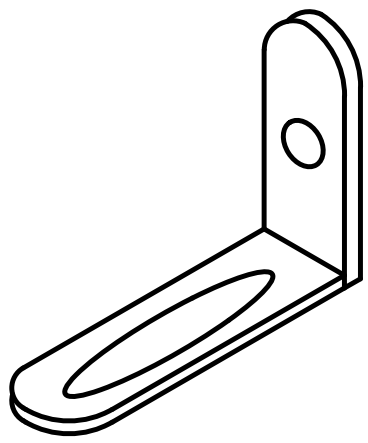
 x2

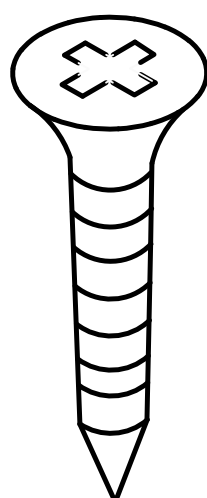 x2

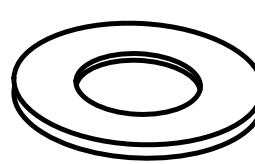
 x2

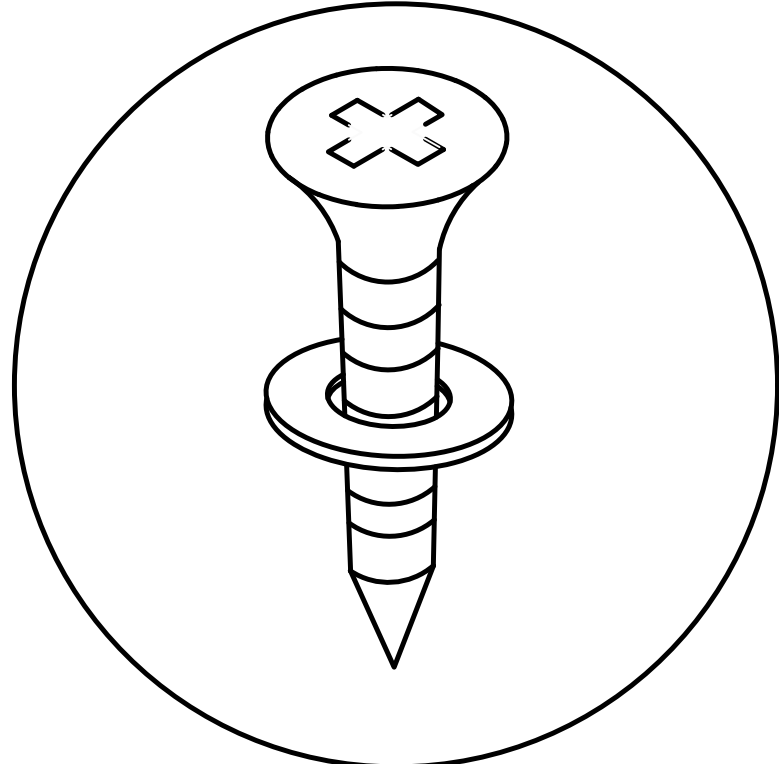3.5x14mm 

Install the anti fall hardware on the cabinet as shown in the picture first

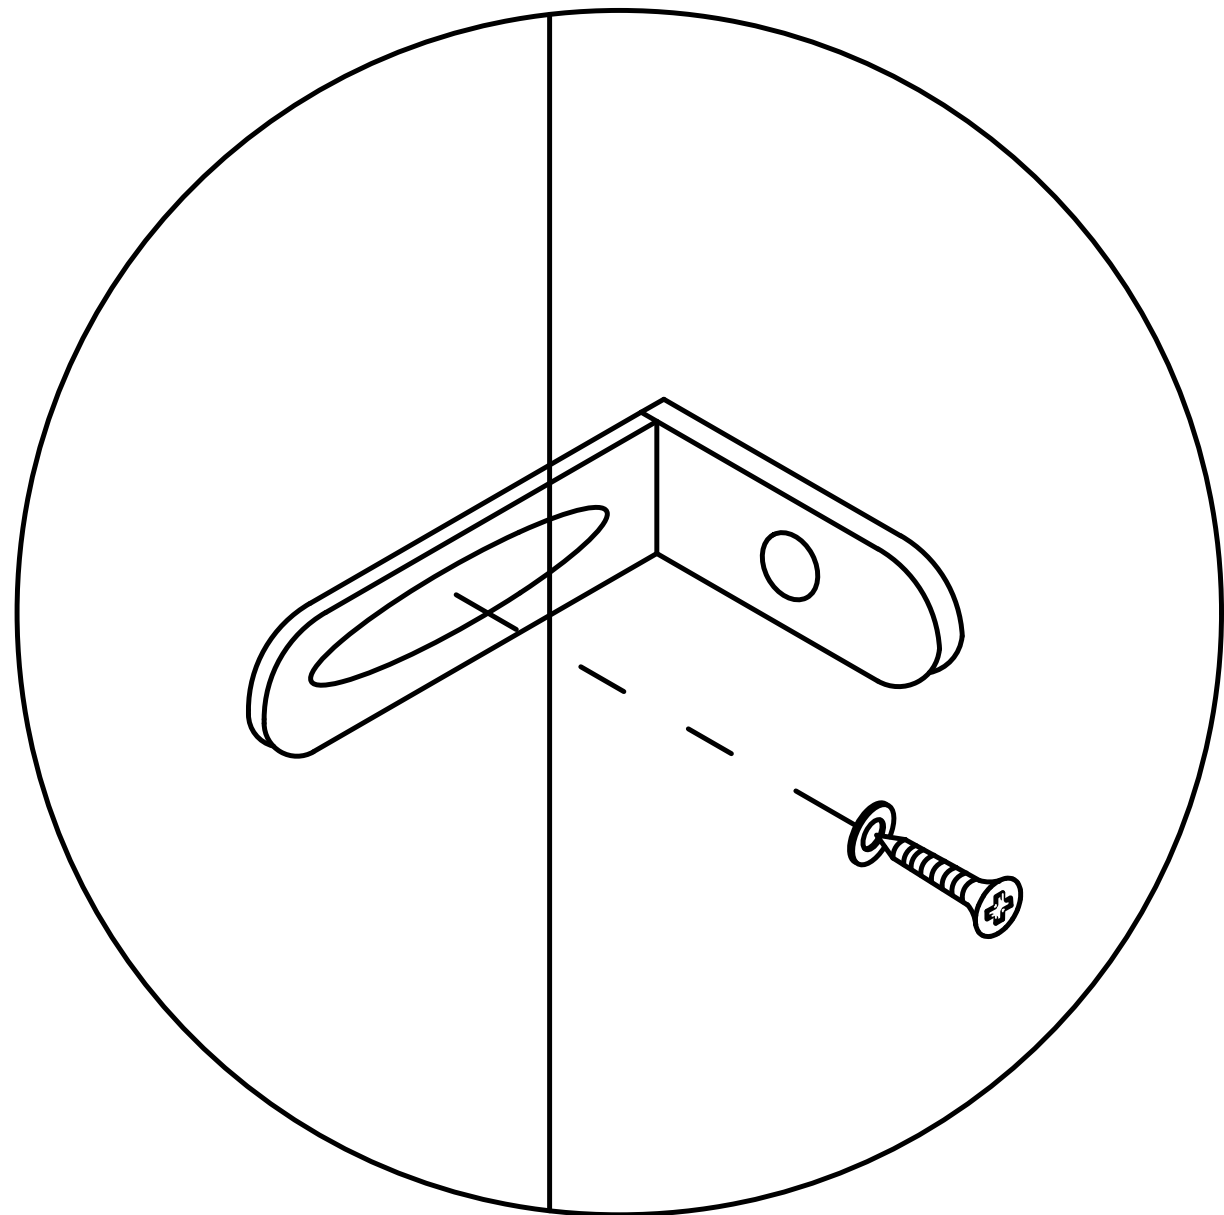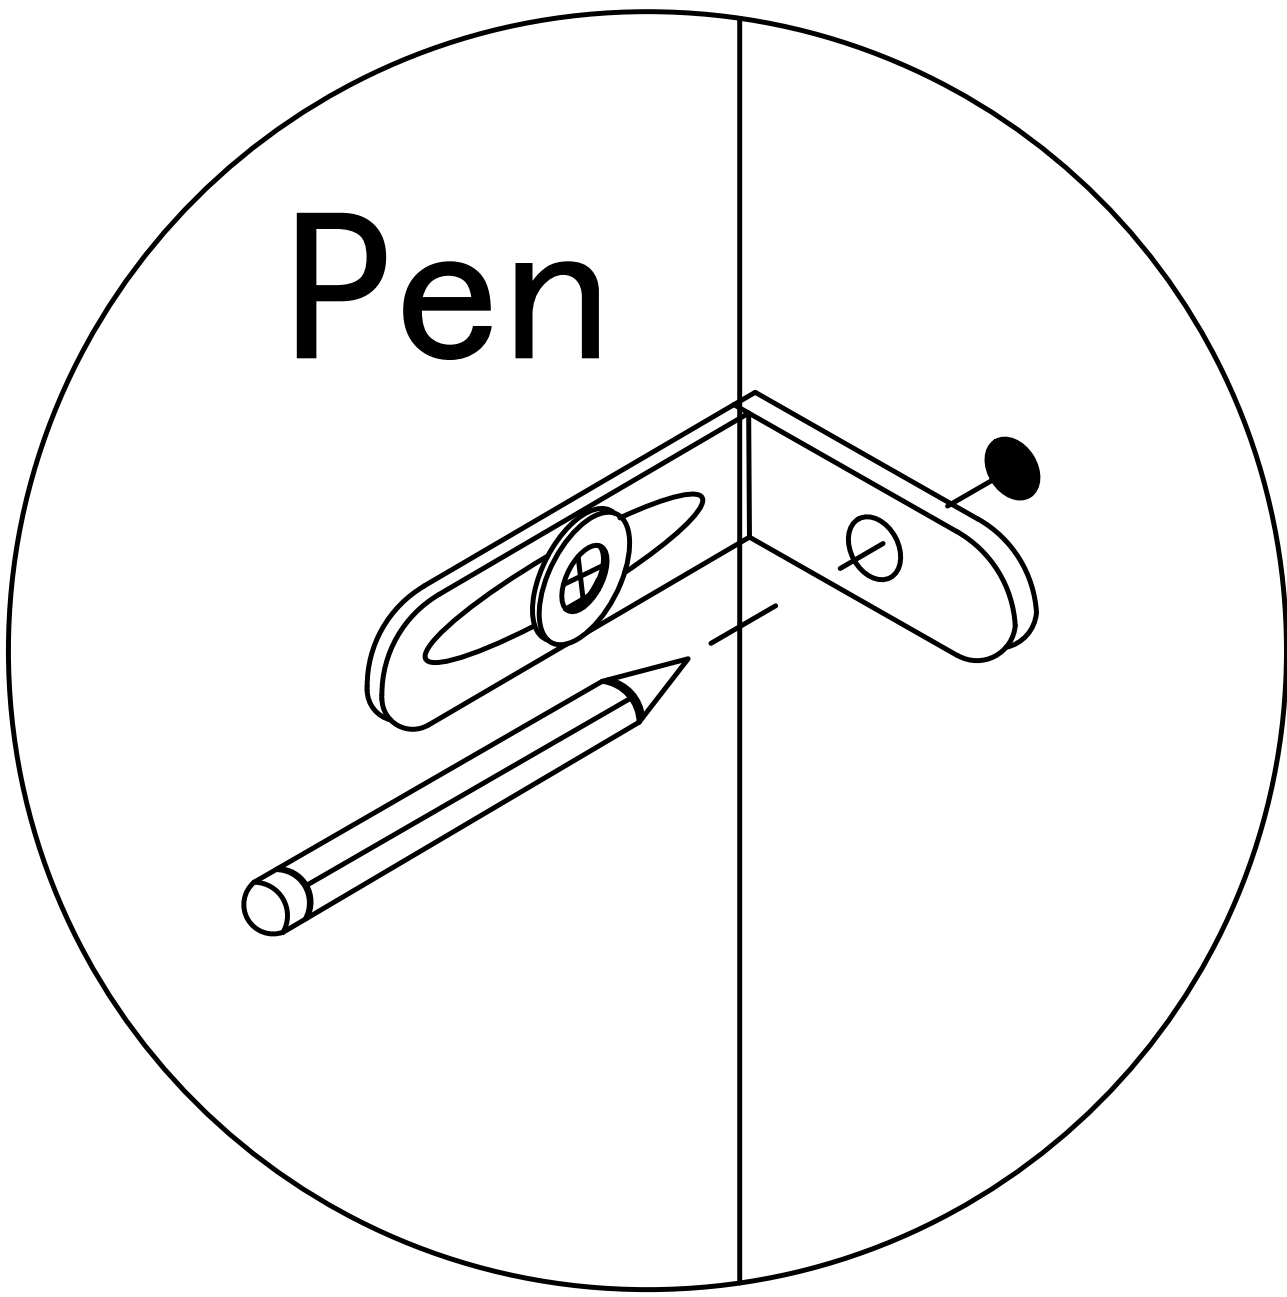



Then mark the wall with a pen through the holes in the anti-fall hardware

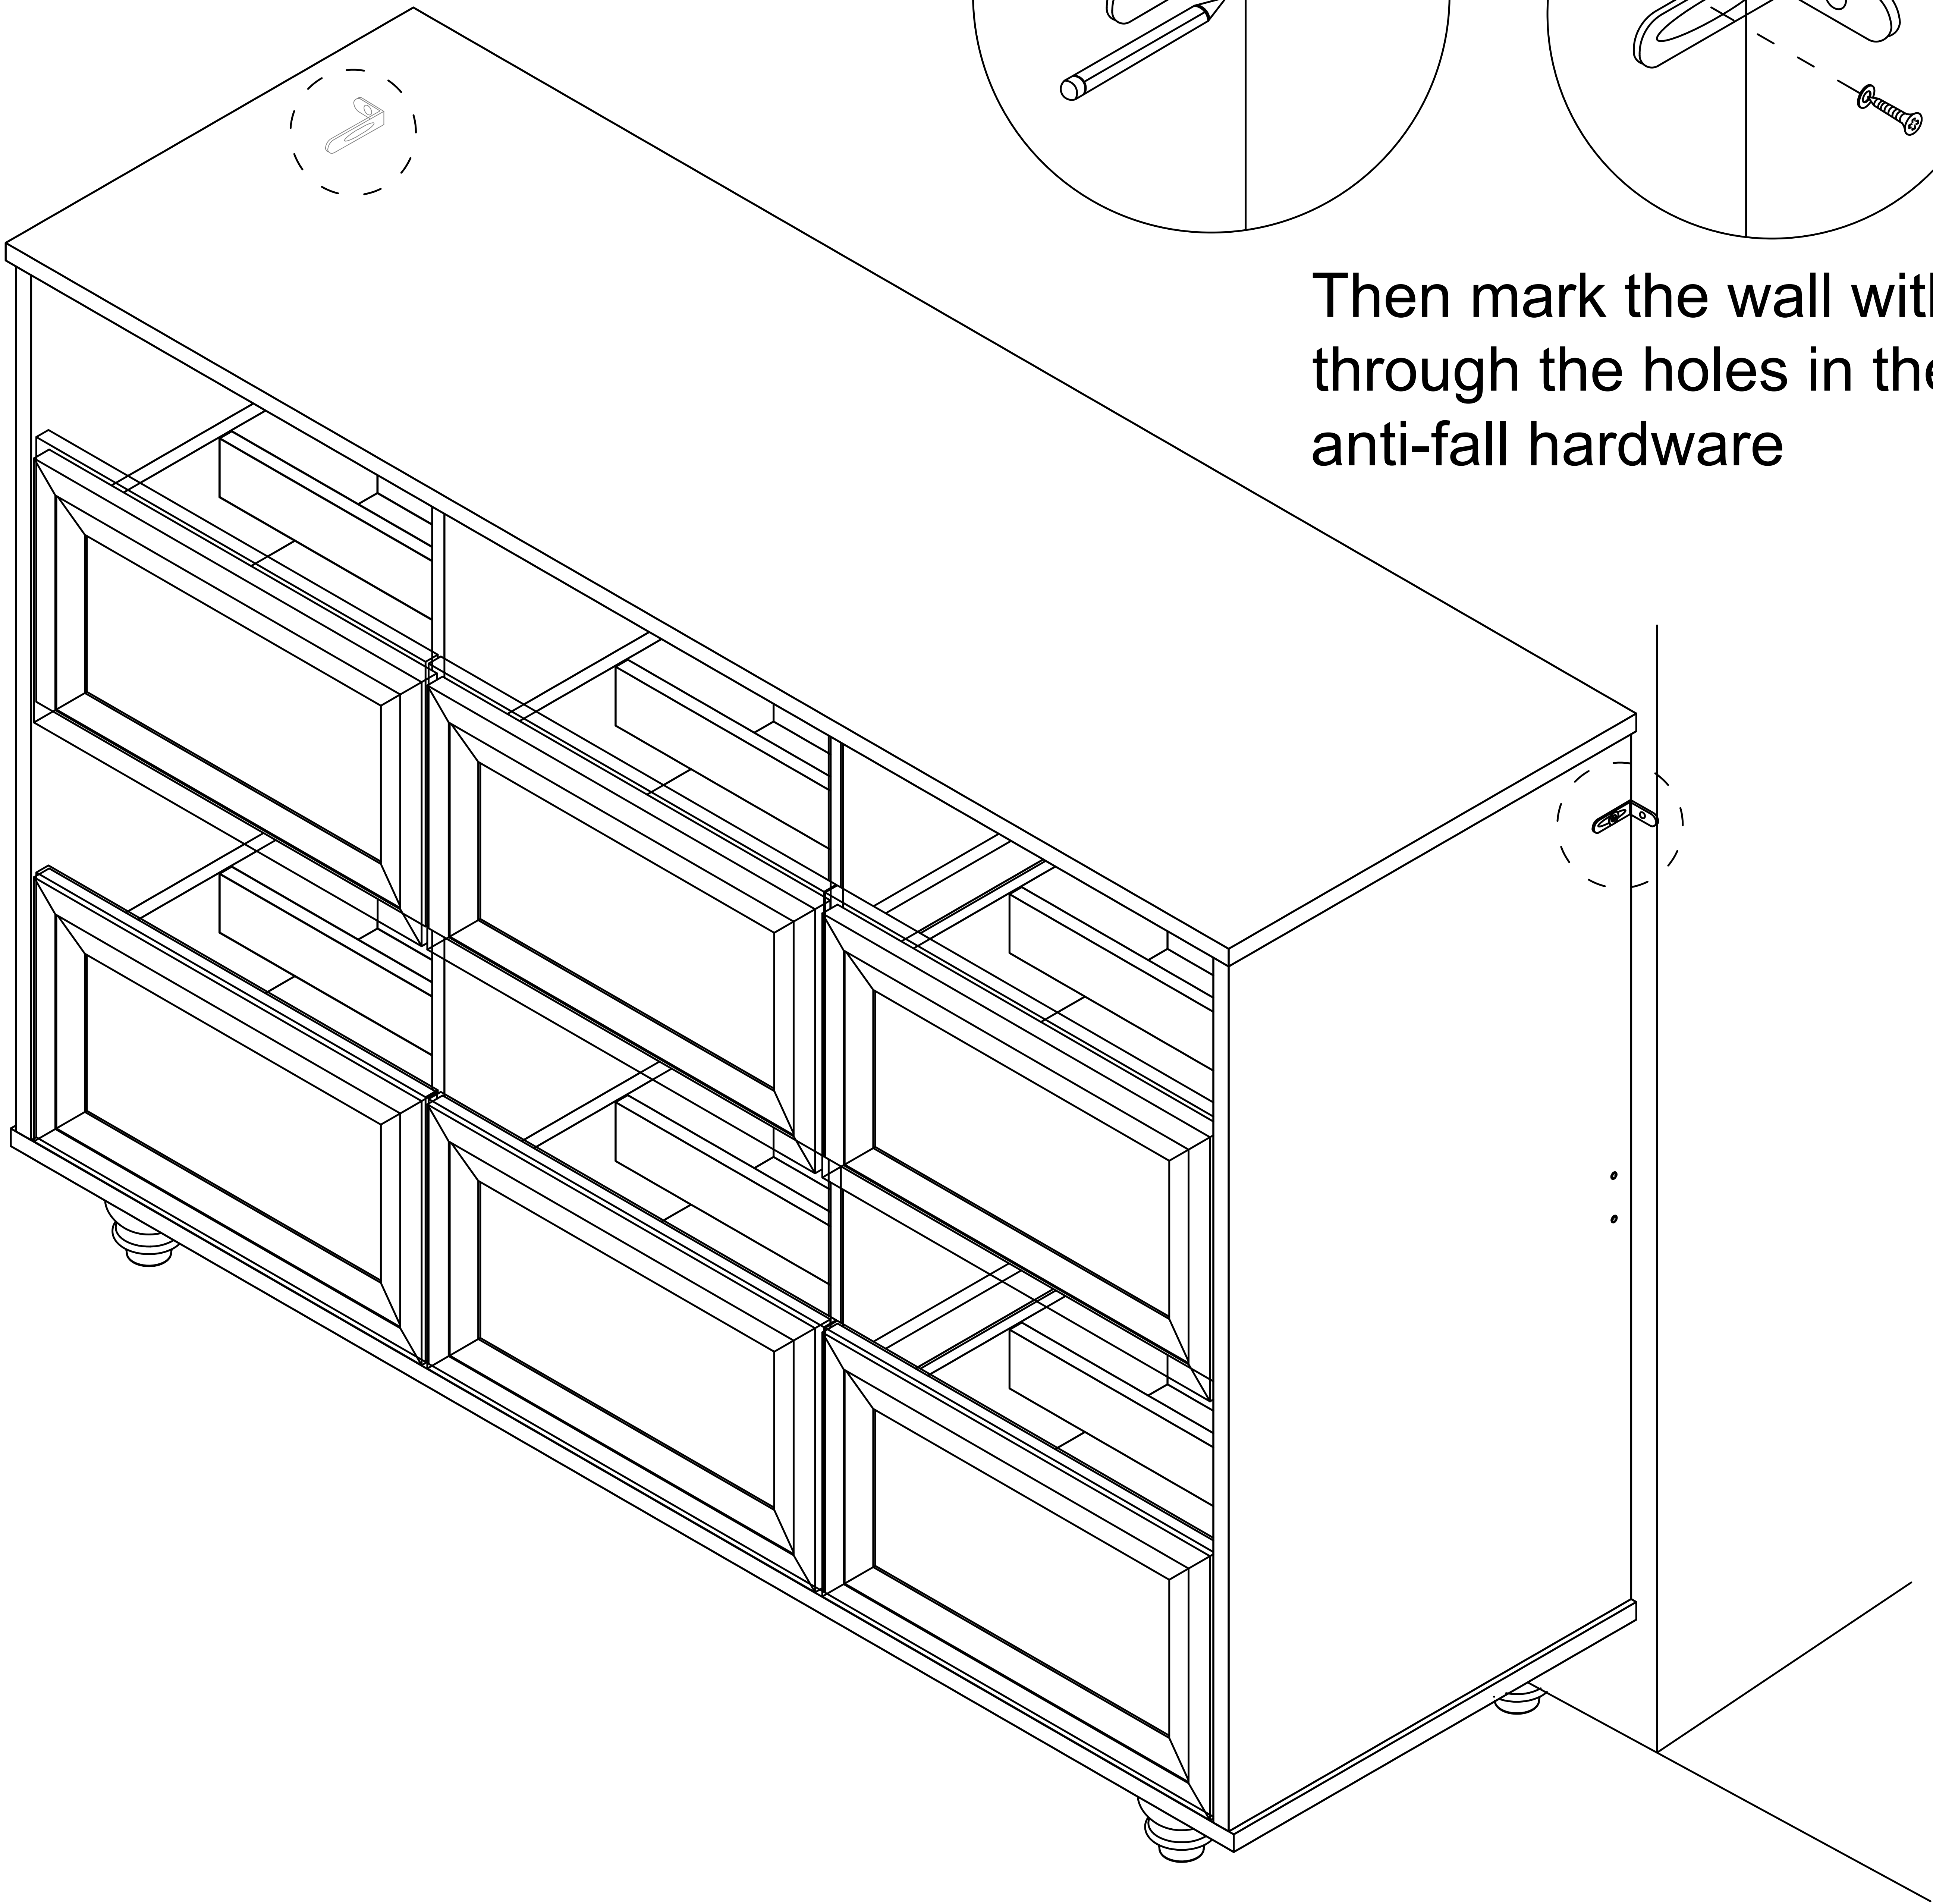

Step 47



use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

Use a tape drill to make holes in the wall that are suitable for the product screws.

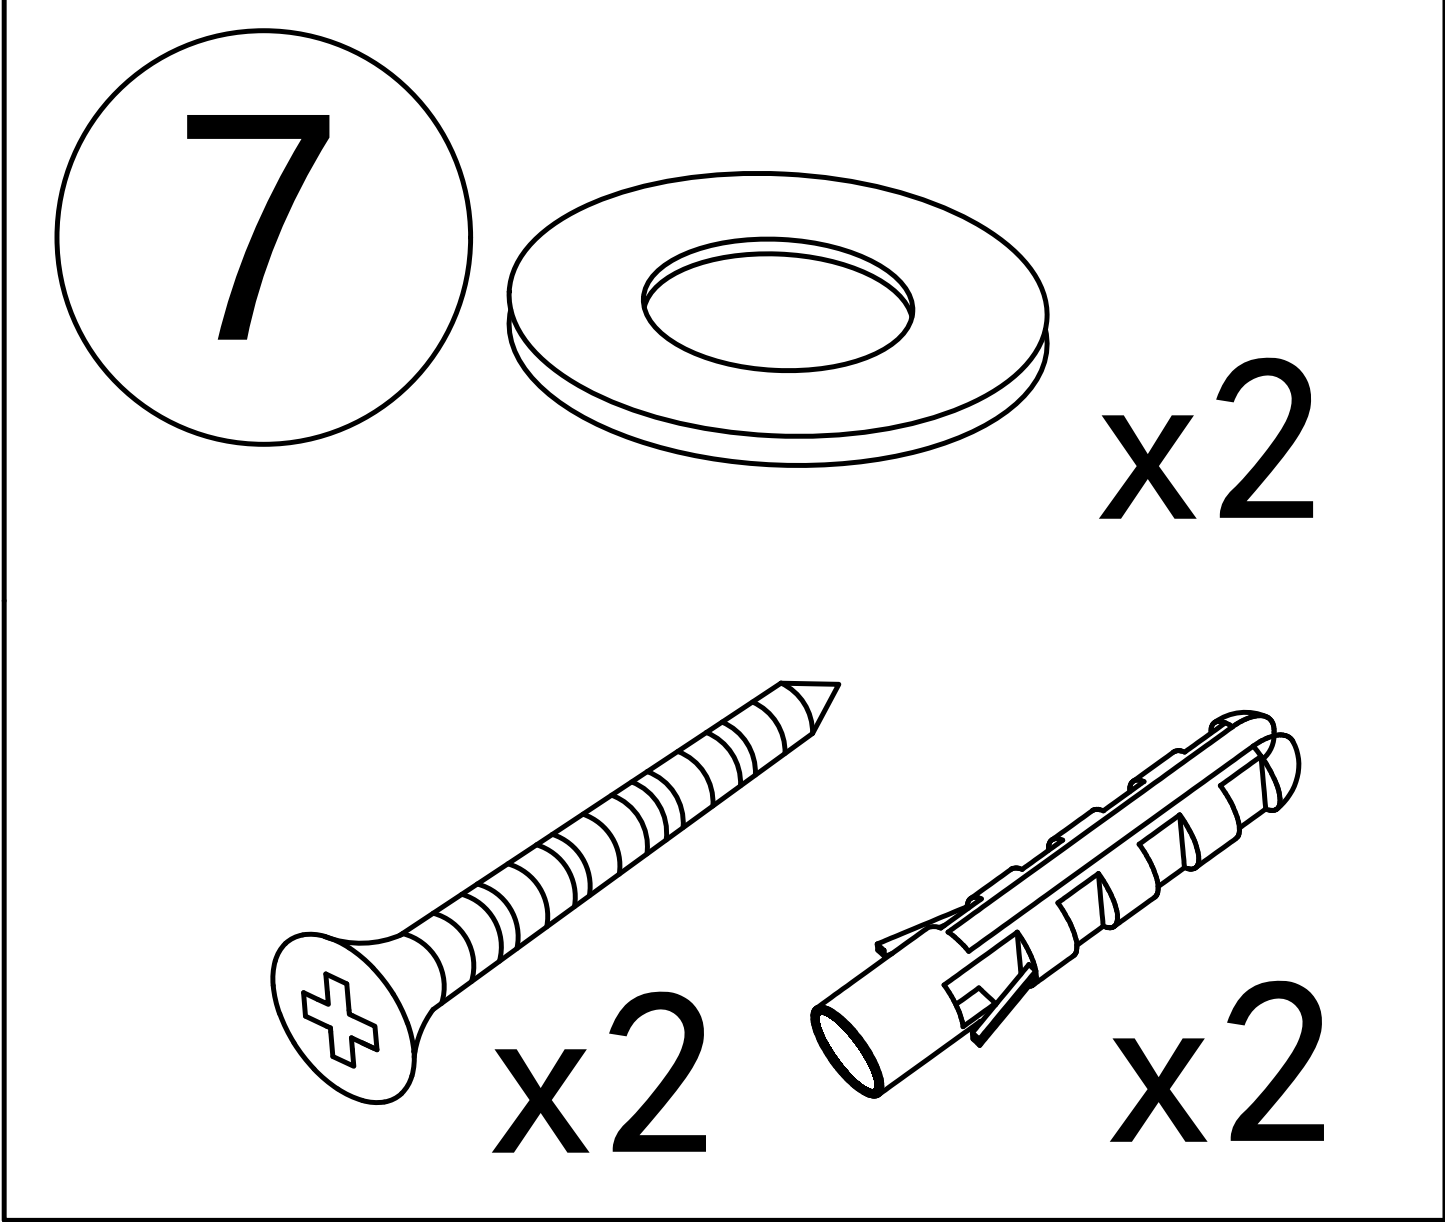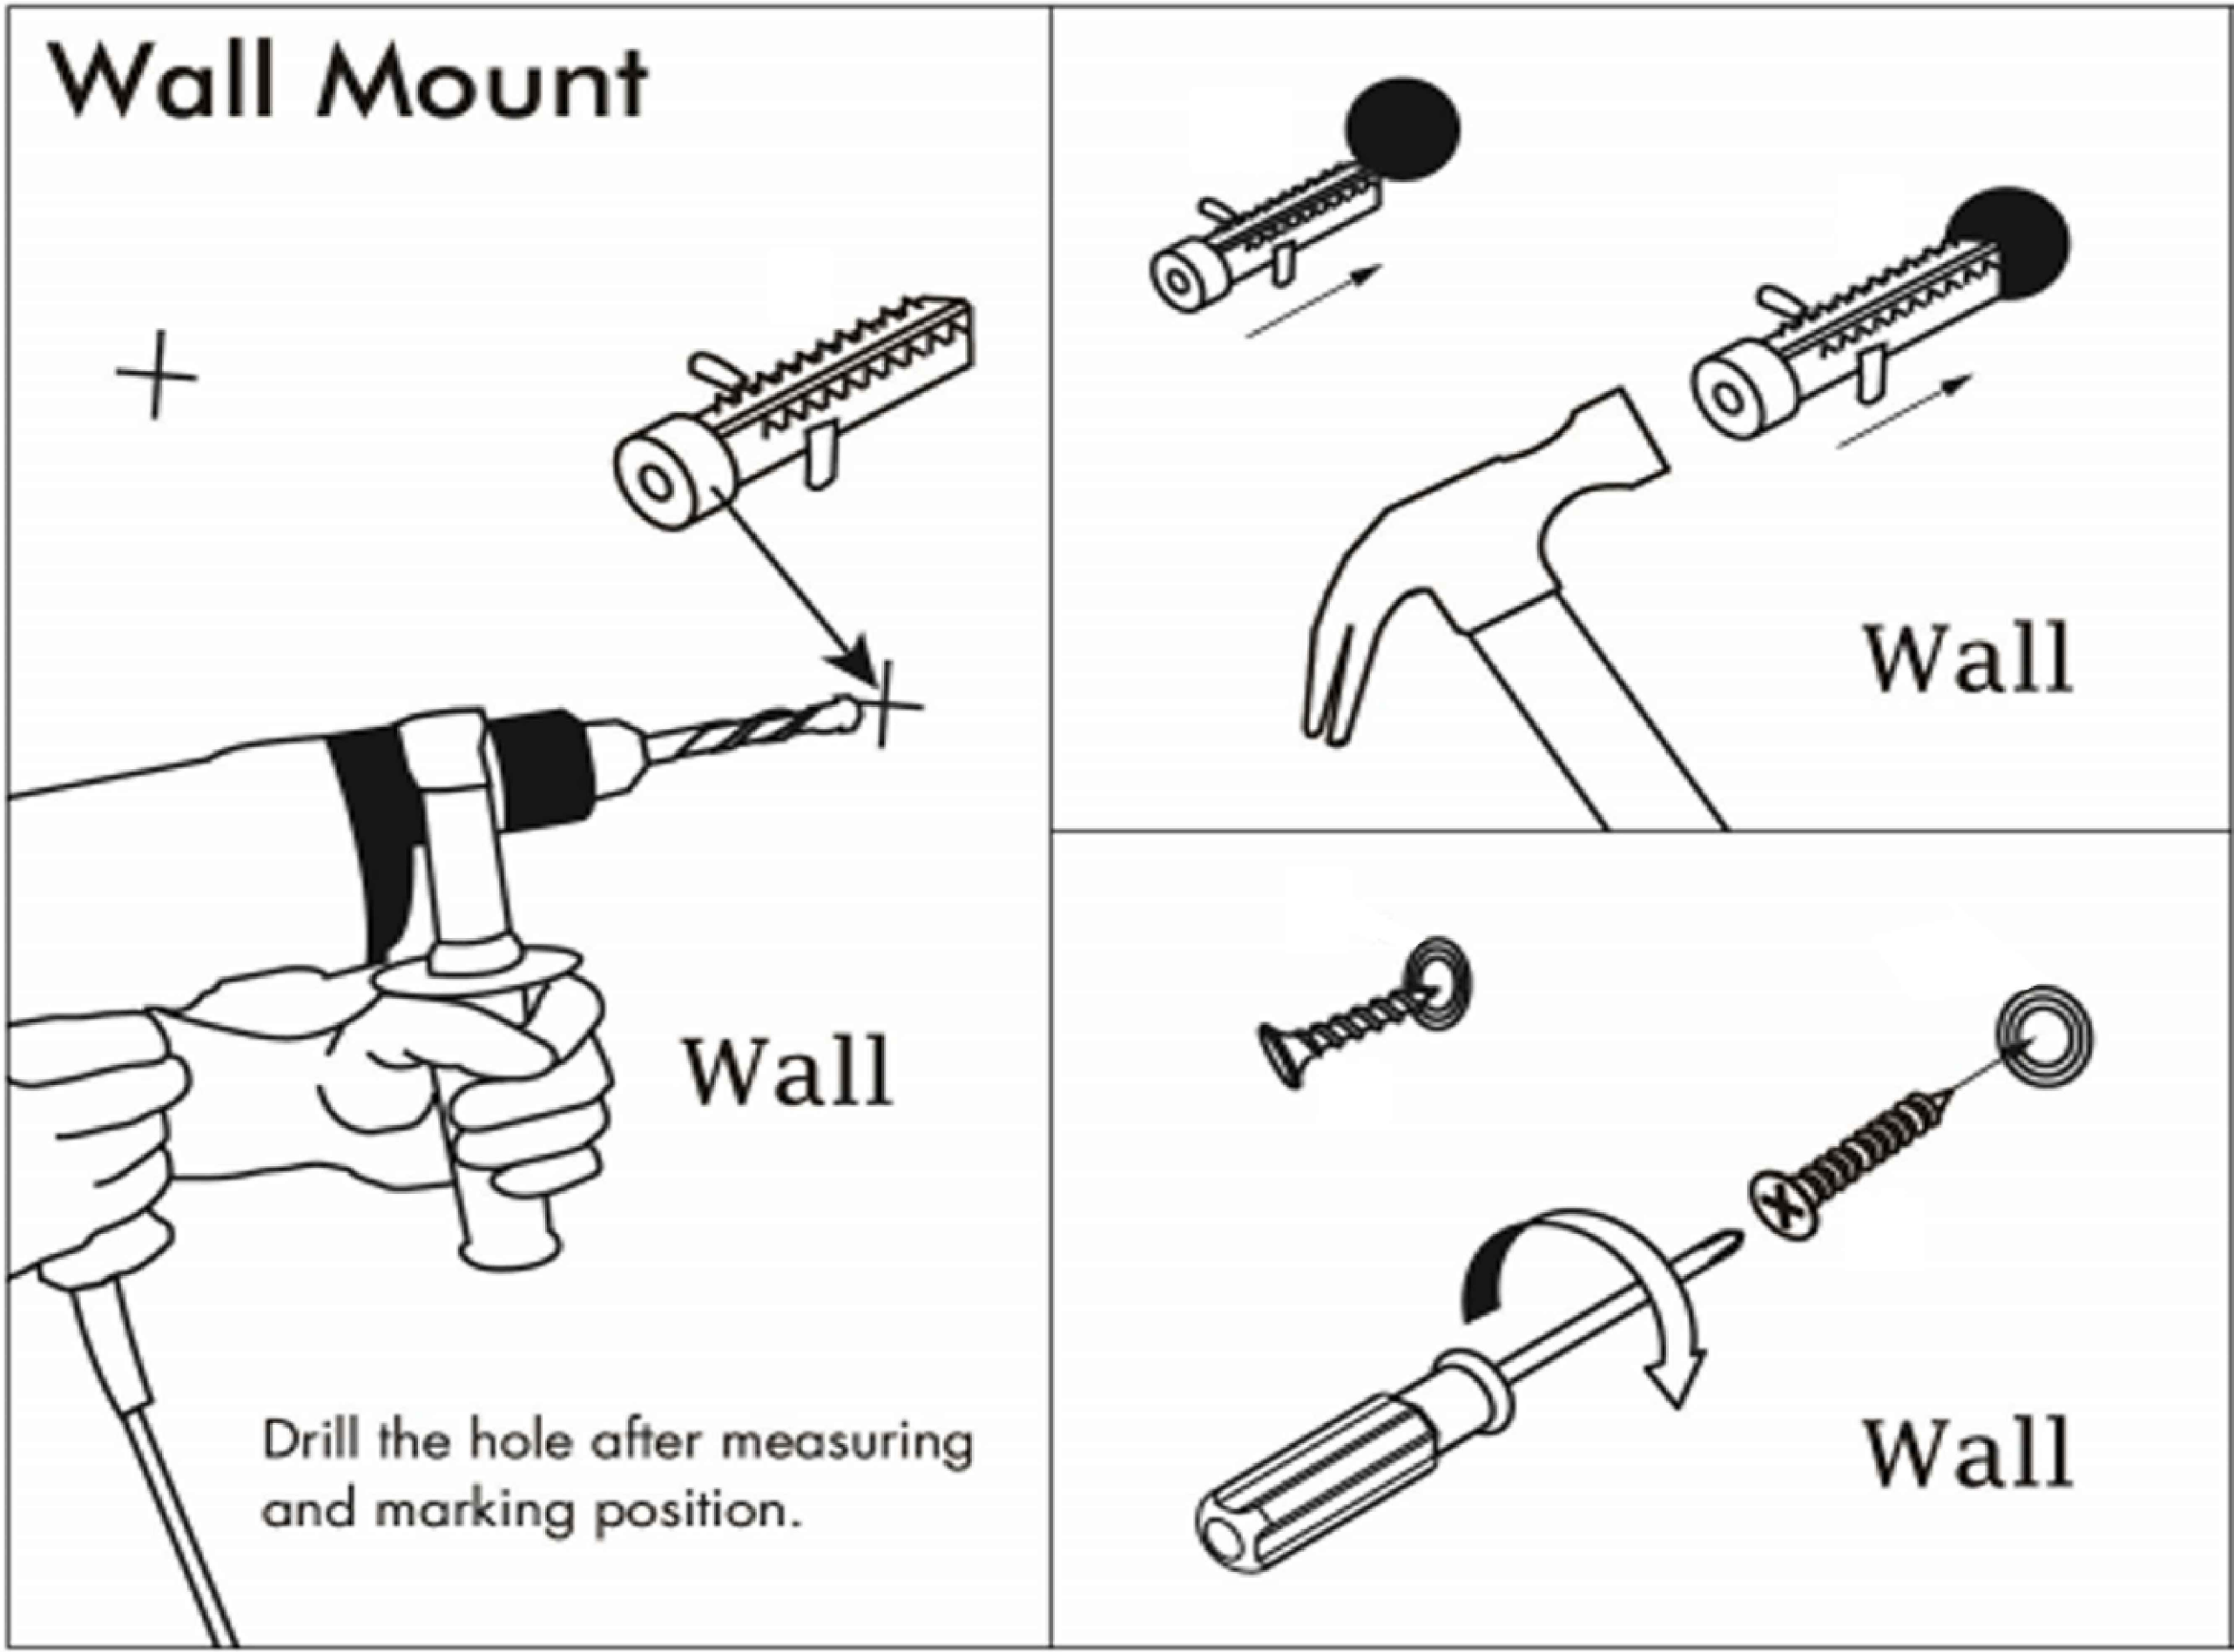

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

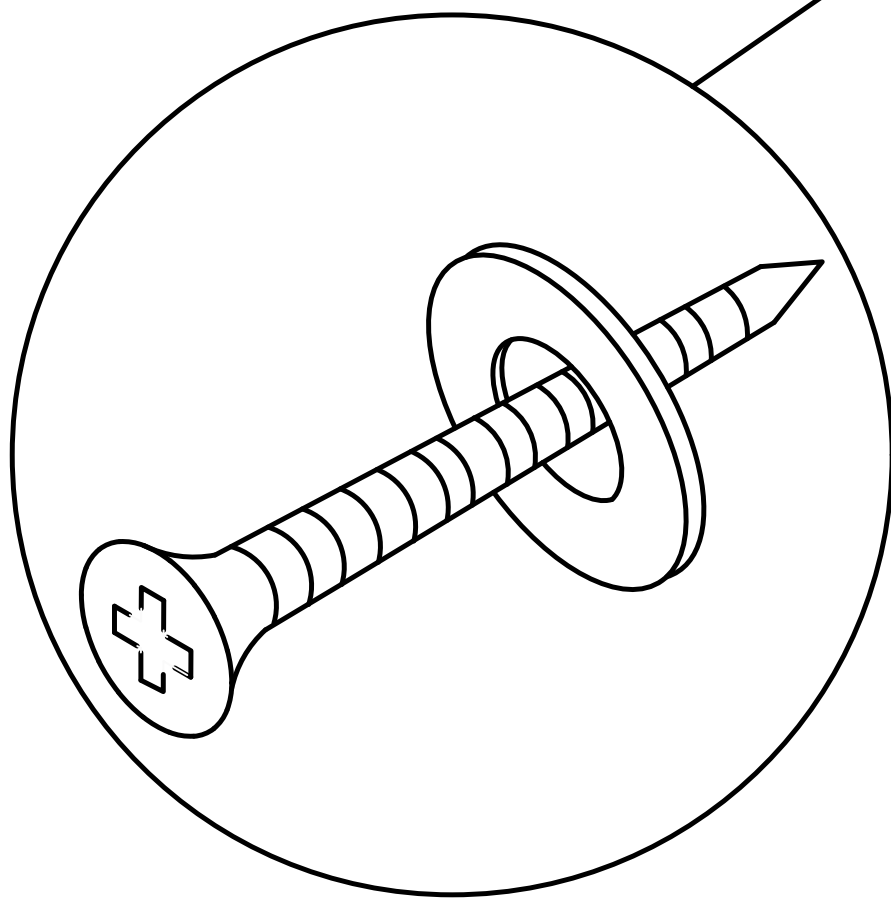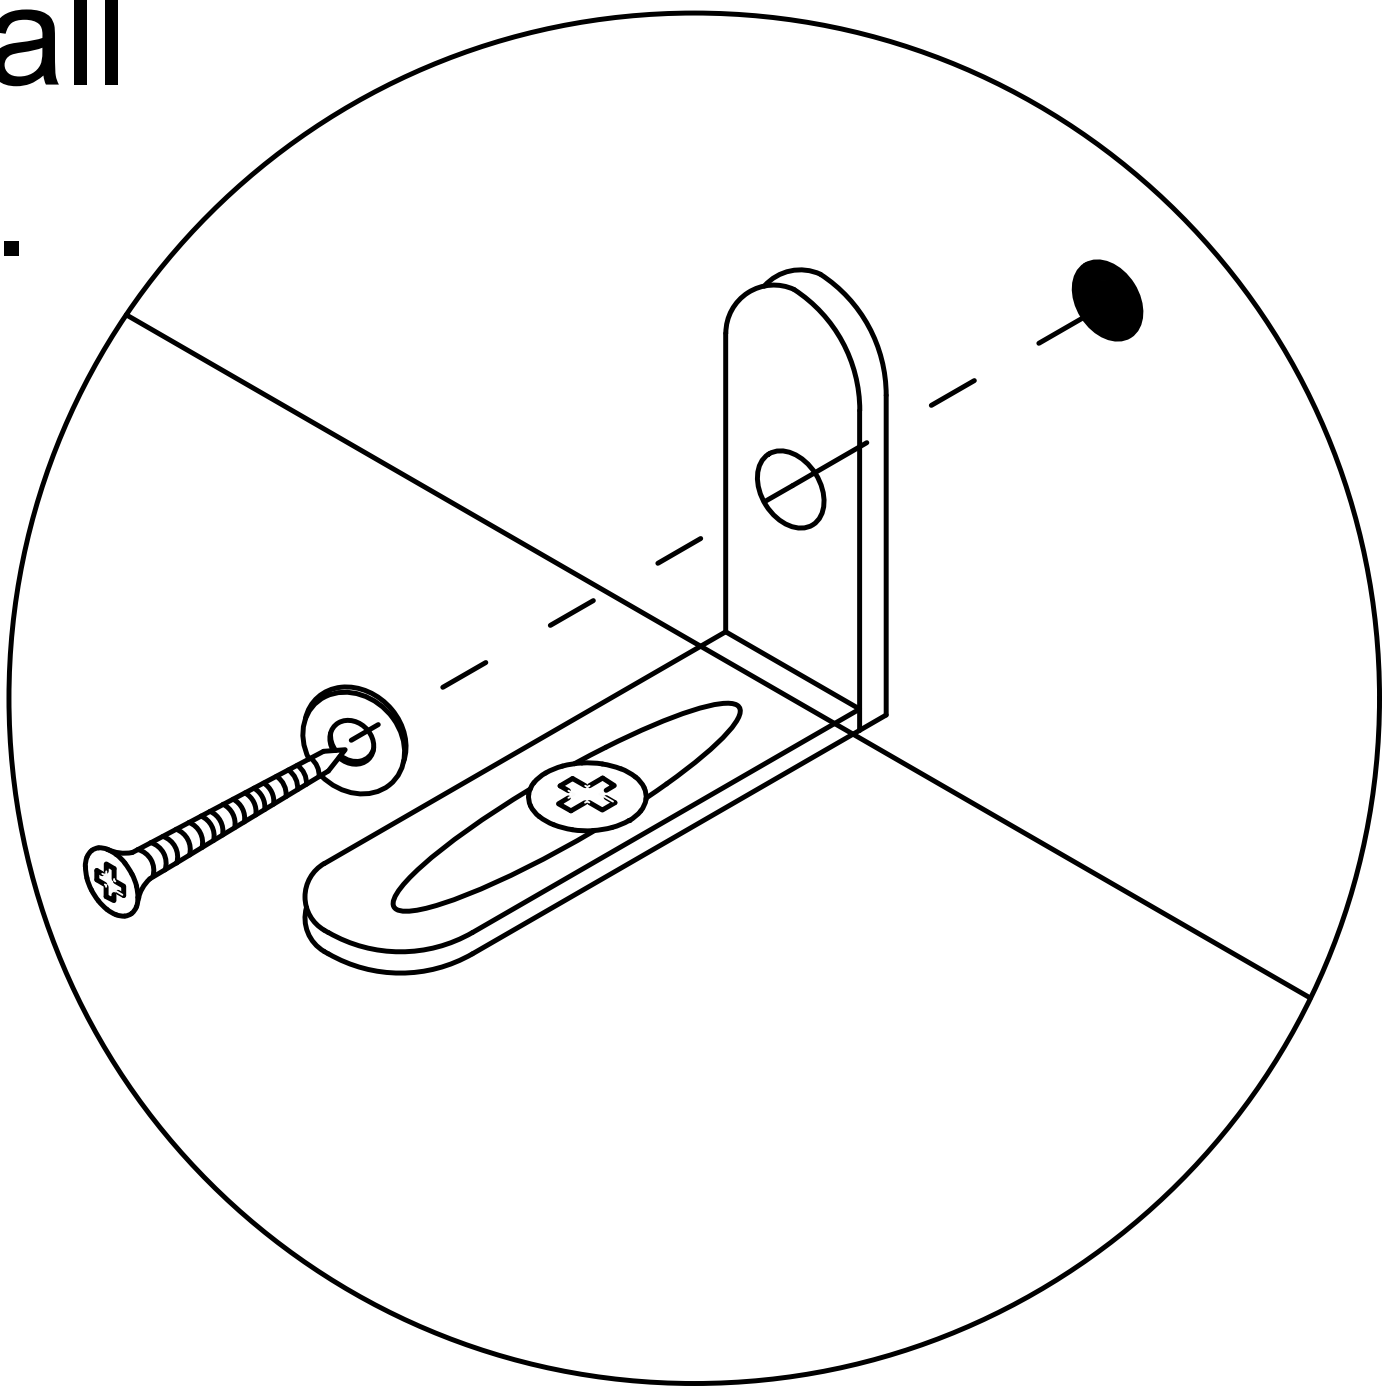

4x45mm

wall